

CONTACT INFORMATION

- Website: www.supermicro.com
- General Information: marketing@supermicro.com
- Technical Support: support@supermicro.com
- Phone: +1 (408) 503-8000, Fax: +1 (408) 503-8008

FOR YOUR SYSTEM TO WORK PROPERLY, PLEASE DOWNLOAD APPROPRIATE


DRIVERS/IMAGES/USER'S MANUAL FROM THE LINKS BELOW:

- Manuals: <http://www.supermicro.com/support/manuals>
- Drivers & Utilities: <ftp://ftp.supermicro.com/CDR/Images/CDR-X11-UP/>
- Safety: http://www.supermicro.com/about/policies/safety_information.cfm

PACKAGE CONTENTS

- One (1) Supermicro Motherboard
- Four (4) SATA Cables
- One (1) I/O Shield
- One (1) Quick Reference Guide

Motherboard Layout and Features

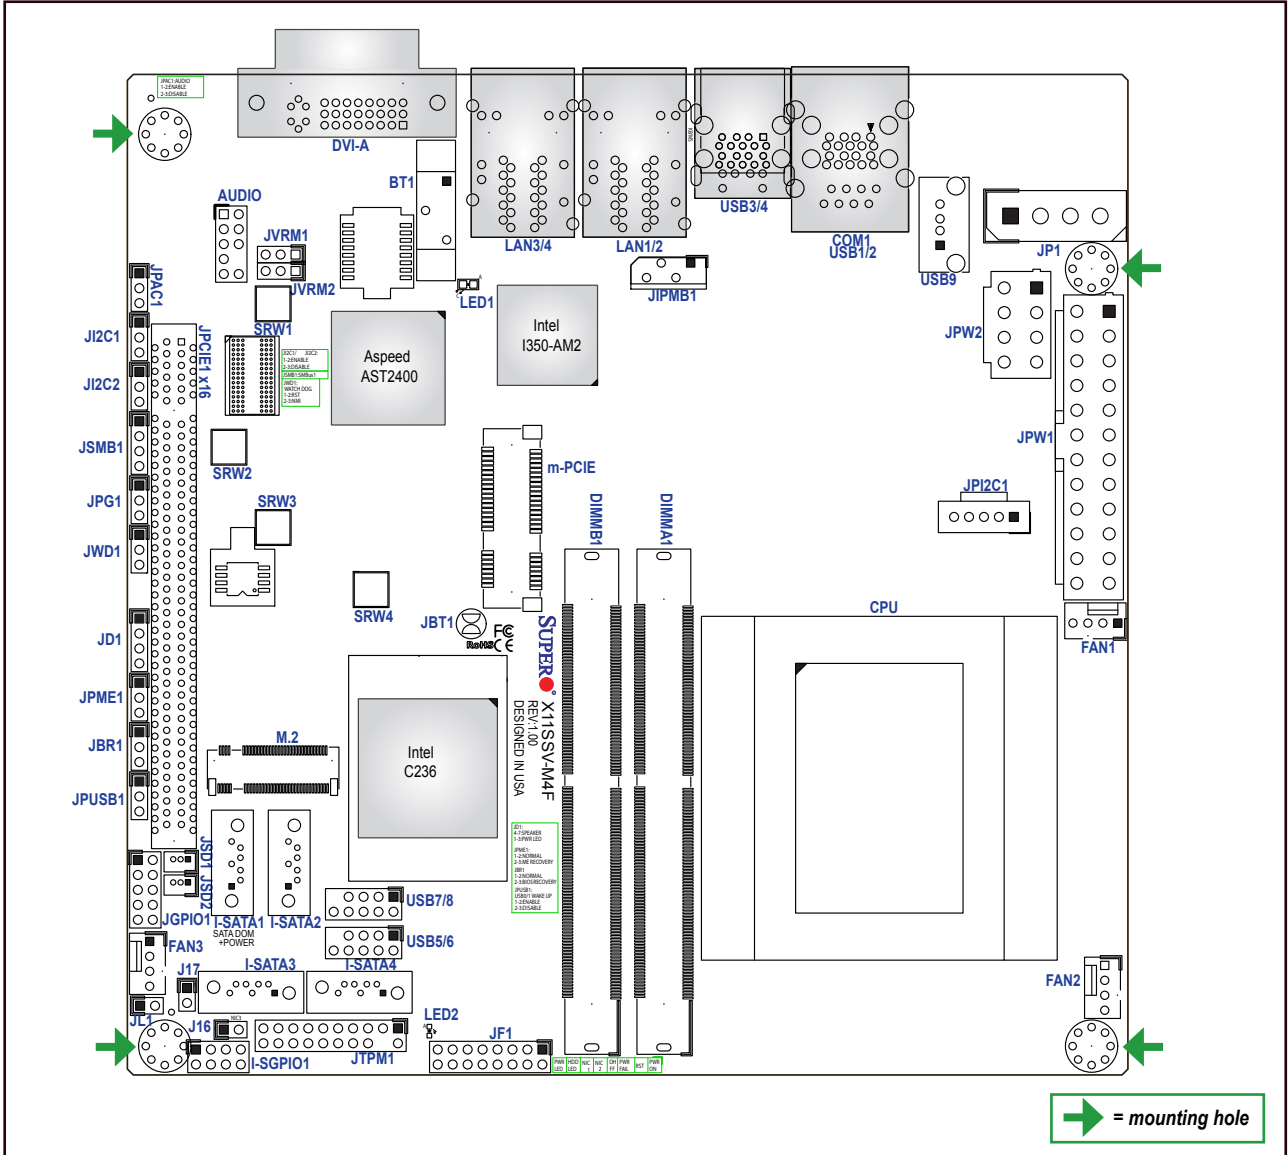

Front Control Panel (JF1)

| | 1 | 2 | |
|-----------|----|----|-------------------|
| PWR | ○ | ○ | Ground |
| Reset | ○ | ○ | Ground |
| 3.3V Stby | ○ | ○ | PWR Fail LED |
| 3.3V Stby | ○ | ○ | OH/Fan Fail LED |
| 3.3V Stby | ○ | ○ | NIC2 Activity LED |
| 3.3V Stby | ○ | ○ | NIC1 Activity LED |
| 3.3V Stby | ○ | ○ | HDD LED |
| 3.3V Stby | ○ | ○ | Power LED |
| | 15 | 16 | |

Note: Graphics shown in this quick reference guide are for illustration only. Your components may or may not look exactly the same as drawings shown in this guide.

Jumpers and Connectors

| Jumpers | | |
|-------------------|--|---------------------|
| Jumper | Description | Default Setting |
| JBR1 | BIOS Recovery | Pins 1-2 (Normal) |
| JBT1 | CMOS Clear | Open (Normal) |
| J12C1/J12C2 | SMB to PC-E Slots Enable/Disable | Pins 2-3 (Disabled) |
| JPAC1 | Audio Enable | Pins 1-2 (Enabled) |
| JPG1 | VGA Enable/Disable | Pins 1-2 (Enabled) |
| JPME1 | ME Recovery | Pins 1-2 (Normal) |
| JPUSB1 | USB Wake Up | Pins 2-3 (Disabled) |
| JVRM1 | VRM SMB Clock (to BMC or PCH) | Pins 1-2 (Normal) |
| JVRM2 | VRM SMB Data (to BMC or PCH) | Pins 1-2 (Normal) |
| JWD1 | Watch Dog Enable | Pins 1-2 (Reset) |
| Connectors | | |
| Connector | Description | |
| AUDIO | Front Panel Audio Header | |
| BT1 | Onboard Battery | |
| COM1 | COM Port | |
| DVI-A | Digital Video Interface (Analog Output Only) | |
| FAN1 ~ FAN3 | System/CPU Fan Headers (FAN1: CPU Fan) | |
| I-SATA1 ~ I-SATA4 | Intel PCH SATA 3.0 Ports | |
| I-SGPI01 | Serial Link General Purpose I/O Header | |
| J16 | NIC3 Activity LED | |
| J17 | NIC4 Activity LED | |
| JD1 | Speaker Header | |
| JF1 | Front Control Panel Header | |
| JGPI01 | General Purpose I/O Header | |
| JIPMB1 | 4-pin External I ² C Header (for IPMI card) | |
| JL1 | Chassis Intrusion Header | |
| JP1 | 4-pin Power Connector for HDD | |
| JPCIE1 x16 | CPU PCI-E 3.0 X16 Slot | |
| J12C1 | Power Supply SMBus I ² C Header | |
| JPW1 | 24-pin ATX Power Connector | |
| JPW2 | 8-pin 12V DC Power Connector (To provide alternative power for special enclosure when the 24-pin ATX power is not in use.) | |
| JSD1/JSD2 | SATA DOM Power Connectors | |
| JSMB1 | System Management Bus Header | |
| JTPM1 | Trusted Platform Module/Port 80 Connector | |
| LAN1 ~ LAN4 | Gigabit Ethernet (RJ45) Ports | |
| M.2 | M.2 Slot | |
| m-PCIE | Mini-PCIe Slot | |
| SRW1/SRW3 | M.2 Holding Screws | |
| SRW2/SRW4 | Mini-PCIe Holding Screws | |
| USB1/2, USB3/4 | Back panel USB 3.0 Ports | |
| USB5/6 | Front Access USB 2.0 Header | |
| USB7/8 | Front Access USB 2.0 Header | |
| USB9 | USB Type A Header | |

Note: Refer to Chapter 1 of the User Manual for detailed information on jumpers, connectors, and LED indicators.

LED Indicators

| LED Indicators | | |
|----------------|-------------------|----------------------------|
| LED | Description | Status |
| LED1 | BMC Heartbeat LED | Blinking Green: BMC Normal |
| LED2 | Power LED | Solid Green: Power On |

CPU Support


The X11SSV-M4F motherboard supports an Intel® E3-1500 v5 series processor in a BGA socket type.

Memory Support

The X11SSV-M4F motherboard supports up to 32 GB of DDR4 ECC SO-DIMM in two memory slots.

SO-DIMM Memory Installation

1. Align the key on the bottom of the DIMM module against the receptive point on the memory slot. Take note of the notches on the side of the DIMM module and of the locking clips to avoid causing damage.

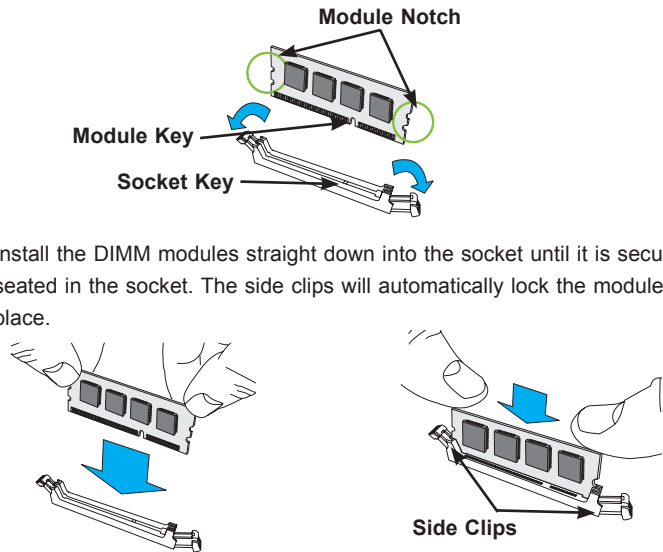

Back Panel I/O Connectors

| Back Panel I/O Connectors | | | |
|---------------------------|------------|----|-------------|
| # | Definition | # | Description |
| 1 | COM1 | 6 | LAN2 |
| 2 | USB2 | 7 | LAN1 |
| 3 | USB1 | 8 | LAN4 |
| 4 | USB4 | 9 | LAN3 |
| 5 | USB3 | 10 | DVI-A |

Note: Refer to Chapter 2 of the User Manual for detailed information on memory support and CPU/motherboard installation instructions.