

CONTACT INFORMATION

- Website: www.supermicro.com
- General Information: marketing@supermicro.com
- Technical Support: support@supermicro.com
- Phone: +1 (408) 503-8000, Fax: +1 (408) 503-8008

FOR YOUR SYSTEM TO WORK PROPERLY, PLEASE DOWNLOAD APPROPRIATE

DRIVERS/IMAGES/USER'S MANUAL FROM THE LINKS BELOW:





- Manuals: <http://www.supermicro.com/support/manuals>
- Drivers & Utilities: <https://www.supermicro.com/wftp/driver/>
- Safety: http://www.supermicro.com/about/policies/safety_information.cfm

PACKAGE CONTENTS


- One (1) Supermicro Add-on Module
- One (1) Quick Reference Guide

WARNING: This product can expose you to chemicals including lead, known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.


Add-on Module Layouts and Features

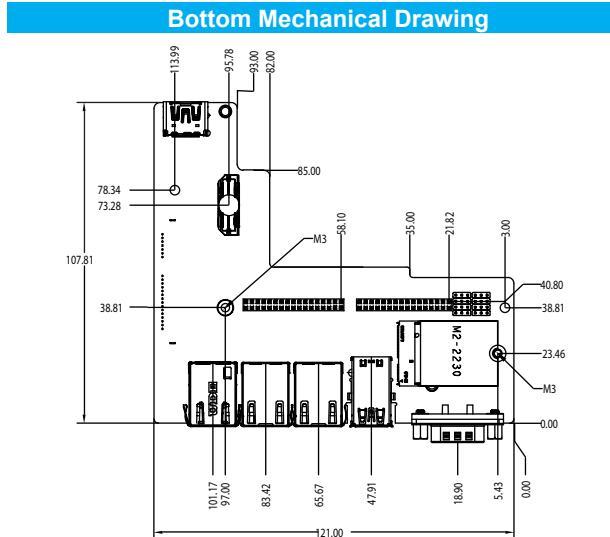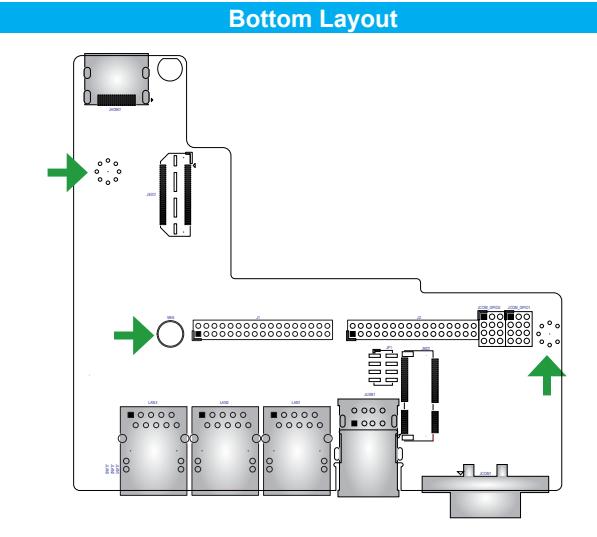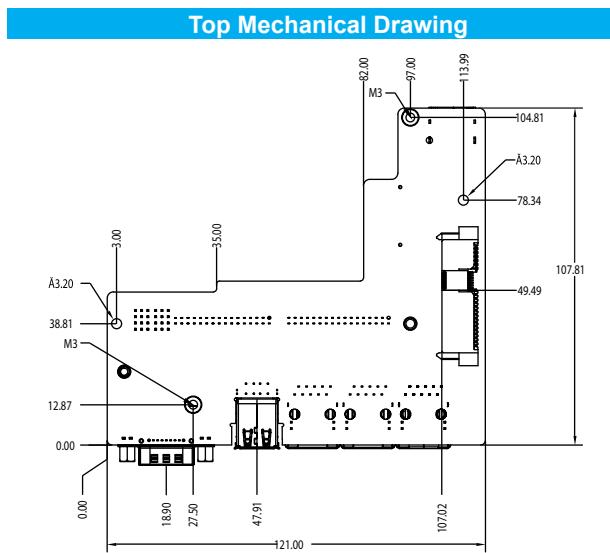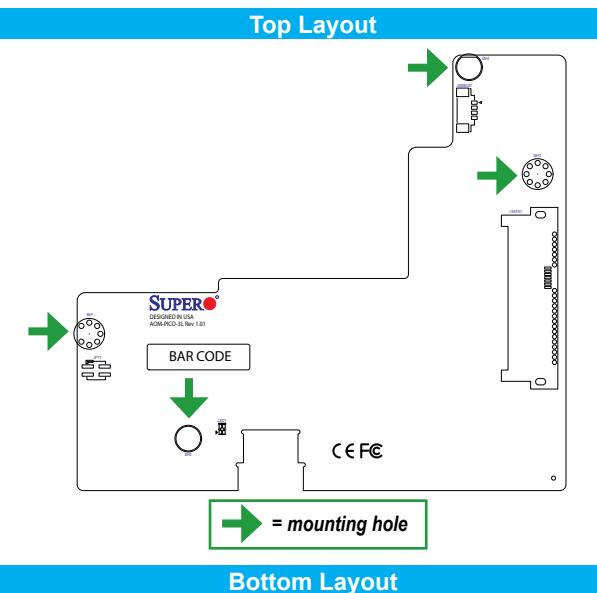

Add-on Module Drawing (Front I/O View)

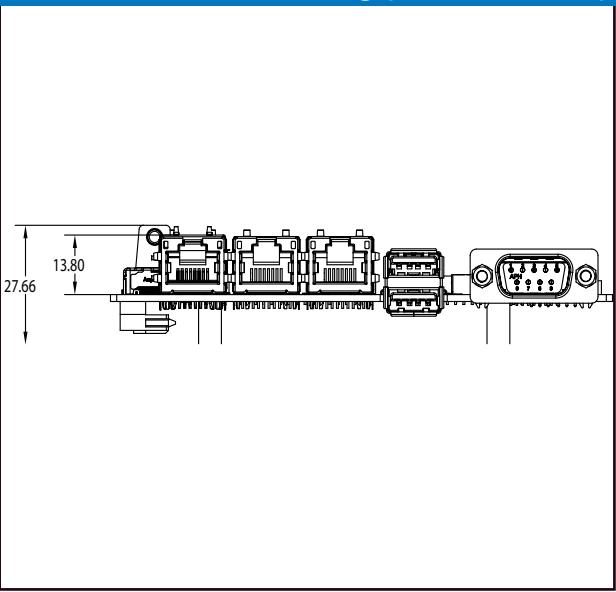

Add-on Module Drawing (Back I/O View)

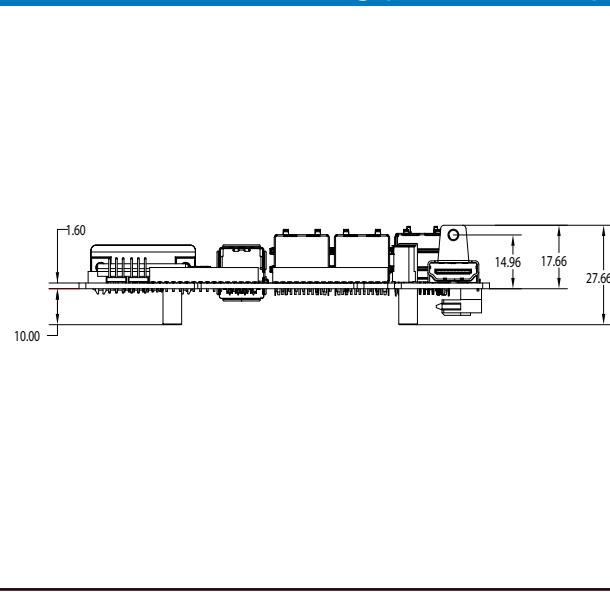

Jumpers and Connectors

Connectors		
J1	Description	Stackable Pin Header A (Two RS232/422/485 and Mic-In/Line Out)
J2		Stackable Pin Header B (Two USB2.0/Front Panel/8-bit GPIO)
JCOM1		COM Ports (RS-232/422/485)
JEIO1		Supermicro Extension I/O Header (DP/HDMI, Two PCI-E x1, Two USB 2.0, LPC, SATA SMBus, Power) or 8 Bit GPIO (Select by JCOM-GPRIO1/2)
JF1		Front Control Panel Header (Power/HDD, LED/Reset, Power Button)
JHDMI1		High Definition Multimedia Interface (HDMI) Port
JMD1		M.2 Slot (E-KEY 2230) (Supports PCI-E x 1/USB 2.0)
JSMBUS1		System Management Bus Header
JUSB1		Two Back Panel USB 2.0 Ports
I-SATA1		Onboard SATA Connector
JLAN1/JLAN2/JLAN3		LAN1/LAN2/LAN3 (RJ45 LAN) Ports
MH1 - MH5		Mounting Holes


Jumpers

Jumper	Description	Default
JTP1	TPM Enable/Disable Header	Pin 1-2 (Enabled)
JCOM_GPRIO1/2	8-bit GPIO via DB9	Pins 2-3/5-6/8-9/11-12 (COM) (Default) Pins 1-2/4-5/7-8/10-11 (GPIO)

LED Indicators

LED	Description	Status
LED1	Power LED	Solid Green: Power ON


Front Control Panel (JF1)

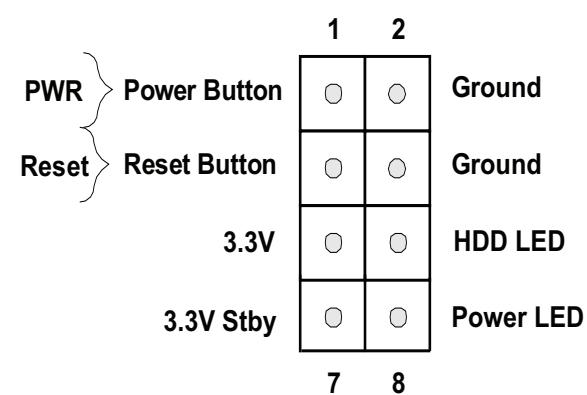


Add-on Card Installation

The AOM-PICO-3L is an add-on I/O module for Pico-ITX A2SAP-H motherboards. Follow the steps below to install the add-on card into your system.

- 1) Secure the AOM-PICO-3L to the chassis by using the standoff and screws.
- 2) Install the standoff between AOM-PICO-3L and A2SAP-H. The copper standoffs between AOM-PICO-3L and A2SAP-H are 9 mm in height.
- 3) Align Stackable Pin Header A/B (J1/J2 on AOM-PICO-3L) and EI/O connector on A2SAP-H and AOM-PICO-3L, and gently push down on both sides of Stackable Pin Header A/B and EI/O connector until tightly assembling each other.
- 4) Install memory on A2SAP-H.
- 5) Install heatsink or customer own thermal solution onto A2SAP-H. Place the heatsink directly on the CPU, and make sure the thermal grease is in contact with the CPU.
- 6) Make sure that the A2SAP-H and AOM-PICO-3L add-on card are securely placed in the chassis.

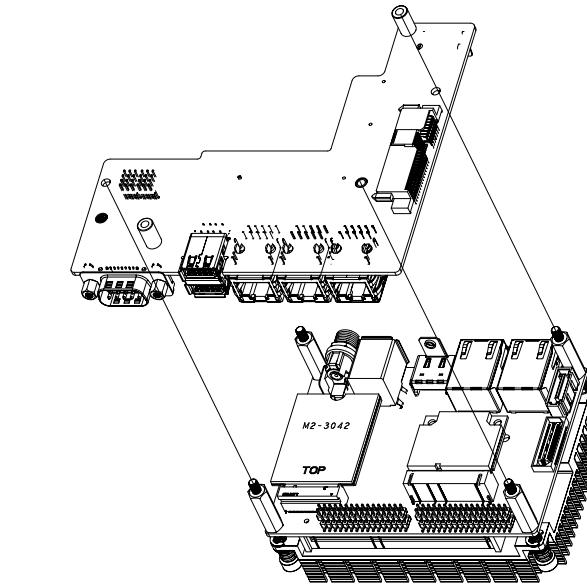

Front and Back Panel I/O Connectors

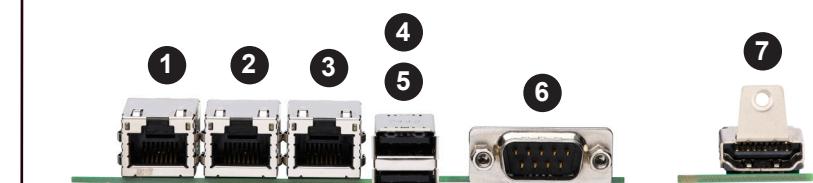

#	Definition	#	Definition	#	Definition
1	JLAN3	4	JUSB1 (2.0)	7	JHDMI1 (Back I/O)
2	JLAN2	5	JUSB1 (2.0)		
3	JLAN1	6	JCOM1		