

SUPERMICR[®] SuperServer[®] AS -A126GS-TNBR Quick Reference Guide

Front Features



Rear Features



BMC Password

Each system comes with a unique default password for the ADMIN user. This can be found on a sticker on the motherboard and another on the chassis service tag. If necessary, the password can be reset.

For more information, please visit <https://www.supermicro.com/en/solutions/management-software/bmc-resources>

Product Page




Storage Drives

#	Features	Description
1	M.2 Storage	Two M.2 Storage Slots
2	EDSFF E1.S Storage	Eight external EDSFF E1.S NVMe SSDs
3	NVMe Drive Trays	Eight hot-swap 2.5" NVMe drive trays
4	SATA Drive Trays	Two hot-swap 2.5" SATA drive trays


Expansion Slots

Slot	Description
1-8	A drawer to house eight PCIe 5.0 x16 LP from PLX switch linked to GPUs


Removing LPIO or CPU Tray

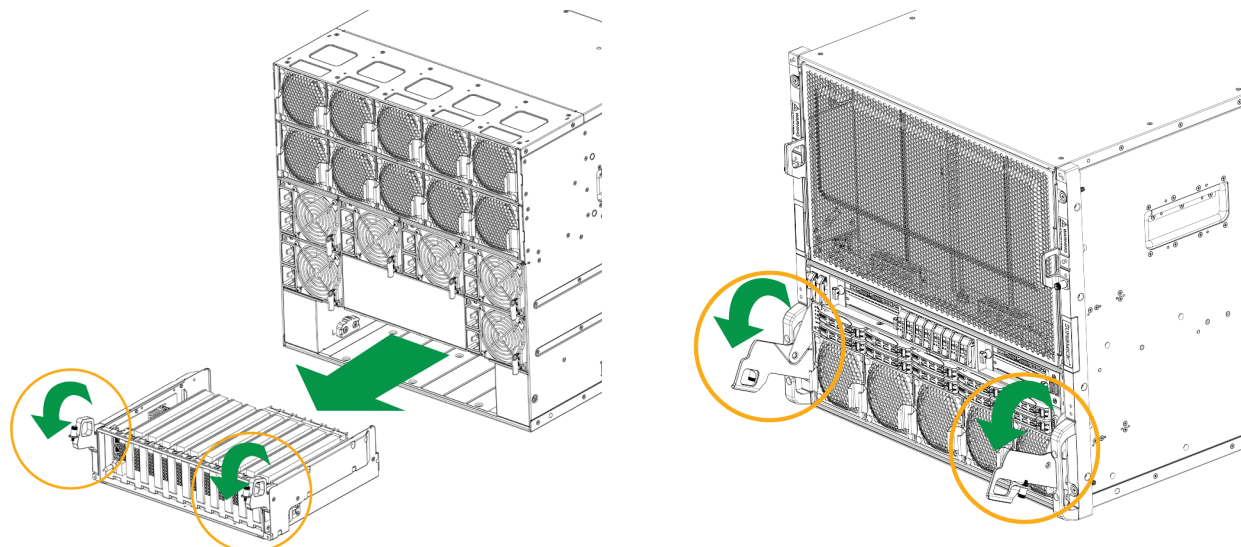

Control Panel

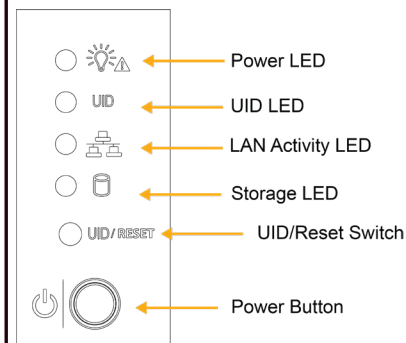

Motherboard Block Diagram

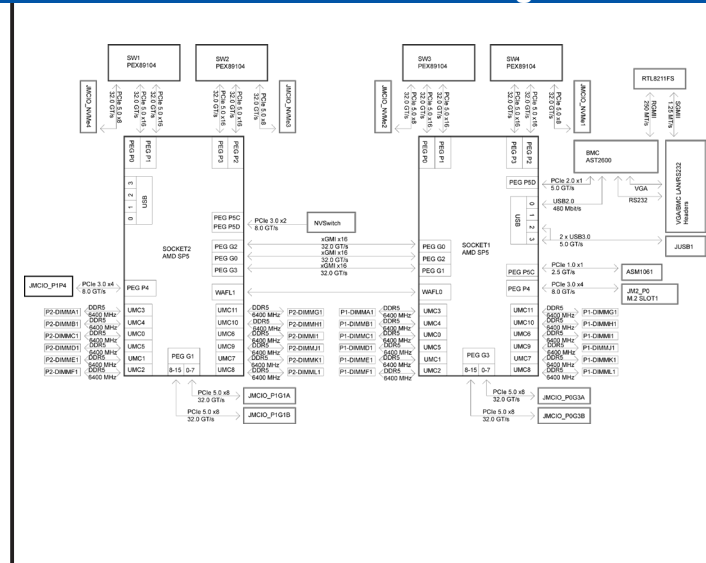

Caution

SAFETY INFORMATION
IMPORTANT: See installation instructions and safety warning before connecting system to power supply.
https://www.supermicro.com/about/policies/safety_information.cfm

WARNING
 To reduce risk of electric shock/damage to equipment, disconnect power from server by disconnecting all power cords from electrical outlets.
 If any CPU socket is empty, install protective plastic CPU cap.

CAUTION
 Always be sure all power supplies for this system have the same power output. If mixed power supplies are installed, the system will not operate.
 For more information, go to <https://www.supermicro.com/support>