



SUPERMICR® GPU A+ Server AS -A126GS-TNMR Quick Reference Guide

Front Features

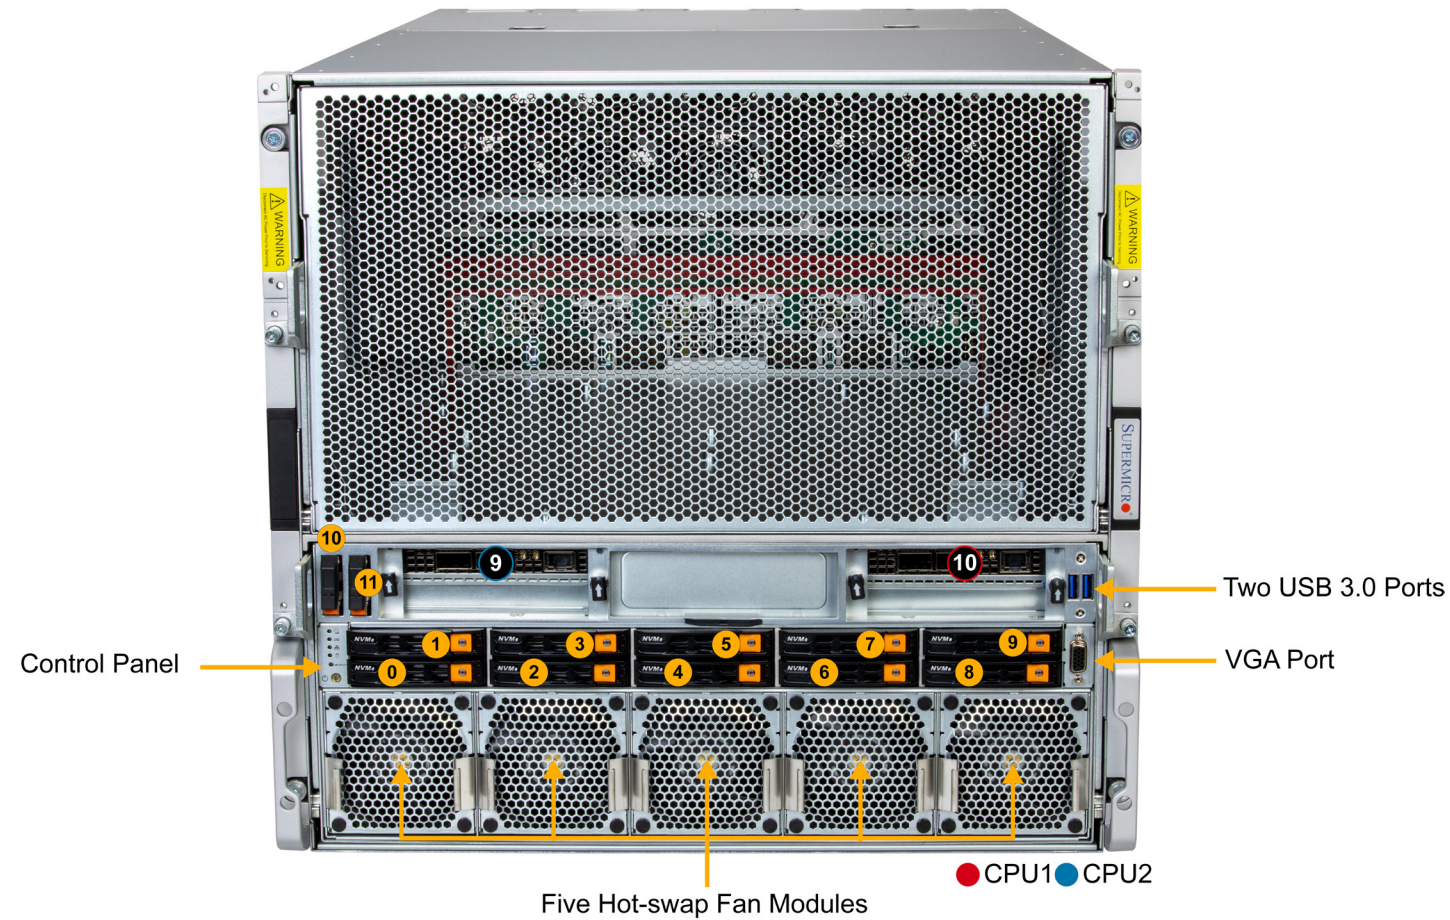

Rear Features

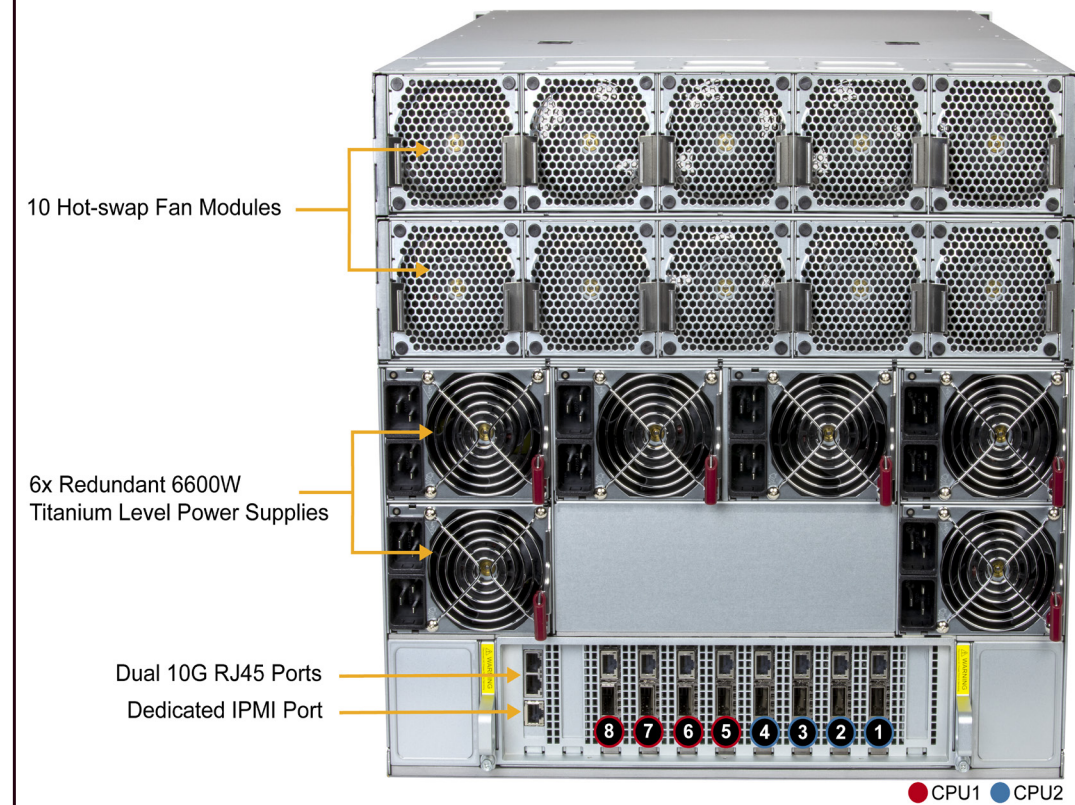

BMC Password

Each system comes with a unique default password for the ADMIN user. This can be found on a sticker on the motherboard and another on the chassis service tag. If necessary, the password can be reset.


For more information, please visit <https://www.supermicro.com/en/solutions/management-software/bmc-resources>

Product Page

GPU A+ Server AS -A126GS-TNMR




Control Panel

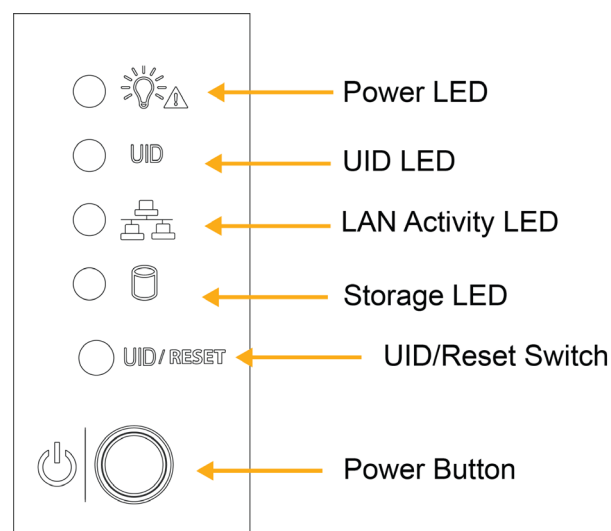

Information LED	
Color, Status	Description
Red, solid	An overheating condition has occurred
Red, blinking at 1 Hz	Fan failure, check for an inoperative fan
Red, blinking at 0.25 Hz	Power failure, check for a non-operational power supply
Red, blinking at 10 Hz	CPLD recovery mode error
Blue, solid	Unit ID has been activated by button
Blue, blinking at 1 Hz	Unit ID has been activated using the BMC
Blue, blinking at 2 Hz, and BMC Heartbeat LED on the motherboard is green	BMC is resetting
Blue, blinking at 4 Hz	BMC is setting factory defaults
Blue, blinking at 10 Hz	BIOS/BMC is recovering or updating

Main Components

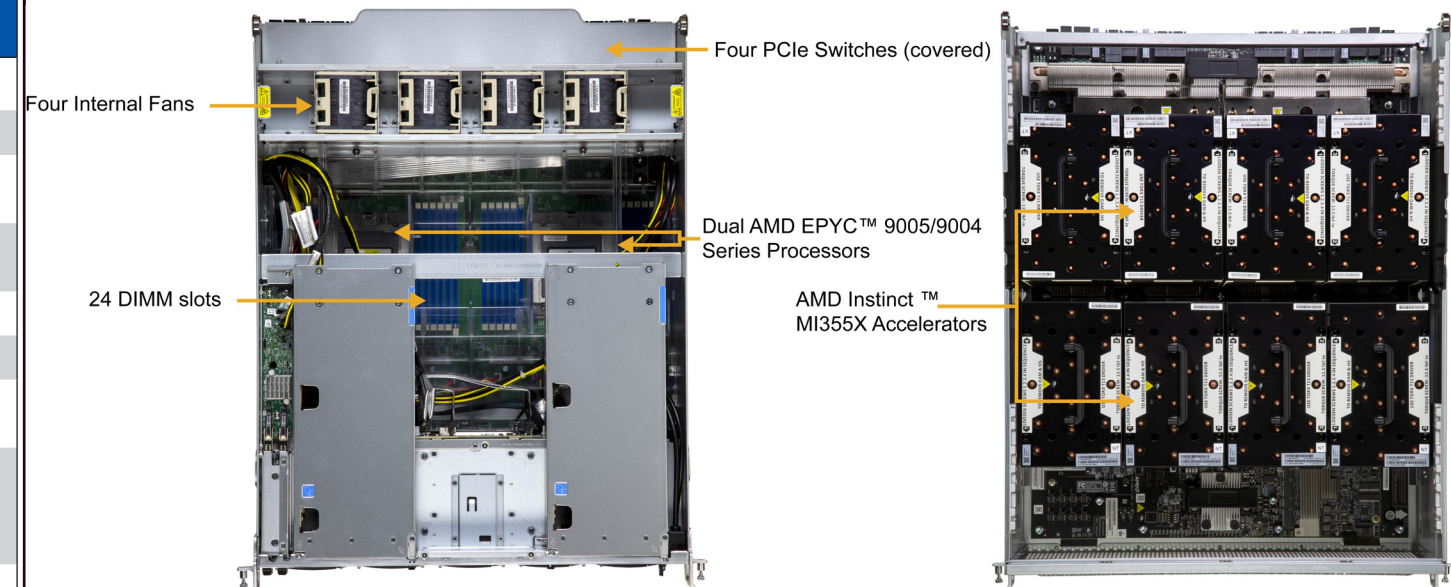

MNL-2916-QRG

© 2025 Supermicro Computer Inc. All rights reserved. Reproduction of this document without Supermicro's written consent. All trademarks are property of their respective entities. All information provided is deemed accurate at the time of printing. However, it is not guaranteed.