


SUPERMICRO® SuperServer 5015A-EHF-D525 Quick Reference Guide

Board Layout

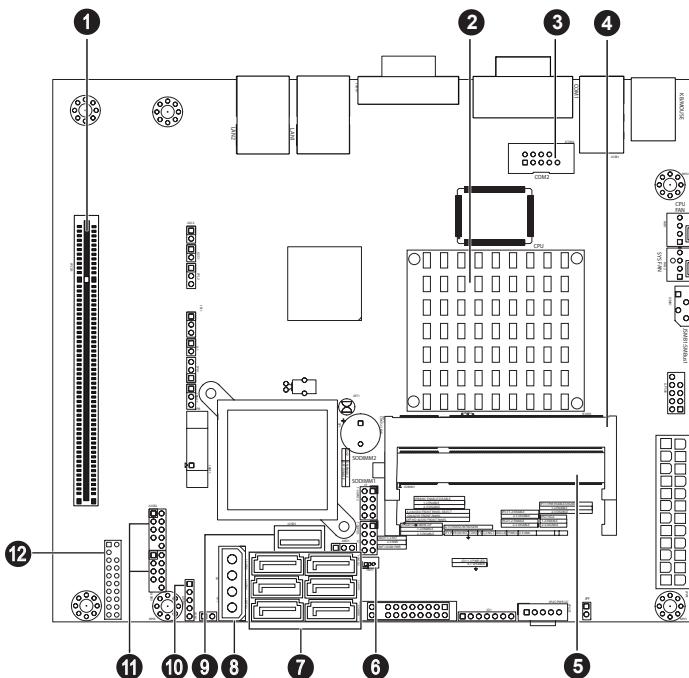

No.	Description
1	PCI-E 1.1 x4 Gen1 (in x16 physical) Slot
2	Embedded CPU
3	Serial Port 2
4	SO-DIMM2 Memory Slot
5	SO-DIMM1 Memory Slot
6	JWF1 = SATA Disk on Module (DOM) Power
7	SATA 0, 1, 2, 3, 4, 5 Ports
8	J8 = Power Connector for Add-on Device*
9	USB 10 = Type A USB Port
10	USB 9 (Front Panel USB Headers)
11	USB 5/6, 7/8 Ports
12	JTPM = TPM (Trusted Platform Management) Header

* Note: Do NOT plug the power supply into this connector


Beep Codes

When a recoverable type of error occurs during POST, BIOS will display a POST code that describes the problem. BIOS may also issue one of the following beep codes:



- 1 Long and two short beeps - video configuration error
- 1 repetitive long beep - no memory detected
- 1 continuous beep with the front panel Overheat LED on - system overheating
- 8 short beeps - display memory read/write error

MEMORY

1. Position the SO-DIMM module's bottom key so that it aligns with the receptive point on the slot.
2. Insert the SO-DIMM module vertically at about a 45 degree angle.
3. Press down until the module locks into place. The side clips will automatically secure the SO-DIMM module, locking it into place.
4. To Remove: Use your thumbs to gently push the side clips near both ends away from the module. This should release it from the slot. Pull the SO-DIMM module upwards.

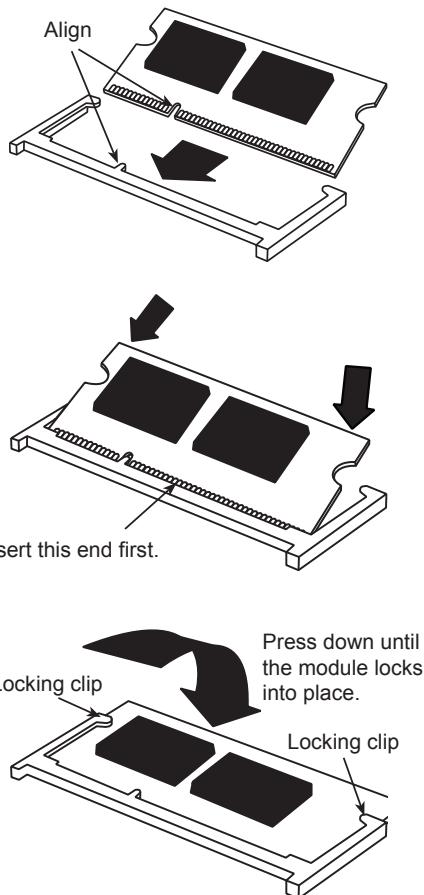

Front View & Interface

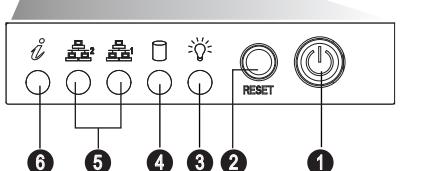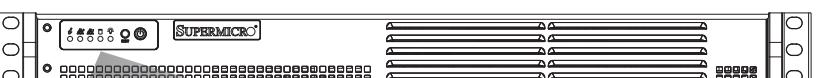


No.	Description
1	Power Button
2	Reset Button
3	Power LED
4	Device Activity LED
5	LAN1 LED & LAN2 LED
6	Information LED

Drive bay Installation/Removal


Installing a 3.5" SATA Drive

1. Power down the system and unplug the AC power cord.
2. Remove the chassis cover as described.
3. Use screws to secure the drive directly into the left side of the chassis as shown in the figure.

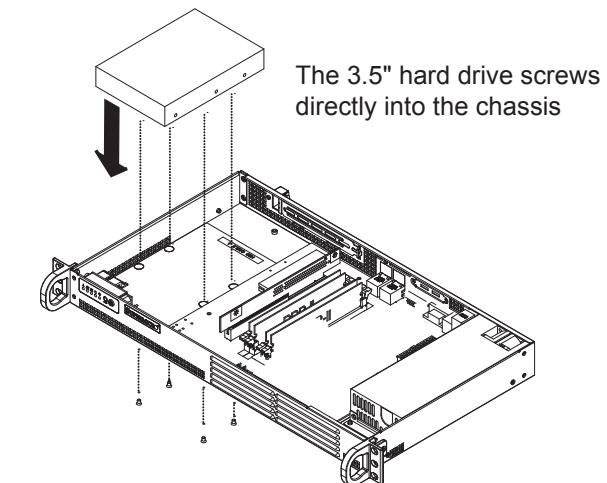


Installing 2.5" SATA Drives

1. Power down the system and unplug the AC power cord.
2. Remove the chassis cover.
3. Use screws to secure the drive into the hard drive bracket:
 - For two drives the bracket is p/n MCP-220-00044-0N.
 - For one drive the bracket is p/n MCP-220-00051-0N.
4. Use screws to secure the bracket/drive assembly into the left side of the chassis as shown in the figure.

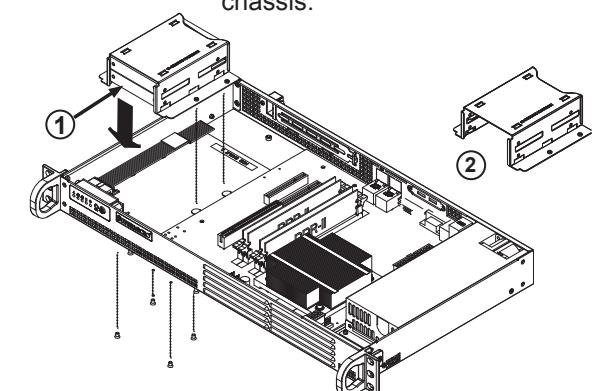

Rear View

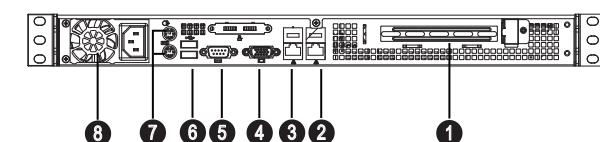

No.	Description
1	PCI-E Expansion Slot (w/riser card)
2	GbE LAN2 Port
3	GbE LAN1 Port
4	VGA Port
5	COM1 Port
6	USB 0/1 Ports
7	PS2 keyboard (purple) & Mouse (green) Ports
8	Single Power Supply Module

Caution

SAFETY INFORMATION

IMPORTANT: See installation instructions and safety warning before connecting system to power supply.
http://www.supermicro.com/about/policies/safety_information.cfm

WARNING:

To reduce risk of electric shock/damage to equipment, disconnect power from server by disconnecting all power cords from electrical outlets.
 If any CPU socket empty, install protective plastic CPU cap

CAUTION:

Always be sure all power supplies for this system have the same power output. If mixed power supplies are installed, the system will not operate.

For more information go to :
<http://www.supermicro.com/support>

