

SUPERMICRO® SuperServer 6029P-WTRT Quick Reference Guide

Board Layout

Front View and Features

Slot	Description
0~7	Hot-Swap SATA3/SAS3* Drive Bays
8~11	Hot-Swap SATA3/SAS3* NVMe (CPU1&2)** Drive Bays

* SAS3 support requires additional parts in optional parts list
** NVMe support requires additional parts in optional parts list

No.	Description
1	Power Button
2	Reset Button
3	Device Activity LED
4	LAN1 LED
5	Universal Information LED
6	Power LED
7	LAN2 LED
8	Power Failure LED
9	Device Activity LED
10	Device Status LED
11	Service/Asset Tag, Pull-out identifier (with BMC ADMIN default password underneath)

Rear View and Features

No.	Description
1	Redundant Power Supply Modules
2	VGA Port
3	Dedicated LAN for IPMI
4	USB 3.0 Ports
5	2 RJ45 10GbE LAN Ports
6	PCI-E 3.0 Expansion Slots (LP)
7	UID LED
8	PCI-E 3.0 Expansion Slots (FHH)

BMC Password Label

Each system comes with a unique default password for the ADMIN user. This can be found on a sticker on the motherboard and a sticker underneath the service tag on chassis. If necessary, the password can be reset by the Supermicro IPMICFG tool.

For more information, please visit <https://www.supermicro.com/en/solutions/management-software/bmc-resources>

Memory

DIMM Installation

1. Insert the desired number of DIMMs into the memory slots. For 1~3 DIMMs per CPU, follow the order of DIMMA1, DIMMB1, DIMMC1; For 4~6 DIMMs per CPU, follow the order of DIMMA1, DIMMD1, DIMMB1, DIMME1, DIMMC1, DIMMF1. For best performance, please use the memory modules of the same type and speed.
2. Push the release tabs outwards on both ends of the DIMM slot to unlock it.
3. Align the key of the DIMM module with the receptive point on the memory slot.
4. Align the notches on both ends of the module against the receptive points on the ends of the slot.
5. Use two thumbs together to press the notches on both ends of the module straight down into the slot until the module snaps into place.
6. Press the release tabs to the lock positions to secure the DIMM module into the slot.

Beep Code

BIOS Beep (POST) Codes		
Beep Code	Error Message	Description
1 beep	Refresh	Circuits have been reset (Ready to power up)
5 short, 1 long	Memory error	No memory detected in the system
5 long, 2 short	Display memory read/ write error	Video adapter missing or with faulty memory
1 long continuous	System OH	System overheat condition

Supports Dual Intel Xeon Skylake and Cascade Lake Scalable Processors (LGA 3647) with a thermal design power (TDP) of up to 165W and 28 cores

Note: The X11DDW-L/NT motherboard does not support FPGA or Fabric processors.

Attaching the Processor Carrier Assembly to the Heatsink to Form the Processor Heatsink Module (PHM)

Removing the Dust Cover from the CPU Socket

Remove the dust cover from the CPU socket, exposing the socket and socket pins as shown on the illustration below.

Note: Do not touch the socket pins to avoid damaging them, causing the CPU to malfunction.

Installing the Processor Heatsink Module (PHM)

Note: Do not use excessive force when tightening the screws to avoid damaging the LGA lands and the processor.

Removing the Processor Heatsink Module (PHM) from the Motherboard

Remove the dust cover from the CPU socket, exposing the socket and socket pins as shown on the illustration below.

Note: Do not touch the socket pins to avoid damaging them, causing the CPU to malfunction.

Caution

SAFETY INFORMATION

IMPORTANT: See installation instructions and safety warning before connecting system to power supply.

http://www.supermicro.com/about/policies/safety_information.cfm

WARNING:

To reduce risk of electric shock/damage to equipment, disconnect power from server by disconnecting all power cords from electrical outlets.

If any CPU socket empty, install protective plastic CPU cap.

CAUTION:

Always be sure all power supplies for this system have the same power output. If mixed power supplies are installed, the system will not operate.

For more information go to: <http://www.supermicro.com/support>

<http://www.supermicro.com>

MNL-2033-QRG

Rev. 1.1a