



# SUPERMICR<sup>®</sup> SuperServer<sup>®</sup> SYS-221GE-TNHT-LC1 Quick Reference Guide

## Front Features

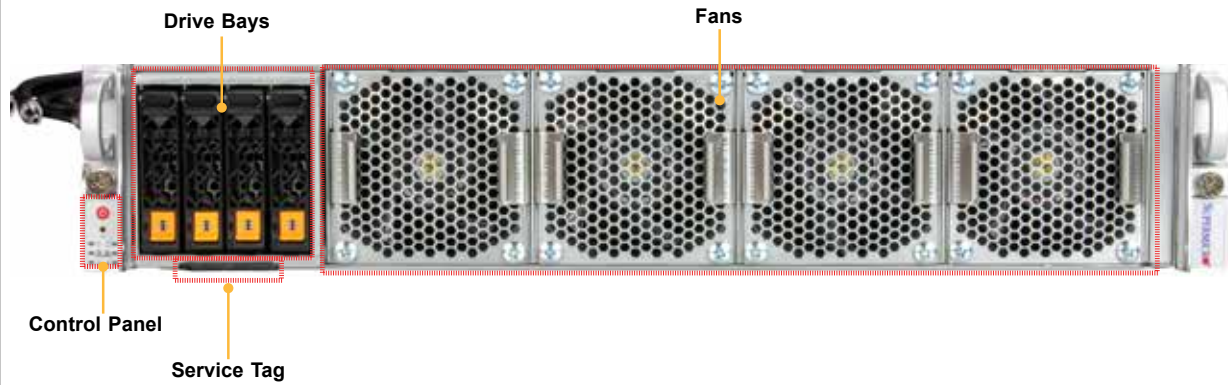

## Rear Features

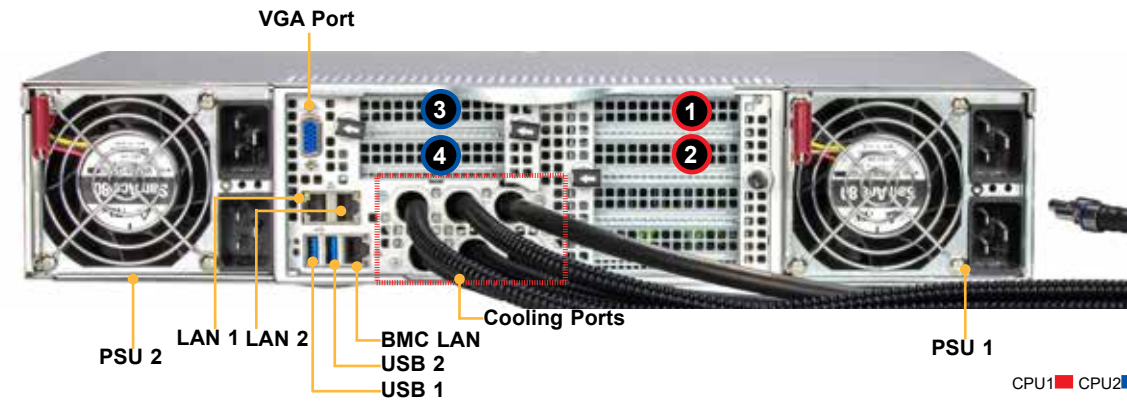


## BMC Password

Each system comes with a unique default password for the ADMIN user. This can be found on a sticker on the motherboard and another on the chassis service tag. If necessary, the password can be reset.

For more information, please visit <https://www.supermicro.com/en/solutions/management-software/bmc-resources>


## Product Page

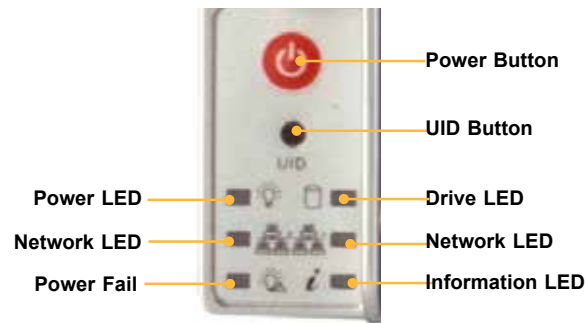


## Expansion Slots

Slot	Description
1 and 2	Two PCIe 5.0 x16 FH, 2.5"L slots supported on first riser card by CPU1
3 and 4	Two PCIe 5.0 x16 FH, 2.5"L slots supported on second riser card by CPU2


## Data Plane Block Diagram

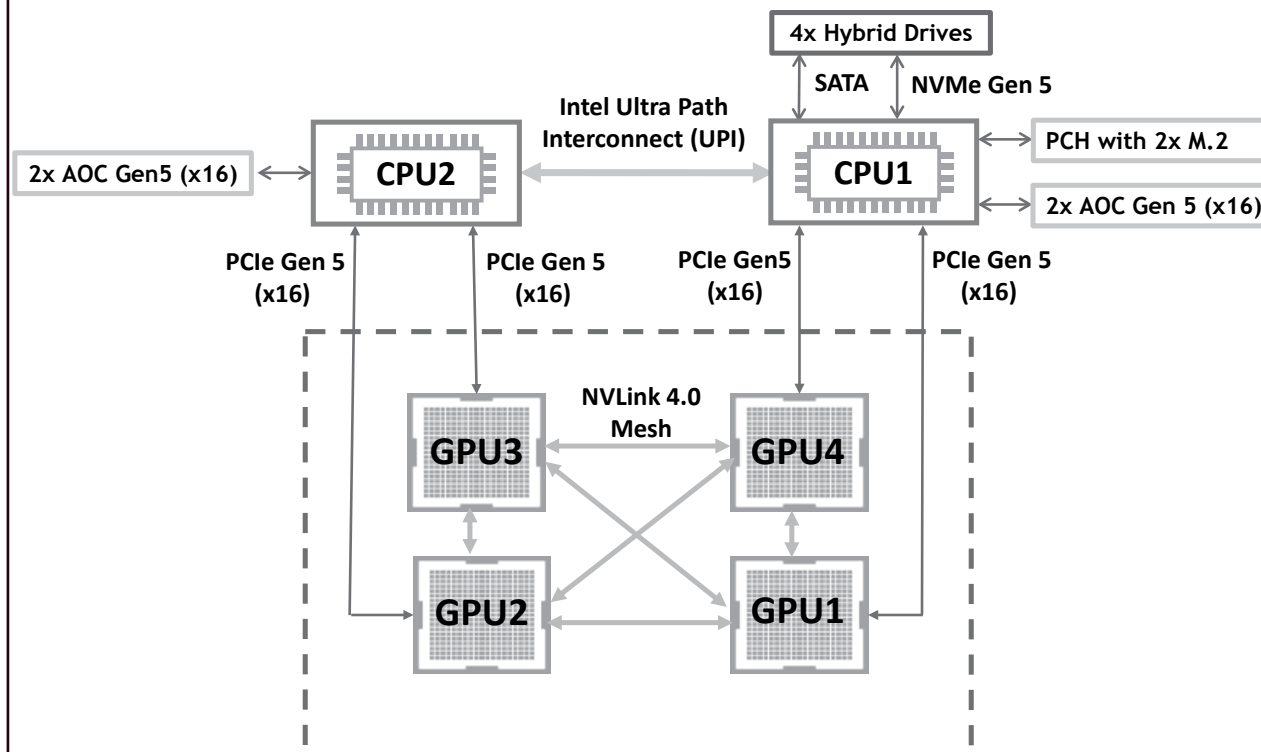

## Motherboard Block Diagram

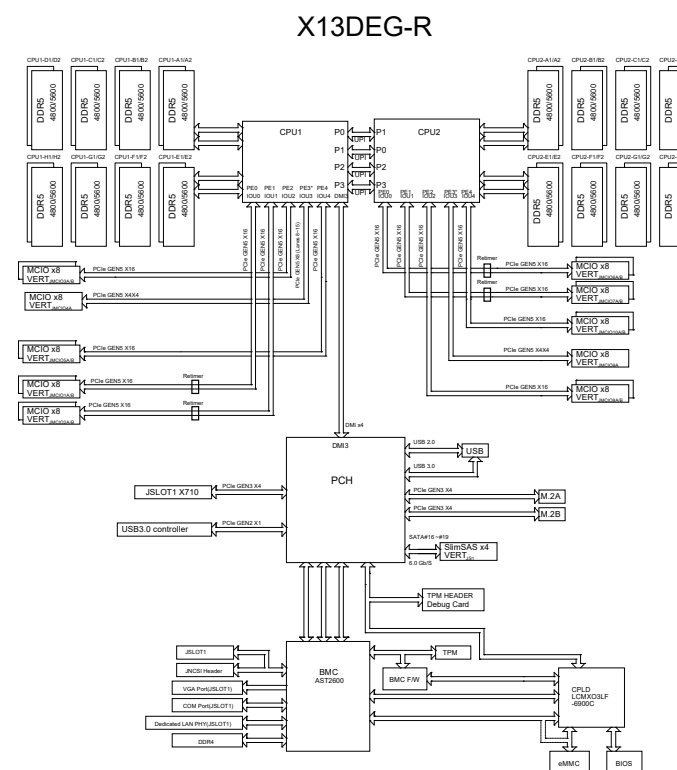

## Unlocking Drive

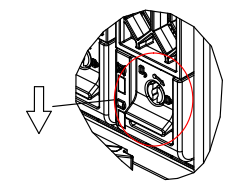

## Caution

**SAFETY INFORMATION**  
**IMPORTANT:** See installation instructions and safety warning before connecting system to power supply.  
[https://www.supermicro.com/about/policies/safety\\_information.cfm](https://www.supermicro.com/about/policies/safety_information.cfm)

**WARNING**  
 To reduce risk of electric shock/damage to equipment, disconnect power from server by disconnecting all power cords from electrical outlets.  
 If any CPU socket is empty, install protective plastic CPU cap.

**CAUTION**  
 Always be sure all power supplies for this system have the same power output. If mixed power supplies are installed, the system will not operate.  
 For more information, go to <https://www.supermicro.com/support>