


SUPERMICR[®] A+ Server[®] AS -2116S-FTNRT/TNRT Quick Reference Guide


AS-2116S-FTNRT Features

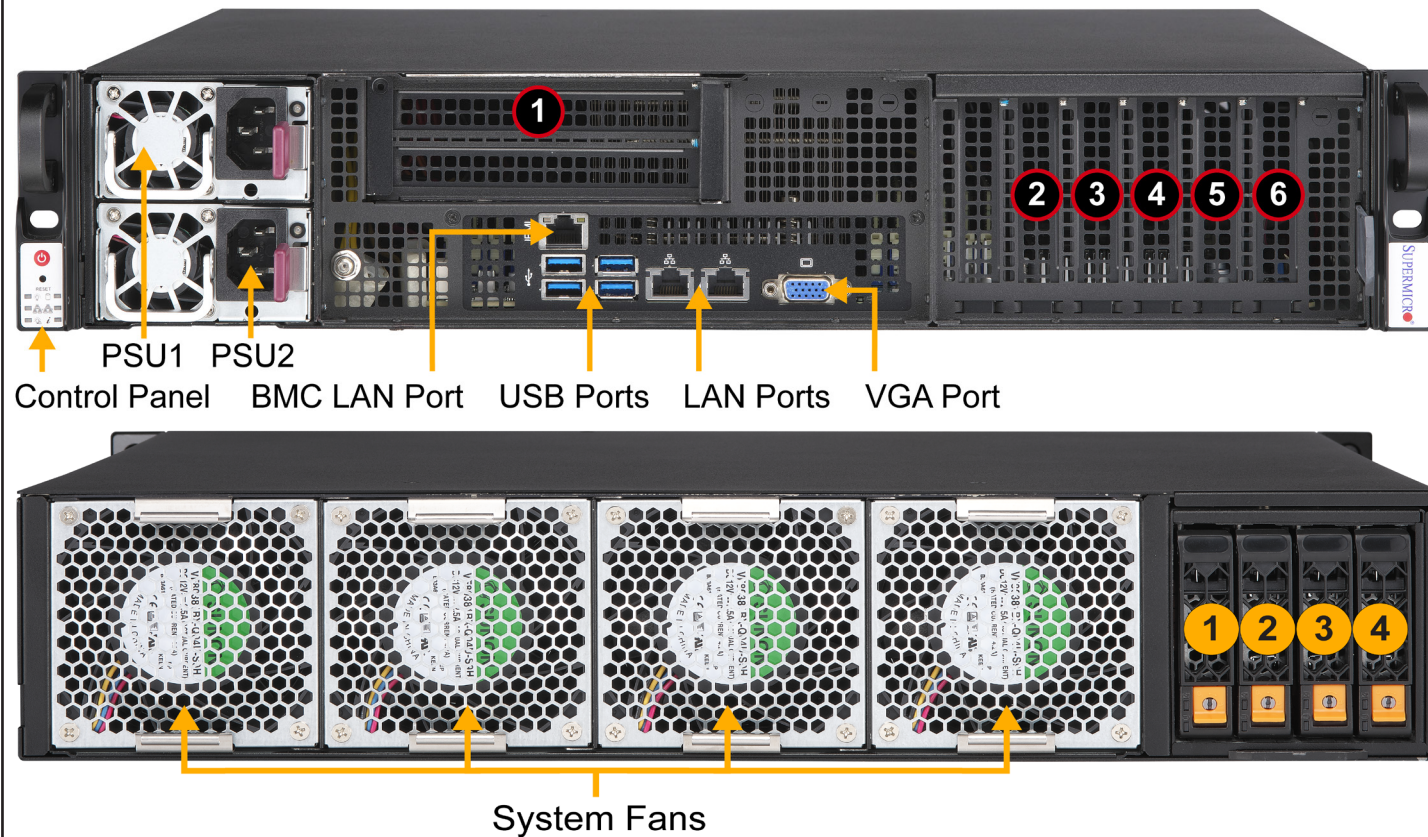

AS -2116S-FTNRT Features: Front	
Feature	Description
Control Panel	One system control panel with a power button and status LEDs
Power Supplies	Two redundant 2000 W power supplies
BMC LAN Port	One RJ45 1 GbE dedicated BMC LAN port
USB Ports	Four USB 3.2 Gen1 Type-A ports
LAN Ports	Two RJ45 10 GbE LAN ports
VGA Port	One legacy VGA port
1	(Optional) One PCIe 5.0 x16 FHFL double-width slot
2, 4, 6	Three PCIe 5.0 x16 HHFL slots
3, 5	Two PCIe 5.0 x8 HHFL slots


AS -2116S-FTNRT Features: Rear	
Feature	Description
System Fans	Four 8-cm hot-swappable fans
1-4	Four hot-swappable 2.5" NVMe/SATA drive bays (NVMe support might require additional storage controller and/or cables)

Control Panel

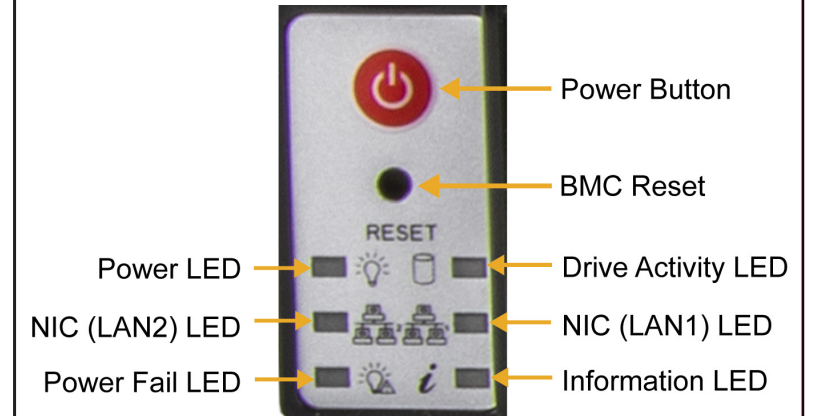

Information LED	
Color, Status	Description
Red, solid	Overheating condition
Red, blinking at 1 Hz	Fan failure (check for an inoperative fan)
Red, blinking at 0.25 Hz	Power failure (check for an inoperative power supply)
Red, solid with Power LED blinking green	Fault detected
Blue and red, blinking at 10 Hz	Recovery mode
Blue, solid	UID activated locally to locate the server in a rack environment
Blue, blinking at 1 Hz	UID activated via BMC to locate the server in a rack environment
Blue, blinking at 2 Hz	BMC resetting
Blue, blinking at 4 Hz	BMC setting factory defaults
Blue, blinking at 10 Hz with Power LED blinking green	BMC/BIOS firmware updating

AS-2116S-TNRT Features

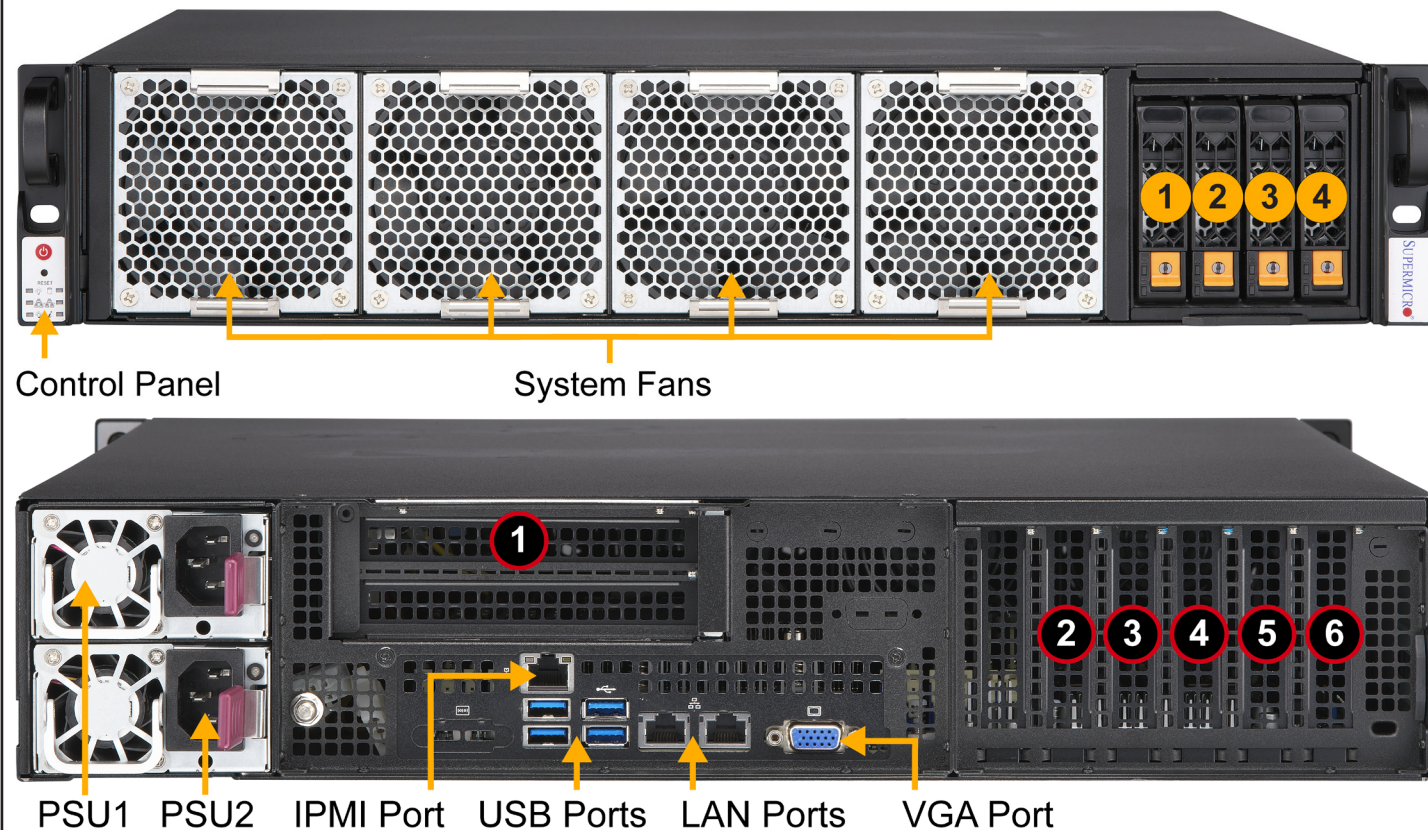

AS -2116S-TNRT Features: Front	
Feature	Description
Control Panel	One system control panel with a power button and status LEDs
System Fans	Four 8-cm hot-swappable fans
1-4	Four hot-swappable 2.5" NVMe/SATA drive bays (NVMe support might require additional storage controller and/or cables)

AS -2116S-TNRT Features: Rear	
Feature	Description
Power Supplies	Two redundant 2000 W power supplies
BMC LAN Port	One RJ45 1 GbE dedicated BMC LAN port
USB Ports	Four USB 3.2 Gen1 Type-A ports
LAN Ports	Two RJ45 10 GbE LAN ports
VGA Port	One legacy VGA port
1	(Optional) One PCIe 5.0 x16 FHFL double-width slot
2, 4, 6	Three PCIe 5.0 x16 HHFL slots
3, 5	Two PCIe 5.0 x8 HHFL slots

BMC Password

Each system comes with a unique default password for the ADMIN user. This can be found on a sticker on the motherboard and another on the chassis service tag. If necessary, the password can be reset.

For more information, please visit <https://www.supermicro.com/en/solutions/management-software/bmc-resources>

Product Page

