


SUPERMICR[®] SuperServer F628G2-FT+/FTPT+ Quick Reference Guide

Board Layout

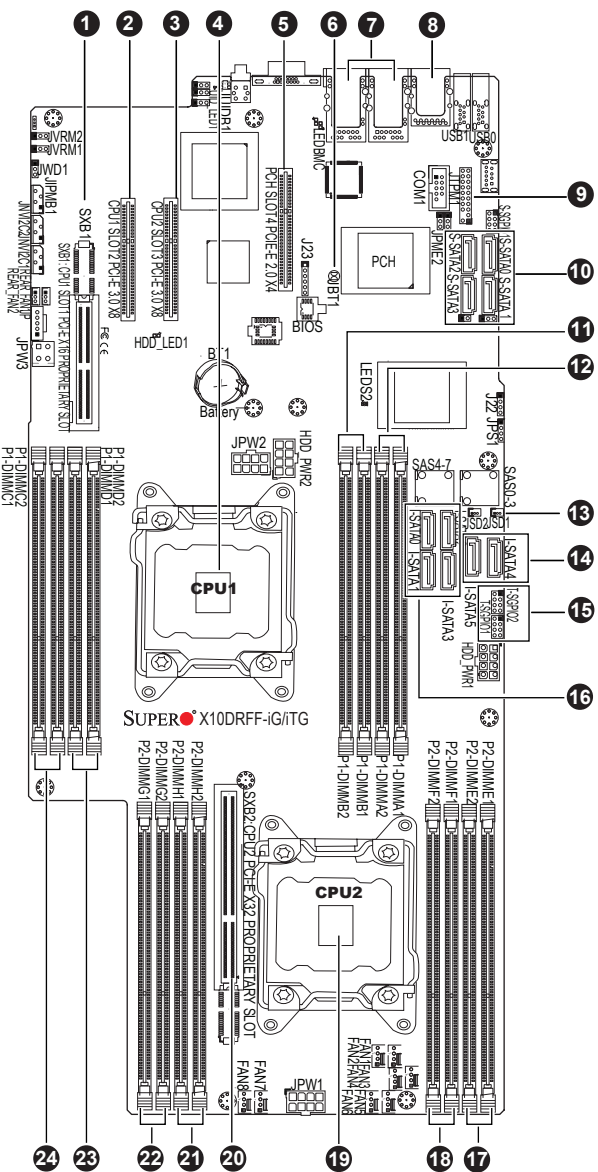

No.	Description	No.	Description
1	SXB1: CPU1 Slot1 PCI-E 3.0 x16 Proprietary Slot	13	JSD1 & JSD2: I-SATA4 & I-SATA5 Power Connector
2	CPU1 Slot2 PCI-E 3.0 x8	14	I-SATA4~5: Support SMC1 SuperDOM
3	CPU2 Slot3 PCI-E 3.0 x8	15	T-SGPIO 1/2: Intel SATA SGPIO
4	CPU1 Socket	16	I-SATA0~3: Internal SATA 3.0 Ports
5	PCH Slot4 PCI-E 2.0 x4	17	P2-DIMME1 / P2-DIMME2
6	JBT1: CMOS Clear	18	P2-DIMMF1 / P2-DIMMF2
7	1G LAN ports 1/2 (X10DRFF-iG) 10G LAN ports 1/2 (X10DRFF-iTG)	19	CPU2 Socket
8	IPMI_LAN1: IPMI dedicated LAN Support	20	SXB2: CPU2 PCI-E x32 Proprietary Slot
9	JTPM1: Trusted Platform Module Header	21	P2-DIMMH1 / P2-DIMMH2
10	S-SATA 0~3: SATA 3.0 connectors	22	P2-DIMMG1 / P2-DIMMG2
11	P1-DIMMB1 / P1-DIMMB2	23	P1-DIMMD1 / P1-DIMMD2
12	P1-DIMMA1 / P1-DIMMA2	24	P1-DIMMC1 / P1-DIMMC2


Memory

Processors and their Corresponding Memory Modules								
CPU#	Corresponding DIMM Modules							
CPU 1	P1-DIMMA1	P1-DIMMB1	P1-DIMMC1	P1-DIMMD1	P1-DIMMA2	P1-DIMMB2	P1-DIMMC2	P1-DIMMD2
CPU2	P2-DIMME1	P2-DIMMF1	P2-DIMMG1	P2-DIMMH1	P2-DIMME2	P2-DIMMF2	P2-DIMMG2	P2-DIMMH2

Processor and Memory Module Population for Optimal Performance	
Number of CPUs+DIMMs	CPU and Memory Population Configuration Table (For memory to work properly, please follow the instructions below.)
1 CPU & 2 DIMMs	CPU1 P1-DIMMA1/P1-DIMMB1
1 CPU & 4 DIMMs	CPU1 P1-DIMMA1/P1-DIMMB1, P1-DIMMC1/P1-DIMMD1
1 CPU & 5~8 DIMMs	CPU1 P1-DIMMA1/P1-DIMMB1, P1-DIMMC1/P1-DIMMD1 + any pair of P1-DIMMA2/P1-DIMMB2/P1-DIMMC2/P1-DIMMD2 slots
2 CPUs & 4 DIMMs	CPU1 + CPU2 P1-DIMMA1/P1-DIMMB1, P2-DIMME1/P2-DIMMF1
2 CPUs & 6 DIMMs	CPU1 + CPU2 P1-DIMMA1/P1-DIMMB1/P1-DIMMC1/P1-DIMMD1, P2-DIMME1/P2-DIMMF1
2 CPUs & 8 DIMMs	CPU1 + CPU2 P1-DIMMA1/P1-DIMMB1/P1-DIMMC1/P1-DIMMD1, P2-DIMME1/P2-DIMMF1/P2-DIMMG1/P2-DIMMH1
2 CPUs & 9~16 DIMMs	CPU1 + CPU2 P1-DIMMA1/P1-DIMMB1/P1-DIMMC1/P1-DIMMD1, P2-DIMME1/P2-DIMMF1/P2-DIMMG1/P2-DIMMH1 + any pair of P1, P2 DIMM slots
2 CPUs & 16 DIMMs	CPU1 + CPU2 P1-DIMMA1/P1-DIMMB1/P1-DIMMC1/P1-DIMMD1, P2-DIMME1/P2-DIMMF1/P2-DIMMG1/P2-DIMMH1, P1-DIMMA2/P1-DIMMB2/P1-DIMMC2/P1-DIMMD2, P2-DIMME2/P2-DIMMF2/P2-DIMMG2/P2-DIMMH2


Populating RDIMM/LRDIMM DDR4 Memory Modules							
Type	Ranks Per DIMM and Data Width	DIMM Capacity (GB)		Speed (MT/s); Voltage (V); Slots per Channel (SPC) and DIMMs per Channel (DPC)			
				2 Slots per Channel			
				1 DPC		2 DPC	
				E5-2600 V3	E5-2600 V4	E5-2600 V3	E5-2600 V4
		4 GB	8 GB	1.2 V	1.2 V	1.2 V	1.2 V
RDIMM	SRx4	8 GB	16 GB	2133	2400	1866	2133
RDIMM	SRx8	4 GB	8 GB	2133	2400	1866	2133
RDIMM	DRx8	8 GB	16 GB	2133	2400	1866	2133
RDIMM	DRx4	16 GB	32 GB	2133	2400	1866	2133
LRDIMM	QRx4	32 GB	64 GB	2133	2400	2133	2400
LRDIMM 3DS	8Rx4	64 GB	128 GB	2133	2400	2133	2400

Nodes and Corresponding Hard Drives

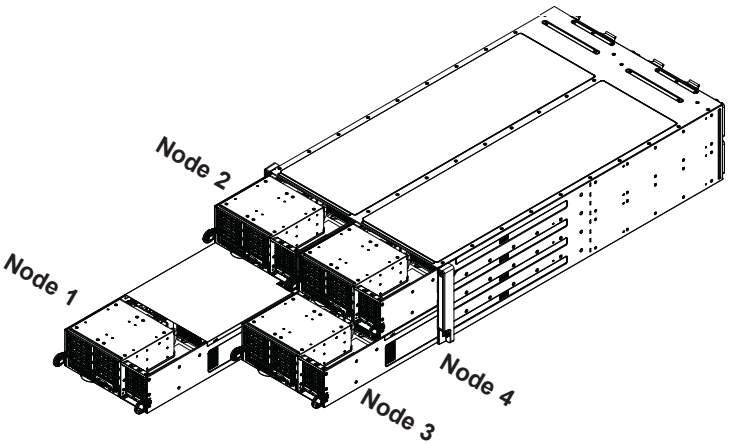


F424BG-R2K04BP Node Locations in the Chassis			
Node 2 Controls six 2.5" HDDs, B1-B6		Node 4 Controls six 2.5" HDDs, D1-D6	
Node 1 Controls six 2.5" HDDs, A1-A6		Node 3 Controls six 2.5" HDDs, C1-C6	

Front View & Interface

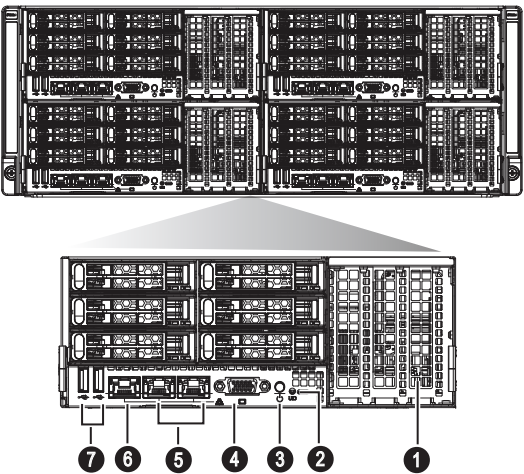


No.	Description
1	Low-Profile PCI-E Expansion Slot
2	UID Button
3	Power Button
4	VGA Port
5	GbE or 10 GbE LAN1/LAN2 Ports
6	Dedicated LAN for IPMI
7	USB 0/1 Ports

Rear View

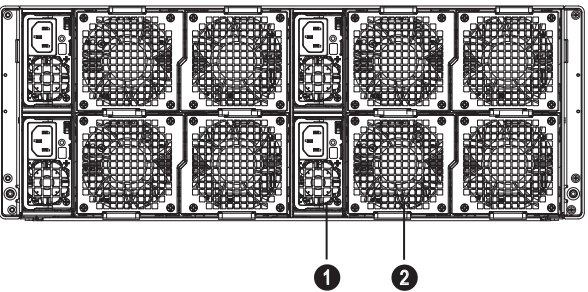


No.	Description
1	Power Supply Module
2	Rear Fan

CPU Installation

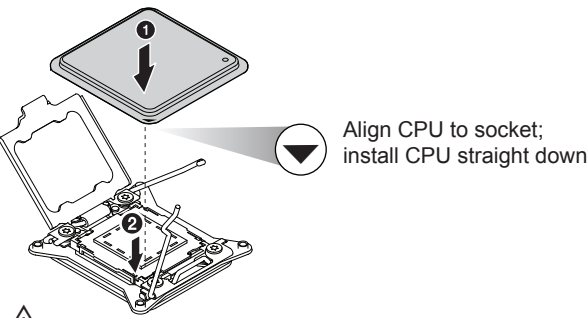

- NOTE:**
- Do not bend pin inside socket.
 - Please contact Technical Support for additional information about frequency optimized CPUs and specialized system optimization.

Heatsink Installation

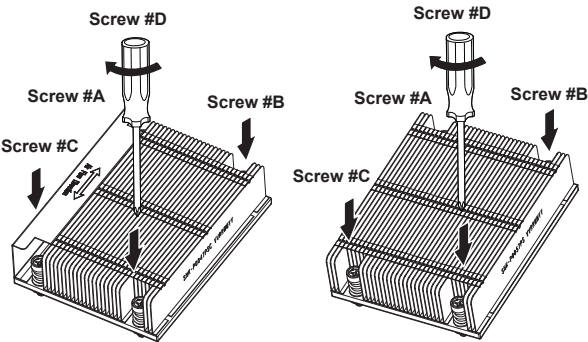

SNK-P0047PSC for CPU1 SNK-P0057PS for CPU2

- Place the heatsink on top of the installed CPU.
- Align the four screws to the socket.
- Holding the heatsink in place, screw down as shown (cross pattern, in order: A, C, B, D).
- Note: Only use 6-8 lb/f of torque; otherwise, hand-tighten each screw to avoid damaging the CPU.

Caution

SAFETY INFORMATION
IMPORTANT: See installation instructions and safety warning before connecting system to power supply.
http://www.supermicro.com/about/policies/safety_information.cfm

WARNING:
To reduce risk of electric shock/damage to equipment, disconnect power from server by disconnecting all power cords from electrical outlets.
If any CPU socket empty, install protective plastic CPU cap

CAUTION:
Always be sure all power supplies for this system have the same power output. If mixed power supplies are installed, the system will not operate.

For more information go to :
<http://www.supermicro.com/support>

