
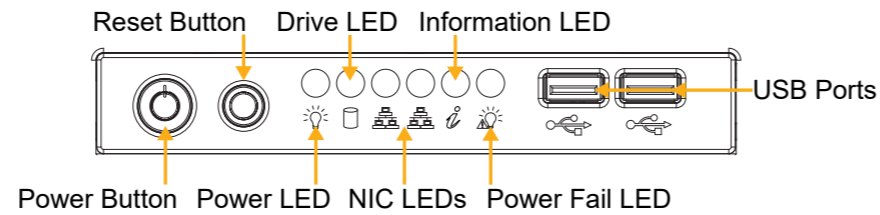


SUPERMICR® SuperWorkstation® SYS-741A-T Quick Reference Guide

Front Features

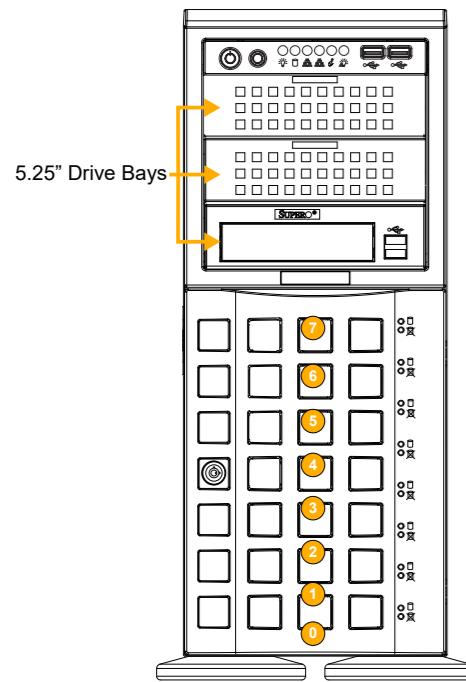


Information LED

Color, Status	Description
Red, solid	An overheat condition has occurred.
Red, blinking at 1 Hz	Fan failure, check for an inoperative fan.
Red, blinking at 0.25 Hz	Power failure, check for a non-operational power supply.
Red, solid, with Power LED blinking green	Fault detected.
Blue and red, blinking at 10 Hz	Recovery mode.
Blue, solid	UID has been activated locally to locate the server in a rack environment.
Blue, blinking at 1 Hz	UID has been activated using the BMC to locate the server in a rack environment.
Blue, blinking at 2 Hz	BMC is resetting.
Blue, blinking at 4 Hz	BMC is setting factory defaults.
Blue, blinking at 10 Hz with Power LED blinking green	BMC/BIOS is updating

Logical Storage Drive Numbers

Item	Description
0-3	Four hot-swap 2.5"/3.5" NVMe/SAS/SATA drive bays
0-7	Eight hot-swap 3.5" SAS/SATA drive bays


Rear Features

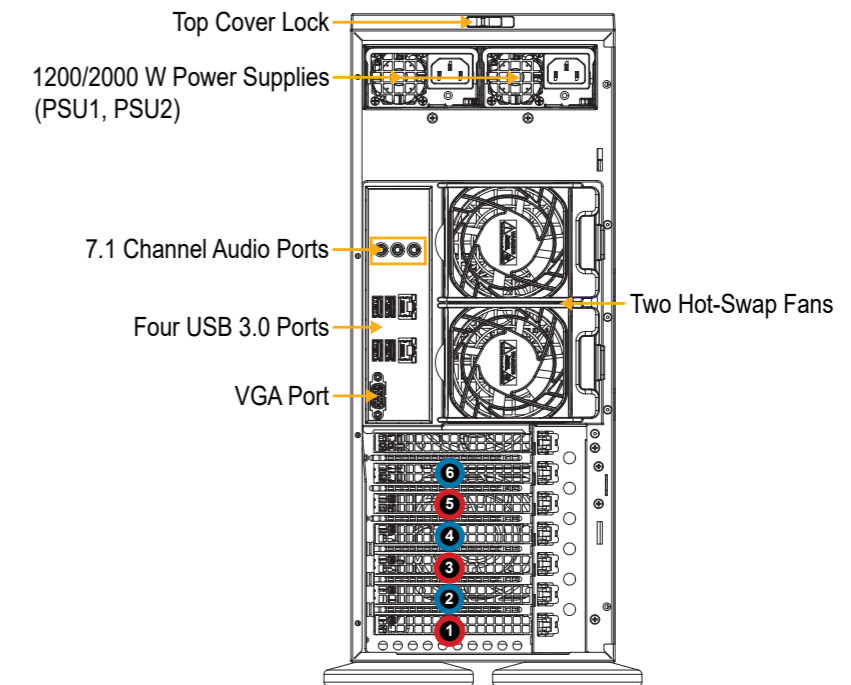


Expansion Slot Locations

Slot	Description
1-5	PCIe 5.0 x16 (FHFL)
6	PCIe 5.0 x8 (FHHL)

Main Components

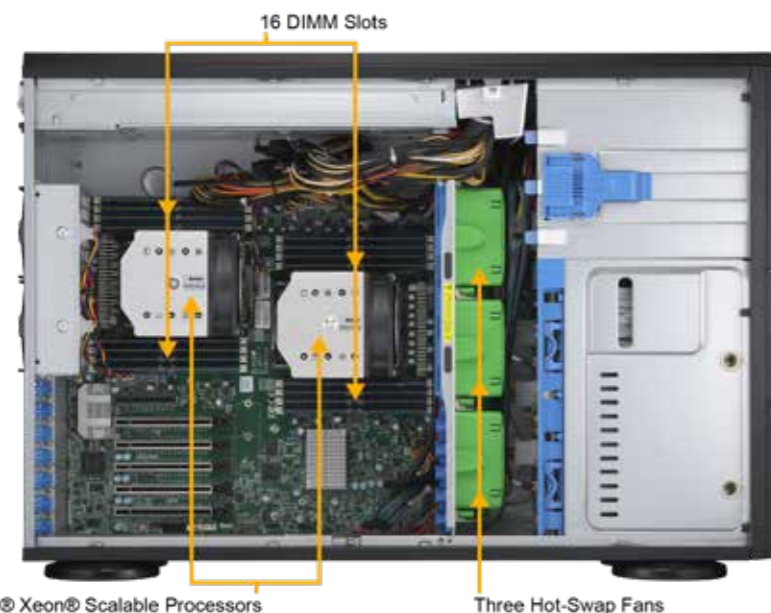

Rackmount Rails

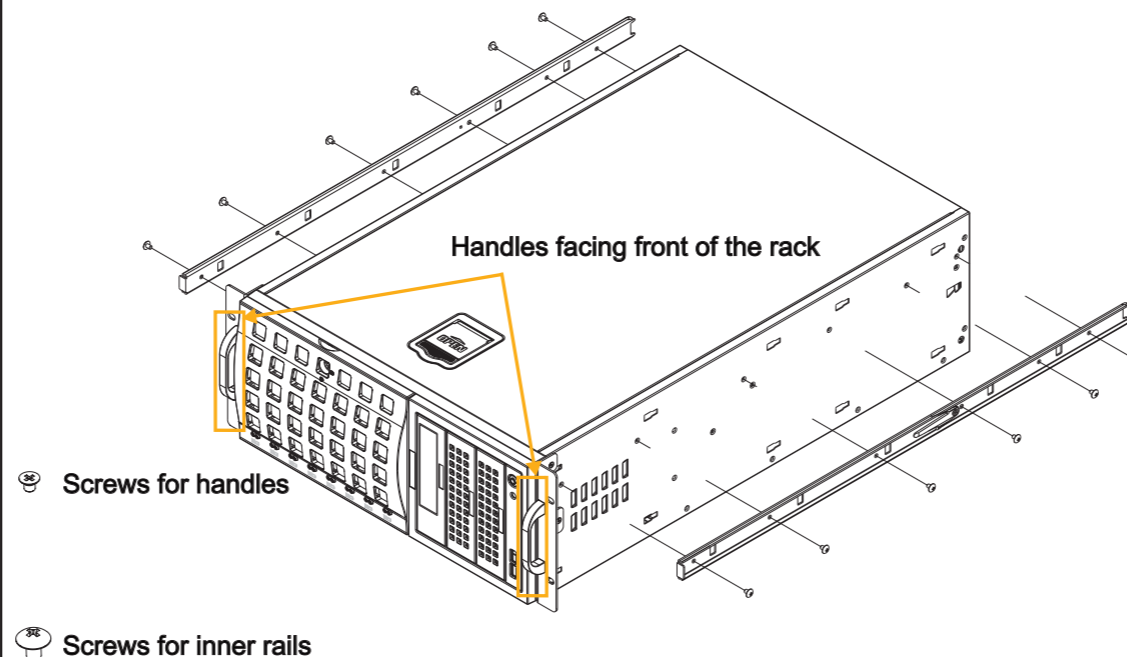

BMC Password

Each system comes with a unique default password for the ADMIN user. This can be found on a sticker on the motherboard and another on the chassis service tag. If necessary, the password can be reset.

For more information, please visit:
<https://www.supermicro.com/en/solutions/management-software/bmc-resources>.

System Datasheet



MNL-2829-QRG-100

© 2025 Supermicro Computer Inc. All rights reserved. Reproduction of this document whether in part or in whole is strictly prohibited without Supermicro's written consent. All Trademarks are property of their respective entities. All information provided is deemed accurate at the time of printing, however, it is not guaranteed.