


# SUPERMICR® Embedded Box PC® SYS-E101-14AM-H/E Quick Reference Guide

## Front Features

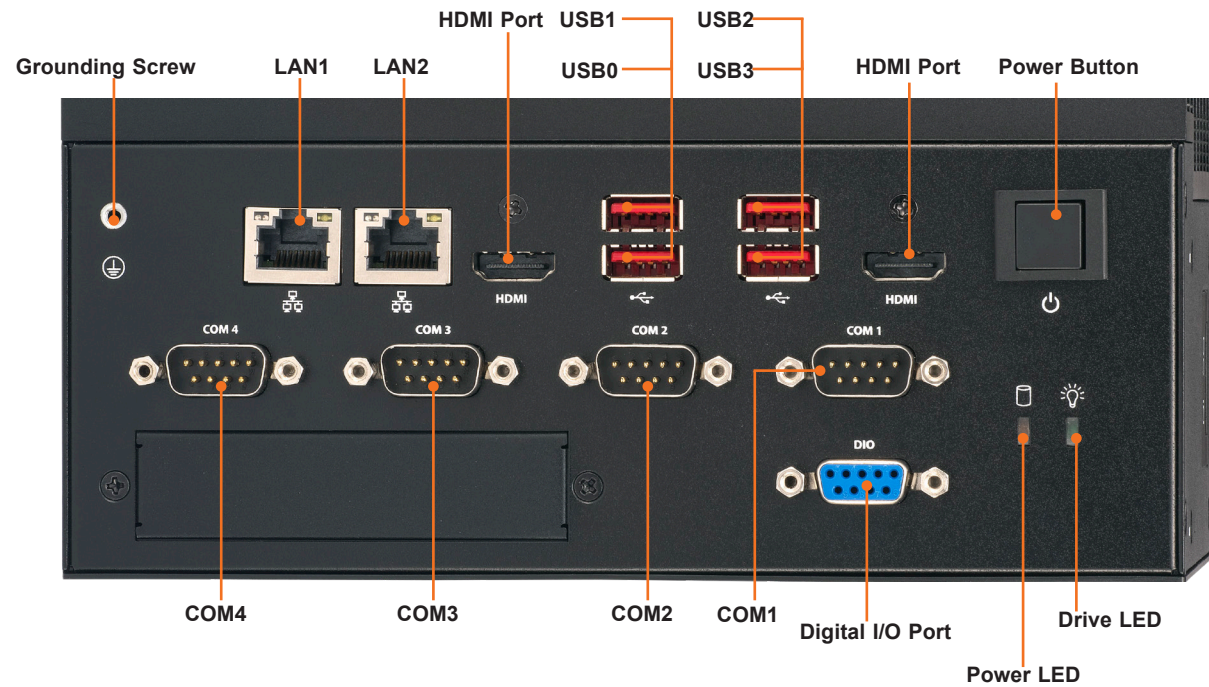

## Side Features




## Product Page


SYS-E101-14AM-H



SYS-E101-14AM-E

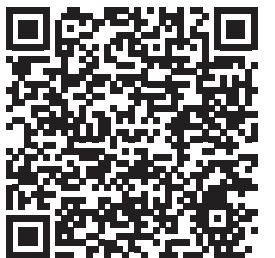

## Motherboard Block Diagram

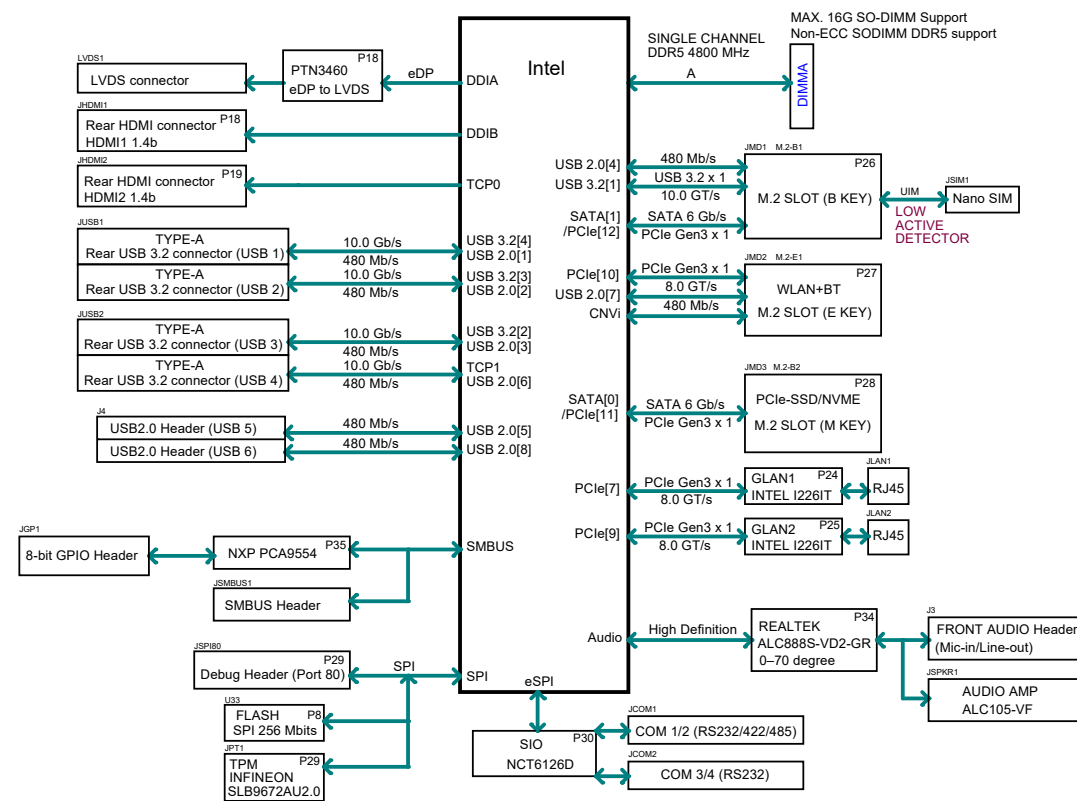


### I/O PANEL LAYOUT




## Installing Brackets

1. Turn the chassis over to the bottom side.
2. Decide whether the bracket mounting holes will face outwards or inwards.
3. The mounting bracket supports two screw alignments. Decide which screw holes will be used.
4. Align the screw holes on the mounting bracket with the screw holes on the chassis.
5. Install two screws.
6. Repeat on the other mounting bracket

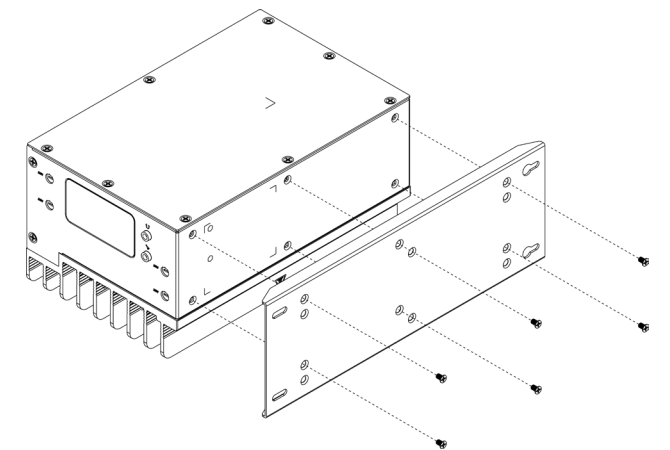

## Accessing the System

1. Remove the two screws on the rear of the chassis.
2. Remove the eight screws that hold the cover in place.
3. Lift the cover up and off the chassis.

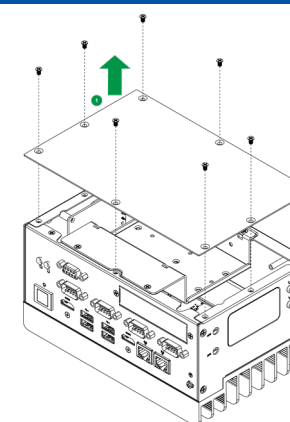

## Caution

**SAFETY INFORMATION**  
 IMPORTANT: See installation instructions and safety warning before connecting system to power supply.  
[https://www.supermicro.com/about/policies/safety\\_information.cfm](https://www.supermicro.com/about/policies/safety_information.cfm)

**WARNING**  
 To reduce risk of electric shock/damage to equipment, disconnect power from server by disconnecting all power cords from electrical outlets.  
 If any CPU socket is empty, install protective plastic CPU cap.

**CAUTION**  
 Always be sure all power supplies for this system have the same power output. If mixed power supplies are installed, the system will not operate.  
 For more information, go to <https://www.supermicro.com/support>

MNL-2845-QRG-100

© 2025 Supermicro Computer Inc. All rights reserved. Reproduction of this document, whether in part or in whole, is strictly prohibited without Supermicro's written consent. All trademarks are property of their respective entities. All information provided is deemed accurate at the time of printing, however, it is not guaranteed.