

## Addendum to X6DHR-TG Motherboard User's Manual

### Attention!!

### Important Notice!!

(Read the information listed below before using this product.)

Jumpers J4F4/J4F5 (PLLSEL Select): These jumpers allow the user to select PLLSEL (Memory Speed). Make sure that the jumper settings are set correctly according to your memory speed before you power on the system.

**(\*Warning!! If these jumpers are not set correctly according to your memory speed, video display failure may occur!!!)**

(\*Note: the default setting is "Closed" for both jumpers to enable DDR Memory at 333MHz. However, if your memory speed is 266MHz, please make sure to set both jumpers to "Open".)

<b>PLLSEL Select Jumper Settings (J4F4/J4F5)</b>		
DDR	J4F4	J4F5
*333 MHz	Closed	Closed
266MHz	Open	Open

(\*Default: Closed-333MHz)

J4F4/J4F5

