



X14SAV-LVDS

USER'S MANUAL

Revision 1.0 MNL-2751

The information in this User's Manual has been carefully reviewed and is believed to be accurate. The vendor assumes no responsibility for any inaccuracies that may be contained in this document, and makes no commitment to update or to keep current the information in this manual, or to notify any person or organization of the updates. Note: For the most up-to-date version of this manual, see our website at <https://www.supermicro.com>.

Super Micro Computer, Inc. ("Supermicro") reserves the right to make changes to the product described in this manual at any time and without notice. This product, including software and documentation, is the property of Supermicro and/or its licensors, and is supplied only under a license. Any use or reproduction of this product is not allowed, except as expressly permitted by the terms of said license.

IN NO EVENT WILL Super Micro Computer, Inc. BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, SPECULATIVE OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OR INABILITY TO USE THIS PRODUCT OR DOCUMENTATION, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN PARTICULAR, SUPER MICRO COMPUTER, INC. SHALL NOT HAVE LIABILITY FOR ANY HARDWARE, SOFTWARE, OR DATA STORED OR USED WITH THE PRODUCT, INCLUDING THE COSTS OF REPAIRING, REPLACING, INTEGRATING, INSTALLING OR RECOVERING SUCH HARDWARE, SOFTWARE, OR DATA.

Any disputes arising between manufacturer and customer shall be governed by the laws of Santa Clara County in the State of California, USA. The State of California, County of Santa Clara shall be the exclusive venue for the resolution of any such disputes. Supermicro's total liability for all claims will not exceed the price paid for the hardware product.

FCC Statement: This equipment has been tested and found to comply with the limits for a Class A or Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in industrial environment for Class A device or in residential environment for Class B device. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer's instruction manual, may cause harmful interference with radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case you will be required to correct the interference at your own expense.

California Best Management Practices Regulations for Perchlorate Materials: This Perchlorate warning applies only to products containing CR (Manganese Dioxide) Lithium coin cells. "Perchlorate Material-special handling may apply. See <https://www.dtsc.ca.gov/hazardouswaste/perchlorate>".



WARNING: This product can expose you to chemicals including lead, known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to <https://www.P65Warnings.ca.gov>.



AVERTISSEMENT : Ce produit peut vous exposer à des agents chimiques, y compris le plomb, identifié par l'État de Californie comme pouvant causer le cancer, des malformations congénitales ou d'autres troubles de la reproduction. Pour de plus amples informations, prière de consulter <https://www.P65Warnings.ca.gov>.

The products sold by Supermicro are not intended for and will not be used in life support systems, medical equipment, nuclear facilities or systems, aircraft, aircraft devices, aircraft/emergency communication devices or other critical systems whose failure to perform be reasonably expected to result in significant injury or loss of life or catastrophic property damage. Accordingly, Supermicro disclaims any and all liability, and should buyer use or sell such products for use in such ultra-hazardous applications, it does so entirely at its own risk. Furthermore, buyer agrees to fully indemnify, defend and hold Supermicro harmless for and against any and all claims, demands, actions, litigation, and proceedings of any kind arising out of or related to such ultra-hazardous use or sale.

Manual Revision 1.0

Release Date: March 31, 2025

Unless you request and receive written permission from Super Micro Computer, Inc., you may not copy any part of this document. Information in this document is subject to change without notice. Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders.

Copyright © 2025 by Super Micro Computer, Inc.
All rights reserved.

Published in the United States of America

Preface

About This Manual

This manual is written for professional system integrators and PC technicians. It provides information for the installation and use of the X14SAV-LVDS motherboard. Installation and maintenance should be performed by certified service technicians only.

Notes

For your system to work properly, follow the links below to download all necessary drivers/utilities and the user's manual for your server.

- Supermicro product manuals: <https://www.supermicro.com/support/manuals>
- Product drivers and utilities: <https://www.supermicro.com/wdl>
- Product safety info: https://www.supermicro.com/about/policies/safety_information.cfm
- A secure data deletion tool designed to fully erase all data from storage devices can be found on our website:
https://www.supermicro.com/about/policies/disclaimer.cfm?url=/wdl/utility/Lot9_Secure_Data_Deletion_Utility
- Frequently Asked Questions: <https://www.supermicro.com/FAQ/index.php>
- If you still have questions after referring to our FAQs, contact our support team. Region-specific Technical Support email addresses can be found at: "[Contacting Supermicro](#)" on page 10
- If you have any feedback on Supermicro product manuals, contact our writing team at: Techwriterteam@supermicro.com

This manual may be periodically updated without notice. Check the Supermicro website for possible updates to the manual revision level.

Conventions Used in the Manual

Special attention should be given to the following symbols for proper installation and to prevent damage done to the components or injury to yourself.



Warning! Indicates important information given to prevent equipment/property damage or personal injury.



Warning! Indicates high voltage may be encountered while performing a procedure.

Important: Important information given to ensure proper system installation or to relay safety precautions.

Note: Additional information given to differentiate various models or to provide information for proper system setup.

Contents

Contacting Supermicro	10
Chapter 1: Introduction	11
1.1 Quick Reference	12
Checklist	12
Motherboard Layout	13
Quick Reference Table	15
Motherboard Features	17
Motherboard Block Diagram	19
1.2 Platform Overview	20
1.3 Special Features	21
Recovery from AC Power Loss	21
1.4 System Health Monitoring	22
Onboard Voltage Monitors	22
Fan Status Monitor with Firmware Control	22
Environmental Temperature Control	22
System Resource Alert	22
1.5 ACPI Features	23
1.6 Serial Header	24
Chapter 2: Component Installation	25
2.1 Static-Sensitive Devices	27
Precautions	27
Unpacking	27
2.2 Motherboard Installation	28
Tools Needed	28
Installing the Motherboard	28
2.3 Processor and Heatsink Installation	30
Installing an LGA 1851 Processor	30
Installing a Processor Heatsink	34
Removing the Processor Heatsink	38
2.4 Memory Support and Installation	42
Memory Support	42

General Guidelines for Optimizing Memory Performance	42
SODIMM Installation	42
SODIMM Removal	44
2.5 Battery Removal and Installation	45
Battery Removal	45
Proper Battery Disposal	45
Battery Installation	45
Input/Output Ports	46
HDMI and DP Ports	47
LAN Ports	47
SATA 3.0 Port	47
USB Ports	47
Front Control Panel	50
Power Button	50
Reset Button	51
Overheat/Fan Fail LED	51
NIC1/NIC2 (LAN1/LAN2)	51
HDD LED	52
Power LED	52
NMI Button	53
2.6 Connections, Jumpers, and LEDs	54
Power Supply and Power Connections	54
Power Supply	54
4-Pin HDD Power Connector	54
4-pin DC Power Source	54
8-pin DC Power Connector	55
Headers and Connections	55
Chassis Intrusion	55
CMOS Battery	56
COM Header	56
Fan Headers	56
General Purpose I/O Header	57
LVDS Connector	57
M.2 Slots	58

MCIO PCIe 4.0 x4 Connector	59
OCuLink Connector	59
Speaker Header	60
TPM/Port 80 Header	60
USB Headers	61
Jumper Settings	62
CMOS Clear	62
LVDS Voltage Selection	63
ME Manufacturing Mode	63
PCIe Bifurcation	63
SMB to PCIe Slots Enable/Disable	64
Onboard TPM Enable/Disable	64
Watchdog Timer	64
LED Indicators	65
Power LED	65
Chapter 3: Troubleshooting	66
3.1 Troubleshooting Procedures	67
Before Power On	67
No Power	67
No Video	67
System Boot Failure	67
Memory Errors	68
Losing the System's Setup Configuration	68
If the System Becomes Unstable	68
3.2 Technical Support Procedures	70
3.3 Motherboard Battery	71
3.4 Where to Get Replacement Components	72
3.5 Returning Merchandise for Service	73
3.6 Feedback	74
Chapter 4: UEFI BIOS	75
4.1 Introduction	76
Updating BIOS	76
Starting the Setup Utility	76
4.2 Main Setup	78

4.3 Advanced Setup Configurations	80
ACPI Settings Menu	80
Boot Feature Menu	81
CPU Configuration Menu	83
Chipset Configuration Menu	86
Memory Configuration Menu	87
Graphics Configuration Menu	88
DMI Configuration Menu	88
PEG Port Configuration	89
GT - Power Management Control	89
PCH-IO Configuration	90
PCI Express Configuration	90
Onboard LAN1	90
Onboard LAN2	90
M.2-P1	91
PTN3460 Switch	91
HTTP Boot Configuration Menu	92
NCT5525D Super IO Configuration	93
Serial Port 1 Configuration Menu	93
Serial Port 2 Configuration Menu	94
Network Stack Configuration Menu	94
MAC:(MAC address)-IPv4 Network Configuration Menu	95
MAC:(MAC address)-IPv6 Network Configuration Menu	96
MAC:(MAC address)-IPv4 Network Configuration Menu	97
MAC:(MAC address)-IPv6 Network Configuration Menu	97
PCH-FW Configuration	99
AMT Configuration	99
ASF Configuration	99
Secure Erase Configuration	100
One Click Recovery (OCR) Configuration	100
PCIe/PCI/PnP Configuration Menu	100
SATA and RST Configuration	102
VMD Setup Menu	103
Serial Port Console Redirection Menu	103

Trusted Computing Menu	106
USB Configuration	108
Intel Ethernet Controller I226-LM - (MAC address) Menu	109
Intel Ethernet Controller I226-LM - (MAC address) Menu	109
TLS Authenticate Configuration Menu	109
4.4 Event Logs	111
4.5 Thermal & Fan	113
4.6 Security	115
Secure Boot Menu	116
4.7 Boot	119
4.8 Save & Exit	121
4.9 MEBx	123
Appendix A: BIOS Codes	126
BIOS Error POST (Beep) Codes	126
Additional BIOS POST Codes	126
Appendix B: Software	127
Microsoft Windows OS Installation	127
Installing the OS	127
Driver Installation	129
Appendix C: Standardized Warning Statements	131
Battery Handling	131
Product Disposal	133

Contacting Supermicro

Headquarters

Address: Super Micro Computer, Inc.
980 Rock Ave.
San Jose, CA 95131 U.S.A.

Tel: +1 (408) 503-8000

Fax: +1 (408) 503-8008

Email: Marketing@supermicro.com (General Information)
Sales-USA@supermicro.com (Sales Inquiries)
Government_Sales-USA@supermicro.com (Gov. Sales Inquiries)
Support@supermicro.com (Technical Support)
RMA@Supermicro.com (RMA Support)
Webmaster@supermicro.com (Webmaster)

Website: <https://www.supermicro.com>

Europe

Address: Super Micro Computer B.V.
Het Sterrenbeeld 28, 5215 ML
's-Hertogenbosch, The Netherlands

Tel: +31 (0) 73-6400390

Fax: +31 (0) 73-6416525

Email: Sales_Europe@supermicro.com (Sales Inquiries)
Support_Europe@supermicro.com (Technical Support)
RMA_Europe@supermicro.com (RMA Support)

Website: <https://www.supermicro.nl>

Asia-Pacific

Address: Super Micro Computer, Inc.
3F, No. 150, Jian 1st Rd.
Zhonghe Dist., New Taipei City 235 Taiwan (R.O.C)

Tel: +886 (2) 8226-3990

Fax: +886 (2) 8226-3992

Email: Sales-Asia@supermicro.com.tw (Sales Inquiries)
Support@supermicro.com.tw (Technical Support)
RMA@supermicro.com.tw (RMA Support)

Website: <https://www.supermicro.com.tw>

Chapter 1:

Introduction

Congratulations on purchasing your computer motherboard from an industry leader. Supermicro motherboards are designed to provide you with the highest standards in quality and performance.

1.1 Quick Reference	12
Checklist	12
Motherboard Layout	13
Quick Reference Table	15
Motherboard Features	17
Motherboard Block Diagram	19
1.2 Platform Overview	20
1.3 Special Features	21
Recovery from AC Power Loss	21
1.4 System Health Monitoring	22
Onboard Voltage Monitors	22
Fan Status Monitor with Firmware Control	22
Environmental Temperature Control	22
System Resource Alert	22
1.5 ACPI Features	23
1.6 Serial Header	24

1.1 Quick Reference

For details on the X14SAV-LVDS motherboard layout, features, and other quick reference information, refer to the content below.

Checklist

In addition to the X14SAV-LVDS motherboard, several important parts that are included in your shipment are listed below. If anything listed is damaged or missing, contact your retailer.

Main Parts List		
Description	Part Number	Quantity
Supermicro Motherboard	X14SAV-LVDS	1
Quick Reference Guide	MNL-2751-QRG	1

Motherboard Layout

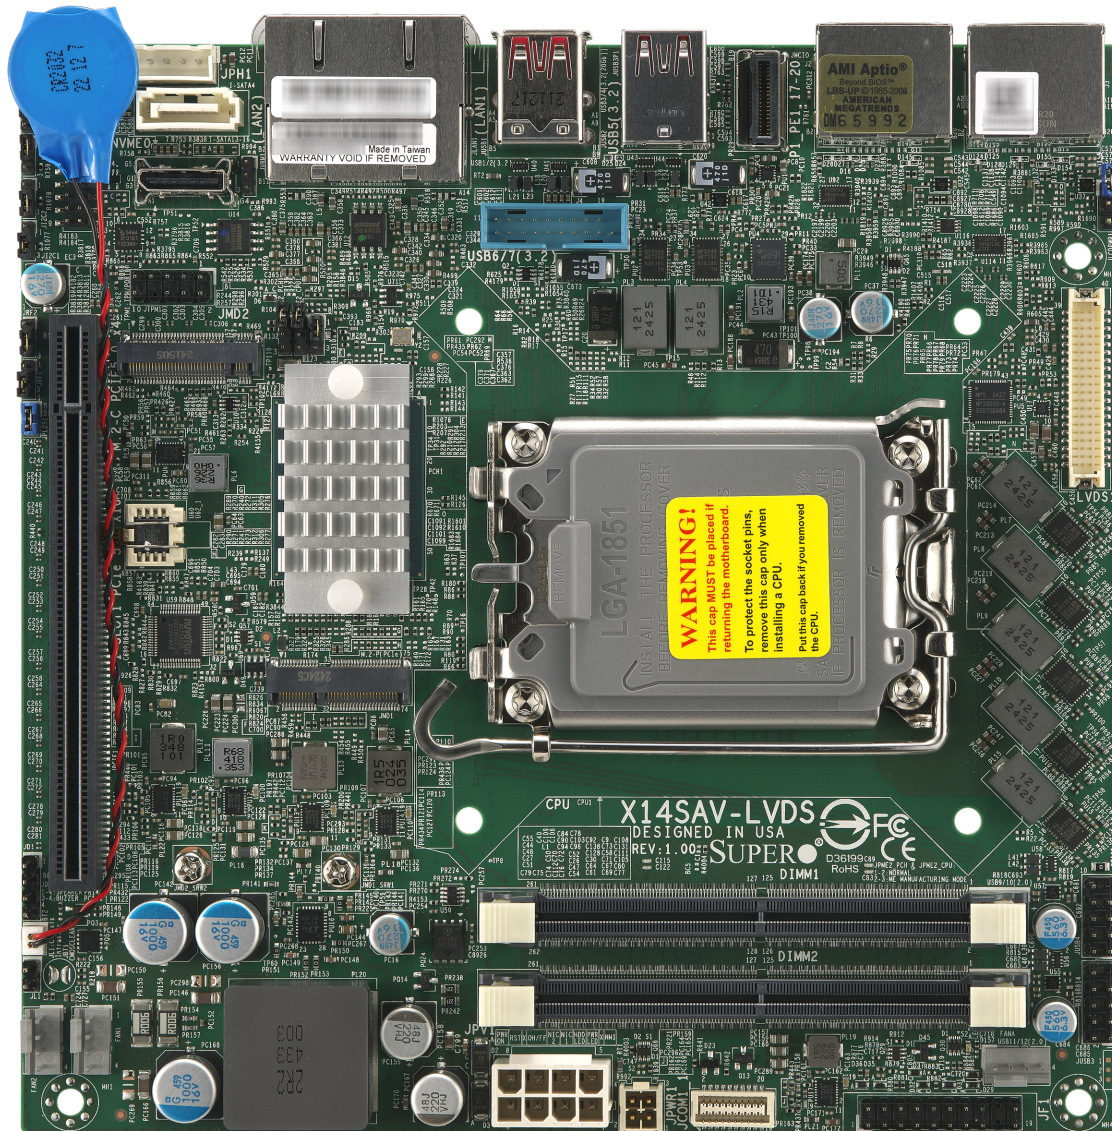


Figure 1-1. X14SAV-LVDS Motherboard Photo

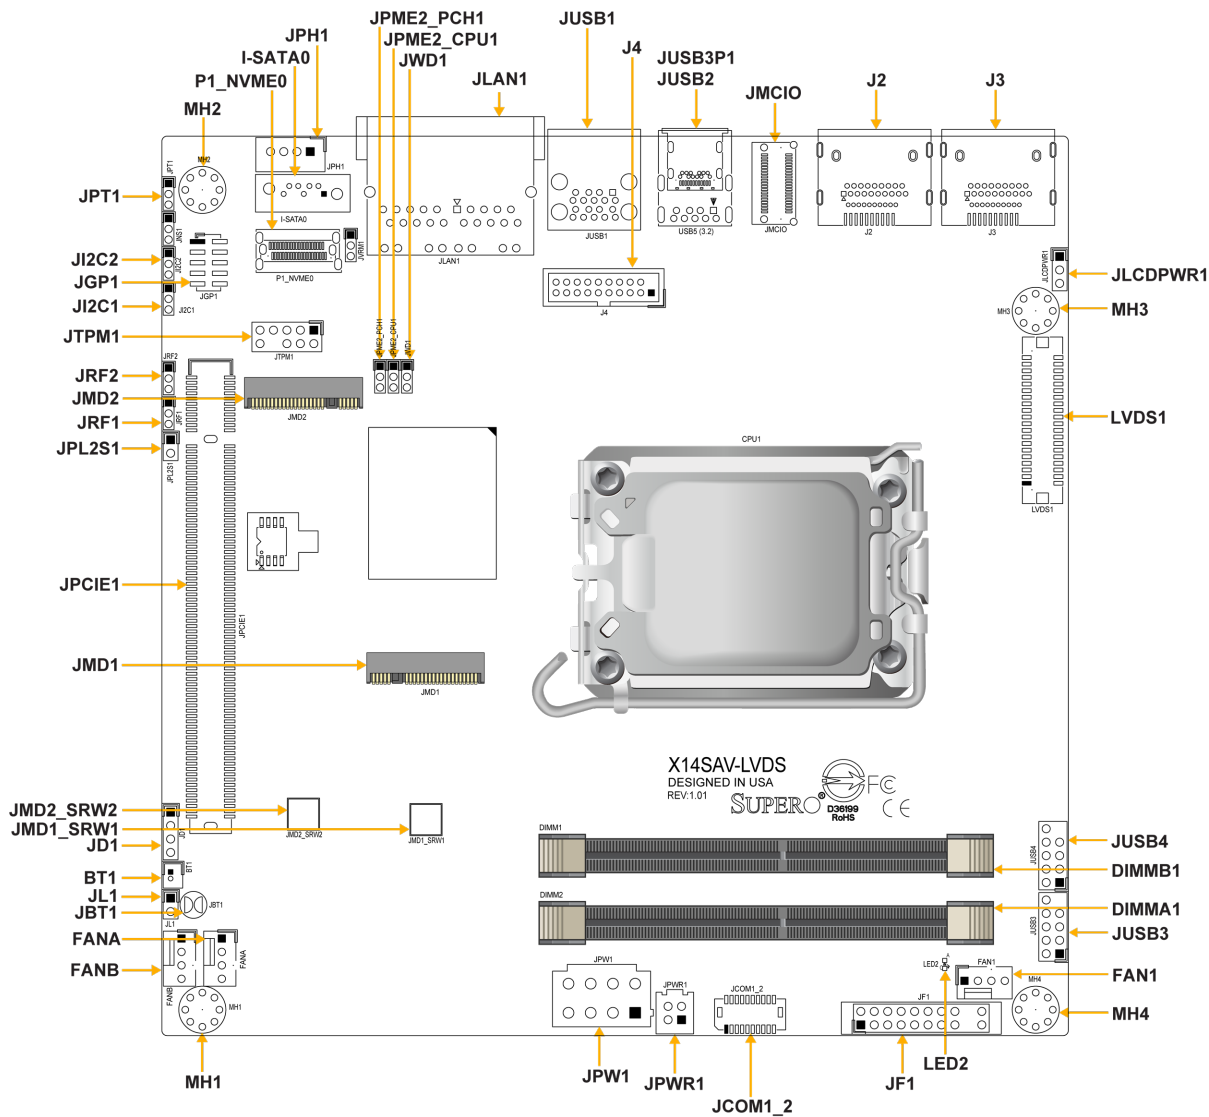


Figure 1-2. X14SAV-LVDS Motherboard Layout

Notes:

- See "[Component Installation](#)" on page 25 for detailed information on jumpers, connectors, and LED indicators.
- "■" indicates the location of pin 1.
- Components not documented are for internal testing-purposes only.
- Use only the correct type of onboard CMOS battery as specified by the manufacturer. Do not install the onboard battery upside down to avoid possible explosion.

Quick Reference Table

Jumper	Description	Default Settings
JBT1	CMOS Clear	Open (Normal)
JI2C1, JI2C2	SMB to PCIe Enable/Disable	Pins 2–3 (Disabled)
JLCDPWR1	LVDS Panel VCC Power +3.3/+5 V	Pins 1–2 (+3.3 V)
JPL2S1	CPU PL2 Limit	Pins 1–2 PL2= PL1 Open: The CPU will operate at peak performance, and it is recommended to use a power supply of 500 W or higher for optimal performance and system stability.
JPME2_ CPU1	ME Manufacturing Mode	Pins 1–2 (Normal)
JPME2_ PCH1	ME Manufacturing Mode	Pins 1–2 (Normal)
JPT1	Onboard TPM 2.0 Enable/Disable	Pins 1–2 (Enabled)
JRF1, JRF2	PCIe Bifurcation	JRF1 JRF2 PEG Pins 2–3 Pins 2–3 x16 (PCIe) Pins 2–3 Pins 1–2 2x8 (PCIe)
JWD1	Watchdog Timer Selection	Pins 1–2 (Trigger Reset) Pins 2–3 (Trigger Event)

Connector	Description
BT1	Onboard Battery
FAN1, FANA, FANB	Fan Headers

Connector	Description
I-SATA0	Intel® SATA 3.0 Ports
J2, J3	Two High Definition Multimedia Interface 2.1 and two DisplayPort 2.1
JCOM1_2	COM Header (supports RS232)
JD1	Speaker (Pins: 1–4: Speaker)
JF1	Front Control Panel Header
JGP1	General Purpose I/O Header
JL1	Chassis Intrusion Header
JMCIO	Mini Cool Edge I/O Connector (PCIe 4.0 x4)
JMD1	M.2 E-Key PCIe 4.0 x1/USB 2.0 (2230 form factor) Slot
JMD2	M.2 M-Key PCIe 5.0 x4 (2280 form factor) Slot
JMD1_SRW1	M.2 Mounting Hole for JMD1
JMD2_SRW2	M.2 Mounting Hole for JMD2
JPCIE1	PCIe 5.0 x16 Slot
JPH1	4-pin HDD Power Connector
JPWR1	Header for ATX Power Signal +5 VSTBY/Power ON/Power GOOD/Ground
JPW1	8-pin ATX +12 V Power Source 8-pin +12 V/+24 V DC Power Source
JTPM1	Trusted Platform Module/Port 80 Connector
JLAN1	Two 2.5G (RJ45) LAN Ports
LVDS1	Low-Voltage Differential Signaling Connector
MH1–MH4	Mounting Holes
P1_NVME0	NVMe (SATA and OCulink) Connector
JUSB1	USB 3.2 Gen 2 Port
JUSB3P1	USB 3.2 port and USB Type-C (supports USB 3.2 Gen 2x2 20G)
JUSB2	USB 3.2 Gen 2 Port
J4	USB 3.2 Gen 1 Header
JUSB3, JUSB4	USB 2.0 Headers

LED	Description	Status
LED2	Power LED	Solid Green: Power On

Motherboard Features

Motherboard Features
CPU
<ul style="list-style-type: none"> Intel Core Ultra 9/7/5 Series 2 processor with a thermal design power of up to 65 W in the LGA 1851 socket
Memory
<ul style="list-style-type: none"> Supports up to 96 GB of ECC or Non-ECC DDR5 SODIMM/CSODIMM memory with speeds of up to 6400 MT/s in two memory slots Intel Core Ultra 5 processor supports up to 5600 MT/s Intel Core Ultra 7 and 9 processors support up to 6400 MT/s
DIMM Size
<ul style="list-style-type: none"> 8 GB, 16 GB, 24 GB, 32 GB, 48 GB
Expansion Slots
<ul style="list-style-type: none"> One PCIe 5.0 slot One NVMe slot One MCIO connector One M.2 M-Key 2280 (PCIe 5.0 x4) One M.2 E-Key 2230 (PCIe 4.0 x1/USB 2.0)
Graphics
<ul style="list-style-type: none"> Intel Xe LPG Graphics
I/O Devices
<ul style="list-style-type: none"> Two HDMI 2.1 ports Two DisplayPorts 2.1 One COM header (1x2 com port) Four SATA 3.0 ports via OCuLink connector One SATA 3.0 connector (I-SATA0)

Motherboard Features
Peripheral Devices
<ul style="list-style-type: none"> • Two USB 3 ports (via header) • Three USB 3.2 Gen2x1 ports (three rear type-A) • One USB Type C 3.2 Gen 2x2 port (rear) • Two USB 2.0 ports (via header)
BIOS
<ul style="list-style-type: none"> • 256 Mb MX25L25673GM2I-08G BIOS • ACPI 6.0, Plug and Plug (PnP), SPI dual/quad support, Riser card auto detection support, Real Time Clock (RTC) wake-up
Power Management
<ul style="list-style-type: none"> • ACPI Power Management (S3, S4, S5) • Power Button Override Mechanism • Wake-On-LAN • Power-on Mode for AC Power Recovery
System Health Monitoring
<ul style="list-style-type: none"> • +3.3 V, +3.3 Vstb, +1.8 Vstb, +3 V battery, Vcore, Vmem, CPU, PCH, System, and Peripheral temperature • CPU Thermal Trip support • Platform Environment Control Interface (PECI)/TSI
Fan Control
<ul style="list-style-type: none"> • Three 4-pin fan headers • Low noise fan speed control
System Management
<ul style="list-style-type: none"> • Trusted Platform Module (TPM) 2.0 • SAA (in-band) • SD5

Motherboard Features	
LED Indicators	
<ul style="list-style-type: none"> • Power/suspend-state indicator LED • HDD Activity LED • LAN Activity LED • Fan failed LED • CPU/system overheat LED 	
Dimensions	
<ul style="list-style-type: none"> • 6.7" x 6.7" (171.3 mm x 170 mm) (W x L) 	

Motherboard Block Diagram

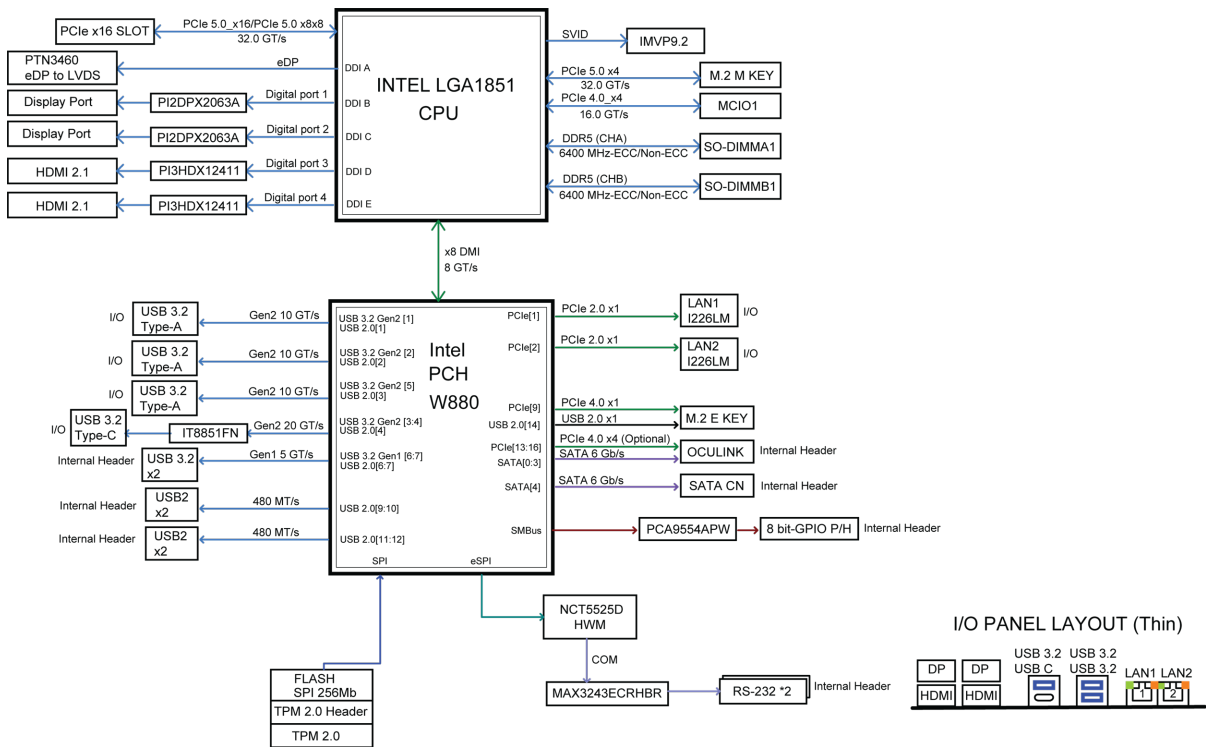


Figure 1-3. X14SAV-LVDS Motherboard Block Diagram

1.2 Platform Overview

Built upon the functionality and capability of the Intel Core Ultra 9/7/5 Series 2 Processor (in LGA 1851) and the Intel 800 Series chipset, the X14SAV-LVDS motherboard provides system performance, power efficiency, and feature sets to address the needs of next-generation computer users.

With the support of the new Intel Microarchitecture 20A Enhanced SuperFin Process Technology, the X14SAV-LVDS motherboard dramatically increases system performance for a multitude of server applications and supports the following features:

- DDR5 262-pin memory support
- Direct Media Interface
- Intel Matrix Storage Technology and Intel Rapid Storage Technology
- Intel I/O Virtualization (VT-d) Support
- Intel Trusted Execution Technology Support
- Intel Turbo Boost
- Intel Thread Director
- Intel vPro, AMT, TXT, and AES-NI Technologies
- PCIe 5.0 Interface (up to 32 GT/s)
- SATA Controller (up to 6 Gb/sec)
- Advanced Host Controller Interface (AHCI)
- USB 3.2
- USB Type-C

1.3 Special Features

Recovery from AC Power Loss

The Basic I/O System (BIOS) provides a setting that determines how the system will respond when AC power is lost and then restored to the system. You can choose for the system to remain powered off (in which case you must press the power switch to turn it back on), or for it to automatically return to the power-on state. See Advanced Setup Configurations under "[UEFI BIOS](#)" on [page 75](#) for this setting. The default setting is **Last State**.

1.4 System Health Monitoring

Onboard Voltage Monitors

An onboard voltage monitor will continuously scan the voltages of the onboard chipset, memory, processor, and battery. Once a voltage becomes unstable, a warning is given, or an error message is sent to the screen. You can adjust the voltage thresholds to define the sensitivity of the voltage monitor.

Fan Status Monitor with Firmware Control

PC health monitoring in the BIOS can check the RPM status of the cooling fans. The onboard CPU and chassis fans are controlled by Thermal Management. There are four modes, Optimal, Standard, Full Speed, and Heavy I/O.

Environmental Temperature Control

The thermal control sensor monitors the CPU temperature in real time and will turn on the thermal control fan whenever the CPU temperature exceeds a user-defined threshold. The overheat circuitry runs independently from the CPU. Once the thermal sensor detects that the CPU temperature is too high, it will automatically turn on the thermal fans to prevent the CPU from overheating. The onboard chassis thermal circuitry can monitor the overall system temperature and alert the user when the chassis temperature is too high.

Note: To avoid possible system overheating, be sure to provide adequate airflow to your system.

System Resource Alert

This feature is available when used with SuperDoctor 5 in the Windows OS or in the Linux environment. SuperDoctor 5 is used to notify the user of certain system events. For example, you can configure SuperDoctor 5 to provide you with warnings when the system temperature, processor temperatures, voltages, and fan speeds go beyond a predefined range.

1.5 ACPI Features

ACPI stands for Advanced Configuration and Power Interface. The ACPI specification defines a flexible and abstract hardware interface that provides a standard way to integrate power management features throughout a computer system, including its hardware, operating system and application software. This enables the system to automatically turn on and off peripherals such as network cards, hard disk drives, and printers.

In addition to enabling operating system-directed power management, ACPI also provides a generic system event mechanism for Plug and Play, and an operating system-independent interface for configuration control. ACPI leverages the Plug and Play BIOS data structures, while providing a processor architecture-independent implementation that is compatible with appropriate Windows operating systems. For detailed information regarding OS support, refer to the Supermicro website.

1.6 Serial Header

The Super I/O NCT5525D provides a high-speed, 16550 compatible serial communication port (UART), which supports serial infrared communication. The UART includes send/receive FIFO, a programmable baud rate generator, complete modem control capability, and a processor interrupt system. The UART provides legacy speed with baud rate of up to 115.2 Kbps as well as an advanced speed with baud rates of 250 K, 500 K, or 1 Mb/s, supporting higher speed modems.

The Super I/O provides functions that comply with ACPI, which includes support of legacy and ACPI power management through a SMI or SCI function pin. It also features auto power management to reduce power consumption.

Chapter 2:

Component Installation

This chapter provides instructions on installing and replacing main system components for the X14SAV-LVDS motherboard. To prevent compatibility issues, only use components that match the specifications and/or part numbers given.

Installation or replacement of most components require that power first be removed from the system. Follow the procedures given in each section.

2.1 Static-Sensitive Devices	27
Precautions	27
Unpacking	27
2.2 Motherboard Installation	28
Tools Needed	28
Installing the Motherboard	28
2.3 Processor and Heatsink Installation	30
Installing an LGA 1851 Processor	30
Installing a Processor Heatsink	34
Removing the Processor Heatsink	38
2.4 Memory Support and Installation	42
Memory Support	42
General Guidelines for Optimizing Memory Performance	42
SODIMM Installation	42
SODIMM Removal	44
2.5 Battery Removal and Installation	45
Battery Removal	45
Proper Battery Disposal	45
Battery Installation	45
Input/Output Ports	46
HDMI and DP Ports	47
LAN Ports	47
SATA 3.0 Port	47
USB Ports	47

Front Control Panel	50
Power Button	50
Reset Button	51
Overheat/Fan Fail LED	51
NIC1/NIC2 (LAN1/LAN2)	51
HDD LED	52
Power LED	52
NMI Button	53
2.6 Connections, Jumpers, and LEDs	54
Power Supply and Power Connections	54
Headers and Connections	55
Jumper Settings	62
LED Indicators	65

2.1 Static-Sensitive Devices

Electrostatic Discharge (ESD) can damage electronic components. To avoid damaging your motherboard, it is important to handle it very carefully. The following measures are generally sufficient to protect your equipment from ESD.

Precautions

- Use a grounded wrist strap designed to prevent static discharge.
- Touch a grounded metal object before removing the board from the antistatic bag.
- Handle the motherboard by its edges only. Do not touch its components, peripheral chips, memory modules, or gold contacts.
- When handling chips or modules, avoid touching their pins.
- Put the motherboard and peripherals back into their antistatic bags when not in use.
- For grounding purposes, make sure that your computer chassis provides excellent conductivity between the power supply, the case, the mounting fasteners, and the motherboard.
- Use only the correct type of onboard CMOS battery. Do not install the onboard battery upside down to avoid possible explosion.

Unpacking

The motherboard is shipped in antistatic packaging to avoid static damage. When unpacking the motherboard, make sure that the person handling it is static protected.

2.2 Motherboard Installation

All motherboards have standard mounting holes to fit different types of chassis. Make sure that the locations of all the mounting holes for both the motherboard and the chassis match. Although a chassis may have both plastic and metal mounting fasteners, metal ones are highly recommended because they ground the motherboard to the chassis. Make sure that the metal standoffs click in or are screwed in tightly.

Tools Needed

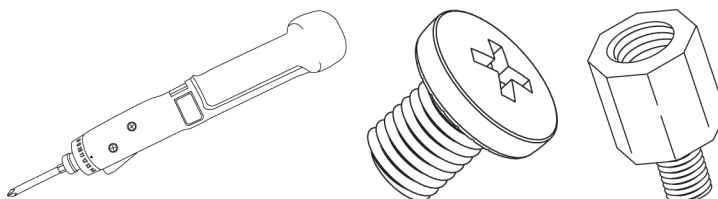


Figure 2-1. Torque Driver (1), Phillips Screws (4), Standoffs (4, only if needed)

Notes:

- To avoid damaging the motherboard and its components, do not use a force greater than 8 lbf-in on each mounting screw during motherboard installation.
- Some components are very close to the mounting holes. Take precautionary measures to avoid damaging these components when installing the motherboard to the chassis.

Installing the Motherboard

1. Install the I/O shield into the back of the chassis, if applicable.

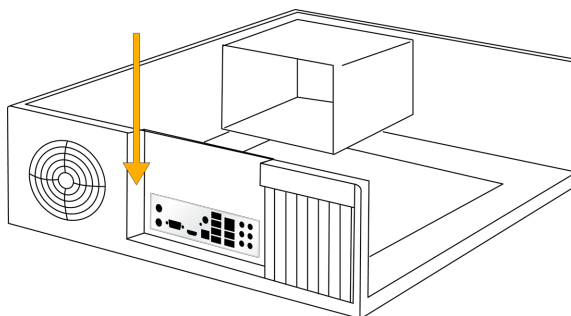


Figure 2-2. Installing the I/O Shield

Note: Images displayed are for illustration purposes only. The components installed in your system may or may not look exactly the same as the graphics shown in the manual.

2. Locate the mounting holes on the motherboard. See Motherboard Installation for the location.

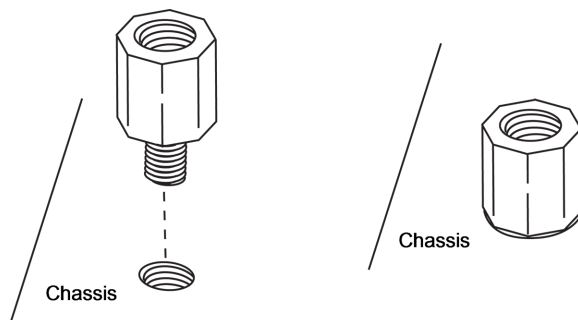


Figure 2-3. Locating the Mounting Holes

3. Locate the matching mounting holes on the chassis. Align the mounting holes on the motherboard against the mounting holes on the chassis.

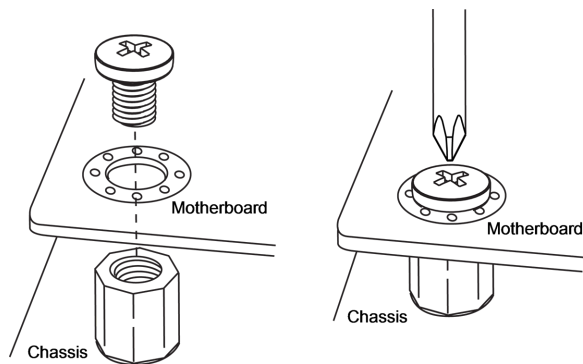


Figure 2-4. Aligning the Mounting Holes

4. Install standoffs in the chassis as needed.
5. Install the motherboard into the chassis carefully to avoid damaging other motherboard components.
6. Insert pan head #6 screws into the mounting holes on the motherboard and the matching mounting holes on the chassis.
7. Make sure that the motherboard is securely placed in the chassis.

2.3 Processor and Heatsink Installation

This section provides procedures to install the processor(s) and heatsink(s).

Notes:

- Take industry standard precautions to avoid ESD damage. For details, see "[Static-Sensitive Devices](#)" on page 27.
- Before starting, make sure that the plastic socket cap is in place and none of the socket pins are bent. If any damage is noted, contact your retailer.
- Do not connect the system power cord before the processor and heatsink installation is complete.
- When handling the processor, avoid touching or placing direct pressure on the LGA lands (gold contacts). Improper installation or socket misalignment can cause serious damage to the processor or processor socket.
- Install the processor in the socket and the motherboard into the chassis before installing the heatsink.
- When buying a processor separately, use only a Supermicro certified heatsink.
- Refer to the Supermicro website for the most recent processor support.
- When installing the heatsink, ensure a torque driver set to the correct force is used for each screw.
- Thermal grease is pre-applied on a new heatsink. No additional thermal grease is needed.

Installing an LGA 1851 Processor

Important: You can only install the processor in one direction. Make sure it is properly inserted into the socket before closing the load plate. If it doesn't close properly, do not force it as it may damage your processor. Instead, open the load plate again and double-check that the processor is properly aligned.

1. Remove the plastic protective cover from the load plate.

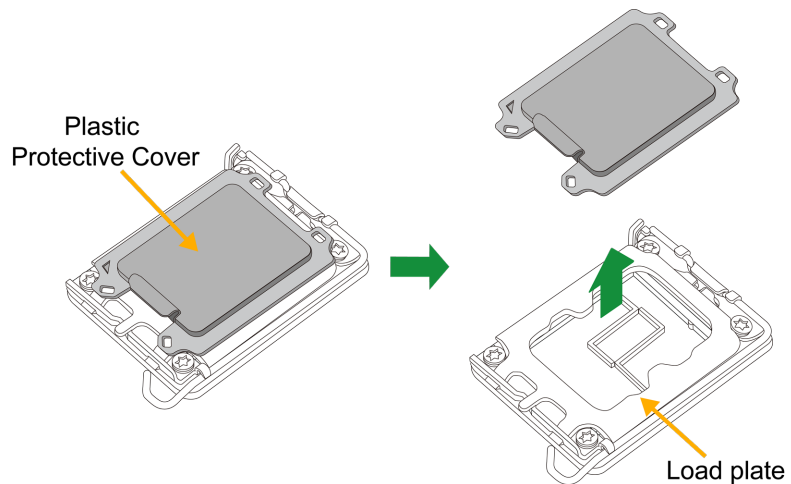


Figure 2-5. Removing the Protective Cover

2. Gently push the load lever down and away from the lever lock, then lift it up completely.

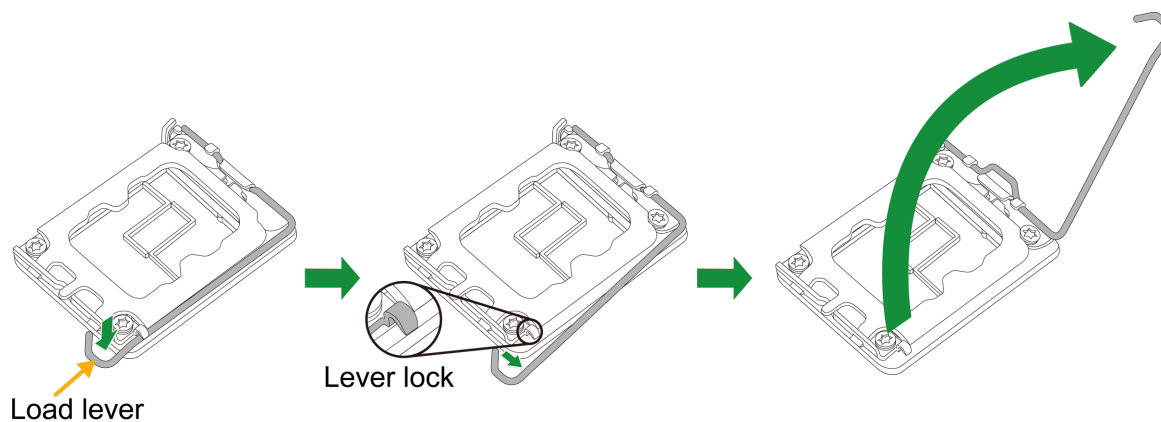


Figure 2-6. Releasing and Lifting the Lever

3. Lift the load plate to open it completely.

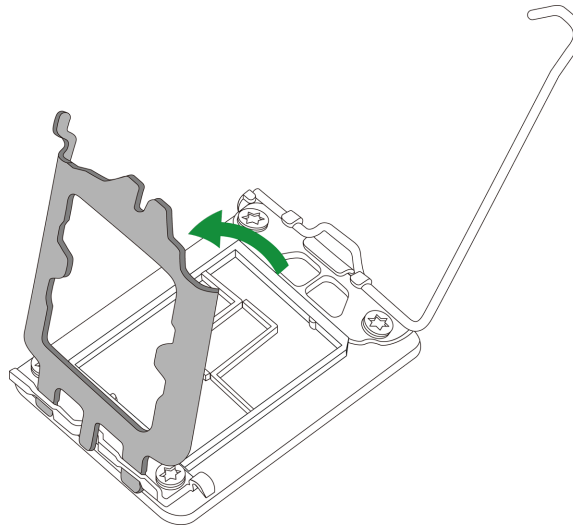


Figure 2-7. Opening the Load Plate

4. Carefully hold the processor by its edges. Align the small triangle marker and notches on the processor with the corresponding triangle marker and notches on the processor load bracket. Once aligned, carefully lower the processor straight down into the socket. (Do not drop the processor on the socket, or move it horizontally or vertically.)

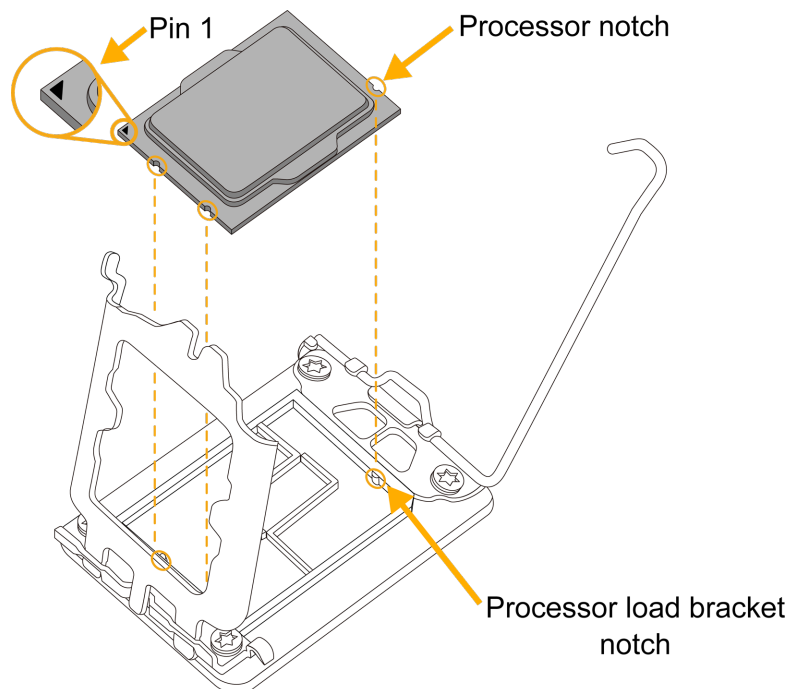


Figure 2-8. Aligning the Notches and Installing the Processor

5. Do not rub the processor against the surface or against any pins of the socket to avoid damaging the processor or the socket.

6. With the processor inside the socket, inspect all the corners to make sure it is properly installed.
7. Close the load plate with the processor inside the socket. Gently push the load lever down until it locks under the lever lock.

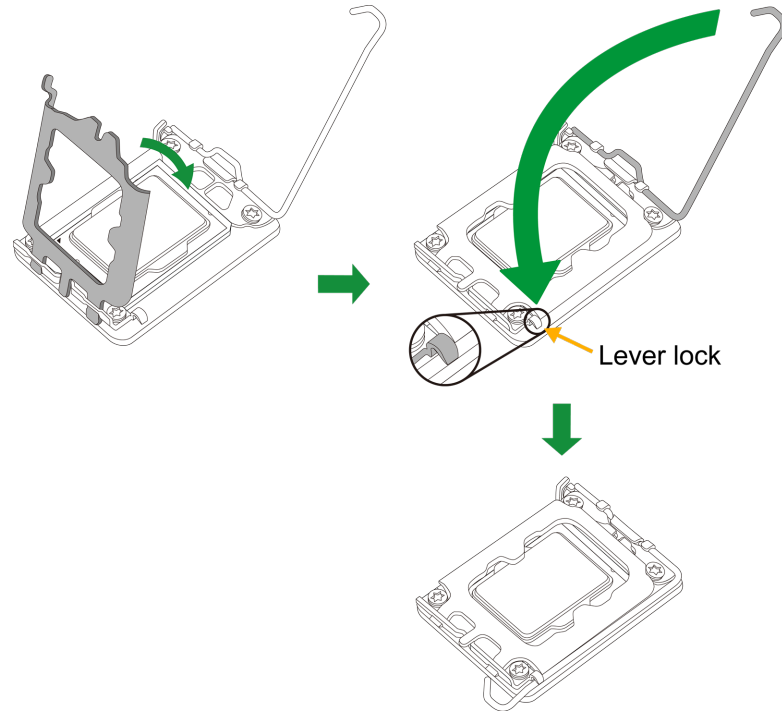


Figure 2-9. Closing the Load Plate and Pushing the Lever Down

Installing a Processor Heatsink

1. Loosen four screws to release the backplate. Note that one screw is not shown in the illustration below.

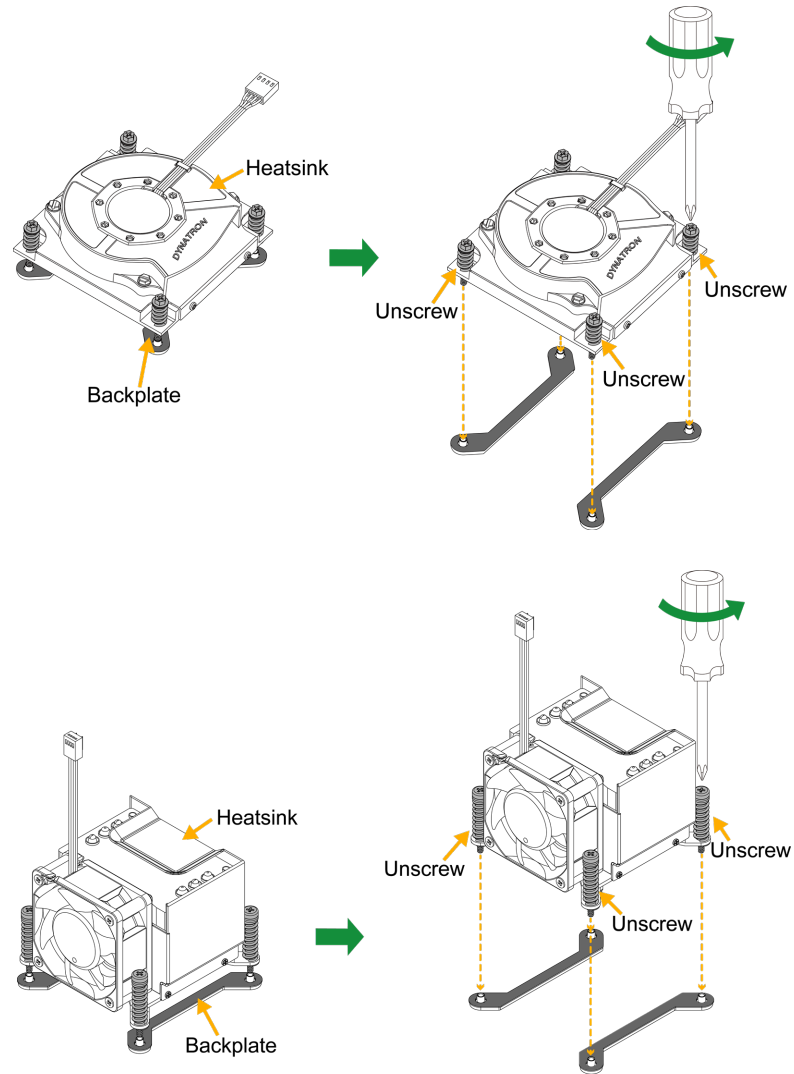


Figure 2-10. Releasing the Backplate from the Heatsink

2. If there is a thin layer of protective film on the backplate, remove it.

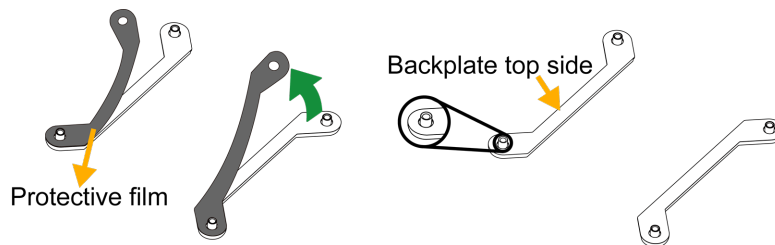


Figure 2-11. Removing the Protective Film

3. Attach the backplate into the mounting holes around the processor socket on the bottom side of the motherboard.

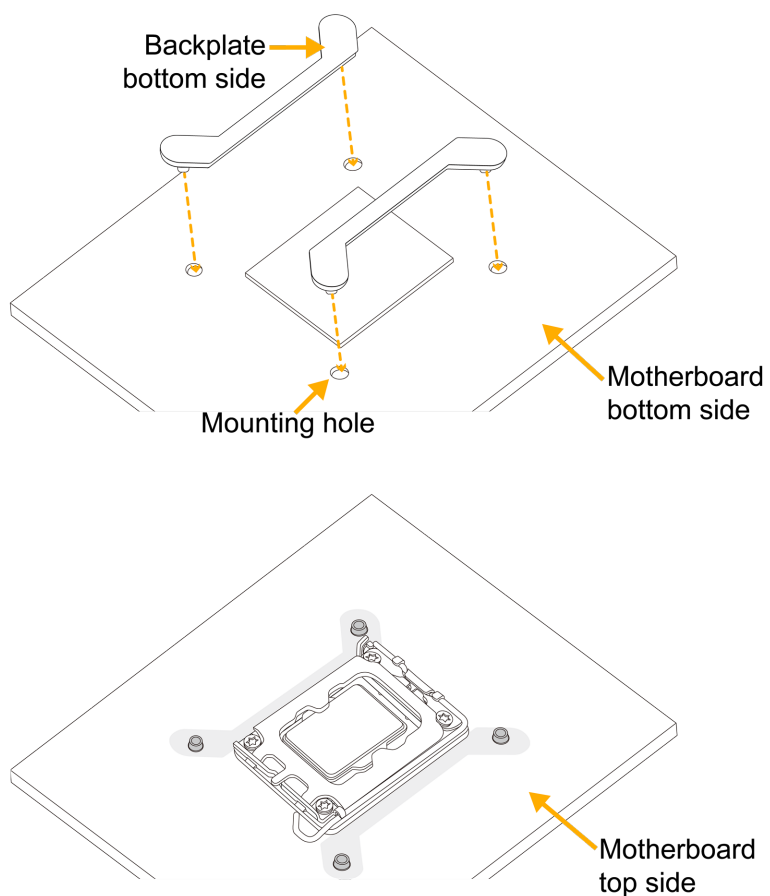


Figure 2-12. Attaching the Backplate to the Bottom Side of the Motherboard

4. Apply the proper amount of thermal grease on the processor.

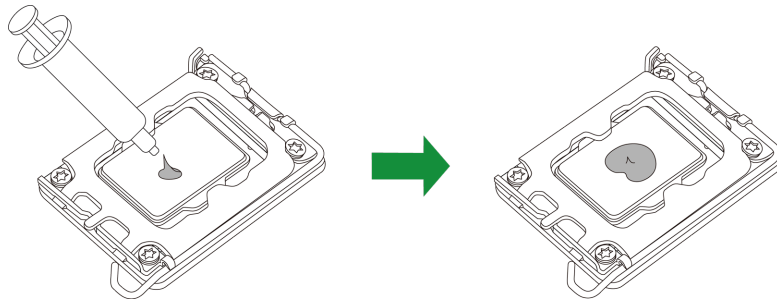
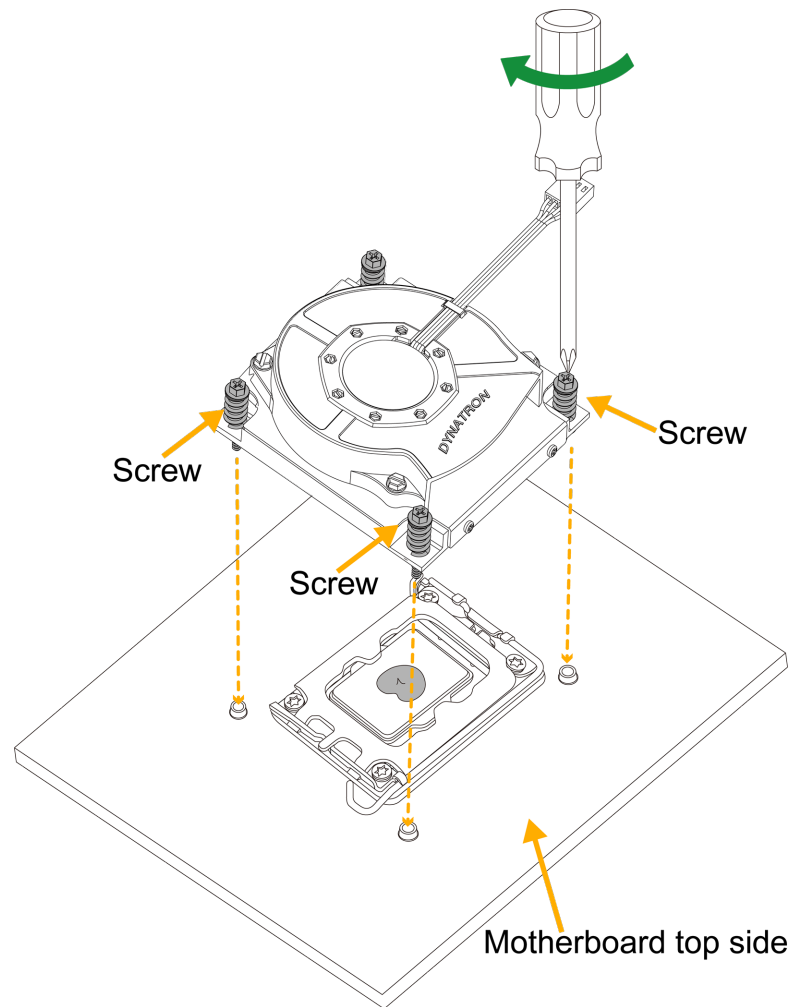


Figure 2-13. Applying Thermal Grease

5. Place the heatsink on top of the processor so that the four mounting holes on the heatsink are aligned with those on the retention mechanism.

6. Tighten the screws.



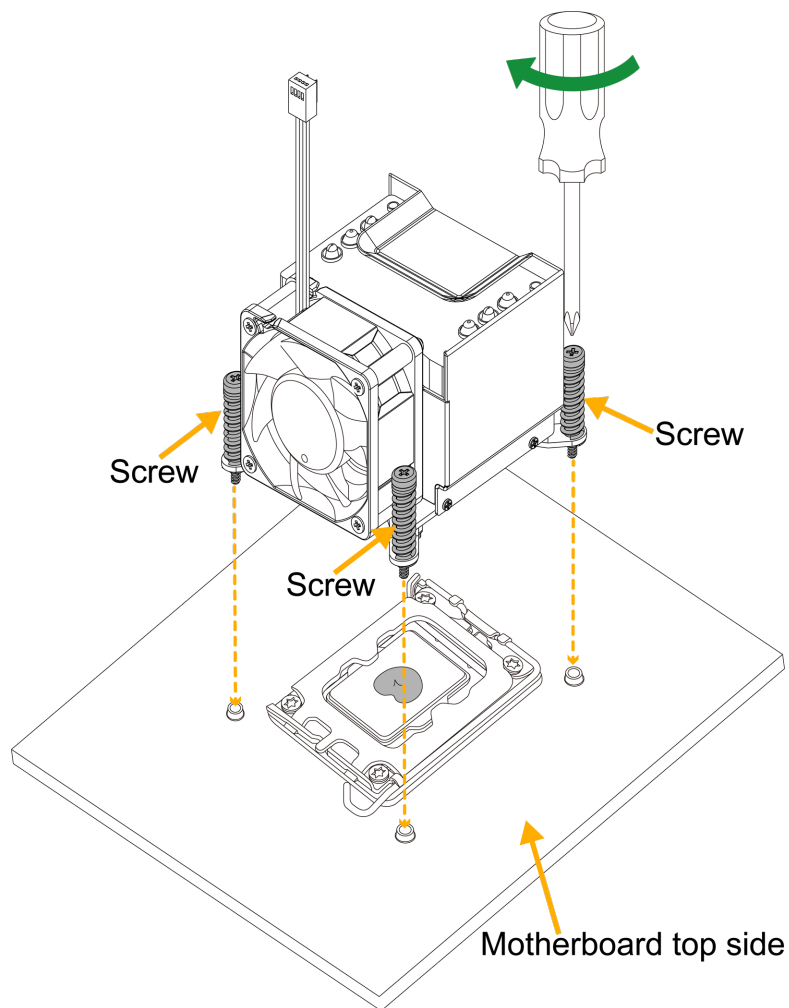


Figure 2-14. Tightening the Heatsink Screws

Notes:


- The installation described in this section is for reference only. The actual installation steps may vary depending on the CPU heatsink model. Refer to the heatsink instructions for more details.
- Images displayed are for illustration purposes only. Your components might look different from those shown in this manual.

Removing the Processor Heatsink

Important: We do not recommend that the processor or heatsink be removed. However, if you do need to remove the heatsink, follow the instructions below to remove the heatsink and prevent damage done to the processor or other components.

1. Unplug the power cord from the power supply and the power connector from the cooler and fan header.
2. Loosen the screws as shown in figure in the next step.

3. Gently wiggle the heatsink to loosen it. Do not use excessive force when wiggling the heatsink.

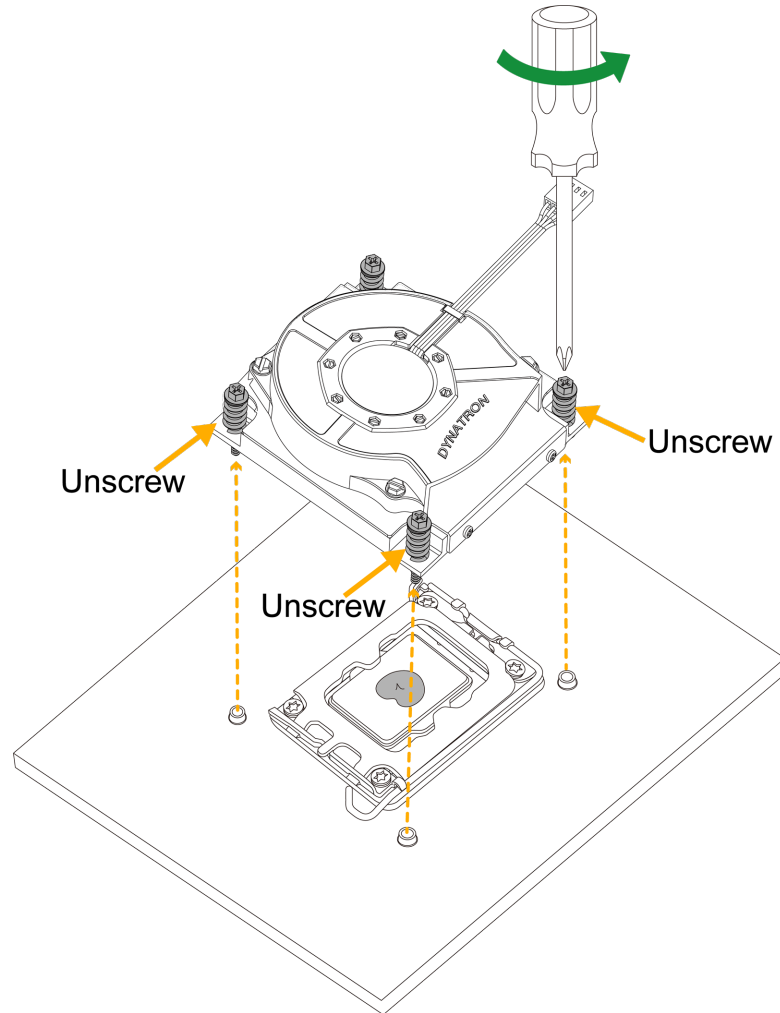

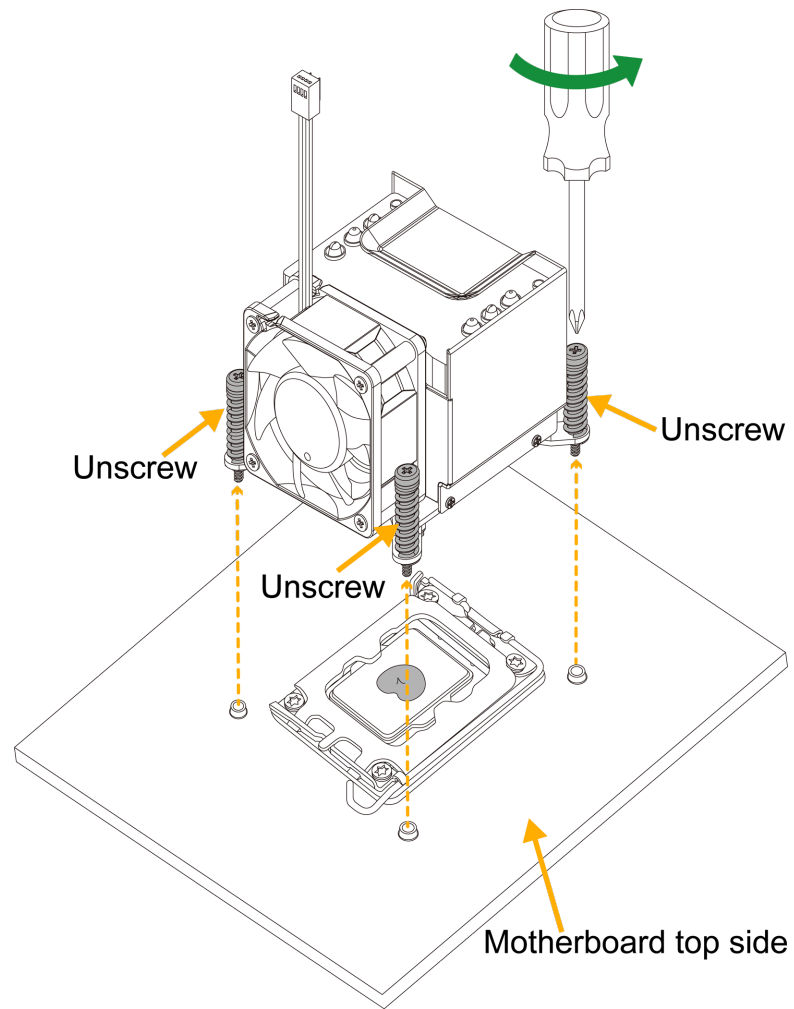


Figure 2-15. Loosening the Heatsink Screws

4. Once the heatsink is loosened, remove it from the motherboard.

2.4 Memory Support and Installation

Important: Exercise extreme care when installing or removing memory modules to prevent any damage.

Note: Check the Supermicro website for recommended memory modules.

Memory Support

The X14SAV-LVDS supports up to 96 GB of ECC and Non-ECC DDR5 SODIMM/CSODIMM memory with speeds of up to 6400 MT/s in two memory slots.

The Intel Core Ultra 5 processor supports up to 5600 MT/s. The Intel Core Ultra 7 and 9 processors support up to 6400 MT/s.

General Guidelines for Optimizing Memory Performance

- It is recommended to use DDR5 memory of the same type, size, and speed.
- Mixed DIMM speeds can be installed. However, all DIMMs will run at the speed of the slowest DIMM.
- The motherboard will support an odd number amount of memory modules. However, to achieve the best memory performance, a balanced memory population is recommended.

SODIMM Installation

Important: Do not use excessive force when pressing the release tabs on the ends of the DIMM socket to avoid causing any damage to the memory module or the DIMM socket. Handle memory modules with care. Carefully follow all the instructions given in "[Static-Sensitive Devices](#)" on [page 27](#) to avoid ESD-related damages done to your memory modules or components.

1. Install the desired number of SODIMMs into the memory slots, starting with DIMMA1 and then DIMMB1.
2. Align the key on the bottom of the SODIMM module against the receptive point on the memory slot. Take note of the notches on the side of the SODIMM module and of the locking clips on the socket to avoid causing damage.

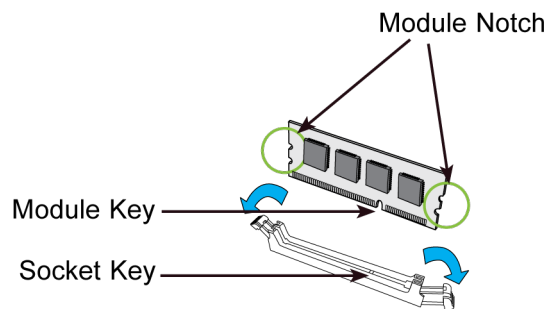


Figure 2-16. Aligning the SODIMM

3. Press the SODIMM module straight down into the socket with both hands until it is securely seated. The side clips will automatically lock the module into place.

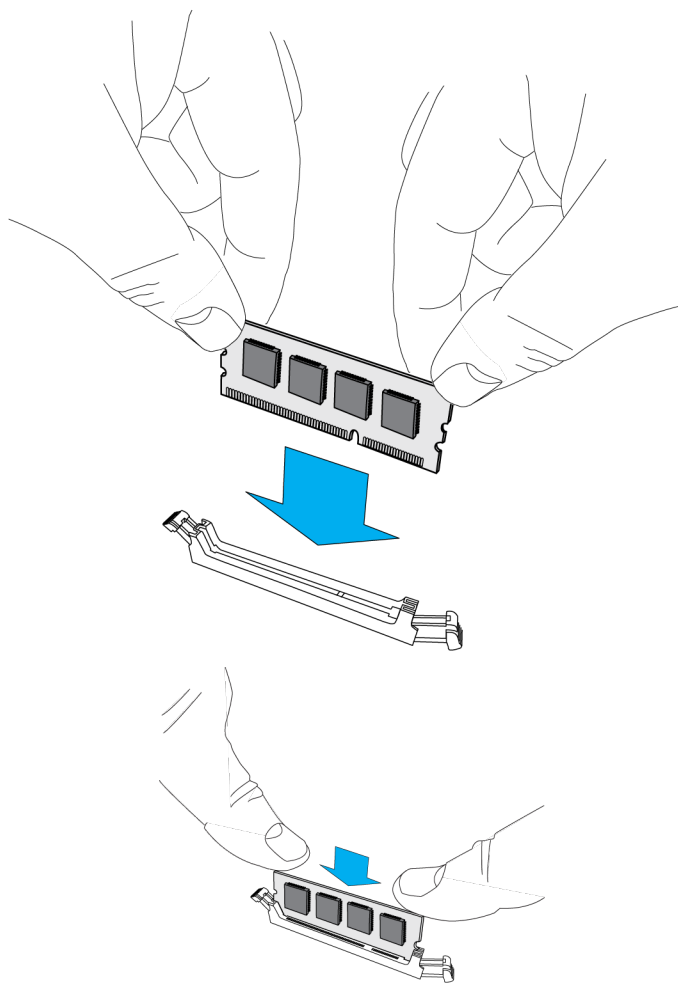


Figure 2-17. Securing the SODIMM

SODIMM Removal

Push the side clips away from the module to release it from the socket.

2.5 Battery Removal and Installation

Battery Removal

To remove the battery, follow the steps below:

1. Power off your system and unplug your power cable.
2. Remove the battery cable at the BT1 connector on the board.
3. Remove the battery.

Proper Battery Disposal

Important: Handle used batteries carefully. Do not damage the battery in any way; a damaged battery may release hazardous materials into the environment. Do not discard a used battery in the garbage or a public landfill. Comply with the regulations set up by your local hazardous waste management agency to dispose of your used battery properly.

Battery Installation

To install an battery, follow steps 1 and 2 above and continue below:

1. Connect the battery cable into the battery connector (BT1) and push it down until you hear a click to ensure that the cable is securely locked.
2. Use the foam tape on the back side of the battery to secure it to a flat surface on the bottom of the motherboard or a proper location in the system. Do not place the battery on the heatsink.

Important: When replacing a battery, be sure to only replace it with the same type.



Figure 2-18. CMOS Battery

Input/Output Ports

For information about input/output ports on the X14SAV-LVDS, refer to the following content.

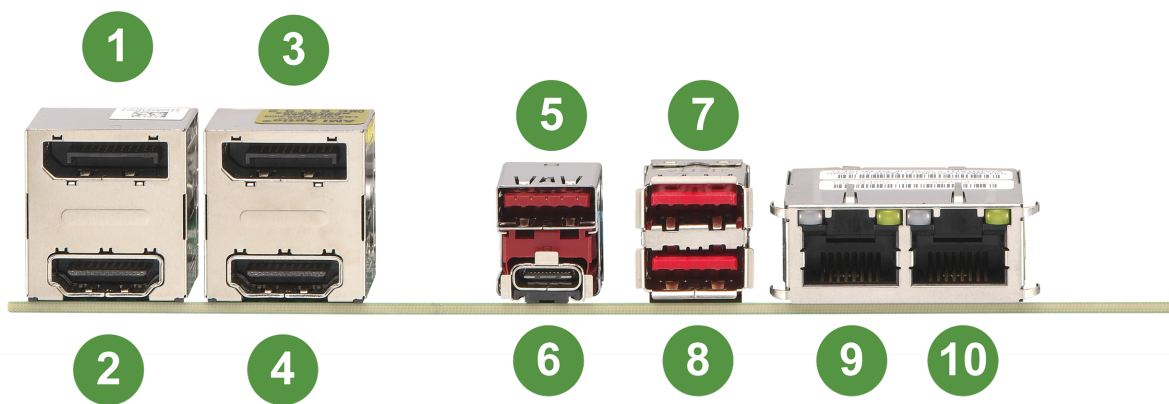


Figure 2-19. X14SAV-LVDS I/O Ports

X14SAV-LVDS I/O Ports			
#	Description	#	Description
1	DisplayPort 2.1	6	USB7 (USB Type-C)
2	HDMI 2.1	7	USB4 (3.2)
3	DisplayPort 2.1	8	USB5 (3.2)
4	HDMI 2.1	9	LAN1
5	USB6 (3.2)	10	LAN2

HDMI and DP Ports

Two High Definition Multimedia Interface (HDMI) ports on the I/O panel. These ports are used to display both high definition video and digital sound through an HDMI-capable display. HDMI 2.1 allows faster frame rates and is backward compatible with previous HDMI versions. These ports provide Intel HD graphics digital output. There are also two DP ports on the I/O panel. These ports deliver digital display and fast refresh rate. They can connect to virtually any display device using a DisplayPort adapter for devices such as VGA, DVI, or HDMI.

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under "[Quick Reference](#)" on page 12.

LAN Ports

Two 2.5G LAN ports are located at LAN1 and LAN2 on the I/O panel. These ports accept RJ45 cables.

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under "[Quick Reference](#)" on page 12.

SATA 3.0 Port

There is one SATA 3.0 port located at I-SATA0 on the X14SAV-LVDS. The port is supported by the Intel W880 chipset.

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under "[Quick Reference](#)" on page 12.

USB Ports

The X14SAV-LVDS has three USB 3.2 ports (JUSB1, JUSB2, and JUSB3P1).

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under "[Quick Reference](#)" on page 12.

Back Panel USB 3.2 Gen 2 x 1 Ports (JUSB1)			
Pin Definitions: 22 Total			
Pin#	Definition	Pin#	Definition
G1	GND	G3	GND
A1	VBUS1	B1	VBUS2
A2	USB2_CON_DN_P1	B2	USB2_CON_DN_P2
A3	USB2_CON_DP_P1	B3	USB2_CON_DP_P2
A4	GND	B4	GND
A5	USB32_RX_CON_DN_1	B5	USB32_RX_CON_DN_2
A6	USB32_RX_CON_DP_1	B6	USB32_RX_CON_DP_2
A7	GND	B7	GND
A8	USB32_TX_CON_DN_1	B8	USB32_TX_CON_DN_2
A9	USB32_TX_CON_DP_1	B9	USB32_TX_CON_DP_2
G2	GND	G4	GND


Back Panel USB 3.2 Gen 2 x 1 Ports (JUSB2)	
Pin Definitions: 13 Total	
Pin#	Definition
G1	GND
G3	GND
1	VBUS3
2	USB2_CON_DN_P3
3	USB2_CON_DP_P3
4	GND
5	USB32_RX_CON_DN_5
6	USB32_RX_CON_DP_5
7	GND
8	USB32_TX_CON_DN_1
9	USB32_TX_CON_DP_1
G2	GND
G4	GND

Back Panel USB 3.2 Gen 2 x 2 Ports (JUSB3P1)			
Pin Definitions: 28 Total			
Pin#	Definition	Pin#	Definition
G1	GND	G3	GND
A1	GND	B1	GND
A2	USB32_TX_DP_3_C	B2	USB32_TX_DP_4_C
A3	USB32_TX_DN_3_C	B3	USB32_TX_DN_4_C
A4	VBUS	B4	VBUS
A5	CC2	B5	CC1
A6	USB_2P0_TOP_BOT_P0_C	B6	USB_2P0_TOP_BOT_P0_C
A7	USB_2P0_TOP_BOT_N0_C	B7	USB_2P0_TOP_BOT_N0_C
A8	NC	B8	NC
A9	VBUS	B9	VBUS
A10	USB32_RX_DN_4_C	B10	USB32_RX_DN_3_C
A11	USB32_RX_DP_4_C	B11	USB32_RX_DP_3_C
A12	GND	B12	GND
G2	GND	G4	GND

Front Control Panel

JF1 on the X14SAV-LVDS motherboard contains header pins for various buttons and indicators that are normally located on a control panel at the front of the chassis. These connectors are designed specifically for use with Supermicro chassis. See the figure below for the descriptions of the front control panel buttons and LED indicators.

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under ["Quick Reference"](#) on page 12.

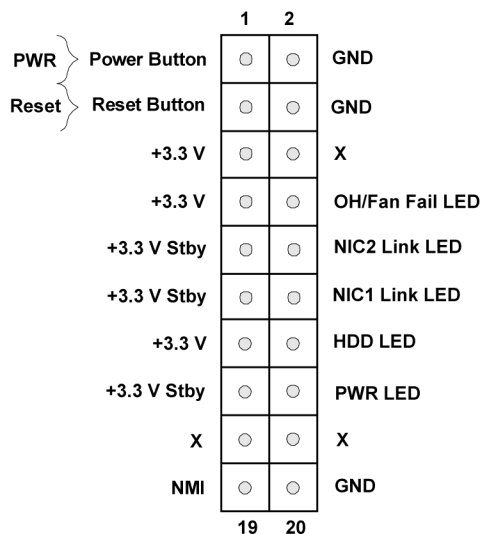

Power Button

The Power Button connection is located on pins 1 and 2 of JF1 on the X14SAV-LVDS motherboard. Momentarily contacting both pins will power on/off the system. This button can also be configured to function as a suspend button (with a setting in the BIOS). To turn off the power when the system is in suspend mode, press the button for four seconds or longer.

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under ["Quick Reference"](#) on page 12.

Power Button	
Pin Definitions (JF1)	
Pin#	Definition
1	Signal
2	GND

Reset Button

The Reset Button connection is located on pins 3 and 4 of JF1 on the X14SAV-LVDS motherboard. Attach it to a hardware reset switch on the computer case to reset the system.

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under "[Quick Reference](#)" on page 12.

Reset Button	
Pin Definitions (JF1)	
Pin#	Definition
3	Reset
4	GND

Overheat/Fan Fail LED

Connect an LED cable to pins 7 and 8 of the Front Control Panel to use the Overheat/Fan Fail LED connections. The LED on pin 8 provides warnings of overheat or fan failure.

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under "[Quick Reference](#)" on page 12.

OH/Fan Fail Indicator Status		OH-FAN Fail LED	
Pin Definitions (JF1)		Pin Definitions (JF1)	
State	Definition	Pin#	Definition
Off	Normal	7	3.3 V
On	Overheat	8	OH-Fan Fail LED
Flashing	Fan Fail		

NIC1/NIC2 (LAN1/LAN2)

The Network Interface Controller (NIC) LED connection for LAN port 1 is located on pins 11 and 12 of JF1 on the X14SAV-LVDS motherboard, and LAN port 2 is on pins 9 and 10. Attach the NIC LED cables here to display network activity.

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under "[Quick Reference](#)" on page 12.

LAN1/LAN2 LED	
Pin Definitions (JF1)	
Pin#	Definition
9	3.3 V Stby
10	NIC2 Link/Active LED
11	3.3 V Stby
12	NIC1 Link/Active LED

HDD LED

The HDD LED connection is located on pins 13 and 14 of JF1 on the X14SAV-LVDS motherboard. Attach a cable to pin 14 to show storage drive activity status.

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under "[Quick Reference](#)" on page 12.

HDD LED	
Pin Definitions (JF1)	
Pin#	Definition
13	3.3 V
14	HDD LED

Power LED

The Power LED connection is located on pins 15 and 16 of JF1 on the X14SAV-LVDS motherboard.

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under "[Quick Reference](#)" on page 12.

Power LED	
Pin Definitions (JF1)	
Pin#	Definition
15	3.3 V Stby
16	PWR LED

NMI Button

The non-maskable interrupt (NMI) button header is located on pins 19 and 20 of JF1 on the X14SAV-LVDS motherboard.

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under "[Quick Reference](#)" on page 12.

NMI Button	
Pin Definitions (JF1)	
Pin#	Definition
19	Control
20	GND

2.6 Connections, Jumpers, and LEDs

Refer to the following sections for information about connections, jumpers, and LEDs for the X14SAV-LVDS motherboard.

Power Supply and Power Connections

For information about the power supply and power connections of the X14SAV-LVDS motherboard, refer to the following content.

Power Supply

The X14SAV-LVDS motherboard supports both +12 V DC and ATX power input. Either option requires an 8-pin 12 V connection to the JPV1 header, with an ATX power signal input requiring an additional connection using PN: CBL-PWEX-1066 between header JPWR1 and the 24-pin power connector of an ATX power supply. JPWR1 allows the motherboard control of the +5 VStby, power on, power good, and ground signals from the ATX power supply.

It is strongly recommended that you use a high quality power supply that meets ATX power supply Specification 2.02 or above.

4-Pin HDD Power Connector

JPH1 is 4-pin power connector that provides power to onboard HDD devices.

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under "[Quick Reference](#)" on page 12.

4-pin HDD Power	
Pin#	Definition
1	+12 V
2	GND
3	GND
4	+5 V

4-pin DC Power Source

JPWR1 is a necessary connection to the 24-pin ATX power header from the PSU via PN: CBL-PWEX-1066.

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under "[Quick Reference](#)" on page 12.

4-pin DC Power Source	
Pin#	Definition
1	P5VSB
2	GND
3	ATX_PWRGD
4	PSU_PSON_N

8-pin DC Power Connector

JPV1 is an 8-pin 12 V DC power input for the processor that must be connected to the power supply.

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under "[Quick Reference](#)" on page 12.

8-pin DC Power	
Pin Definitions: Eight Total	
Pin#	Definition
1-4	GND
5-8	+12 V (12 V Power)

Headers and Connections

For information about the headers of the X14SAV-LVDS motherboard, refer to the following content.

Chassis Intrusion

A Chassis Intrusion header is located at JL1 on the X14SAV-LVDS motherboard. Attach the appropriate cable from the chassis to inform you when the chassis is opened.

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under "[Quick Reference](#)" on page 12.

Chassis Intrusion	
Pin Definitions: Two Total	
Pin#	Definition
1	Intrusion Input
2	GND

CMOS Battery

BT1 is a 2-pin connector for an external CMOS battery. This connector is also used to clear the CMOS. To clear the CMOS, remove the battery, short pins 1–2 for more than 10 seconds and then install the battery.

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under ["Quick Reference" on page 12](#).

COM Header

There is one COM header at JCOM1_2 on the X14SAV-LVDS motherboard. Use a cable with the COM header to access the COM port. COM ports provide serial communication support.

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under ["Quick Reference" on page 12](#).

COM Header			
Pin Definitions: 20 Total			
Pin#	Definition	Pin#	Definition
1	DCDA	2	DSRA
3	RXDA	4	RTSA
5	TXDA	6	CTSA
7	DTRA	8	RIA
9	GND	10	NC
11	DCDB	12	DSRB
13	RXDB	14	RTSB
15	TXDB	16	CTSB
17	DTRB	18	RIB
19	GND	20	NC

Fan Headers

There are three 4-pin fan headers (FAN1, FANA, FANB) on the X14SAV-LVDS motherboard. All the 4-pin fan headers are backwards compatible with the traditional 3-pin fans. It is recommended to use 4-pin fans to take advantage of the fan speed control via Pulse Width Modulation through the thermal management. This allows the fan speeds to be automatically adjusted based on the motherboard temperature.

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under ["Quick Reference" on page 12](#).

4-pin Fan Header	
Pin Definitions: Four Total	
Pin#	Definition
1	GND (Black)
2	+12 V (Red)
3	Tachometer
4	PWM Control

General Purpose I/O Header

JGP1 is a general purpose I/O expander on a pin header via the SMBus. Each pin can be configured to be an input pin or output pin in 2 mm pitch.

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under ["Quick Reference"](#) on page 12.

General Purpose Header			
Pin Definitions: 10 Total			
Pin#	Definition	Pin#	Definition
1	+3.3 V	2	GND
3	GP0	4	GP1
5	GP2	6	GP3
7	GP4	8	GP5
9	GP6	10	GP7

LVDS Connector

LVDS1 is the low-voltage differential signaling (LVDS) connector. It is a high-speed digital interface that operates at low power and is a type of connection that is mostly used with monitors.

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under ["Quick Reference"](#) on page 12.

LVDS Connector			
Pin Definitions: 40 Total			
Pin#	Definition	Pin#	Definition
1	+12 V	2	+12 V

LVDS Connector			
Pin Definitions: 40 Total			
Pin#	Definition	Pin#	Definition
3	+12 V	4	+12 V
5	+12 V	6	GND
7	+3.3/+5 V	8	GND
9	LCDVCC	10	LCDVCC
11	DDC CLK	12	DDC DATA-
13	BKLTCTL	14	PVCCEN
15	BKLTEN	16	GND
17	LVDSA D0N	18	LVDSA D0P
19	LVDSA D1N	20	LVDSA D1P
21	LVDSA D2N	22	LVDSA D2P
23	LVDSA CLKN	24	LVDSA CLKP
25	LVDSA D3N	26	LVDSA D3P
27	GND	28	GND
29	LVDSB D0N	30	LVDSB D0P
31	LVDSB D1N	32	LVDSB D1P
33	LVDSB D2N	34	LVDSB D2P
35	LVDSB CLKN	36	LVDSB CLKN
37	LVDSB D3N	38	LVDSB D3P
39	GND	40	GND

M.2 Slots

Two M.2 slots are located on the X14SAV-LVDS motherboard. M.2 was formerly known as Next Generation Form Factor (NGFF) and serves to replace mini PCIe. M.2 allows for a variety of card sizes, increased functionality, and spatial efficiency. The M.2 E-Key slot located at JMD1 on the motherboard supports PCIe 4.0 x1 with USB 2.0 devices in the 2230 form factor. The M.2 M-Key slot located at JMD2 supports PCIe 5.0 x4 devices in the 2280 form factor.

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under ["Quick Reference"](#) on page 12.

MCIO PCIe 4.0 x4 Connector

One internal MCIO PCIe 4.0 x4 connector is located at JMCIO on the motherboard for high-performance storage connectivity through the NVMe interface.

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under "[Quick Reference](#)" on page 12.

MCIO PCIe 4.0 x4			
Pin Definitions: 38 Total			
Pin#	Definition	Pin#	Definition
A1	GND	B1	GND
A2	PCIE_RX1+	B2	PCIE_TX1+
A3	PCIE_RX1-	B3	PCIE_TX1-
A4	GND	B4	GND
A5	PCIE_RX2+	B5	PCIE_TX2+
A6	PCIE_RX2-	B6	PCIE_TX2-
-A7	GND	B7	GND
A8	MCIO_CLKREQ_N	B8	MCIO_CLK
A9	WAKE_N	B9	MCIO_DATA
A10	GND	B10	GND
A11	CLK_100M_P	B11	PLTRST_N
A12	CLK_100M_N	B12	NC
A13	GND	B13	GND
A14	PCIE_RX3+	B14	PCIE_TX3+
A15	PCIE_RX3-	B15	PCIE_TX3-
A16	GND	B16	GND
A17	PCIE_RX4+	B17	PCIE_TX4+
A18	PCIE_RX4-	B18	PCIE_TX4-
A19	GND	B19	GND

OCuLink Connector

The X14SAV-LVDS has one OCuLink connector that offers four SATA port or one PCIe NVMe port (with customizable BIOS) via a break-out cable for additional storage interfaces.

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under "[Quick Reference](#)" on page 12.

Speaker Header

On the JD1 header, close pins 3 and 4 with a cap to use the onboard buzzer. If you wish to use an external speaker, close pins 1-4 with a cable.

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under "[Quick Reference](#)" on page 12.

Buzzer/External Speaker	
Pin Definitions: Four Total	
Pin#	Definition
Pins 1-4	Speaker

TPM/Port 80 Header

The JTPM1 header on the X14SAV-LVDS motherboard is used to connect a Trusted Platform Module (TPM)/Port 80, which is available from Supermicro (optional). A TPM/Port 80 connector is a security device that supports encryption and authentication in hard drives. It allows the motherboard to deny access if the TPM associated with the hard drive is not installed in the system.

Go to the following link for more information on the TPM: https://www.supermicro.com/manuals/other/AOM-TPM-9670V_9670H_X12_H12.pdf.

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under "[Quick Reference](#)" on page 12.

Trusted Platform Module Header			
Pin Definitions: 10 Total			
Pin#	Definition	Pin#	Definition
1	+3.3 V	2	SPI_CS#
3	RESET#	4	SPI_MISO
5	SPI_CLK	6	Ground
7	SPI_MOSI	8	No Connection
9	+3.3 V Stdbby	10	SPI_IRQ#

USB Headers

The two USB 2.0 headers on the X14SAV-LVDS motherboard are at JUSB3 and JUSB4. There is also one USB 3.2 header at J4. The onboard headers can be used to provide front side USB access with a cable (not included).

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under "[Quick Reference](#)" on page 12.

Front Panel USB 3.2 Gen 2 x1 Header			
(J4)			
Pin Definitions: 19 Total			
Pin#	Definitions	Pin#	Definitions
1	VBUS	11	USB2_CON_DN_P6
2	USB32_RX_CON_DN_7	12	USB2_CON_DP_P6
3	USB32_RX_CON_DP_7	13	GND
4	GND	14	USB32_TX_CON_DP_6
5	USB32_TX_CON_DN_7	15	USB32_TX_CON_DN_6
6	USB32_TX_CON_DP_7	16	GND
7	GND	17	USB32_RX_CON_DP_6
8	USB2_CON_DN_P7	18	USB32_RX_CON_DN_6
9	USB2_CON_DP_P7	19	GND
10	GND		

USB 2.0 Headers			
(JUSB3, JUSB4)			
Pin Definitions: 12 Total			
Pin#	Definitions	Pin#	Definitions
G1	GND	G3	GND
A1	VBUS1	B1	VBUS2
A2	USB2_CON_DN_P1	B2	USB2_CON_DN_P2
A3	USB2_CON_DP_P1	B3	USB2_CON_DP_P2
A4	GND	B4	GND
A5		B5	

Jumper Settings

To modify the operation of the motherboard, jumpers can be used to choose between optional settings. Jumpers create shorts between two pins to change the function of the connector. Pin 1 is identified with a square solder pad on the printed circuit board. See the diagram below for an example of jumping pins 1 and 2. Refer to the motherboard layout page for jumper locations.

Note: On two-pin jumpers, "Closed" means the jumper is on and "Open" means the jumper is off the pins.

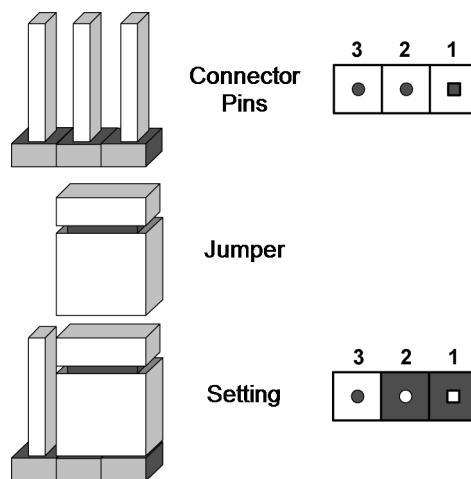


Figure 2-20. Jumping Connector Pins

CMOS Clear

JBT1 on the X14SAV-LVDS motherboard is used to clear CMOS, which will also clear any passwords. Instead of pins, this jumper consists of contact pads to prevent accidentally clearing the contents of CMOS.

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under "[Quick Reference](#)" on page 12.



1. First power down the system and unplug the power cord(s).
2. Remove the cover of the chassis to access the motherboard.
3. Remove the onboard battery from the motherboard.
4. Short the CMOS pads, JBT1, with a metal object such as a small screwdriver for at least four seconds.

Note: Clearing CMOS will also clear all passwords.

5. Remove the screwdriver (or shorting device).
6. Replace the cover, reconnect the power cord(s), and power on the system.

LVDS Voltage Selection

Use the JLCDPWR1 jumper to select the power voltage for the LVDS panel. Make sure that the specifications of the cable is compatible with the panel to prevent damage.

LVDS Voltage Selection	
Jumper Settings	
Jumper Settings	Definition
Pins 1–2	+3.3 V (Default)
Pins 2–3	+5 V

ME Manufacturing Mode

Close pins 2–3 of jumper JPME2_CPU1 and JPME_PCH1 to bypass SPI flash security and force the system to operate in the manufacturing mode, which will allow the user to flash the system firmware from a host server for system setting modifications. Refer to the table below for jumper settings. The default setting is Normal.

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under "[Quick Reference](#)" on page 12.

ME Manufacturing Mode	
Jumper Settings	
Jumper Setting	Definition
Pins 1–2	Normal (Default)
Pins 2–3	Manufacturing Mode

PCIe Bifurcation

Use JRF1 and JRF2 to adjust the PCIe lane options on the PCIe slot. The options are x16 or x8x8.

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under "[Quick Reference](#)" on page 12.

PCIe Bifurcation		
Jumper Settings		
JRF1	JRF2	PEG
Pins 2–3	Pins 2–3	x16 (PCIe)(Default)
Pins 2–3	Pins 1–2	2x8 (PCIe)
Pins 1–2	Pins 1–2	1x8, 2x4 (PCIe)

SMB to PCIe Slots Enable/Disable

Use jumpers JI²C1 and JI²C2 to enable PCIe System Management Bus (SMB) support to improve system management for the onboard PCIe slot.

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under "[Quick Reference](#)" on page 12.

SMBus to PCIe Slots	
Jumper Settings	
Jumper Settings	Definition
Pins 1–2	Enabled
Pins 2–3	Disabled (Default)

Onboard TPM Enable/Disable

Use JPT1 to enable or disable the onboard TPM.

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under "[Quick Reference](#)" on page 12.

TPM Enable/Disable	
Jumper Settings	
Jumper Setting	Definition
Pins 1–2	Enabled (Default)
Pins 2–3	Disabled

Watchdog Timer

Watchdog (JWD1) is a system monitor that can reboot the system when a software application hangs. Close pins 1–2 to reset the system if an application hangs. Close pins 2–3 to generate a non-maskable interrupt (NMI) signal for the application that hangs. The Watchdog must also be enabled in the BIOS.

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under ["Quick Reference"](#) on page 12.

Watchdog Timer Jumper Settings	
Jumper Setting	Definition
Pins 1–2	Reset (Default)
Pins 2–3	NMI
Open	Disabled

LED Indicators

For information about the LED indicators on the X14SAV-LVDS motherboard, refer to the following content.

Power LED

The Power LED is located on the X14SAV-LVDS motherboard. When this LED is on, power is present on the motherboard. In suspend mode, this LED will blink on and off. Be sure to turn off the system and unplug the power cord before removing or installing components.

For a detailed diagram of the X14SAV-LVDS motherboard, see the layout under ["Quick Reference"](#) on page 12.

Power LED Indicator	
LED Color	Definition
Blinking	S3 Status
Green	Power On

Chapter 3:

Troubleshooting

The following content contains information on common issues and how to resolve them.

3.1 Troubleshooting Procedures	67
Before Power On	67
No Power	67
No Video	67
System Boot Failure	67
Memory Errors	68
Losing the System's Setup Configuration	68
If the System Becomes Unstable	68
3.2 Technical Support Procedures	70
3.3 Motherboard Battery	71
3.4 Where to Get Replacement Components	72
3.5 Returning Merchandise for Service	73
3.6 Feedback	74

3.1 Troubleshooting Procedures

Use the following procedures to troubleshoot your system. If you have followed all of the procedures below and still need assistance, refer to the ["Technical Support Procedures" on page 70](#) or ["Returning Merchandise for Service" on page 73](#) section(s) in this chapter. Always disconnect the AC power cord before adding, changing or installing any non hot-swap hardware components. If the below steps do not fix the setup configuration problem, contact your vendor for repairs.

Before Power On

1. Make sure that there are no short circuits between the motherboard and chassis.
2. Disconnect all ribbon/wire cables from the motherboard, including those for the keyboard and mouse.
3. Remove all add-on cards.
4. Install the processor (making sure it is fully seated) and connect the front panel connectors to the motherboard.

No Power

1. Make sure that there are no short circuits between the motherboard and the chassis.
2. Make sure that the power connectors are properly connected.
3. Check that the 115 V/230 V switch, if available, on the power supply is properly set.
4. Turn the power switch on and off to test the system, if applicable.
5. Check the processor socket for bent pins and make sure the processor is fully seated.
6. The battery on your motherboard may be old. Check to verify that it still supplies approximately 3 VDC. If it does not, replace it with a new one.

No Video

1. If the power is on, but you do not have video, remove all add-on cards and cables.
2. Remove all memory modules and turn on the system (if the alarm is on, check the specs of memory modules, reset the memory, or try a different one).

System Boot Failure

If the system does not display Power-On-Self-Test (POST) or does not respond after the power is turned on, do the following:

1. Check the screen for an error message.
2. Clear the CMOS settings by unplugging the power cord and contacting both pads on the CMOS clear jumper. Restart the system. Refer to ["CMOS Clear" on page 62](#).
3. Remove all components from the motherboard and turn on the system with only one DIMM installed. If the system boots, turn off the system and repopulate the components back into the system to retest. Add one component at a time to isolate which one may have caused the system boot issue.

Memory Errors

When suspecting faulty memory is causing the system issue, check the following:

1. Make sure that the memory modules are compatible with the system and are properly installed. See ["Component Installation" on page 25](#) for installation instructions. (For memory compatibility, refer to the "Tested Memory List" link on the motherboard's product page to see a list of supported memory.)
2. Check if different speeds of DIMMs have been installed. It is strongly recommended that you use the same RAM type and speed for all DIMMs in the system.
3. Make sure that you are using the correct type of DIMMs recommended by the manufacturer.
4. Check for bad DIMMs or slots by swapping a single module among all memory slots and check the results.

Losing the System's Setup Configuration

1. Make sure that you are using a high-quality power supply. A poor-quality power supply may cause the system to lose the CMOS setup information. Refer to ["Introduction" on page 11](#) for details on recommended power supplies.
2. The battery on your motherboard may be old. Check to verify that it still supplies approximately 3 VDC. If it does not, replace it with a new one.

If the System Becomes Unstable

- A. If the system becomes unstable during or after OS installation, check the following:
 1. Processor/BIOS support: Make sure that your processor is supported and that you have the latest BIOS installed in your system.

2. Memory support: Make sure that the memory modules are supported. Refer to the product page on our website at <https://www.supermicro.com>. Test the modules using memtest86 or a similar utility.

Note: Click on the "Tested Memory List" link on the motherboard's product page to see a list of supported memory.

3. Storage Drive support: Make sure that all storage drives work properly. Replace the failed storage drives with good ones.
 4. System cooling: Check the system cooling to make sure that all heatsink fans and processor/system fans, etc., work properly. Also, check the front panel Overheat LED and make sure that it is not on.
 5. Adequate power supply: Make sure that the power supply provides adequate power to the system. Make sure that all power connectors are connected. Refer to our website for more information on the minimum power requirements.
 6. Proper software support: Make sure that the correct drivers are used.
- B. If the system becomes unstable before or during OS installation, check the following:
1. Source of installation: Make sure that the devices used for installation are working properly, including boot devices such as a USB flash or media device.
 2. Cable connection: Check to make sure that all cables are connected and working properly.
 3. Use the minimum configuration for troubleshooting: Remove all unnecessary components (starting with add-on cards first), and use the minimum configuration (but with the processor and a memory module installed) to identify the trouble areas. Refer to the steps listed above in this section for proper troubleshooting procedures.
 4. Identify bad components by isolating them: If necessary, remove a component in question from the chassis, and test it in isolation to make sure that it works properly. Replace a bad component with a good one.
 5. Check and change one component at a time instead of changing several items at the same time. This will help isolate and identify the problem.
 6. To find out if a component is good, swap this component with a new one to see if the system will work properly. If so, then the old component is bad. You can also install the component in question in another system. If the new system works, the component is good and the old system has problems.

3.2 Technical Support Procedures

Before contacting Technical Support, take the following steps. Also, note that as a motherboard manufacturer, Supermicro also sells motherboards through its channels, so it is best to first check with your distributor or reseller for troubleshooting services. They should know of any possible problems with the specific system configuration that was sold to you.

1. Refer to [Troubleshooting Procedures](#) or see the FAQs on our website (<https://www.supermicro.com/FAQ/index.php>) before contacting Technical Support.
2. BIOS upgrades can be downloaded from our website (https://www.supermicro.com/support/resources/bios_ipmi.php).
3. If you still cannot resolve the problem, include the following information when contacting Supermicro for technical support:
 - Motherboard model and PCB revision number
 - BIOS release date/version (This can be seen on the initial display when your system first boots up.)
 - System configuration
4. An example of a Technical Support form is on our website at <https://webpr3.supermicro.com/SupportPortal>.
5. Distributors: For immediate assistance, have your account number ready when placing a call to our Technical Support department. For Supermicro contact information, refer to ["Contacting Supermicro"](#) on page 10.

3.3 Motherboard Battery

For information on removing, disposing of, and replacing the motherboard battery of your system, refer to [Motherboard Battery Removal and Installation](#).

3.4 Where to Get Replacement Components

If you need replacement parts for your X14SAV-LVDS motherboard, to ensure the highest level of professional service and technical support, purchase exclusively from our Supermicro Authorized Distributors/System Integrators/Resellers. A list can be found on the Supermicro website:

<https://www.supermicro.com>

Under the "Buy" menu, click the "Where to Buy" link.

3.5 Returning Merchandise for Service

A receipt or copy of your invoice marked with the date of purchase is required before any warranty service will be rendered. You can obtain service by calling your vendor for a Returned Merchandise Authorization (RMA) number. When returning the motherboard to the manufacturer, the RMA number should be prominently displayed on the outside of the shipping carton, and the shipping package is mailed prepaid or hand-carried. Shipping and handling charges will be applied for all orders that must be mailed when service is complete.

For faster service, RMA authorizations can be requested online at the following page:

<https://www.supermicro.com/RmaForm>

Whenever possible, repack the motherboard in the original Supermicro carton, using the original packaging material. If these are no longer available, be sure to pack the motherboard securely, using packaging material to surround the motherboard so that it does not shift within the carton and become damaged during shipping.

This warranty only covers normal consumer use and does not cover damages incurred in shipping or from failure due to the alternation, misuse, abuse or improper maintenance of products.

During the warranty period, contact your distributor first for any product problems.

3.6 Feedback

Supermicro values your feedback as we strive to improve our customer experience in all facets of our business. Email us at Techwriterteam@supermicro.com to provide feedback on our manuals.

Chapter 4:

UEFI BIOS

The following content contains information on BIOS configuration with the X14SAV-LVDS motherboard.

4.1 Introduction	76
4.2 Main Setup	78
4.3 Advanced Setup Configurations	80
4.4 Event Logs	111
4.5 Thermal & Fan	113
4.6 Security	115
4.7 Boot	119
4.8 Save & Exit	121
4.9 MEBx	123

4.1 Introduction

This chapter describes the AMIBIOS™ Setup utility for the motherboard. The BIOS is stored on a chip and can be easily upgraded using the UEFI script (flash.nsh) or the SuperServer Automation Assistant (SAA) utility.

Note: Due to periodic changes to the BIOS, some settings may have been added or deleted and might not yet be recorded in this manual. Refer to the Manual Download area of our website for any changes to BIOS that may not be reflected in this manual.

Updating BIOS

It is recommended that you do not upgrade your BIOS if you are not experiencing any problems with your system. Updated BIOS files are located on our website at the following page:

https://www.supermicro.com/support/resources/bios_ipmi.php

Check our BIOS warning message and the information on how to update your BIOS on our website. Select your motherboard model and download the BIOS file to your computer. Also, check the current BIOS revision to make sure that it is newer than your BIOS before downloading.

Important: Do not shut down or reset the system while updating the BIOS to prevent possible system boot failure! Read the motherboard README file carefully before you perform the BIOS update.

Unzip the BIOS file onto a bootable USB device and then boot into the built-in UEFI Shell and type "flash.nsh <BIOS filename>" to start the BIOS update. The flash script will invoke the (EFI) tool automatically to perform the BIOS update. After uploading the firmware, the system will reboot to continue the process. The process will take 3–5 minutes.

Starting the Setup Utility

To enter the BIOS Setup utility, press the <Delete> key while the system is booting-up. In most cases, the <Delete> key is used to invoke the BIOS Setup screen. There are a few cases when other hot keys are used, such as <F1>, <F2>, etc. Each main BIOS menu option is described in this manual.

The Main BIOS screen has two main frames. The left frame displays all the options that can be configured. "Grayed-out" options cannot be configured. The right frame displays the key legend. Above the key legend is an area reserved for a text message. When a BIOS submenu or item is selected in the left frame, it is highlighted in white. Often a text message will

accompany it. (Note that BIOS has default text messages built in. We retain the option to include, omit, or change any of these text messages.) Settings printed in **Bold** are the default values.

A "▶" indicates a submenu. Highlighting such an item and pressing the <Enter> key open the list of settings within that submenu.

The BIOS Setup utility uses a key-based navigation system called hot keys. Most of these hot keys (<F1>, <F2>, <F3>, <F4>, <F5>, <F6>, <Enter>, <ESC>, the arrow keys, etc.) can be used at any time during the setup navigation process.

4.2 Main Setup

The Main setup screen appears when the AMI BIOS Setup utility is first entered. To return to the Main setup screen, select the Main tab at the top of the screen. The Main BIOS setup screen is shown below.

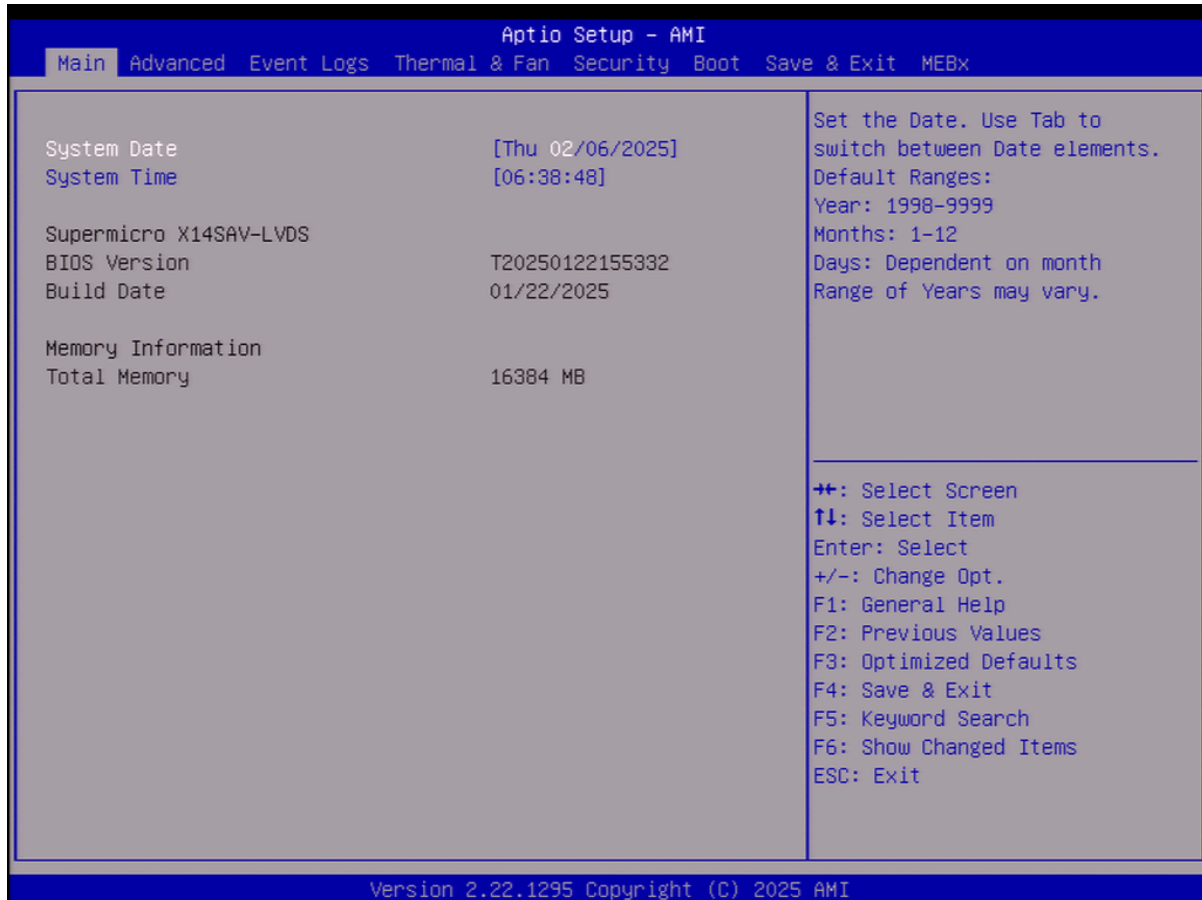


Figure 4-1. Main Setup Screen

System Date/System Time

Use the two features to change the system date and time. Highlight **System Date** or **System Time** using the arrow keys. Enter new values using the keyboard. Press the <Tab> key or the arrow keys to move between fields. The date must be entered in MM/DD/YYYY format. The time is entered in HH:MM:SS format.

Note: The time is in the 24-hour format. For example, 5:30 P.M. appears as 17:30:00.

Supermicro X14SAV-LVDS

BIOS Version

This feature displays the version of the BIOS ROM used in the system.

Build Date

This feature displays the date when the version of the BIOS ROM used in the system was built.

Memory Information**Total Memory**

This feature displays the total size of memory available in the system.

4.3 Advanced Setup Configurations

Use the arrow keys to select the Advanced submenu and press <Enter> to access the submenu items.

Important: Use caution when changing the Advanced settings. An incorrect value, an improper DRAM frequency, or a wrong BIOS timing setting may cause the system to malfunction. When this occurs, revert the setting to the manufacture default settings.

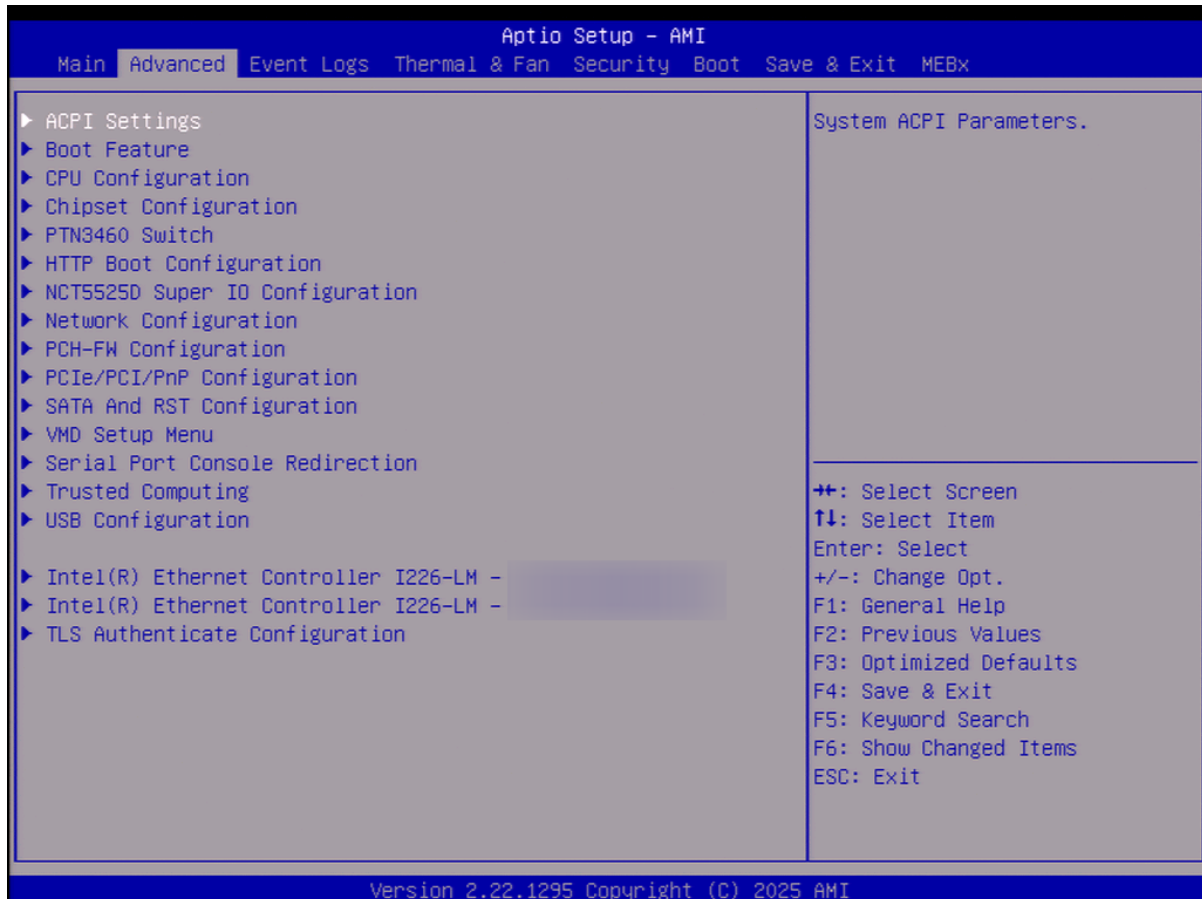


Figure 4-2. Advanced Setup Screen

ACPI Settings Menu

► ACPI Settings

ACPI Sleep State

Use this feature to select the ACPI Sleep State that the system will enter into when the suspend button is activated. The options are Suspend Disabled and **S3 (Suspend to RAM)**.

WHEA Support

Select Enabled to support the Windows Hardware Error Architecture (WHEA) platform and provide a common infrastructure for the system to handle hardware errors within the Windows OS environment to reduce system crashes and to enhance system recovery and health monitoring. The options are Disabled and **Enabled**.

High Precision Event Timer

Select Enabled to activate the High Precision Event Timer (HPET) that produces periodic interrupts at a much higher frequency than a Real-time Clock (RTC) does in synchronizing multimedia streams, providing smooth playback and reducing the dependency on other timestamp calculation devices, such as an x86 RDTSC Instruction embedded in the CPU. The High Performance Event Timer is used to replace the 8254 Programmable Interval Timer. The options are Disabled and **Enabled**.

Native PCIe Enable

Enable this feature to grant control of PCI Express Native hot plug, PCI Express Power Management Events, and PCI Express Capability Structure Control. The options are Disabled and **Enabled**.

Native ASPM

Select Enabled for the operating system to control the ASPM, or Disabled for the BIOS to control the ASPM. The options are Auto, Enabled, and **Disabled**.

Boot Feature Menu

► Boot Feature

Quiet Boot

Use this feature to select the screen between displaying the Power-on Self Test (POST) messages or the OEM logo upon bootup. Select Disabled to display the POST messages. Select Enabled to display the OEM logo instead of the normal POST messages. The options are Disabled and **Enabled**.

Note: BIOS POST messages are always displayed regardless of the setting of this feature.

Fast Boot

This feature enables the system to boot with a minimal set of required devices to launch. This has no effect on BBS boot options. The options are **Disabled** and Enabled.

Bootup NumLock State

Use this feature to set the Power-on state for the <Numlock> key. The options are **On** and Off.

Wait For "F1" If Error

Select Enabled to force the system to wait until the <F1> key is pressed if an error occurs. The options are Disabled and **Enabled**.

Re-try Boot

If this feature is set to Enabled, the system BIOS will automatically reboot the system from an Extensible Firmware Interface (EFI) boot device after an initial boot failure. The options are **Disabled** and Enabled.

Power Configuration**Watch Dog Function**

Select Enabled to allow the Watch Dog timer to reboot the system when it is inactive for more than five minutes. The options are **Disabled** and Enabled.

Restore on AC Power Loss

Use this feature to set the power state after a power outage. Select Stay Off for the system power to remain off after a power loss. Select Power On for the system power to be turned on after a power loss. Select Last State to allow the system to resume its last power state before a power loss. The options are Stay Off, Power On, and **Last State**.

Power Button Function

This feature controls how the system shuts down when the power button is pressed. Select 4 Seconds Override to power off the system after pressing and holding the power button for four seconds or longer. Select Instant Off to instantly power off the system as soon as you press the power button. The options are **Instant Off** and 4 Seconds Override.

DeepSx Power Policies

Use this feature to configure the Advanced Configuration and Power Interface (ACPI) settings for the system. Enable S4 to use Hibernation mode (Suspend to Disk) so that all data stored in the main memory can be saved in a non-volatile memory area such as in a hard drive and then power down the system. Enable S5 to power off the whole system except the power supply unit (PSU) and keep the power button alive so that you can wake up the system by using a USB keyboard or mouse. The options are **Disabled**, Enabled In S4-S5, and Enabled in S5.

Delay Time Before PCI Enumeration

Use this feature to set the amount of time the system waits before enumerating PCI devices during the boot process. The valid range is 0–30 with a step of 1 second. The default setting is **0** for off, meaning the system will skip the delay time and immediately begin enumerating PCI devices.

CPU Configuration Menu

► CPU Configuration

The following processor information is displayed.

- Processor BSP Revision
- CPU Signature
- Microcode Patch
- Max CPU Speed
- Min CPU Speed
- Number of Performance-core(s)
- Number of Efficient-core(s)
- VMX
- SMX/TXT
- 64-bit
- EIST Technology
- CPU C3 state
- CPU C6 state
- CPU C7 state
- CPU C8 state
- CPU C9 state
- CPU C10 state
- Performance L1 Data Cache
- Performance L1 Instruction Cache
- Performance L2 Cache
- Performance L3 Cache
- Efficient L1 Data Cache
- Efficient L1 Instruction Cache
- Efficient L2 Cache
- Efficient L3 Cache

Intel (VMX) Virtualization Technology

Select Enabled to enable the Intel Vanderpool Technology for Virtualization platform support, which allows multiple operating systems to run simultaneously on the same computer to maximize system resources for performance enhancement. The options are Disabled and **Enabled**. Changes take effect after you save settings and reboot the system.

Notes:

- This feature is NOT available when "TXT Support" is set to Enabled.
- This feature is NOT available when "Workload Profile" is set to Virtualization, Telco NFVI, Telco NFVI-FP, or Telco FlexRAN.

Active Performance-cores

This feature determines how many performance cores will be activated for each processor package. When all is selected, all cores in the processor will be activated. The options are **All**, 7, 6, 5, 4, 3, 2, and 1.

Active Efficient-cores

This feature determines how many efficient cores will be activated for each processor package. When all is selected, all cores in the processor will be activated. The options are **All**, 15, 14, 13, 12, 11, 10, 9, 8, 7, 6, 5, 4, 3, 2, 1, and 0.

AES

Select Enabled to use the Intel Advanced Encryption Standard (AES) to ensure data security. The options are Disabled and **Enabled**.

Boot Performance Mode

This feature allows you to select the performance state that the BIOS will set before the operating system handoff. The options are **Max Non-Turbo Performance** and Turbo Performance.

Intel® SpeedStep™

Intel SpeedStep Technology allows the system to automatically adjust processor voltage and core frequency to reduce power consumption and heat dissipation. The options are Disabled and **Enabled**.

Intel® Speed Shift Technology

Use this feature to enable or disable Intel Speed Shift Technology support. When this feature is enabled, the Collaborative Processor Performance Control (CPPC) version 2 interface will be available to control CPU P-States. The options are Disabled and **Enabled**.

Turbo Mode (Available when "SpeedStep (P-States)" is set to Enabled and when "Workload Profile" is set to Disabled)

Select Enabled to allow the CPU to operate at the manufacturer-defined turbo speed by increasing CPU clock frequency. This feature is available when it is supported by the processors used in the system. The options are Disabled and **Enabled**.

Power Limit 1 Override

Select Enabled to support average power limit (PL1) override. The options are **Disabled** and Enabled.

Power Limit 2 Override

Select Enabled to support rapid power limit (PL2) override. The options are Disabled and **Enabled**.

Power Limit 2

Use this feature to configure the value for Power Limit 2. The value is in milliwatts and the step size is 125 mW. Use the number keys on your keyboard to enter the value. Enter 0 to use the manufacture default setting. If the value is 0, the BIOS will set PL2 as 1.25* TDP.

C-States

Use this feature to enable the C-State of the CPU. The options are Disabled and **Enabled**.

Enhanced C-States

Use this feature to enable the enhanced C-State of the CPU. The options are Disabled and **Enabled**.

C-State Auto Demotion

Use this feature to prevent unnecessary excursions into the C-states to improve latency. The options are Disabled and **C1**.

C-State Un-Demotion

This feature allows you to enable or disable the un-demotion of C-State. The options are Disabled and **C1**.

Package C-State Demotion

Use this feature to enable or disable the Package C-State demotion. The options are Disabled and **Enabled**.

Package C-State Un-Demotion

Use this feature to enable or disable the Package C-State un-demotion. The options are Disabled and **Enabled**.

C-State Pre-Wake

This feature allows you to enable or disable the C-State Pre-Wake. The options are Disabled and **Enabled**.

Package C-State Limit

Use this feature to set the Package C-State limit. The options are C0/C1, C2, C3, C6, C7, C7s, C8, C9, C10, Cpu Default, and **Auto**.

Monitor MWAIT

Select Enabled to support Monitor and Mwait, which are two instructions in Streaming SIMD Extension 3 (SSE3) to improve synchronization between multiple threads for CPU performance enhancement. The options are Disabled and **Enabled**.

Note: This feature is NOT available when "Workload Profile" is set to Telco NFVI, Telco NFVI-FP, or Telco FlexRAN.

Chipset Configuration Menu

► Chipset Configuration

Important: Setting the wrong values in this section may cause the system to malfunction.

System Agent (SA) Configuration

VT-d Supported

VT-d

Select Enabled to activate Intel Virtualization Technology support for Direct I/O VT-d by reporting the I/O device assignments to VMM through the DMAR ACPI Tables. This feature offers fully-protected I/O resource-sharing across the Intel platforms, providing the user with greater reliability, security and availability in networking and data-sharing. The options are **Enabled** and Disabled.

X2APIC Enable

Use this feature to enable or disable the Advanced Programmable Interrupt Controller (X2APIC) operating mode. The options are Disabled and **Enabled**.

DMA Control Guarantee

Use this feature to enable or disable DMA Control Guarantee bit. The options are **Enabled** and Disabled.

Memory Configuration Menu

▶ **Memory Configuration**

This submenu is used to configure the Integrated Memory Controller (IMC) settings.

- Memory RC Version
- Memory Frequency
- Memory Timings (tCL-tRCD-tRP-tRAS)
- DIMMA1
- DIMMA2

Maximum Memory Frequency

Use this feature to set the maximum memory frequency for onboard memory modules. The options are **Auto**, 1600, 2400, 3200, 3600, 4000, 4200, 4400, 4600, 4800, 5000, 5200, 5400, 5600, 5800, 6000, 6200, and 6400.

Max TOLUD

This feature sets the maximum TOLUD value, which specifies the "Top of Low Usable DRAM" memory space to be used by internal graphics devices, GTT Stolen Memory, and TSEG, respectively, if these devices are enabled. The options are **Dynamic**, 1 GB, 1.25 GB, 1.5 GB, 1.75 GB, 2 GB, 2.25 GB, 2.5 GB, 2.75 GB, 3 GB, 3.25 GB, and 3.5 GB.

Memory Scrambler

Use this feature to enable or disable memory scrambler support. The options are **Disabled** and **Enabled**.

Force ColdReset

Use this feature to enable or disable a cold boot during a MRC execution. The options are **Enabled** and **Disabled**.

Force Single Rank

Select enabled to use only Rank 0 in each DIMM. The options are **Disabled** and **Enabled**.

Memory Remap

Use this feature to enable or disable memory remap above 4 GB. The options are **Enabled** and **Disabled**.

MRC Fast Boot

Use this feature to enable or disable fast path through the memory reference code. The options are **Disabled** and **Enabled**.

Total Memory Encryption

Use this feature to enable or disable Total Memory Encryption (TME). When enabled, Intel TME enhances memory data security. The options are **Disabled** and Enabled.

Graphics Configuration Menu

► Graphics Configuration

This submenu allows you to configure the graphics configuration settings.

Graphics Configuration

IGFX GOP Version

Skip Scanning of External Gfx Card

If this feature is enabled, the system will not scan for an external graphics card on PEG and PCIe slots. The options are **Disabled** and Enabled.

Primary Display

Use this feature to select the primary video display. The options are **Auto** and IGFX.

Internal Graphics

Select Auto to keep an internal graphics device installed on an expansion slot supported by the CPU to be automatically enabled. The options are **Auto**, Disabled, and Enabled.

DVMT Pre-Allocated

Dynamic Video Memory Technology (DVMT) allows dynamic allocation of system memory to be used for video devices to ensure best use of available system memory based on the DVMT 5.0 platform. The options are 0M, 32M, 64M, 96M, 128M, 4M, 8M, 12M, 16M, 20M, 24M, 28M, 32M/F7, 36M, 40M, 44M, 48M, 52M, 56M, and **60M**.

Configure GT for use

Use this feature to enable or disable GT configuration. The options are Disabled and **Enabled**.

PAVP Enable

Use this feature to enable or disable PAVP support. The options are Disabled and **Enabled**.

DMI Configuration Menu

► DMI Configuration

This submenu allows you to configure the DMI configuration settings.

DMI ASPM

Use this feature to set the Active State Power Management (ASPM) state on the System Agent (SA) side of the DMI Link. The options are Disabled, ASPM L1, and **Auto**.

PEG Port Configuration

► PEG Port Configuration

CPU SLOT7 PCIe 5.0 X16

Enable Root Port

Use this feature to enable or disable the PCIe Graphics (PEG) device in the specified port . The options are Disabled and **Enabled**.

Max Link Speed

Use this feature to select PCIe support for the device installed in slot 7. The options are **Auto**, Gen1, Gen2, Gen3, Gen4, and Gen5.

P1_PE1 17-20

Enable Root Port

Use this feature to enable or disable the PCIe Graphics (PEG) device in the specified port . The options are Disabled and **Enabled**.

Max Link Speed

Use this feature to select PCIe support for the device installed P1_in . The options are **Auto**, Gen1, Gen2, Gen3, Gen4, and Gen5.

M.2-C1

Enable Root Port

Use this feature to enable or disable the PCIe Graphics (PEG) device in the specified port . The options are Disabled and **Enabled**.

Max Link Speed

Use this feature to select PCIe support for the device installed the P1_PE1. The options are **Auto**, Gen1, Gen2, Gen3, Gen4, and Gen5.

GT - Power Management Control

GT - Power Management Control

RC6 (Render Standby)

Use this feature to enable render standby support. The options are Disabled and **Enabled**.

Maximum GT Frequency

Use this feature to define the Maximum GT frequency. Choose between 1650 MHz (RPN) and 6000 MHz (RP0). Any value beyond this range will be clipped to its min/max supported by the

CPU. The options are **Default Max Frequency**, 100Mhz, 150Mhz, 200Mhz, 250Mhz, 300Mhz, 350Mhz, 400Mhz, 450Mhz, 500Mhz, 550Mhz, 600Mhz, 650Mhz, 700Mhz, 750Mhz, 800Mhz, 850Mhz, 900Mhz, 950Mhz, 100Mhz, 1050Mhz, 1100Mhz, 1150Mhz, and 1200Mhz.

Disable Turbo GT Frequency

Use this feature to disable Turbo GT frequency. If set to Enabled, Turbo GT frequency becomes disabled. If set to Disabled, GT frequency limiters will be removed. The options are Enabled and **Disabled**.

PCH-IO Configuration

PCH SKU

Stepping

PCI Express Configuration

PCI Express Configuration

Onboard LAN1

ASPM

Use this feature to activate the Active State Power Management (ASPM) level for a PCIe device. Select Auto for the system BIOS to automatically set the ASPM level based on the system configuration. Select Disabled to disable ASPM support. The options are Disabled, **L1**, and Auto.

L1 Substates

Use this feature to set the PCI Express L1 Substate. The options are Disabled, L1.1 and **L1.1 & L1.2**.

PCIe Speed

Use this feature to set the PCI Express port speed. The options are **Auto**, Gen1, Gen2, Gen3, and Gen4.

Peer Memory Write Enable

Use this feature to enable or disable Peer Memory Write. The options are **Disabled** and Enabled.

Onboard LAN2

ASPM

Use this feature to activate the Active State Power Management (ASPM) level for a PCIe device. Select Auto for the system BIOS to automatically set the ASPM level based on the system configuration. Select Disabled to disable ASPM support. The options are Disabled, **L1**,

and Auto.

L1 Substates

Use this feature to set the PCI Express L1 Substate. The options are Disabled, L1.1 and **L1.1 & L1.2**.

PCIe Speed

Use this feature to set the PCI Express port speed. The options are **Auto**, Gen1, Gen2, Gen3, and Gen4.

Peer Memory Write Enable

Use this feature to enable or disable Peer Memory Write. The options are **Disabled** and Enabled.

M.2-P1

ASPM

Use this feature to activate the Active State Power Management (ASPM) level for a PCIe device. Select Auto for the system BIOS to automatically set the ASPM level based on the system configuration. Select Disabled to disable ASPM support. The options are Disabled, **L1**, and Auto.

L1 Substates

Use this feature to set the PCI Express L1 Substate. The options are Disabled, L1.1 and **L1.1 & L1.2**.

PCIe Speed

Use this feature to set the PCI Express port speed. The options are **Auto**, Gen1, Gen2, Gen3, and Gen4.

Peer Memory Write Enable

Use this feature to enable or disable Peer Memory Write. The options are **Disabled** and Enabled.

PTN3460 Switch

LVDS Panel Support

Use this feature to select the supported IGFX graphics device output to the LVDS panel. The options are **Disabled**, Onboard EDID, and Offboard EDID.

Panel select (Available if LVDS Panel Support is set to Onboard EDID or Offboard EDID)

Use this feature to select the panel resolution. The options are 800x600, 1024x600, 1024x768, 1280x1024, 1366x768, 1440x900, 1440x1050, 1600x900, 1680x1050, 1920x1080, 1920x1200, PTN3460 EDID1, PTN3460 EDID2, PTN3460 EDID3, PTN3460 EDID4, PTN3460 EDID5, PTN3460 EDID6, PTN3460 EDID7, and **Replaceable EDID From BIOS**.

Dual/Single LVDS mode

Use this feature to select the LVDS bus mode. The options are Disabled, **Single LVDS Bus mode**, and Dual LVDS Bus mode.

Panel Channel Type

Use this feature to select the panel channel type. The options are Disabled, **Odd Channel**, Even Channel, and Both Channel.

Panel Color Depth

Use this feature to select the LFP panel color depth. The options are Disabled, VESA and JEIDA18 bpp, **VESA 24 bpp**, and JEIDA 24 bpp.

Backlight Brightness

Use this feature to select panel backlight brightness. The options are from 7% to 100%.

HTTP Boot Configuration Menu**▶ HTTP Boot Configuration****HTTP Boot Policy**

Use this feature to set the HTTP boot policy. The options are Apply to all LANs, **Apply to each LAN**, and Boot Priority #1 instantly.

HTTPS Boot Checks Hostname

Important: Disabling "HTTPS Boot Checks Hostname" is a violation of RFC 6125 and may expose you to Man-in-the-Middle Attacks. Supermicro is not responsible for any and all security risks incurred by you disabling this feature.

Enable this feature for HTTPS boot to check the hostname of the TLS certificates to see if it matches the host name provided by the remote server. The options are **Enabled** and Disabled (WARNING: Security Risk!).

Priority of HTTP Boot**Instance of Priority 1: (Available when your motherboard supports this feature)**

This feature sets the rank target port. The default setting is **1**.

Select IPv4 or IPv6

This feature specifies which connection the target LAN port should boot from. The options are **IPv4** and IPv6.

Boot Description

Use this feature to enter a boot description, which cannot be longer than 75 characters. Please be sure to enter a boot description; otherwise, the boot option for the URI cannot be created.

Boot URI

Enter a Boot Uniform Research Identifier (URI) with 128 characters or shorter. This Boot URI determines how IPv4 Boot Option and IPv6 Boot Option will be created.

Instance of Priority 2: (Available when your motherboard supports this feature)

This feature sets the rank target port. The default setting is **0**.

NCT5525D Super IO Configuration

The following information is displayed.

- Super IO Chip

Note: This submenu is available when your system supports this feature.

Serial Port 1 Configuration Menu**► Serial Port 1 Configuration****Serial Port 1**

Select Enabled to enable serial port 1. The options are Disabled and **Enabled**.

Device Settings (Available when "Serial Port 1" above is set to Enabled)

This feature displays the base I/O port address and the Interrupt Request address of serial port 1.

Change Settings (Available when "Serial Port 1" above is set to Enabled)

Use this feature to specify the base I/O port address and the Interrupt Request address of serial port 1. Select Auto for the BIOS to automatically assign the base I/O and IRQ address to serial port 1. The options are **Auto**, (IO=3F8h; IRQ=4;), (IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12;), (IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12;), (IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12;), and (IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12;).

Serial Port 2 Configuration Menu

► Serial Port 2 Configuration

Serial Port 2

Select Enabled to enable serial port 2. The options are Disabled and **Enabled**.

Device Settings (Available when "Serial Port 2" above is set to Enabled)

This feature displays the base I/O port address and the Interrupt Request address of serial port 2.

Change Settings (Available when "Serial Port 2" above is set to Enabled)

Use this feature to specify the base I/O port address and the Interrupt Request address of serial port 2 (or SOL). Select Auto for the BIOS to automatically assign the base I/O and IRQ address to serial port 2 (or SOL). The options are **Auto**, (IO=2F8h; IRQ=3;), (IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12;), (IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12;), (IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12;), and (IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12;).

Network Stack Configuration Menu

► Network Stack Configuration

Network Stack

Select Enabled to enable Preboot Execution Environment (PXE) or Unified Extensible Firmware Interface (UEFI) for network stack support. The options are Disabled and **Enabled**.

IPv4 PXE Support (Available when "Network Stack" is set to Enabled)

Select Enabled to enable IPv4 PXE boot support. If this feature is disabled, it will not create the IPv4 PXE boot option. The options are Disabled and **Enabled**.

IPv4 HTTP Support (Available when "Network Stack" is set to Enabled)

Select Enabled to enable IPv4 HTTP boot support. If this feature is disabled, it will not create the IPv4 HTTP boot option. The options are **Disabled** and Enabled.

IPv6 PXE Support (Available when "Network Stack" is set to Enabled)

Select Enabled to enable IPv6 PXE boot support. If this feature is disabled, it will not create the IPv6 PXE boot option. The options are Disabled and **Enabled**.

IPv6 HTTP Support (Available when "Network Stack" is set to Enabled)

Select Enabled to enable IPv6 HTTP boot support. If this feature is disabled, it will not create the IPv6 HTTP boot option. The options are **Disabled** and Enabled.

PXE Boot Wait Time (Available when "Network Stack" is set to Enabled)

Use this feature to set the wait time (in seconds) upon which the system BIOS will wait for you to press the <ESC> key to abort PXE boot instead of proceeding with PXE boot by connecting to a network server immediately. Press the <+> or <-> key on your keyboard to change the value. The default setting is **0**.

Media Detect Count (Available when "Network Stack" is set to Enabled)

Use this feature to set the wait time (in seconds) for the BIOS ROM to detect the presence of a LAN media either via the Internet connection or via a LAN port. Press the <+> or <-> key on your keyboard to change the value. The default setting is **1**.

MAC:(MAC address)-IPv4 Network Configuration Menu**▶ MAC:(MAC address)-IPv4 Network Configuration****Configured**

Enable this feature to configure network addresses for DHCP, local IP address, local netmask, local gateway, and local DNS server. The options are **Disabled** and **Enabled**.

Enable DHCP (Available when "Configured" is set to Enabled)

Select **Enabled** to support Dynamic Host Configuration Protocol (DHCP), which allows the BIOS to search for a DHCP server attached to the network and request the next available IP address for this computer. The options are **Disabled** and **Enabled**.

Local IP Address (Available when "Configured" is set to Enabled and "Enable DHCP" is set to Disabled)

Use this feature to enter an IP address for the local machine.

Local NetMask (Available when "Configured" is set to Enabled and "Enable DHCP" is set to Disabled)

Use this feature to set the netmask for the local machine.

Local Gateway (Available when "Configured" is set to Enabled and "Enable DHCP" is set to Disabled)

Use this feature to set the gateway address for the local machine.

Local DNS Servers (Available when "Configured" is set to Enabled and "Enable DHCP" is set to Disabled)

Use this feature to set the Domain Name System (DNS) server address for the local machine.

Save Changes and Exit

Press <Enter> to save changes and exit.

MAC:(MAC address)-IPv6 Network Configuration Menu

▶ MAC:(MAC address)-IPv6 Network Configuration

▶ Enter Configuration Menu

The following information is displayed.

- Interface Name
- Interface Type
- MAC address
- Host address
- Route Table
- Gateway addresses
- DNS addresses

Interface ID

Use this feature to change/enter the 64-bit alternative interface ID for the device. The string format is colon separated. The default setting is the MAC address above.

DAD Transmit Count

Use this feature to set the number of consecutive neighbor solicitation messages have been sent while performing duplicate address detection on a tentative address. The default setting is **1**.

Policy

Use this feature to select how the policy is to be configured. The options are **automatic** and manual.

▶ Advanced Configuration

Note: This submenu is available when "Policy" is set to manual.

New IPv6 address: Use this feature to enter the IPv6 address for the local machine.

New Gateway addresses: Use this feature to set the gateway address for the local machine.

New DNS addresses: Use this feature to set the DNS server address for the local machine.

Commit Changes and Exit: Press <Enter> to save changes and exit.

Discard Changes and Exit: Press <Enter> to discard changes and exit.

Save Changes and Exit

Press <Enter> to save changes and exit.

MAC:(MAC address)-IPv4 Network Configuration Menu

▶ MAC:(MAC address)-IPv4 Network Configuration

Configured

Enable this feature to configure network addresses for DHCP, local IP address, local netmask, local gateway, and local DNS server. The options are **Disabled** and Enabled.

Enable DHCP (Available when "Configured" is set to Enabled)

Select Enabled to support Dynamic Host Configuration Protocol (DHCP), which allows the BIOS to search for a DHCP server attached to the network and request the next available IP address for this computer. The options are **Disabled** and Enabled.

Local IP Address (Available when "Configured" is set to Enabled and "Enable DHCP" is set to Disabled)

Use this feature to enter an IP address for the local machine.

Local NetMask (Available when "Configured" is set to Enabled and "Enable DHCP" is set to Disabled)

Use this feature to set the netmask for the local machine.

Local Gateway (Available when "Configured" is set to Enabled and "Enable DHCP" is set to Disabled)

Use this feature to set the gateway address for the local machine.

Local DNS Servers (Available when "Configured" is set to Enabled and "Enable DHCP" is set to Disabled)

Use this feature to set the Domain Name System (DNS) server address for the local machine.

Save Changes and Exit

Press <Enter> to save changes and exit.

MAC:(MAC address)-IPv6 Network Configuration Menu

▶ MAC:(MAC address)-IPv6 Network Configuration

▶ Enter Configuration Menu

The following information is displayed.

- Interface Name
- Interface Type
- MAC address
- Host address
- Route Table
- Gateway addresses
- DNS addresses

Interface ID

Use this feature to change/enter the 64-bit alternative interface ID for the device. The string format is colon separated. The default setting is the MAC address above.

DAD Transmit Count

Use this feature to set the number of consecutive neighbor solicitation messages have been sent while performing duplicate address detection on a tentative address. The default setting is 1.

Policy

Use this feature to select how the policy is to be configured. The options are **automatic** and manual.

► Advanced Configuration

Note: This submenu is available when "Policy" is set to manual.

New IPv6 address: Use this feature to enter the IPv6 address for the local machine.

New Gateway addresses: Use this feature to set the gateway address for the local machine.

New DNS addresses: Use this feature to set the DNS server address for the local machine.

Commit Changes and Exit: Press <Enter> to save changes and exit.

Discard Changes and Exit: Press <Enter> to discard changes and exit.

Save Changes and Exit

Press <Enter> to save changes and exit.

PCH-FW Configuration

ME Firmware Version: 19.0.0.1797

ME Firmware Mode: Normal Mode

ME Firmware SKU: Corporate SKU

ME FW Image Re-Flash

Use this feature to update the Management Engine firmware. The options are **Disabled** and Enabled.

TPM Device Selection

Use this feature to select dTPM or PTT for the TPM device. dTPM is discrete Trusted Platform Module and PTT is Platform Trusted Technology. The options are **dTPM** and PTT.

AMT Configuration

USB Provisioning of AMT

Use this feature to enable or disable USB provisioning. The options are **Disabled** and Enabled.

MAC Pass Through

Use this feature to enable or disable the MAC Pass Through function. The options are **Disabled** and Enabled.

Activate Remote Assistance Process

Use this feature to activate Remote Assistance. Enabling this feature will also trigger the Client Initiated Remote Access (CIRA) boot. The options are **Disabled** and Enabled.

Unconfigure ME

Use this feature to unconfigure ME with resetting the MEBx password to default on next boot. The options are **Disabled** and Enabled.

ASF Configuration

PET Progress

Use this feature to enable or disable PET Events Progress to receive PET Events alerts. The options are Disabled and **Enabled**.

WatchDog

Select Enabled to allow AMT to reset or power down the system if the operating system or BIOS hangs or crashes. The options are **Disabled** and Enabled.

OS Timer / BIOS Timer

These options appear if WatchDog (above) is enabled. This is a timed delay in seconds, before a system power down or reset after a BIOS or operating system failure is detected. Enter the value in seconds. The default setting is **0**.

ASF Sensors Table

Enable this feature for the ASF Sensor Table to be added into the ASF ACPI table. The options are **Disabled** and **Enabled**.

Secure Erase Configuration

Secure Erase mode

Select **Real** to securely erase a solid state drive. The options are **Simulated** and **Real**.

Force Secure Erase

Select **Enabled** to force a secure erase of the solid state drive on the next boot. The options are **Disabled** and **Enabled**.

One Click Recovery (OCR) Configuration

OCR Https Boot

Use this feature to enable or disable One Click Recovery Https Boot. One Click Recovery is a recovery process that lets you restore your computer to its last known good state with a single command. The options are **Disabled** and **Enabled**.

OCR PBA Boot

Use this feature to enable or disable One Click Recovery PBA Boot. The options are **Disabled** and **Enabled**.

OCR Windows Recovery Boot

Use this feature to enable or disable One Click Recovery Windows Boot. The options are **Disabled** and **Enabled**.

OCR Disable Secure Boot

Use this feature to allow CSME to request Secure Boot to be disabled for One Click Recovery. The options are **Disabled** and **Enabled**.

PCIe/PCI/PnP Configuration Menu

PCI PERR/SERR Support

Use this feature to enable or disable the runtime event for PCI errors. The options are **Disabled** and **Enabled**.

Re-Size BAR Support

Use this feature to enable the Resizable BAR support. Resizable BAR is a PCIe interface technology that allows the CPU to access to the entire frame buffer. With this technology, your system will be able to handle multiple CPU to GPU transfers simultaneously rather than queuing, which can improve the frame rate performance. The options are **Disabled** and **Enabled**.

SR-IOV Support (Unavailable when "Workload Profile" is set to Virtualization)

Select Enabled for Single-Root IO Virtualization support. The options are **Disabled** and **Enabled**.

BME DMA Mitigation

Enable this feature to help block DMA attacks. The options are **Disabled** and **Enabled**.

NVMe Firmware Source

Use this feature to select the NVMe firmware to support system boot. The options are **Vendor Defined Firmware** and **AMI Native Support**. The option of Vendor Defined Firmware is pre-installed on the drive and may resolve errata or enable innovative functions for the drive. The default option, AMI Native Support, is offered by the BIOS with a generic method.

Consistent Device Name Support

This feature controls the device naming for network devices and slots. The options are **Disabled** and **Enabled**.

PCIe/PCI/PnP Configuration

CPU SLOT7 PCIe 5.0 x16 OPROM

Use this feature to select which firmware type to be loaded for the add-on card in this slot. The options are **Disabled** and **EFI**.

M.2-C1 OPROM

Use this feature to select which firmware type to be loaded for the add-on card in this slot. The options are **Disabled** and **EFI**.

P1_PE1 17-20 OPROM

Use this feature to select which firmware type to be loaded for the add-on card in this slot. The options are **Disabled** and **EFI**.

M.2 P1 OPROM

Use this feature to select which firmware type to be loaded for the add-on card in this slot. The options are **Disabled** and **EFI**.

Onboard LAN1 Support

Use this feature to enable or disable LAN1. The options are **Disabled** and **Enabled**.

Onboard LAN2 Support

Use this feature to enable or disable LAN2. The options are Disabled and **Enabled**.

Onboard LAN1 Option ROM

Select EFI to boot the computer using the EFI device installed on LAN port 1. The options are Disabled and **EFI**.

Note: This feature is available when your motherboard supports onboard LAN ports.

SATA and RST Configuration

SATA And RST Configuration

SATA Controller(s)

Use this feature to enable or disable the onboard SATA controller supported by the Intel PCH chip. The options are **Enabled** and Disabled.

Support Aggressive Link Power Management

When this feature is set to Enabled, the SATA AHCI controller manages the power usage of the SATA link. The controller will put the link in a low power mode during extended periods of I/O inactivity and will return the link to an active state when I/O activity resumes. The options are Disabled and **Enabled**.

OCuLink SATA1 - OCuLink SATA4

This feature displays the information detected on the installed SATA drive on the particular SATA port.

Software Preserve Support

Hot Plug

Set this feature to Enable for hot plug support, which allows you to replace a SATA drive without shutting down the system. The options are Disabled and **Enabled**.

Spin Up Device

Set this feature to enable or disable the PCH to initialize the device. The options are **Disabled** and Enabled.

SATA Device Type

Use this feature to specify if the SATA port is connected to a Solid State Drive or a Hard Disk Drive. The options are **Hard Disk Drive** and Solid State Drive.

VMD Setup Menu

VMD Configuration

Enable VMD Controller

Use this feature to enable or disable the VMD controller. The options are **Disabled** and Enabled.

Enable VMD Global Mapping (Available when Enable VMD Controller is set to "Enabled")

Use this feature to enable or disable VMD global mapping. The options are **Disabled** and Enabled.

Map PCH SATA Controller under VMD (Available when Enable VMD Controller is set to "Enabled")

Use this feature to map or unmap the selected root port to VMD. The options are **Disabled** and Enabled.

Serial Port Console Redirection Menu

► Serial Port Console Redirection

COM1

Console Redirection

Select Enabled to enable COM port 1 for Console Redirection, which allows a client machine to be connected to a host machine at a remote site for networking. The options are **Disabled** and Enabled.

Note: This feature will be set to Enabled if there is no BMC support.

COM2

Console Redirection

Select Enabled to use the COM port 2 for Console Redirection. The options are **Disabled** and Enabled.

AMT SOL

AMT SOL Console Redirection

Select Enabled to enable console redirection support for the specified serial port. The options are **Disabled** and Enabled.

► Console Redirection Settings

Note: This submenu is available when "Console Redirection" for COM1, SOL/COM2, or AMT SOL is set to Enabled.

Terminal Type

Use this feature to select the target terminal emulation type for Console Redirection. Select VT100 to use the ASCII Character set. Select VT100+ to add color and function key support. Select ANSI to use the Extended ASCII Character Set. Select VT-UTF8 to use UTF8 encoding to map Unicode characters into one or more bytes. The options are VT100, **VT100+**, VT-UTF8, and ANSI.

Bits Per Second

Use this feature to set the transmission speed for a serial port used in Console Redirection. Make sure that the same speed is used in the host computer and the client computer. A lower transmission speed may be required for long and busy lines. The options are 9600, 19200, 38400, 57600, and **115200** (bits per second).

Data Bits

Use this feature to set the data transmission size for Console Redirection. The options are 7 and **8** (bits).

Parity

A parity bit can be sent along with regular data bits to detect data transmission errors. Select Even if the parity bit is set to 0 and the number of 1s in data bits is even. Select Odd if the parity bit is set to 0 and the number of 1s in data bits is odd. Select None if you do not want to send a parity bit with your data bits in transmission. Select Mark to add a mark as a parity bit to be sent along with the data bits. Select Space to add a space as a parity bit to be sent with your data bits. The options are **None**, Even, Odd, Mark, and Space.

Stop Bits

A stop bit indicates the end of a serial data packet. Select 1 (stop bit) for standard serial data communication. Select 2 (stop bits) if slower devices are used. The options are **1** and 2.

Flow Control

Use this feature to set the flow control for Console Redirection to prevent data loss caused by buffer overflow. Send a "Stop" signal to stop sending data when the receiving buffer is full. Send a "Start" signal to start sending data when the receiving buffer is empty. The options are **None** and Hardware RTS/CTS.

VT-UTF8 Combo Key Support

Select Enabled to enable VT-UTF8 Combination Key support for ANSI/VT100 terminals. The options are Disabled and **Enabled**.

Recorder Mode

Select Enabled to capture the data displayed on a terminal and send it as text messages to a remote server. The options are **Disabled** and Enabled.

Resolution 100x31

Select Enabled for extended-terminal resolution support. The options are Disabled and **Enabled**.

Putty KeyPad

Use this feature to select function key and keypad settings on Putty, which is a terminal emulator designed for the Windows OS. The options are **VT100**, LINUX, XTERMR6, SCO, ESCN, and VT400.

Redirection After BIOS POST

Use this feature to enable or disable legacy console redirection after BIOS POST. When set to Bootloader, legacy console redirection is disabled before booting the OS. When set to Always Enable, legacy console redirection remains enabled when booting the OS. The options are **Always Enable** and Bootloader.

Serial Port for Out-of-Band Management/Windows Emergency Management Services (EMS)

Use the features below to configure Console Redirection settings to support Out-of-Band Serial Port management.

Console Redirection EMS

Select Enabled to use the SOL port for Console Redirection. The options are **Disabled** and Enabled.

► Console Redirection Settings

Note: This submenu is available when "Console Redirection EMS" is set to Enabled.

Out-of-Band Mgmt Port

The feature selects a serial port in a client server to be used by the Microsoft Windows Emergency Management Services (EMS) to communicate with a remote host server. The options are **COM1** and SOL/COM2. Please note that the option of SOL/COM2 indicates a shared serial port. SOL is available with BMC support.

Terminal Type EMS

Use this feature to select the target terminal emulation type for Console Redirection. Select VT100 to use the ASCII character set. Select VT100+ to add color and function key support. Select ANSI to use the extended ASCII character set. Select VT-UTF8 to use UTF8 encoding to map Unicode characters into one or more bytes. The options are VT100, VT100+, **VT-UTF8**, and ANSI.

Bits Per Second EMS

This feature sets the transmission speed for a serial port used in Console Redirection. Make sure that the same speed is used in the host computer and the client computer. A lower transmission speed may be required for long and busy lines. The options are 9600, 19200, 57600, and **115200** (bits per second).

Flow Control EMS

Use this feature to set the flow control for Console Redirection to prevent data loss caused by buffer overflow. Send a "Stop" signal to stop sending data when the receiving buffer is full. Send a "Start" signal to start sending data when the receiving buffer is empty. The options are **None**, Hardware RTS/CTS, and Software Xon/Xoff.

The following information is displayed.

- **Data Bits EMS**
- **Parity EMS**
- **Stop Bits EMS**

Trusted Computing Menu

▶ Trusted Computing

When the TPM 2.0 (either onboard or external) is detected by your system, the following information is displayed.

- TPM 2.0 Device Found
- Firmware Version:
- Vendor:

Note: This submenu is available when the TPM 2.0 (either onboard or external) is detected by the BIOS.

Security Device Support

Select Enabled to enable BIOS support for onboard security devices, which are not displayed in the OS. If this feature is set to Enabled, TCG EFI protocol and INT1A interface will not be available. The options are Disabled and **Enabled**.

When "Security Device Support" is set to Enabled and the TPM 2.0 (either onboard or external) is detected by the BIOS, the following information is displayed.

- Active PCR banks
- Available PCR banks

* The following features are available when the TPM 2.0 (either onboard or external) is detected by the BIOS.

SHA256 PCR Bank (Available when "Security Device Support" is set to Enabled)

Select Enabled to enable SHA256 PCR Bank support to enhance system integrity and data security. The options are Disabled and **Enabled**.

SHA384 PCR Bank (Available when "Security Device Support" is set to Enabled)

Select Enabled to enable SHA384 PCR Bank support to enhance system integrity and data security. The options are **Disabled** and Enabled.

Pending Operation (Available when "Security Device Support" is set to Enabled)

Use this feature to schedule a TPM-related operation to be performed by the security TPM (either onboard or external) at the next system boot to enhance system data integrity. The options are **None** and TPM Clear.

Note: If this feature is used, your system will reboot to carry out a pending TPM operation.

Platform Hierarchy (Available when "Security Device Support" is set to Enabled)

Select Enabled for TPM Platform Hierarchy support, which allows the manufacturer to utilize the cryptographic algorithm to define a constant key or a fixed set of keys to be used for initial system boot. These early boot codes are shipped with the platform and are included in the list of "public keys." During system boot, the platform firmware uses the trusted public keys to verify a digital signature in an attempt to manage and control the security of the platform firmware used in a host system via the TPM (either onboard or external). The options are Disabled and **Enabled**.

Storage Hierarchy (Available when "Security Device Support" is set to Enabled)

Select Enabled for TPM Storage Hierarchy support that is intended to be used for non-privacy-sensitive operations by a platform owner such as an IT professional or the end user. Storage

Hierarchy has an owner policy and an authorization value, both of which can be set and are held constant (-rarely changed) through reboots. This hierarchy can be cleared or changed independently of the other hierarchies. The options are Disabled and **Enabled**.

TPM 2.0 InterfaceType

This feature displays the TPM interface type. The default option is **TIS**.

Endorsement Hierarchy (Available when "Security Device Support" is set to Enabled)

Select Enabled for Endorsement Hierarchy support, which contains separate controls to address the user's privacy concerns because the primary keys in the hierarchy are certified by the TPM key or by a manufacturer with restrictions on how an authentic TPM (either onboard or external) that is attached to an authentic platform can be accessed and used. A primary key can be encrypted and certified with a certificate created by using TPM2_ActivateCredential, which allows the user to independently enable "flag, policy, and authorization values" without involving other hierarchies. A user with privacy concerns can disable the endorsement hierarchy while still using the storage hierarchy for TPM applications, permitting the platform software to use the TPM. The options are Disabled and **Enabled**.

PH Randomization

Select Enabled for Platform Hierarchy (PH) Randomization support, which is used only during the platform developmental stage. This feature cannot be enabled in the production platforms. The options are **Disabled** and Enabled.

Intel Trusted Execution Technology

Intel Trusted Execution Technology (TXT) helps protect against software-based attacks and ensures protection, confidentiality, and integrity of data stored or created on the system. Use this feature to enable or disable TXT Support. The options are **Disabled** and Enabled.

USB Configuration

USB Configuration

USB Module Version

USB Controllers

USB Devices

XHCI Hand-off

This is a work-around solution for operating systems that do not support Extensible Host Controller Interface (XHCI) hand-off. The XHCI ownership change should be claimed by the XHCI driver. The settings are **Enabled** and Disabled.

USB Mass Storage Driver Support

Select Enabled for USB mass storage device support. The options are Disabled and **Enabled**.

USB S5 Wakeup Support

Use this feature to enable or disable USB S5 Wakeup support. The options are Disabled and Enabled.

Intel Ethernet Controller I226-LM - (MAC address) Menu

► Intel Ethernet Controller I226-LM - (MAC address)

The following LAN port information will be displayed:

- UEFI Driver
- PCI Device ID
- PCI Address
- MAC Address
- Link Status

Link auto-negotiation Timeout

This features controls how long the UEFI PXE driver should wait for link. The default is **8**.

Intel Ethernet Controller I226-LM - (MAC address) Menu

► Intel Ethernet Controller I226-LM - (MAC address)

The following LAN port information will be displayed:

- UEFI Driver
- PCI Device ID
- PCI Address
- MAC Address
- Link Status

Link auto-negotiation Timeout

This features controls how long the UEFI PXE driver should wait for link. The default is **8**.

TLS Authenticate Configuration Menu

► TLS Authenticate Configuration

Use this submenu to configure Transport Layer Security (TLS) settings.

▶ Server CA Configuration

Use this feature to configure the client certificate that is to be used by the server.

▶ Enroll Certification

Use this feature to enroll the certificate in the system.

▶ Enroll Certification Using File

Use this feature to enroll the security certificate in the system by using a file.

Certification GUID

Press <Enter> and input the certification Global Unique Identifier (GUID).

▶ Commit Changes and Exit

Use this feature to save all changes and exit TLS settings.

▶ Discard Changes and Exit

Use this feature to discard all changes and exit TLS settings.

▶ Delete Certification

Use this feature to delete the certificate if a certificate has been enrolled in the system.

▶ Client Certification Configuration

4.4 Event Logs

Use this menu to configure Event Logs settings.

Note: After making any changes in this section, please be sure to reboot the system for the changes to take effect.

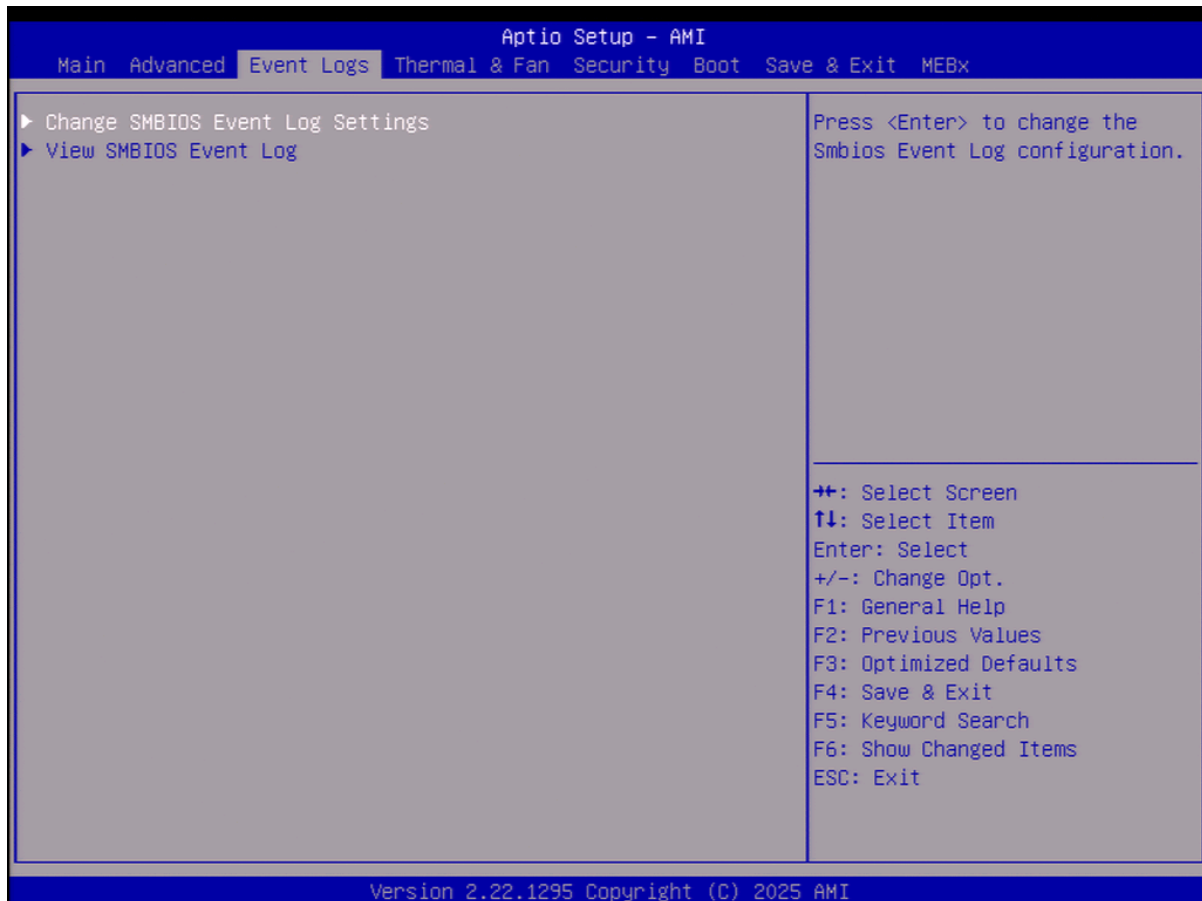


Figure 4-3. Event Logs Screen

► Change SMBIOS Event Log Settings

Note: Reboot the system for the changes in this section to take effect.

Enabling/Disabling Options

SMBIOS Event Log

Select Enabled to enable System Management BIOS (SMBIOS) Event Logging during system boot. The options are Disabled and **Enabled**.

Erasing Settings

Erase Event Log (Available when "SMBIOS Event Log" is set to Enabled)

Select No to keep the event log without erasing it upon next system bootup. Select (Yes, Next reset) to erase the event log upon next system reboot. The options are **No**, (Yes, Next reset), and (Yes, Every reset).

When Log is Full (Available when "SMBIOS Event Log" is set to Enabled)

Select Erase Immediately to immediately erase all errors in the SMBIOS event log when the event log is full. Select Do Nothing for the system to do nothing when the SMBIOS event log is full. The options are **Do Nothing** and Erase Immediately.

SMBIOS Event Log Standard Settings

Log System Boot Event (Available when "SMBIOS Event Log" is set to Enabled)

Select Enabled to log system boot events. The options are Enabled and **Disabled**.

MECI (Available when "SMBIOS Event Log" is set to Enabled)

Enter the increment value for the multiple event counter. Enter a number between 1 and 255. The default setting is **1**. (MECI is the abbreviation for Multiple Event Count Increment.)

METW (Available when "SMBIOS Event Log" is set to Enabled)

Use this feature to determine how long (in minutes) should the multiple event counter wait before generating a new event log. Enter a number between 0 and 99. The default value is **60**. (METW is the abbreviation for Multiple Event Count Time Window.)

► View SMBIOS Event Log

Use this feature to view the event in the system event log. Select this feature and press <Enter> to view the status of an event in the log. The following information is displayed: DATE / TIME / ERROR CODE / SEVERITY.

4.5 Thermal & Fan

Use this menu to configure Thermal and Fan settings.

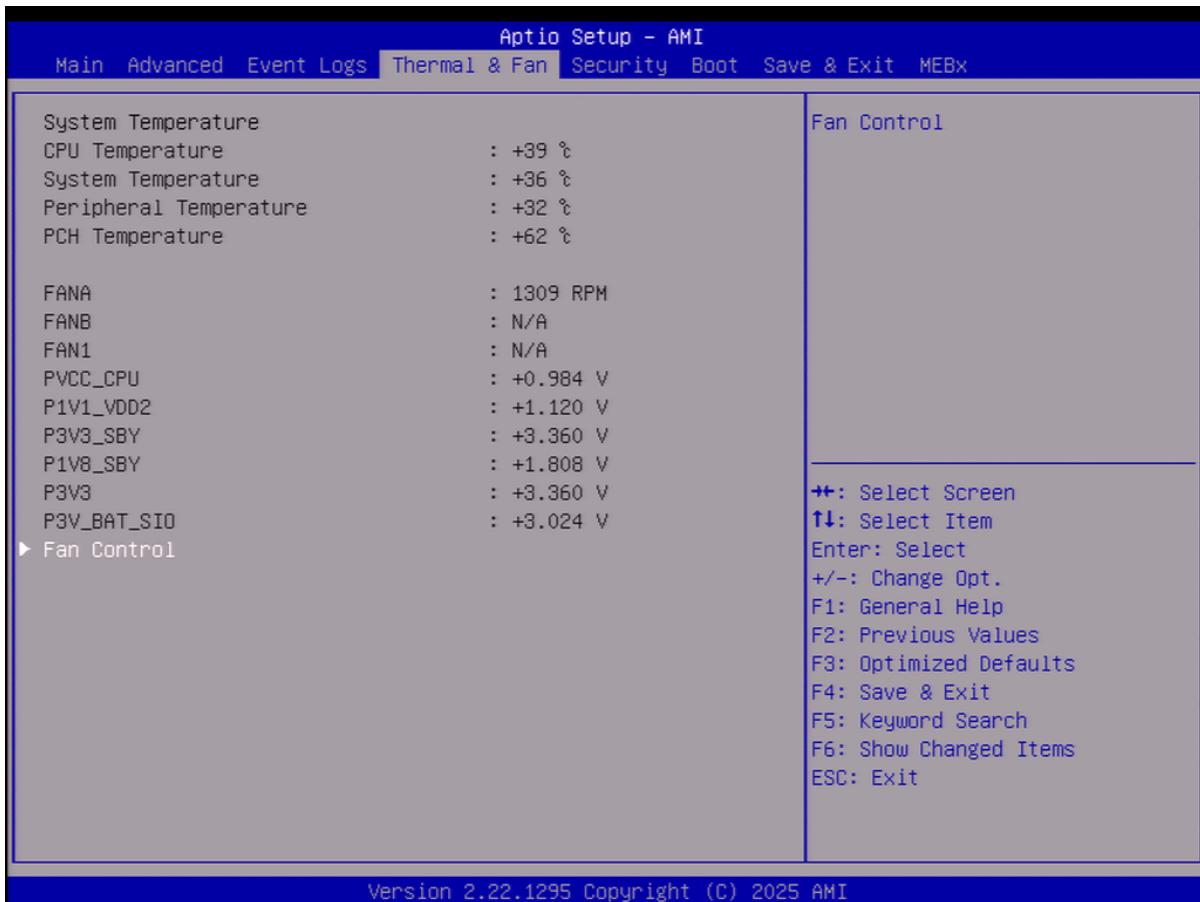


Figure 4-4. Thermal & Fan Screen

System Temperature

This submenu displays system temperature settings.

- CPU Temperature
- System Temperature
- Peripheral Temperature
- PCH Temperature
- FANA
- FANB
- FAN1

- PVCC_CPU
- P1V1_VDD2
- P3V3_SBY
- P1V8_SBY
- P3V3
- P3V_BAT_SIO

▶ Fan Control

Fan Speed Control Mode

Use this feature to select the fan speed control mode. The options are **Optimal**, Standard, Full Speed, and Heavy I/O.

4.6 Security

Use this menu to configure the following security settings for the system.



Figure 4-5. Security Screen

Administrator Password

This feature indicates if an administrator password has been installed. Use this feature to set the administrator password, which is required to enter the BIOS Setup utility. The length of the password can be between three and 20 characters long.

User Password (Available when "Administrator Password" has been set)

This feature indicates if a user password has been installed. Use this feature to set the user password which is required to enter the BIOS Setup utility. The length of the password can be between three and 20 characters long.

Hard Drive Security Frozen

Select Enabled to freeze the Lock Security feature for HDD to protect key data in hard drives from being altered. The options are **Disabled** and Enabled.

Password Check

Select Setup for the system to check for a password upon entering the BIOS Setup utility. Select Always for the system to check for the passwords needed at bootup and upon entering the BIOS Setup utility. The options are **Setup** and Always.

Lockdown Mode (Available when the DCMS key is activated)

Select Enabled to support the Lockdown Mode, which prevents the existing data or keys stored in the system from being altered or changed in an effort to preserve system integrity and security. The options are **Disabled** and Enabled.

Secure Boot Menu

► Secure Boot

The following information is displayed:

- System Mode
- Secure Boot

Note: For detailed instructions on configuring Security Boot settings, refer to the Security Boot Configuration User's Guide at <https://www.supermicro.com/support/manuals>.

Secure Boot

Select Enabled to configure Secure Boot settings. The options are **Disabled** and Enabled.

Secure Boot Mode

Use this feature to select the desired secure boot mode for the system. The options are Standard and **Custom**.

► Enter Audit Mode

Select Ok to enter the Audit Mode workflow. It will result in erasing the Platform Key (PK) variables and resetting the system to the Setup/Audit Mode.

Note: This submenu is available when "Secure Boot Mode" is set to Custom.

► Enter Deployed Mode / Exit Deployed Mode

Select Ok to reset system to the User Mode or to the Deployed Mode.

Note: This submenu is available when "Secure Boot Mode" is set to Custom.

► Key Management

The following information is displayed:

- Vendor Keys

Note: This submenu is available when "Secure Boot Mode" is set to Custom.

Provision Factory Defaults

Select Enabled to install provision factory default settings after a platform reset while the system is in the Setup Mode. The options are **Disabled** and Enabled.

► Restore Factory Keys

Select Yes to restore manufacturer default keys to ensure system security. The options are **Yes** and No. Selecting Yes will reset system to the User Mode.

Note: This submenu is available when any secure keys have been installed.

► Reset To Setup Mode

This feature resets the system to the Setup Mode. The options are **Yes** and No.

Note: This submenu is available when any secure keys have been installed.

► Enroll Efi Image

This feature allows the Efi image to run in the secure boot mode, which will enroll the SHA256 Hash certificate of a PE image into the Authorized Signature Database (DB).

► Export Secure Boot Variables

This feature exports the NVRAM contents of secure boot variables to a storage device. The options are **Yes** and No.

Note: This submenu is available when any secure keys have been installed.

Secure Boot variable / Size / Keys / Key Source

► Platform Key (PK)

Use this feature to enter and configure a set of values to be used as platform firmware keys for the system. These values also indicate the sizes, key numbers, and the sources of the authorized signatures. Select Update to update the platform key.

► Key Exchange Keys (KEK)

Use this feature to enter and configure a set of values to be used as Key Exchange Keys for the system. These values also indicate the sizes, key numbers, and the sources of the authorized signatures. Select Update to update the Key Exchange Keys. Select Append to append the Key Exchange Keys.

► Authorized Signatures (db)

Use this feature to enter and configure a set of values to be used as Authorized Signatures for the system. These values also indicate the sizes, key numbers, and sources of the authorized signatures. Select Update to update the Authorized Signatures. Select Append to append the new Authorized Signatures.

► Forbidden Signatures (dbx)

Use this feature to enter and configure a set of values to be used as Forbidden Signatures for the system. These values also indicate sizes, key numbers, and key sources of the forbidden signatures. Select Update to update the Forbidden Signatures. Select Append to append the Forbidden Signature.

► Authorized TimeStamps (dbt)

Use this feature to set and save the timestamps for the Authorized Signatures, which will indicate the time when these signatures are entered into the system. These values also indicate sizes, keys, and key sources of the authorized timestamps. Select Update to update the Authorized TimeStamps. Select Append to append the Authorized TimeStamps.

► OsRecovery Signatures (dbr)

Use this feature to set and save the Authorized Signatures used for OS recovery. Select Update to update the OsRecovery Signatures. These values also indicate sizes, keys, and key sources of the OsRecovery Signatures. Select Append to append the OsRecovery Signatures.

4.7 Boot

Use this menu to configure Boot settings.

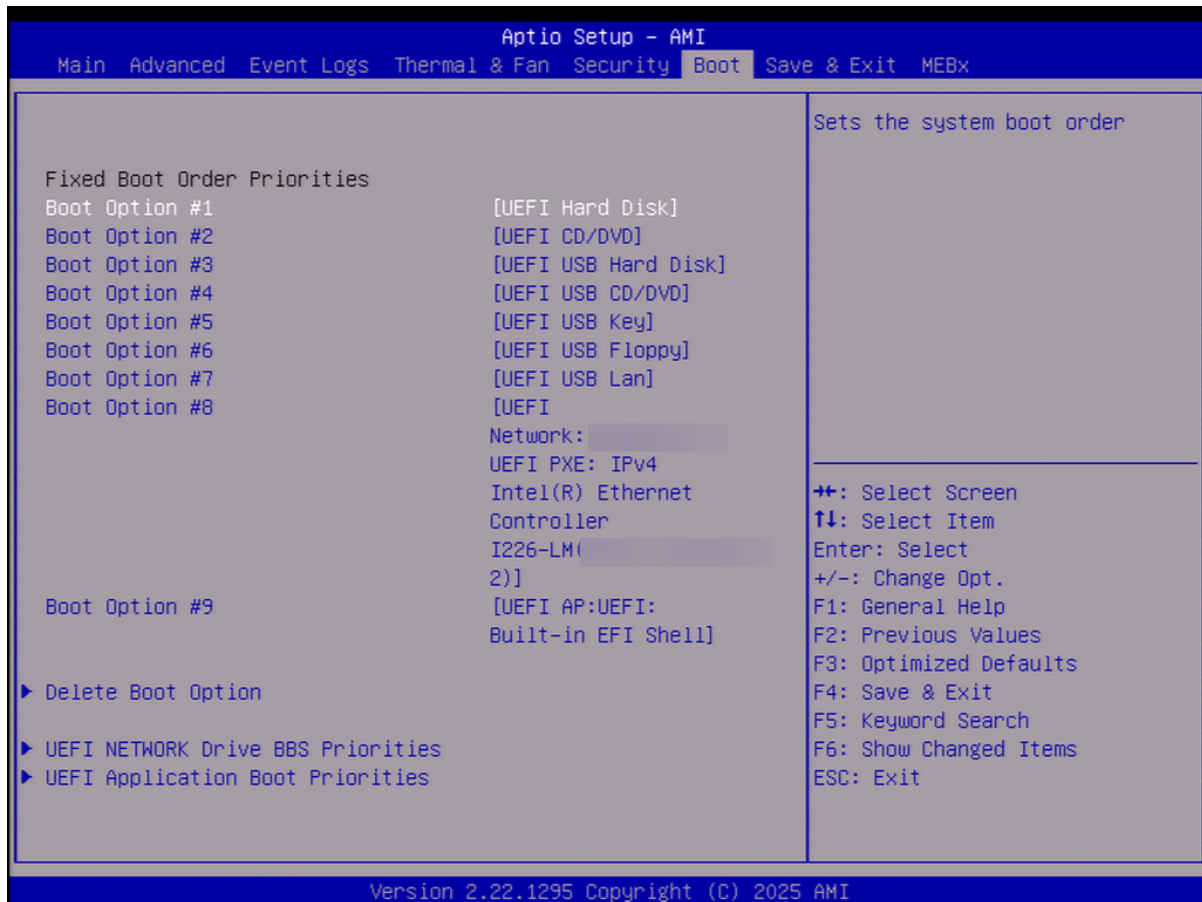


Figure 4-6. Boot Screen

FIXED BOOT ORDER Priorities

Use this feature to prioritize the order of a bootable device from which the system will boot. Press <Enter> on each item sequentially to select the device.

- Boot Option #1 – Boot Option #9

► Add New Boot Option

Use this feature to add a new boot option to the boot priority features for system boot.

Note: This submenu is available when any storage device is detected by the BIOS.

Add boot option

Use this feature to specify the name for the new boot option.

Path for boot option

Use this feature to enter the path for the new boot option in the format fsx:\path\filename.efi.

Boot option File Path

Use this feature to specify the file path for the new boot option.

Create

After setting the name and the file path for the boot option, press <Enter> to create the new boot option in the boot priority list.

▶ Delete Boot Option

Use this feature to select a boot device to delete from the boot priority list.

Delete Boot Option

Use this feature to remove an EFI boot option from the boot priority list.

▶ UEFI NETWORK Drive BBS Priorities

Use this feature to set the system boot order of detected devices.

▶ UEFI Application Boot Priorities

Use this feature to set the system boot order of detected devices.

4.8 Save & Exit

Select Save & Exit from the BIOS Setup screen to configure the settings below.

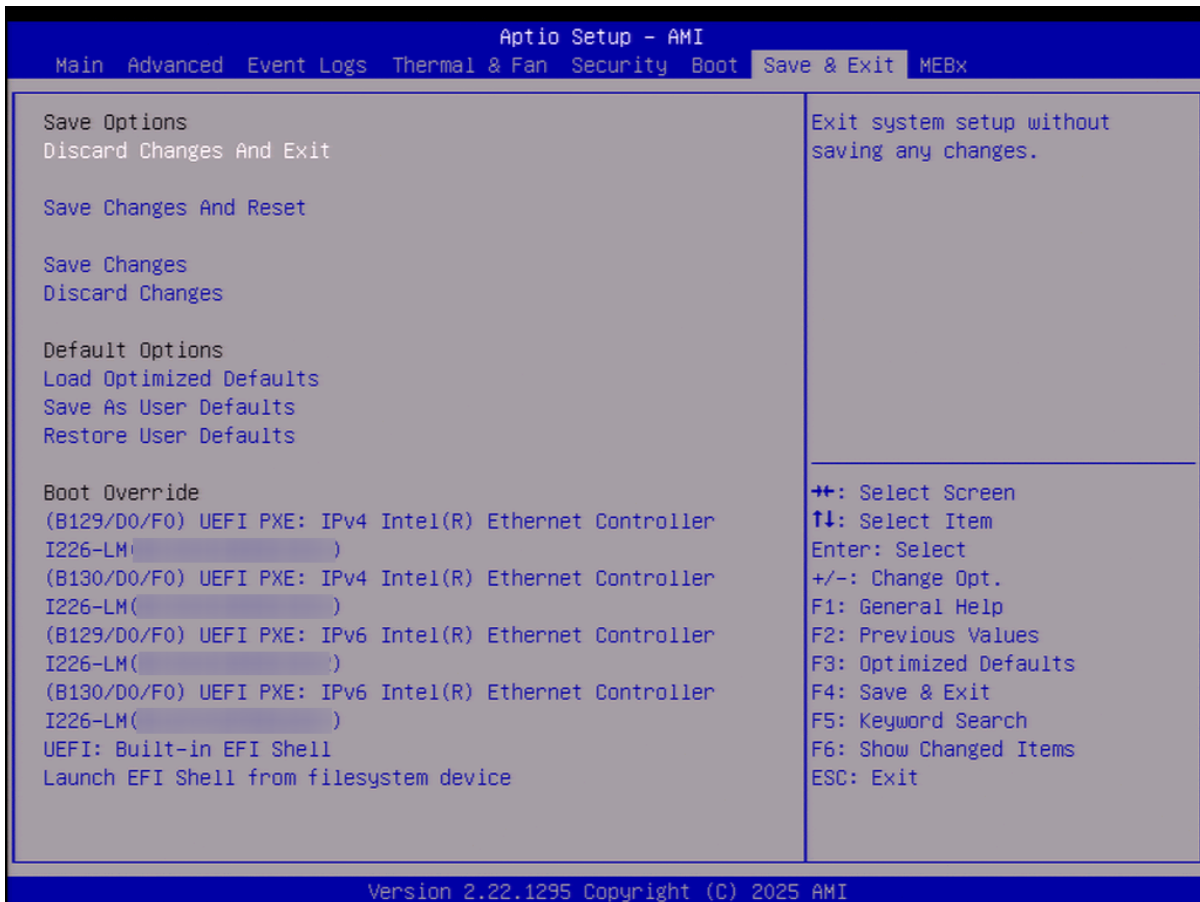


Figure 4-7. Save & Exit Screen

Save Options

Discard Changes and Exit

Use this feature to exit from the BIOS Setup utility without making any permanent changes to the system configuration and reboot the computer.

Save Changes and Reset

On completing the system configuration changes, use this feature to exit the BIOS Setup utility and reboot the computer for the new system configuration parameters to take effect.

Save Changes

On completing the system configuration changes, use this feature to save all changes made. This will not reset (reboot) the system.

Discard Changes

Select this feature and press <Enter> to discard all changes made and return to the BIOS Setup utility.

Default Options**Load Optimized Defaults**

Select this feature and press <Enter> to load manufacturer optimized default settings, which are intended for maximum system performance but not for maximum stability.

Note: After pressing <Enter>, reboot the system for the changes to take effect, which ensures that this system has the optimized default settings.

Save As User Defaults

Select this feature and press <Enter> to save all changes as the default values specified to the BIOS Setup utility for future use.

Restore User Defaults

Select this feature and press <Enter> to retrieve user-defined default settings that have been saved previously.

Boot Override

Note: Use this section to override the Boot priorities sequence in the Boot menu, and immediately boot the system with a device specified here instead of the one specified in the boot list. This is a one-time boot override.

Launch EFI Shell from filesystem device

Use this feature to launch the EFI shell application (Shell.efi) from one of the available filesystem devices. A filesystem is a virtual, logical, or physical system for organizing, managing, and accessing the files and directories on devices such as SSDs, HDDs, or other storage devices.

4.9 MEBx

Use this menu to create a password for MEBx.



Figure 4-8. MEBx Screen

Intel(R) ME Password

Use this feature to create a password for the Intel Management Engine BIOS Extension.

Intel(R) AMT (Available after entering a password for Intel(R) ME Password)

Use this feature to enable or disable Active Management Technology (AMT). The options are Disabled, Partially Disabled, and **Enabled**.

Change Password (Available after entering a password for Intel(R) ME Password)

Press Enter and follow the prompt to change the password.

► Intel(R) AMT Configuration

► Redirection features

SOL

Use this feature to enable the SOL firmware interface. The options are Disabled and **Enabled**.

Storage Redirection

Use this feature to enable the firmware remote storage redirection. The options are Disabled and **Enabled**.

KVM Feature Selection

Use this feature to enable the firmware KVM feature. The options are Disabled and **Enabled**.

► User Consent

User Opt-in

Use this feature to configure when user consent is required. The options are None, **KVM**, and ALL.

Opt-in Configurable from Remote IT

Use this feature to enable or disable the remote change capability of the User Opt-in feature. The options are Disabled and **Enabled**.

Password Policy

Use this feature to set the password policy. The options are Default Password Only, During Setup And Configuration, and **Anytime**.

► Network Setup

► Intel(R) ME Network Name Settings

FQDN

Use this feature to specify the fully qualified domain name.

Shared/Dedicated FQDN

Use this feature to select dedicated or shared for the fully qualified domain name. The options are Dedicated and **Shared**.

► TCP/IP Settings

► Wired LAN IPv4 Configuration

DHCP Mode

Use this feature to enable or disable IPv4 DHCP mode. The options are Disable and **Enabled**.

Network Access State

Use this feature to change the state of the network state of ME. The options are Network Active, **Network Inactive**, Partial Unprovision, and Full Unprovision.

► Remote Setup And Configuration

Provisioning Server address

Use this feature to enter the provisioning server address. It's either a host name, IPv4, or IPv6.

Provisioning server port number

Use this feature to enter the provisioning server port number. The port numbers can range from 0 to 65535.

Remote Configuration **

Use this feature to enable or disable remote configuration. The options are Disabled and **Enabled**.

PKI DNS Suffix

Use this feature to enter the PKI DNS suffix.

Activate Remote Configuration

Use this feature to activate remote configuration.

► Power Control

ME ON in Host Sleep States

Use this feature to select the host sleep states. The options are Desktop: ON in S0 and **Desktop: ON in S0, ME Wake in S3, S4-5**.

Idle Timeout

Use this feature to enter the timeout value. The value can range from 1 to 65535.

Appendix A:

BIOS Codes

For information about BIOS codes for the X14SAV-LVDS motherboard, refer to the following content.

BIOS Error POST (Beep) Codes

During the Power-On Self-Test (POST) routines, which are performed each time the system is powered on, errors may occur.

Non-fatal errors are those which, in most cases, allow the system to continue the boot up process. The error messages normally appear on the screen.

Fatal errors are those which will not allow the system to continue the boot up process. If a fatal error occurs, you should consult with your system manufacturer for possible repairs.

These fatal errors are usually communicated through a series of audible beeps that can be heard on an external buzzer connected to JD1. The table shown below lists some common errors and their corresponding beep codes encountered by users.

BIOS Beep (POST) Codes		
Beep Code	Error Message	Description
1 beep	Refresh	Circuits have been reset (Ready to power up)
5 short, 1 long	Memory error	No memory detected in system
5 short, 2 long	Display memory read/write error	Video adapter missing or with faulty memory
1 long continuous	System OH	System overheat condition

Additional BIOS POST Codes

The AMI BIOS supplies additional checkpoint codes, which are documented online at <https://www.supermicro.com/support/manuals> ("AMI BIOS POST Codes User's Guide").

For information on AMI updates, refer to <https://www.ami.com/products>.

Appendix B:

Software

After the X14SAV-LVDS motherboard has been installed, you can install the Operating System (OS), configure RAID settings, and install the drivers.

Microsoft Windows OS Installation

If you will be using RAID, you must configure RAID settings before installing the Windows OS and the RAID driver. Refer to the RAID Configuration User Guides posted on our website at <https://www.supermicro.com/support/manuals>.

Installing the OS

1. Create a method to access the Microsoft Windows installation ISO file. That can be a USB flash or media drive.
2. Retrieve the proper drivers. Go to the Supermicro web page for your motherboard and click on "Download the Latest Drivers and Utilities," select the proper driver, and copy it to a USB flash drive.
3. Boot from a bootable device with Windows OS installation. You can see a bootable device list by pressing <F11> during the system bootup.

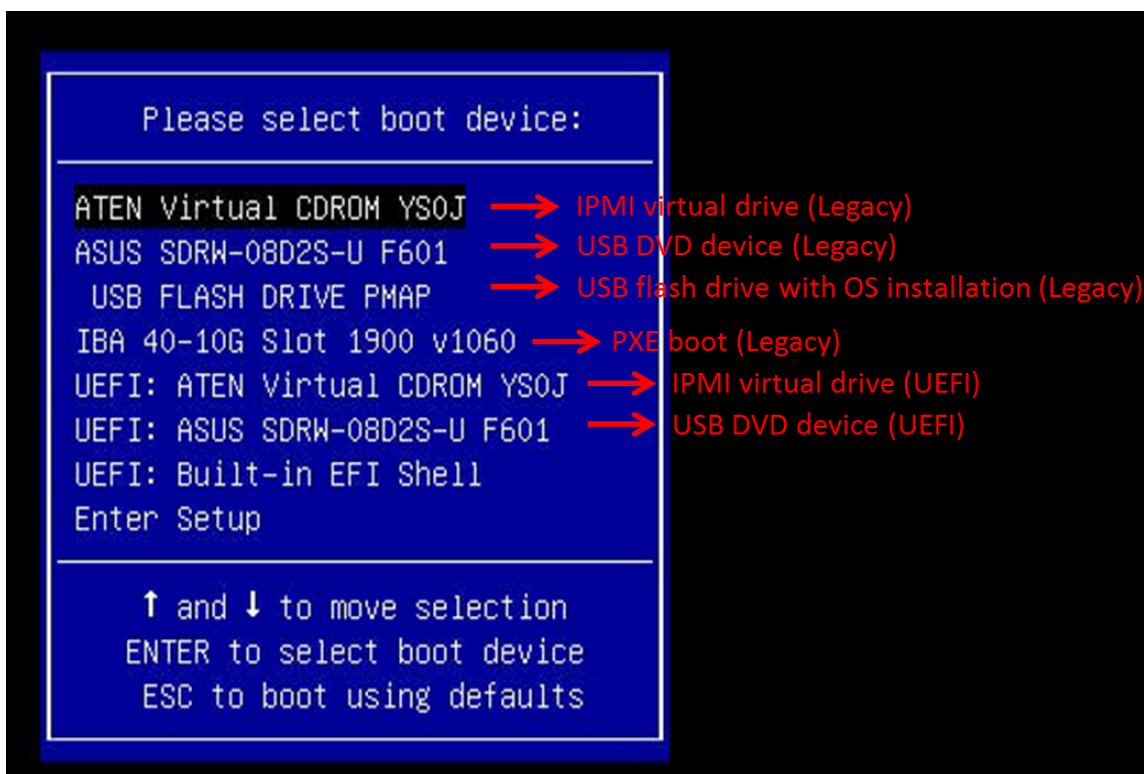


Figure B-1. Select Boot Device

4. During Windows Setup, continue to the dialog box where you select the drives on which to install Windows. If the disk you want to use is not listed, click on the “Load driver” link at the bottom left corner.

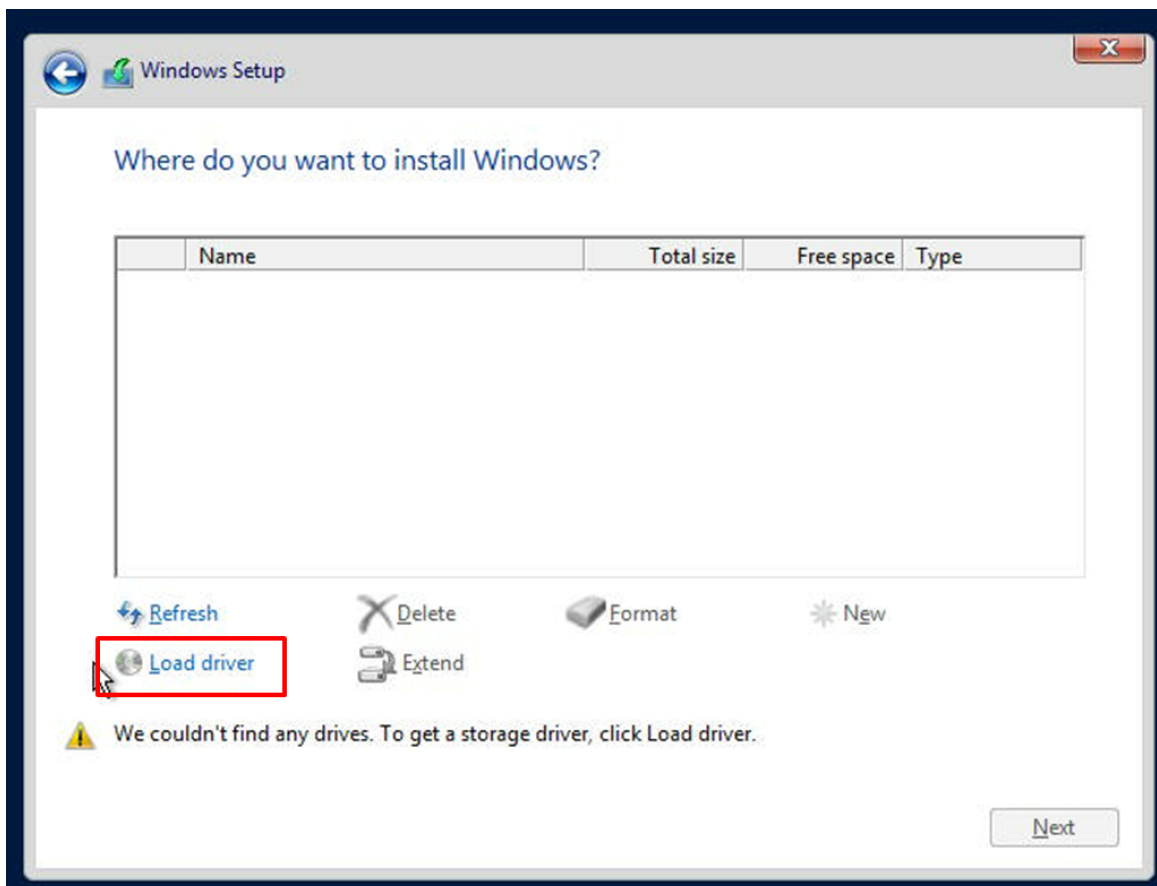


Figure B-2. Load Driver Link

To load the driver, browse the USB flash drive for the proper driver files.

5. Once all devices are specified, continue with the installation.
6. After the Windows OS installation has completed, the system will automatically reboot multiple times for system updates.

Driver Installation

The Supermicro website contains drivers and utilities for your system at the following page:

<https://www.supermicro.com/wdl>.

Some of these drivers and utilities must be installed, such as the chipset driver. After accessing the website, go into the CDR_Images (in the parent directory of the above link) and locate the ISO file for your motherboard. Download this file to a USB flash or media drive. You may also use a utility to extract the ISO file if preferred.

Another option is to go to the Supermicro website at <https://www.supermicro.com>. Find the product page for your motherboard and download the latest drivers and utilities.

Insert the flash drive or disk, and the screenshot shown below should appear.

Note: Click the icons showing a hand writing on paper to view the readme files for each item. Click the computer icons to the right of these items to install each item (from top to bottom) one at a time. After installing each item, you must reboot the system before moving on to the next item on the list. The bottom icon with a CD on it allows you to view the entire contents.

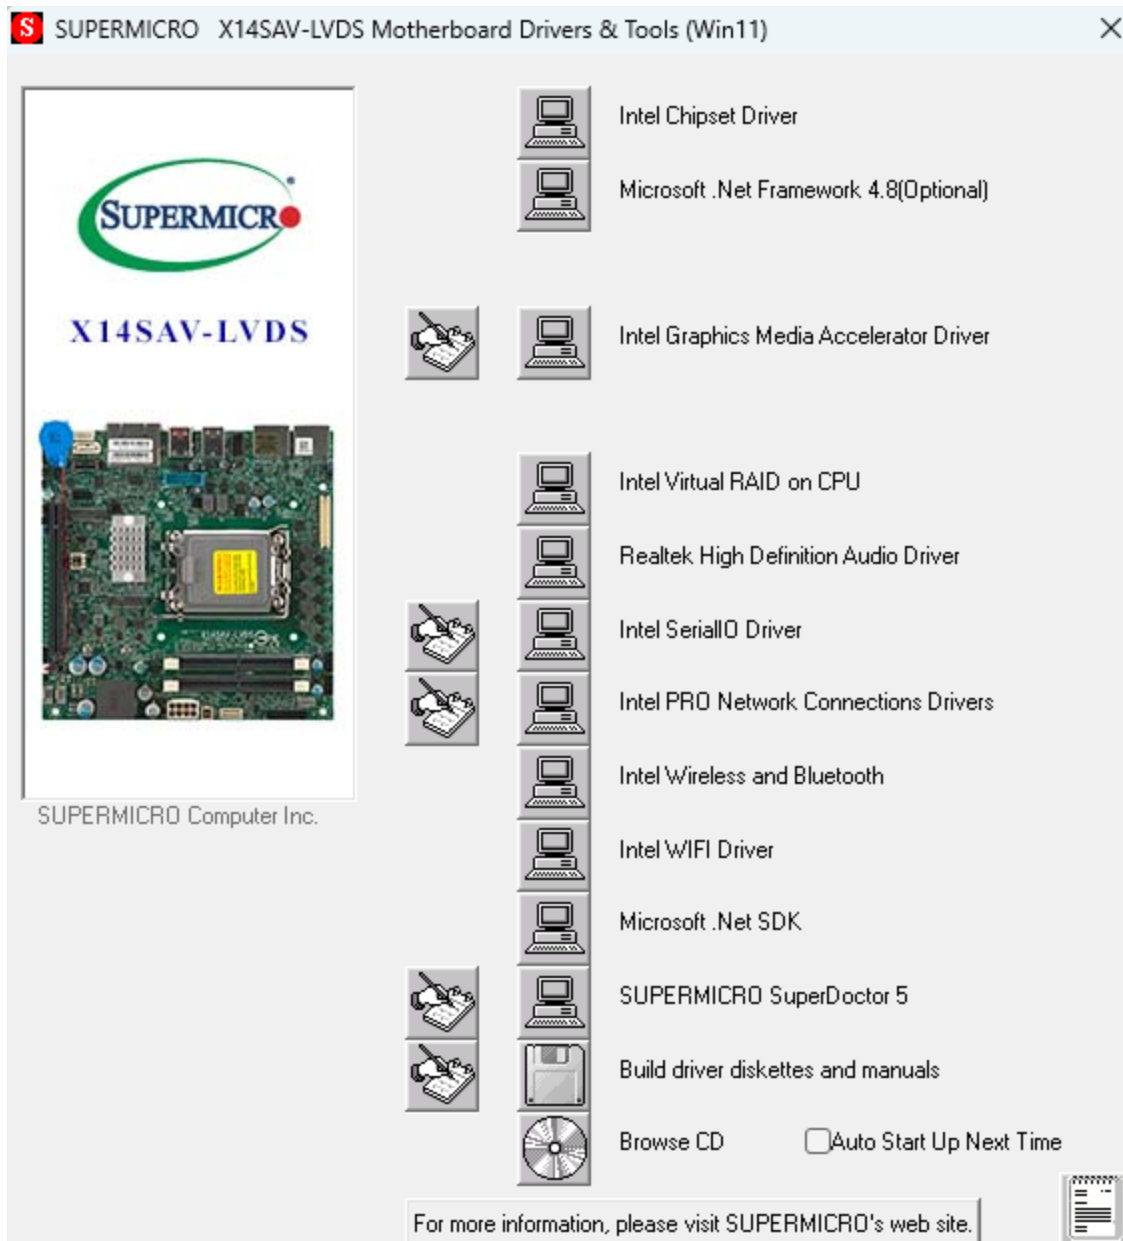


Figure B-3. Driver & Tools Installation Screenshot

Appendix C:

Standardized Warning Statements

The following statements are industry standard warnings, provided to warn the user of situations which have the potential for bodily injury. Should you have questions or experience difficulty, contact Supermicro's Technical Support department for assistance. Only certified technicians should attempt to install or configure components.

Read this section in its entirety before installing or configuring components in the Supermicro X14SAV-LVDS motherboard.

These warnings may also be found on our website at https://www.supermicro.com/about/policies/safety_information.cfm.

Battery Handling



CAUTION There is risk of explosion if the battery is replaced by an incorrect type. Replace the battery only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

電池の取り扱い

バッテリーを間違ったタイプに交換すると爆発の危険があります。交換する電池はメーカーが推奨する型、または同等のものを使用下さい。使用済電池は製造元の指示に従って処分して下さい。

警告

如果更换的电池类型不正确。请只使用同类电池或制造商推荐的功能相当的电池更换原有电池。请按制造商的说明处理废旧电池。

警告

如果更換的電池類型不正確。請使用製造商建議之相同或功能相當的電池更換原有電池。請按照製造商的說明指示處理廢棄舊電池。

WARNUNG

Es besteht Explosionsgefahr, wenn die Batterie durch einen falschen Typ ersetzt wird. Ersetzen Sie die Batterie nur durch den gleichen oder vom Hersteller empfohlenen Batterietyp. Entsorgen Sie die benutzten Batterien nach den Anweisungen des Herstellers.

ADVERTENCIA

Existe riesgo de explosión si la batería se reemplaza por un tipo incorrecto. Reemplazar la batería exclusivamente con el mismo tipo o el equivalente recomendado por el fabricante. Desechar las baterías gastadas según las instrucciones del fabricante.

ATTENTION

Il existe un risque d'explosion si la batterie est remplacée par un type incorrect. Ne la remplacer que par une pile de type semblable ou équivalent, recommandée par le fabricant. Jeter les piles usagées conformément aux instructions du fabricant.

אזהרה!

קיימת סכנת פיצוץ אם הסוללה תוחלף בסוג שגוי. יש להחליף את הסוללה בסוג התואם מחברת יצרן מומלצת. סילוק הסוללות המשומשות יש לבצע לפי הוראות היצרן.

هناك خطر الانفجار إذا تم استبدال البطارية بنوع غير صحيح

استبدال البطارية

فقط بنفس النوع أو ما يعادلها مما أوصت به الشركة المصنعة

جخلص من البطاريات المسحمة وفقاً لتعليمات الشركة الصانعة

경고!

배터리를 잘못된 종류로 교체하면 폭발의 위험이 있습니다. 기존 배터리와 동일하거나 제조사에서 권장하는 동등한 종류의 배터리로만 교체해야 합니다. 제조사의 안내에 따라 사용된 배터리를 처리하여 주십시오.

WAARSCHUWING

Er bestaat explosiegevaar als de batterij wordt vervangen door een verkeerd type. Vervang de batterij slechts met hetzelfde of een equivalent type die door de fabrikant aanbevolen wordt. Gebruikte batterijen dienen overeenkomstig fabrieksvoorschriften afgevoerd te worden.

Product Disposal

Warning! Ultimate disposal of this product should be handled according to all national laws and regulations.

製品の廃棄

この製品を廃棄処分する場合、国の関係する全ての法律・条例に従い処理する必要があります。

警告

本产品的废弃处理应根据所有国家的法律和规章进行。

警告

本產品的廢棄處理應根據所有國家的法律和規章進行。

Warnung

Die Entsorgung dieses Produkts sollte gemäß allen Bestimmungen und Gesetzen des Landes erfolgen.

¡Advertencia!

Al deshacerse por completo de este producto debe seguir todas las leyes y reglamentos nacionales.

Attention

La mise au rebut ou le recyclage de ce produit sont généralement soumis à des lois et/ou directives de respect de l'environnement. Renseignez-vous auprès de l'organisme compétent.

סילוק המוצר

אזהרה!

סילוק סופי של מוצר זה חייב להיות בהתאם להנחיות וחוקי המדינה.

عند التخلص النهائي من هذا المنتج ينبغي التعامل معه وفقا لجميع القوانين واللوائح الوطنية

경고!

이 제품은 해당 국가의 관련 법규 및 규정에 따라 폐기되어야 합니다.

Waarschuwing

De uiteindelijke verwijdering van dit product dient te geschieden in overeenstemming met alle nationale wetten en reglementen.