

AZURE STACK HCI: TRUSTED ENTERPRISE VIRTUALIZATION

 
Leverage your Azure Stack HCI investment to run workloads on a highly secure infrastructure by choosing the hardware designed for the Trusted enterprise virtualization scenario, with unparalleled levels of operating system security enabled with [virtualization-based security \(VBS\)](#) and hybrid cloud capabilities made easy through Windows Admin Center and Azure portal.

Below, you will find a how-to guide for building an infrastructure for the Trusted enterprise virtualization scenario on Azure Stack HCI.

Overview of Trusted enterprise virtualization scenario


Virtualization-based security (VBS) is a key component of the [security investments in Azure Stack HCI](#) to protect hosts and virtual machines from security threats.

For example, the [Security Technical Implementation Guide \(STIG\)](#) is published as a tool to improve the security of Department of Defense (DoD) information systems, and lists VBS and hypervisor-protected-code-integrity (HVCI) as general security requirements. It is imperative to use host hardware that is VBS and HVCI enabled, in order for the protected workloads on virtual machines to fulfil their security promise because protection of virtual machines is not guaranteed on a compromised host.

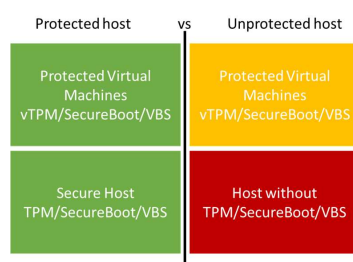

VBS uses hardware virtualization features to create and isolate a secure region of memory from the normal operating system. Windows can use this "virtual secure mode" to host a number of security solutions, providing them with greatly increased protection from vulnerabilities in the operating system, and preventing the use of malicious exploits which attempt to defeat protections.

 VBS uses the Windows hypervisor to create this "virtual secure mode", and to enforce restrictions which protect vital system and operating system resources, or to protect security assets such as authenticated user credentials. With the increased protections offered by VBS, even if malware gains access to the operating system kernel the possible exploits can be greatly limited and contained, because the hypervisor can prevent the malware from executing code or accessing platform secrets.

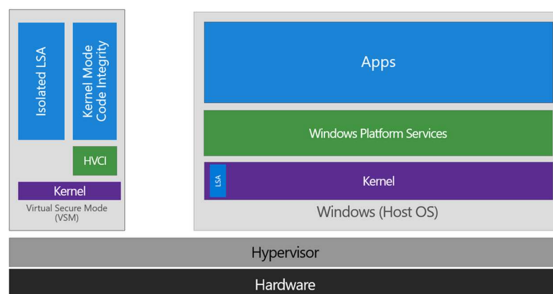

One such security solution example is HVCI, which uses VBS to significantly strengthen code integrity policy enforcement. Kernel mode code integrity checks all kernel mode drivers and binaries before they are started and prevents unsigned drivers or system files from being loaded into system memory.

HVCI leverages VBS to run the code integrity service inside a virtual secure mode, providing stronger protections against kernel viruses and malware. The hypervisor, the most privileged level of system software, sets and enforces page permissions across all system memory. Pages are only made executable after code integrity checks inside the virtual secure mode have passed, and



AZURE STACK HCI: TRUSTED ENTERPRISE VIRTUALIZATION

executable pages are not writable. That way, even if there are vulnerabilities like buffer overflow that allow malware to attempt to modify memory, code pages cannot be modified, and modified memory cannot be made executable.

How to deploy VBS and HVCI-enabled Azure Stack HCI

1. Plan Hardware Deployment

All the Azure Stack HCI solutions by Supermicro are certified for the Hardware Assurance Additional Qualification, which tests for [all the functionality needed for VBS](#). However, VBS and HVCI are not automatically enabled in Azure Stack HCI and Step 2 will guide you on how to enable them.

Warning: Hypervisor-protected code integrity (HVCI) may be incompatible with devices not listed in the Azure Stack HCI catalog. Microsoft strongly recommends using an Azure Stack HCI validated solution from our hardware partners for the Trusted enterprise virtualization scenario.

X13 2U 4-node GrandTwin SYS-211GT-HNC8R




 



Supermicro SYS-211GT-HNC8R

Scale

4 to 16 nodes

Single Node Data

-  8 to 64 cores Intel 5th Gen
-  256GB to 4TB memory
-  4.8TB to 92TB raw storage
-  NVMe
-  25GbE (Up to 100GbE)

Supermicro X12 2U Mainstream:



AZURE STACK HCI: TRUSTED ENTERPRISE VIRTUALIZATION








Supermicro SYS-620P-TR

Scale

2 to 16 nodes

Single Node Data

-  16 to 80 cores Intel 3rd Gen
-  128GB to 1024GB memory
-  8TB to 160TB raw storage
-  HDD
-  25GbE (Up to 100GbE)



AZURE STACK HCI: TRUSTED ENTERPRISE VIRTUALIZATION

Supermicro X13 Hyper 2U Hybrid:








Supermicro SYS-621H-TN12R – Hybrid

Scale

2 to 16 nodes

Single Node Data

-  15 to 120 cores Intel 4th Gen
-  128GB to 4TB memory
-  4TB to 160TB raw storage
-  NVMe + HDD
-  25GbE (Up to 100GbE)

Supermicro X13 UP CloudDC 1U All-flash NVMe:








Supermicro SYS-111C-NR – All Flash NVMe

Scale

1 to 16 nodes

Single Node Data

-  8 to 60 cores Intel 4th Gen
-  64GB to 2TB memory
-  3.75TB to 76.8TB raw storage
-  NVMe
-  25GbE (Up to 100GbE)



AZURE STACK HCI: TRUSTED ENTERPRISE VIRTUALIZATION

Supermicro X13 UP WIO 1U All-flash SATA SSD:








Supermicro SYS-511E-WR-HCI – All Flash SSD

Scale

1 to 4 nodes

Single Node Data

-  8 to 52 cores Intel 4th Gen
-  64GB to 1TB memory
-  4TB to 31TB raw storage
-  SATA SSD
-  25GbE (Up to 100GbE)


 





Supermicro SYS-111E-WR-HCI – All Flash SSD

Scale

1 to 4 nodes

Single Node Data

-  8 to 52 cores Intel 4th Gen
-  64GB to 1TB memory
-  4TB to 76.8TB raw storage
-  SATA SSD
-  25GbE (Up to 100GbE)

Supermicro A+ H13 1U/2U CloudDC All-flash NVMe:



Supermicro AS-1115CS-TNR – All Flash NVMe

Scale

1 to 4 nodes

Single Node Data

-  16 to 128 cores AMD 4th Gen
-  192GB to 3.072TB memory
-  3.84TB to 150TB raw storage
-  NVMe
-  25GbE (Up to 100GbE)



Supermicro AS-1015CS-TNR – All Flash NVMe

Scale

1 to 4 nodes

Single Node Data

-  16 to 128 cores AMD 4th Gen
-  192GB to 3.072TB memory
-  3.84TB to 60TB raw storage
-  NVMe
-  25GbE (Up to 100GbE)



AZURE STACK HCI: TRUSTED ENTERPRISE VIRTUALIZATION



Supermicro AS-2015CS-TNR – All Flash NVMe

Scale

1 to 4 nodes

Single Node Data

- 16 to 128 cores AMD 4th Gen
- 192GB to 1.152TB memory
- 3.84TB to 180TB raw storage
- NVMe
- 25GbE (Up to 100GbE)

Supermicro A+ H13 Hyper 1U and 2U All-flash NVMe:



Supermicro AS -2025HS-TNR-HCI – All Flash NVMe

Scale

1 to 4 nodes

Single Node Data

- 32 to 256 cores AMD 4th Gen
- 384GB to 3TB memory
- 7.68TB to 184.32TB raw storage
- NVMe
- Up to 100GbE



Supermicro AS -1125HS-TNR-HCI – All Flash NVMe

Scale

1 to 4 nodes

Single Node Data

- 32 to 256 cores AMD 4th Gen
- 384GB to 3TB memory
- 15.36TB to 61.44TB raw storage
- NVMe
- Up to 100GbE



AZURE STACK HCI: TRUSTED ENTERPRISE VIRTUALIZATION

Supermicro A+ H13 GrandTwin 2U4N All-flash NVMe:



Supermicro AS -2115GT-HNTR-HCI – All Flash NVMe

Scale

4 to 16 nodes (4-node in a system)

Single Node Data

-  16 to 84 cores AMD 4th Gen
-  192GB to 768TB DDR5 memory
-  15TB to 31TB raw storage
-  NVMe
-  Up to 100GbE

Supermicro A+ H12 WIO 1U All-flash:








Supermicro AS -1114S-WN10RT-HCI – All Flash NVMe

Scale

2 to 16 nodes

Single Node Data

-  8 to 64 cores (AMD 3rd Gen)
-  128GB to 4TB memory
-  15.36TB to 76.8TB raw storage
-  NVMe (Gen4)
-  Up to 100GbE





Supermicro AS -1114S-WN10RT-HCI – All Flash SSD

Scale

2 to 16 nodes

Single Node Data

-  8 to 64 cores (AMD 3rd Gen)
-  128GB to 4TB memory
-  960GB to 76.8TB raw storage
-  SATA SSD
-  Up to 100GbE



AZURE STACK HCI: TRUSTED ENTERPRISE VIRTUALIZATION

Supermicro X12 BigTwin 2U 4-Node All-flash:



Supermicro SYS-220BT-HNC8R-HCI – All Flash NVMe

Scale

4 to 16 nodes (1 to 4 systems)

Single Node Data

-  16 to 72 cores (intel 3rd Gen)
-  128GB to 4TB memory
-  15.36TB to 46.08TB raw storage
-  NVMe (Gen4)
-  Up to 100GbE

Supermicro X12 Ultra 1U All-flash:


 
 




Supermicro SYS-120U-TNR- HCI – All Flash NVMe + SSD

Scale

2 to 16 nodes

Single Node Data

-  16 to 80 cores (intel 3rd Gen)
-  128GB to 4TB memory
-  3.75TB to 75TB raw storage
-  NVMe + SSD
-  Up to 100GbE



AZURE STACK HCI: TRUSTED ENTERPRISE VIRTUALIZATION

X12 UP 1U All-flash:



Supermicro SYS-510P-MR – HCI – All Flash NVMe

Scale
2 to 4 nodes

Single Node Data

- 8 to 32 cores (intel 3rd Gen)
- 64GB to 256GB memory
- 4TB to 32TB raw storage
- NVMe
- 25GbE



Supermicro SYS-510P-MR – HCI – All Flash SSD

Scale
2 to 4 nodes

Single Node Data

- 8 to 32 cores (intel 3rd Gen)
- 64GB to 256GB memory
- 3.84TB to 30.4TB raw storage
- SSD
- 25GbE

X11 Ultra platform:



Supermicro SYS-2029U-TN24R4T- HCI

Scale
2 to 4 nodes

Single Node Data

- 8 to 56 cores (intel)
- 128GB to 6TB memory
- 4TB to 367TB raw storage
- NVMe
- Up to 100GbE



Supermicro SYS-6029U-E1CR4-HCI – ALL Flash

Scale
2 to 16 nodes

Single Node Data

- 8 to 56 cores (intel)
- 128GB to 6TB memory
- 12TB to 96TB raw storage
- NVMe + SSD
- Up to 100GbE



Supermicro SYS-6029U-E1CR4-HCI - Hybrid


Scale
2 to 16 nodes

Single Node Data

- 8 to 56 cores (intel)
- 128GB to 6TB memory
- 12TB to 96TB raw storage
- NVMe + SSD + HDD
- Up to 100GbE



AZURE STACK HCI: TRUSTED ENTERPRISE VIRTUALIZATION

 <p>Supermicro SYS-1029U-TN10RT-HCI</p> <p>Scale 2 to 16 nodes</p> <p>Single Node Data</p> <ul style="list-style-type: none"> 8 to 56 cores (intel) 128GB to 6TB memory 4TB to 153TB raw storage NVMe Up to 100GbE 	 <p>Supermicro SYS-1029U-TRT - HCI - Hybrid</p> <p>Scale 2 to 4 nodes</p> <p>Single Node Data</p> <ul style="list-style-type: none"> 8 to 56 cores (intel) 128GB to 6TB memory 4TB to 60.8TB raw storage NVMe + SSD + HDD Up to 40GbE 	 <p>Supermicro SYS-1029U-TRT - HCI - All Flash</p> <p>Scale 2 to 4 nodes</p> <p>Single Node Data</p> <ul style="list-style-type: none"> 8 to 56 cores (intel) 128GB to 6TB memory 4TB to 60.8TB raw storage NVMe + SSD Up to 40GbE
----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

TPM module by default is enabled in BIOS, therefore the customer does not need to change TPM settings in BIOS.

For enabling Secure Boot on X13 and H13 systems, please refer to the following URL:

https://www.supermicro.com/solutions/azure-stack-hci/Secured-core_Servers_Enabling_Guide_Supermicro.pdf

Field Code Changed

For enabling Secure Boot on X12 systems, please follow below steps:

1. Boot system to BIOS. Then go to Security >> Secure Boot. In "Key Management", enable the "Default Key Provision". Save and exit the BIOS.
2. Boot system to BIOS again. Disable the "CSM Support". Save and exit the BIOS.
3. Boot to BIOS again. Enable the "Secure Boot". Save and exit the BIOS.

For enabling Secure Boot on X11 systems, please follow below steps:

1. Boot into BIOS >> Advanced >> PCIe/PCI/PnP Configuration, Change the "onboard Video Option ROM" from "Legacy" to "EFI". Save and exit the BIOS.
2. Boot system to BIOS again. Then go to Security >> Secure Boot. In "Key Management", enable the "Default Key Provision".
3. Disable the "CSM Support".
4. Enable the "Secure Boot".


2. Deploy VBS-Enabled Azure Stack HCI



AZURE STACK HCI: TRUSTED ENTERPRISE VIRTUALIZATION

Step by Step guide to [deploy Azure Stack HCI](#). Also install [Windows Admin Center \(WAC\)](#) for managing Azure Stack HCI.

[Enable virtualization-based protection of code integrity](#)

3. From Windows Admin Center (WAC), set up Azure Security Center to add threat protection and quickly assess your security posture of your workloads.
 - You can also setup additional  Azure hybrid services such as Backup, File Sync, Site Recovery, Point-to-Site VPN, Update Management, and Azure Monitor in WAC.

Summary

With the completion of the Azure Stack HCI Trusted enterprise virtualization deployment and the configuration of VBS / HVCI, you now have a platform with the highest security standards for protecting security sensitive workloads on both physical and virtual machines.

