IPMI Firmware

Supermicro disclaims all express and implied warranties, including without limitation, the implied warranties of merchantability, fitness for a particular purpose, and non-infringement, as well as any warranty arising from course of performance, course of dealing, or usage in trade. All products, computer systems, dates, and figures specified are preliminary based on current expectations, and are subject to change without notice. Supermicro and the Supermicro logo are trademarks of Super Micro Computer, Inc. in the U.S. and/or other countries. Copyright © 2018 Super Micro Computer, Inc. All rights reserved.

Product Name	X10DGQ
Release Version	· · ·
	3.66
Release Date	1/18/2018
Previous Version	3.60
Update Category	Recommended
Dependencies	None
Important Notes	None
Enhancements	1. Upgraded NTP to version 4.2.8p10 to fix security issue.
	2. Hide unused power supply information on power source page.
New features	1. Added save button to WebUI Server Health->Sensor reading page.
	2. Added support for GetSetBMCStatus command for TAS.
	3. Added support for GPU V100.
	4. Added auto-refresh to sensor reading page.
Fixes	1. Fixed problem of the power supply FRU being empty in DMI after
	the AC is first powered on.
	2. Fixed missing chassis intrusion status in IPMITool chassis status.
	3. Fixed issue with GPU temperature drop.
	4. Fixed inability of IKVM reset to close IKVM console.
	5. Fixed problem of IPMI not returning to login page automatically
	after reloading IPMI Configuration.

6. Fixed problem of AC cycle stress testing making BMC crash because
of uncorrectable SMBIOS file.
7. Fixed problem of SMCIPMITool and WebGUI showing different
values for PSU FAN RPM.
8. Fixed issue with port configure page value check.
9. Fixed abnormal syslog display.