

# IPMI Firmware Release Notes

*Supermicro disclaims all express and implied warranties, including without limitation, the implied warranties of merchantability, fitness for a particular purpose, and non-infringement, as well as any warranty arising from course of performance, course of dealing, or usage in trade. All products, computer systems, dates, and figures specified are preliminary based on current expectations, and are subject to change without notice. Supermicro and the Supermicro logo are trademarks of Super Micro Computer, Inc. in the U.S. and/or other countries. Copyright © 2018 Super Micro Computer, Inc. All rights reserved.*

<b>Product Name</b>	<b>B2SC1-CPU</b>
<b>Release Version</b>	<b>3.71</b>
<b>Build Date</b>	<b>10/18/2019</b>
<b>Previous Version</b>	<b>N/A</b>
<b>Update Category</b>	<b>Critical</b>
<b>Dependencies</b>	<b>None</b>
<b>Important Notes</b>	<b>None</b>
<b>Enhancements</b>	<b>N/A</b>
<b>New features</b>	<ol style="list-style-type: none"><li>1. Disable VM unplug button on Java iKVM applet if ISO or IMA is mounted via WebUI..</li><li>2. Set all IPv4/IPv6 addresses to display on the sys_info page.</li></ol>
<b>Fixes</b>	<ol style="list-style-type: none"><li>1. Redfish/v1/Managers/1/VM1/CfgCD no longer shows plaintext password.</li><li>2. Allow mounting Virtual Media images after changing VM port more than 4 times during Web virtual media mount.</li><li>3. Corrected response of setting via in-band interface after setting SMTP sender email.</li><li>4. Corrected Watchdog setting the pre-timeout NMI interruption after counting down to pre-timeout interval.</li><li>5. Allow launching HTML5/JavaKVM through CMM.</li><li>6. Allow space for username and password in webUI.</li><li>7. Corrected IPMI WebGUI Troubleshooting page sometimes disappearing.</li><li>8. Corrected IPMI Troubleshooting and problem of file generation stopping at 99% after CATERR occurs.</li><li>9. Corrected communication issue between BMC and CMM.</li><li>10. Corrected formatting when logging in with long AD name.</li><li>11. Show DIMM information under hardware information in WebGUI.</li></ol>