



SUPERMICR[®] SuperServer 6018R-TDTPR Quick Reference Guide

Board Layout

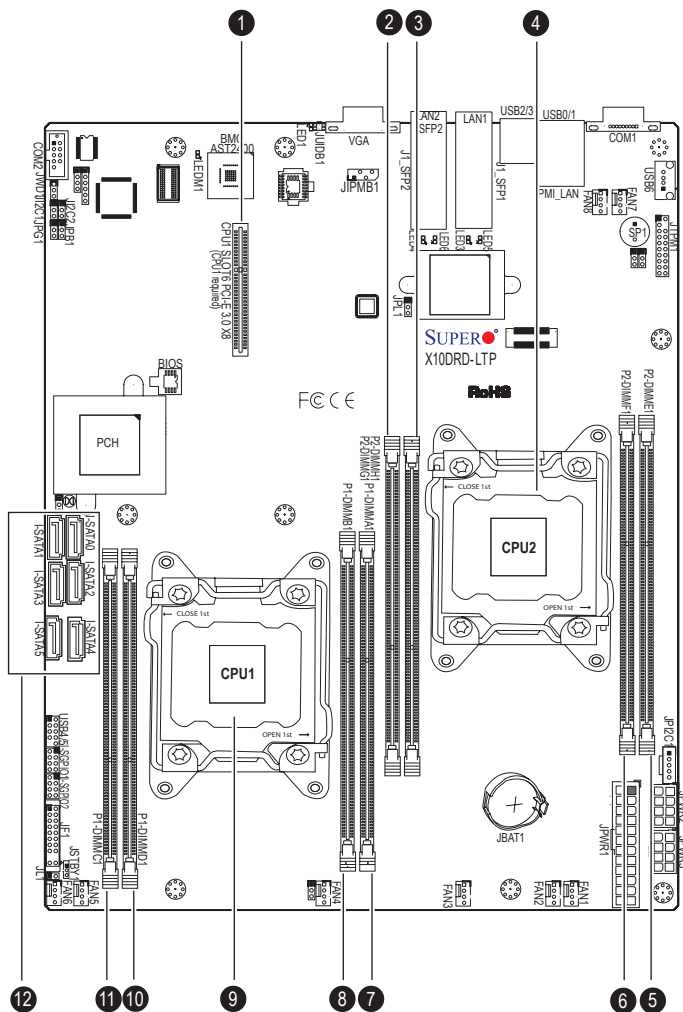

No.	Description
1	CPU1 Slot6 PCI-E 3.0 x8
2	P2-DIMMG1 slot
3	P2-DIMMH1 slot
4	CPU2
5	P2-DIMME1 slot
6	P2-DIMMF1 slot
7	P1-DIMMA1 slot
8	P1-DIMMB1 slot
9	CPU1 (Install CPU1 First)
10	P1-DIMMD1 slot
11	P1-DIMMC1 slot
12	I-SATA 0~5: SATA 3.0 Ports supported by Intel PCH (I-SATA 0~5)

Memory

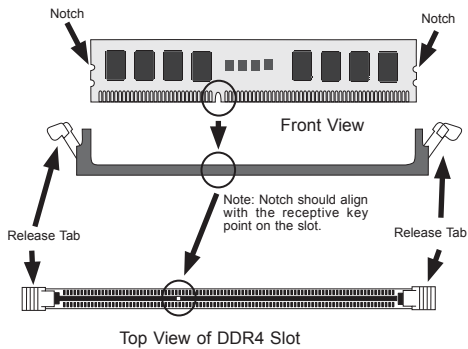

Processors and their Corresponding Memory Modules

CPU#	Corresponding DIMM Modules			
CPU 1	P1-DIMMA1	P1-DIMMB1	P1-DIMMC1	P1-DIMMD1
CPU 2	P2-DIMME1	P2-DIMMF1	P2-DIMMG1	P2-DIMMH1

Processor and Memory Module Population for Optimal Performance

Number of CPUs+DIMMs	CPU and Memory Population Configuration Table (For memory to work properly, please follow the instructions below.)
1 CPU & 2 DIMMs	CPU1 P1-DIMMA1/P1-DIMMB1
1 CPU & 4 DIMMs	CPU1 P1-DIMMA1/P1-DIMMB1, P1-DIMMC1/P1-DIMMD1
2 CPUs & 4 DIMMs	CPU1 + CPU2 P1-DIMMA1/P1-DIMMB1, P2-DIMME1/P2-DIMMF1
2 CPUs & 6 DIMMs	CPU1 + CPU2 P1-DIMMA1/P1-DIMMB1/P1-DIMMC1/P1-DIMMD1, P2-DIMME1/P2-DIMMF1
2 CPUs & 8 DIMMs	CPU1 + CPU2 P1-DIMMA1/P1-DIMMB1/P1-DIMMC1/P1-DIMMD1, P2-DIMME1/P2-DIMMF1/P2-DIMMG1/P2-DIMMH1


Populating RDIMM/LRDIMM DDR4 Memory Modules

Type	Ranks Per DIMM and Data Width	DIMM Capacity (GB)	Speed (MT/s); Voltage (V); Slots per Channel (SPC) and DIMMs per Channel (DPC)			
			1 Slot per Channel			
			1 DPC			
			E5-2600 V3		E5-2600 V4	
RDIMM	SRx4	8 GB	16 GB	1.2 V	2400	2400
RDIMM	SRx8	4 GB	8 GB	2133	2400	2400
RDIMM	DRx8	8 GB	16 GB	2133	2400	2400
RDIMM	DRx4	16 GB	32 GB	2133	2400	2400
LRDIMM	QRx4	32 GB	64 GB	2133	2400	2400
LRDIMM 3DS	8Rx4	64 GB	128 GB	2133	2400	2400

Beep Codes


Beep Code/LED	Message	Description
1 beep	Refresh	Ready to boot
5 short beeps + 1 long beep	Memory error	No memory detected in the system
5 beeps	No Con-In or No Con-Out devices	Con-In includes USB or PS/2 keyboard, PCI or Serial Console Redirection, IPMI KVM or SOL. Con-Out includes Video Controller, PCI or Serial Console Redirection, IPMI SOL.
1 beep per device	Refresh	1 beep or each USB device detected

Front View & Interface

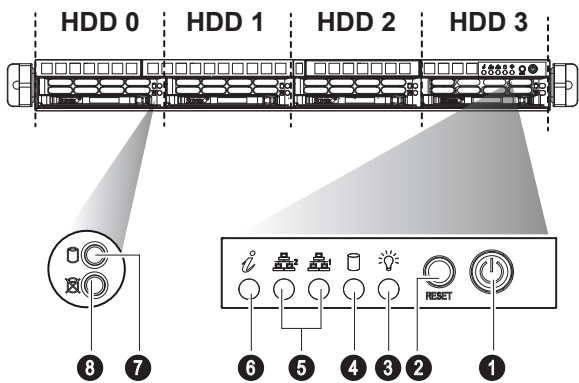


No.	Description
1	Power Button
2	Reset Button
3	Power LED
4	Device Activity LED
5	LAN1 LED & LAN2 LED
6	Information LED
7	Hard Drive Signal
8	Hard Drive Fail

Rear View

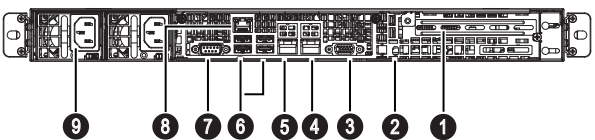


No.	Description
1	FHHL PCI-E Expansion Slot (CPU1)
2	UID
3	VGA Port
4	10Gb SFP+ LAN Port 2
5	10Gb SFP+ LAN Port 1
6	USB 2.0 Ports
7	COM1 Port
8	Dedicated LAN for IPMI
9	Redundant Power Supply Module

CPU Installation

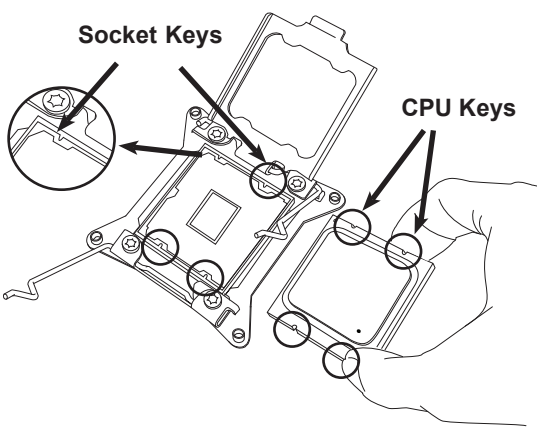

Heatsink Installation

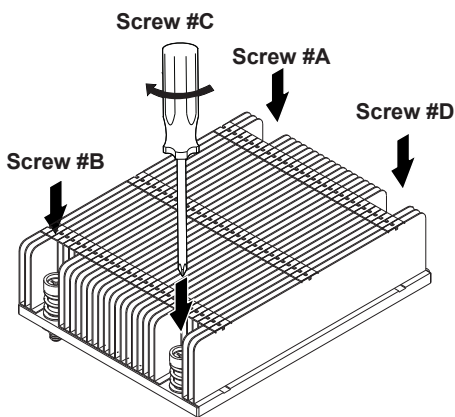

1. Place the heatsink on top of the installed CPU.
2. Align the four screws to the socket.
3. Holding the heatsink in place, screw down as shown (cross pattern, in order: A, C, B, D).
4. Note: Only use 6-8 lb/f of torque; otherwise, hand-tighten each screw to avoid damaging the CPU

Caution

SAFETY INFORMATION

IMPORTANT: See installation instructions and safety warning before connecting system to power supply.
http://www.supermicro.com/about/policies/safety_information.cfm

WARNING:

To reduce risk of electric shock/damage to equipment, disconnect power from server by disconnecting all power cords from electrical outlets.
If any CPU socket empty, install protective plastic CPU cap

CAUTION:

Always be sure all power supplies for this system have the same power output. If mixed power supplies are installed, the system will not operate.

For more information go to :
<http://www.supermicro.com/support>

