


SUPERMICR® SuperServer 6028R-WTR/WTRT Quick Reference Guide

Board Layout

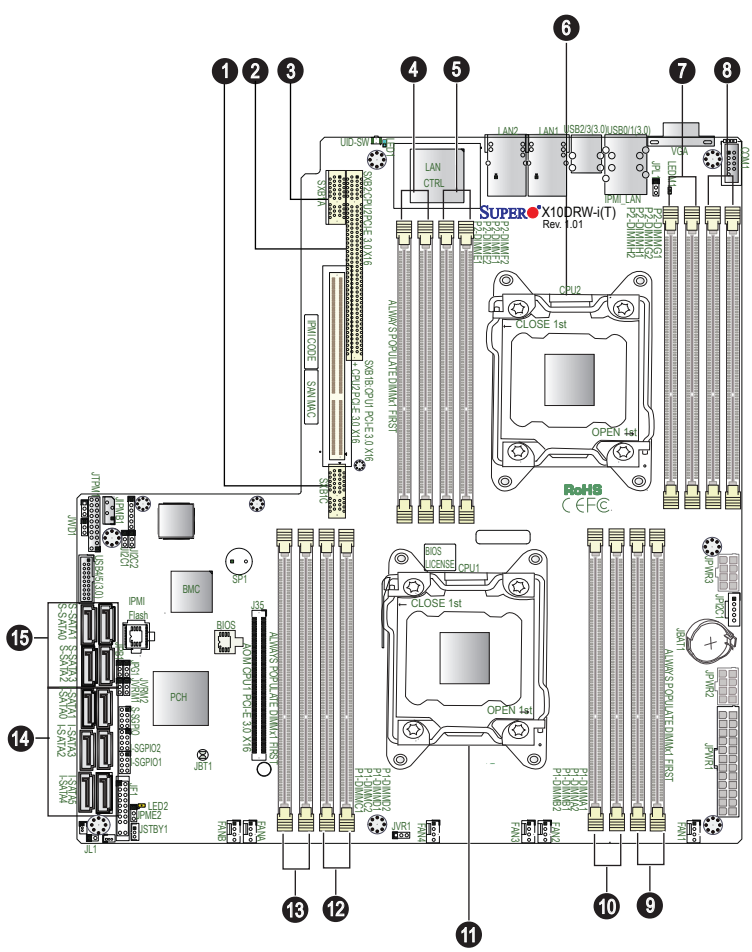

No.	Description
1	SXB1C: SMC-Proprietary SPEC slot (Left)
2	SXB1B : (CPU1/CPU2) PCI-E 3.0 x16 + x16 slot add-on card slot (Left)
3	SXB1A: SMC-Proprietary SPEC slot (Left)
4	P2-DIMME1(Blue)/P2-DIMME2 slot
5	P2-DIMMF1(Blue)/P2-DIMMF2 slot
6	CPU2
7	P2-DIMMG1(Blue)/P2-DIMMG2 slot
8	P2-DIMMH1(Blue)/P2-DIMMH2 slot
9	P1-DIMMA1(Blue)/P1-DIMMA2 slot
10	P1-DIMMB1(Blue)/P1-DIMMB2 slot
11	CPU1 (Install CPU1 first)
12	P1-DIMMD1(Blue)/P1-DIMMD2 slot
13	P1-DIMMC1(Blue)/P1-DIMMC2 slot
14	(I)-SATA 0~5: Intel SATA 3.0 connectors (0-5) from Intel PCH
15	(S)-SATA 0~3: SATA 3.0 connectors (0~3) from Intel SCU

Memory

Processors and their Corresponding Memory Modules								
CPU#	Corresponding DIMM Modules							
CPU 1	P1- DIMMA1	P1- DIMMB1	P1- DIMMC1	P1- DIMMD1	P1- DIMMA2	P1- DIMMB2	P1- DIMMC2	P1- DIMMD2
CPU2	P2- DIMME1	P2- DIMMF1	P2- DIMMG1	P2- DIMMH1	P2- DIMME2	P2- DIMMF2	P2- DIMMG2	P2- DIMMH2


Processor and Memory Module Population for Optimal Performance	
Number of CPUs+DIMMs	CPU and Memory Population Configuration Table (For memory to work properly, please follow the instructions below.)
1 CPU & 2 DIMMs	CPU1 P1-DIMMA1/P1-DIMMB1
1 CPU & 4 DIMMs	CPU1 P1-DIMMA1/P1-DIMMB1, P1-DIMMC1/P1-DIMMD1
1 CPU & 5~8 DIMMs	CPU1 P1-DIMMA1/P1-DIMMB1, P1-DIMMC1/P1-DIMMD1 + Any memory pairs in P1- DIMMA2/P1-DIMMB2/P1-DIMMC2/P1-DIMMD2 slots
2 CPUs & 4 DIMMs	CPU1 + CPU2 P1-DIMMA1/P1-DIMMB1, P2-DIMME1/P2-DIMMF1
2 CPUs & 6 DIMMs	CPU1 + CPU2 P1-DIMMA1/P1-DIMMB1/P1-DIMMC1/P1-DIMMD1, P2-DIMME1/P2-DIMMF1
2 CPUs & 8 DIMMs	CPU1 + CPU2 P1-DIMMA1/P1-DIMMB1/P1-DIMMC1/P1-DIMMD1, P2-DIMME1/P2-DIMMF1/P2- DIMMG1/P2-DIMMH1
2 CPUs & 9~16 DIMMs	CPU1/CPU2 P1-DIMMA1/P1-DIMMB1/P1-DIMMC1/P1-DIMMD1, P2-DIMME1/P2-DIMMF1/P2- DIMMG1/P2-DIMMH1 + Any memory pairs in P1, P2 DIMM slots
2 CPUs & 16 DIMMs	CPU1/CPU2 P1-DIMMA1/P1-DIMMB1/P1-DIMMC1/P1-DIMMD1, P2-DIMME1/P2-DIMMF1/ P2-DIMMG1/P2-DIMMH1,P1-DIMMA2/P1-DIMMB2/P1-DIMMC2/P1-DIMMD2, P2-DIMME2/P2-DIMMF2/P2-DIMMG2/P2-DIMMH2

Populating RDIMM/LRDIMM DDR4 Memory Modules							
Type	Ranks Per DIMM and Data Width	DIMM Capacity (GB)		Speed (MT/s); Voltage (V); Slots per Channel (SPC) and DIMMs per Channel (DPC)			
				2 Slots per Channel			
				1 DPC		2 DPC	
		E5-2600 V3	E5-2600 V4	E5-2600 V3	E5-2600 V4		
		4 Gb	8 Gb	1.2 V	1.2 V	1.2 V	1.2 V
RDIMM	SRx4	8 GB	16 GB	2133	2400	1866	2133
RDIMM	SRx8	4 GB	8 GB	2133	2400	1866	2133
RDIMM	DRx8	8 GB	16 GB	2133	2400	1866	2133
RDIMM	DRx4	16 GB	32 GB	2133	2400	1866	2133
LRDIMM	QRx4	32 GB	64 GB	2133	2400	2133	2400
LRDIMM 3DS	8Rx4	64 GB	128 GB	2133	2400	2133	2400

Beep Codes

Beep Code	Error Message	Description
1 beep	Refresh	Circuits have been reset (Ready to power up)
5 short beeps and 1 long beep	Memory error	No memory detected in the system
5 beeps	No Con-In or No Con-Out devices	Con-In: USB or PS/2 keyboard, PCI or Serial Console Redirection, IPMI KVM or SOL Con-Out: Video Controller, PCI or Serial Console Redirection, IPMI SOL
1 beep per device	Refresh	1 beep for each USB device


Front View & Interface

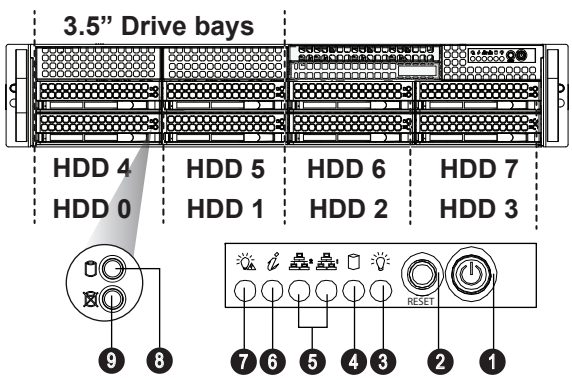

No.	Description	No.	Description
1	Power Button	6	Universal Information LED
2	Reset Button	7	Power Fail LED
3	Power LED	8	Hard Drive Signal
4	Device Activity LED	9	Hard Drive Fail
5	LAN1 LED & LAN2 LED		


Storage Interface		
Model	Hard Drive Bay	HDD 0~7
6028R-WTR		SATA
6028R-WTRT		SATA

Rear View

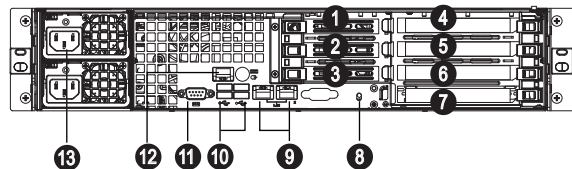


No.	Description
1	CPU2 Slot PCI-E 3.0x8; Low Profile (2.536"), Half Length (6.6")
2	CPU2 Slot PCI-E 3.0x8; Low Profile (2.536"), Half Length (6.6")
3	N/A
4	CPU2 Slot PCI-E 3.0x8; Full Height (4.2"), 13.5" Length
5	CPU2 Slot PCI-E 3.0x8; Full Height (4.2"), 13.5" Length
6	CPU1 Slot PCI-E 3.0x8; Full Height (4.2"), 6.6" Length
7	CPU1 Slot PCI-E 3.0x8; Full Height (4.2"), 6.6" Length
8	UID Button
9	LAN1/LAN2: G-bit Ethernet ports 1/2 for 6028R-WTR 10-bit Ethernet ports 1/2 for 6028R-WTRT
10	USB 3.0 (Port 0~ 3 Ports)
11	VGA Port
12	Dedicated LAN for IPMI
13	Redundant Power Supply Modules

CPU Installation

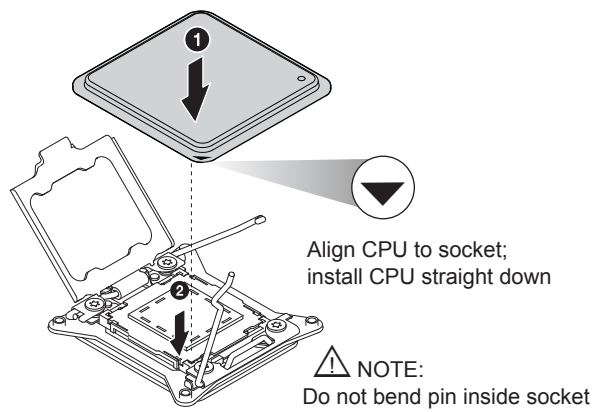

Heatsink Installation

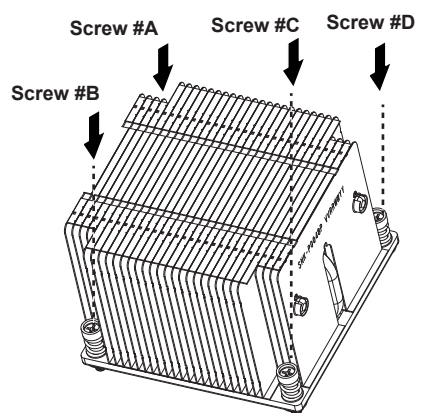

1. Place the heatsink on top of the installed CPU.
2. Align the four screws to the socket.
3. Holding the heatsink in place, screw down as shown (cross pattern, in order: A, C, B, D).
4. Note: Only use 6-8 lb/f of torque; otherwise, hand-tighten each screw to avoid damaging the CPU.

Caution

SAFETY INFORMATION
IMPORTANT: See installation instructions and safety warning before connecting system to power supply.
http://www.supermicro.com/about/policies/safety_information.cfm

WARNING
To reduce risk of electric shock/damage to equipment, disconnect power from server by disconnecting all power cords from electrical outlets.
If any CPU socket empty, install protective plastic CPU cap

CAUTION
Always be sure all power supplies for this system have the same power output. If mixed power supplies are installed, the system will not operate.

For more information go to :
<http://www.supermicro.com/support>

