


# SUPER<sup>®</sup> ●

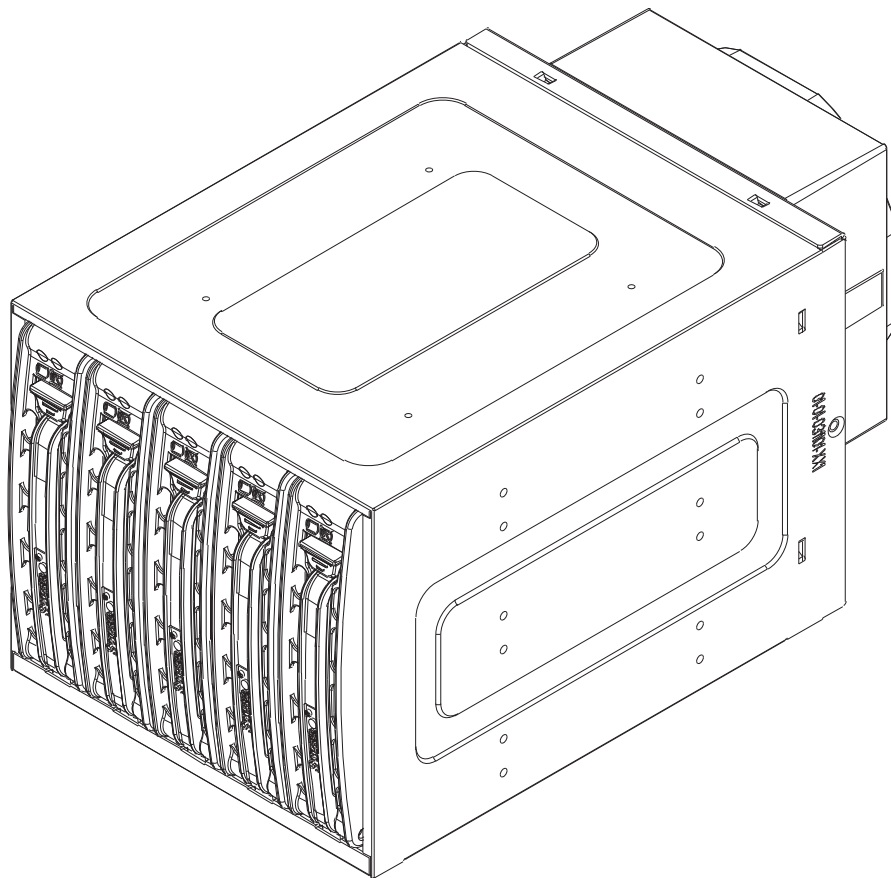

## **M35S and M35T1**

### **Mobile Rack**

### **USER'S GUIDE**

Rev. 1.0a

The information in this User's Manual has been carefully reviewed and is believed to be accurate. The vendor assumes no responsibility for any inaccuracies that may be contained in this document, makes no commitment to update or to keep current the information in this manual, or to notify any person or organization of the updates. **Please Note: For the most up-to-date version of this manual, please see our web site at [www.supermicro.com](http://www.supermicro.com).**

Super Micro Computer, Inc. ("Supermicro") reserves the right to make changes to the product described in this manual at any time and without notice. This product, including software and documentation, is the property of Supermicro and/or its licensors, and is supplied only under a license. Any use or reproduction of this product is not allowed, except as expressly permitted by the terms of said license.

IN NO EVENT WILL SUPERMICRO BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, SPECULATIVE OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OR INABILITY TO USE THIS PRODUCT OR DOCUMENTATION, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN PARTICULAR, SUPERMICRO SHALL NOT HAVE LIABILITY FOR ANY HARDWARE, SOFTWARE, OR DATA STORED OR USED WITH THE PRODUCT, INCLUDING THE COSTS OF REPAIRING, REPLACING, INTEGRATING, INSTALLING OR RECOVERING SUCH HARDWARE, SOFTWARE, OR DATA.

Any disputes arising between manufacturer and customer shall be governed by the laws of Santa Clara County in the State of California, USA. The State of California, County of Santa Clara shall be the exclusive venue for the resolution of any such disputes. Super Micro's total liability for all claims will not exceed the price paid for the hardware product.

California Best Management Practices Regulations for Perchlorate Materials: This Perchlorate warning applies only to products containing CR (Manganese Dioxide) Lithium coin cells. "Perchlorate Material-special handling may apply. See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate)"

---

**WARNING: Handling of lead solder materials used in this product may expose you to lead, a chemical known to the State of California to cause birth defects and other reproductive harm.**

---

Manual Revision 1.0a  
Release Date: August 6, 2010

Unless you request and receive written permission from Super Micro Computer, Inc., you may not copy any part of this document.

Information in this document is subject to change without notice. Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders.

Copyright © 2010 by Super Micro Computer, Inc.  
All rights reserved.

**Printed in the United States of America**

---

# Table of Contents

## ***Chapter 1 Introduction***

|     |                                        |     |
|-----|----------------------------------------|-----|
| 1-1 | Overview .....                         | 1-1 |
| 1-2 | Product Features .....                 | 1-1 |
|     | Operating Systems Supported .....      | 1-1 |
|     | System Monitoring .....                | 1-2 |
| 1-3 | An Important Note to the User.....     | 1-2 |
| 1-4 | Contacting Supermicro.....             | 1-3 |
| 1-5 | Returning Merchandise for Service..... | 1-4 |

## ***Chapter 2 SATA-M35 and SCA-M942 Backplane Specifications***

|     |                                             |     |
|-----|---------------------------------------------|-----|
| 2-1 | ESD Safety Guidelines .....                 | 2-1 |
| 2-2 | General Safety Guidelines .....             | 2-1 |
| 2-3 | Introduction to SATA-M35 and SCA-M942 ..... | 2-2 |

## ***Chapter 3 Backplane Connectors, Jumpers and LEDs***

|     |                                                     |     |
|-----|-----------------------------------------------------|-----|
| 3-1 | SATA-M35S Front Connectors and Jumpers.....         | 3-1 |
| 3-2 | Front Connectors and Pin Definitions.....           | 3-2 |
| 3-3 | SATA-M35S Front Jumpers and Pin Definitions.....    | 3-3 |
|     | Explanation of Jumpers .....                        | 3-4 |
| 3-4 | SCA-M942 Front Connectors and Jumpers.....          | 3-5 |
| 3-5 | SCA-M942 Front Connectors and Pin Definitions ..... | 3-6 |
| 3-6 | SCA-M942 Front Jumpers and Pin Definitions.....     | 3-7 |
|     | Explanation of Jumpers .....                        | 3-8 |

## ***Chapter 4 Mobile Rack Installation Procedures***

|     |                                                           |     |
|-----|-----------------------------------------------------------|-----|
| 4-1 | Tools Required .....                                      | 4-1 |
| 4-2 | Important Safety Guidelines.....                          | 4-1 |
| 4-3 | Installation Procedures.....                              | 4-2 |
|     | Removing Hard Drive Carriers from the Mobile Rack .....   | 4-2 |
|     | Installing Hard Drives into the Hard Drive Carriers ..... | 4-4 |
|     | Additional Optional Installation Information.....         | 4-9 |

**Notes**

# Chapter 1

## Introduction

### 1-1 Overview

This manual is written for system integrators, PC technicians and knowledgeable PC users who intend to integrate Supermicro's intelligent, highly expandable and cost-effective mobile rack solutions into their systems. It provides the user with detailed information for the installation and use of the M35S/M35T1 mobile rack.

The Supermicro M35S/M35T1 mobile rack Supermicro's CSE-M35S/CSE-M35T1 mobile rack series offers the cutting edge technology with greater flexibility. The CSE-M35T1 supports five Serial ATA hot-swappable hard drives that yield an unparalleled storage capacity without compromising productivity by eliminating possible system downtime. The CSE-M35S accommodates five SCSI SCA 320/160 hard drives which provide configuration flexibility and maximum data integrity.

### 1-2 Product Features

The M35S/M35T1 mobile rack includes the following features:

- Supports SCSI or SATA
- Supports five 3.5" hot-swappable HDDs or three 5.25" HDDs

#### Operating Systems Supported

For the most up-to-date information visit the Supermicro Web site at [www.supermicro.com](http://www.supermicro.com)

- Windows 2000, Windows XP, and Windows 2003
- Linux: Red Hat and SuSE

## **System Monitoring**

- Fan failure LED
- Overheat LED indicator
- Drive activity indicator

### **1-3 An Important Note to the User**

The pictures or graphics shown in this User's Guide were based upon the latest PCB revision available at the time of the publishing of this manual. The M35S/M35T1 mobile rack you've received may or may not look exactly the same as the graphics shown in this manual.

## 1-4 Contacting Supermicro

### Headquarters

Address: Super Micro Computer, Inc.  
980 Rock Ave.  
San Jose, CA 95131 U.S.A.

Tel: +1 (408) 503-8000

Fax: +1 (408) 503-8008

Email: [marketing@supermicro.com](mailto:marketing@supermicro.com) (General Information)  
[support@supermicro.com](mailto:support@supermicro.com) (Technical Support)

Web Site: [www.supermicro.com](http://www.supermicro.com)

### Europe

Address: Super Micro Computer B.V.  
Het Sterrenbeeld 28, 5215 ML  
's-Hertogenbosch, The Netherlands

Tel: +31 (0) 73-6400390

Fax: +31 (0) 73-6416525

Email: [sales@supermicro.nl](mailto:sales@supermicro.nl) (General Information)  
[support@supermicro.nl](mailto:support@supermicro.nl) (Technical Support)  
[rma@supermicro.nl](mailto:rma@supermicro.nl) (Customer Support)

### Asia-Pacific

Address: Super Micro Computer, Inc.  
4F, No. 232-1, Liancheng Rd.  
Chung-Ho 235, Taipei County  
Taiwan, R.O.C.

Tel: +886-(2) 8226-3990

Fax: +886-(2) 8226-3991

Web Site: [www.supermicro.com.tw](http://www.supermicro.com.tw)

Technical Support:

Email: [support@supermicro.com.tw](mailto:support@supermicro.com.tw)

Tel: 886-2-8226-1900

## **1-5 Returning Merchandise for Service**

A receipt or copy of your invoice marked with the date of purchase is required before any warranty service will be rendered. You can obtain service by calling your vendor for a Returned Merchandise Authorization (RMA) number. When returning to the manufacturer, the RMA number should be prominently displayed on the outside of the shipping carton, and mailed prepaid or hand-carried. Shipping and handling charges will be applied for all orders that must be mailed when service is complete.

For faster service, RMA authorizations may be requested online (<http://www.supermicro.com/support/rma/>).

Whenever possible, repack the mobile rack in the original Supermicro carton, using the original packaging material. If these are no longer available, be sure to pack the mobile rack securely, using packaging material to surround the mobile rack so that it does not shift within the carton and become damaged during shipping.

This warranty only covers normal consumer use and does not cover damages incurred in shipping or from failure due to the alteration, misuse, abuse or improper maintenance of products.

During the warranty period, contact your distributor first for any product problems.

## Chapter 2

### SATA-M35 and SCA-M942 Backplane Specifications

To avoid personal injury and property damage, carefully follow all the safety steps listed below when accessing your system or handling the components.

#### 2-1 ESD Safety Guidelines

Electrostatic Discharge (ESD) can damage electronic components. To prevent damage to your system, it is important to handle it very carefully. The following measures are generally sufficient to protect your equipment from ESD.

- Use a grounded wrist strap designed to prevent static discharge.
- Touch a grounded metal object before removing a component from the antistatic bag.
- Handle the backplane by its edges only; do not touch its components, peripheral chips, memory modules or gold contacts.
- When handling chips or modules, avoid touching their pins.
- Put the backplane and peripherals back into their antistatic bags when not in use.

#### 2-2 General Safety Guidelines

- Always disconnect power cables before installing or removing any components from the computer, including the mobile rack.
- Disconnect the power cable before installing or removing any cables from the mobile rack.
- Make sure that the mobile rack is securely and properly installed on the motherboard to prevent damage to the system due to power shortage.

## **2-3 Introduction to SATA-M35 and SCA-M942**

The M35S and M35T1 mobile racks include either a SATA or SCSI backplane. The M35S model comes equipped with an SCA-M942 SCSI backplane and the M35T1 comes equipped with a SATA-M35 Serial ATA (SATA) backplane. These backplanes are designed to utilize the most up-to-date technology available, providing your system with reliable, high-quality performance.

This manual reflects models SATA-M35 Revision 1.01 and SCA-M942 Revision 1.00, the most current release available at the time of publication. Always refer to the Supermicro Web site at [www.supermicro.com](http://www.supermicro.com) for the latest updates, compatible parts and supported configurations.

## Backplane Connectors, Jumpers and LEDs

The top view diagram shows the SuperSATA M35 module with various components labeled:

- JP18: BUZZER RESET**
- JP32: ACT OUT**
- JP28: FAN SENSE**
  - 1-2: ENABLE
  - 2-3: DISABLE
- JP25: CH TEMP.**
  - OPEN: 45°C
  - 1-2: 50°C
  - 2-3: 55°C
- SATA connectors:** Labeled 1 through 5 at the bottom edge.
- Fan header:** Labeled 6, 7, and 8 at the bottom edge.
- ACT IN header:** Labeled 9 at the bottom edge.
- Pin headers:** Labeled 1 through 5 along the right edge.

## Front Connectors

- 3-1

## 3-2 Front Connectors and Pin Definitions

### 1. Mobile Rack Main Power Connectors

The 4-pin power connectors provide power to the mobile rack. See the table on the right for pin definitions.

| Mobile rack<br>Main Power<br>4-Pin Connector |            |
|----------------------------------------------|------------|
| Pin#                                         | Definition |
| 1                                            | +12V       |
| 2 and 3                                      | Ground     |
| 4                                            | +5V        |

### 2. Activity LED Connector

The activity LED connector, designated JP26, is used to indicate the activity status of each hard drive. For the activity LED header to work properly, connect a SATA LED cable.

| Activity LED Connector |            |
|------------------------|------------|
| Pin#                   | Definition |
| Act1/LED1              | Channel 1  |
| Act2/LED2              | Channel 2  |
| Act3/LED3              | Channel 3  |
| Act4/LED4              | Channel 4  |
| Act5/LED5              | Channel 5  |

### 3. Fan Connector

The 3-pin connectors, designated JP22, provides power to the mobile rack fan. See the table on the right for pin definitions.

| Fan Connectors |            |
|----------------|------------|
| Pin#           | Definition |
| 1              | Ground     |
| 2              | +12V       |
| 3              | Tachometer |

### 4. - 8. SATA Ports

The SATA ports are used to connect the SATA drive cables. The five ports are designated Channel #1 - #4.

### 3-3 SATA-M35S Front Jumpers and Pin Definitions

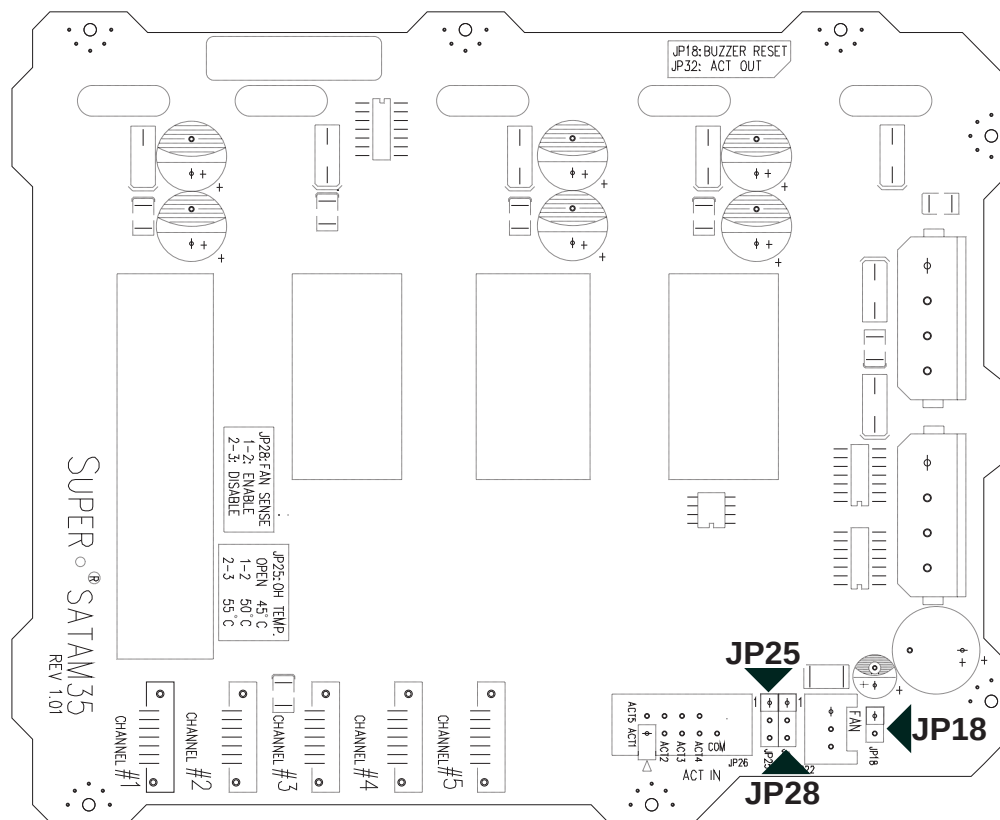


Figure 3-2: SATA-M35S Front Jumpers

| Jumper Settings |                                                                          |                                                                               |
|-----------------|--------------------------------------------------------------------------|-------------------------------------------------------------------------------|
| Jumper          | Jumper Settings                                                          | Note                                                                          |
| JP18            | Open (jumper off): Buzzer enabled<br>Closed (jumper on): Buzzer disabled | Buzzer reset*                                                                 |
| JP28            | 1-2: Fan enabled<br>2-3: Fan disabled                                    | Fan jumper                                                                    |
| JP25            | Open (jumper off): 45°C<br>1-2: 50°C<br>2-3: 55°C                        | Overheat temperature settings. Buzzer activated at the temperature indicated. |


\*The buzzer sound indicates that a condition requiring immediate attention has occurred.

**The buzzer alarm is triggered by the following conditions:**


1. Hard drive failure
2. Fan failure
3. System temperature over 45°, 50° or 55° Celsius.

**Explanation of Jumpers**

To modify the operation of the mobile rack, jumpers can be used to choose between optional settings. Jumpers create shorts between two pins to change the function of the connector. Pin 1 is identified with a square solder pad on the printed circuit board. Note: On two pin jumpers, "Closed" means the jumper is on and "Open" means the jumper is off the pins.

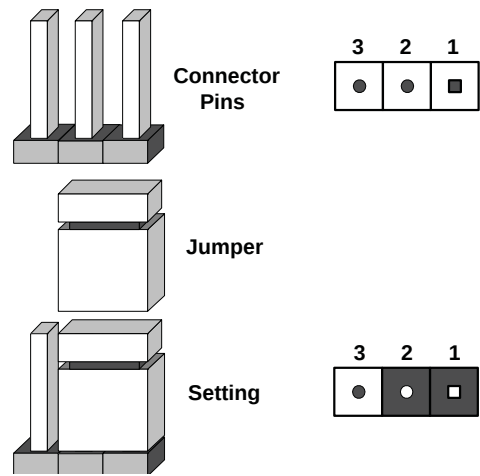

### 3-4 SCA-M942 Front Connectors and Jumpers

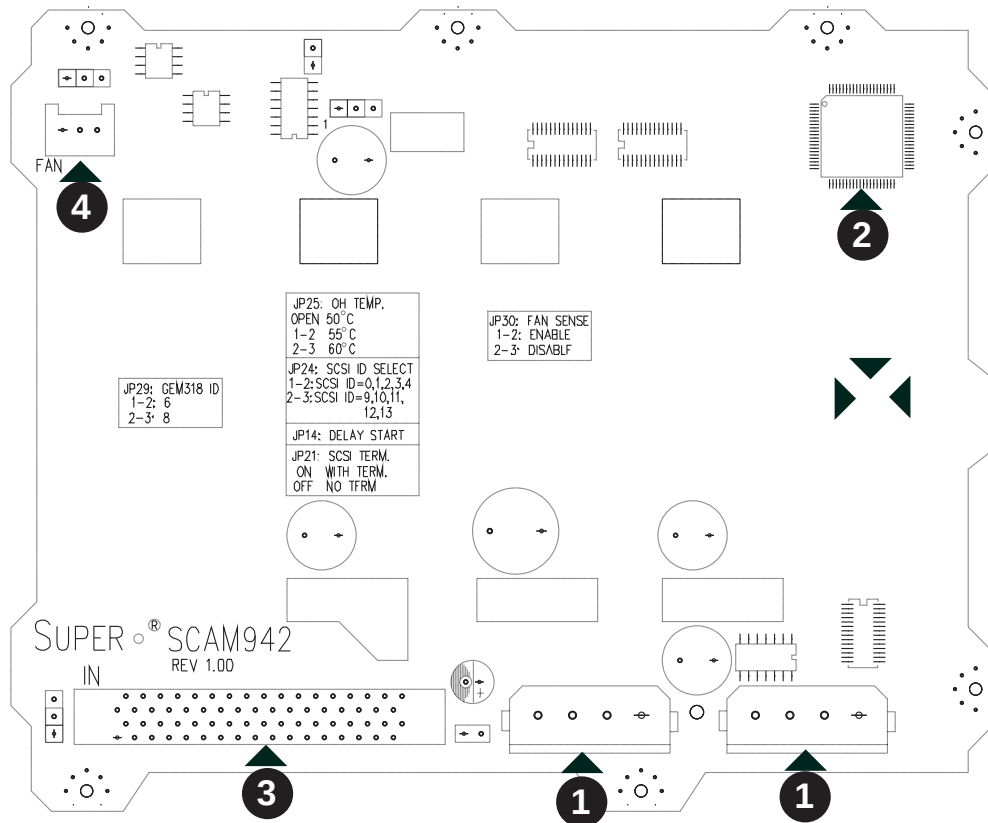

**Figure 3-3: SCA-M942 Front Connectors**

#### **Front Connectors**

1. 4-pin Power Connectors: JP10 and JP13
2. QLogic Gem 318 chip
3. 68-pin SCSI connector
4. Fan Connector: JP22

## 3-5 SCA-M942 Front Connectors and Pin Definitions

### 1. Mobile Rack Main Power Connectors

The 4-pin power connectors, designated JP10 and JP13, provide power to the mobile rack. See the table on the right for pin definitions.

| Mobile rack<br>Main Power<br>4-Pin Connector |            |
|----------------------------------------------|------------|
| Pin#                                         | Definition |
| 1                                            | +12V       |
| 2 and 3                                      | Ground     |
| 4                                            | +5V        |

### 2. QLogic GEM 318 Chip

The QLogic Gem 318 chip is an enclosure management chip that supports the SES-2 controller and SES-2 protocols.

### 3. SCSI Connector

The 68-pin SCSI connector allows a SCSI cable to be connected to the backplane.

### 4. Fan Connector

The 3-pin fan connector provides power to the mobile rack fan. See the table on the right for pin definitions.

| Fan Connectors |            |
|----------------|------------|
| Pin#           | Definition |
| 1              | Ground     |
| 2              | +12V       |
| 3              | Tachometer |

### 3-6 SCA-M942 Front Jumpers and Pin Definitions

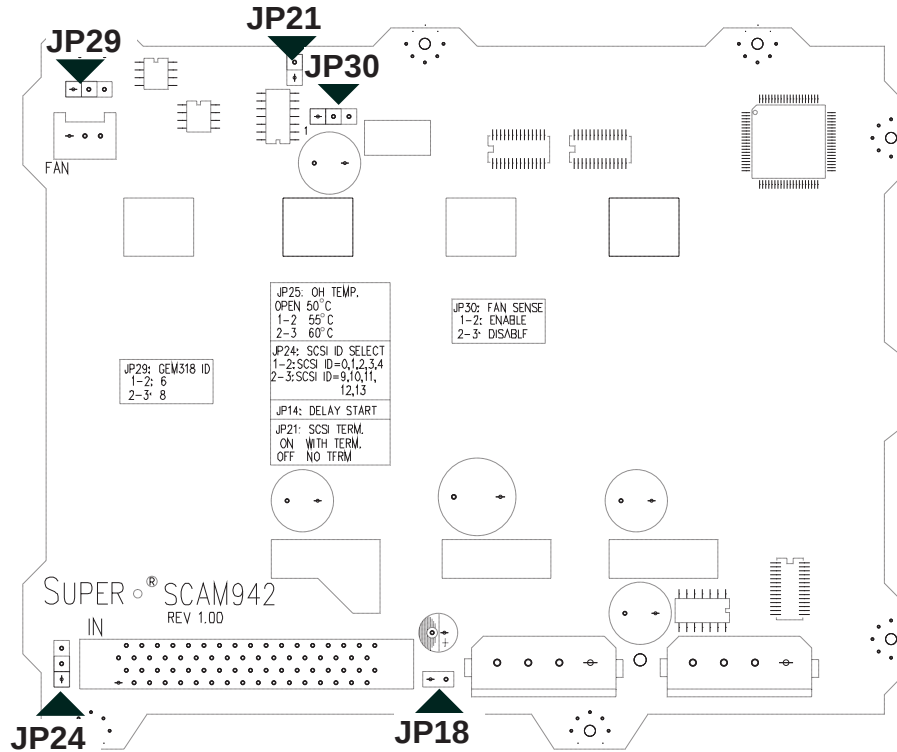


Figure 3-4: SCA-M942 Front Jumpers

| Jumper Settings |                                                                               |                   |
|-----------------|-------------------------------------------------------------------------------|-------------------|
| Jumper          | Jumper Settings                                                               | Note              |
| JP18            | Open (jumper off) Disabled (Default)<br>Close (jumper on) Enabled             | Buzzer reset*     |
| JP21            | Open (jumper off) Disabled<br>Close (jumper on) Enabled (Default)             | SCSI termination  |
| JP24            | 1-2: SCSI IDs 0,1,2,3,4 (Default)<br>2-3: SCSI IDs 9, 10, 11, 12, 13          | SCSI ID selection |
| JP29            | 1-2: ID6 (Default)<br>2-3: ID8                                                | GEM 318 IDs       |
| JP30            | 1-2: Enabled (Default) Alarm will sound if no fan is present<br>2-3: Disabled | Fan               |

\*The buzzer sound indicates that a condition requiring immediate attention has occurred.

**The buzzer alarm is triggered by the following conditions:**

1. Hard drive failure
2. Fan failure
3. System temperature over 45° Celsius.

## Chapter 4

### Mobile Rack Installation Procedures

#### 4-1 Tools Required

The following tools are required to install the mobile rack into the chassis:

- Phillips head screwdriver
- Antistatic strap (recommended)

#### 4-2 Important Safety Guidelines

This product should be assembled and/or serviced by qualified and experienced technicians. To avoid personal injury and property damage, carefully follow the guidelines listed below.

##### ***Safety Guidelines***

1. Turn off all peripheral devices and the power supply connected to the chassis.
2. Disconnect the chassis from any power source.
3. When disconnecting cables, label them for easy identification.
4. Use a grounded wrist strap designed to prevent static discharge when handling components.
5. Save all the screws and fasteners for later use and label them for easy identification.)
6. Follow the installation procedures in the following section of this manual to remove and install the hard drives, cooling fan, and the back panel of the mobile rack.



**Warning! Enterprise level hard disk drives are recommended for use in Supermicro chassis and servers. For information on recommended HDDs, visit the Supermicro Web site at <http://www.supermicro.com/products/nfo/storage.cfm>**

## 4-3 Installation Procedures

Use the following installation procedures to set up the mobile rack.




**WARNING!**

SAS IDs are assigned automatically by the backplane. Do not set ID's manually on the drives.

SAS termination is enabled by default on the SAS backplane.

### Removing Hard Drive Carriers from the Mobile Rack


The hard drives of the M35S and M35T1 mobile racks are mounted in drive carriers to simplify their installation and removal from the chassis. These carriers also help to promote proper airflow within the mobile rack drive bays.

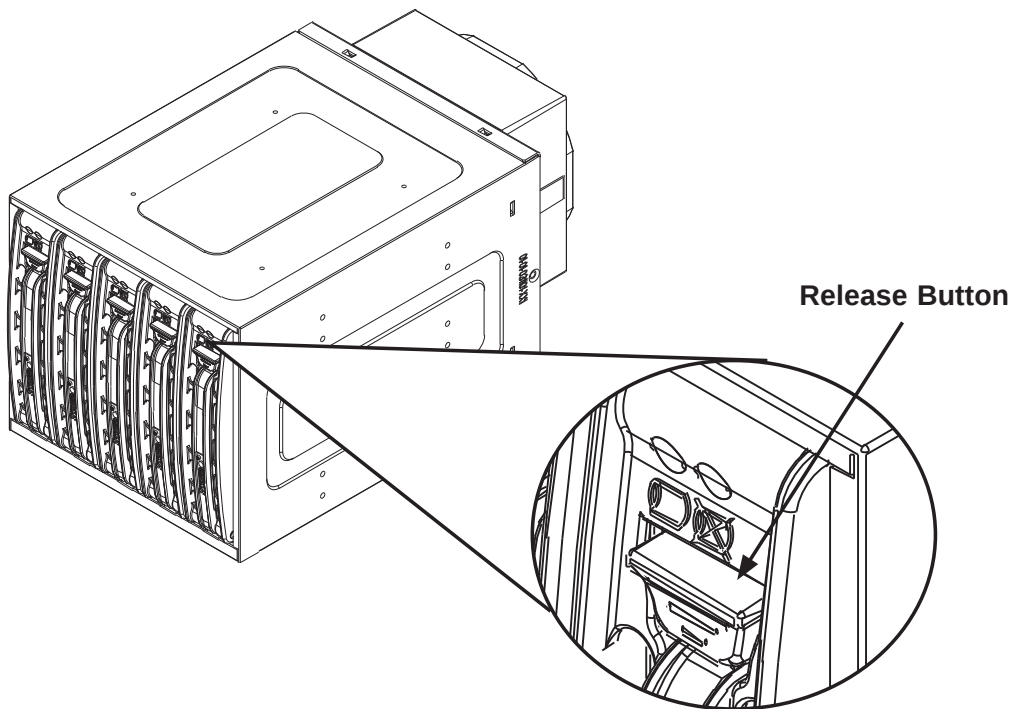

**Figure 4-1: Hard Drive Carrier Release Button**

#### ***Removing Hard Drive Carriers from the Mobile Rack***

1. Push the release button on the hard drive carrier, which will extend the drive handle.

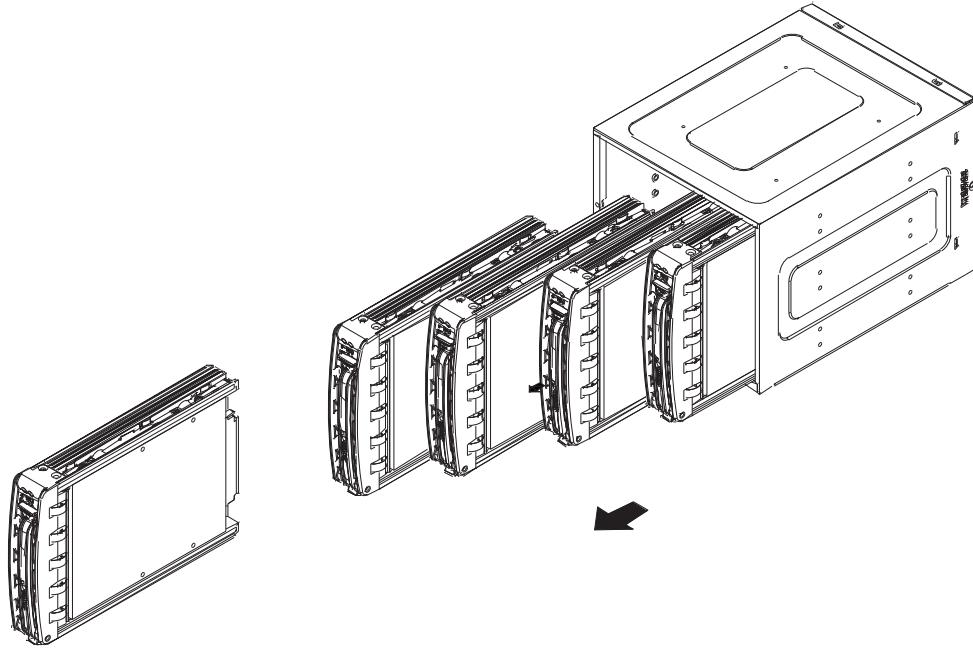

**Figure 4-2: Removing Hard Drives From the Mobile Rack**

2. Use the drive handle to carefully pull the drive from the mobile rack.

## Installing Hard Drives into the Hard Drive Carriers

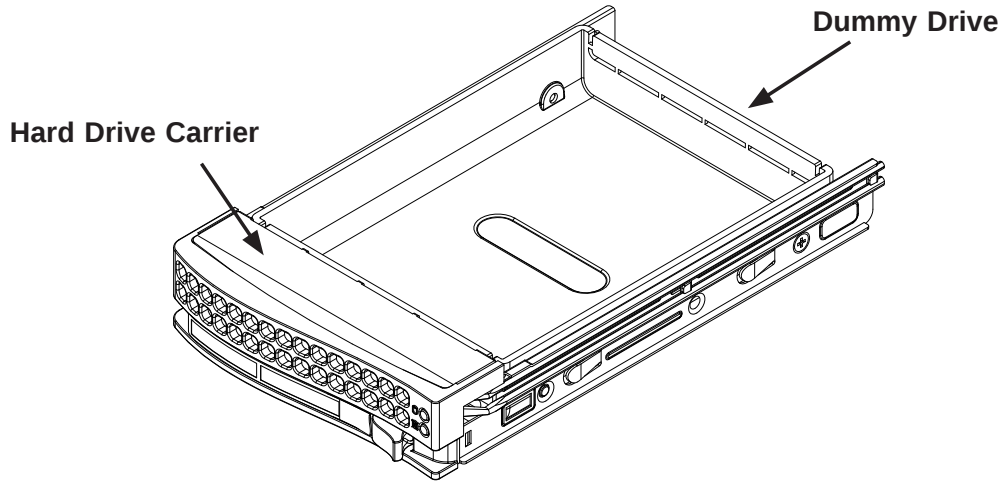


Figure 4-3: The Hard Drive Carrier and Dummy Drive



**Warning:** Except for short periods of time while swapping hard drives, do not operate the server with the mobile rack hard drive bays empty. The hard drive carrier must have a hard drive or dummy drive installed.


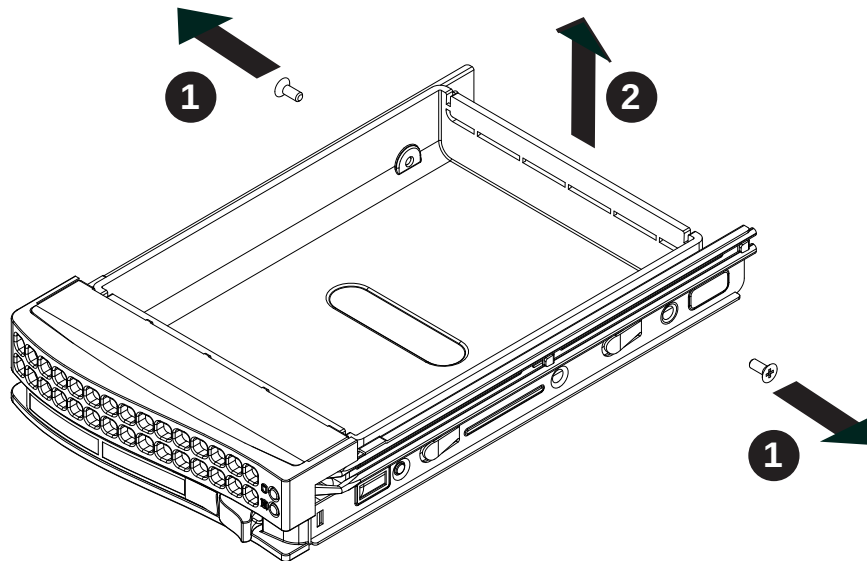


Figure 4-3: Removing the Dummy Drive from the Hard Drive Carrier

### *Installing a Hard Drive into the Hard Drive Carrier*

1. Remove the two screws holding securing the dummy drive to the hard drive carrier.
2. Remove the dummy drive from the hard drive carrier.

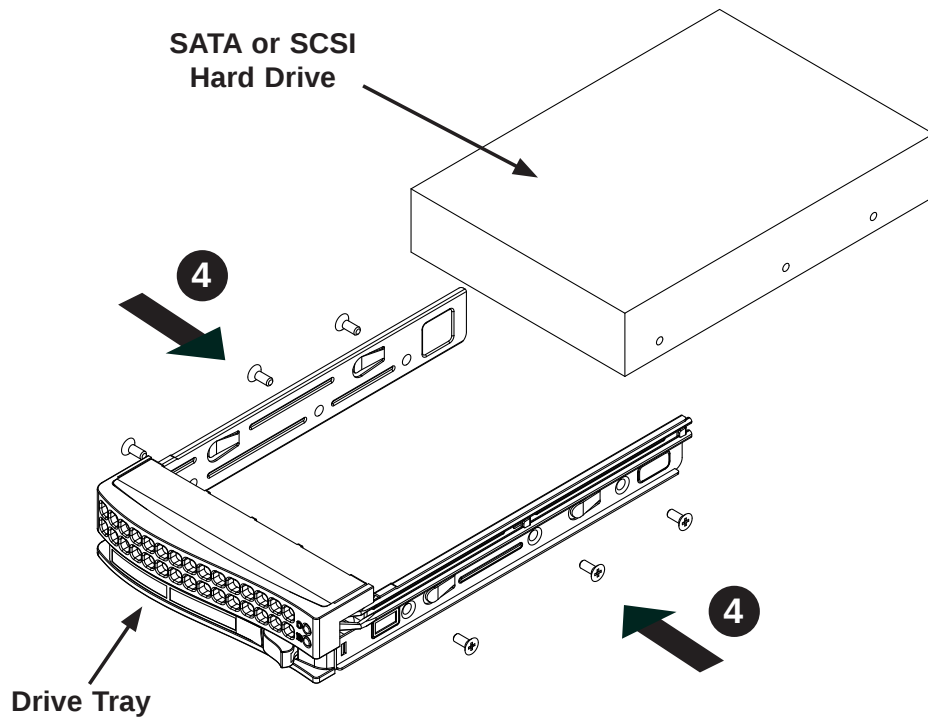


**Figure 4-4: Installing the Hard Drive into the Hard Drive Carrier**

3. Install a new hard drive into the hard drive carrier with the printed circuit board side facing downward so that the mounting holes in the hard drive align with those in the hard drive carrier.
4. Secure the hard drive to the hard drive carrier with the six screws provided.
5. Return the hard drive carrier to the mobile rack. Make sure that the hard drive carrier handle is returned to the closed and locked position. Repeat these steps for each hard drive to be installed.

## Connecting Cables to the Mobile Rack


Before connecting cables to the mobile rack, the exhaust fan must be removed. In some circumstances, the backplane may need to be removed.

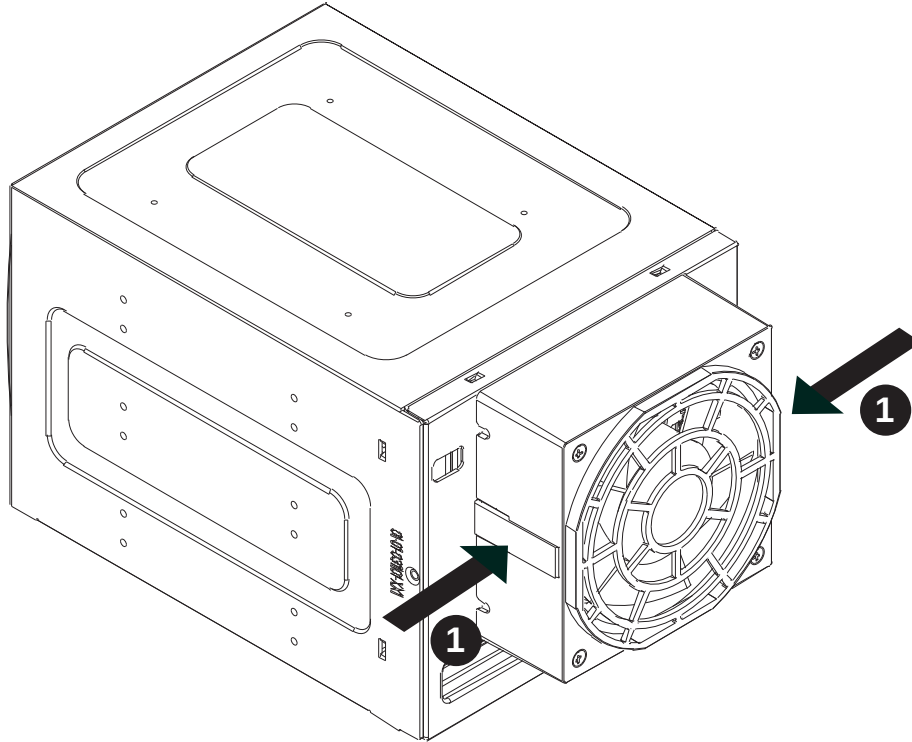

**Figure 4-5: Removing Mobile Rack Fan**


### ***Removing the Exhaust Fan and Connecting Cables***

1. Simultaneously press inward on the tabs on each side of the fan housing.

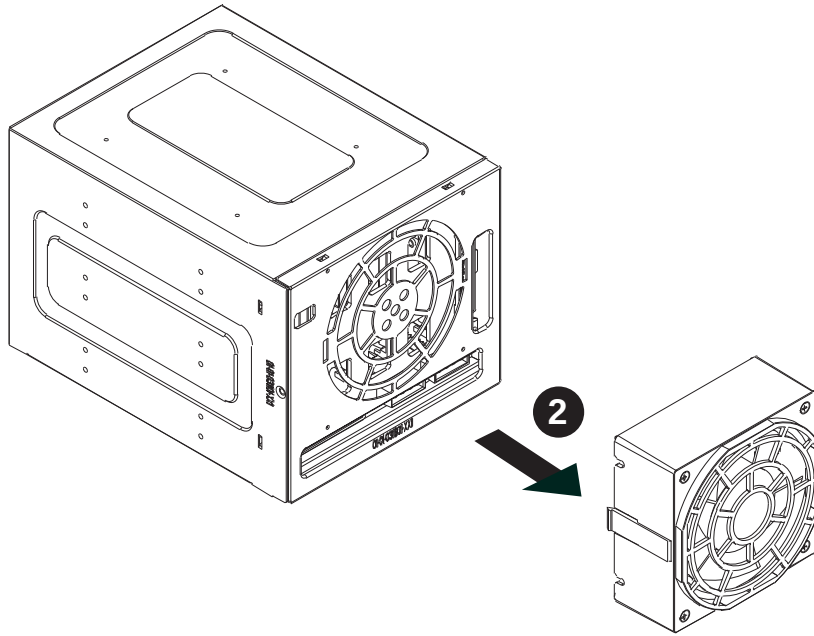


**Figure 4-6: Removing Mobile Rack Fan**

2. Pull the exhaust fan off the rear of the mobile rack.

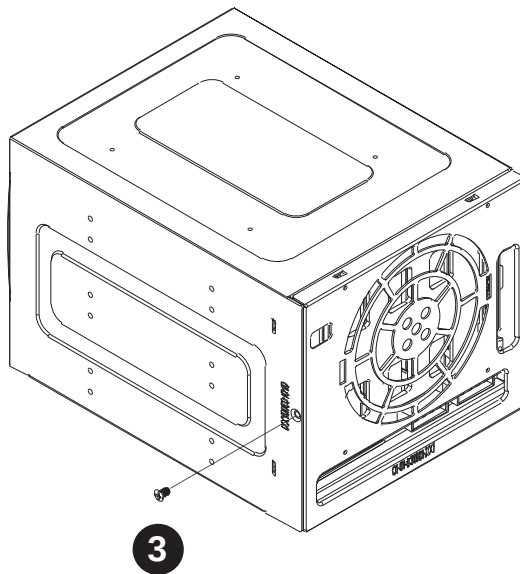


**Figure 4-7: Removing the Bracket Screw**

3. Remove the bracket screw from the side of the mobile rack.

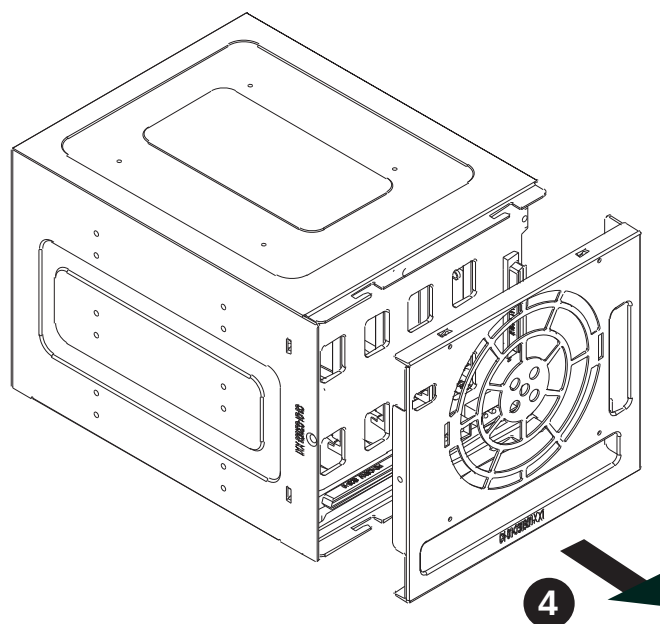

**Figure 4-8: Removing Mobile Rack Bracket**

4. Pull the bracket from the rear of the mobile rack.
5. Connect the SATA cables and power cables to the backplane of the mobile rack.
6. Replace the bracket, bracket screw, and fan on the mobile rack and reconnect power to the chassis.

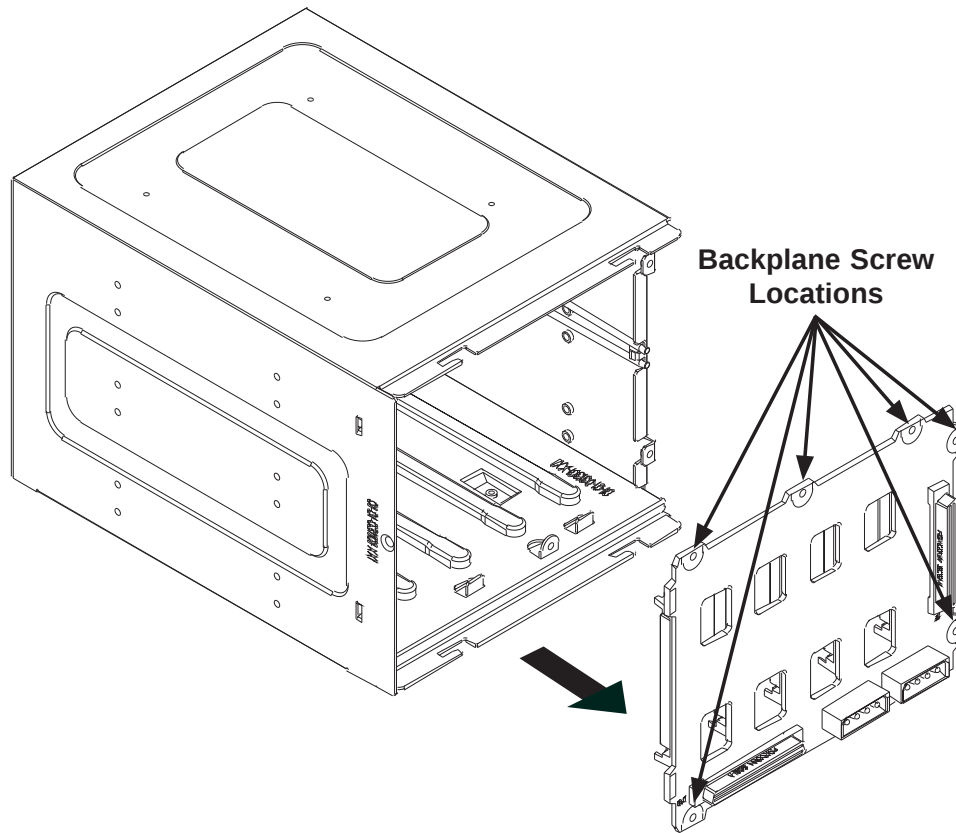

**Figure 4-9: Removing the Mobile Rack Backplane (Optional)**

### **Additional Optional Installation Information**

If necessary, before reassembling the mobile rack, the backplane may be removed. To remove the mobile rack backplane, remove the six screws securing the backplane to the mobile rack. Carefully pull the backplane from the rear of the mobile rack.

Disclaimer (cont.)

The products sold by Supermicro are not intended for and will not be used in life support systems, medical equipment, nuclear facilities or systems, aircraft, aircraft devices, aircraft/emergency communication devices or other critical systems whose failure to perform be reasonably expected to result in significant injury or loss of life or catastrophic property damage. Accordingly, Supermicro disclaims any and all liability, and should buyer use or sell such products for use in such ultra-hazardous applications, it does so entirely at its own risk. Furthermore, buyer agrees to fully indemnify, defend and hold Supermicro harmless for and against any and all claims, demands, actions, litigation, and proceedings of any kind arising out of or related to such ultra-hazardous use or sale.