



# SuperServer<sup>®</sup> ARS-221GL-NHIR



USER'S MANUAL

Revision 1.0b

The information in this User's Manual has been carefully reviewed and is believed to be accurate. The vendor assumes no responsibility for any inaccuracies that may be contained in this document, and makes no commitment to update or to keep current the information in this manual, or to notify any person or organization of the updates. Please Note: For the most up-to-date version of this manual, please see our website at [www.supermicro.com](http://www.supermicro.com).

Super Micro Computer, Inc. ("Supermicro") reserves the right to make changes to the product described in this manual at any time and without notice. This product, including software and documentation, is the property of Supermicro and/or its licensors, and is supplied only under a license. Any use or reproduction of this product is not allowed, except as expressly permitted by the terms of said license.

IN NO EVENT WILL Super Micro Computer, Inc. BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, SPECULATIVE OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OR INABILITY TO USE THIS PRODUCT OR DOCUMENTATION, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN PARTICULAR, SUPER MICRO COMPUTER, INC. SHALL NOT HAVE LIABILITY FOR ANY HARDWARE, SOFTWARE, OR DATA STORED OR USED WITH THE PRODUCT, INCLUDING THE COSTS OF REPAIRING, REPLACING, INTEGRATING, INSTALLING OR RECOVERING SUCH HARDWARE, SOFTWARE, OR DATA.

Any disputes arising between manufacturer and customer shall be governed by the laws of Santa Clara County in the State of California, USA. The State of California, County of Santa Clara shall be the exclusive venue for the resolution of any such disputes. Supermicro's total liability for all claims will not exceed the price paid for the hardware product.

FCC Statement: This equipment has been tested and found to comply with the limits for a Class A or Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in industrial environment for Class A device or in residential environment for Class B device. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer's instruction manual, may cause harmful interference with radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case you will be required to correct the interference at your own expense.

California Best Management Practices Regulations for Perchlorate Materials: This Perchlorate warning applies only to products containing CR (Manganese Dioxide) Lithium coin cells. "Perchlorate Material-special handling may apply. See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate)".



WARNING: This product can expose you to chemicals including lead, known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

The products sold by Supermicro are not intended for and will not be used in life support systems, medical equipment, nuclear facilities or systems, aircraft, aircraft devices, aircraft/emergency communication devices or other critical systems whose failure to perform be reasonably expected to result in significant injury or loss of life or catastrophic property damage. Accordingly, Supermicro disclaims any and all liability, and should buyer use or sell such products for use in such ultra-hazardous applications, it does so entirely at its own risk. Furthermore, buyer agrees to fully indemnify, defend and hold Supermicro harmless for and against any and all claims, demands, actions, litigation, and proceedings of any kind arising out of or related to such ultra-hazardous use or sale.

Manual Revision 1.0b

Release Date: February 04, 2026

Unless you request and receive written permission from Super Micro Computer, Inc., you may not copy any part of this document. Information in this document is subject to change without notice. Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders.

Copyright © 2026 by Super Micro Computer, Inc.  
All rights reserved.

**Printed in the United States of America**

---

---

# Preface

## About this Manual

This manual is written for professional system integrators and PC technicians. It provides information for the installation and use of the server. Installation and maintenance should be performed by certified service technicians only.

Please refer to the ARS-221GL-NHIR server specifications page on our website for updates on supported memory, processors, and operating systems (<http://www.supermicro.com>).

## Notes

For your system to work properly, please follow the links below to download all necessary drivers/utilities and the user's manual for your server.

- Supermicro product manuals: <http://www.supermicro.com/support/manuals/>
- Product drivers and utilities: <https://www.supermicro.com/wdl>
- Product safety info: [http://www.supermicro.com/about/policies/safety\\_information.cfm](http://www.supermicro.com/about/policies/safety_information.cfm)

If you have any questions, please contact our support team at:  
[support@supermicro.com](mailto:support@supermicro.com)

This manual may be periodically updated without notice. Please check the Supermicro website for possible updates to the manual revision level.

## Secure Data Deletion

A secure data deletion tool designed to fully erase all data from storage devices can be found on our website: [https://www.supermicro.com/about/policies/disclaimer.cfm?url=/wdl/utility/Lot9\\_Secure\\_Data\\_Deletion\\_Utility/](https://www.supermicro.com/about/policies/disclaimer.cfm?url=/wdl/utility/Lot9_Secure_Data_Deletion_Utility/)

## Warnings

Special attention should be given to the following symbols used in this manual.



**Warning!** Indicates important information given to prevent equipment/property damage or personal injury.



**Warning!** Indicates high voltage may be encountered when performing a procedure.



**Warning!** Indicates hazardous moving parts may be encountered while handling a fan or components near a fan.

# Contents

Contacting Supermicro.....	7
<b>Chapter 1 Introduction</b>	
1.1 Overview.....	8
1.2 System Features .....	9
Front View .....	9
NVMe SSD Drive Indicators .....	10
Power Supply Indicators.....	10
Control Panel.....	11
Rear View.....	13
Top View.....	14
Grace Hopper Superchip GH200 NVL2.....	15
1.3 Motherboard Layout .....	16
Quick Reference Table.....	17
Motherboard Block Diagram .....	19
<b>Chapter 2 Server Installation</b>	
2.1 Overview.....	20
2.2 Preparing for Setup.....	20
Choosing a Setup Location.....	20
Rack Precautions .....	20
System/Chassis Precautions.....	21
Rack Mounting Considerations .....	21
Ambient Operating Temperature.....	22
Airflow .....	22
Mechanical Loading.....	22
Circuit Overloading .....	22
Reliable Ground.....	22
2.3 Installing the System into a Rack.....	23
Separating the Sections of the Rack Rails .....	23
Releasing the Inner Rail.....	24
Installing the Inner Rails on the Chassis .....	25
Installing the Outer Rails on the Rack.....	26
Installing into the Rack.....	27
Removing the Chassis from the Rack .....	28

Removing the Outer Rails from the Rack.....	29
<b>Chapter 3 Maintenance and Component Installation</b>	
3.1 Removing Power .....	30
3.2 Accessing the System.....	31
3.3 Processor and Heatsink Installation.....	32
3.4 Memory Support.....	37
Memory Support.....	37
3.5 Motherboard Battery Removal and Installation.....	38
3.6 Storage Drives.....	39
Installing Drives.....	39
3.7 System Cooling .....	40
Fans .....	40
Air Shroud .....	41
3.8 Power Supply .....	42
Power Supply LEDs.....	42
<b>Chapter 4 Motherboard Connections</b>	
4.1 Power Connections .....	44
Power Connections .....	44
4.2 Headers and Connectors .....	46
Front Control Panel .....	49
4.3 I/O Ports .....	52
4.4 LED Indicators.....	53
<b>Chapter 5 Software</b>	
5.1 Ubuntu® Server 22.04 ISO Installation.....	55
5.2 SuperDoctor® 5.....	70
5.3 IPMI .....	70
<b>Chapter 6 Optional Components</b>	
6.1 Optional Parts List.....	71
6.2 TPM Security Module.....	71
<b>Chapter 7 Troubleshooting and Support</b>	
7.1 Online Resources.....	72
Direct Links for the ARS-221GL-NHIR System .....	72
Direct Links for General Support and Information .....	72
7.2 Baseboard Management Controller (BMC).....	73
7.3 Troubleshooting Procedures .....	74

---

---

No Power .....	74
No Video .....	74
System Boot Failure .....	74
Losing the System's Setup Configuration .....	74
When the System Becomes Unstable .....	75
7.4 BIOS Load Default .....	76
7.5 Where to Get Replacement Components .....	77
7.6 Technical Support Procedures .....	77
Returning Merchandise for Service.....	78
7.7 Feedback.....	78
7.8 Contacting Supermicro.....	79
<b><i>Appendix A Standardized Warning Statements for AC Systems</i></b>	
<b><i>Appendix B System Specifications</i></b>	

## Contacting Supermicro

### Headquarters

Address: Super Micro Computer, Inc.  
980 Rock Ave.  
San Jose, CA 95131 U.S.A.

Tel: +1 (408) 503-8000

Fax: +1 (408) 503-8008

Email: [marketing@supermicro.com](mailto:marketing@supermicro.com) (General Information)  
[Sales-USA@supermicro.com](mailto:Sales-USA@supermicro.com) (Sales Inquiries)  
[Government\\_Sales-USA@supermicro.com](mailto:Government_Sales-USA@supermicro.com) (Gov. Sales Inquiries)  
[support@supermicro.com](mailto:support@supermicro.com) (Technical Support)  
[RMA@supermicro.com](mailto:RMA@supermicro.com) (RMA Support)  
[Webmaster@supermicro.com](mailto:Webmaster@supermicro.com) (Webmaster)

Website: [www.supermicro.com](http://www.supermicro.com)

### Europe

Address: Super Micro Computer B.V.  
Het Sterrenbeeld 28, 5215 ML  
's-Hertogenbosch, The Netherlands

Tel: +31 (0) 73-6400390

Fax: +31 (0) 73-6416525

Email: [Sales\\_Europe@supermicro.com](mailto:Sales_Europe@supermicro.com) (Sales Inquiries)  
[Support\\_Europe@supermicro.com](mailto:Support_Europe@supermicro.com) (Technical Support)  
[RMA\\_Europe@supermicro.com](mailto:RMA_Europe@supermicro.com) (RMA Support)

Website: [www.supermicro.nl](http://www.supermicro.nl)

### Asia-Pacific

Address: Super Micro Computer, Inc.  
3F, No. 150, Jian 1st Rd.  
Zhonghe Dist., New Taipei City 235  
Taiwan (R.O.C)

Tel: +886-(2) 8226-3990

Fax: +886-(2) 8226-3992

Email: [Sales-Asia@supermicro.com.tw](mailto:Sales-Asia@supermicro.com.tw) (Sales Inquiries)  
[Support@supermicro.com.tw](mailto:Support@supermicro.com.tw) (Technical Support)  
[RMA@supermicro.com.tw](mailto:RMA@supermicro.com.tw) (RMA Support)

Website: [www.supermicro.com.tw](http://www.supermicro.com.tw)

# Chapter 1

## Introduction

### 1.1 Overview

This chapter provides an outline of the functions and features of the SuperServer ARS-221GL-NHIR. This is a high-density system with two NVIDIA GH200 NVL2 Grace Hopper Superchips, ideal for AI and HPC applications. The following provides an overview of the specifications and capabilities of the system.

System Overview	
<b>Motherboard</b>	G2DMH-GI
<b>Chassis</b>	CSE-MG202TS-R000NDFP
<b>Superchip</b>	Two NVIDIA GH200 NVL2 Grace Hopper Superchips
<b>Memory</b>	Embedded 960 GB GB ECC LPDDR5 Embedded 288 GB of HBM3e
<b>Storage</b>	Two M.2 NVMe SSDs Three E1.S drives in eight E1.S NVMe drive slots
<b>Expansion Slots</b>	Three PCIe 5.0 x16 slots supporting x16 signals One PCIe 5.0 x16 slot supporting a x4 signal
<b>I/O Ports</b>	One RJ45 1 GbE Dedicated IPMI LAN port One USB 3.0 port One Mini DisplayPort
<b>System Cooling</b>	Six heavy-duty 6-cm fans with optimal fan speed control
<b>Power</b>	Four 2000 W Redundant (2 + 2) Titanium Level power supplies
<b>Form Factor</b>	2U: 43.84 cm x 8.7 cm x 90 cm (17.26" x 3.43" x 35.43") (W x H x D)

**Notes:** A Quick Reference Guide can be found on the product page of the Supermicro website. The following safety models associated with the ARS-221GL-NHIR have been certified as compliant with UL and CSA: MG202-Q20G2, MG202-GH200.

## 1.2 System Features

The following views of the system display the main features. Refer to [Appendix B](#) for additional specifications.

### Front View

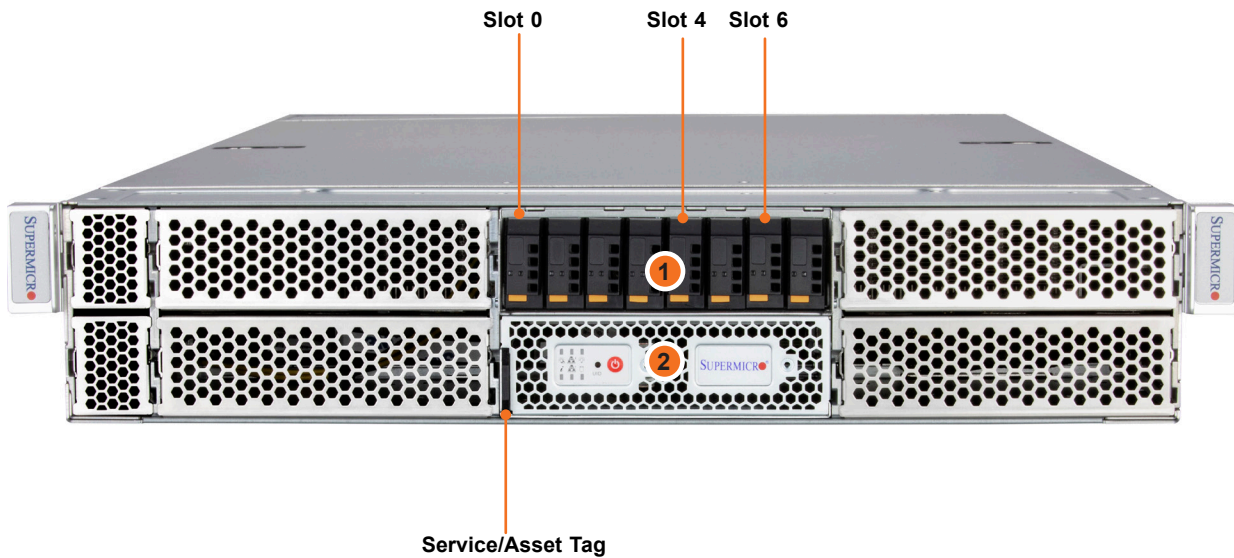


Figure 1-1. Front View

System Features: Front		
Feature	Feature	Description
1	EDSFF Storage	Three EDSFF E1.S storage slots (Slot 0, Slot 4, and Slot 6) supported on the front of the chassis.
2	Control Panel	One control panel

### ***NVMe SSD Drive Indicators***

Each E1.S NVMe SSD drive has two LED indicators: an activity indicator and a status indicator.

<b>LED Indicators</b>		
<b>LED</b>	<b>Blinking Pattern</b>	<b>Behavior for Device</b>
Green Activity LED	Blinking at 2 Hz	I/O activity
	Solid On	Idle NVMe drive installed
Amber Status LED	Blinking at 1 Hz	Initial detection of E1.S. Do not remove NVMe drive.

### ***Power Supply Indicators***

<b>Power Supply Indicators</b>	
<b>LED Color and State</b>	<b>Power Supply Condition</b>
Solid Green	Indicates that the power supply is on
Blinking Green	Indicates that the power supply is plugged in and turned off by the system.
Blinking Amber	Indicates that the power supply has a warning condition and continues to operate.
Solid Amber	Indicates that the power supply is plugged in, and is in an abnormal state. The system might need service. Please contact Supermicro technical support.
Off	No AC power to modules

## Control Panel

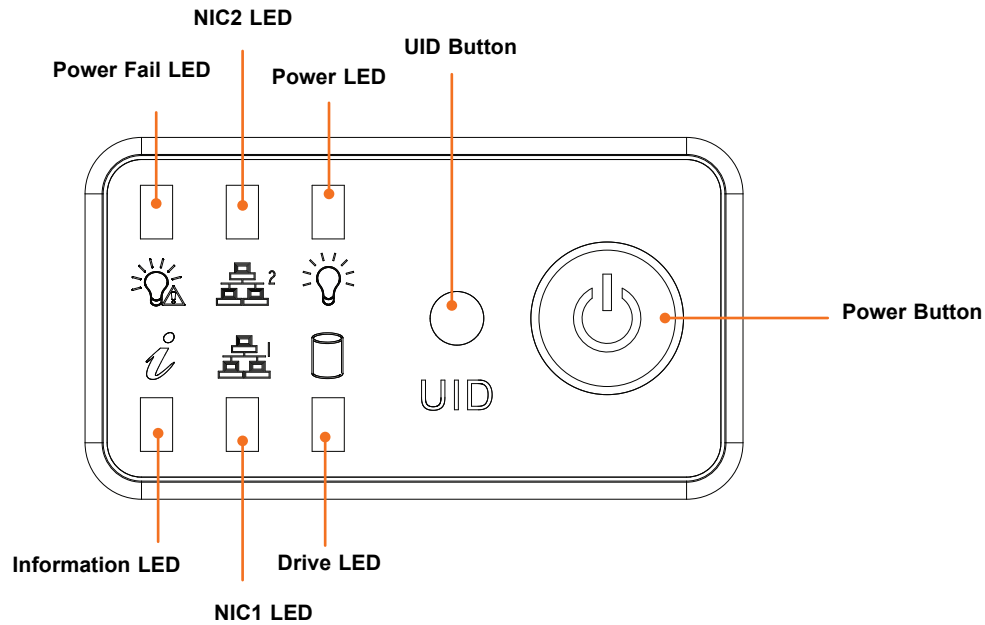


Figure 1-2. Control Panel

Control Panel Features	
Features	Description
Power Button	The main power switch applies or removes primary power from the power supply to the server but maintains standby power.
UID Button	The Unit Identification (UID) button is located on the front of the system. Pressing the UID button can light the information LED. To reset the BMC hold the button for six seconds. To set the BMC back to the factory default hold for 12 seconds.
Power LED	Indicates power is being supplied to the system power supply. This LED should normally be illuminated when the system is operating.
Drive LED	Shows the status of the M.2 drives.
NIC1/2 LEDs	Not applicable. The NIC1/2 LEDs are not supported on the system.
Power Fail LED	The power fail LED is integrated into the information LED (see the table on the next page).
Information LED	Alerts operator to several states (see the table on the next page).

Information LED	
Color, Status	Description
Red, solid	An overheat condition has occurred.
Red, blinking at 1 Hz	Fan failure, check for an inoperative fan.
Red, blinking at 0.25 Hz	Power failure, check for a non-operational power supply.
Red, solid, with Power LED blinking green	Fault detected
Blue, blinking at 10 Hz	Recovery mode
Blue, solid	UID has been activated locally to locate the server in a rack environment.
Blue, blinking at 1 Hz	UID has been activated using the BMC to locate the server in a rack environment.
Blue, blinking at 2 Hz	BMC is resetting.
Blue, blinking at 4 Hz	BMC is setting factory defaults
Blue, blinking at 10 Hz with Power LED blinking green	BMC/BIOS firmware is updating

### Rear View



Figure 1-3. Rear View

System Features: Rear	
Number	Description
1 and 2	PCIe 5.0 x16 expansion card slots
3	Redundant power supply PSU2
4	Redundant power supply PSU1
5	Redundant power supply PSU4
6	Redundant power supply PSU3
7	Rear I/O port panel (see below for details)

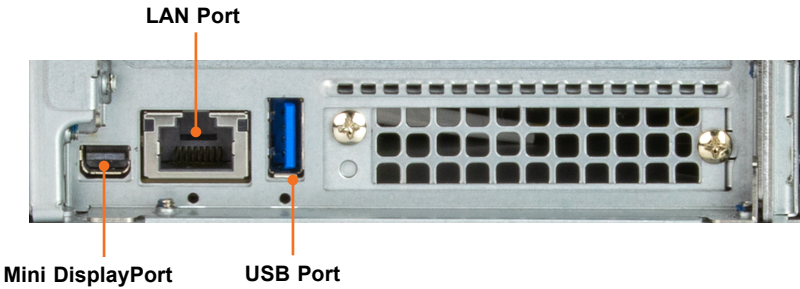


Figure 1-4. Input/Output Panel

Input/Output Panel	
Feature	Description
Mini DisplayPort	Mini DisplayPort for digital audio/visual interface.
LAN Port	1 GbE dedicated IPMI LAN port
USB Port	One USB 3.0 port

## Top View

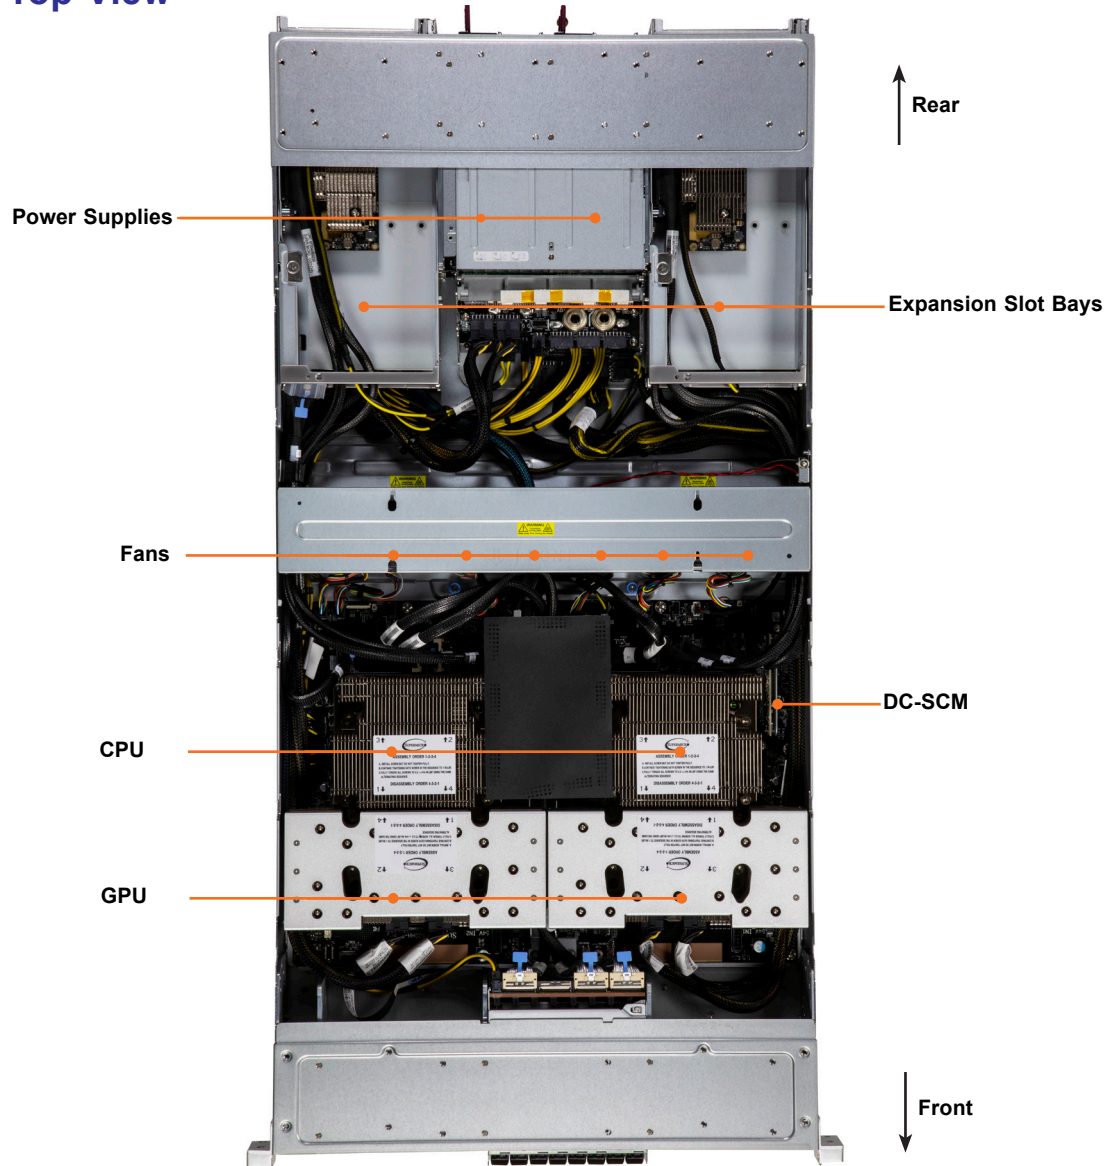


Figure 1-5. Motherboard Tray: Top View

System Features: Top	
Feature	Description
Power Supplies	PWS-2K09A-1R, four 2000 W Redundant (2 + 2) Titanium Level power supplie
Expansion Slot Bays	Four PCIe 5.0 x16 expansion slots
Fans	Six heavy-duty 6-cm fans
CPU	Grace CPUs
GPU	Hopper GPUs
DC-SCM	Datacenter-ready Secure Control Module

## Grace Hopper Superchip GH200 NVL2

The ARS-221GL-NHIR features two Grace Hopper Superchips GH200 NVL2. Each Grace Hopper Superchip has a GPU integrated with an Arm CPU with an NVLink-C2C CPU-to-GPU bandwidth of 900 GB/s directional.

Grace CPU Overview	
<b>Core Count</b>	144 Arm Neoverse V2 Cores with 4 x128b SVE2
<b>L1 Cache</b>	64 KB i-cache + 64 KB d-cache
<b>L2 Cache</b>	1 MB per core
<b>L3 Cache</b>	228 MB
<b>LPDDR5x Size</b>	960 GB on-module memory options
<b>Grace CPU Memory Bandwidth</b>	up to 1024 GB/s
<b>PCIe Links</b>	Up to eight PCIe Gen5 x16

Hopper GPU Overview	
<b>FP64</b>	68 teraFLOPS
<b>FP64 Tensor Core</b>	134 teraFLOPS
<b>FP32</b>	134 teraFLOPS
<b>TF32 Tensor Core</b>	1979 teraFLOPS*   990 teraFLOPS
<b>BFLOAT16 Tensor Core</b>	3,958 teraFLOPS*   1,979 teraFLOPS
<b>FP16 Tensor Core</b>	3,958 teraFLOPS*   1,979 teraFLOPS
<b>FP8 Tensor Core</b>	7,916 teraFLOPS*   3,958 teraFLOPS
<b>INT8 Tensor Core</b>	7,916 TOPS*   3,958 TOPS
<b>HBM3e size</b>	Up to 288 GB
<b>Hopper Memory Bandwidth</b>	Up to 9.8 TB/s

\*with sparsity



Figure 1-6. Grace Hopper Superchip

## 1.3 Motherboard Layout

Below is a layout of the G2DMH-GI motherboard. See the table on the following page for descriptions.

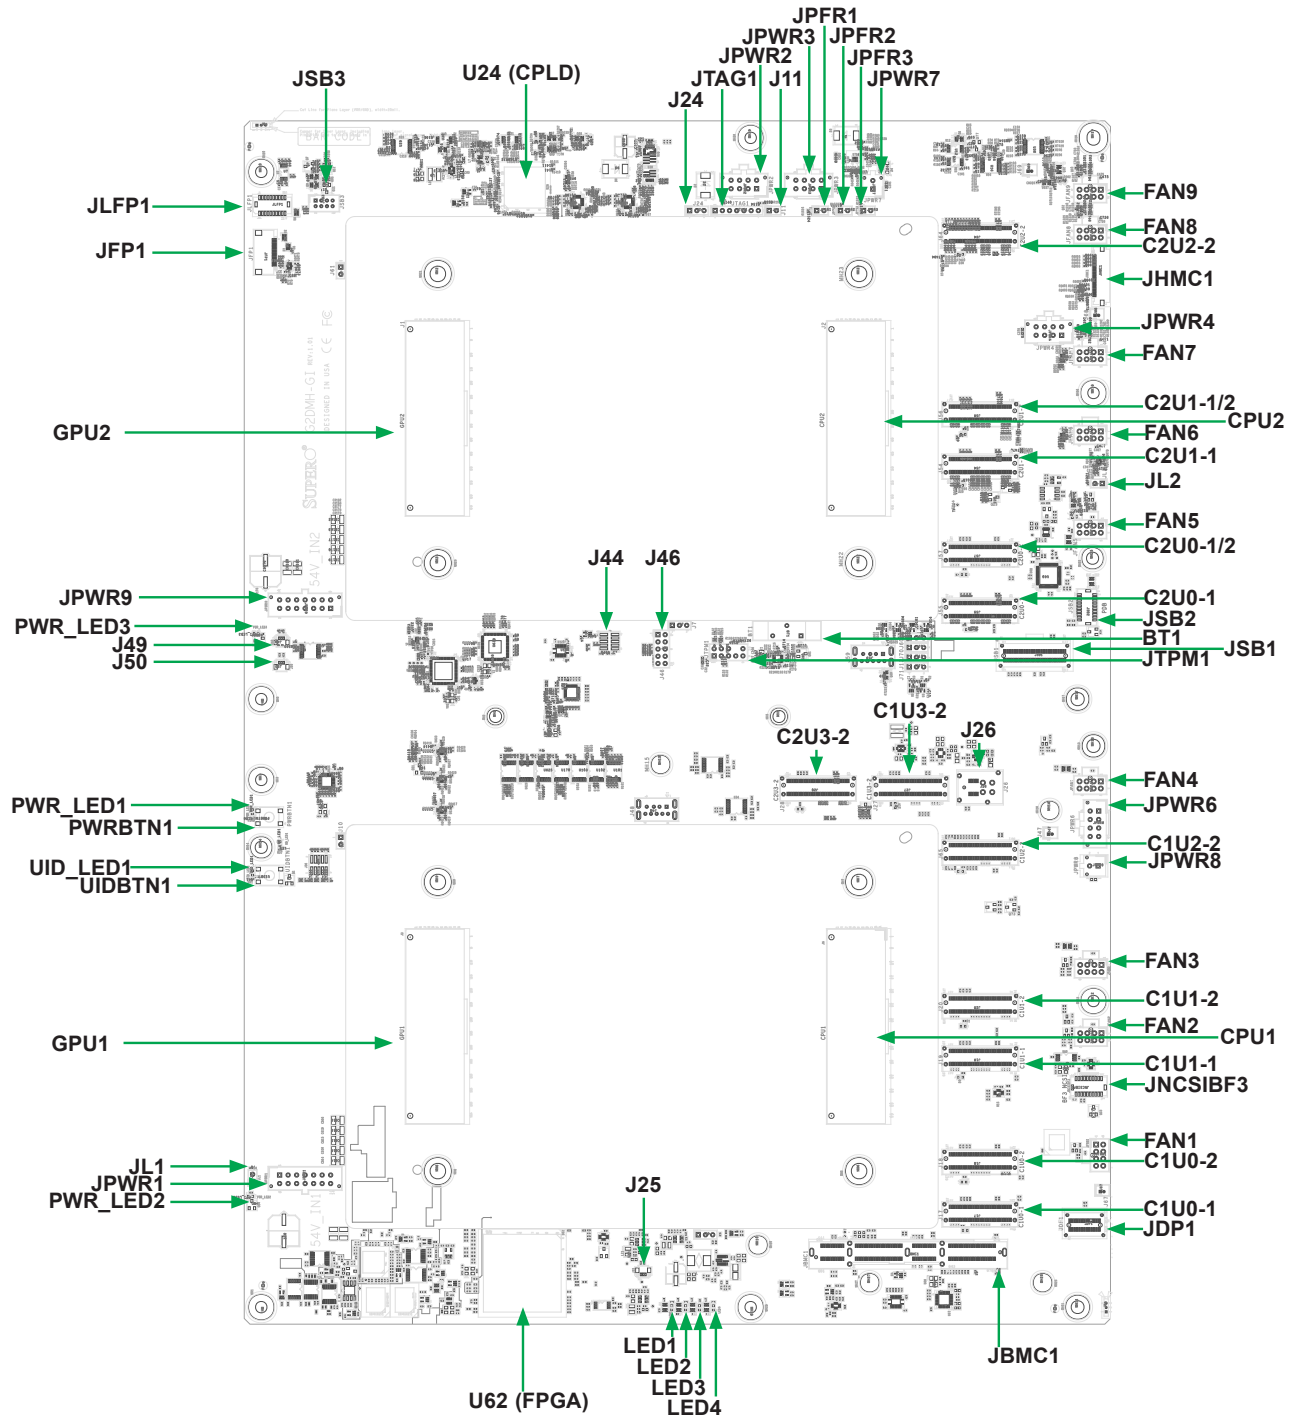


Figure 1-7. Motherboard Layout

## Quick Reference Table

LED	Description	Status
HB_LED1	CPLD Initialization	Green Blinking: CPLD initialized
PWR_LED1	Motherboard Power	Solid green after pressing PWRBTN1 Solid off before pressing PWRBTN1
PWR_LED2	Superchip 0 Power	Solid green: Superchip 0 power is good.
PWR_LED3	Superchip 1 Power	Solid green: Superchip 1 power is good.
LED2	EROT Fail Detected	Red Solid: EROT failed detected
LED3	Normal Power Detected	Before pressing PWRBTN1: Green Blinking After pressing PWRBTN1: Green Solid
LED4	Standby Power Detected	Before pressing PWRBTN1: Orange Solid After pressing PWRBTN1: Orange Off
UID_LED1	UID Activity	Blinks blue after pressing UIDBTN1

Connector	Description
BT1	Onboard Battery
CPU1, GPU1	CPU and GPU Connector for Grace Hopper Superchip 0
CPU2, GPU2	CPU and GPU Connector for Grace Hopper Superchip 1
C2U2-1, C2U2-2	CPU2 PCIe Signal MCIO Connector
C2U1-1, C2U1-2	CPU2 PCIe Signal MCIO Connector
C2U0-1, C2U0-2	CPU2 PCIe Signal MCIO Connector
C1U2-2	CPU1 PCIe Signal MCIO Connector
C1U1-2, C1U1-2	CPU1 PCIe Signal MCIO Connector
C1U0-1, C1U0-2	CPU1 PCIe Signal MCIO Connector
FAN1-FAN9	System Cooling Fans
J11	Global Write Protect Header
J12	CPU1 Debug Console Header (UART1)
J25	BMC Reset Header
J26	M.2 Riser Card Sideband and Power Connector
J27	M.2 Riser Card Sideband and High Speed Connector
J28	M.2 Riser Card Sideband and High Speed Connector
J44	CPU JTAG Debug Header
J46	FPGA JTAG Debug Header
J49	Backplane Board SMBUS Header
JBMC1	BMC DC-SCM Module Card Connector
JFP1	Front Control Panel Header
JL1, JL2	Chassis Intrusion Header

Connector	Description
JNCSIBF3	NVIDIA BlueField-3 DPU Card NCSI Sideband Connector
JSB1	74-Pin IO Sideband Signals Connector
JSB2	20-Pin PDB Sideband Signals Connector
JSB3	Front Control Board Debug Header
JPFR2	PFR Operation
JPFR3	PFR Force Recovery
JPWR1	54 V 14-Pin GH200 Power Supply Connector
JPWR2-JPWR4	12 V 8-Pin Main Power Supply Connector
JPWR6	12 V 8-Pin IO Board Power Supply Connector
JPWR7	12 V_SB 2-Pin Main Power Supply Connector
JPWR8	12 V_SB 2-Pin IO Board Power Supply Connector
JPWR9	54 V 14-Pin GH200 Power Supply Connector
JTAG1	CPLD JTAG Debug Header
JTPM1	TPM (Trusted Platform Module)/Port 80
PWRBTN1	Power Button
UIDBTN1	UID Button

**Note:** Jumpers, connectors, switches, and LED indicators that are not described in the preceding tables are for manufacturing testing purposes only, and are not covered in this manual.

## Motherboard Block Diagram

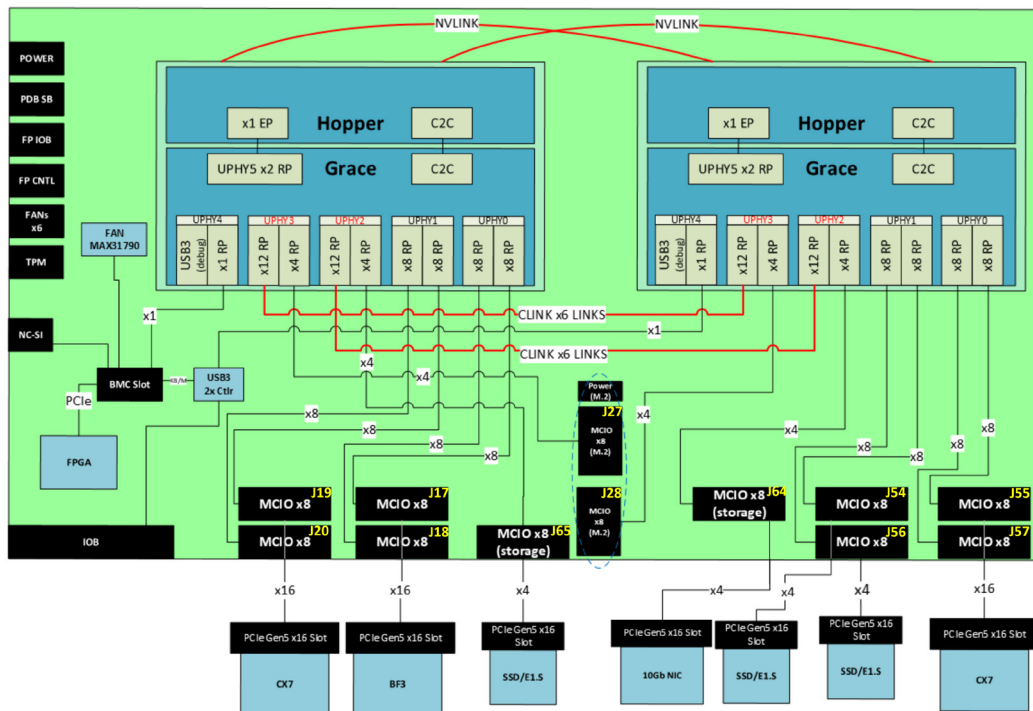


Figure 1-8. Motherboard Block Diagram

**Note:** This is a general block diagram and may not exactly represent the features on your motherboard. See the previous pages for the actual specifications of your motherboard.

# Chapter 2

## Server Installation

### 2.1 Overview

This chapter provides advice and instructions for mounting your chassis in a server rack. If your chassis is not already fully integrated with processors, system memory etc., refer to [Chapter 3](#) for details on installing those specific components.

**Important:** Electrostatic Discharge (ESD) can damage electronic components. To prevent such damage to PCBs (printed circuit boards), it is important to use a grounded wrist strap, handle all PCBs by their edges and keep them in anti-static bags when not in use.

### 2.2 Preparing for Setup

The box in which the chassis was shipped should include the rackmount hardware needed to install it into the rack. Please read this section in its entirety before you begin the installation.

#### Choosing a Setup Location

- The chassis should be situated in a clean, dust-free area that is well ventilated. Avoid areas where heat, electrical noise and electromagnetic fields are generated.
- Leave enough clearance in front of the rack so that you can open the front door completely (approximately 25 inches) and approximately 30 inches of clearance in the back of the rack to allow sufficient space for airflow and access when servicing.
- This product should be installed only in a Restricted Access Location (dedicated equipment rooms, service closets, etc.).
- This product is not suitable for use with visual display workplace devices according to §2 of the German Ordinance for Work with Visual Display Units.

#### Rack Precautions

- Ensure that the leveling jacks on the bottom of the rack are extended to the floor so that the full weight of the rack rests on them.

- In single rack installations, stabilizers should be attached to the rack. In multiple rack installations, the racks should be coupled together.
- Always make sure the rack is stable before extending a server or other component from the rack.
- You should extend only one server or component at a time - extending two or more simultaneously may cause the rack to become unstable.

## System/Chassis Precautions

- Review the electrical and general safety precautions in [Appendix A](#).
- Determine the placement of each component in the rack before you install the rails.
- Install the heaviest server components at the bottom of the rack first and then work your way up.
- Use a regulating uninterruptible power supply (UPS) to protect the server from power surges and voltage spikes and to keep your system operating in case of a power failure.
- Allow any drives and power supply modules to cool before touching them.
- When not servicing, always keep the front door of the rack and all covers/panels on the servers closed to maintain proper cooling.

## Rack Mounting Considerations



**Warning!** Stability hazard. The rack may tip over causing serious personal injury. Before extending the rack to the installation position, read the installation instructions. Do not put any load on the slide-rail mounted equipment in the installation position. Do not leave the slide-rail mounted equipment in the installation position.



**Avertissement!** Danger d'instabilité. Le rack peut basculer et provoquer des blessures corporelles graves. Avant d'étendre le rack en position d'installation, lire les instructions d'installation. Ne pas charger l'équipement monté sur rail de glissière en position d'installation. Ne pas laisser l'équipement monté sur rail de glissière en position d'installation.

**Important:** To prevent bodily injury when mounting or servicing this unit in a rack, you must take special precautions to ensure that the system remains stable. The following guidelines are provided to ensure your safety:

- If this unit is the only unit in the rack, it should be mounted at the bottom of the rack.
- When mounting this unit in a partially filled rack, load the rack from the bottom to the top with the heaviest component at the bottom of the rack.
- If the rack is provided with stabilizing devices, install the stabilizers before mounting or servicing the unit in the rack.
- Slide rail mounted equipment is not to be used as a shelf or a work space.
- Do not pick up the server with the front handles. They are designed to pull the system from a rack only.

### ***Ambient Operating Temperature***

If installed in a closed or multi-unit rack assembly, the ambient operating temperature of the rack environment may be greater than the room's ambient temperature. Therefore, consideration should be given to installing the equipment in an environment compatible with the manufacturer's maximum rated ambient temperature (TMRA).

### ***Airflow***

Equipment should be mounted into a rack so that the amount of airflow required for safe operation is not compromised.

### ***Mechanical Loading***

Equipment should be mounted into a rack so that a hazardous condition does not arise due to uneven mechanical loading.

### ***Circuit Overloading***

Consideration should be given to the connection of the equipment to the power supply circuitry and the effect that any possible overloading of circuits might have on overcurrent protection and power supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

### ***Reliable Ground***

A reliable ground must be maintained at all times. To ensure this, the rack itself should be grounded. Particular attention should be given to power supply connections other than the direct connections to the branch circuit (i.e. the use of power strips, etc.).

## 2.3 Installing the System into a Rack

This section provides information on installing the CSE-MG202TS chassis into a rack unit with the quick-release rails provided. There are a variety of rack units on the market, which may mean the assembly procedure will differ slightly. You should also refer to the installation instructions that came with the rack unit you are using.

**Note:** This rail will fit a rack between 26.5" and 36.4" deep.

### Separating the Sections of the Rack Rails

The chassis package includes two rail assemblies in the rack mounting kit. Each assembly consists of three sections: An inner rail that secures directly to the chassis, an outer rail that secures to the rack, and a middle rail that slides in the outer rail. These assemblies are specifically designed for the left and right side of the chassis.

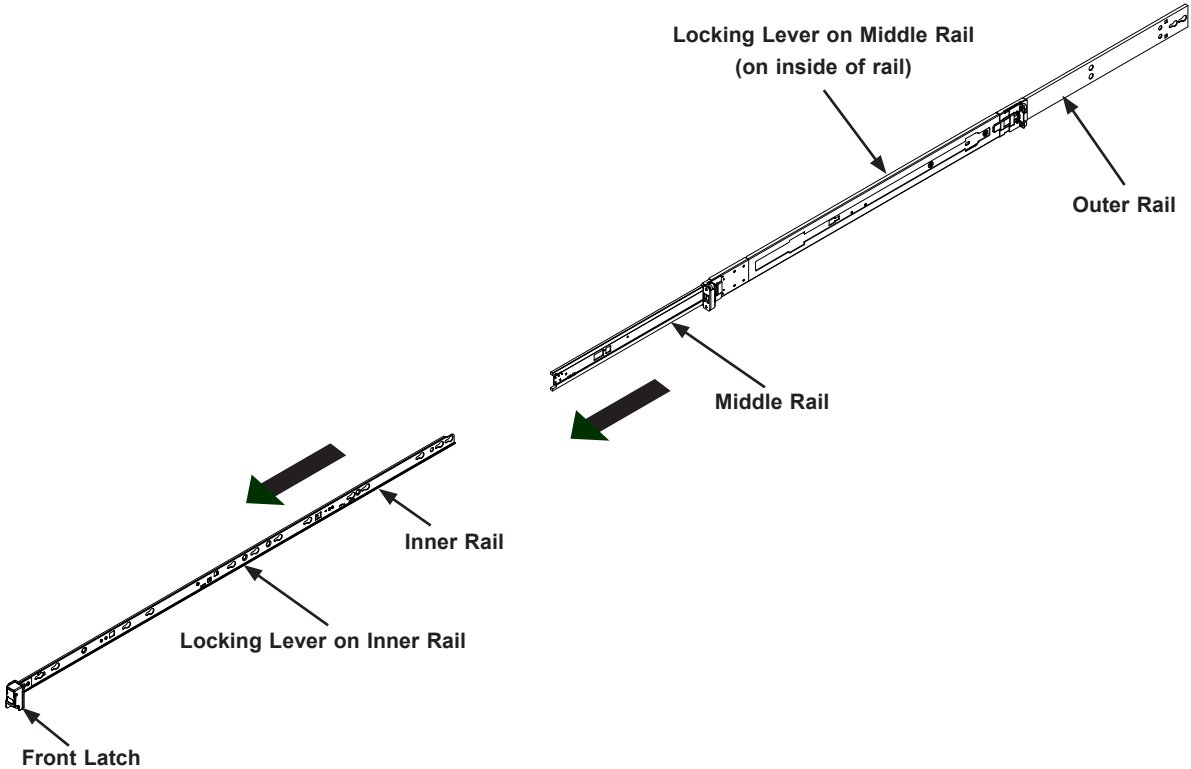


Figure 2-1. Extending the Rails and Releasing the Inner Rail

## Releasing the Inner Rail

It is necessary to release the inner rail from the middle and outer rails before installing the inner rail on the chassis.

### ***Releasing the Inner Rail from the Middle and Outer Rails***


1. Lift the front latch on the inner rail and pull the inner rail out of the middle rail, and the middle rail out of the outer rail until the rails are fully extended.
2. Press down the locking lever on the inside of the inner rail to release the inner rail. Continue to pull the inner rail out of the middle rail.

## Installing the Inner Rails on the Chassis

### *Installing the Inner Rails*

1. Confirm that the left and right inner rails have been correctly identified.
2. Place the inner rail firmly against the side of the chassis, aligning the pins on the side of the chassis with the slotted thru holes in the inner rail.
3. Slide the inner rail toward the rear of the chassis until the pins are at the end of the narrow slot, which secures the inner rail to the chassis. An optional screw may be added for extra security.
4. Repeat for the other inner rail.

**Important:** Do not pick up the server by the front handles. They are designed to pull the system from a rack only.

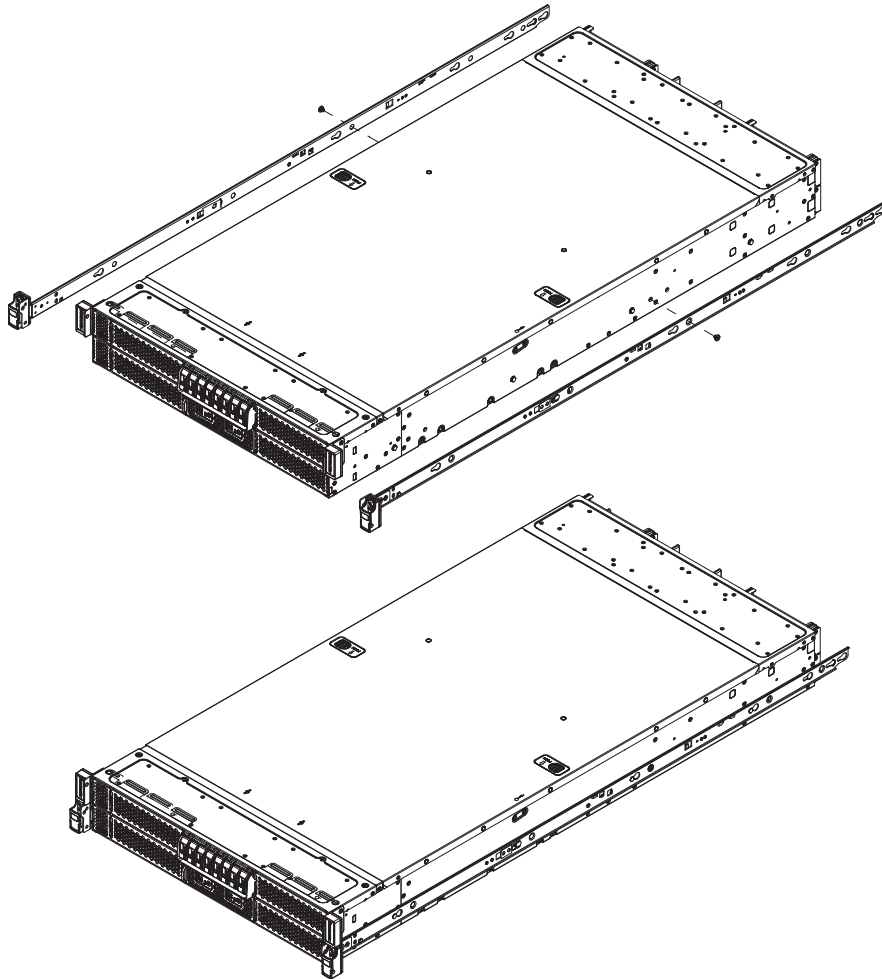


**Figure 2-2. Installing the Inner Rails**

## Installing the Outer Rails on the Rack

### *Installing the Outer Rails*

1. Confirm that the left and right outer rails have been correctly identified.
2. Release the small locking lever on the inside of the middle rail and push the middle rail back into the outer rail.
3. Insert the pins at the front of the outer rail into the square holes on the front of the rack. Push until the latch snaps into place.
4. The outer rail is actually two pieces that slide to lengthen. Pull out the rear of the outer rail, adjusting the length until the square pin assembly passes, then fits against the back of the rear post. Be careful to keep the rail level.
5. Insert the pins at the rear of the outer rail into the square holes on the rear of the rack. Push until the latch snaps into place.
6. Repeat for the other outer rail.

**Important:** This figure is for illustrative purposes only. Always install servers to the bottom of a rack first.

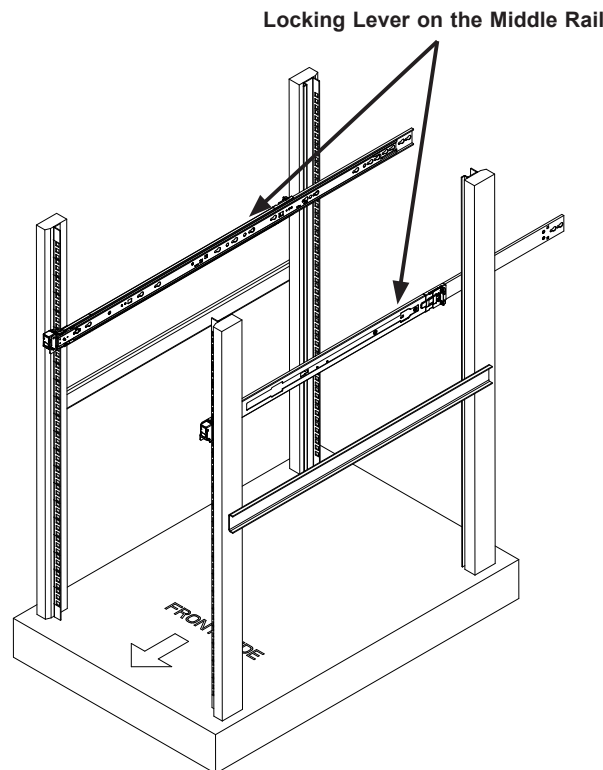

**Figure 2-3. Installing the Outer Rails**

## Installing into the Rack

After the rails are installed on the chassis and on the rack, the server can be installed in the rack.

**Important:** Use caution when mounting or removing the system from the rack. For large systems, at least one other person must assist during installation or removal. Follow the safety recommendations printed on the rails. Depending on the size of the system, you might need to use a lift.

### *Installing the Server into a Rack*

1. Pull both middle rails out the front of the outer rail until each clicks to a stop.
2. Align the inner rails on the chassis with the front of the middle rails.
3. Slide the inner rails on the chassis into the middle rails, keeping the pressure even on both sides. When partially in, the locking levers will stop further progress.
4. Press down the locking levers on the inside of the inner rails and push the chassis all the way into the rear of the rack. The front latches will click into place.

The chassis is now mounted in the rack. It can be pulled partially out for service by lifting both front latches.

**Important:** This figure is for illustrative purposes only. Always install servers to the bottom of a rack first.

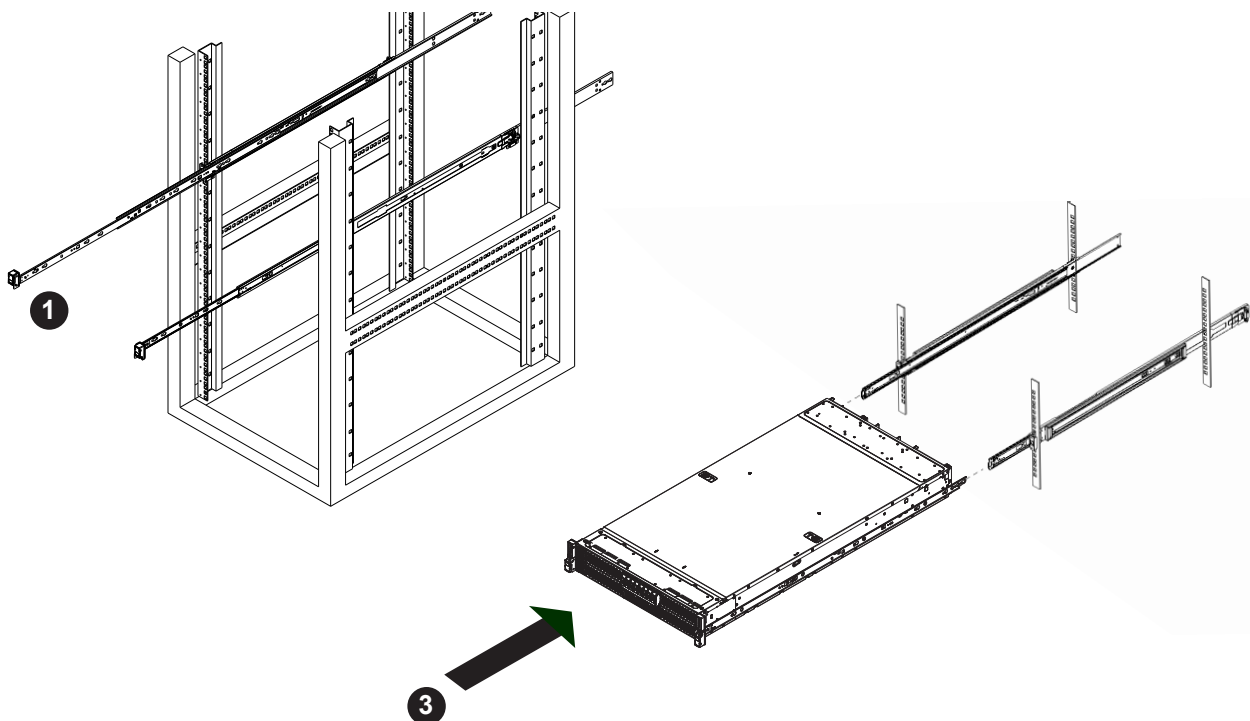


Figure 2-4. Installing the Chassis into the Rack

## Removing the Chassis from the Rack

**Important:** Use caution when mounting or removing the system from the rack. For large systems, at least one other person must assist during installation or removal. Follow the safety recommendations printed on the rails. Depending on the size of the system, you might need to use a lift.

### *Removing the Chassis*

1. Remove the right and left front screws that are on either side of the front of the chassis.
2. Pull the chassis forward until it clicks to a stop.
3. Press down the locking lever on the inside of the inner rail (Figure 2-2) to release the chassis. Continue to pull the chassis out of the middle rails.

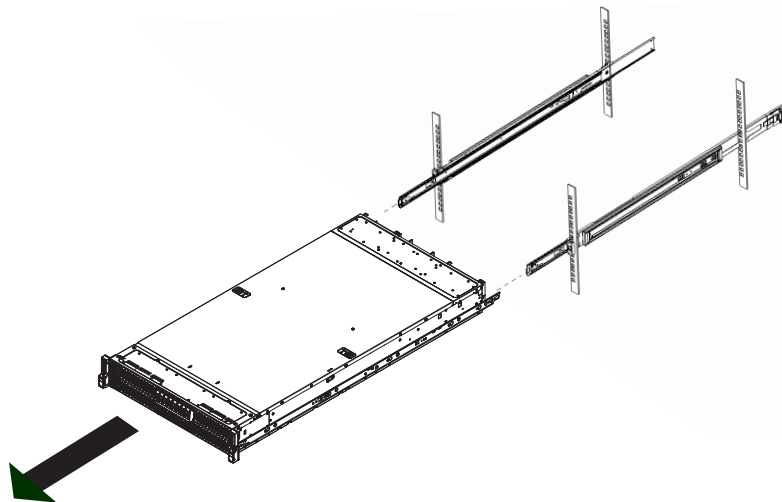


Figure 2-5. Removing the Server from the Rack

## Removing the Outer Rails from the Rack

In the uncommon event that it is necessary to remove the outer rails from the rack, follow these instructions. The chassis must be out of the rack.

### *Releasing the Outer Rails*

1. On the front of the outer rail, slide the small plastic safety slider (red in drawing) up and hold it while pushing the plastic release button (green in drawing) just below it.
2. While holding the release button in, pull the outer rail forward to disengage the pins and the front of the rail from the rack.
3. Support the front of the outer and middle rail assembly while releasing the rear.
4. Remove the outer rail from the rear of the rack in the same way as the front. Slide the safety slider up and push and hold the release button, then pull the rear pins out of the rack and remove the rail.

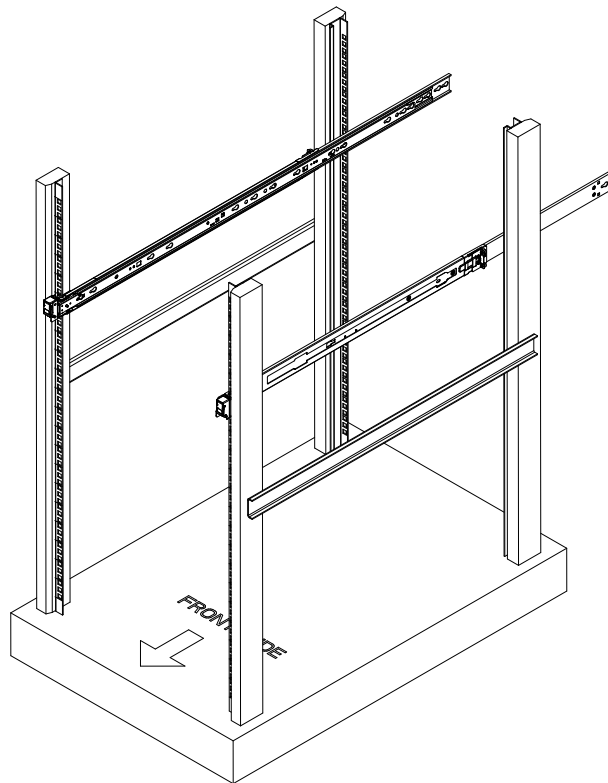


Figure 2-6. Removing the Outer Rails

## Chapter 3

# Maintenance and Component Installation

This chapter provides instructions on installing and replacing main system components. To prevent compatibility issues, only use components that match the specifications and/or part numbers given.

Installation or replacement of most components require that power first be removed from the system. Please follow the procedures given in each section.

**Important:** Electrostatic Discharge (ESD) can damage electronic components. To prevent such damage to printed circuit boards (PCBs), it is important to use a grounded wrist strap, handle all PCBs by their edges and keep them in anti-static bags when not in use.

### 3.1 Removing Power

Use the following procedure to ensure that power has been removed from the system. This step is necessary when removing or installing non-hot-swappable components or when replacing a non-redundant power supply.

1. Use the operating system to power down the system.
2. After the system has completely shut-down, disconnect the AC power cord(s) from the power strip or outlet. (If your system has more than one power supply, remove the AC power cords from all power supply modules.)
3. Disconnect the power cord(s) from the power supply module(s).

## 3.2 Accessing the System

A removable top cover allows access to the inside of the chassis.

### *Removing the Top Cover*

1. Remove the two screws on each side of the cover, which secure the cover to the chassis. These two screws are optional and will not impact functionality if they are not installed.
2. Slide the two release buttons towards the front and slide the cover toward the rear.
3. Lift the top cover up.

Check that all ventilation openings on the top cover and the top of the chassis are clear and unobstructed.

**Important:** Except for short periods of time, do not operate the server without the cover in place. The chassis cover must be in place to allow for proper airflow and to prevent overheating.

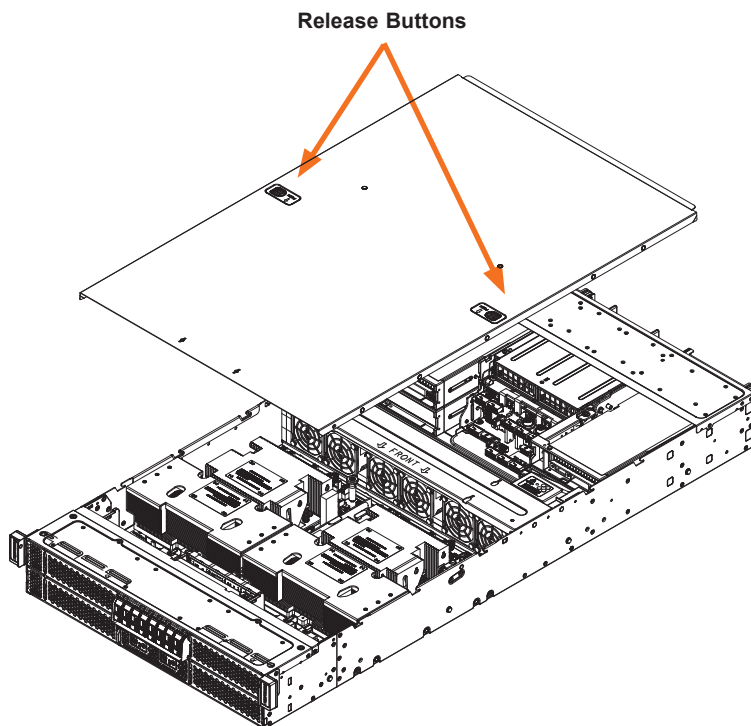


Figure 3-1. Removing the System Cover


## 3.3 Processor and Heatsink Installation



### Important:

- For the NVIDIA GH200 Grace Hopper™ Superchip and heatsink installation you need to use a T30 torque driver set to 5.2 lb-in plus or minus 4%.
- Always connect the power cord last, and always remove it before adding, removing or changing any hardware components.
- If you buy an NVIDIA GH200 Grace Hopper Superchip separately, make sure that you use an NVIDIA-certified multi-directional heatsink only.
- Make sure to install the motherboard into the chassis before you install the Superchip heatsink.
- Refer to the Supermicro website for updates on the NVIDIA GH200 Grace Hopper Superchip module support.


### *Installing the Superchip onto the Motherboard*

1. The procedure to install each Superchip onto the motherboard is the same. After installing one Superchip, repeat Steps 2 to 9 for the second Superchip.
2. Remove the plastic protector on the CPU and GPU connector.
3. Align the Superchip with its guide pins to the holes circled in red on the motherboard.

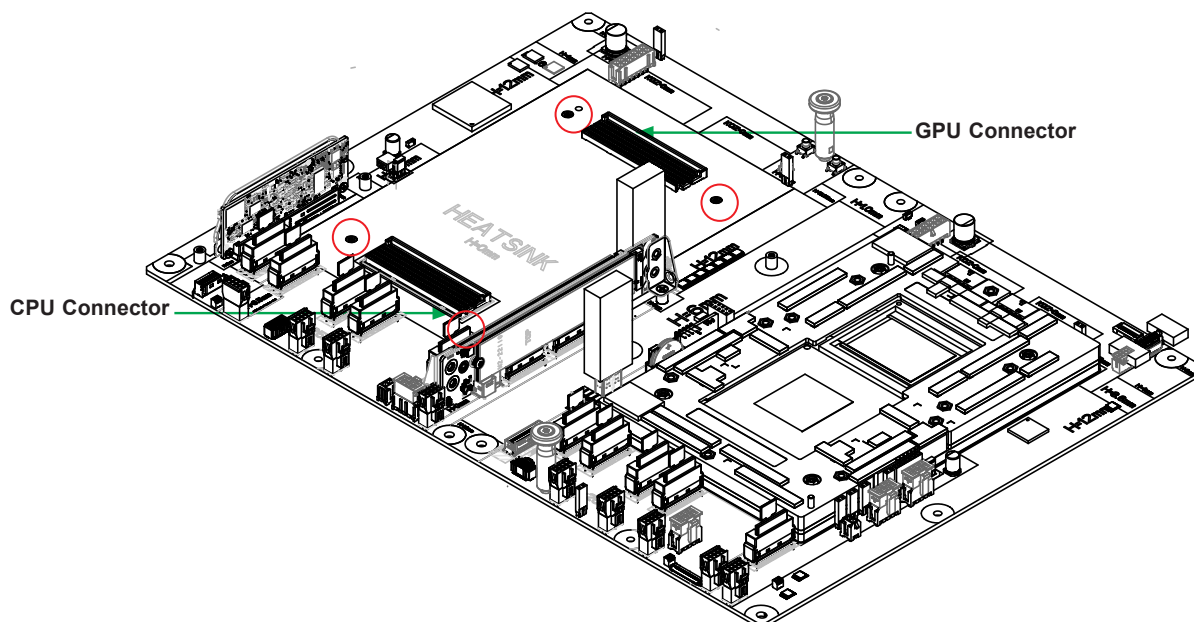


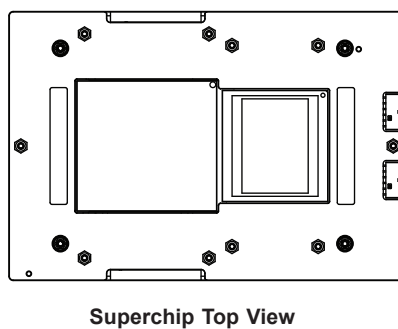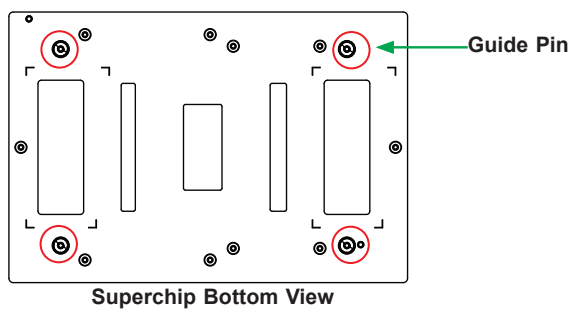

4. Before the springs underneath the Superchip are compressed, check the alignment of the guide pins and the holes on the motherboard again.

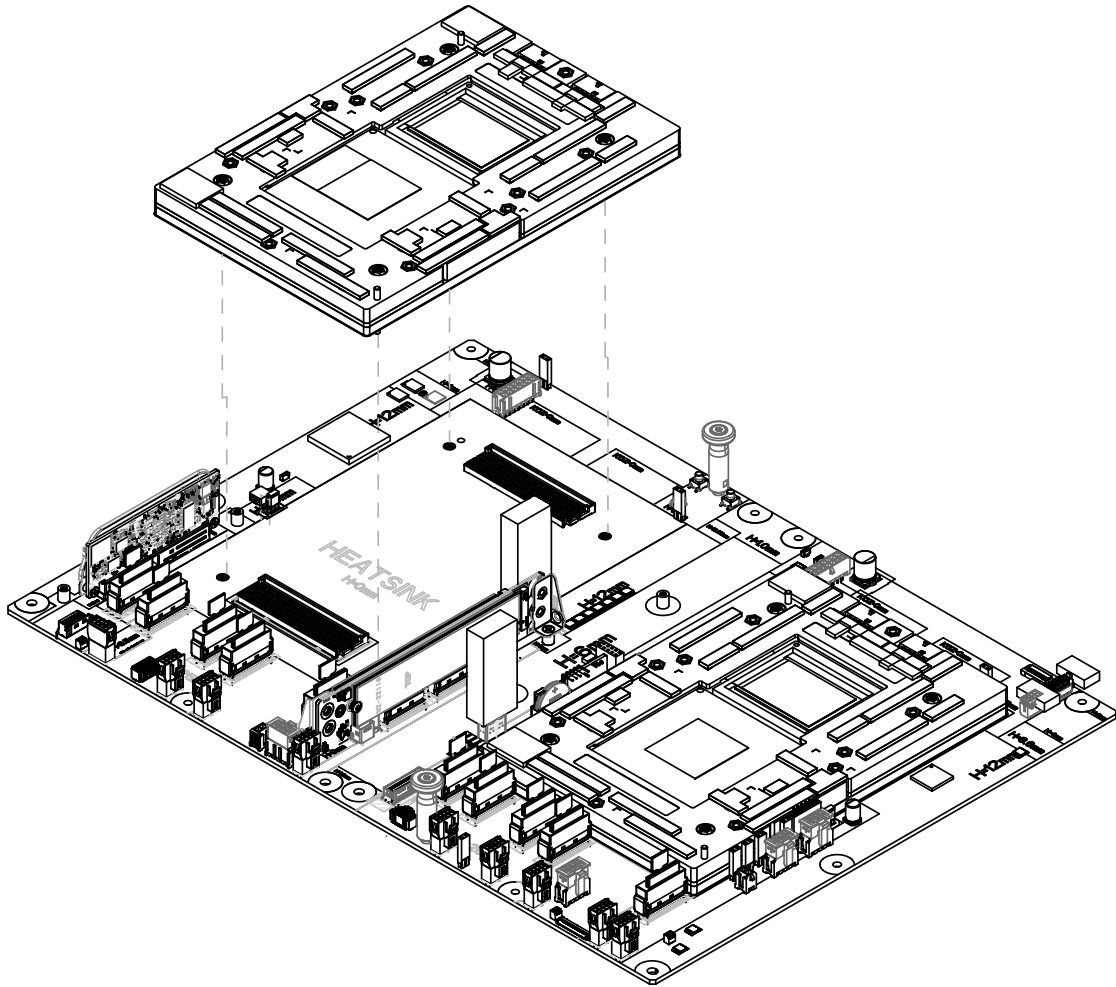


5. Fasten the four screws using a torque of 5.2 lb-in plus or minus 4% to complete the Superchip installation.

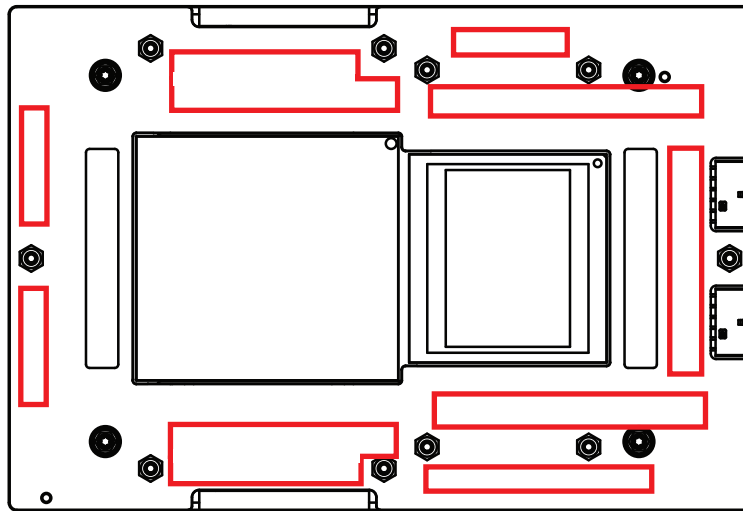


Superchip Top View

6. Place thermal pads on the Superchip. The thermal pads are shown as red rectangles above.

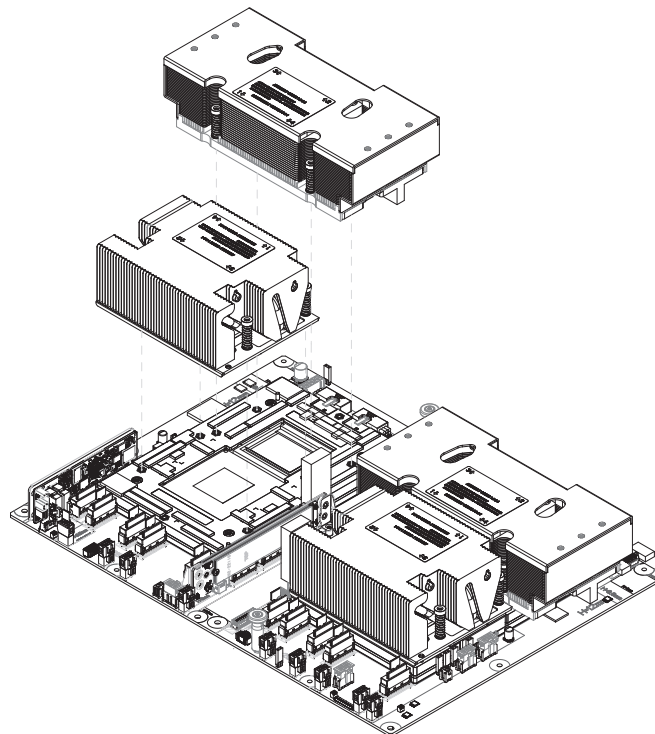

7. Peel off the thermal pad protector underneath each heatsink.
8. Place the heatsinks on top of the Superchip.

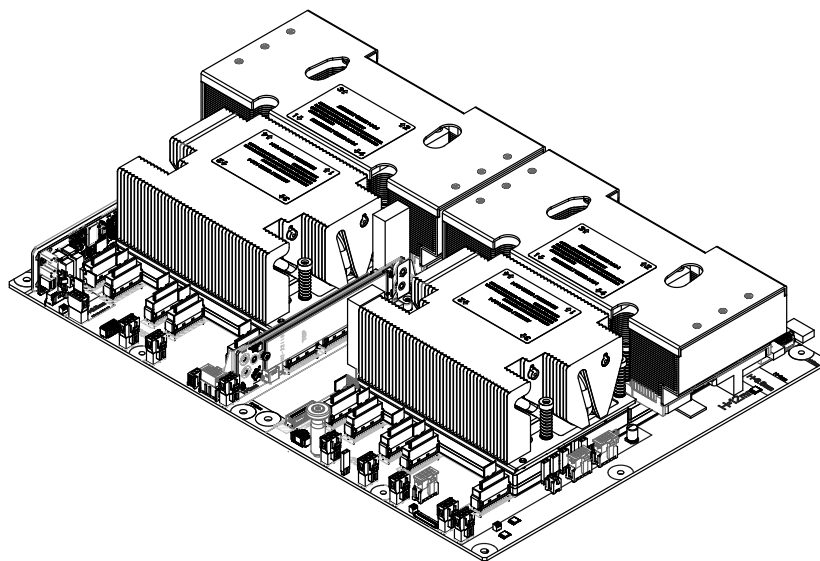

9. Using a torque of 5.2 lb-in plus or minus 4%, secure each heatsink onto the Superchip with four screws.

#### **Un-installing the Superchip and Heatsinks**

1. Use the T30 torque driver to loosen the screws on the heatsink.
2. Clean the thermal grease and thermal pads left by the heatsink on top of the Superchip to limit the risk of it contaminating the CPU and GPU connectors.
3. Remove the screws from the Superchip.
4. Lift the Superchip off from the motherboard.

## 3.4 Memory Support

### Memory Support

The G2DMH-GI supports up to 960 GB ECC LPDDR5 and 288 GB HBM3e. The memory is embedded on the Superchip and no installation is required.

## 3.5 Motherboard Battery Removal and Installation

### **Battery Removal**

To remove the onboard battery, follow the steps below.

1. Power off your system and unplug your power cable.
2. Place the system on a workbench.
3. Remove the top cover from the system.
4. Locate the onboard battery as shown below.
5. Using a tool such as a pen or a small screwdriver, push the battery lock outwards to unlock it. Once unlocked, the battery will pop out of the holder.
6. Remove the battery.

### **Proper Battery Disposal**


**Important:** Handle used batteries carefully. Do not damage the battery in any way; a damaged battery may release hazardous materials into the environment. Do not discard a used battery in the garbage or a public landfill. Please comply with the regulations set up by your local hazardous waste management agency to dispose of your used battery properly.

### **Battery Installation**

To install the onboard battery, follow the steps 1 and 2 below.

**Important:** When replacing a battery, be sure to only replace it with the same type.

1. Identify the battery's polarity. The positive (+) side should be facing up.
2. Insert the battery into the battery holder and push it down until you hear a click to ensure that the battery is securely locked.

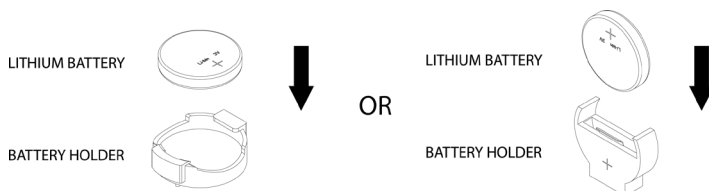

**Figure 3-3. Installing a Battery**


## 3.6 Storage Drives

The system supports three E1.S (EDSFF) Flash storage in eight slots. See Chapter 1 Front View for the location of the three slots. These are solid-state drives (SSD) designed for use in data center servers.

### Installing Drives

#### *Removing a Hot-Swappable Drive Carrier from the Chassis*

1. Press the release button on the drive carrier, which will extend the drive carrier handle.
2. Use the drive carrier handle to pull the drive out of the chassis.

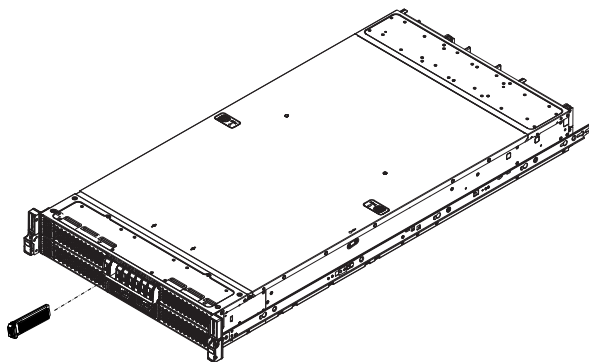

**Figure 3-3. Inserting an E1.S Flash Storage Drive**


## 3.7 System Cooling

### Fans

The chassis contains six external 6-cm high-performance fans. Fan speed is controlled by the BMC depending on the system temperature. If a fan fails, the remaining fans will ramp up to full speed. The system will continue to run with a failed fan, although it may shut down if the heat gets too great. Replace any failed fan at your earliest convenience with the same model. Failed fans can be identified through the BMC.

#### *Changing a System Fan*

1. To unlock and release a fan, squeeze the two front latches of the fan inward, then pull it out.
2. Replace the failed fan with an identical fan, available from Supermicro. Push the new fan into the housing until the latches engage, making sure the air flow direction is the same.
3. Power up the system and check that the fan is working properly and that the LED on the control panel has turned off. Finish by replacing the chassis cover, if applicable.

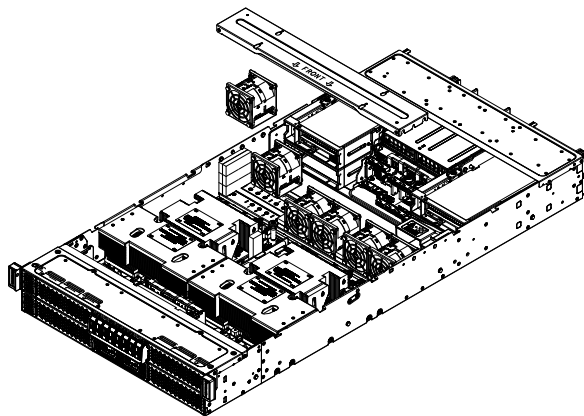


**Figure 3-4. Replacing a Fan**

## Air Shroud

Air shrouds concentrate airflow to maximize fan efficiency. They do not require screws to install.

### *Installing the Standard Air Shroud*

- Position the air shrouds as illustrated in the figure below.

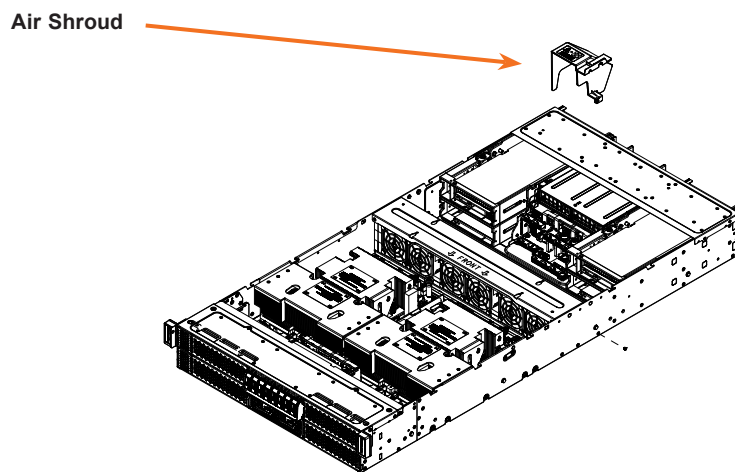

**Figure 3-5. Installing the Air Shroud**

## 3.8 Power Supply

The chassis features redundant power supplies. The power modules can be changed without powering down the system. New units can be ordered directly from Supermicro or authorized distributors.

These power supplies are auto-switching capable. This feature enables them to automatically sense the input voltage and operate at a 100-120v or 180-240v.


### Power Supply LEDs

On the rear of the power supply module, an LED displays the status.

- **Solid Green:** When illuminated, indicates that the power supply is on.
- **Blinking Green:** When blinking, indicates that the power supply is plugged in and turned off by the system.
- **Blinking Amber:** When blinking, indicates that the power supply has a warning condition and continues to operate.
- **Solid Amber:** When illuminated, indicates that the power supply is plugged in, and is in an abnormal state. The system might need service. Please contact Supermicro technical support.

**Replacing the Power Supply**

1. Unplug the AC cord from the module to be replaced.
2. Push the release lever on the back of the power supply as illustrated.
3. Pull the power supply out using the handle.
4. Replace the failed power module with the same model.
5. Push the new power supply module into the power bay until it clicks.
6. Plug the AC power cord back into the module.

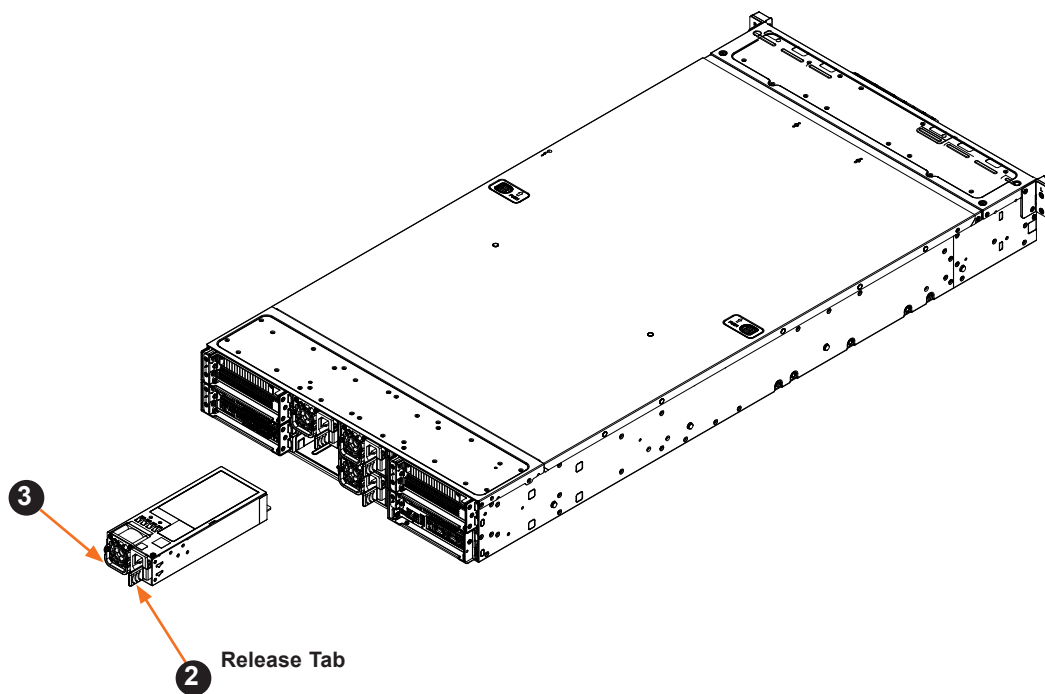**Figure 3-6. Installing a Power Supply Module**

## Chapter 4

# Motherboard Connections

This section describes the connections on the motherboard and provides pinout definitions. Note that depending on how the system is configured, not all connections are required. The LEDs on the motherboard are also described here. A motherboard layout indicating component locations may be found in [Chapter 1](#). More detail can be found in the [Motherboard Manual](#). Please review the Safety Precautions in [Appendix A](#) before installing or removing components.

## 4.1 Power Connections

### Power Connections

The Grace Hopper Superchip comes in several SKUs with various power requirements. Not all the power connectors described in this section are required for every Superchip SKU. The Superchips on the ARS-221GL-NHIR are supported by the 12 V power connectors.

#### 54 V 14-pin GPU Power Supply Connector (JPWR1 and JPWR9)

JPWR1 and JPWR9 are 14-pin MICRO POWER PLUS power input to provide primary power to the GPU module. Refer to the table below for pin definitions.

54 V 14-pin GPU Power Connector Pin Definitions			
Pin#	Definition	Pin#	Definition
1	Ground	8	+54 V
2	Ground	9	+54 V
3	Ground	10	+54 V
4	Ground	11	+54 V
5	Ground	12	+54 V
6	Ground	13	+54 V
7	Ground	14	+54 V

**12 V 8-pin Main Power Supply Connector (JPWR2-JPWR4)**

JPWR2-4 is an 8-pin MICRO POWER PLUS power input to provide primary power to the motherboard. Refer to the table below for pin definitions.

12 V 8-pin Main Power Connector Pin Definitions			
Pin#	Definition	Pin#	Definition
1	Ground	5	+12 V
2	Ground	6	+12 V
3	Ground	7	+12 V
4	Ground	8	+12 V

**12 V 2-pin Main Power Supply Connector (JPWR7)**

JPWR7 is a 2-pin MICRO POWER PLUS power input to provide primary power to the motherboard. Refer to the table below for pin definitions.

12 V 2-pin Main Power Connector Pin Definitions			
Pin#	Definition	Pin#	Definition
1	Ground	2	+12 Vsb

**12 V 8-pin IO Board Power Supply Connector (JPWR6)**

JPWR6 is an 8-pin MICRO POWER PLUS power output to provide power to the IO board. Refer to the table below for pin definitions.

12 V 8-pin IO Board Power Connector Pin Definitions			
Pin#	Definition	Pin#	Definition
1	Ground	5	+12 V
2	Ground	6	+12 V
3	Ground	7	+12 V
4	Ground	8	+12 V

**12 V 2-pin IO Board Power Supply Connector (JPWR8)**

JPWR8 is a 2-pin MICRO POWER PLUS power output to provide power to the IO board. Refer to the table below for pin definitions.

12 V 2-pin IO Board Power Connector Pin Definitions			
Pin#	Definition	Pin#	Definition
1	Ground	2	+12 Vsb

## 4.2 Headers and Connectors

### 74-pin IO Sideband Signal Connector (JSB1)

JSB1 is a 74-pin connector that sends and receives information to the IO board. Refer to the table below for pin definitions.

74-pin IO Sideband Signal Connector Pin Definitions			
Pin#	Definition	Pin#	Definition
A1	Ground	B1	Ground
A2	SGMII_Output_P	B2	SGMII_Input_P
A3	SGMII_Output_N	B3	SGMII_Input_N
A4	Ground	B4	Ground
A5	DisplayPort_TX0_P	B5	DisplayPort_TX1_P
A6	DisplayPort_TX0_N	B6	DisplayPort_TX1_N
A7	Ground	B7	Ground
A8	BUTTON_POWER_ON_N	B8	UART5_BMC_TX
A9	FP_PWR_LED_N	B9	UART5_BMC_RX
A10	SYS_RST_IN_L	B10	N/A
A11	FP_UID_RESET_SW_N	B11	UART1_CONN1_TX
A12	CPLD_UID_LED	B12	UART1_CONN1_RX
A13	Ground	B13	Ground
A14	NC_IOB_PERST_N	B14	NC_NCSI_CRD_DV
A15	NC_IOB_WAKE_N	B15	NC_NCSI_TX_EN_GPIO3
A16	Ground	B16	Ground
A17	NC_NCSI_RX_D0_GPIO6	B17	NC_NCSI_TX_D0_GPIO4
A18	NC_NCSI_RX_D1_GPIO7	B18	NC_NCSI_TX_D1_GPIO5
A19	Ground	B19	Ground
A20	MODULE_PWR_GOOD_3V3	B20	NC_CLK_50M_IOB_NCSI
A21	N/A	B21	IOB_PRSTNT_N
A22	Ground	B22	Ground
A23	CLK_100M_IOB_R_P	B23	B2B_IOEXP_INT_L
A24	CLK_100M_IOB_R_N	B24	IOB_DP_HPDP
A25	Ground	B25	Ground
A26	B2B_SMCLK_3V3	B26	IOB_OCI_N
A27	B2B_SMDAT_3V3	B27	N/A
A28	Ground (MB_PRSTNT_N)	B28	BMC_PHY_RST_N
A29	IOB_SCL	B29	I2C_BMC_BUS5_SCL
A30	IOB_SDA	B30	I2C_BMC_BUS5_SDA
A31	Ground	B31	Ground
A32	IOB_DP_AUX_P	B32	U2_DP2
A33	IOB_DP_AUX_N	B33	U2_DN2
A34	Ground	B34	Ground
A35	U3_RX_DP2	B35	U3_TX_DP2
A36	U3_RX_DN2	B36	U3_TX_DN2
A37	Ground	B37	Ground

## 20-pin Power Distribution Board (PDB) Sideband Signal Connector (JSB2)

JSB2 is a 20-pin connector that sends and receives information from a Power Distribution Board.

20-pin Power Distribution Board Input Signal Connector Pin Definitions			
Pin#	Definition	Pin#	Definition
1	PSU1_PRSENT	11	N.A.
2	PSU2_PRSENT	12	PMBUS_SDA
3	PSU3_PRSENT	13	N.A.
4	PSU4_PRSENT	14	PMBUS_SCL
5	PSU1_PWROK	15	PS_HSC0_EN_3V3
6	PSU2_PWROK	16	Ground
7	PSU3_PWROK	17	N.A.
8	PSU4_PWROK	18	PSU_12V_SENSE
9	PSU_PSON_L	19	PS_HSC1_EN_3V3
10	PSU_SMB_ALERT_L	20	PSU_12V_SENSE_RTN

## TPM/Port 80 Header

A Trusted Platform Module (TPM)/Port 80 header is located at JTPM1 to provide TPM support and Port 80 connection. Use this header to enhance system performance and data security. Refer to the table below for pin definitions. Please go to the following link for more information on the TPM: <http://www.supermicro.com/manuals/other/TPM.pdf>.

Trusted Platform Module Header Pin Definitions			
Pin#	Definition	Pin#	Definition
1	+3.3 V	6	GND
2	SPI_CS#	7	SPI_MOSI
3	RESET#	8	N.A.
4	SPI_MISO	9	+3.3V_STBY
5	SPI_CLK	10	SPI_IRQ#

## Onboard Battery (BT1)

The onboard back up battery is located at BT1. The onboard battery provides backup power to the on-chip CMOS, which stores the BIOS setup information. It also provides power to the Real Time Clock (RTC) to keep it running. Pins 1 and 3 are shorted together and connect to the positive side of the battery. Pin 2 is ground.

Onboard Battery Pin Definitions	
Pins	Definition
1	VBAT1
2	Ground
3	VBAT1

**Chassis Intrusion (JL1 and JL2)**

A Chassis Intrusion header is located at JL1 and JL2 on the motherboard. Attach the appropriate cable from the chassis to the header to inform you when the chassis has been opened.


Chassis Intrusion Pin Definitions	
Pins	Definition
1	Intrusion Input
2	Ground

**Datacenter-Ready Secure Control Module (DC-SCM) Connector (JBMC1)**

The 168-pin JBMC1 provides a connection for the Datacenter-Ready Secure Control Module (DC-SCM). The DC-SCM is a separate printed circuit board that contains the security, control, and management functionalities in a modular building block server architecture.

### Front Control Panel

JFP1 contains header pins for various buttons and indicators that are normally located on a control panel at the front of the chassis. These connectors are designed specifically for use with Supermicro chassis. See the figure below for the location of JFP1.

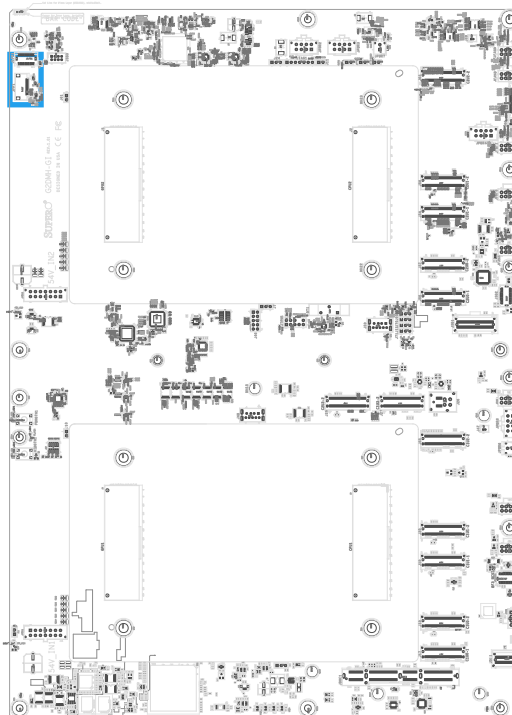

#### JFP1

1	○	Power Button
2	○	UID Reset Switch
3	○	UID LED
4	○	Power Fail LED
5	○	N/A
6	○	N/A
7	○	Drive Activity LED
8	○	Standby Power LED
9	○	Normal Power LED
10	○	3.3 V Standby Power
11	○	Ground
12	○	I2C Data Temperature Sensor
13	○	I2C Clock Temperature Sensor
14	○	Ground
15	○	N/A
16	○	N/A
17	○	N/A
18	○	N/A
19	○	N/A
20	○	Ground

Figure 4-1. JFP1 Pin Definitions

### Power LED

The Power LED connection is located on pins 8 and 9 of JFP1. Refer to the table below for pin definitions.

Power LED Pin Definitions (JFP1)	
Pin#	Definition
8	Standby Power LED
9	Normal Power LED

### M.2 Drive LED

The M.2 drive LED connection is located on pin 7 of JFP1. Attach a drive LED cable here to display drive activity detected on the motherboard's built-in drive controllers. See the table below for pin definitions.

M.2 Drive LED Pin Definitions (JFP1)	
Pin#	Definition
7	Drive Activity LED

### Power Fail LED

The Power Fail LED connection is located on pin 4 of JFP1. Refer to the table below for pin definitions.

Power Fail LED Pin Definitions (JFP1)	
Pin#	Definition
4	Power Fail LED

### UID LED

The UID LED is on pin 3 of JFP1. Connect the front panel UID LED to this header to indicate when the rear UID switch is turned on. Refer to the table below for pin definitions.

UID LED Pin Definitions (JFP1)	
Pin#	Definition
3	UID LED

### UID Reset Button

The UID Reset Button connection is located on pin 2 of JFP1. Attach the hardware UID reset switch from the computer case to this header to reset the system. Refer to the table below for pin definitions.

UID Reset Button Pin Definitions (JFP1)	
Pin#	Definition
2	UID Reset Switch


### Power Button

The Power Button connection is located on pins 1 of JFP1. Momentarily contacting both pins will power on/off the system. This button can also be configured to function as a suspend button (with a setting in the BIOS). To turn off the power in the suspend mode, press the button for at least 4 seconds. Refer to the table below for pin definitions.

Power Button Pin Definitions (JFP1)	
Pin#	Definition
1	Power Button

## 4.3 I/O Ports

I/O ports are located in a module that installs into a rear expansion slot.

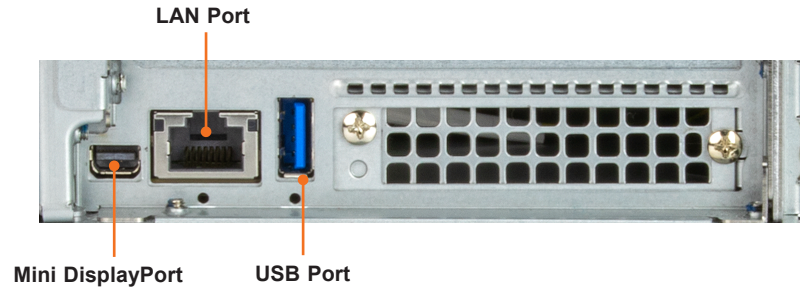

**Figure 4-2. Input/Output Module**

### **LAN Port**

The LAN port on the rear I/O module is a 1GbE dedicated IPMI LAN port.

### **Mini DisplayPort**

Mini DisplayPort connector (digital display interface) used to connect a video source to a display device.

### **Universal Serial Bus (USB) Port**

One USB 3.0 port is included on the I/O module.

## 4.4 LED Indicators

### UID LED (UID\_LED1)

The UID LED is located next to UIDBTN1. One of the buttons is the UIDBTN1 button. Press this button and the LED will blink blue to show that the UID is active. Press the UIDBTN1 button for one second and the LED will turn solid blue. Use this UID LED to 'mark' the system, so the motherboard can be easily identified. See the table below for more information.

UID LED States		
Color	State	Definition
None	Off	UID Off
Blue	Solid On	Unit Identified by Local Site
Blue	Remote (Blinking 1 Hz)	Unit Identified by Remote Site
Blue	Remote (Blinking 1 Hz)	System Recovery

### CPLD Initialization LED (HB\_LED1)

The CPLD Initialization LED is located between two buttons. When the the LED is blinking green it indicates that the CPLD has been initialized. See the table below for more information.

CPLD Initialization LED States		
Color	State	Definition
None	Off	CPLD Uninitialized
Green	Blinking	CPLD Initialization OK

### Motherboard Power LED (PWR\_LED1)

A motherboard power PWR\_LED1 is located next to PWRBTN1. Press the PWRBTN1 and the LED will be solid green. See the table below for more information.

Motherboard Power LED State		
Color	State	Definition
Green	Off	Motherboard power is not ready
Green	Solid On	Motherboard power is ready

### Superchip 0 Power LED (PWR\_LED2)

The Superchip 0 power LED, PWR\_LED2, is located next to JPWR1. Press the PWRBTN1 and the LED will be solid green. See the table below for more information.

Superchip 0 Power LED State		
Color	State	Definition
Green	Off	Superchip module is not ready
Green	Solid On	Superchip module power is ready

### Superchip 1 Power LED (PWR\_LED3)

The Superchip 1 power LED, PWR\_LED3, is located next to JPWR9. Press the PWRBTN1 and the LED will be solid green. See the table below for more information.

Superchip 1 Power LED State		
Color	State	Definition
Green	Off	Superchip module power is not ready
Green	Solid on	Superchip module power is ready

### EROT Fail Detected LED (LED2)

The EROT Fail Detected LED (LED2) shows if an EROT failure has been detected. If the RoT is in a bad state, LED2 is solid red. See the table below for more information.

EROT Fail Detected LED (LED2) State		
Color	State	Definition
Red	Off	EROT failure not detected
Red	Solid On	EROT failure detected

### Normal Power Detected LED (LED3)

The Normal Power Detected LED indicates the motherboard is on normal power. Before pressing PWRBTN1, the LED blinks green. After pressing PWRBTN1, the LED is solid green.

Normal Power Detected LED State		
Color	State	Definition
Green	Blinking	Normal Power not detected
Green	Solid	Normal Power detected

### Standby Power Detected LED (LED4)

The Standby Power Detected LED indicates the motherboard is on standby power. When the system detects standby power at the moment of power-on, the LED will light up and remain on continuously until the user presses PWRBTN. When normal power is turned on, the LED will go out. However, the standby power will remain on.

BMC Heartbeat LED State		
Color	State	Definition
Orange	Solid	Standby Power is detected and PWRBTN has not been pressed
Orange	Off	Standby Power is detected and PWRBTN has been pressed

# Chapter 5

## Software


After the hardware has been installed, you can boot the Operating System (OS). In addition, the following software is supported on the G2DMH-GI.

### 5.1 Ubuntu® Server 22.04 ISO Installation


**Prerequisites:** The repositories can be accessed from the internet. If you are using a proxy server, follow the instructions in the [Ubuntu Server Installation Guide](#) to ensure that the system can access the necessary URIs. Obtain the Ubuntu Server ISO for Arm® image (aarch64) and store it on your local drive. Refer to [Downloading Ubuntu Server](#) for the instructions.

#### *Booting Ubuntu Server 22.04 ISO Remotely*

1. Connect to the BMC. Open a browser in your LAN, navigate to <https://<BMC-IP-address>/>, and log in.

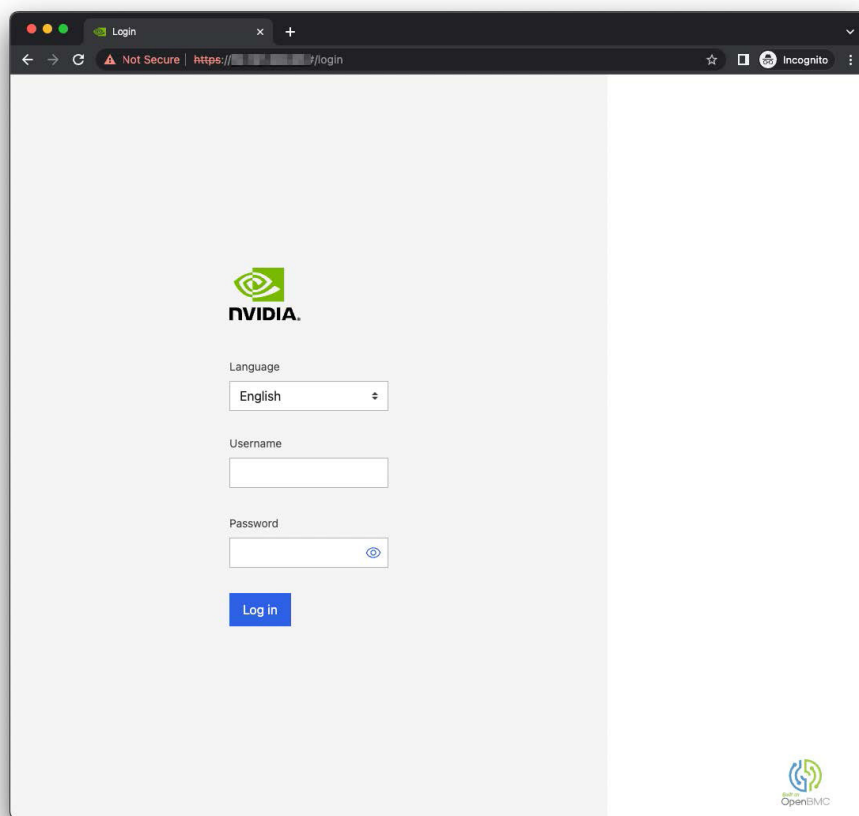

2. Download the ISO image to a location that can be accessed by the browser.
3. Set up the ISO image as virtual media.
  - a. From the left hand menu, expand **Operations**.
  - b. Select **Virtual media**.
  - c. Click **Add file**, navigate to the downloaded ISO image, and select it.
  - d. To begin serving the ISO image to the target server, click **Start**.

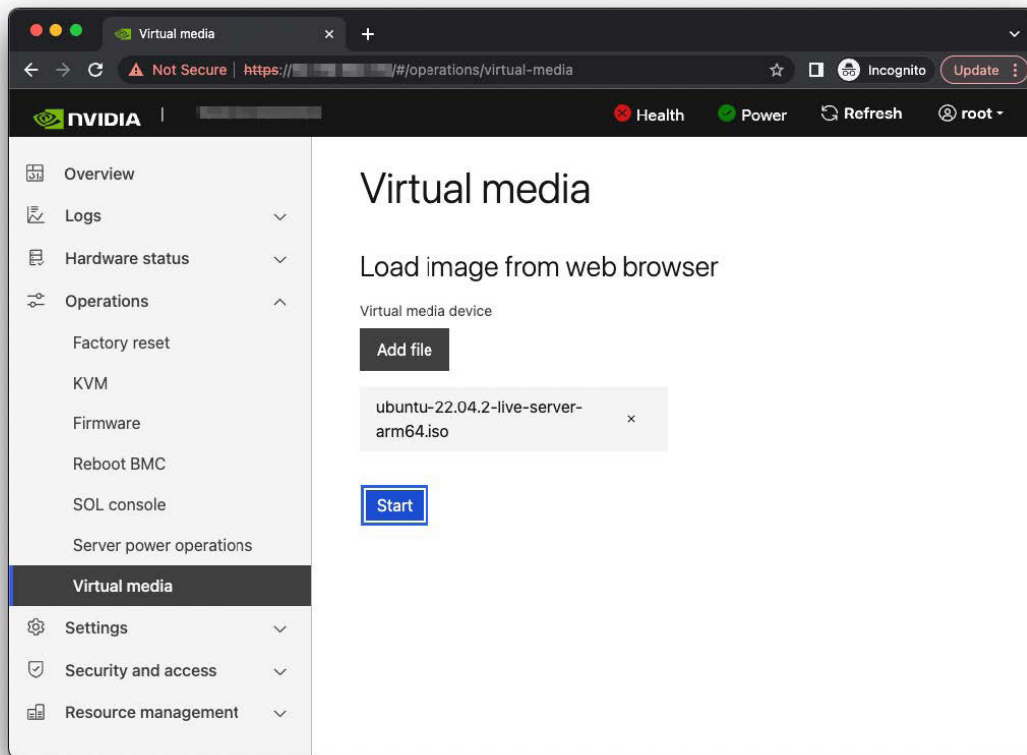

4. Boot from the virtual media. Typically, the default boot order does not boot the CD-ROM image. You can change this in the BIOS or as a one-time option in the boot menu.
  - a. Connect to the console.
    - i. From the left hand menu, expand **Operations**, and select the SOL **console**.
    - ii. Alternatively, SSH to the BMC from a terminal emulator, log in, and at the prompt, run the `obmc-console-client` command.
  - b. To bring up the boot menu, press **Escape** or **F11** at the beginning of the boot process.

```
Terminal
PROGRESS CODE: V02010004 I0
PROGRESS CODE: V02010004 I0
PROGRESS CODE: V02010004 I0
PROGRESS CODE: V02010004 I0
PROGRESS CODE: V02010004 I0
PROGRESS CODE: V02010004 I0
PROGRESS CODE: V02020000 I0
PROGRESS CODE: V02020000 I0
PROGRESS CODE: V02020000 I0
PROGRESS CODE: V02020000 I0
PROGRESS CODE: V03040002 I0
PROGRESS CODE: V03040003 I0
PROGRESS CODE: V03040002 I0
PROGRESS CODE: V03040003 I0
PROGRESS CODE: V03040002 I0
PROGRESS CODE: V03040003 I0
PROGRESS CODE: V03040002 I0
PROGRESS CODE: V03040003 I0
PROGRESS CODE: V03040002 I0
PROGRESS CODE: V03040003 I0
PROGRESS CODE: V02020000 I0
PROGRESS CODE: V02020000 I0
Server System firmware version          date 0000-00-00
ESC   to enter Setup.
F11  to enter Boot Manager Menu.
Enter to continue boot.
BMC IPv4 Address: 00000000-00000000
** WARNING: Test Key is used. **
```

```
Terminal
Grace Hopper x4 P4496
TH500                                3.39 GHz
                                        491520 MB RAM

WARNING: Test key detected.

  Select Language          <English>          This selection will
                                        take you to the Boot
                                        Manager

> Device Manager
> Boot Manager
> Boot Maintenance Manager

Continue
Reset


^v=Move Highlight          <Enter>=Select Entry
```



## Installing Ubuntu Server

**Prerequisites:** This section assumes you have already booted the Ubuntu ISO image.

1. After booting the ISO image, the GRUB boot menu will appear. The menu will time out after 60 seconds. If no action is taken, it will proceed with booting the default selection (**Try or Install Ubuntu Server**).

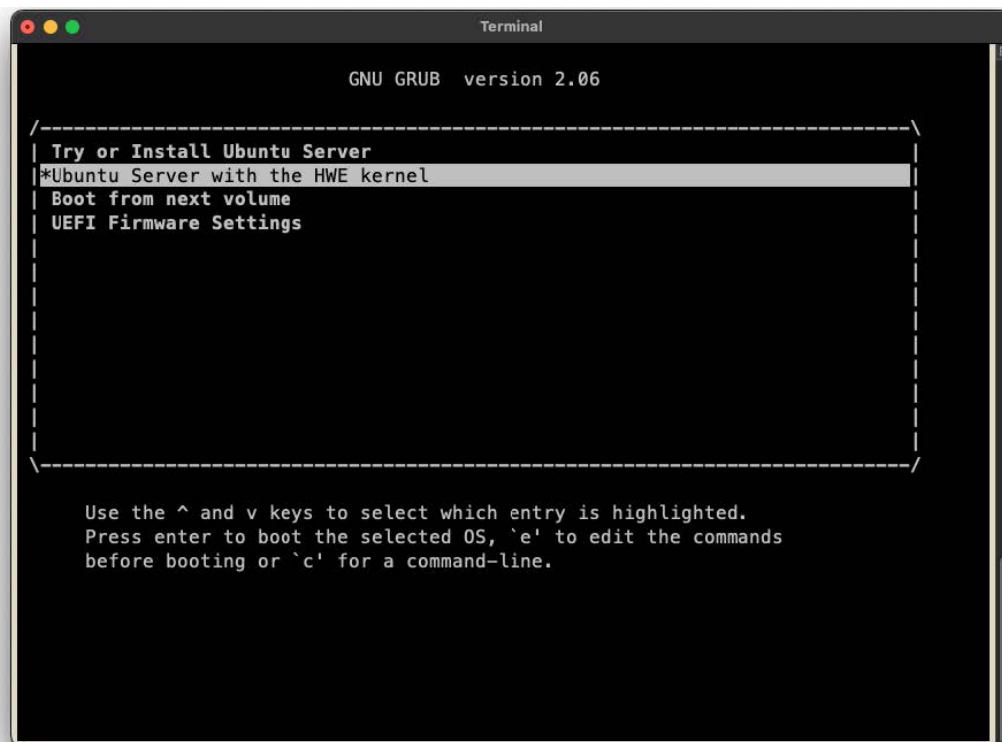


2. To automate the installation with an autoinstall configuration file, refer to Installing with Autoinstall.
3. Select **Ubuntu Server with the HWE kernel**. Refer to the Ubuntu Server Installer Operations for guidance on using the installer. The performance of the Virtual Media device on Grace systems has been known to interfere with the Ubuntu installer, and this issue can cause services and cloud-init to time out. When this is experienced, a hybrid approach to load the kernel and initial ramdisk and use the network to load the rest of the ISO is required:
  - a. Host the Ubuntu Server ISO from a web server. This can be an existing web server or a spontaneous web server.
  - b. Ensure that **Ubuntu Server with the HWE kernel** selected and press **e** from the GRUB boot menu.
  - c. Append `ip=dhcp` and `url=http://webserver:port/path/to/UbuntuServer.iso` to the list of kernel boot parameters. When the system has multiple network interfaces, you might be required to configure an interface with DHCP. This can be accomplished by specifying `ip=:::;<interface_`


name>:dhcp::: instead of ip=dhcp, and this format can also be used to configure the interface with a static IP address configuration. Refer to the nfsroot documentation for more information about how to use this kernel boot parameter.

d. To boot, click **Ctrl+X** or press **F10**. The kernel will display output messages to the console after it begins to boot.


e. Stop the Virtual Media device from the BMC web browser console. The kernel will load the Ubuntu Server ISO from the network and start the installer.


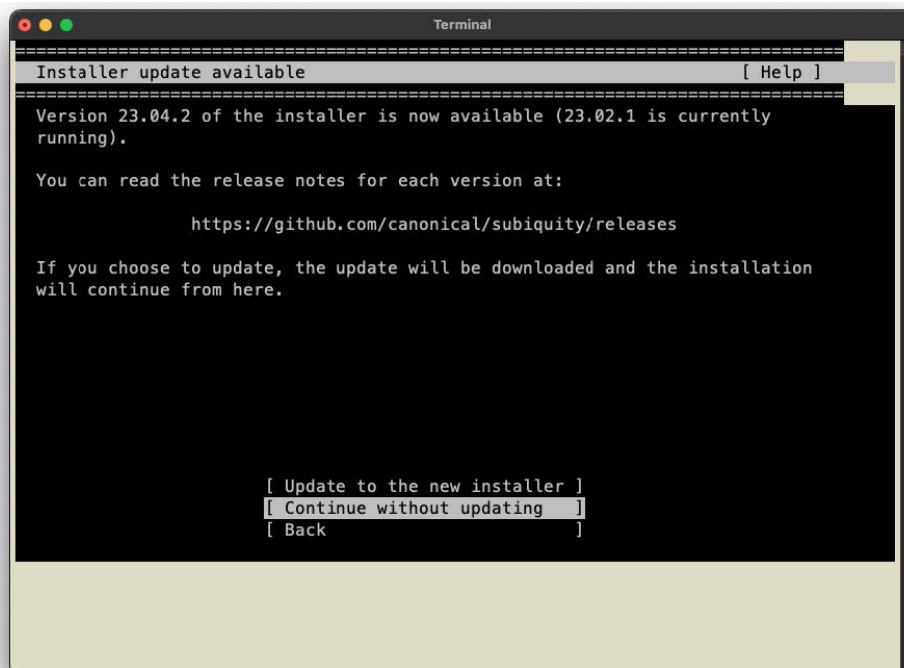



4. Follow the installer prompts to configure the manual installation.

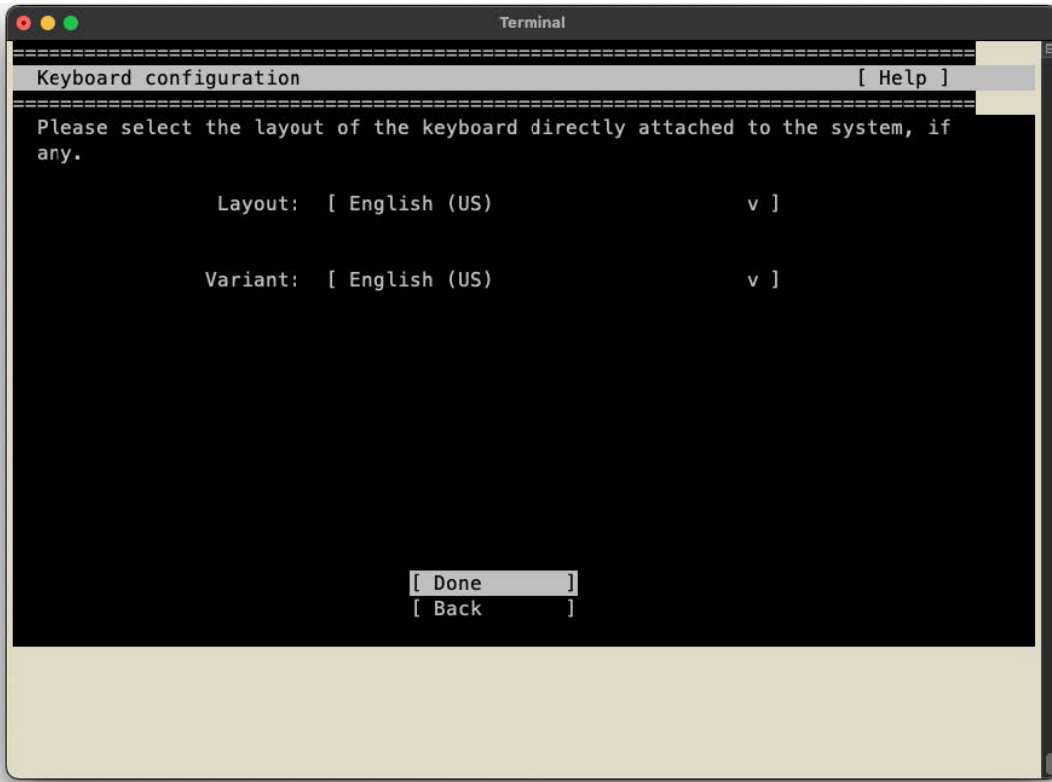


5. Select the text-based installer mode and update the installer if necessary.

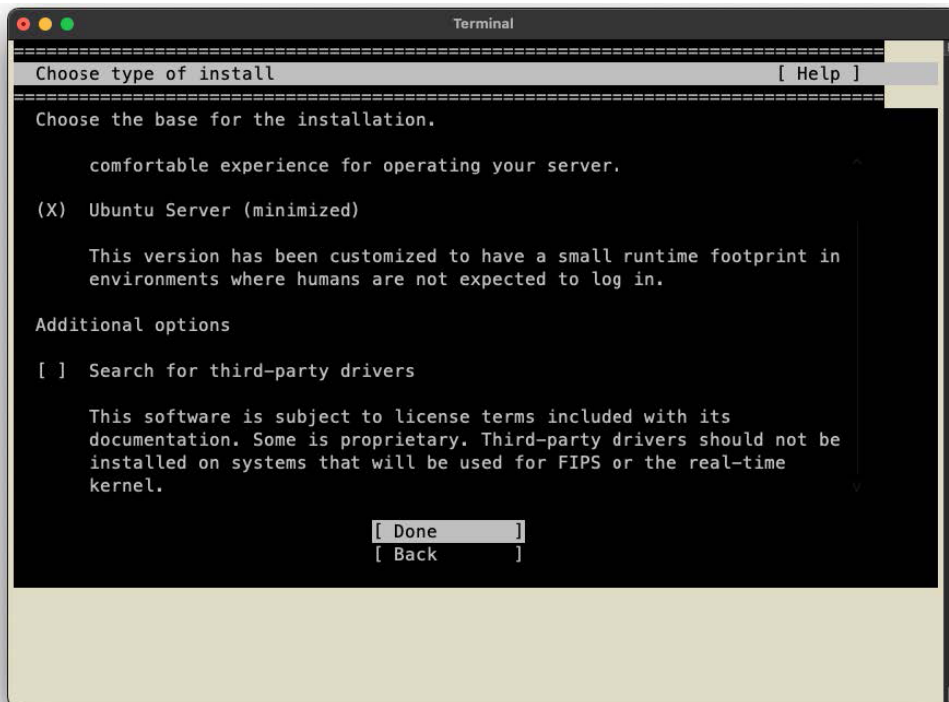


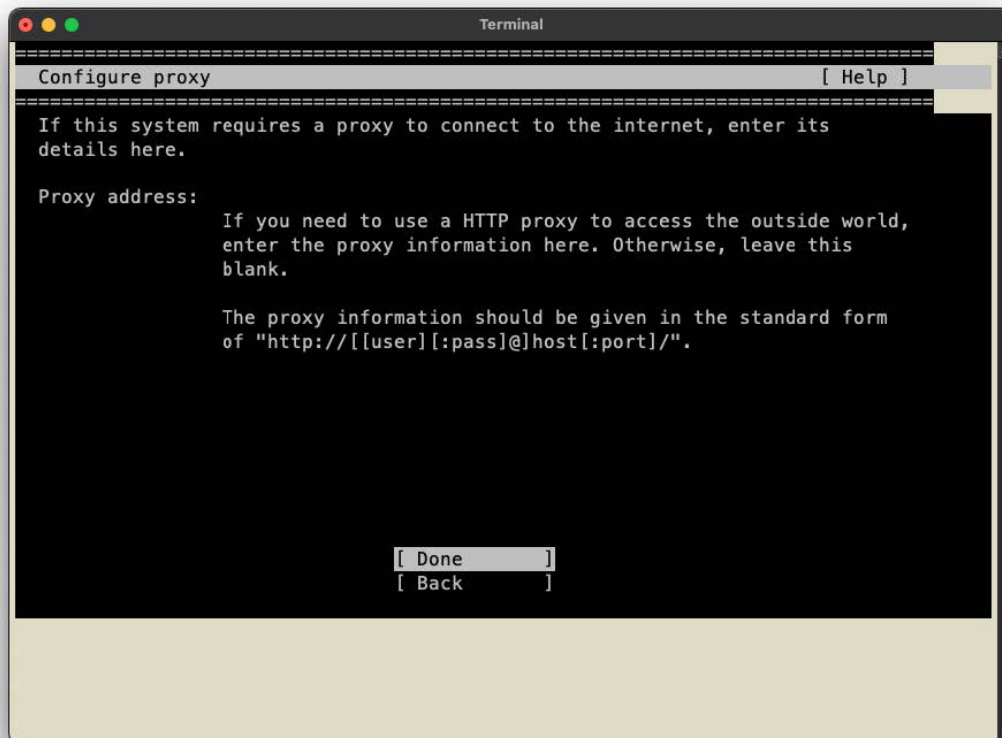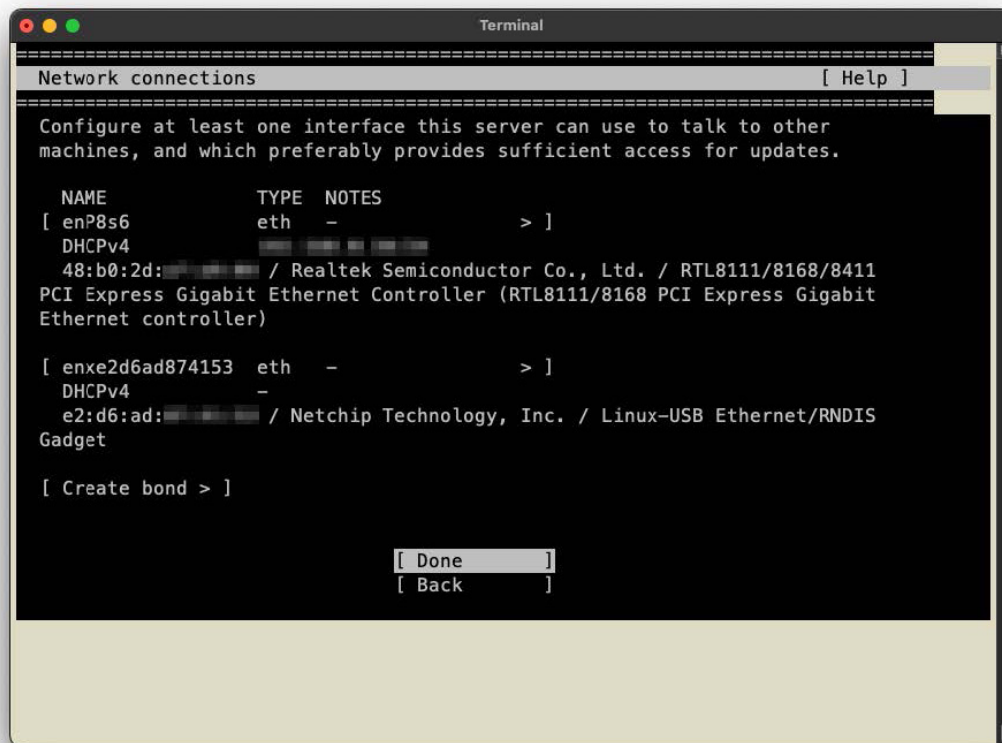6. Select the **Keyboard** configuration.

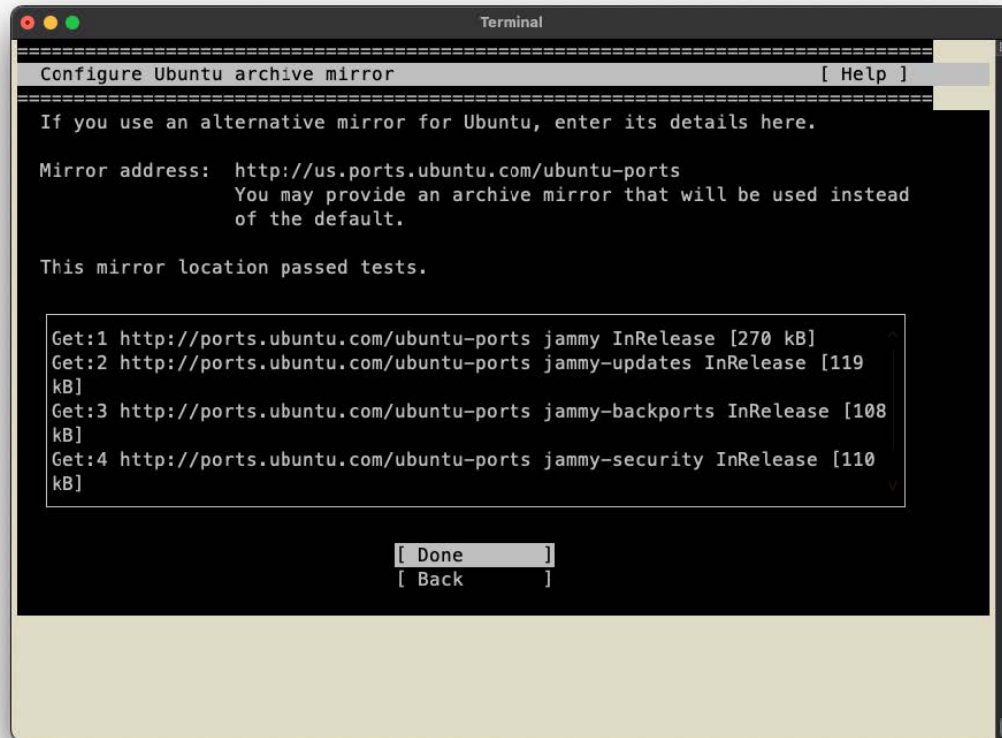

7. Select the base for the installation.

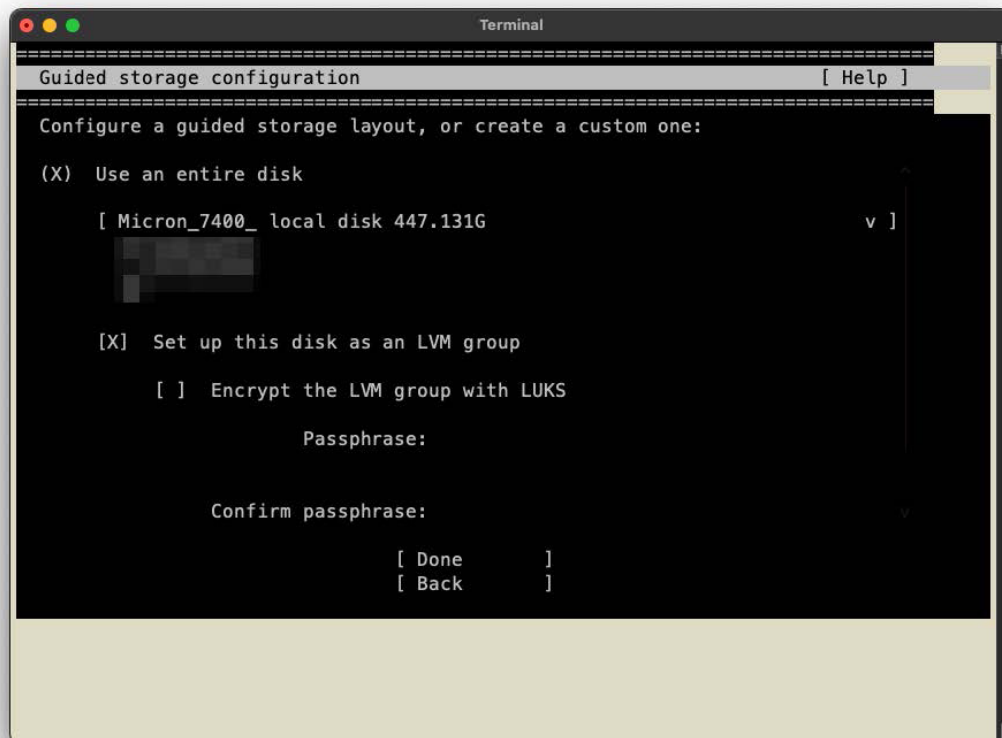

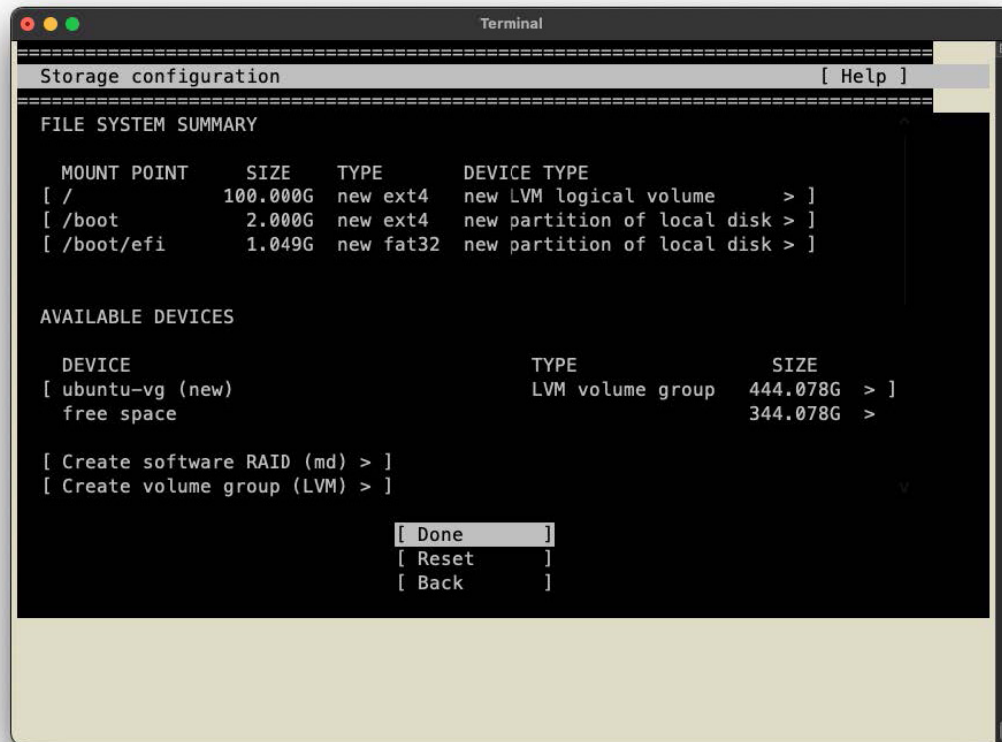

```
Terminal
=====
Storage configuration [ Help ]
=====
FILE SYSTEM SUMMARY


MOUNT POINT      SIZE      TYPE      DEVICE TYPE
[ /              100.000G  new ext4  new LVM logical volume > ]
[ /boot          2.000G   new ext4  new partition of local disk > ]
[ /boot/efi      1.049G   new fat32  new partition of local disk > ]

AVAILABLE DEVICES

DEVICE                                TYPE                                SIZE
[ ubuntu-vg (new)                    LVM volume group                   444.078G > ]
free space                            free space                           344.078G >

[ Create software RAID (md) > ]
[ Create volume group (LVM) > ]

[ Done ]
[ Reset ]
[ Back ]
```

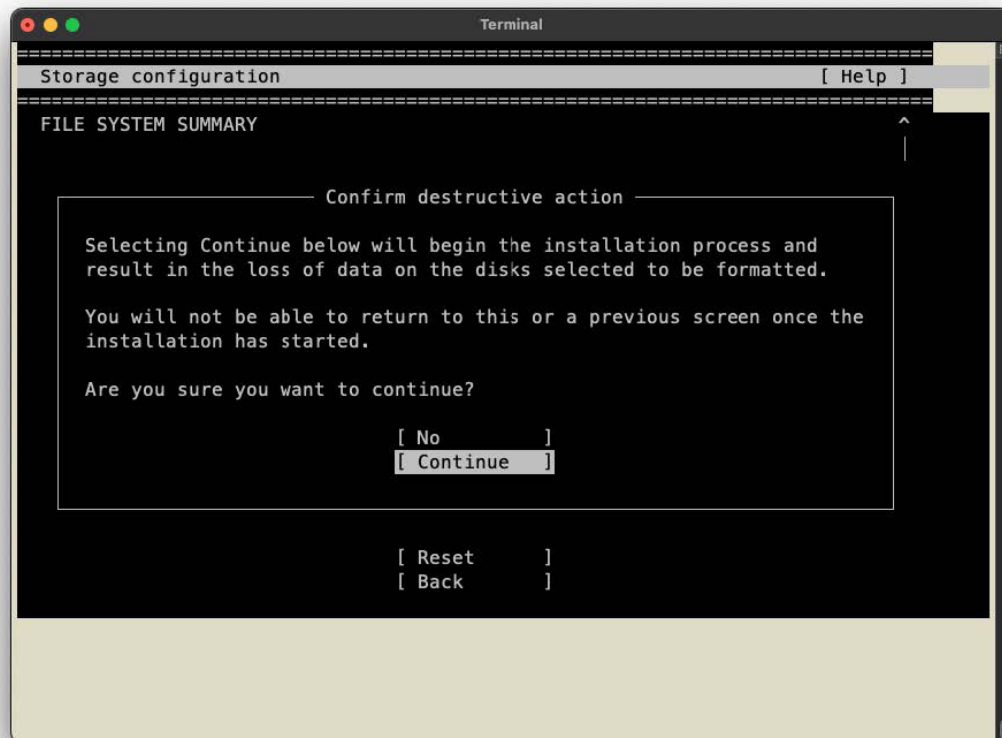

```
Terminal
=====
Storage configuration [ Help ]
=====
FILE SYSTEM SUMMARY

----- Confirm destructive action -----

Selecting Continue below will begin the installation process and
result in the loss of data on the disks selected to be formatted.


You will not be able to return to this or a previous screen once the
installation has started.

Are you sure you want to continue?


[ No ]
[ Continue ]

[ Reset ]
[ Back ]
```


8. Configure the network connections, proxy settings, and Ubuntu archive mirror.

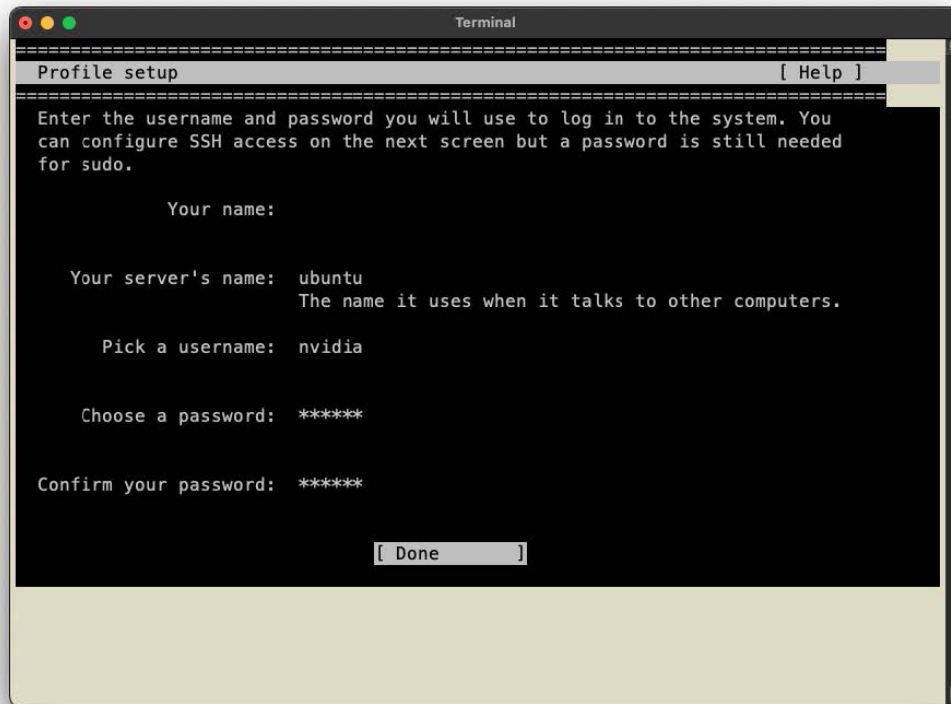

9. Select a storage configuration and confirm the destructive action.

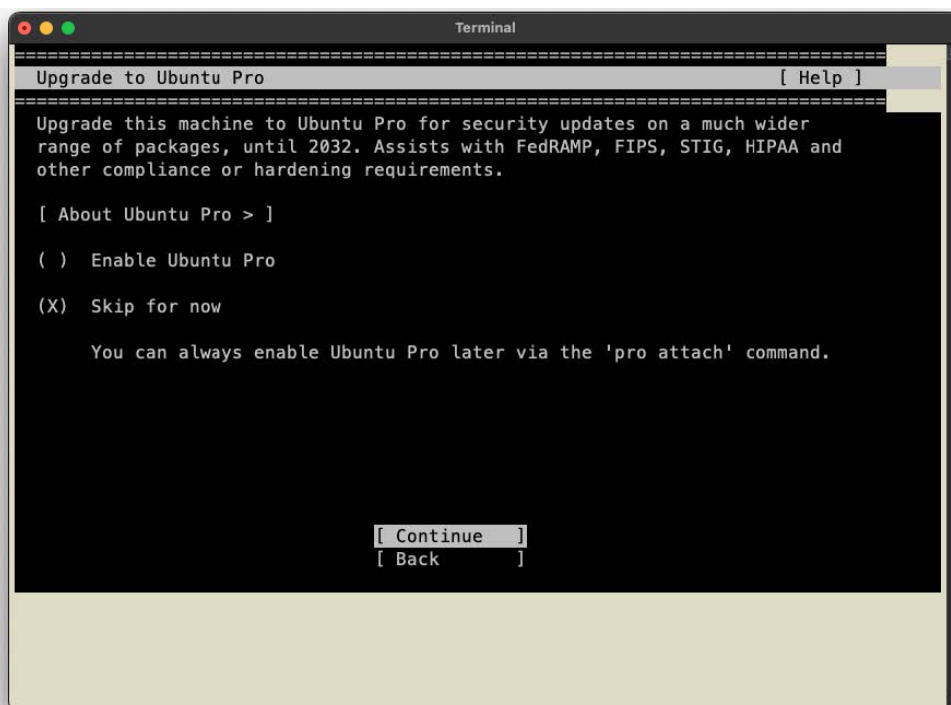


10. Select the system hostname and create a username and password.

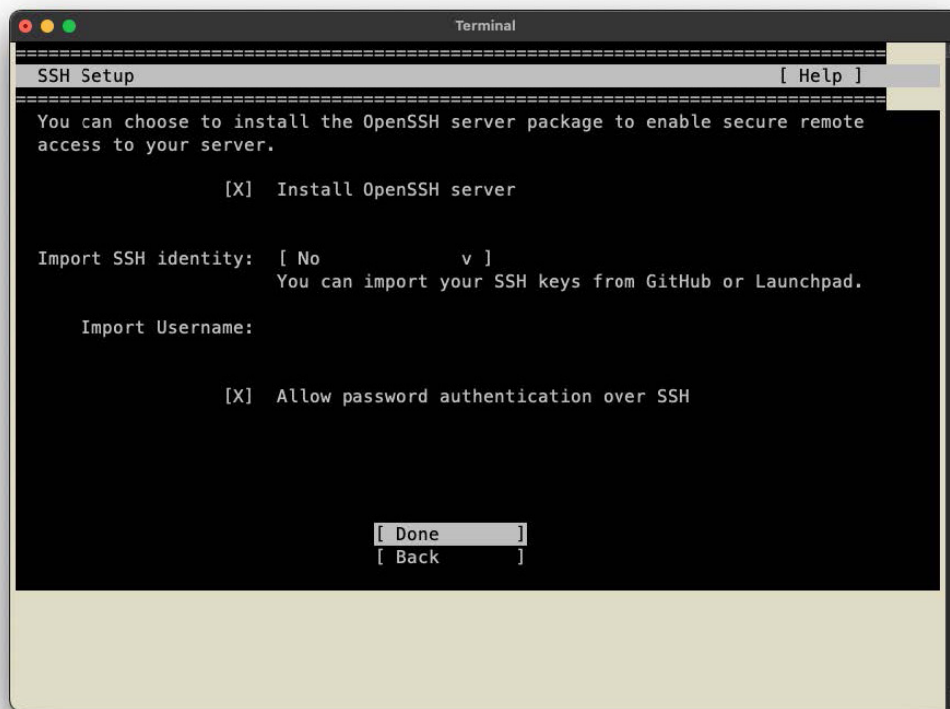

11. Select or decline Ubuntu Pro option for extended support from Canonical.




12. Select the system SSH server and settings.

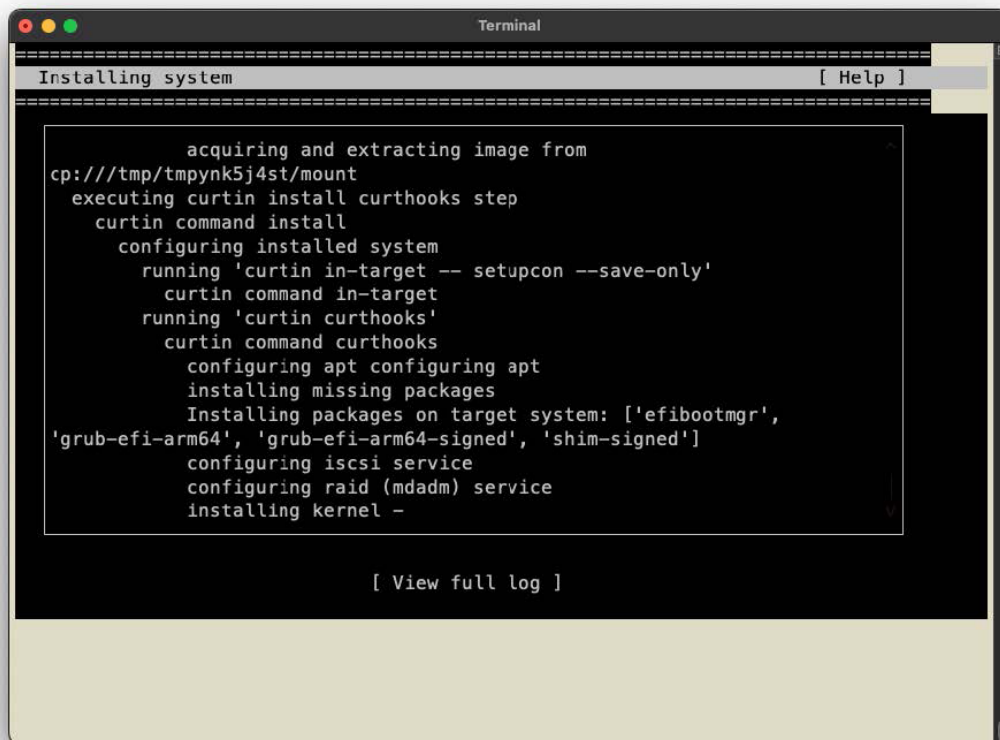

A terminal window titled "Terminal" with a title bar containing window control buttons. The window title is "Installing system" and there is a "[ Help ]" button in the top right. The terminal output shows the following steps:

```
acquiring and extracting image from
cp:///tmp/tmpynk5j4st/mount
executing curtin install curthooks step
curtin command install
configuring installed system
  running 'curtin in-target -- setupcon --save-only'
  curtin command in-target
  running 'curtin curthooks'
  curtin command curthooks
  configuring apt
  installing missing packages
  Installing packages on target system: ['efibootmgr',
'grub-efi-arm64', 'grub-efi-arm64-signed', 'shim-signed']
  configuring iscsi service
  configuring raid (mdadm) service
  installing kernel -
```

[ View full log ]

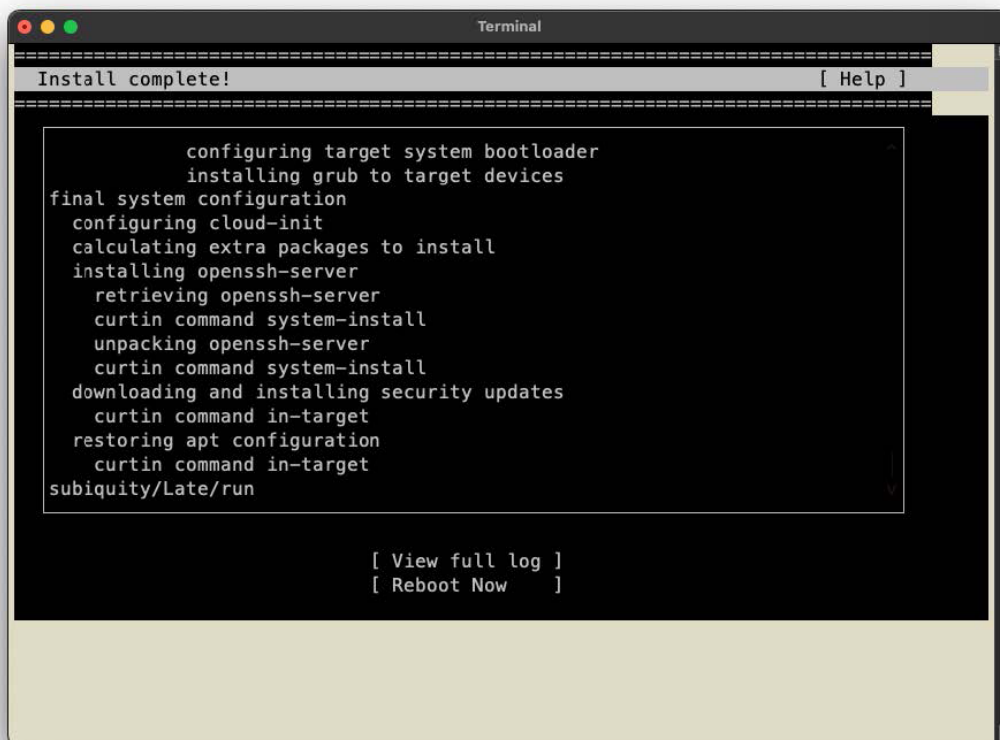


A terminal window titled "Terminal" with a title bar containing window control buttons. The window title is "Install complete!" and there is a "[ Help ]" button in the top right. The terminal output shows the following steps:

```
configuring target system bootloader
installing grub to target devices
final system configuration
  configuring cloud-init
  calculating extra packages to install
  installing openssh-server
  retrieving openssh-server
  curtin command system-install
  unpacking openssh-server
  curtin command system-install
  downloading and installing security updates
  curtin command in-target
  restoring apt configuration
  curtin command in-target
subiquity/Late/run
```

[ View full log ]  
[ Reboot Now ]

13. Select the featured Ubuntu server snaps.
14. System installation begins, wait for the **Install Complete** banner and the **Reboot Now** option before proceeding to the next step.

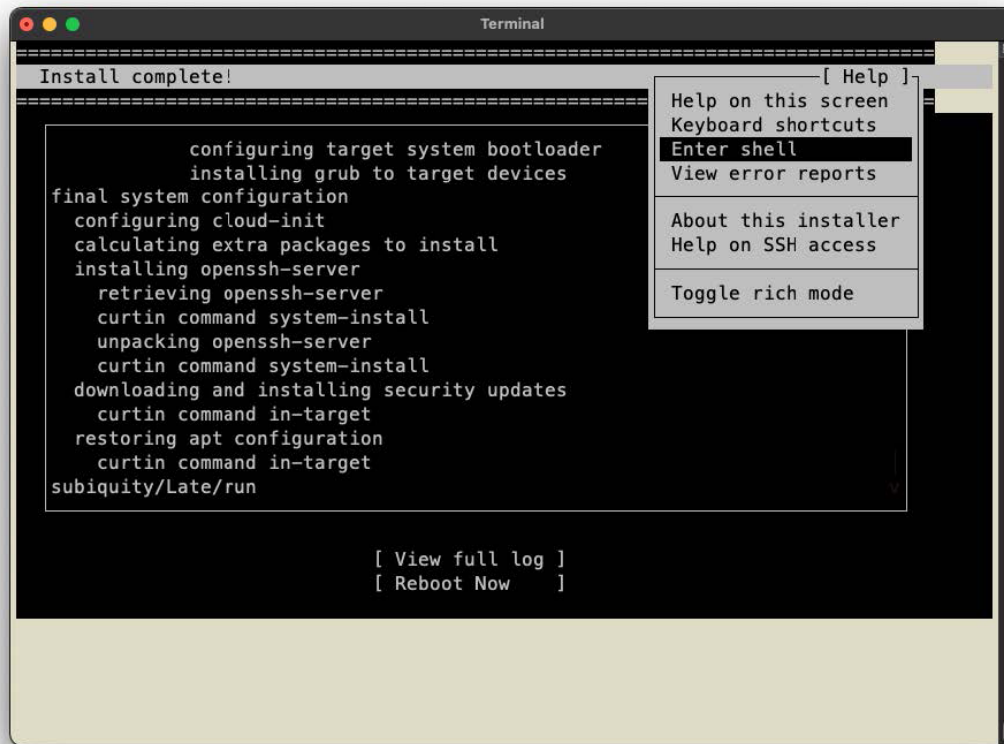

15. Once the installation has completed, **do not reboot**.
16. Use the **tab** key to navigate to the **Help** menu and press **Enter** to display the menu. From the menu, select **Enter shell**.
17. From the shell, to display the grub menu during boot, create

`/target/etc/default/grub.d/menu.cfg` with the following content:

```

GRUB_TIMEOUT_STYLE=menu
GRUB_TIMEOUT=5
GRUB_TERMINAL="console serial"
GRUB_CMDLINE_LINUX_DEFAULT=""
GRUB_SERIAL_COMMAND="$GRUB_SERIAL_COMMAND serial --unit=0
--speed=115200 --word==8
--parity=no --stop=1"
  
```

**Note:** Platform-dependent workarounds in the form of kernel boot parameters can be specified with `GRUB_CMDLINE_LINUX_DEFAULT` in this file.

18. From the shell, to update grub and install the NVIDIA optimized Ubuntu kernel variant, run the following commands:

```
mount --bind /dev /target/dev
cp /etc/resolv.conf /target/run/systemd/resolve/stub-resolv.conf
chroot /target
mount -t proc none /proc
mount -t sysfs none /sys
mount -t devpts none /dev/pts
apt update
apt install linux-nvidia-64k-hwe-22.04 -y
update-grub
exit
```

**Note:** When `linux-nvidia-64k-hwe-22.04` is not available, install `linux-nvidia-64k-6.2` instead.

19. Press **exit** to return from the shell to the installer.
20. From the installer, press the **tab** key to navigate to **Reboot Now**.
21. Press **Enter** to reboot the system.
22. The system will reboot.

The installation on Grace is now complete.

## 5.2 SuperDoctor® 5

The Supermicro SuperDoctor 5 is a program that functions in a command-line or web-based interface for Windows and Linux operating systems. The program monitors such system health information as CPU temperature, system voltages, system power consumption, fan speed, and provides alerts via email or Simple Network Management Protocol (SNMP).

SuperDoctor 5 comes in local and remote management versions and can be used with Nagios to maximize your system monitoring needs. With SuperDoctor 5 Management Server (SSM Server), you can remotely control power on/off and reset chassis intrusion for multiple systems with SuperDoctor 5 or IPMI. SuperDoctor 5 Management Server monitors HTTP, FTP, and SMTP services to optimize the efficiency of your operation.

### SuperDoctor® Manual and Resources

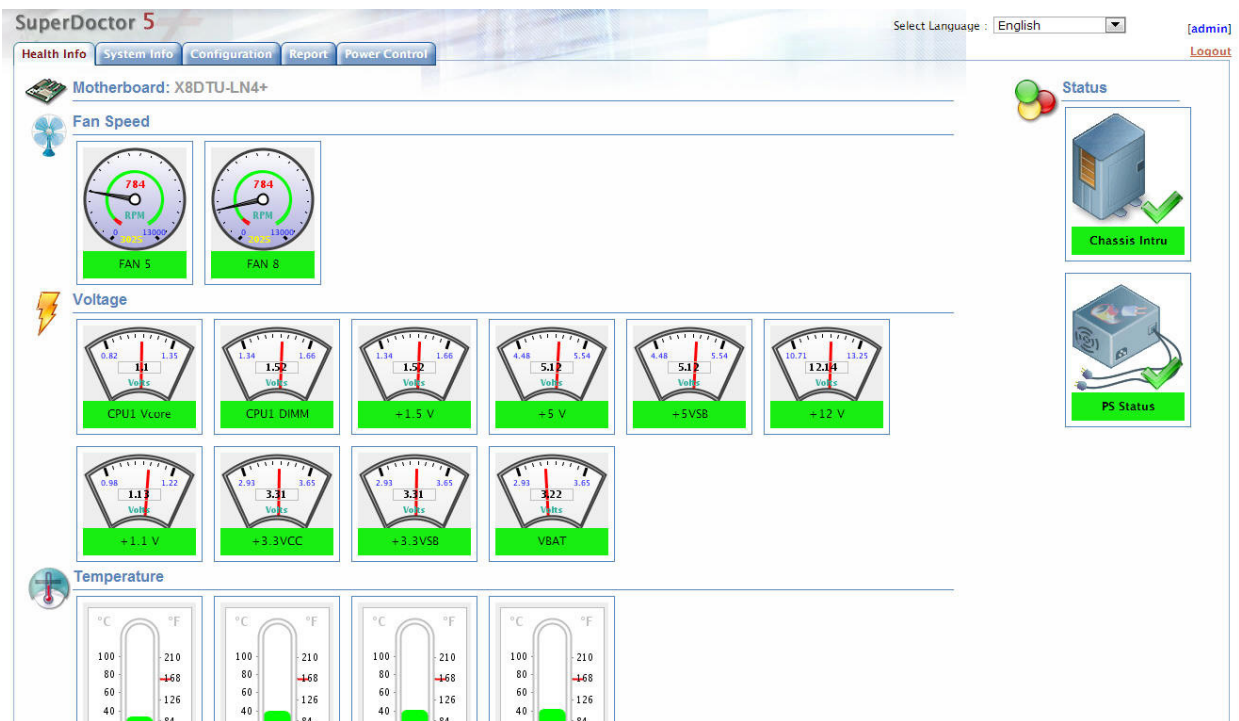


Figure 5-1. SuperDoctor 5 Interface Display Screen (Health Information)

## 5.3 IPMI

The G2DMH-GI supports the Intelligent Platform Management Interface (IPMI). IPMI is used to provide remote access, monitoring and management. There are several BIOS settings that are related to IPMI.

Supermicro ships standard products with a unique password for the BMC ADMIN user. This password can be found on a label on the motherboard.

For general documentation and information on IPMI, please visit our website at:

<http://www.supermicro.com/products/nfo/IPMI.cfm>.

---

---

## Chapter 6

# Optional Components

This chapter describes optional system components and installation procedures.

### 6.1 Optional Parts List

Optional Parts List	
Description	Part Number
Trusted Platform Module (TPM)	AOM-TPM9672V

### 6.2 TPM Security Module

The JTPM1 header is used to connect a Trusted Platform Module (TPM). A TPM is a security device that supports encryption and authentication in hard drives. It enables the motherboard to deny access if the TPM associated with the hard drive is not installed in the system. Details and installation procedures can be found at the following link: <http://www.supermicro.com/manuals/other/TPM.pdf>.

## Chapter 7

# Troubleshooting and Support

### 7.1 Online Resources

A great deal of information is available on the Supermicro [website](#).

- Specifications for servers and other hardware are available by clicking **Products** option.
- The **Support** option offers downloads (manuals, BIOS/BMC, drivers, etc.), FAQs, RMA, warranty, and other service extensions.

#### Direct Links for the ARS-221GL-NHIR System

[ARS-221GL-NHIR specifications page](#)

[G2DMH-GI motherboard page](#) for links to the Quick Reference Guide, User Manual, validated storage drives, etc.

#### Direct Links for General Support and Information

[Frequently Asked Questions](#)

[Add-on Card Descriptions](#)

[TPM User Guide](#)

[SuperDoctor5 Large Deployment Guide](#)

[Product Matrices](#) page for links to tables summarizing specs for systems, motherboards, power supplies, riser cards, add-on cards, etc.

[Security Center](#) for recent security notices

[Supermicro Phone and Addresses](#)

## 7.2 Baseboard Management Controller (BMC)

The system supports the Baseboard Management Controller (BMC). BMC is used to provide remote access, monitoring, and management. There are several BIOS settings that are related to BMC.

For general documentation and information on BMC, please visit our website at: <https://www.supermicro.com/en/solutions/management-software/bmc-resources>.

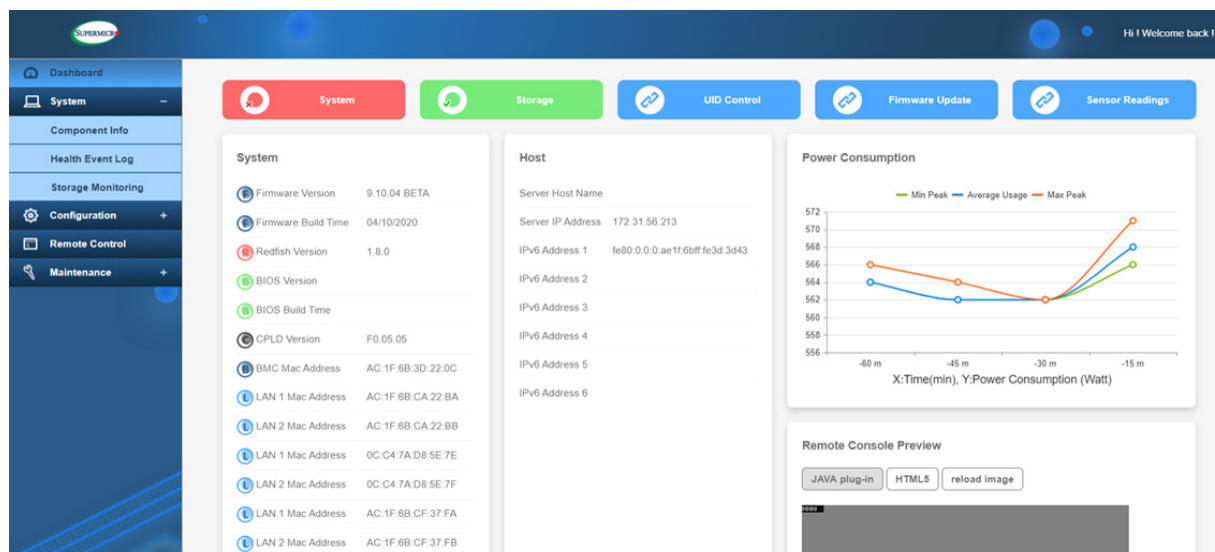


Figure 7-1. BMC Dashboard

## 7.3 Troubleshooting Procedures

Use the following procedures to troubleshoot your system. If you have followed all of the procedures below and still need assistance, refer to the [Technical Support Procedures](#) or [Returning Merchandise for Service](#) section(s) in this chapter. Always disconnect the AC power cables before adding, changing or installing any non-hot-swappable hardware components. If the below steps do not fix the setup configuration problem, contact your vendor for repairs.

### No Power

1. Make sure that there are no short circuits between the motherboard and the chassis.
2. Make sure that the power connectors are properly connected.
3. Turn the power switch on and off to test the system, if applicable.
4. Remove all add-on cards.

### No Video

- If the power is on, but you do not have video, remove all add-on cards and cables.

### System Boot Failure

If the system does not display POST (Power-On-Self-Test) or does not respond after the power is turned on, check the following:

1. Remove all components from the motherboard, especially the DIMM modules. Power on the system and check if the power-on LED (PWR\_LED1) is on and the system fans are spinning.
2. Turn on the system with only one DIMM module installed. If the system boots, check for bad DIMM modules or slots by following the Memory Errors Troubleshooting procedure in this chapter.

### Losing the System's Setup Configuration

- The battery on your motherboard may be old. Check to verify that it still supplies approximately 3 VDC. If it does not, replace it with a new one.

## When the System Becomes Unstable

### ***A. If the system becomes unstable during or after OS installation, check the following:***

1. Storage Drive support: Make sure that all storage drives work properly. Replace the failed storage drives with good ones.
2. System cooling: Check the system cooling to make sure that all heatsink fans and CPU/system fans, etc., work properly. Check the hardware monitoring settings in the BMC to make sure that the CPU and system temperatures are within the normal range. Also, check the front panel Overheat LED and make sure that it is not on.
3. Adequate power supply: Make sure the PSU is supplied from Supermicro.
4. Proper software support: Make sure that the correct drivers are used.

### ***B. If the system becomes unstable before or during OS installation, check the following:***

1. Source of installation: Make sure that the devices used for installation are working properly, including boot devices such as CD/Media drive.
2. Cable connection: Check to make sure that all cables are connected and working properly.
3. Using the minimum configuration for troubleshooting: Remove all unnecessary components (starting with add-on cards first), and use the minimum configuration (but with a CPU and GPU installed) to identify the trouble areas. Refer to the steps listed in [Section 7.3](#) above for proper troubleshooting procedures.
4. Identifying bad components by isolating them. If necessary, remove a component in question from the chassis, and test it in isolation to make sure that it works properly. Replace a bad component with a good one.
5. Check and change one component at a time instead of changing several items at the same time. This will help isolate and identify the problem.
6. To find out if a component is good, swap this component with a new one to see if the system will work properly. If so, then the old component is bad. You can also install the component in question in another system. If the new system works, the component is good and the old system has problems.

## 7.4 BIOS Load Default

The BIOS setting clear or password reset can be done through the BIOS update process.

### *To Clear BIOS Settings or Reset the Password*

- When updating the BIOS in the WebGUI, un-select the requirements to preserve BIOS setup configuration and password.

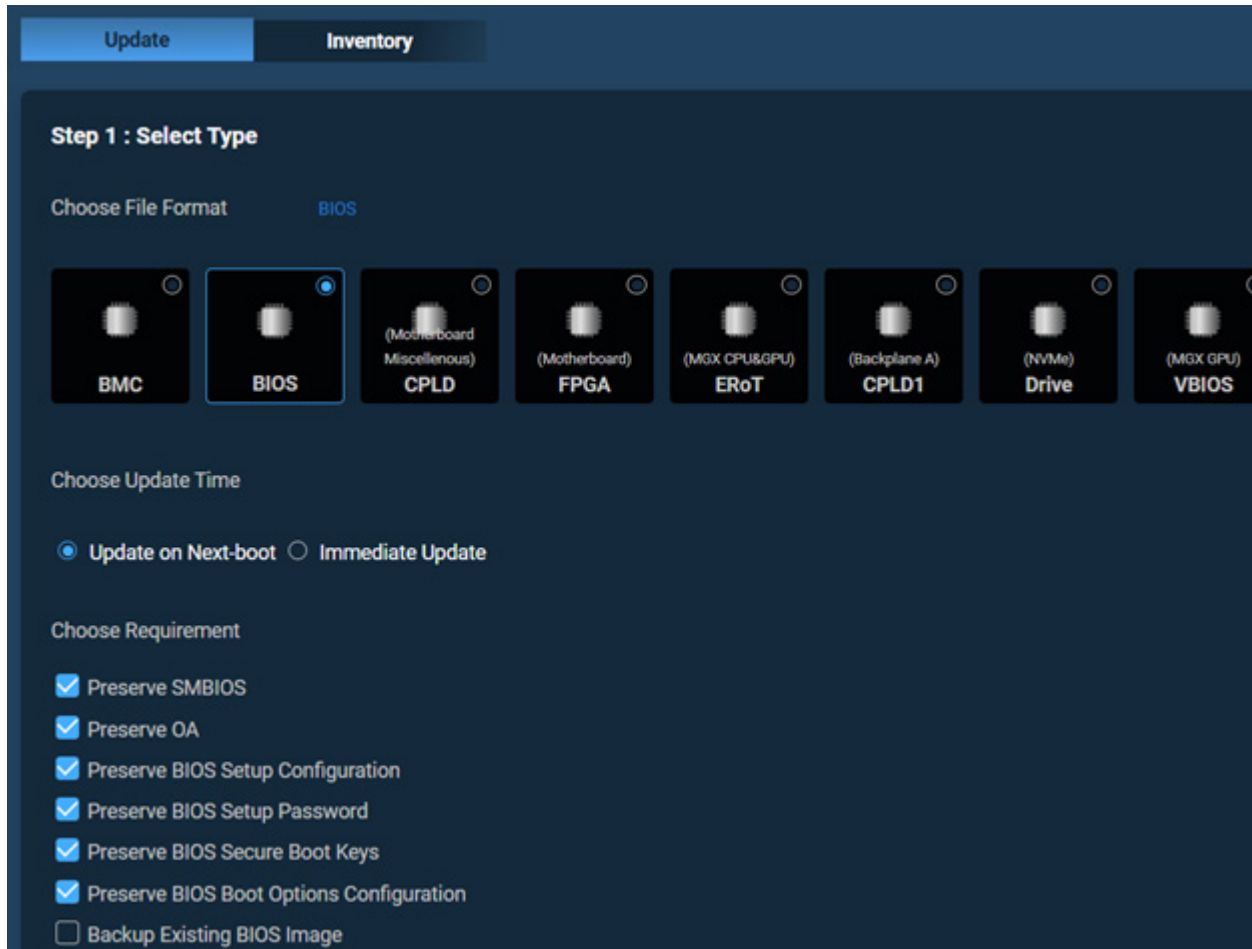


Figure 7-2. Settings and Password Preservation Options

## 7.5 Where to Get Replacement Components

If you need replacement parts for your system, to ensure the highest level of professional service and technical support, purchase exclusively from our Supermicro Authorized Distributors/System Integrators/Resellers. A list can be found at: <http://www.supermicro.com/>. Click the "Where to Buy" tab.

## 7.6 Technical Support Procedures

Before contacting Technical Support, please take the following steps. Also, please note that as a motherboard manufacturer, Supermicro also sells motherboards through its channels, so it is best to first check with your distributor or reseller for troubleshooting services. They should know of any possible problems with the specific system configuration that was sold to you.

1. Please go through the Troubleshooting Procedures and Frequently Asked Questions (FAQ) sections in this chapter or see the FAQs on our website (<http://www.supermicro.com/FAQ/index.php>) before contacting Technical Support.
2. BIOS upgrades can be downloaded from our website ([http://www.supermicro.com/ResourceApps/BIOS\\_BMC\\_Intel.html](http://www.supermicro.com/ResourceApps/BIOS_BMC_Intel.html)).
3. If you still cannot resolve the problem, include the following information when contacting Supermicro for technical support:
  - Motherboard model and PCB revision number
  - BIOS release date/version (This can be seen on the initial display when your system first boots up.)
  - System configuration
4. An example of a Technical Support form is on our website at <http://www.supermicro.com/RmaForm/>.
5. Distributors: For immediate assistance, please have your account number ready when placing a call to our Technical Support department. We can be reached by email at [support@supermicro.com](mailto:support@supermicro.com).

## Returning Merchandise for Service

A receipt or copy of your invoice marked with the date of purchase is required before any warranty service will be rendered. You can obtain service by calling your vendor for a Returned Merchandise Authorization (RMA) number. When returning to the manufacturer, the RMA number should be prominently displayed on the outside of the shipping carton, and mailed prepaid or hand-carried. Shipping and handling charges will be applied for all orders that must be mailed when service is complete.

For faster service, RMA authorizations may be requested online (<http://www.supermicro.com/support/rma/>).

This warranty only covers normal consumer use and does not cover damages incurred in shipping or from failure due to the alternation, misuse, abuse or improper maintenance of products.

During the warranty period, contact your distributor first for any product problems.

## 7.7 Feedback

Supermicro values your feedback as we strive to improve our customer experience in all facets of our business. To provide feedback on our manuals, please email us at [techwriterteam@supermicro.com](mailto:techwriterteam@supermicro.com).

---

---

## 7.8 Contacting Supermicro

### Headquarters

Address: Super Micro Computer, Inc.  
980 Rock Ave.  
San Jose, CA 95131 U.S.A.

Tel: +1 (408) 503-8000

Fax: +1 (408) 503-8008

Email: [marketing@supermicro.com](mailto:marketing@supermicro.com) (General Information)  
[Sales-USA@supermicro.com](mailto:Sales-USA@supermicro.com) (Sales Inquiries)  
[Government\\_Sales-USA@supermicro.com](mailto:Government_Sales-USA@supermicro.com) (Gov. Sales Inquiries)  
[support@supermicro.com](mailto:support@supermicro.com) (Technical Support)  
[RMA@supermicro.com](mailto:RMA@supermicro.com) (RMA Support)  
[Webmaster@supermicro.com](mailto:Webmaster@supermicro.com) (Webmaster)

Website: [www.supermicro.com](http://www.supermicro.com)

### Europe

Address: Super Micro Computer B.V.  
Het Sterrenbeeld 28, 5215 ML  
's-Hertogenbosch, The Netherlands

Tel: +31 (0) 73-6400390

Fax: +31 (0) 73-6416525

Email: [Sales\\_Europe@supermicro.com](mailto:Sales_Europe@supermicro.com) (Sales Inquiries)  
[Support\\_Europe@supermicro.com](mailto:Support_Europe@supermicro.com) (Technical Support)  
[RMA\\_Europe@supermicro.com](mailto:RMA_Europe@supermicro.com) (RMA Support)

Website: [www.supermicro.nl](http://www.supermicro.nl)

### Asia-Pacific

Address: Super Micro Computer, Inc.  
3F, No. 150, Jian 1st Rd.  
Zhonghe Dist., New Taipei City 235  
Taiwan (R.O.C)

Tel: +886-(2) 8226-3990

Fax: +886-(2) 8226-3992

Email: [Sales-Asia@supermicro.com.tw](mailto:Sales-Asia@supermicro.com.tw) (Sales Inquiries)  
[Support@supermicro.com.tw](mailto:Support@supermicro.com.tw) (Technical Support)  
[RMA@supermicro.com.tw](mailto:RMA@supermicro.com.tw) (RMA Support)

Website: [www.supermicro.com.tw](http://www.supermicro.com.tw)

## Appendix A

# Standardized Warning Statements for AC Systems

### About Standardized Warning Statements

The following statements are industry standard warnings, provided to warn the user of situations which have the potential for bodily injury. Should you have questions or experience difficulty, contact Supermicro's Technical Support department for assistance. Only certified technicians should attempt to install or configure components.

Read this appendix in its entirety before installing or configuring components in the Supermicro chassis.

These warnings may also be found on our website at [http://www.supermicro.com/about/policies/safety\\_information.cfm](http://www.supermicro.com/about/policies/safety_information.cfm).

### Warning Definition



**Warning!** This warning symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents.

警告!この警告サインは危険を意味します。人身事故につながる可能性がありますので、いずれの機器でも動作させる前に、電気回路に含まれる危険性に注意して、標準的な事故防止策に精通して下さい。

警告! 此警告符号代表危险。您正处于可能受到严重伤害的工作环境中。在您使用设备开始工作之前, 必须充分意识到触电的危险, 并熟练掌握防止事故发生的标准工作程序。请根据每项警告结尾的声明号码找到此设备的安全性警告说明的翻译文本。

警告! 此警告符号代表危险。您正处于可能身體可能會受損傷的工作環境中。在您使用任何設備之前, 請注意觸電的危險, 並且要熟悉預防事故發生的標準工作程序。請依照每一注意事項後的號碼找到相關的翻譯說明內容。

**WICHTIGE SICHERHEITSHINWEISE.**

Dieses Warnsymbol bedeutet Gefahr. Sie befinden sich in einer Situation, die zu Verletzungen führen kann. Machen Sie sich vor der Arbeit mit Geräten mit den Gefahren elektrischer Schaltungen und den üblichen Verfahren zur Vorbeugung vor Unfällen vertraut. Suchen Sie mit der am Ende jeder Warnung angegebenen Anweisungsnummer nach der jeweiligen Übersetzung in den übersetzten Sicherheitshinweisen, die zusammen mit diesem Gerät ausgeliefert wurden. BEWAHREN SIE DIESE HINWEISE GUT AUF.

**INSTRUCCIONES IMPORTANTES DE SEGURIDAD.**

Este símbolo de aviso indica peligro. Existe riesgo para su integridad física. Antes de manipular cualquier equipo, considere los riesgos de la corriente eléctrica y familiarícese con los procedimientos estándar de prevención de accidentes. Al final de cada advertencia encontrará el número que le ayudará a encontrar el texto traducido en el apartado de traducciones que acompaña a este dispositivo. GUARDE ESTAS INSTRUCCIONES.

**IMPORTANTES INFORMATIONS DE SÉCURITÉ.**

Ce symbole d'avertissement indique un danger. Vous vous trouvez dans une situation pouvant entraîner des blessures ou des dommages corporels. Avant de travailler sur un équipement, soyez conscient des dangers liés aux circuits électriques et familiarisez-vous avec les procédures couramment utilisées pour éviter les accidents. Pour prendre connaissance des traductions des avertissements figurant dans les consignes de sécurité traduites qui accompagnent cet appareil, référez-vous au numéro de l'instruction situé à la fin de chaque avertissement. CONSERVEZ CES INFORMATIONS.

**תקנון הצהרות אזהרה**

הצהרות הבאות הן אזהרות על פי תקני התעשייה, על מנת להזהיר את המשתמש מפני חבלה פיזית אפשרית. במידה ויש שאלות או היתקלות בבעיה כלשהי, יש ליצור קשר עם מחלקת תמיכה טכנית של סופרמיקרו. טכנאים מוסמכים בלבד רשאים להתקין או להגדיר את הרכיבים. יש לקרוא את הנספח במלואו לפני התקנת או הגדרת הרכיבים במארזי סופרמיקרו.

אֵלָּהּ בַּחַלָּה וְיִי אֵי תִּסְבֵּב בַּאֲבָאָה גִּסְדָּה זֶהָ הַזְּהִיז עֲחָּזָּה! תַּחַזְּרָה.  
 קִבַּל אֵי תַּעֲוֹל עַל אֵי הַעֲדָת, יִי עַל עֲלֵן בַּלְּוֹחָטֵז אֶל אֲגֹוֶה עֵי הַזְּוֹאֵר  
 הַכְּהִיבֵי

וְיִי עַל דְּרָה בַּלְּוֹאֵרֶסַת הַנְּקֵי לֹו עֲוֹעַ וְיִי חֲאֵדַת  
 אֶסְתַּחַזֵּם רֵקֵן הַבֵּי אֵי הַלְּוֹחָטֵז בַּחַלָּה וְיִי כֹל תַּחַזְּרָה לְלַעֲשֵׁר תַּזְּגֹוֹתָהּ

안전을 위한 주의사항.

이 경고 기호는 위험이 있음을 알려 줍니다. 작업자의 신체에 부상을 야기 할 수 있는 상태에 있게 됩니다. 모든 장비에 대한 작업을 수행하기 전에 전기회로와 관련된 위험요소들을 확인하시고 사전에 사고를 방지할 수 있도록 표준 작업절차를 준수해 주시기 바랍니다.

해당 번역문을 찾기 위해 각 경고의 마지막 부분에 제공된 경고문 번호를 참조하십시오

#### BELANGRIJKE VEILIGHEIDSINSTRUCTIES

Dit waarschuwings symbool betekent gevaar. U verkeert in een situatie die lichamelijk letsel kan veroorzaken. Voordat u aan enige apparatuur gaat werken, dient u zich bewust te zijn van de bij een elektrische installatie betrokken risico's en dient u op de hoogte te zijn van de standaard procedures om ongelukken te voorkomen. Gebruik de nummers aan het eind van elke waarschuwing om deze te herleiden naar de desbetreffende locatie.

BEWAAR DEZE INSTRUCTIES

## Installation Instructions



**Warning!** Read the installation instructions before connecting the system to the power source.

警告!

システムを電源に接続する前に、設置手順書をお読み下さい。

警告!

将此系统连接电源前,请先阅读安装说明。

警告!

將系統與電源連接前，請先閱讀安裝說明。

Warnung!

Vor dem Anschließen des Systems an die Stromquelle die Installationsanweisungen lesen.

¡Advertencia!

Lea las instrucciones de instalación antes de conectar el sistema a la red de alimentación.

Attention!

Avant de brancher le système sur la source d'alimentation, consulter les directives d'installation.

אזהרה!

יש לקרוא את הוראות התקנה לפני חיבור המערכת למקור מתח.

تحذير!

اقر إرشادات التركيب قبل توصيل النظام إلى مصدر للطاقة

경고!

시스템을 전원에 연결하기 전에 설치 안내를 읽어주십시오.

Waarschuwing!

Raadpleeg de installatie-instructies voordat u het systeem op de voedingsbron aansluit.

## Circuit Breaker



**Warning!** This product relies on the building's installation for short-circuit (overcurrent) protection. Ensure that the protective device is rated not greater than: 250 V, 20 A.

警告!

この製品は、短絡(過電流)保護装置がある建物での設置を前提としています。  
保護装置の定格が250 V、20 Aを超えないことを確認下さい。

警告!

此产品的短路(过载电流)保护由建筑物的供电系统提供, 确保短路保护设备的额定电流不大于250 V、20 A。

警告!

此產品的短路(過載電流)保護由建築物的供電系統提供, 確保短路保護設備的額定電流不大於250 V、20 A。

Warnung!

Dieses Produkt ist darauf angewiesen, dass im Gebäude ein Kurzschluss bzw. Überstromschutz installiert ist. Stellen Sie sicher, dass der Nennwert der Schutzvorrichtung nicht mehr als: 250 V, 20 A beträgt.

¡Advertencia!

Este equipo utiliza el sistema de protección contra cortocircuitos (o sobrecorrientes) del edificio. Asegúrese de que el dispositivo de protección no sea superior a: 250 V, 20 A.

Attention!

Pour ce qui est de la protection contre les courts-circuits (surtension), ce produit dépend de l'installation électrique du local. Vérifiez que le courant nominal du dispositif de protection n'est pas supérieur à: 250 V, 20 A.

אזהרה!

מוצר זה מסתמך על הגנה המותקנת במבנים למניעת קצר חשמלי. יש לוודא כי  
המכשיר המגן מפני הקצר החשמלי הוא לא יותר מ-250 V, 20 A.

تحذير!

هذا المنتج يعتمد على معدات الحماية من الدوائر القصيرة التي تم تثبيتها في

المبنى

تأكد من أن تقييم الجهاز الوقائي ليس أكثر من : 20 A, 250 V

경고!

이 제품은 전원의 단락(과전류)방지에 대해서 전적으로 건물의 관련 설비에 의존합니다.  
보호장치의 정격이 반드시 250 V(볼트), 20 A(암페어)를 초과하지 않도록 해야 합니다.

Waarschuwing!

Dit product is afhankelijk van de kortsluitbeveiliging (overspanning) van uw elektrische installatie. Controleer of het beveiligde apparaat niet groter gedimensioneerd is dan 250 V, 20 A.

## Power Disconnection Warning



**Warning!** The system must be disconnected from all sources of power and the power cord removed from the power supply module(s) before accessing the chassis interior to install or remove system components (except for hot-swappable components).



警告!

システムコンポーネントの取り付けまたは取り外しのために、シャーシ内部にアクセスするには、システムの電源はすべてのソースから切断され、電源コードは電源モジュールから取り外す必要があります。

警告!

在你打开机箱并安装或移除内部器件前，必须将系统完全断电，并移除电源线。

警告！

在您打開機殼安裝或移除內部元件前，必須將系統完全斷電，並移除電源線。

Warnung

Das System muss von allen Quellen der Energie und vom Netzanschlusskabel getrennt sein, das von den Spg.Versorgungsteilmodulen entfernt wird, bevor es auf den Chassisinnenraum zurückgreift, um Systemsbestandteile anzubringen oder zu entfernen.

¡Advertencia!

El sistema debe ser disconnected de todas las fuentes de energía y del cable eléctrico quitado de los módulos de fuente de alimentación antes de tener acceso el interior del chasis para instalar o para quitar componentes de sistema.

Attention!

Le système doit être débranché de toutes les sources de puissance ainsi que de son cordon d'alimentation secteur avant d'accéder à l'intérieur du chasis pour installer ou enlever des composants de système.

אזהרה!

יש לנתק את המערכת מכל מקורות החשמל ויש להסיר את כבל החשמלי מהספק לפני גישה לחלק הפנימי של המארז לצורך התקנת או הסרת רכיבים.

تحذير!

يجب فصل انظاؤ من جميع مصادر انطاقت وإزانت سهك انكهرباء من وحدة امداد انطاقت قيم  
انصل إلى امناطق انداخهيت نههيكم نتشيج أو إزانت مكناث الجهاز

경고!

시스템에 부품들을 장착하거나 제거하기 위해서는 쉐시 내부에 접근하기 전에 반드시 전원 공급장치로부터 연결되어있는 모든 전원과 전기코드를 분리해주어야 합니다.

Waarschuwing!

Voordat u toegang neemt tot het binnenwerk van de behuizing voor het installeren of verwijderen van systeem onderdelen, dient u alle spanningsbronnen en alle stroomkabels aangesloten op de voeding(en) van de behuizing te verwijderen

## Equipment Installation



**Warning!** Only authorized personnel and qualified service persons should be allowed to install, replace, or service this equipment.

警告!

トレーニングを受け認定された人だけがこの装置の設置、交換、またはサービスを許可されています。

警告!

只有经过培训且具有资格的人员才能进行此设备的安装、更换和维修。

警告!

只有經過受訓且具資格人員才可安裝、更換與維修此設備。

Warnung!

Nur autorisiertes Personal und qualifizierte Servicetechniker dürfen dieses Gerät installieren, austauschen oder warten.

¡Advertencia!

Sólo el personal autorizado y el personal de servicio calificado deben poder instalar, reemplazar o dar servicio a este equipo.

Attention!

Seul le personnel autorisé et le personnel de maintenance qualifié doivent être autorisés à installer, remplacer ou entretenir cet équipement.

אזהרה!

יש לאפשר רק צוות מורשה ואנשי שירות מוסמכים להתקין, להחליף או לטפל בציוד זה.

تحذير!

ينبغي السماح فقط للموظفين المعتمدين وأفراد الخدمة المؤهلين بتركيب هذا الجهاز أو استبداله أو صيانته.

**경고!**

승인된 직원과 자격을 갖춘 서비스 담당자만이 이 장비를 설치, 교체 또는 서비스할 수 있습니다.

**Waarschuwing!**

Alleen geautoriseerd personeel en gekwalificeerd onderhoudspersoneel mag deze apparatuur installeren, vervangen of onderhouden.

## Rack Stability Hazard



**Warning!** Stability hazard. The rack may tip over causing serious personal injury. Before extending the rack to the installation position, read the installation instructions.

**警告!**

安定性に危険があります。ラックが転倒して、重大な人身事故を引き起こす可能性があります。ラックを設置位置まで伸ばす前に、設置手順をお読みください。設置位置にあるスライドレールに取り付けられた機器に負荷をかけないでください。スライドレールに取り付けられた機器を設置位置に放置しないでください。

**警告!**

稳定性危険。机架可能会翻倒，造成严重的人身伤害。在将机架延伸到安装位置之前，请阅读安装说明。请勿在安装位置对滑轨安装的设备施加任何负载。请勿将滑轨安装的设备留在安装位置。

**警告!**

穩定性危險。機架可能會翻倒，造成嚴重的人身傷害。將機架延伸至安裝位置前，請先閱讀安裝說明。請勿在安裝位置的滑軌安裝設備上放置任何負載。請勿將滑軌安裝設備留在安裝位置。

**Warnung!**

Gefahr der Instabilität. Das Rack kann umkippen und schwere Verletzungen verursachen. Lesen Sie die Installationsanweisungen, bevor Sie das Rack in die Einbauposition ausfahren. Belasten Sie die auf den Gleitschienen montierten Geräte nicht in der Einbauposition. Lassen Sie die auf den Gleitschienen montierten Geräte nicht in der Einbauposition.

**¡Advertencia!**

Peligro de inestabilidad. El rack podría volcarse y causar lesiones personales graves. Antes de extender el rack a la posición de instalación, lea las instrucciones de instalación. No coloque ninguna carga sobre el equipo montado sobre rieles deslizantes en la posición de instalación. No deje el equipo montado sobre rieles deslizantes en la posición de instalación. Sólo el personal autorizado y el personal de servicio calificado deben poder instalar, reemplazar o dar servicio a este equipo.

**Avertissement!**

Danger d'instabilité. Le rack peut basculer et provoquer des blessures corporelles graves. Avant d'étendre le rack en position d'installation, lire les instructions d'installation. Ne pas charger l'équipement monté sur rail de glissière en position d'installation. Ne pas laisser l'équipement monté sur rail de glissière en position d'installation.

אזהרה!

סכנת חוסר יציבות

המתלה עלול להתהפך ולגרום לפציעה חמורה

לפני הארכת המתלה למצב ההתקנה, קרא את הוראות ההתקנה

אין להעמיס כל עומס על הציוד המותקן על מסילת ההחלקה במצב ההתקנה

אל תשאיר את הציוד המותקן על מסילת ההחלקה במצב ההתקנה

تحذير!

خطر عدم الاستقرار.

قد ينقلب الرف مسبباً إصابات جسدية خطيرة.

قبل تمديد الرف إلى موضع التركيب، اقرأ تعليمات التركيب.

لا تضع أي حمولة على الجهاز المثبت على سكة الانزلاق في موضع التركيب.

لا تترك الجهاز المثبت على سكة الانزلاق في موضع التركيب.

**경고!**

안정성 위험. 랙이 넘어져 심각한 개인 부상을 입을 수 있습니다. 랙을 설치 위치까지 확장하기 전에 설치 지침을 읽으십시오. 설치 위치에서 슬라이드 레일 장착 장비에 하중을 가하지 마십시오. 슬라이드 레일 장착 장비를 설치 위치에 두지 마십시오.

**Waarschuwing**

Gevaar voor instabiliteit. Het rek kan kantelen en ernstig persoonlijk letsel veroorzaken. Lees de installatie-instructies voordat u het rek uitschuift naar de installatiepositie. Plaats geen last op de op de glijrail gemonteerde apparatuur in de installatiepositie. Laat de op de glijrail gemonteerde apparatuur niet in de installatiepositie staan.

## Restricted Area



**Warning!** This unit is intended for installation in restricted access areas. A restricted access area can be accessed only through the use of a special tool, lock and key, or other means of security. (This warning does not apply to workstations).

警告！

このユニットは、アクセス制限区域に設置されることを想定しています。アクセス制限区域は、特別なツール、鍵と錠前、その他のセキュリティの手段を用いてのみ出入りが可能です。

警告！

此部件应安装在限制进出的场所。限制进出的场所指只能通过使用特殊工具、锁和钥匙或其它安全手段进出的场所。

警告！

此裝置僅限安裝於進出管制區域。進出管制區域係指僅能以特殊工具、鎖頭及鑰匙或其他安全方式才能進入的區域。

Warnung!

Diese Einheit ist zur Installation in Bereichen mit beschränktem Zutritt vorgesehen. Der Zutritt zu derartigen Bereichen ist nur mit einem Spezialwerkzeug, Schloss und Schlüssel oder einer sonstigen Sicherheitsvorkehrung möglich.

¡Advertencia!

Esta unidad ha sido diseñada para instalación en áreas de acceso restringido. Sólo puede obtenerse acceso a una de estas áreas mediante la utilización de una herramienta especial, cerradura con llave u otro medio de seguridad.

Attention!

Cet appareil doit être installée dans des zones d'accès réservés. L'accès à une zone d'accès réservé n'est possible qu'en utilisant un outil spécial, un mécanisme de verrouillage et une clé, ou tout autre moyen de sécurité.

אזהרה!

יש להתקין את היחידה באזורים שיש בהם הגבלת גישה. הגישה ניתנת בעזרת 'כלי אבטחה בלבד' (מפתח, מנעול וכד.).

تحذير!

اتخصيص هذه انحدة نتركُ بها ف مناطق محظورة تم .  
مَكن انصل إن منطقت محظورة فقط من خلال استخداو أداة خاصت،  
أو أ وس هُت أخري نلالأما قفم ومفتاح

경고!

이 장치는 접근이 제한된 구역에 설치하도록 되어있습니다. 특수도구, 잠금 장치 및 키, 또는 기타 보안 수단을 통해서만 접근 제한 구역에 들어갈 수 있습니다.

Waarschuwing!

Dit apparaat is bedoeld voor installatie in gebieden met een beperkte toegang. Toegang tot dergelijke gebieden kunnen alleen verkregen worden door gebruik te maken van speciaal gereedschap, slot en sleutel of andere veiligheidsmaatregelen.

## Battery Handling



**CAUTION:** There is risk of explosion if the battery is replaced by an incorrect type. Replace the battery only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions

警告!

バッテリーを間違ったタイプに交換すると爆発の危険があります。交換する電池はメーカーが推奨する型、または同等のものを使用下さい。使用済電池は製造元の指示に従って処分して下さい。

警告!

如果更换的电池类型不正确，则存在爆炸危险。请只使用同类电池或制造商推荐的功能相当的电池更换原有电池。请按制造商的说明处理废旧电池。

警告!

如果更換的電池類型不正確，則有爆炸危險。請使用製造商建議之相同或功能相當的電池更換原有電池。請按照製造商的說明指示處理廢棄舊電池。

WARNUNG!

Es besteht Explosionsgefahr, wenn die Batterie durch einen falschen Typ ersetzt wird. Ersetzen Sie die Batterie nur durch den gleichen oder vom Hersteller empfohlenen Batterietyp. Entsorgen Sie die benutzten Batterien nach den Anweisungen des Herstellers.

ATTENTION!

Il existe un risque d'explosion si la batterie est remplacée par un type incorrect. Ne la remplacer que par une pile de type semblable ou équivalent, recommandée par le fabricant. Jeter les piles usagées conformément aux instructions du fabricant.

ADVERTENCIA!

Existe riesgo de explosión si la batería se reemplaza por un tipo incorrecto. Reemplazar la batería exclusivamente con el mismo tipo o el equivalente recomendado por el fabricante. Desechar las baterías gastadas según las instrucciones del fabricante.

אזהרה!

קיימת סכנת פיצוץ אם הסוללה תוחלף בסוג שגוי. יש להחליף את הסוללה בסוג התואם מחברת יצרן מומלצת. סילוק הסוללות המשומשות יש לבצע לפי הוראות היצרן.

تحذير!

هناك خطر الانفجار إذا تم استبدال البطارية بنوع غير صحيح.

استبدال البطارية

فقط بنفس النوع أو ما يعادلها مما أوصت به الشركة المصنعة

جخلص من البطاريات المسحمة وفقا لتعليمات الشركة الصانعة

경고!

배터리를 잘못된 종류로 교체하면 폭발의 위험이 있습니다. 기존 배터리와 동일하거나 제조사에서 권장하는 동등한 종류의 배터리로만 교체해야 합니다. 제조사의 안내에 따라 사용된 배터리를 처리하여 주십시오.

WAARSCHUWING!

Er bestaat explosiegevaar als de batterij wordt vervangen door een verkeerd type. Vervang de batterij slechts met hetzelfde of een equivalent type die door de fabrikant aanbevolen wordt. Gebruikte batterijen dienen overeenkomstig fabrieksvoorschriften afgevoerd te worden.

## Redundant Power Supplies



**Warning!** This unit might have more than one power supply connection. All connections must be removed to de-energize the unit.

警告!

このユニットは複数の電源装置が接続されている場合があります。

ユニットの電源を切るためには、すべての接続を取り外さなければなりません。

警告!

此部件连接的电源可能不止一个。必须将所有电源断开才能停止给该部件供电。

警告!

此装置连接的电源可能不只一个。必须切断所有电源才能停止对该装置的供电。

Warnung!

Dieses Gerät kann mehr als eine Stromzufuhr haben. Um sicherzustellen, dass der Einheit kein Strom zugeführt wird, müssen alle Verbindungen entfernt werden.

¡Advertencia!

Puede que esta unidad tenga más de una conexión para fuentes de alimentación. Para cortar por completo el suministro de energía, deben desconectarse todas las conexiones.

Attention!

Cette unité peut avoir plus d'une connexion d'alimentation. Pour supprimer toute tension et tout courant électrique de l'unité, toutes les connexions d'alimentation doivent être débranchées.

אזהרה!

ליחידה יש יותר מחיבור אחד של ספק. יש להסיר את כל החיבורים על מנת לרוקן את היחידה.

تحذير!

قد يكون لهذا الجهاز عدة اتصالات بوحدات امداد الطاقة .  
يجب إزالة كافة الاتصالات لعسل الوحدة عن الكهرباء

**경고!**

이 장치에는 한 개 이상의 전원 공급 단자가 연결되어 있을 수 있습니다. 이 장치에 전원을 차단하기 위해서는 모든 연결 단자를 제거해야만 합니다.

**Waarschuwing!**

Deze eenheid kan meer dan één stroomtoevoeraansluiting bevatten. Alle aansluitingen dienen verwijderd te worden om het apparaat stroomloos te maken.

## Backplane Voltage



**Warning!** Hazardous voltage or energy is present on the backplane when the system is operating. Use caution when servicing.

警告!

システムの稼働中は危険な電圧または電力が、バックプレーン上にかかっています。修理する際には注意ください。

警告!

当システム正在进行时，背板上有很危险的电压或能量，进行维修时务必小心。

警告!

當系統正在進行時，背板上有很危險的電壓或能量，進行維修時務必小心。

Warnung!

Wenn das System in Betrieb ist, treten auf der Rückwandplatine gefährliche Spannungen oder Energien auf. Vorsicht bei der Wartung.

¡Advertencia!

Cuando el sistema está en funcionamiento, el voltaje del plano trasero es peligroso. Tenga cuidado cuando lo revise.

Attention!

Lorsque le système est en fonctionnement, des tensions électriques circulent sur le fond de panier. Prendre des précautions lors de la maintenance.

אזהרה!

קיימת סכנת מתח בפנל האחורי בזמן תפעול המערכת. יש להיזהר במהלך העבודה.

تحذير!

هناك خطر من التيار الكهربائي أو الطاقة المخزنة على اللوحة عندما يكون النظام يعمل. كن حذرا عند خدمة هذا الجهاز.

**경고!**

시스템이 동작 중일 때 후면판 (Backplane)에는 위험한 전압이나 에너지가 발생 합니다.  
서비스 작업 시 주의하십시오.

**Waarschuwing**

Een gevaarlijke spanning of energie is aanwezig op de backplane wanneer het systeem in gebruik is. Voorzichtigheid is geboden tijdens het onderhoud.

## Comply with Local and National Electrical Codes



**Warning!** Installation of the equipment must comply with local and national electrical codes.

警告!

機器の取り付けはその地方および国の電気規格に準拠する必要があります。

警告!

设备安装必须符合本地与本国电气法规。

警告!

設備安裝必須符合本地與本國電氣法規。

Warnung!

Die Installation der Geräte muss den Sicherheitsstandards entsprechen.

¡Advertencia!

La instalacion del equipo debe cumplir con las normas de electricidad locales y nacionales.

Attention!

L'équipement doit être installé conformément aux normes électriques nationales et locales.

אזהרה!

תיאום חוקי החשמל הארצי

התקנת הציוד חייבת להיות תואמת לחוקי החשמל המקומיים והארציים.

تحذير!

تركيب المعدات الكهربائية يجب أن يمتثل للقوايه المحلية والوطنية المتعلقة

بالكهرباء

**경고!**

현 지역 및 국가의 전기 규정에 따라 장비를 설치해야 합니다.

**Waarschuwing!**

Bij installatie van de apparatuur moet worden voldaan aan de lokale en nationale elektriciteitsvoorschriften.

## Product Disposal



**Warning!** Ultimate disposal of this product should be handled according to all national laws and regulations.

警告!

この製品を廃棄処分する場合、国の関係する全ての法律・条例に従い処理する必要があります。

警告!

本产品的废弃处理应根据所有国家的法律和规章进行。

警告!

本產品的廢棄處理應根據所有國家的法律和規章進行。

Warnung!

Die Entsorgung dieses Produkts sollte gemäß allen Bestimmungen und Gesetzen des Landes erfolgen.

¡Advertencia!

Al deshacerse por completo de este producto debe seguir todas las leyes y reglamentos nacionales.

Attention!

La mise au rebut ou le recyclage de ce produit sont généralement soumis à des lois et/ou directives de respect de l'environnement. Renseignez-vous auprès de l'organisme compétent.

אזהרה!

סילוק המוצר

אזהרה!

סילוק סופי של מוצר זה חייב להיות בהתאם להנחיות וחוקי המדינה.

تحذير!

عند التخلص النهائي من هذا المنتج ينبغي التعامل معه وفقا لجميع القوانين والأنظمة الوطنية

경고!

이 제품은 해당 국가의 관련 법규 및 규정에 따라 폐기되어야 합니다.

Waarschuwing!

De uiteindelijke verwijdering van dit product dient te geschieden in overeenstemming met alle nationale wetten en reglementen.

## Fan Warning



**Warning!** Hazardous moving parts. Keep away from moving fan blades. The fans might still be turning when you remove the fan assembly from the chassis. Keep fingers, screwdrivers, and other objects away from the openings in the fan assembly's housing.

警告!

回転部品に注意。運転中は回転部(羽根)に触れないでください。シャーシから冷却ファン装置を取り外した際、ファンがまだ回転している可能性があります。ファンの開口部に、指、ドライバー、およびその他のものを近づけないで下さい。

警告!

危险的可移动性零件。请务必与转动的风扇叶片保持距离。当您从机架移除风扇装置，风扇可能仍在转动。小心不要将手指、螺丝起子和其他物品太靠近风扇。

警告!

危險的可移動性零件。請務必與轉動的風扇葉片保持距離。當您從機架移除風扇裝置，風扇可能仍在轉動。小心不要將手指、螺絲起子和其他物品太靠近風扇。

Warnung!

Gefährlich Bewegende Teile. Von den bewegenden Lüfterblätter fern halten. Die Lüfter drehen sich u. U. noch, wenn die Lüfterbaugruppe aus dem Chassis genommen wird. Halten Sie Finger, Schraubendreher und andere Gegenstände von den Öffnungen des Lüftergehäuses entfernt.

¡Advertencia!

Riesgo de piezas móviles. Mantener alejado de las aspas del ventilador. Los ventiladores podran dar vuelta cuando usted quite el montaje del ventilador del chasis. Mandtenga los dedos, los destornilladores y todos los objetos lejos de las aberturas del ventilador

Attention!

Pieces mobiles dangereuses. Se tenir a l'écart des lames du ventilateur Il est possible que les ventilateurs soient toujours en rotation lorsque vous retirerez le bloc ventilateur du châssis. Prenez garde à ce que doigts, tournevis et autres objets soient éloignés du logement du bloc ventilateur.

אזהרה!

חלקים נעים מסוכנים. התרחק מלהבי המאוורר בפעולה כאשר מסירים את חלקי המאוורר מהמארז, יתכן והמאווררים עדיין עובדים. יש להרחיק למרחק בטוח את האצבעות וכלי עבודה שונים מהפתחים בתוך המאוורר

تحذير!

تحذير! أجزاء متحركة خطيرة. ابتعد عن شفرات المروحة المتحركة. من الممكن أن المراوح لا تزال تدور عند إزالة كتلة المروحة من الهيكل يجب إبقاء الأصابع ومفكات البراغي وغيرها من الأشياء بعيدا عن الفتحات في كتلة المروحة.

경고!

움직이는 위험한 부품. 회전하는 송풍 날개에 접근하지 마세요. 새시로부터 팬 조립품을 제거할 때 팬은 여전히 회전하고 있을 수 있습니다. 팬 조립품 외관의 열려있는 부분들로부터 손가락 및 스크류드라이버, 다른 물체들이 가까이 하지 않도록 배치해 주십시오.

Waarschuwing!

Gevaarlijk bewegende onderdelen. Houd voldoende afstand tot de bewegende ventilatorbladen. Het is mogelijk dat de ventilator nog draait tijdens het verwijderen van het ventilatorsamenstel uit het chassis. Houd uw vingers, schroevendraaiers en eventuele andere voorwerpen uit de buurt van de openingen in de ventilatorbehuizing.

## Power Cable and AC Adapter



**Warning!** When installing the product, use the provided or designated connection cables, power cables and AC adaptors. Using any other cables and adaptors could cause a malfunction or a fire. Electrical Appliance and Material Safety Law prohibits the use of UL or CSA -certified cables (that have UL/CSA shown on the cord) for any other electrical devices than products designated by Supermicro only.

警告!

製品を設置する場合、提供または指定および購入された接続ケーブル、電源コードとACアダプターを、該当する地域の条例や安全基準に適合するコードサイズやプラグと共に使用下さい。他のケーブルやアダプターを使用すると故障や火災の原因になることがあります。電気用品安全法は、ULまたはCSA認定のケーブル(UL/CSAマークがコードに表記)をSupermicroが指定する製品以外に使用することを禁止しています。

警告!

安装此产品时,请使用本身提供的或指定的或采购的连接线、电源线和电源适配器,包含遵照当地法规和安全要求的合规的电源线尺寸和插头。使用其它线材或适配器可能会引起故障或火灾。除了Supermicro所指定的产品,电气用品和材料安全法律规定禁止使用未经UL或CSA认证的线材。(线材上会显示UL/CSA符号)。

警告!

安裝此產品時,請使用本身提供的或指定的或採購的連接線、電源線和電源適配器,包含遵照當地法規和安全要求的合規的電源線尺寸和插頭。使用其它線材或適配器可能會引起故障或火災。除了Supermicro所指定的產品,電氣用品和材料安全法律規定禁止使用未經UL或CSA認證的線材。(線材上會顯示UL/CSA符號)。

Warnung!

Nutzen Sie beim Installieren des Produkts ausschließlich die von uns zur Verfügung gestellten Verbindungskabeln, Stromkabeln und/oder Adapter, die Ihre örtlichen Sicherheitsstandards einhalten. Der Gebrauch von anderen Kabeln und Adapter können Fehlfunktionen oder Feuer verursachen. Die Richtlinien untersagen das Nutzen von UL oder CAS zertifizierten Kabeln (mit UL/CSA gekennzeichnet), an Geräten oder Produkten die nicht mit Supermicro gekennzeichnet sind.

## ¡Advertencia!

Cuando instale el producto, utilice la conexión provista o designada o procure cables, Cables de alimentación y adaptadores de CA que cumplan con los códigos locales y los requisitos de seguridad, incluyendo el tamaño adecuado del cable y el enchufe. El uso de otros cables y adaptadores podría causar un mal funcionamiento o un incendio. La Ley de Seguridad de Aparatos Eléctricos y de Materiales prohíbe El uso de cables certificados por UL o CSA (que tienen el certificado UL / CSA en el código) para cualquier otros dispositivos eléctricos que los productos designados únicamente por Supermicro.

## Attention!

Lors de l'installation du produit, utilisez les cables de connection fournis ou désigné ou achetez des cables, cables de puissance et adaptateurs respectant les normes locales et les conditions de securite y compris les tailles de cables et les prises electriques appropries. L'utilisation d'autres cables et adaptateurs peut provoquer un dysfonctionnement ou un incendie. Appareils électroménagers et la Loi sur la Sécurité Matériel interdit l'utilisation de câbles certifiés- UL ou CSA (qui ont UL ou CSA indiqué sur le code) pour tous les autres appareils électriques sauf les produits désignés par Supermicro seulement.

## !הרהזא

רְחוּצָה וּמֵאֲתוֹהּ וְאוֹ שֶׁכֶּרֶן רֶשֶׁא AC מִימֵאֲתָמוּ מִיִּקְפֵס, מִיִּלְבֵּכֵב שֶׁמֵתִשְׁהֵל שִׁי, רְצוּמָה תֵא מִיִּנִיקְתָּמ רֶשֶׁאֵכ לֵכֵב שׁוּמִיִּשׁ . עֵקֶתְהוּ לִבְכָה לֶשׁ הַנוֹכֵחַ הַדִּימ לִלּוֹךְ, תּוֹיִמּוֹקְמָה תּוֹחִיטְבָה תּוֹשִׁירְדֵל וּמֵאֲתוֹהּ רֶשֶׁאוּ, הַנִּקְתָּהּ לְמִשְׁחָה יִרְשַׁכְמֵב שׁוּמִיִּשָּׁה יִקּוּחַל מֵאֲתָהֵב . יִלְמִשַׁח רֶצֶק וְאוֹ הַלְקֵתֵל מִוִּרְגֵל לּוֹלַע, רְחֵא גּוֹסֵמ מֵאֲתָמ וְאוֹ לִבֵּכ לֶשׁ דּוֹק מֵהִילַע עִיפּוֹמ רֶשֶׁאֵכ) UL-ב וְאוֹ UL-ב מִיִּכְמִסּוּמָה מִיִּלְבֵּכֵב שֶׁמֵתִשְׁהֵל רוֹסִיא מִיִּיק, תּוֹחִיטְבָה יִקּוּחוּ דִּבְלֵב Supermicro י"ע מֵאֲתוֹהּ רֶשֶׁא רְצוּמֵב קֶר אֵלֵא, רְחֵא יִלְמִשַׁח רְצוּמ לֵכ רוֹבַע UL/CSA)

## !رذحت

عند تركيب المنتج، قم باستخدام التوصيلات المتوفرة أو المحددة أو قم بشراء الكابلات الكهربائية ومحولات التيار المتردد مع الالتزام بقوانين ومتطلبات السلامة المحلّية بما في ذلك حجم الموصل والقابس السليم. استخدام أي كوابلات ومحولات أخرى قد يتسبب في عطل أو حريق. UL أو CSA يحظر قانون السلامة للأجهزة الكهربائية والمعدات استخدام الكابلات المعتمدة من قبل مع أي معدات أخرى غير المنتجات المعنية والمحددة من قبل (UL/CSA) والتي تحمل علامة.

**경고!**

경고! 제품을 설치할 때 현지 코드 및 적절한 굵기의 코드와 플러그를 포함한 안전 요구 사항을 준수하여 제공되거나 지정된 연결 혹은 구매 케이블, 전원 케이블 및 AC 어댑터를 사용하십시오.

다른 케이블이나 어댑터를 사용하면 오작동이나 화재가 발생할 수 있습니다. 전기 용품 안전법은 UL 또는 CSA 인증 케이블 (코드에 UL / CSA가 표시된 케이블)을 Supermicro가 지정한 제품 이외의 전기 장치에 사용하는 것을 금지합니다.

**Waarschuwing!**

Bij het aansluiten van het Product uitsluitend gebruik maken van de geleverde Kabels of een andere geschikte aan te schaffen Aansluitmethode, deze moet altijd voldoen aan de lokale voorschriften en veiligheidsnormen, inclusief de juiste kabeldikte en stekker. Het gebruik van niet geschikte Kabels en/of Adapters kan een storing of brand veroorzaken. Wetgeving voor Elektrische apparatuur en Materiaalveiligheid verbied het gebruik van UL of CSA -gecertificeerde Kabels (met UL/CSA in de code) voor elke andere toepassing dan de door Supermicro hiervoor beoogde Producten.

# Appendix B

## System Specifications

### Superchip

Two NVIDIA GH200 NVL2 Grace Hopper Superchips

**Note:** Refer to the motherboard specifications pages on our website for updates to supported processors.

### BIOS

64MB SPI AMI BIOS® SM Flash UEFI BIOS

ACPI 6.4, SMBIOS 3.5.0, Plug-and-Play (PnP), RTC (Real Time Clock) wakeup, Riser Card Auto-Detection Support

### Memory

Embedded 960 GB GB ECC LPDDR5

Embedded 288 GB of HBM3e

### Storage Drives

Two M.2 NVMe SSDs

Three E1.S drives in eight E1.S NVMe drive slots

### PCI Expansion Slots

Three PCIe 5.0 x16 slots supporting x16 signals

One PCIe 5.0 x16 slot supporting a x4 signal

### Input/Output

One RJ45 1GbE Dedicated IPMI LAN port

One USB 3.0 port

One Mini DisplayPort

### Motherboard

G2DMH-GI; 12.031" (W) x 16.712" (L) (305.59.6 x 424.50 mm)

### Chassis

CSE-MG202TS 2U Rackmount, 43.84 cm x 8.7 cm x 90 cm (17.26" x 3.43" x 35.43") (W x H x D)

### System Cooling

Six heavy-duty fans with optimal fan speed control

### Power Supply

Model: PWS-2K09A-1R, 2000 W AC/DC redundant modules, 80Plus Titanium level

AC Input

1000 W: 100-127 Vac / 50-60 Hz

1800 W: 200-220 Vac / 50-60 Hz

1980 W: 220-230 Vac / 50-60 Hz

2000 W: 220-240 Vac / 50-60 Hz (for UL only)

2000 W: 230-240 Vac / 50-60 Hz

2000 W: 230-240 Vdc / 50-60 Hz (for CQC only)

+12 V

Max: 83 A / Min: 0 A (100 Vac-127 Vac)

Max: 150 A / Min: 0 A (200 Vac-220 Vac)

Max: 165 A / Min: 0 A (220 Vac-230 Vac)

Max: 166 A / Min: 0 A (230 Vac-240 Vac)

12 V SB

Max: 3.5 A / Min: 0 A

### Operating Environment

Operating Temperature: 10 °C to 30 °C (50 °F to 86 °F)

Non-operating Temperature: -40 °C to 60 °C (-40 °F to 140 °F)

Operating Relative Humidity: 8% to 90% (non-condensing)

Non-operating Relative Humidity: 5% to 95% (non-condensing)

**Regulatory Compliance**

FCC, ICES, CE, UKCA, VCCI, RCM, NRTL, CB

**Applied Directives, Standards**

EMC/EMI: 2014/30/EU (EMC Directive)  
Electromagnetic Compatibility Regulations 2016  
FCC Part 15 Subpart B  
ICES-003  
VCCI-CISPR 32  
AS/NZS CISPR 32  
BS/EN 55032  
BS/EN 55035  
CISPR 32  
CISPR 35  
BS/EN 61000-3-2  
BS/EN 61000-3-3  
BS/EN 61000-4-2  
BS/EN 61000-4-3  
BS/EN 61000-4-4  
BS/EN 61000-4-5  
BS/EN 61000-4-6  
BS/EN 61000-4-8  
BS/EN 61000-4-11

**Environment:**

Delegated Directive (EU) 2015/863  
Directive 2011/65/EU (RoHS)  
REACH Regulation EC 1907/2006  
WEEE Directive 2012/19/EU  
California Proposition 65

**Product Safety: 2014/35/EU (LVD Directive)**

UL/CSA 62368-1 (USA and Canada)  
Electrical Equipment (Safety) Regulations 2016  
IEC/BS/EN 62368-1

Warning! This product can expose you to chemicals including lead, known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

**Perchlorate Warning**

California Best Management Practices Regulations for Perchlorate Materials: This Perchlorate warning applies only to products containing CR (Manganese Dioxide) Lithium coin cells. "Perchlorate Material-special handling may apply. See "[www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate)".

**General Data Center Environmental Specifications****Particulate contamination specifications**

Air filtration: Data centers must be kept clean to Class 8 of ISO 14644-1 (ISO 2015). The air entering the data center should be filtered with a MERV 11 filter or better. The air within the data center should be continuously filtered with a MERV 8 filter or better.

Conductive dust: Air should be free of conductive dust, zinc whiskers, or other conductive particles.

Corrosive dust: Air should be free of corrosive dust.

**Gaseous\* contamination specifications**

Copper coupon corrosion rate: <300 Å/month per class G1 as defined by ANSI/ISA71.04-2013, referenced by ASHRAE TC 9.9

Silver coupon corrosion rate: <200 Å/month per class G1 as defined by ANSI/ISA71.04-2013, referenced by ASHRAE TC 9.9

\*If testing with silver or copper coupons results in values less than 200 Å/month or 300 Å/month, respectively, then operating up to 70% relative humidity (RH) is acceptable. If the testing shows corrosion levels exceed these limits, then catalyst-type pollutants are probably present and RH should be driven to 50% or lower.

この装置は、クラスA機器です。この装置を住宅環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

VCCI – A