H14DSG-OD

USER'S MANUAL

Revision 1.0b (MNL-2744)

The information in this User's Manual has been carefully reviewed and is believed to be accurate. The vendor assumes no responsibility for any inaccuracies that may be contained in this document, and makes no commitment to update or to keep current the information in this manual, or to notify any person or organization of the updates. Note: For the most up-to-date version of this manual, see our website at https://www.supermicro.com.

Super Micro Computer, Inc. ("Supermicro") reserves the right to make changes to the product described in this manual at any time and without notice. This product, including software and documentation, is the property of Supermicro and/or its licensors, and is supplied only under a license. Any use or reproduction of this product is not allowed, except as expressly permitted by the terms of said license.

IN NO EVENT WILL Super Micro Computer, Inc. BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, SPECULATIVE OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OR INABILITY TO USE THIS PRODUCT OR DOCUMENTATION, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN PARTICULAR, SUPER MICRO COMPUTER, INC. SHALL NOT HAVE LIABILITY FOR ANY HARDWARE, SOFTWARE, OR DATA STORED OR USED WITH THE PRODUCT, INCLUDING THE COSTS OF REPAIRING, REPLACING, INTEGRATING, INSTALLING OR RECOVERING SUCH HARDWARE, SOFTWARE, OR DATA.

Any disputes arising between manufacturer and customer shall be governed by the laws of Santa Clara County in the State of California, USA. The State of California, County of Santa Clara shall be the exclusive venue for the resolution of any such disputes. Supermicro's total liability for all claims will not exceed the price paid for the hardware product.

FCC Statement: This equipment has been tested and found to comply with the limits for a Class A or Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in industrial environment for Class A device or in residential environment for Class B device. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer's instruction manual, may cause harmful interference with radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case you will be required to correct the interference at your own expense.

California Best Management Practices Regulations for Perchlorate Materials: This Perchlorate warning applies only to products containing CR (Manganese Dioxide) Lithium coin cells. "Perchlorate Material-special handling may apply. See https://www.dtsc.ca.gov/hazardouswaste/perchlorate".

WARNING: This product can expose you to chemicals including lead, known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to https://www.P65Warnings.ca.gov.

AVERTISSEMENT : Ce produit peut vous exposer à des agents chimiques, y compris le plomb, identifié par l'État de Californie comme pouvant causer le cancer, des malformations congénitales ou d'autres troubles de la reproduction. Pour de plus amples informations, prière de consulter https://www.P65Warnings.ca.gov.

The products sold by Supermicro are not intended for and will not be used in life support systems, medical equipment, nuclear facilities or systems, aircraft, aircraft devices, aircraft/emergency communication devices or other critical systems whose failure to perform be reasonably expected to result in significant injury or loss of life or catastrophic property damage. Accordingly, Supermicro disclaims any and all liability, and should buyer use or sell such products for use in such ultra-hazardous applications, it does so entirely at its own risk. Furthermore, buyer agrees to fully indemnify, defend and hold Supermicro harmless for and against any and all claims, demands, actions, litigation, and proceedings of any kind arising out of or related to such ultra-hazardous use or sale.

Manual Revision 1.0b

Release Date: April 14, 2025

Unless you request and receive written permission from Super Micro Computer, Inc., you may not copy any part of this document. Information in this document is subject to change without notice. Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders.

Copyright © 2025 by Super Micro Computer, Inc.
All rights reserved.
Published in the United States of America

Preface

About This Manual

This manual is written for professional system integrators and PC technicians. It provides information for the installation and use of the H14DSG-OD motherboard. Installation and maintenance should be performed by certified service technicians only.

Notes

For your system to work properly, follow the links below to download all necessary drivers/utilities and the user's manual for your server.

- Supermicro product manuals: https://www.supermicro.com/support/manuals
- Product drivers and utilities: https://www.supermicro.com/wdl
- Product safety info: https://www.supermicro.com/about/policies/safety_information.cfm
- A secure data deletion tool designed to fully erase all data from storage devices can be found on our website: https://www.supermicro.com/about/policies/disclaimer.cfm?url=/wdl/utility/Lot9_Secure_Data_Deletion_Utility
- Frequently Asked Questions: https://www.supermicro.com/FAQ/index.php
- If you still have questions after referring to our FAQs, contact our support team. Region-specific Technical Support email addresses can be found at: "Contacting Supermicro" on page 9
- If you have any feedback on Supermicro product manuals, contact our writing team at: Techwriterteam@supermicro.com

This manual may be periodically updated without notice. Check the Supermicro website for possible updates to the manual revision level.

Conventions Used in the Manual

Special attention should be given to the following symbols for proper installation and to prevent damage done to the components or injury to yourself.

Warning! Indicates important information given to prevent equipment/property damage or personal injury.

Warning! Indicates high voltage may be encountered while performing a procedure.

Important: Important information given to ensure proper system installation or to relay safety precautions.

Note: Additional information given to differentiate various models or to provide information for proper system setup.

Contents

Contacting Supermicro ***9***

Chapter 1: Introduction ***10***

1.1 Quick Reference 12

Motherboard Layout 12

Quick Reference Table 14

System Block Diagram 16

1.2 Motherboard Features 17

1.3 Platform Overview 19

1.4 System Health Monitoring 20

Onboard Voltage Monitors 20

Fan Status Monitor with Firmware Control 20

Environmental Temperature Control 20

1.5 ACPI Features 21

Chapter 2: Component Installation ***22***

2.1 Static-Sensitive Devices 24

Precautions 24

Unpacking 24

2.2 Motherboard Installation 25

Tools Needed 25

Location of Mounting Holes 25

Installing the Motherboard 27

2.3 Processor and Heatsink Installation 29

Preparing the Processor Socket 29

Installing the Processor into the Frame 31

Installing the Heatsink 34

Uninstalling the Heatsink and Processor 35

2.4 Memory Support and Installation 37

Memory Support 37

General Guidelines for Optimizing Memory Performance 38

DIMM Population 38

DIMM Installation 40

DIMM Removal 43
2.5 Battery Removal and Installation 44
Battery Removal 44
Proper Battery Disposal 44
Battery Installation 44
2.6 Connections, Jumpers, and LEDs 45
Power Supply Connections 45
Power Supply 45
Power Supply Connectors 45
Fan Board 54 V 8-pin Connector 45
Backplane and BlueField-3 Card 12 V 8-pin Power Connectors 45
E1.S Backplane, M.2 Module, BlueField-3 Risers, and BlueField-3 Bridge Boards 12 V 4-pin Power Connectors 46
Headers and Connections 46
Fan Headers (FAN1 to FAN5) 46
TPM/Port 80 Header 47
NC-SI Connection 47
Fan Board I2C Header 48
NVMe / SATA I2C Header 48
Liquid Cooling Leak Detection Connector 49
MCIO M.2 NVMe Connector 49
Midplane and NIC Card Carrier Board Connectors 49
SATA Port 49
Front/Rear I/O Module Connectors 49
I/O Module Connectors 49
Jumper Settings 50
CMOS Clear 50
JPG1 51
JUID1 51
LED Indicators 51
Onboard Power LED (LED1) 51
RoT Status LED (LED2) 52
BMC Heartbeat LED (LED3) 52

Chapter 3: Troubleshooting ***53***
3.1 Troubleshooting Procedures 54
Before Power On 54
No Power 54
No Video 54
System Boot Failure 54
Memory Errors 55
Losing the System's Setup Configuration 55
If the System Becomes Unstable 55
3.2 Technical Support Procedures 57
3.3 Motherboard Battery 58
3.4 Where to Get Replacement Components 59
3.5 Returning Merchandise for Service 60
3.6 Feedback 61
Chapter 4: UEFI BIOS ***62***
4.1 Introduction 63
Updating BIOS 63
Starting the Setup Utility 63
4.2 Main Setup 65
4.3 Advanced Setup Configuration 67
Boot Feature 67
CPU Configuration 69
NB Configuration 73
ACPI Settings 76
Super IO Configuration Menu 77
Serial Port 1 Configuration Menu 77
Serial Port 2 Configuration Menu 78
Serial Port Console Redirection Menu 78
PCIe/PCI/PnP Configuration Menu 80
USB Configuration 82
Network Configuration Menu 83
SATA Configuration Menu 85
HTTP Boot Configuration Menu 85
Supermicro KMS Server Configuration 86

Super-Guardians Configuration 88
TLS Authenticate Configuration 90
RAM Disk Configuration 90
BROADCOM Configuration Utility 91
Driver Health Menu 92
4.4 BMC 94
System Event Log Menu 94
BMC Network Configuration Menu 95
4.5 Event Logs 98
4.6 Security 100
4.7 Boot 103
4.8 Save & Exit 105
Appendix A: Software ***107***
Microsoft Windows OS Installation 107
Installing the OS 107
Driver Installation 109
BMC 111
BMC ADMIN User Password 111
Appendix B: Standardized Warning Statements ***112***
Battery Handling 112
Product Disposal 114

Contacting Supermicro

Headquarters

Address:	Super Micro Computer, Inc. 980 Rock Ave. San Jose, CA 95131 U.S.A.
Tel:	+1 (408) 503-8000
Fax:	+1 (408) 503-8008
Email:	Marketing@supermicro.com (General Information) Sales-USA@supermicro.com (Sales Inquiries) Government_Sales-USA@supermicro.com (Gov. Sales Inquiries) Support@supermicro.com (Technical Support) RMA@Supermicro.com (RMA Support) Webmaster@supermicro.com (Webmaster)
Website:	https://www.supermicro.com

Europe

Address:	Super Micro Computer B.V. Het Sterrenbeeld 28, 5215 ML 's-Hertogenbosch, The Netherlands
Tel:	+31 (0) 73-6400390
Fax:	+31 (0) 73-6416525
Email:	Sales_Europe@supermicro.com (Sales Inquiries) Support_Europe@supermicro.com (Technical Support) RMA_Europe@supermicro.com (RMA Support)
Website:	https://www.supermicro.nl

Asia-Pacific

Address:	Super Micro Computer, Inc. 3F, No. 150, Jian 1st Rd. Zhonghe Dist., New Taipei City 235 Taiwan (R.O.C)
Tel:	+886 (2) 8226-3990
Fax:	+886 (2) 8226-3992
Email:	Sales-Asia@supermicro.com.tw (Sales Inquiries) Support@supermicro.com.tw (Technical Support) RMA@supermicro.com.tw (RMA Support)
Website:	https://www.supermicro.com.tw

Chapter 1:

Introduction

Congratulations on purchasing your computer motherboard from an industry leader. Supermicro motherboards are designed to provide you with the highest standards in quality and performance.

1.1 Quick Reference **12**
Motherboard Layout 12
Quick Reference Table 14
System Block Diagram 16
1.2 Motherboard Features **17**
1.3 Platform Overview **19**
1.4 System Health Monitoring **20**
Onboard Voltage Monitors 20
Fan Status Monitor with Firmware Control 20
Environmental Temperature Control 20
1.5 ACPI Features **21**

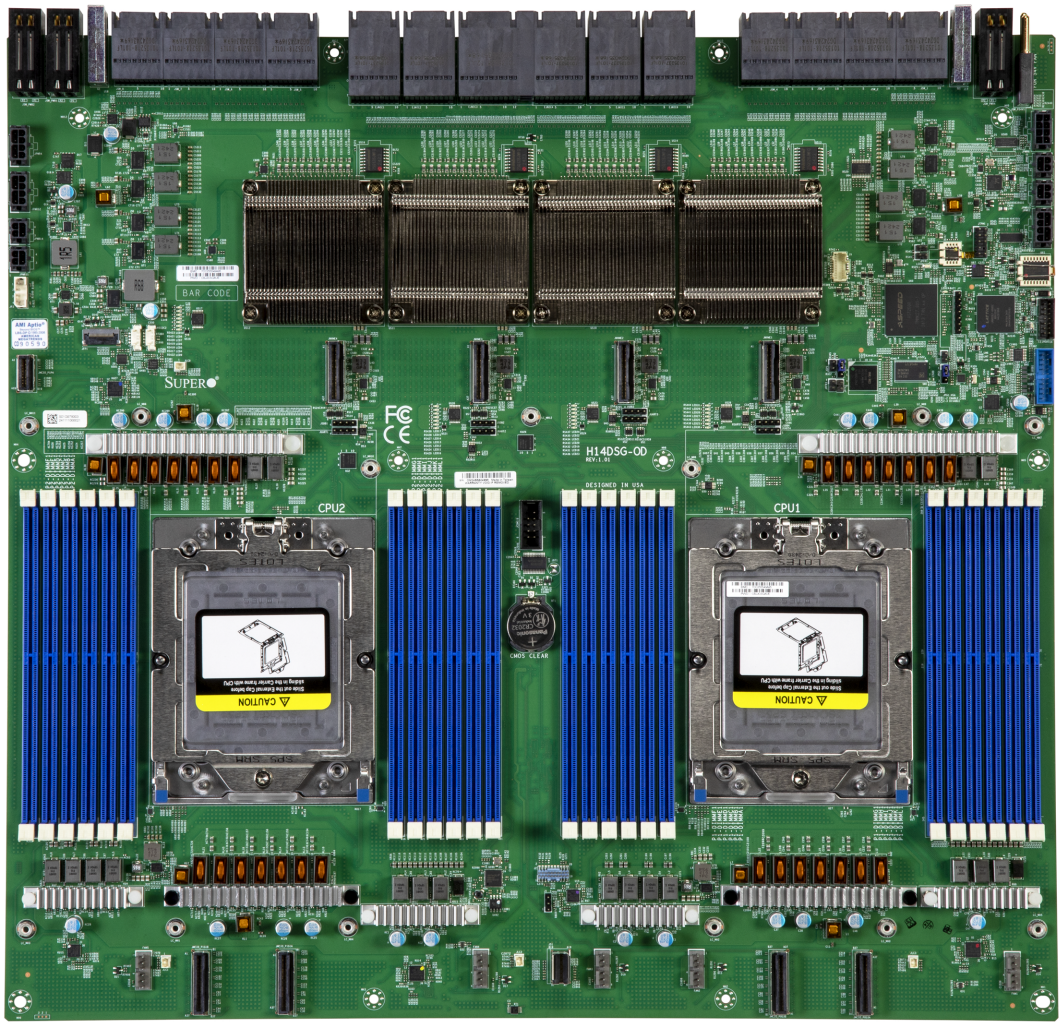

Figure 1-1. Motherboard Image

1.1 Quick Reference

For details on the H14DSG-OD motherboard layout, features, and other quick reference information, refer to the content below.

Motherboard Layout

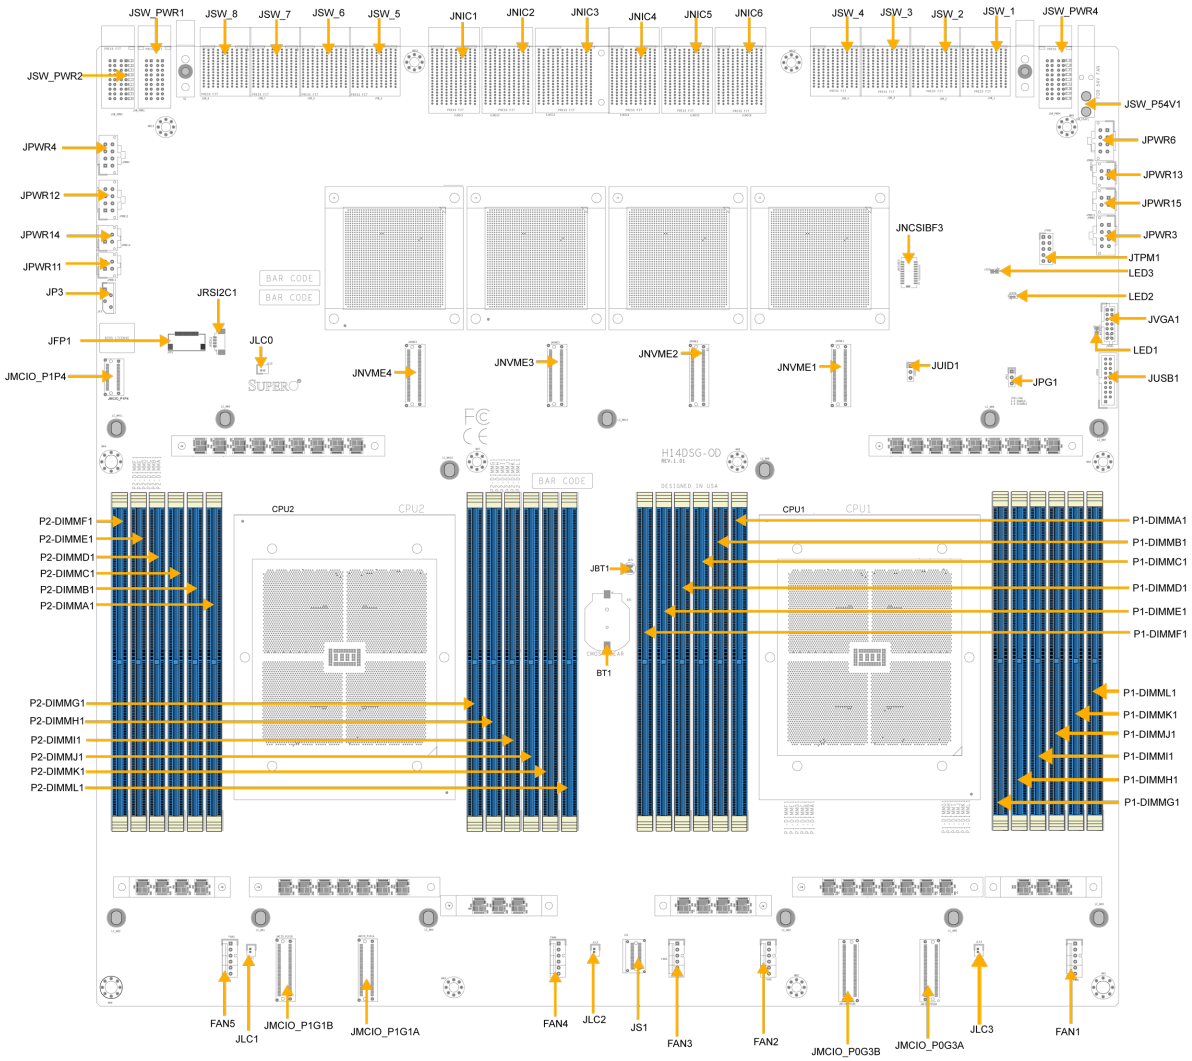

Figure 1-2. Motherboard Layout

Notes:

- See "Component Installation" on page 22 for detailed information on jumpers, connectors, and LED indicators.
- "■" indicates the location of pin 1.
- Components not documented are for internal testing-purposes only.
- Use only the correct type of onboard CMOS battery as specified by the manufacturer. Do not install the onboard battery upside down to avoid possible explosion.

Quick Reference Table

Jumper	Description	Default Setting
JBT1	CMOS Clear	Open (Normal)
JPG1	VGA Enable/Disable	Pins 1-2 (Enable)
JUID1	Switch Function UID/Reset	Pins 1-2 (UID)

LED	Description	Status
LED1	Power LED	Solid Green: Power On
LED2	Rot Status LED	Off: Normal Red on: Fail
LED3	BMC Heartbeat LED	Green: Blinking (BMC Normal) Green: Fast Blinking (BMC Initializing)

Connector	Description
FAN1-FAN5	6-pin System Cooling Fan Headers
JFP1	Front Control Panel Connector
JLC0-3	2-pin 2.048 V Header for Liquid-Cooled Solution
JMCIO_P0G3A JMCIO_P0G3B	PCIe 5.0 x8 (Processor 1)
JMCIO_P1G1A JMCIO_P1G1B	PCIe 5.0 x8 (Processor 2)
JMCIO_P1P4	PCIe 3.0 x4 (Processor 2) for M.2 Module (AOC-SMG4-2M2 or AOM-S3808NI-4NM)
JNIC1-JNIC6	PCIe Connections to NIC Card Carrier Board (AOM-DP805-LPIO)
JNCSIBF3	NCSI Connector
JNVME1-4	PCIe 5.0 x8 Ports to Backplane (Vpp available through JNVME1 and JNVME3)
JP3	Front Fan Board I2C
JPWR3, JPWR12	12 V Power to BF3 Card

Connector	Description
JPWR4	12 V Power to Backplane (BPN-NVME5-HS119N-S8L or BPN-NVME5-LB16A-S10)
JPWR6	54 V Power to Front Fan Board (AOM-528G-FAN-CAS2)
JPWR11	12 V Power to E1.S (BPN-E1S5-GP101M)
JPWR13	12 V Power to M.2 Module (AOC-SMG4-2M2 or AOM-S3808NI-4NM)
JPWR14-15	12 V Power to BF3 Riser (RSC-G-6G5-GP805) and BF3 Bridge Board (AOM-BB-GP102-P) with Y cable
JRSI2C1	I2C Connector for SATA Backplane
JS1	SATA Connector to Backplane
JSW_P54V1	54 V Power Connector
JSW_PWR1 JSW_PWR2 JSW_PWR4	12 V Power to Motherboard
JSW_1~JSW_8	PCIe Connectors Connected to Middle Plane (BPN-GPU-GP403 or BPN-GPU-GP805)
JTPM1	Trusted Platform Module (TPM)
JUSB1	USB Port
JVGA1	VGA Port

System Block Diagram

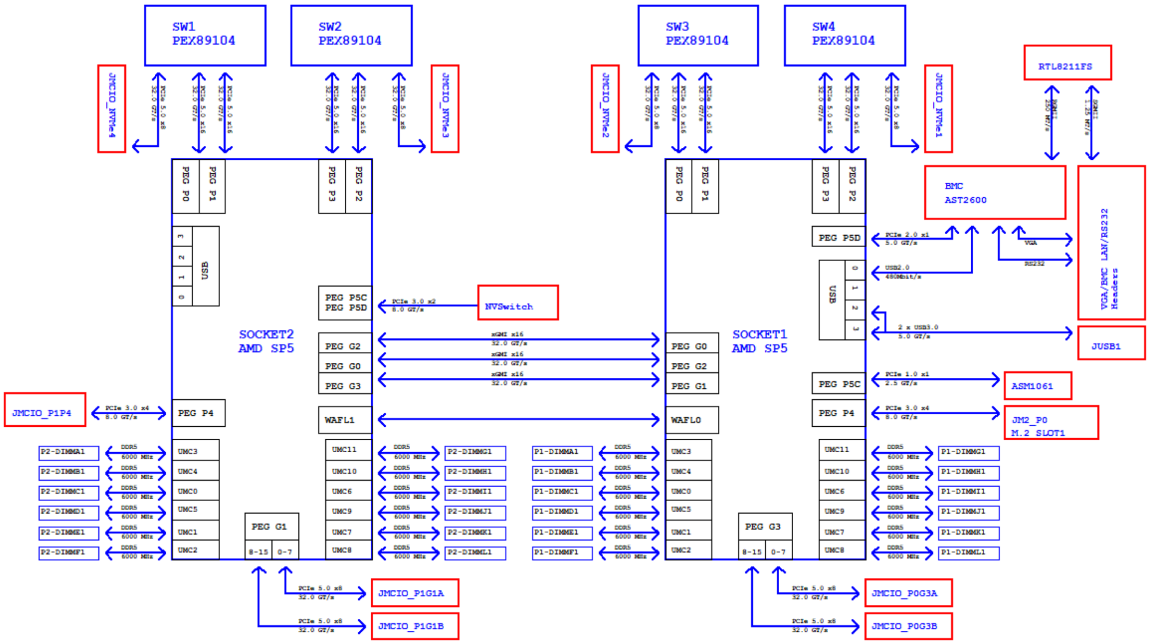

Figure 1-3. System Block Diagram

1.2 Motherboard Features

Motherboard Features
CPU
• Dual AMD EPYC™ 9005/9004 Series Processors in Socket SP5
Memory
• Up to 6 TB of ECC DDR5/3DS RDIMM at 4800 MT/s (EPYC™ 9004 series processors) • Up to 6 TB of ECC DDR5/3DS RDIMM at 6400 MT/s (EPYC™ 9005 series processors)
DIMM Size
• Up to 256 GB
Chipset
• System on Chip (SoC)
Expansion Slots
• Eight PCIe 5.0 x8 MCIO vertical connectors • One PCIe 3.0 x4 MCIO connector for M.2 module (AOC-SMG4-2M2 or AOM-S3808NI-4NM)
Network
• AST2600 BMC chip with one gigabit RJ45 port via AOM-DP805-IO
Baseboard Management Controller (BMC)
• Aspeed AST2600 BMC
Graphics
• Aspeed AST2600 BMC chip with one VGA port via JVGA1
I/O Devices
• One VGA port • One RJ45 Dedicated LAN port • One SATA 3.0 port (JS1) • Two USB 3.0 ports via JUSB1 header
BIOS
• 512 Mb SPI AMI BIOS® SM Flash UEFI BIOS • ACPI 6.4, SMBIOS 3.5, Plug-and-Play (PnP), RTC (Real Time Clock) wakeup, Riser Card Auto-Detection

Motherboard Features
Power Management
• ACPI power management (S5) • Power button override mechanism • Wake-On-LAN • Power-on mode for AC power recovery
System Health Monitoring
• Onboard voltage monitoring for +3.3 V, +12 V, +3.3 VStb, +5 VStb, Vcore, Vmem • Onboard temperature monitoring for CPU, System, Memory, and Peripheral • CPU Thermal Trip support
Fan Control
• Five 6-pin fan headers • Fan speed control
System Management
• Redundant power supply unit detection sensor • SDO/SPM/SSM/SAA • Trusted Platform Module (TPM) support
LED Indicators
• CPU / System Overheating • Power / Suspend-state Indicator • Fan Failure
Dimensions
17" (W) x 16" (L), (432 mm x 406 mm)

1.3 Platform Overview

Built upon the functionality and capability of AMD EPYC™ in Socket SP5, the H14DSG-OD motherboard offers maximum I/O expandability, energy efficiency, and data reliability in a 3-nm (Zen 5c) and 4-nm (Zen 5) process architecture, and is optimized for embedded storage solutions, networking applications, or cloud-computing platforms.

With support of the new micro-architecture 3-nm process technology, it increases system performance for a multitude of server applications.

The following features are supported by AMD EPYC™:

- ACPI Power Management Logic Support Rev. 6.5
- Adaptive Thermal Management/Monitoring
- PCIe 5.0 with a transfer rate up to 32 GT/s
- System Management Bus (SMBus) Specification Version 3.1.1

1.4 System Health Monitoring

Onboard Voltage Monitors

An onboard voltage monitor will continuously scan the voltages of the onboard chipset, memory, processor, and battery. Once a voltage becomes unstable, a warning is given or an error message is sent to the screen. You can adjust the voltage thresholds to define the sensitivity of the voltage monitor. Real time voltage levels are displayed in IPMI.

Fan Status Monitor with Firmware Control

The system health monitor embedded in the BMC chip can check the RPM status of the cooling fans. The processor and chassis fans are controlled via IPMI.

Environmental Temperature Control

System Health sensors in the BMC monitor the temperatures and voltage settings of onboard processors and the system in real time via the IPMI interface. Whenever the temperature of the processor or the system exceeds a user-defined threshold, system/processor cooling fans will be turned on to prevent the processor or the system from overheating.

Note: To avoid possible system overheating, be sure to provide adequate airflow to your system.

1.5 ACPI Features

ACPI stands for Advanced Configuration and Power Interface. The ACPI specification defines a flexible and abstract hardware interface that provides a standard way to integrate power management features throughout a computer system, including its hardware, operating system and application software. This enables the system to automatically turn on and off peripherals such as network cards, hard disk drives, and printers.

In addition to enabling operating system-directed power management, ACPI also provides a generic system event mechanism for Plug and Play, an operating system- independent interface for configuration control. ACPI leverages the Plug and Play BIOS data structures while providing a processor architecture-independent implementation that is compatible with Windows Server 2022.

Chapter 2:

Component Installation

This chapter provides instructions on installing and replacing main system components for the H14DSG-OD motherboard. To prevent compatibility issues, only use components that match the specifications and/or part numbers given.

Installation or replacement of most components require that power first be removed from the system. Follow the procedures given in each section.

2.1 Static-Sensitive Devices 24
Precautions 24
Unpacking 24
2.2 Motherboard Installation 25
Tools Needed 25
Location of Mounting Holes 25
Installing the Motherboard 27
2.3 Processor and Heatsink Installation 29
Preparing the Processor Socket 29
Installing the Processor into the Frame 31
Installing the Heatsink 34
Uninstalling the Heatsink and Processor 35
2.4 Memory Support and Installation 37
Memory Support 37
General Guidelines for Optimizing Memory Performance 38
DIMM Population 38
DIMM Installation 40
DIMM Removal 43
2.5 Battery Removal and Installation 44
Battery Removal 44
Proper Battery Disposal 44
Battery Installation 44
2.6 Connections, Jumpers, and LEDs 45
Power Supply Connections 45

Headers and Connections 46
Front/Rear I/O Module Connectors 49
I/O Module Connectors 49
Jumper Settings 50
LED Indicators 51

2.1 Static-Sensitive Devices

Electrostatic Discharge (ESD) can damage electronic components. To avoid damaging your motherboard, it is important to handle it very carefully. The following measures are generally sufficient to protect your equipment from ESD.

Precautions

- Use a grounded wrist strap designed to prevent static discharge.
- Touch a grounded metal object before removing the board from the antistatic bag.
- Handle the motherboard by its edges only. Do not touch its components, peripheral chips, memory modules, or gold contacts.
- When handling chips or modules, avoid touching their pins.
- Put the motherboard and peripherals back into their antistatic bags when not in use.
- For grounding purposes, make sure that your computer chassis provides excellent conductivity between the power supply, the case, the mounting fasteners, and the motherboard.
- Use only the correct type of onboard CMOS battery. Do not install the onboard battery upside down to avoid possible explosion.

Unpacking

The motherboard is shipped in antistatic packaging to avoid static damage. When unpacking the motherboard, make sure that the person handling it is static protected.

2.2 Motherboard Installation

All motherboards have standard mounting holes to fit different types of chassis. Make sure that the locations of all the mounting holes for both the motherboard and the chassis match. Although a chassis may have both plastic and metal mounting fasteners, metal ones are highly recommended because they ground the motherboard to the chassis. Make sure that the metal standoffs click in or are screwed in tightly.

Tools Needed

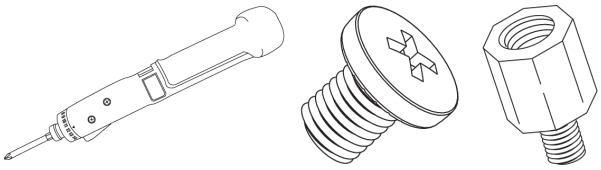

Figure 2-1. Torque Driver (1), Philips Screws (12), Standoffs (12)

Location of Mounting Holes

1. To avoid damaging the motherboard and its components, do not use a force greater than 8 lbf-in on each mounting screw during motherboard installation.
2. Some components are very close to the mounting holes. Take precautionary measures to avoid damaging these components when installing the motherboard to the chassis.

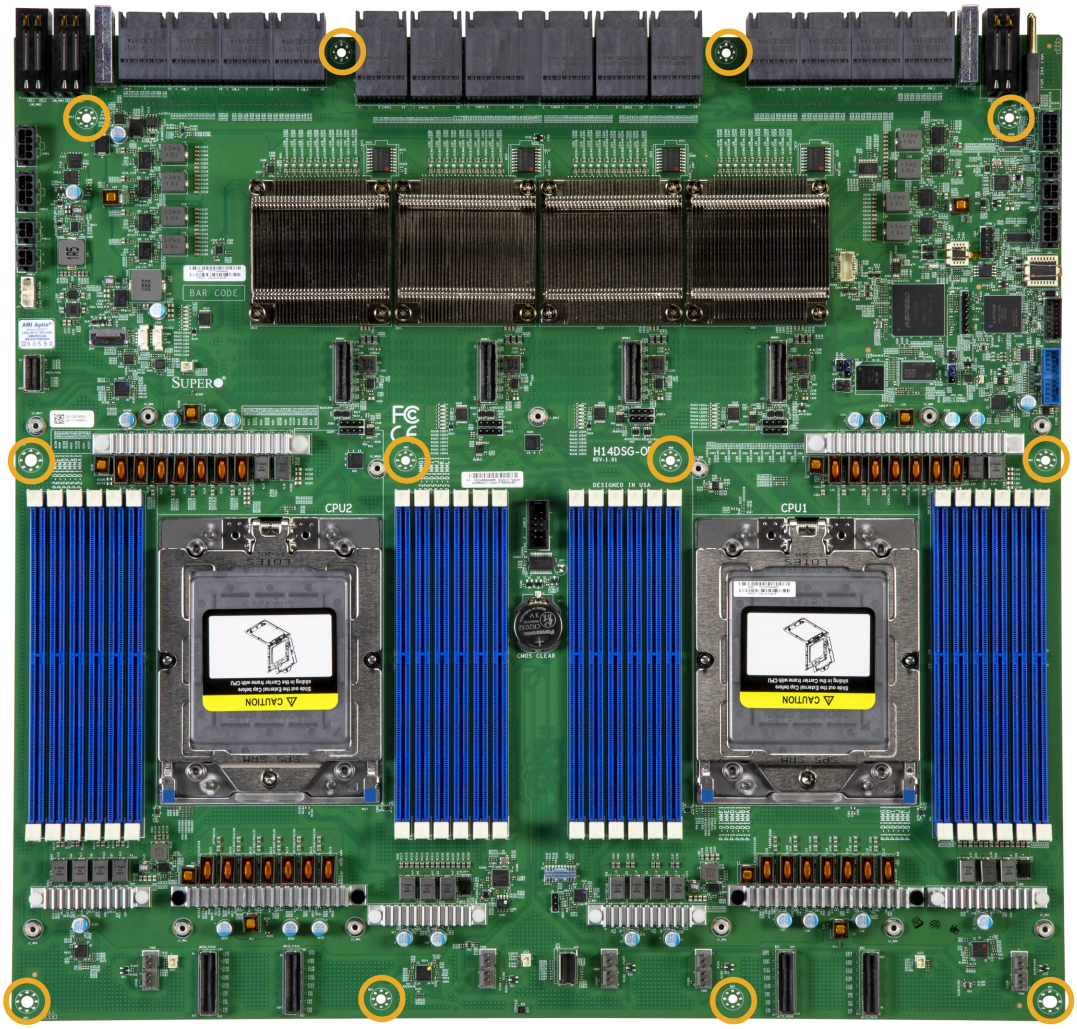

Figure 2-2. Motherboard Mounting Holes

Installing the Motherboard

1. Install the I/O shield into the back of the chassis, if applicable.

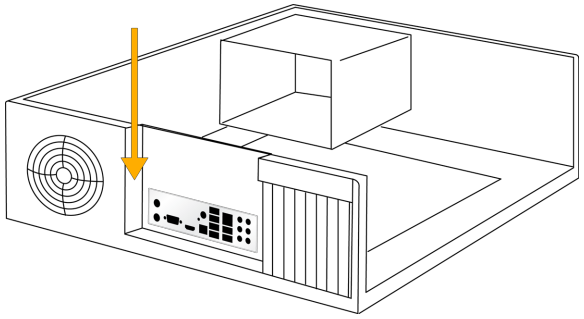

Figure 2-3. Installing the I/O Shield

Note: Images displayed are for illustration purposes only. The components installed in your system may or may not look exactly the same as the graphics shown in the manual.

2. Locate the mounting holes on the motherboard. See Motherboard Installation for the location.

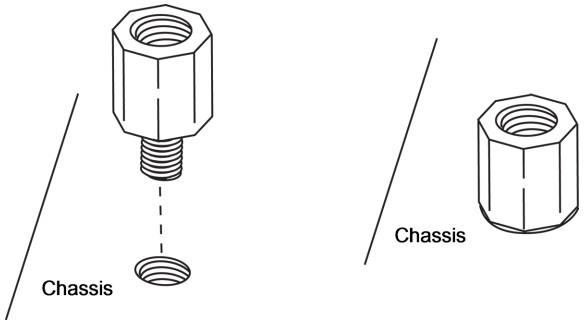

Figure 2-4. Locating the Mounting Holes

3. Locate the matching mounting holes on the chassis. Align the mounting holes on the motherboard against the mounting holes on the chassis.

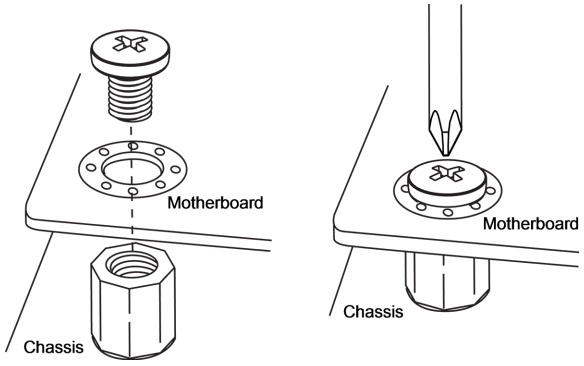

Figure 2-5. Aligning the Mounting Holes

4. Install standoffs in the chassis as needed.
5. Install the motherboard into the chassis carefully to avoid damaging other motherboard components.
6. Insert pan head #6 screws into the mounting holes on the motherboard and the matching mounting holes on the chassis.
7. Make sure that the motherboard is securely placed in the chassis.

2.3 Processor and Heatsink Installation

This section provides procedures to install the processor(s) and heatsink(s).

Notes:

- Take industry standard precautions to avoid ESD damage. For details, see "Static-Sensitive Devices" on page 24.
- Before starting, make sure that the plastic socket cap is in place and none of the socket pins are bent. If any damage is noted, contact your retailer.
- Do not connect the system power cord before the processor and heatsink installation is complete.
- When handling the processor, avoid touching or placing direct pressure on the LGA lands (gold contacts). Improper installation or socket misalignment can cause serious damage to the processor or processor socket.
- Install the processor in the socket and the motherboard into the chassis before installing the heatsink.
- When buying a processor separately, use only a Supermicro certified heatsink.
- Refer to the Supermicro website for the most recent processor support.
- When installing the heatsink, ensure a torque driver set to the correct force is used for each screw.
- Thermal grease is pre-applied on a new heatsink. No additional thermal grease is needed.

Preparing the Processor Socket

1. Remove the screw holding down the force frame. The spring-loaded force frame will raise up. Allow it to lift up to its stopped position.

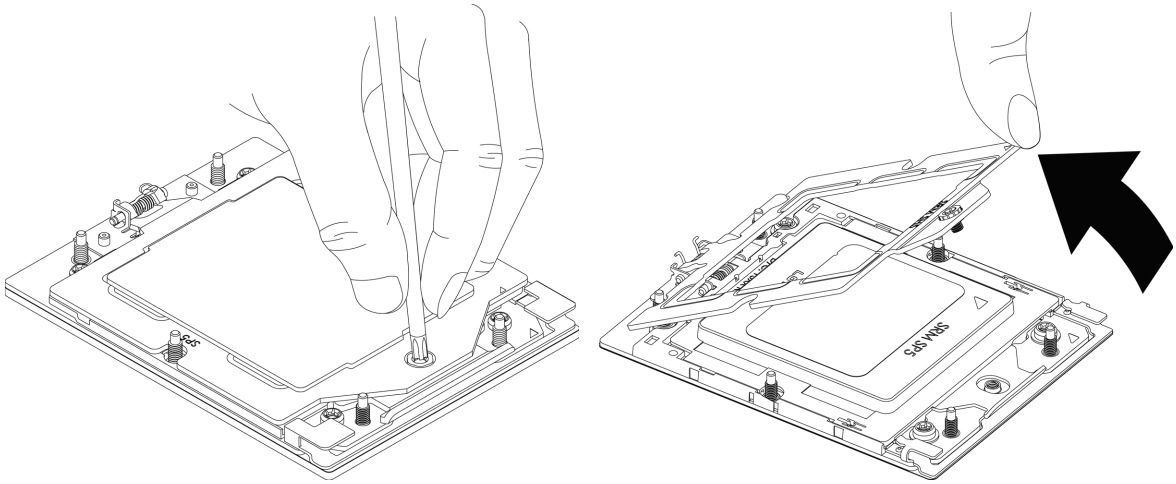

Figure 2-6. Removing Screw from the Force Frame

2. Lift the rail frame up by gripping the lift tabs near the front end of the rail frame. While keeping a secure grip of the rail frame, lift it to a position so you can do the next step of removing the external cap.

   Note: The rail frame is spring loaded, so keep a secure grip on it as you lift it so it does not snap up.

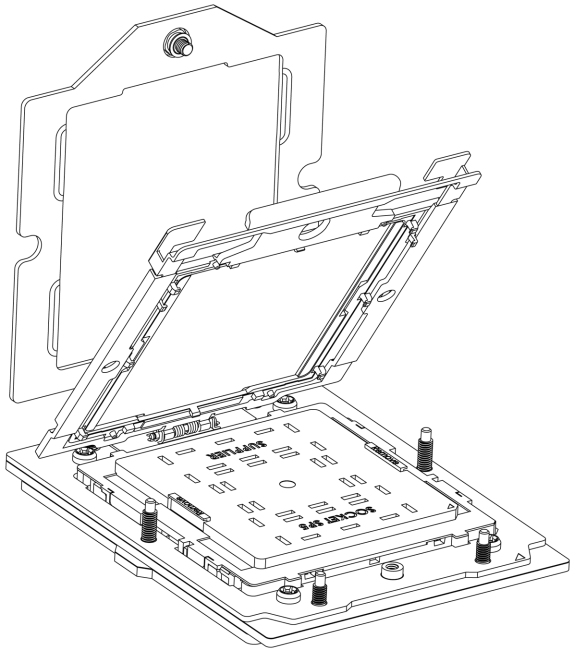

Figure 2-7. Lifting the Frame

3. Remove the external cap from the rail frame by pulling it upwards through the rail guides on the rail frame.

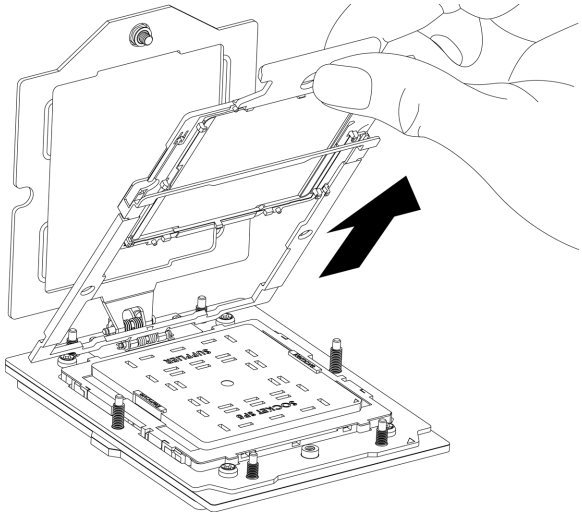

Figure 2-8. Removing the Cap

Installing the Processor into the Frame

1. The processor package is shipped from the factory with the carrier frame pre-assembled. Grip the handle of the carrier frame/processor assembly from its shipping tray, and while gripping the handle, align the flanges of the carrier frame onto the rails of the rail frame so its pins will be at the bottom when the rail frame is lowered later.
2. Slide the carrier frame/processor assembly downwards to the bottom of the rail frame. Ensure the flanges are secure on the rails as you lower it downwards.

   Note: You can only install the processor inside the socket in one direction with the handle at the top. Make sure that it is properly inserted into the socket before closing the rail frame plate. If it doesn't close properly, do not force it as it may damage your processor. Instead, open the rail frame plate again, and double-check that the processor is aligned properly.

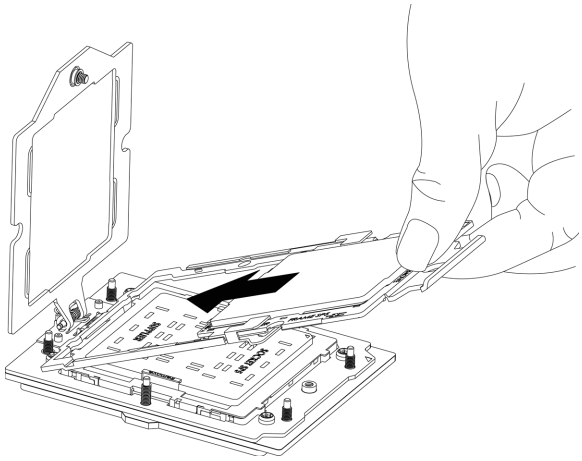

Figure 2-9. Installing into the Rail Frame

3. Lift up the rail frame until it securely rests in upright position. Then remove the PnP cover cap from the socket below. Grip the two lift tabs marked "Remove" at the middle of the cap and pull vertically upwards to remove the PnP cover cap.

Important: The exposed socket contacts are extremely vulnerable and can be damaged easily. Do not touch or drop objects onto the contacts and be careful removing the PnP cover cap and when placing the rail frame over the socket.

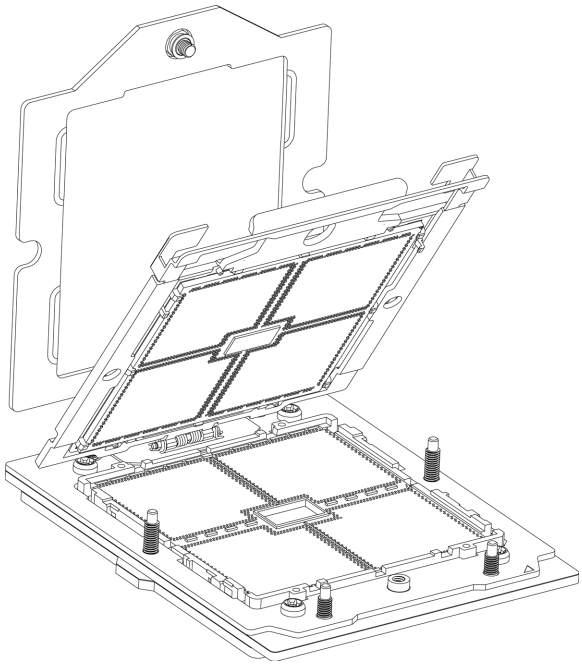

Figure 2-10. Removing the PnP Cap

4. Gently lower the rail frame down onto the socket until the latches on the rail frame engage with the socket housing and it rests in place. Do not force it into place! Note that the force frame is spring loaded and must be held in place before it is secured.

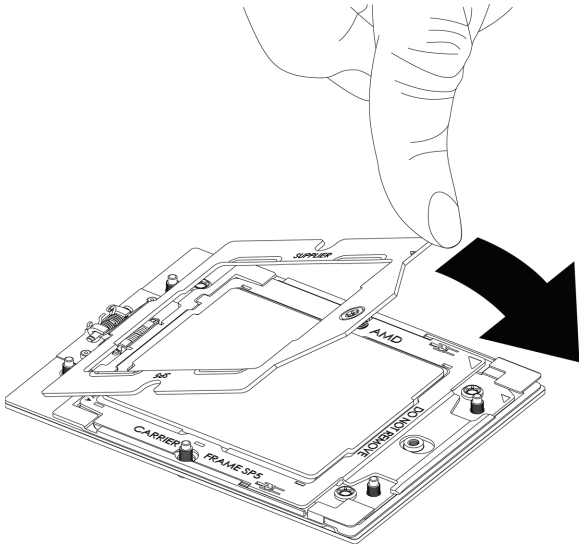

Figure 2-11. Securing the Force Frame

5. Use a T20 bit torque driver, set at 12.5–15.0 kgf-cm (10.8–13.0 in-lbf) to prevent damage to the processor. Replace and tighten the screws in the same order they were removed. When finished, the force frame will be secure over both the rail frame and processor package.

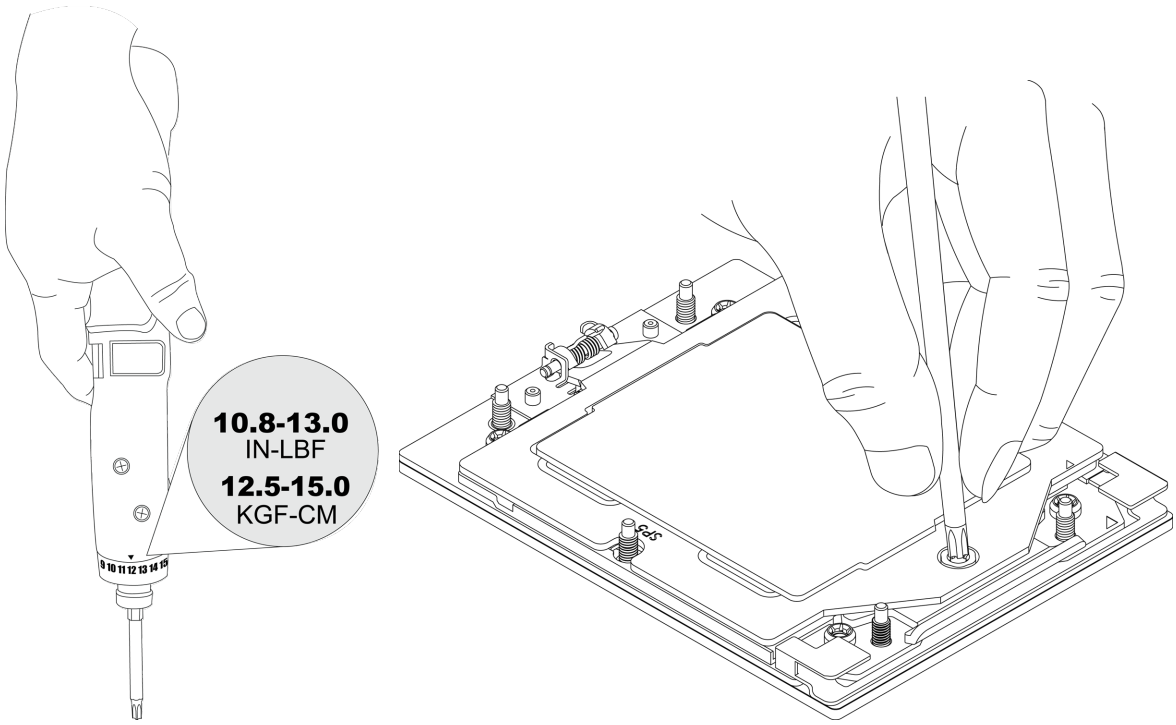

Figure 2-12. Replacing Screws with Torque Driver

Installing the Heatsink

After the force frame is secured and the processor is in place, install the heatsink onto the processor.

1. Place the heatsink so that it rests on the processor aligning the six screws on the socket frame.

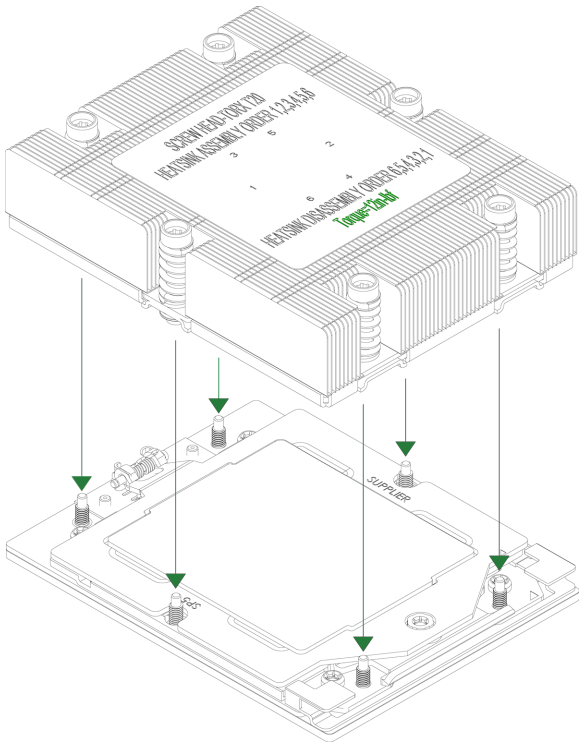

Figure 2-13. Placing the Heatsink

2. Using a T20 torque driver, tighten the screws using the diagonal tightening pattern and torque specifications printed on the heatsink. Tighten the two center screws completely before tightening the four corner screws.

The heatsink is now secured.

Uninstalling the Heatsink and Processor

1. Remove the screws holding the heatsink and gently work it loose.
2. Clean the thermal grease left by the heatsink on the processor assembly to limit the risk of it contaminating the land pads or contacts in the socket housing.
3. Unscrew the plate and lift the force frame to the vertical position.
4. Lift the rail frame using the lift tabs near the front end of the rail frame. Note that the rail frame is spring loaded, so be careful lifting it up into a vertical position.
5. Grip the handle of the carrier frame and pull upwards to extract it from the rail frame. Return the processor assembly to its original shipping container.
6. Grip the handle on the external cap and return it to the rail frame sliding it downwards till it rests in the frame.

7. Gripping the rail frame, rotate it downwards till it rests above and locks over the socket housing in its horizontal position.
8. Push and rotate down the force frame till it is over the external cap and rail frame into a horizontal position.
9. While holding down the force frame, secure it back to the socket frame by securing screw #1 in place.

2.4 Memory Support and Installation

Important: Exercise extreme care when installing or removing memory modules to prevent any damage.

Note: Check the Supermicro website for recommended memory modules.

Memory Support

The H14DSG-OD supports up to 6 TB of ECC DDR5 6400 MT/s speed, RDIMM/3DS memory in 24 DIMM slots. Refer to the tables below for additional information.

Populating RDIMM/RDIMM 3DS DDR5 Memory Modules with AMD EPYC™ 9004 Series Processors			
Type	**DIMM Population**	**Maximum Frequency (MT/s)**	
	DIMM1	**5600 MT/s Grade DIMM**	**4800 MT/s Grade DIMM**
RDIMM	1R (1 rank)	4800	4800
	2R (2 ranks)		
3DS RDIMM	2S2R (4 ranks)		
	2S4R (8 ranks)		

Populating RDIMM/RDIMM 3DS DDR5 Memory Modules with AMD EPYC™ 9005 Series Processors				
Type	**DIMM Population**	**Maximum Frequency (MT/s)**		
	DIMM1	**6400 MT/s Grade DIMM**	**5600 MT/s Grade DIMM**	**4800 MT/s Grade DIMM**
RDIMM	1R (1 rank)	6400	5600	4800
	2R (2 ranks)			
3DS RDIMM	2S2R (4 ranks)			
	2S4R (8 ranks)			

Note: Please use Supermicro validated memory to achieve 6400 MT/s. Contact Supermicro representative for more details.

General Guidelines for Optimizing Memory Performance

- It is recommended to use DDR5 memory of the same type, size, and speed.
- Mixed DIMM speeds can be installed. However, all DIMMs will run at the speed of the slowest DIMM.
- The motherboard will support an odd number amount of memory modules. However, to achieve the best memory performance, a balanced memory population is recommended.

DIMM Population

This table shows the recommended slots to populate.

DIMM Population Guide														
Types	**One DIMM per Channel**													**Sup-ported Nodes per Socket (NPS)**
	F1	**E1**	**D1**	**C1**	**B1**	**A1**		**G1**	**H1**	**I1**	**J1**	**K1**	**L1**	
1 DIMM						V								NPS1
2 DIMMs						V		V						NPS2, NPS1
4 DIMMs				V		V		V		V				NPS4, NPS2, NPS1
6 DIMMs				V	V	V		V	V	V				NPS2, NPS1
8 DIMMs		V		V	V	V		V	V	V		V		NPS4, NPS2, NPS1
10 DIMMs		V	V	V	V	V		V	V	V	V	V		NPS2, NPS1
12 DIMMs	V	V	V	V	V	V		V	V	V	V	V	V	NPS4, NPS2, NPS1

DIMM Population Guide														
Types (2 CPUs)		One DIMM per Channel												Sup-ported Nodes per Socket (NPS)
		F1	E1	D1	C1	B1	A1	G1	H1	I1	J1	K1	L1	
2 DIMMs	CPU1						V							NPS1
	CPU2						V							
4 DIMMs	CPU1						V	V						NPS2, NPS1
	CPU2						V	V						
8 DIMMs	CPU1				V		V	V		V				NPS4, NPS2, NPS1
	CPU2				V		V	V		V				
12 DIMMs	CPU1				V	V	V	V	V	V				NPS2, NPS1
	CPU2				V	V	V	V	V	V				
16 DIMMs	CPU1		V		V	V	V	V	V	V		V		NPS4, NPS2, NPS1
	CPU2		V		V	V	V	V	V	V		V		
20 DIMMs	CPU1		V	V	V	V	V	V	V	V	V	V		NPS2, NPS1
	CPU2		V	V	V	V	V	V	V	V	V	V		
24 DIMMs	CPU1	V	V	V	V	V	V	V	V	V	V	V	V	NPS4, NPS2, NPS1
	CPU2	V	V	V	V	V	V	V	V	V	V	V	V	

Note: Fully populate the motherboard with validated memory modules to achieve the best memory performance. NPS setting based on applications. Selecting Auto in BIOS will default to NPS1.

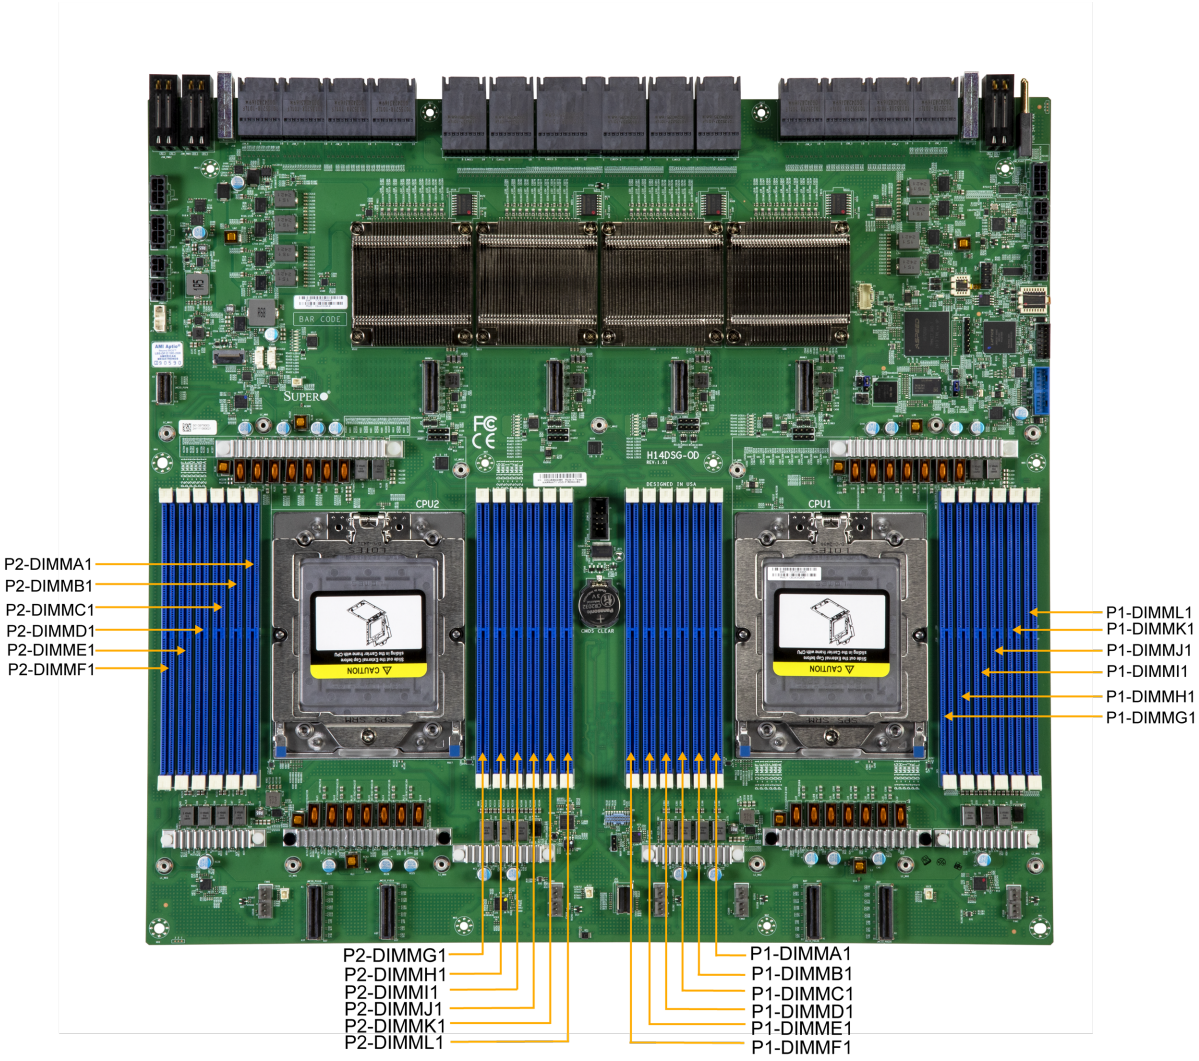

Figure 2-14. DIMM Labels

DIMM Installation

Important: Do not use excessive force when pressing the release tabs on the ends of the DIMM socket to avoid causing any damage to the memory module or the DIMM socket. Handle memory modules with care. Carefully follow all the instructions given in "Static-Sensitive Devices" on page 24 to avoid ESD-related damages done to your memory modules or components.

1. Insert the desired number of DIMMs into the memory slots based on the recommended DIMM population table earlier in this section.
2. Push the release tabs outwards on both ends of the DIMM slot to unlock it.

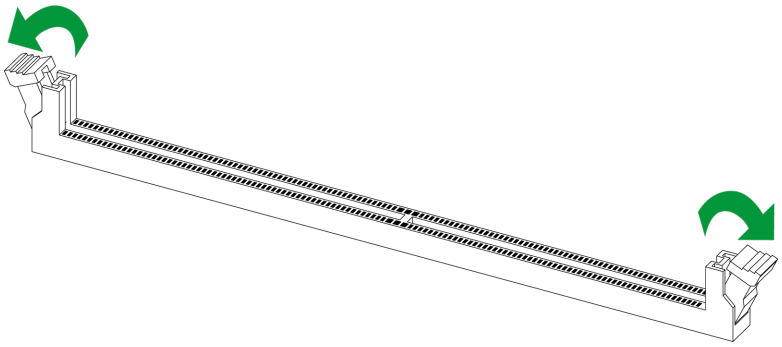

Figure 2-15. Unlocking the DIMM Slot

3. Align the key of the DIMM with the receptive point on the memory slot.

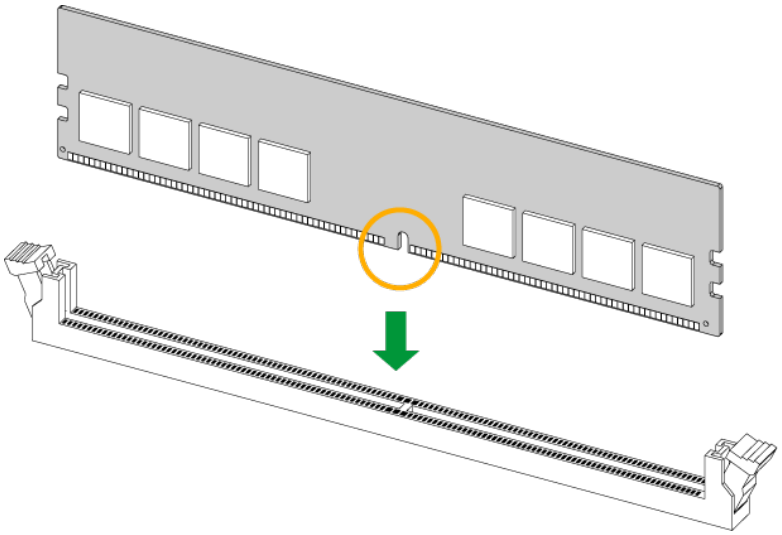

Figure 2-16. Aligning the DIMM Slot with the Receptive Point

4. Align the notches on both ends of the module against the receptive points on the ends of the slot.

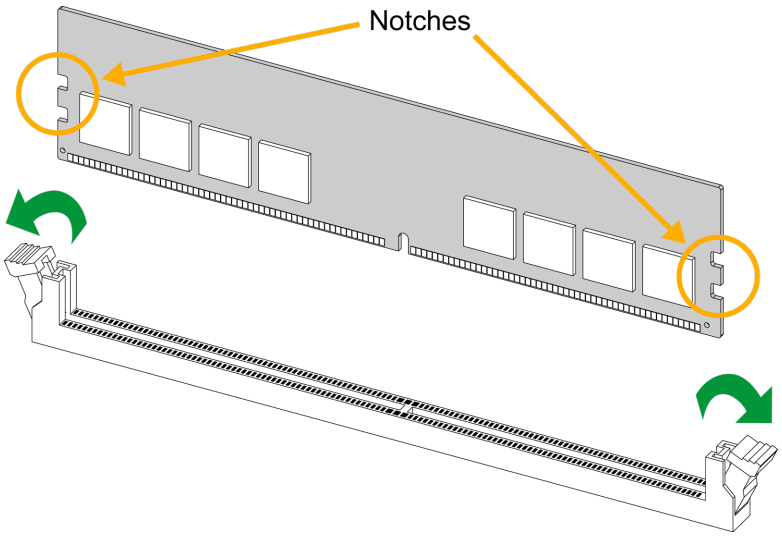

Figure 2-17. Aligning the Notches

5. Press both ends of the module straight down into the slot until the module snaps into place.
6. Press the release tabs to the lock positions to secure the DIMM into the slot.

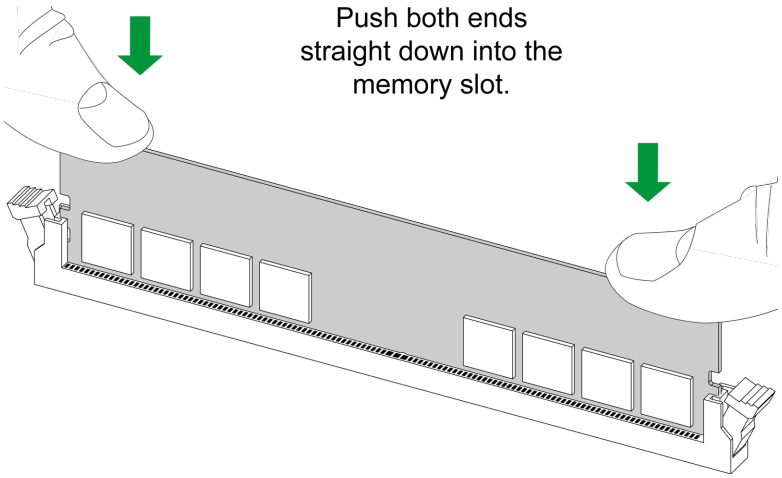

Figure 2-18. Securing the DIMM

For a detailed diagram of the H14DSG-OD motherboard, see the layout under "Quick Reference" on page 12.

DIMM Removal

Important: Do not use excessive force when pressing the release tabs on the ends of the DIMM socket to avoid causing any damage to the memory module or the DIMM socket. Handle memory modules with care. Carefully follow all the instructions given in "Static-Sensitive Devices" on page 24 to avoid ESD-related damages done to your memory modules or components.

Press both release tabs on the ends of the DIMM socket to unlock it. Once the DIMM is loosened, remove it from the memory slot.

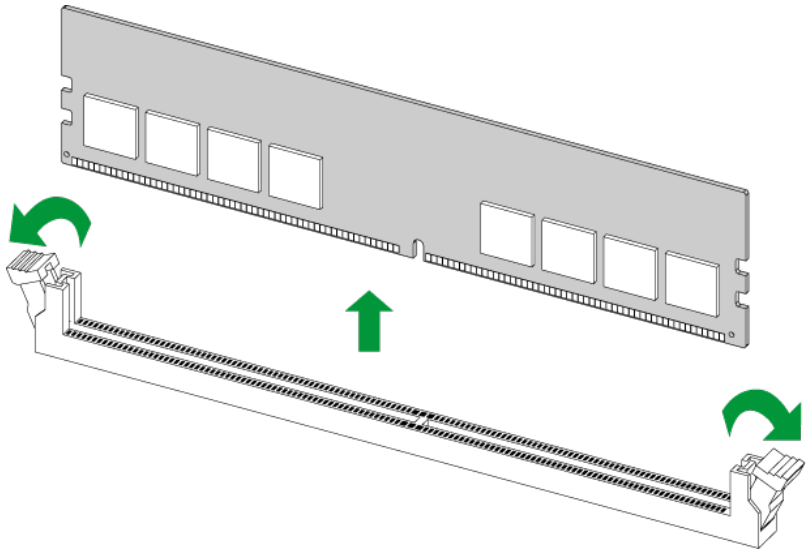

Figure 2-19. Unlocking the DIMM Slot

For a detailed diagram of the H14DSG-OD motherboard, see the layout under "Quick Reference" on page 12.

2.5 Battery Removal and Installation

Battery Removal

To remove the onboard battery, follow the steps below:

1. Power off your system and unplug your power cable.
2. Locate the onboard battery as shown below.
3. Using a tool such as a pen or a small screwdriver, push the battery lock outwards to unlock it. Once unlocked, the battery will pop out from the holder.
4. Remove the battery.

Proper Battery Disposal

Important: Handle used batteries carefully. Do not damage the battery in any way; a damaged battery may release hazardous materials into the environment. Do not discard a used battery in the garbage or a public landfill. Comply with the regulations set up by your local hazardous waste management agency to dispose of your used battery properly.

Battery Installation

To install an onboard battery, follow steps 1 and 2 above and continue below:

Important: When replacing a battery, be sure to only replace it with the same type.

1. Identify the battery's polarity. The positive (+) side should be facing up.
2. Insert the battery into the battery holder and push it down until you hear a click to ensure that the battery is securely locked.

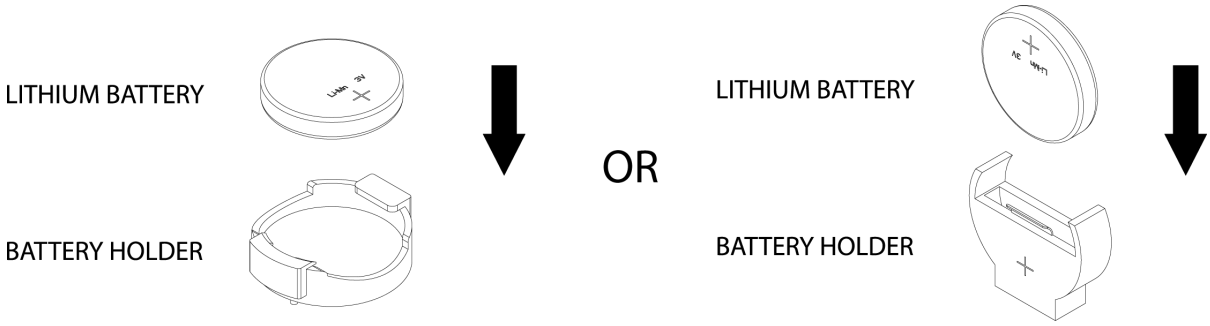

Figure 2-20. Installing a Battery

2.6 Connections, Jumpers, and LEDs

Refer to the following sections for information about connections, jumpers, and LEDs for the H14DSG-OD motherboard.

Power Supply Connections

For information about the power connections of the H14DSG-OD motherboard, refer to the following content.

Power Supply

As with all computer products, a stable power source is necessary for proper and reliable operation. It is even more important for processors that have high CPU clock rates where noisy power transmission is present.

Power Supply Connectors

The H14DSG-OD has four PowerMAX power input connectors: JSW_PWR1, JSW_PWR2, and JSW_PWR4 for 12 VDC power input via the midplane, and JSW_P54V1 for 54 VDC power input via the midplane.

Fan Board 54 V 8-pin Connector

JPWR6 is an 8-pin, 54 VDC power connector for the system's fan board. Refer to the table below for pin definitions.

Fan Board Power

Pin Definitions

Pin#	Definition	Pin#	Definition
1	Ground	5	+54 V
2	Ground	6	+54 V
3	Ground	7	+54 V
4	Ground	8	+54 V

Backplane and BlueField-3 Card 12 V 8-pin Power Connectors

JPWR3, JPWR4, and JPWR12 are 8-pin 12 VDC power inputs. JPWR3 and JPWR4 are for the system's left and right BlueField-3 cards. JPWR12 is for the system’s backplane. Refer to the table below for pin definitions.

8-Pin Power Pin Definitions			
Pin#	Definition	Pin#	Definition
1	Ground	5	+12 V
2	Ground	6	+12 V
3	Ground	7	+12 V
4	Ground	8	+12 V

E1.S Backplane, M.2 Module, BlueField-3 Risers, and BlueField-3 Bridge Boards 12 V 4-pin Power Connectors

JPWR11, JPWR13, JPWR14, and JPWR15 are 4-pin 12 VDC power inputs. JPWR11 provides power to the system's E1.S backplane. JPWR13 supplies power to the system's M.2 module. JPWR14 is used for the system's left BlueField-3 riser and BlueField-3 bridge board via a Y cable. JPWR15 powers the system's right BlueField-3 riser and BlueField-3 bridge board, also through a Y cable. Refer to the table below for pin definitions.

4-Pin Power Pin Definitions	
Pin#	Definition
1	Ground
2	Ground
3	12 V
4	12 V

Headers and Connections

For information about the headers of the H14DSG-OD motherboard, refer to the following content.

Fan Headers (FAN1 to FAN5)

There are five fan headers (FAN1 to FAN5) on the motherboard. These are 6-pin fan headers, with pins 1-3 being backward compatible with traditional 3-pin fans. The onboard fan speeds are controlled by Fan Mode in the BMC. When using Fan Mode setting, use all 6-pin fans.

Fan Header Pin Definitions	
Pin#	**Definition**
1	Ground (Black)
2	+12 V (Red)
3	Tachometer (Yellow)
4	PWM control (Blue)
5	12 V
6	Ground

TPM/Port 80 Header

The JTPM1 header on the H14DSG-OD motherboard is used to connect a Trusted Platform Module (TPM)/Port 80, which is available from Supermicro (optional). A TPM/Port 80 connector is a security device that supports encryption and authentication in hard drives. It allows the motherboard to deny access if the TPM associated with the hard drive is not installed in the system. Information on the TPM is available at the following page:

https://www.supermicro.com/manuals/other/AOM-TPM-9670V_9670H__X12_H12.pdf

For a detailed diagram of the H14DSG-OD motherboard, see the layout under "Quick Reference" on page 12.

Trusted Platform Module Header Pin Definitions: 10 Total			
Pin#	**Definition**	**Pin#**	**Definition**
1	+3.3 V	2	SPI_CS#
3	RESET#	4	SPI_MISO
5	SPI_CLK	6	Ground
7	SPI_MOSI	8	No Connection
9	3V3_AUX	10	SPI_IRQ#

NC-SI Connection

The Network Controller Sideband Interface (NC-SI) connection is located at JNCSIBF3. This connection is used to connect a Network Interface Card (NIC) to the motherboard to allow the onboard Baseboard Management Controller (BMC) to communicate with a network.

Note: For detailed instructions on how to configure Network Interface Card (NIC) settings, refer to the Network Interface Card Configuration User's Guide posted on the web page under the link: https://www.supermicro.com/support/manuals.

For a detailed diagram of the H14DSG-OD motherboard, see the layout under "Quick Reference" on page 12.

Fan Board I²C Header

An I²C fan header for the fan board is located at JP3. Fan speed control for this fan is supported by Thermal Management via the BMC 2.0 interface. See the table below for pin definitions.

Fan Board I²C Header Pin Definitions	
Pin#	**Definition**
1	SDA
2	Ground
3	SCL
4	P3V3_AUX

NVMe / SATA I2C Header

The NVMe / SATA SMBus (I2C) header (JRSI2C1) provides hot-plug support via a dedicated SMBus interface. This feature is only available for a Supermicro complete system with an Supermicro-proprietary NVMe / SATA add-on card and a proper cable installed. See the table below for pin definitions.

NVMe / SATA I2C Header Pin Definitions	
Pin#	**Definition**
1	SDA
2	Ground
3	SCL
4	P3V3_AUX

Liquid Cooling Leak Detection Connector

Four liquid cooling leak detection connectors are located at JLC0 through JLC3 on the motherboard. JLC0 is used for leak detection on the PCIe switch cold plate, JLC1 for leak detection on the CPU2 side, JLC2 for leak detection around the DIMM slots, and JLC3 for leak detection on the CPU1 side. Connect the appropriate cable from the chassis to receive notifications when a leak is detected. Refer to the table below for pin definitions.

Leak Detection Connector (JLC0-3)

Pin Definitions

Pin#	Definition
1	Vsen+
2	Vsen-

MCIO M.2 NVMe Connector

The motherboard features a single MCIO x4 connector (JMCIO_P1P4), which is supported by CPU2. This connector supports a PCIe 3.0 x4 connection and is used for the M.2 module (AOC-SMG4-2M2 or AOM-S3808NI-4NM).

Midplane and NIC Card Carrier Board Connectors

There are eight ExaMax connectors (JSW_1 to JSW_8) on the motherboard to connect to the midplane for GPU system.

In addition, there are six PCIe 5.0 ExaMax connectors (JNIC1 to 6) to connect to the NIC card carrier board, which supports eight PCIe 5.0 x16 connections.

SATA Port

The H14DSG-OD motherboard has one SATA 3.0 port (JS1) that is supported by ASMEDIA ASM1061.

Front/Rear I/O Module Connectors

I/O Module Connectors

Two connectors on the motherboard provide I/O module connections.

- **Rear I/O:** BMC dedicated LAN port is supported through AOC-DP805-IO.
- **Front access:** The connector located at JFP1 provides connection to an I/O module. It supports one UID switch, and one UID LED indicator. Two USB 3.0 ports are supported with the JUSB1 connector. VGA is supported with the JVGA1 connector.

Jumper Settings

To modify the operation of the motherboard, jumpers can be used to choose between optional settings. Jumpers create shorts between two pins to change the function of the connector. Pin 1 is identified with a square solder pad on the printed circuit board. See the diagram below for an example of jumping pins 1 and 2. Refer to the motherboard layout page for jumper locations.

Note: On two-pin jumpers, "Closed" means the jumper is on and "Open" means the jumper is off the pins.

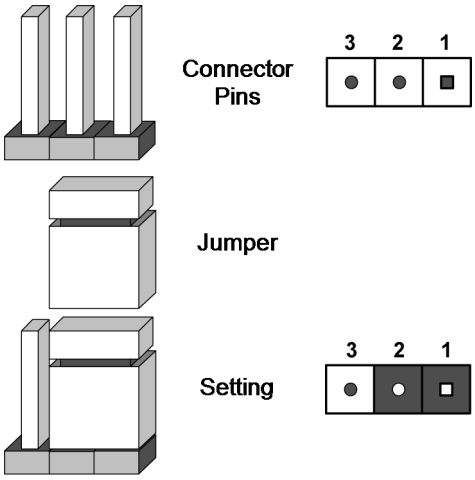

Figure 2-21. Jumping Connector Pins

CMOS Clear

JBT1 on the H14DSG-OD motherboard is used to clear CMOS, which will also clear any passwords. Instead of pins, this jumper consists of contact pads to prevent accidentally clearing the contents of CMOS.

For a detailed diagram of the H14DSG-OD motherboard, see the layout under "Quick Reference" on page 12.

1. First power down the system and unplug the power cord(s).
2. Remove the cover of the chassis to access the motherboard.
3. Remove the onboard battery from the motherboard.
4. Short the CMOS pads, JBT1, with a metal object such as a small screwdriver for at least four seconds.

Note: Clearing CMOS will also clear all passwords.

5. Remove the screwdriver (or shorting device).
6. Replace the cover, reconnect the power cord(s), and power on the system.

JPG1

JPG1 enables or disables the VGA connector. The default setting is enabled.

JPG1	
Jumper Position	**Definition**
Pins 1–2	Enabled
Pins 2–3	Disabled

JUID1

JUID1 is used for a chassis that supports a front UID button. Setting JUID1 to Pins 2-3 configures the front UID button as a reset button.

JUID1	
Jumper Position	**Definition**
Pins 1–2	Switch function UID
Pins 2–3	Reset

LED Indicators

For information about the LED indicators on the H14DSG-OD motherboard, refer to the following content.

Onboard Power LED (LED1)

The Onboard Power LED is located at LED1 on the H14DSG-OD motherboard. When this LED is on, the system is on. Be sure to turn off the system and unplug the power cord before removing or installing components.

For a detailed diagram of the H14DSG-OD motherboard, see the layout under "Quick Reference" on page 12.

Onboard Power LED Indicator	
LED Color	**Definition**
Off	System Power Off (power cable not connected)
Green	System Power On

RoT Status LED (LED2)

A RoT (Root-of-Trust) status LED is located at LED2 on the H14DSG-OD motherboard. When this LED is lit, it means the RoT check has failed. See the table below for more information.

RoT Status LED Indicator	
LED Color	**Definition**
Off	Normal
Red	Fail

BMC Heartbeat LED (LED3)

A BMC Heartbeat LED is located at LED3 on the H14DSG-OD motherboard. When this LED is blinking, the BMC is functioning normally.

For a detailed diagram of the H14DSG-OD motherboard, see the layout under "Quick Reference" on page 12.

BMC Heartbeat LED Indicator	
LED Color	**Definition**
Solid On	BMC is not ready
Blinking	BMC Normal
Fast Blinking	BMC: Initializing

Chapter 3:

Troubleshooting

The following content contains information on common issues and how to resolve them.

3.1 Troubleshooting Procedures **54**
Before Power On 54
No Power 54
No Video 54
System Boot Failure 54
Memory Errors 55
Losing the System's Setup Configuration 55
If the System Becomes Unstable 55
3.2 Technical Support Procedures **57**
3.3 Motherboard Battery **58**
3.4 Where to Get Replacement Components **59**
3.5 Returning Merchandise for Service **60**
3.6 Feedback **61**

3.1 Troubleshooting Procedures

Use the following procedures to troubleshoot your system. If you have followed all of the procedures below and still need assistance, refer to the "Technical Support Procedures" on page 57 or "Returning Merchandise for Service" on page 60 section(s) in this chapter. Always disconnect the AC power cord before adding, changing or installing any non hot-swap hardware components. If the below steps do not fix the setup configuration problem, contact your vendor for repairs.

Before Power On

1. Make sure that there are no short circuits between the motherboard and chassis.
2. Disconnect all ribbon/wire cables from the motherboard, including those for the keyboard and mouse.
3. Remove all add-on cards.
4. Install the processor (making sure it is fully seated) and connect the front panel connectors to the motherboard.

No Power

1. Make sure that there are no short circuits between the motherboard and the chassis.
2. Make sure that the power connectors are properly connected.
3. Check that the 115 V/230 V switch, if available, on the power supply is properly set.
4. Turn the power switch on and off to test the system, if applicable.
5. Check the processor socket for bent pins and make sure the processor is fully seated.
6. The battery on your motherboard may be old. Check to verify that it still supplies approximately 3 VDC. If it does not, replace it with a new one.

No Video

1. If the power is on, but you do not have video, remove all add-on cards and cables.
2. Remove all memory modules and turn on the system (if the alarm is on, check the specs of memory modules, reset the memory, or try a different one).

System Boot Failure

If the system does not display Power-On-Self-Test (POST) or does not respond after the power is turned on, do the following:

1. Check the screen for an error message.
2. Clear the CMOS settings by unplugging the power cord and contacting both pads on the CMOS clear jumper. Restart the system. Refer to "CMOS Clear" on page 50.
3. Remove all components from the motherboard and turn on the system with only one DIMM installed. If the system boots, turn off the system and repopulate the components back into the system to retest. Add one component at a time to isolate which one may have caused the system boot issue.

Memory Errors

When suspecting faulty memory is causing the system issue, check the following:

1. Make sure that the memory modules are compatible with the system and are properly installed. See "Component Installation" on page 22 for installation instructions. (For memory compatibility, refer to the "Tested Memory List" link on the motherboard's product page to see a list of supported memory.)
2. Check if different speeds of DIMMs have been installed. It is strongly recommended that you use the same RAM type and speed for all DIMMs in the system.
3. Make sure that you are using the correct type of DIMMs recommended by the manufacturer.
4. Check for bad DIMMs or slots by swapping a single module among all memory slots and check the results.

Losing the System's Setup Configuration

1. Make sure that you are using a high-quality power supply. A poor-quality power supply may cause the system to lose the CMOS setup information. Refer to Introduction for details on recommended power supplies.
2. The battery on your motherboard may be old. Check to verify that it still supplies approximately 3 VDC. If it does not, replace it with a new one.

If the System Becomes Unstable

If the system becomes unstable during or after OS installation, check the following:

1. Processor/BIOS support: Make sure that your processor is supported and that you have the latest BIOS installed in your system.

2. Memory support: Make sure that the memory modules are supported. Refer to the product page on our website at https://www.supermicro.com. Test the modules using memtest86 or a similar utility.

   Note: Click on the "Tested Memory List" link on the motherboard's product page to see a list of supported memory.

3. Storage Drive support: Make sure that all storage drives work properly. Replace the failed storage drives with good ones.
4. System cooling: Check the system cooling to make sure that all heatsink fans and processor/system fans, etc., work properly. Check the hardware monitoring settings in the IPMI to make sure that the processor and system temperatures are within the normal range. Also, check the front panel Overheat LED and make sure that it is not on.
5. Adequate power supply: Make sure that the power supply provides adequate power to the system. Make sure that all power connectors are connected. Refer to our website for more information on the minimum power requirements.
6. Proper software support: Make sure that the correct drivers are used.

If the system becomes unstable before or during OS installation, check the following:

1. Source of installation: Make sure that the devices used for installation are working properly, including boot devices such as a USB flash or media device.
2. Cable connection: Check to make sure that all cables are connected and working properly.
3. Use the minimum configuration for troubleshooting: Remove all unnecessary components (starting with add-on cards first), and use the minimum configuration (but with the processor and a memory module installed) to identify the trouble areas. Refer to the steps listed above in this section for proper troubleshooting procedures.
4. Identify bad components by isolating them: If necessary, remove a component in question from the chassis, and test it in isolation to make sure that it works properly. Replace a bad component with a good one.
5. Check and change one component at a time instead of changing several items at the same time. This will help isolate and identify the problem.
6. To find out if a component is good, swap this component with a new one to see if the system will work properly. If so, then the old component is bad. You can also install the component in question in another system. If the new system works, the component is good and the old system has problems.

3.2 Technical Support Procedures

Before contacting Technical Support, take the following steps. Also, note that as a motherboard manufacturer, Supermicro also sells motherboards through its channels, so it is best to first check with your distributor or reseller for troubleshooting services. They should know of any possible problems with the specific system configuration that was sold to you.

1. Refer to "Troubleshooting Procedures" on page 54 or see the FAQs on our website (https://www.supermicro.com/FAQ/index.php) before contacting Technical Support.
2. BIOS upgrades can be downloaded from our website (https://www.supermicro.com/support/resources/bios_ipmi.php).
3. If you still cannot resolve the problem, include the following information when contacting Supermicro for technical support:
   - Motherboard model and PCB revision number
   - BIOS release date/version (This can be seen on the initial display when your system first boots up.)
   - System configuration
4. An example of a Technical Support form is on our website at https://webpr3.supermicro.com/SupportPortal.
5. Distributors: For immediate assistance, have your account number ready when placing a call to our Technical Support department. For Supermicro contact information, refer to "Contacting Supermicro" on page 9.

3.3 Motherboard Battery

For information on removing, disposing of, and replacing the motherboard battery of your system, refer to "Battery Removal and Installation" on page 44.

3.4 Where to Get Replacement Components

If you need replacement parts for your H14DSG-OD motherboard, to ensure the highest level of professional service and technical support, purchase exclusively from our Supermicro Authorized Distributors/System Integrators/Resellers. A list can be found on the Supermicro website:

https://www.supermicro.com

Under the "Buy" menu, click the "Where to Buy" link.

3.5 Returning Merchandise for Service

A receipt or copy of your invoice marked with the date of purchase is required before any warranty service will be rendered. You can obtain service by calling your vendor for a Returned Merchandise Authorization (RMA) number. When returning the motherboard to the manufacturer, the RMA number should be prominently displayed on the outside of the shipping carton, and the shipping package is mailed prepaid or hand-carried. Shipping and handling charges will be applied for all orders that must be mailed when service is complete.

For faster service, RMA authorizations can be requested online at the following page:

https://www.supermicro.com/RmaForm

Whenever possible, repack the motherboard in the original Supermicro carton, using the original packaging material. If these are no longer available, be sure to pack the motherboard securely, using packaging material to surround the motherboard so that it does not shift within the carton and become damaged during shipping.

This warranty only covers normal consumer use and does not cover damages incurred in shipping or from failure due to the alternation, misuse, abuse or improper maintenance of products.

During the warranty period, contact your distributor first for any product problems.

3.6 Feedback

Supermicro values your feedback as we strive to improve our customer experience in all facets of our business. Email us at Techwriterteam@supermicro.com to provide feedback on our manuals.

Chapter 4:

UEFI BIOS

The following content contains information on BIOS configuration with the H14DSG-OD motherboard.

4.1 Introduction **63**
4.2 Main Setup **65**
4.3 Advanced Setup Configuration **67**
4.4 BMC **94**
4.5 Event Logs **98**
4.6 Security **100**
4.7 Boot **103**
4.8 Save & Exit **105**

4.1 Introduction

This chapter describes the AMIBIOS™ Setup utility for the motherboard. The BIOS is stored on a chip and can be easily upgraded using the UEFI script (flash.nsh), the BMC WebUI, or the SuperServer Automation Assistant (SAA) utility.

Note: Due to periodic changes to the BIOS, some settings may have been added or deleted and might not yet be recorded in this manual. Refer to the Manual Download area of our website for any changes to BIOS that may not be reflected in this manual.

Updating BIOS

It is recommended that you do not upgrade your BIOS if you are not experiencing any problems with your system. Updated BIOS files are located on our website at the following page:

https://www.supermicro.com/support/resources/bios_ipmi.php

Check our BIOS warning message and the information on how to update your BIOS on our website. Select your motherboard model and download the BIOS file to your computer. Also, check the current BIOS revision to make sure that it is newer than your BIOS before downloading.

Important: Do not shut down or reset the system while updating the BIOS to prevent possible system boot failure! Read the motherboard README file carefully before you perform the BIOS update.

Unzip the BIOS file onto a bootable USB device and then boot into the built-in UEFI Shell and type "flash.nsh <BIOS filename><BMC Username><BMC Password>" to start the BIOS update. The flash script will invoke the SUM (EFI) tool automatically to perform the BIOS update, beginning with uploading the BIOS image to BMC. After uploading the firmware, the system will reboot to continue the process. The BMC will take over and continue the BIOS update in the background. The process will take 3–5 minutes.

Starting the Setup Utility

To enter the BIOS Setup utility, press the <Delete> key while the system is booting-up. In most cases, the <Delete> key is used to invoke the BIOS Setup screen. There are a few cases when other hot keys are used, such as <F1>, <F2>, etc. Each main BIOS menu option is described in this manual.

The Main BIOS screen has two main frames. The left frame displays all the options that can be configured. “Grayed-out” options cannot be configured. The right frame displays the key legend. Above the key legend is an area reserved for a text message. When a BIOS submenu or item is selected in the left frame, it is highlighted in white. Often a text message will accompany it. (Note that BIOS has default text messages built in. We retain the option to include, omit, or change any of these text messages.) Settings printed in Bold are the default values.

A "►" indicates a submenu. Highlighting such an item and pressing the <Enter> key open the list of settings within that submenu.

The BIOS Setup utility uses a key-based navigation system called hot keys. Most of these hot keys (<F1>, <F2>, <F3>, <F4>, <F5>, <F6>, <Enter>, <ESC>, the arrow keys, etc.) can be used at any time during the setup navigation process.

4.2 Main Setup

The Main setup screen appears when the AMI BIOS Setup utility is first entered. To return to the Main setup screen, select the Main tab at the top of the screen. The Main BIOS setup screen is shown below.

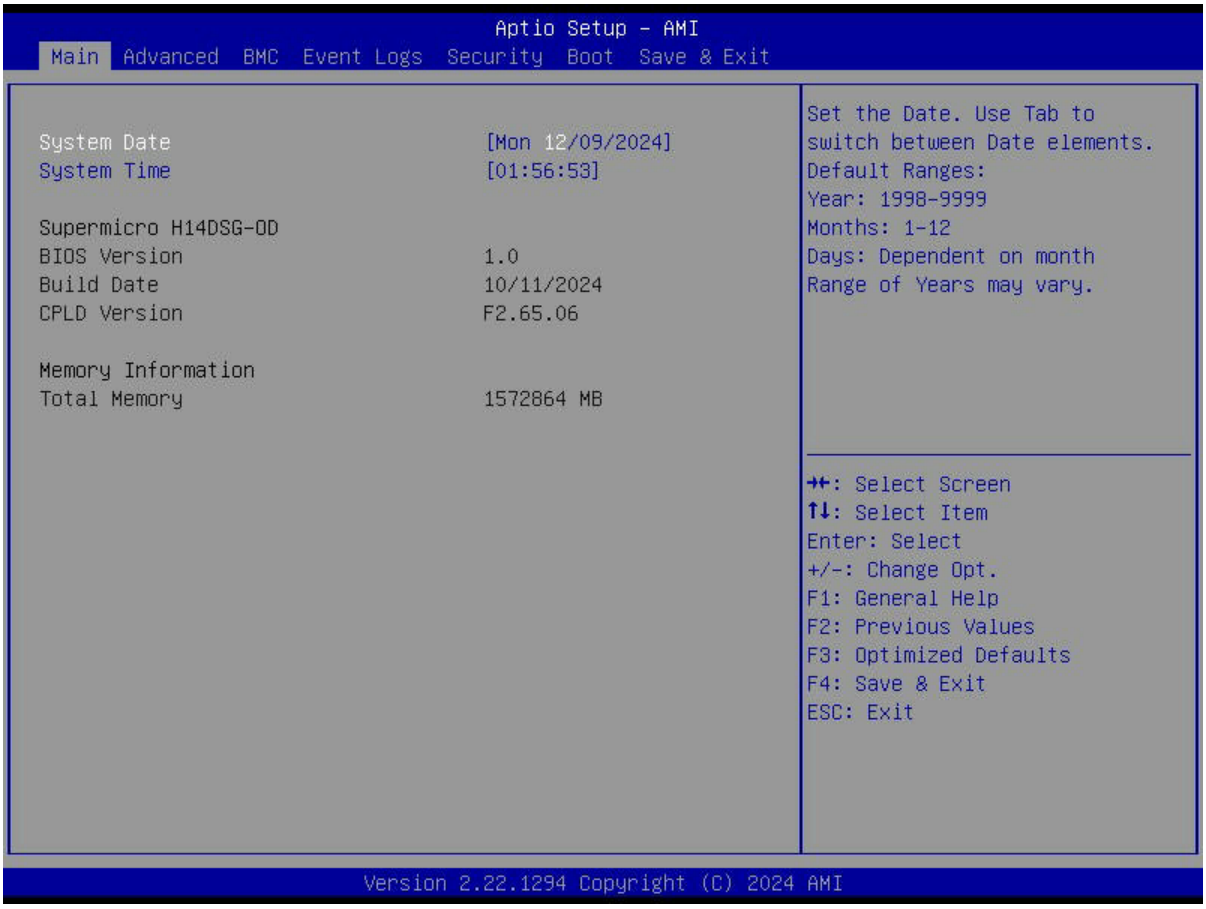

Figure 4-1. UEFI BIOS Main Screen Tab

System Date/System Time

Use the two features to change the system date and time. Highlight **System Date** or **System Time** using the arrow keys. Enter new values using the keyboard. Press the <Tab> key or the arrow keys to move between fields. The date must be entered in MM/DD/YYYY format. The time is entered in HH:MM:SS format.

Note: The time is in the 24-hour format. For example, 5:30 P.M. appears as 17:30:00.

Supermicro H14DSG-OD

BIOS Version

This feature displays the version of the BIOS ROM used in the system.

Build Date

This feature displays the date when the version of the BIOS ROM used in the system was built.

CPLD Version

This feature displays the version of the Complex-Programmable Logical Device (CPLD) used in the system.

Memory Information

Total Memory

This feature displays the total size of memory available in the system.

4.3 Advanced Setup Configuration

Use the arrow keys to select the Advanced submenu and press <Enter> to access the submenu items.

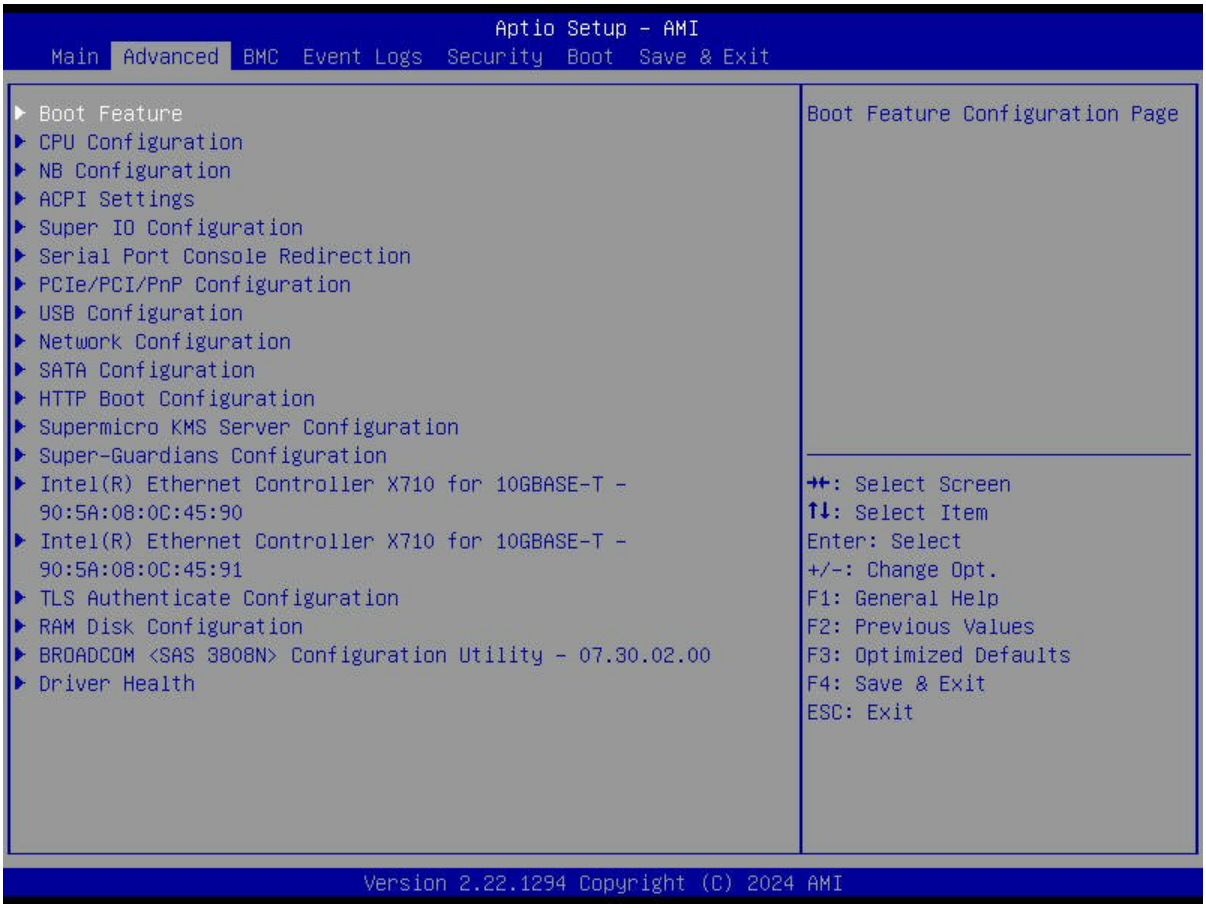

Figure 4-2. Advanced Setup Configuration Screen Tab

Important: Use caution when changing the Advanced settings. An incorrect value, an improper DRAM frequency, or a wrong BIOS timing setting may cause the system to malfunction. When this occurs, revert the setting to the manufacture default settings.

Boot Feature

►Boot Configuration

Quiet Boot

Use this feature to select the screen between displaying the Power-on Self Test (POST) messages or the OEM logo upon bootup. Select Disabled to display the POST messages. Select Enabled to display the OEM logo instead of the normal POST messages. The options

are Disabled and **Enabled**.

Note: BIOS POST messages are always displayed regardless of the setting of this feature.

Option ROM Messages

Use this feature to set the display mode for the Option ROM. Select Keep Current to display the current AddOn ROM display settings. Select Force BIOS to use the Option ROM display mode set by the system BIOS. The options are **Force BIOS** and Keep Current.

Bootup NumLock State

Use this feature to set the Power-on state <NumLock> key. The options are **On** and Off.

Wait For "F1" If Error

Select Enabled to force the system to wait until the <F1> key is pressed if an error occurs. The options are Disabled and **Enabled**.

INT19 Trap Response

Interrupt 19 is the software interrupt that handles the boot disk function. When this feature is set to Immediate, the ROM BIOS of the host adaptors will "capture" Interrupt 19 at bootup immediately and allow the drives that are attached to these host adaptors to function as bootable disks. If this feature is set to Postponed, the ROM BIOS of the host adaptors will not capture Interrupt 19 immediately to allow the drives attached to these adaptors to function as bootable devices at bootup. The options are **Immediate** and Postponed.

Re-try Boot

If this feature is set to Enabled, the system BIOS will automatically reboot the system from an Extensible Firmware Interface (EFI) boot device after an initial boot failure. The options are **Disabled**, Legacy Boot, and EFI Boot.

Power Configuration

Watch Dog Function

Select Enabled to allow the Watch Dog timer to reboot the system when it is inactive for more than five minutes. The options are **Disabled** and Enabled.

Restore on AC Power Loss

Use this feature to set the power state after a power outage. Select Stay Off for the system power to remain off after a power loss. Select Power On for the system power to be turned on after a power loss. Select Last State to allow the system to resume its last power state before a power loss. The options are Stay off, Power On, and **Last State**.

Power Button Function

This feature controls how the system shuts down when the power button is pressed. Select 4 Seconds Override to power off the system after pressing and holding the power button for four seconds or longer. Select Instant Off to instantly power off the system as soon as you press the power button. The options are **Instant Off** and 4 Seconds Override.

CPU Configuration

CPU Configuration

Workload Profile

This function allows configuring the BIOS settings to match the selected workload. The options are **Disabled**, HPC, I/O, Virtualization, Telco NFVI, Telco NFVI-FP, and Telco FlexRAN.

SMT Control

This setting controls whether symmetric multithreading (SMT) is enabled. To activate SMT after disabling it, it is required to restart the computer. To use the default setting, set to Auto. The options are Disabled, Enabled, and **Auto**.

Core Performance Boost

This setting control whether the CPU's Core Performance Boost feature is enabled. This feature can help improve performance in certain situations. The options are Disabled and **Auto**.

Global C-state Control

This setting manages power-saving states (C-states) for input-output devices and deep sleep (DF) states. The options are Disabled, Enabled, and **Auto**.

ACPI CST C2 Latency

This setting sets the latency for C2 state transitions in microseconds, increasing this value reduces the frequency of C2 transitions and the time spent in C2 state. The default value is **100.**

PPIN Opt-in

Select Unlock/Enabled to use the Protected Processor Inventory Number (PPIN) in the system. The PPIN is a unique number set for tracking a given Intel Xeon server processor. The options are Disabled, Enabled, and **Auto**.

SMEE

This setting controls Secure Memory Encryption (SME) for the system. The options are Disabled, Enabled, and **Auto**.

Fast Short REP MOVSB (FSRM)

This setting controls whether a specific memory copy instruction (REP MOVSB) is optimized for speed. The options are **Auto**, Enabled, and Disabled.

Enhanced REP MOVSB/STOSB (ERSM)

This setting optimizes CPU string operations. Disabling ERSM (setting it to 0) can be useful for performance analysis if supported by the operating system. The options are Disabled, Enabled, and **Auto**.

AVX512

This setting enables or disables AVX-512 (Advanced Vector Extensions 512), which is used for high-performance computing tasks. The options are **Auto**, Enabled, and Disabled.

Monitor and MWAIT Disable

This setting controls the availability of the MONITOR, MWAIT, MONITORX, and MWAITX opcodes, which are used for power management and synchronization. The options are Enabled, Disabled, and **Auto**.

L1 Stream HW Prefetcher

This setting is used to enable or disable the L1 Stream Hardware Prefetcher.The options are Disabled, Enabled, and **Auto**.

L2 Stream HW Prefetcher

This setting is used to enable or disable the L2 Stream Hardware Prefetcher. The options are Disabled, Enabled, and **Auto**.

CCD Control

This setting allows you to control the number of Core Complex Dies (CCDs) active in the CPU to optimize performance and power usage. The options are **Auto**, 2 CCDs, 4 CCDs, 6 CCDs, 8 CCDs, and 10 CCDs.

Core Control

This sets the number of cores to be used by your system. Once this option has been used to remove any cores, a power cycle is required in order for the future selections to take effect. The options are **Auto**, ONE (1+0), TWO (2+0), THREE (3+0), FOUR (4+0), FIVE (5 +0), SIX (6+0), SEVEN (7+0), Two (1+1), FOUR (2+2), SIX (3+3), EIGHT (4+4), TEN (5+5), TWELVE (6+6), and FOURTEEN (7+7).

SVM Mode

This setting enables or disables CPU Virtualization. The options are Disabled and **Enabled**.

►CPU1 Information

CPU Configuration

These sections are for informational purposes. They will display some details about the detected CPUs on the motherboard, such as:

- CPU Version
- Number of Cores Running
- Processor Family
- Processor Model
- Microcode Patch Level
- L1 Instruction Cache (Size/Method)
- L1 Data Cache (Size/Method)
- L2 Cache (Size/Method)
- L3 Cache per Socket (Size/Method)

CPU1 PCIe Package Group P2

This setting selects the PCIe port bifurcation configuration for the selected slot. The options are **Auto**, x4x4x4x4, x4x4x8, x8x4x4, x8x8, and x16.

CPU1 PCIe Package Group G2

This setting selects the PCIe port bifurcation configuration for the selected slot. The options are **Auto**, x4x4x4x4, x4x4x8, x8x4x4, x8x8, and x16.

CPU1 PCIe Package Group P3

This setting selects the PCIe port bifurcation configuration for the selected slot. The options are **Auto**, x4x4x4x4, x4x4x8, x8x4x4, x8x8, and x16.

CPU1 PCIe Package Group G3

This setting selects the PCIe port bifurcation configuration for the selected slot. The options are **Auto**, x4x4x4x4, x4x4x8, x8x4x4, x8x8, x16, and SATA.

CPU1 PCIe Package Group P1

This setting selects the PCIe port bifurcation configuration for the selected slot. The options are **Auto**, x4x4x4x4, x4x4x8, x8x4x4, x8x8, and x16.

CPU1 PCIe Package Group G1

This setting selects the PCIe port bifurcation configuration for the selected slot. The options are **Auto**, x4x4x4x4, x4x4x8, x8x4x4, x8x8, and x16.

CPU1 PCIe Package Group P0

This setting selects the PCIe port bifurcation configuration for the selected slot. The options are **Auto**, x4x4x4x4, x4x4x8, x8x4x4, x8x8, x16, and SATA.

CPU1 PCIe Package Group 01

This setting selects the PCIe port bifurcation configuration for the selected slot. The options are **Auto**, x4x4x4x4, x4x4x8, x8x4x4, x8x8, and x16.

►CPU2 Information

These sections are for informational purposes. They will display some details about the detected CPUs on the motherboard, such as:

- CPU Version
- Number of Cores Running
- Processor Family
- Processor Model
- Microcode Patch Level
- L1 Instruction Cache (Size/Method)
- L1 Data Cache (Size/Method)
- L2 Cache (Size/Method)
- L3 Cache per Socket (Size/Method)

CPU2 PCIe Package Group P2

This setting selects the PCIe port bifurcation configuration for the selected slot. The options are **Auto**, x4x4x4x4, x4x4x8, x8x4x4, x8x8, and x16.

CPU2 PCIe Package Group G2

This setting selects the PCIe port bifurcation configuration for the selected slot. The options are **Auto**, x4x4x4x4, x4x4x8, x8x4x4, x8x8, and x16.

CPU2 PCIe Package Group P3

This setting selects the PCIe port bifurcation configuration for the selected slot. The options are **Auto**, x4x4x4x4, x4x4x8, x8x4x4, x8x8, and x16.

CPU2 PCIe Package Group P3

This setting selects the PCIe port bifurcation configuration for the selected slot. The options are **Auto**, x4x4x4x4, x4x4x8, x8x4x4, x8x8, x16, and SATA.

CPU2 PCIe Package Group P1

This setting selects the PCIe port bifurcation configuration for the selected slot. The options are **Auto**, x4x4x4x4, x4x4x8, x8x4x4, x8x8, and x16.

CPU2 PCIe Package Group G1

This setting selects the PCIe port bifurcation configuration for the selected slot. The options are **Auto**, x4x4x4x4, x4x4x8, x8x4x4, x8x8, and x16.

CPU2 PCIe Package Group P0

This setting selects the PCIe port bifurcation configuration for the selected slot. The options are **Auto**, x4x4x4x4, x4x4x8, x8x4x4, x8x8, x16, and SATA.

CPU2 PCIe Package Group G0

This setting selects the PCIe port bifurcation configuration for the selected slot. The options are **Auto**, x4x4x4x4, x4x4x8, x8x4x4, x8x8, and x16.

NB Configuration

North Bridge Configuration

IOMMU

Use this setting to enable or disable IOMMU. The options are Disabled, Enabled, and **Auto**.

DMAr Support

Use this setting to enable DMAr system protection during POST (Power-On Self-Test). The options are Disabled, Enabled, and **Auto**.

DRTM Virtual Device Support

This enables or disables the DRTM ACPI Virtual device. The options are Disabled, Enabled, and **Auto**.

DRTM Memory Reservation

Reserve 128 MB memory below Bottom IO for DRTM. It is required to be enabled for Secured-Core Server function. The options are Disabled, Enabled, and **Auto**.

ACS Enable

This setting enables Access Control Service (ACS) functionality, which requires AER to be active. The options are Enabled, Disabled, and **Auto**.

TDP Control

Use this setting to set the processor's power consumption (TDP). The options are Manual and **Auto**.

Package Power Limit Control

Use Auto to apply the default power limit (PPT) or Manual to set a custom PPT. The options are Manual and **Auto**.

Determinism Control

Use this setting to configure the level of performance determinism. The options are Manual and **Auto**.

APBDIS

Use this setting to control the APBDIS feature. A value of 0 indicates "not APBDIS" (mission mode). The options are 0, 1, and **Auto**.

Power Profile Selection

Use this setting to select a power profile to optimize performance or efficiency. The options are **High Performance Mode**, Efficiency Mode, Maximum IO Performance Mode, Balanced Memory Performance Mode, Balanced Core Performance Mode, Balanced Core Memory Performance Mode, and Auto.

DF Cstates

This setting controls the power-saving states of the data fabric.The options are Disabled, Enabled, and **Auto**.

Data Link Feature Cap

This setting controls the activation of advanced data link features for PCIe devices, which can improve link performance and reliability. The options are Enabled, Disabled, and **Auto**.

SEV-SNP Support

This setting controls the activation of Secure Encrypted Virtualization - Secure Nested Paging (SEV-SNP) security features. The options are Disabled, Enabled, and **Auto**.

Periodic Training Mode

This setting controls the method for managing power-saving states. The options are Disabled and **Legacy**.

EQ Bypass To Highest Rate

This setting determines whether the system can bypass equalization steps at lower data rates and directly attempt equalization at the highest supported rate during the link setup process. The options are Disable, Enable, and **Auto**.

CXL Memory Attribute

This setting determines the memory type for CXL devices. The options are Enabled, Disabled, **Auto**,

Sync Header Bypass

This setting controls the inclusion of synchronization headers in data transmissions. The options are Enabled, Disabled, and **Auto**.

►xGMI Configuration

xGMI Link Width Control

This setting controls the number of lanes used for the xGMI interface. When the setting is set to **Manual**, the "xGMI Force Link Width Control" and "xGMI Max Link Width Control" items becomes available. The options are Manual and **Auto**.

xGMI Link Max Speed

This setting controls the maximum speed of the xGMI link. The options are 10.667 Gbps, 11 Gbps, 12 Gbps, 13 Gbps, 14 Gbps, 15 Gbps, 16 Gbps, 17 Gbps, 18 Gbps, 19 Gbps, 20 Gbps, 21 Gbps, 22 Gbps, and **Auto**.

►Memory Configuration

Memory Target Speed

Use this setting to specify the memory target speed in MT/s. The options are **Auto**, DDR3600, DDR4000, DDR4400, DDR4800, DDR5200, DDR5600, DDR6000, and DDR6400.

Memory Interleaving

This setting controls fabric level memory interleaving. Note that the channel, die and socket have requirements on memory populations and it will be ignored if the memory doesn't support the selected option. The options are Disabled, **Auto**, and Enabled.

Chipselect Interleaving

This setting allows memory blocks to be interleaved across the DRAM chip selects for node 0, which can enhance memory performance. The options are Disabled and **Auto**.

BankSwapMode

This setting determines the operation of memory banks in relation to CPU usage. The options are **Auto**, Disabled, and Swap CPU.

Power Down Enable

Use this setting to enable or disable DDR power down mode. The options are Disabled, Enabled, and **Auto**.

DRAM Scrub Time

This setting specifies the frequency of memory scrubbing, which helps maintain data integrity by refreshing memory contents. The options are Disabled, 1 hour, 4 hours, 6 hours, 8 hours, 12 hours, 16 hours, **24 hours**, and 48 hours.

TSME

This setting controls the Transparent Secure Memory Encryption feature. The options are Enabled, Disabled, and **Auto**.

Enhanced PPR

Use this setting to enable a full memory test during system setup. While this thorough testing can enhance system stability, it will also increase the overall boot time. The options are **Disabled** and Enabled.

►CPU1 Memory Information

CPU1 Memory Information

These sections are for informational purposes. They will display some details about the detected memory according to each CPU on the motherboard, such as:

- Detected Size (per slot, in MB)
- Current Speed (MT/s)

►CPU2 Memory Information

CPU2 Memory Information

These sections are for informational purposes. They will display some details about the detected memory according to each CPU on the motherboard, such as:

- Detected Size (per slot, in MB)
- Current Speed (MT/s)

ACPI Settings

ACPI Settings

High Precision Event Timer

The High Precision Even Timber (HPET) is a hardware timer that provides high-resolution time stamps and periodic interrupts, used by the operating system for various timing-related tasks. The options are Disabled and **Enabled**.

PCI AER Support

This setting controls the Advanced Error Reporting (AER) capability for PCIe devices in the system. The options are Enabled and **Disabled**.

NUMA Nodes Per Socket

Use this setting to specify the number of desired NUMA (Non-Uniform Memory Access) nodes per socket. Zero will attempt to interleave the two sockets together. The options are NPS0, NPS1, NPS2, NPS4, and **Auto**.

ACPI SRAT L3 Cache As NUMA Domain

This setting determines how the system's NUMA (Non-Uniform Memory Access) domains are defined in relation to the L3 cache. The options are Disabled, Enabled, and **Auto**.

Super IO Configuration Menu

►Super IO Configuration

Note: This submenu is available when your system supports this feature.

The following information is displayed.

- Super IO Chip

Serial Port 1 Configuration Menu

►Serial Port 1 Configuration

Serial Port 1

Select Enabled to enable serial port 1. The options are Disabled and **Enabled**.

Device Settings (Available when "Serial Port 1" above is set to Enabled)

This feature displays the base I/O port address and the Interrupt Request address of serial port 1.

Change Settings (Available when "Serial Port 1" above is set to Enabled)

Use this feature to specify the base I/O port address and the Interrupt Request address of serial port 1. Select Auto for the BIOS to automatically assign the base I/O and IRQ address to serial port 1. The options are **Auto**, (IO=3F8h; IRQ=4;), (IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12;), (IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12;), (IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12;), and (IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12;).

Serial Port 2 Configuration Menu

►Serial Port 2 Configuration

Note: It can be "Serial Port 2 Configuration" or "SOL Configuration" based on your system support.

Serial Port 2/SOL ("Serial Port 2" or "SOL" based on your system support)

Select Enabled to enable serial port 2 (or SOL). The options are Disabled and **Enabled**.

Device Settings (Available when "Serial Port 2/SOL" above is set to Enabled)

This feature displays the base I/O port address and the Interrupt Request address of serial port 2 (or SOL).

Change Settings (Available when "Serial Port 2/SOL" above is set to Enabled)

Use this feature to specify the base I/O port address and the Interrupt Request address of serial port 2 (or SOL). Select Auto for the BIOS to automatically assign the base I/O and IRQ address to serial port 2 (or SOL). The options are **Auto**, (IO=2F8h; IRQ=3;), (IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12;), (IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12;), (IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12;), and (IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12;).

Serial Port 2 Attribute (Available for Serial Port 2 only)

Select SOL to use serial port 2 as a Serial Over LAN (SOL) port for console redirection. The options are **SOL** and COM.

Serial Port Console Redirection Menu

COM1 (Available when your system supports the serial port of COM1)

Console Redirection

Select Enabled to enable COM port 1 for Console Redirection, which allows a client machine to be connected to a host machine at a remote site for networking. The options are **Disabled** and Enabled.

Note: This feature will be set to Enabled if there is no BMC support.

►Console Redirection Settings

Note: This submenu is available when "Console Redirection" for COM1 or SOL/COM2 is set to Enabled.

Terminal Type

Use this feature to select the target terminal emulation type for Console Redirection. Select VT100 to use the ASCII character set. Select VT100+ to add color and function key support. Select ANSI to use the extended ASCII character set. Select VT-UTF8 to use UTF8 encoding to map Unicode characters into one or more bytes. The options are VT100, **VT100+**, VT-UTF8, and ANSI.

Bits Per Second

Use this feature to set the transmission speed for a serial port used in Console Redirection. Make sure that the same speed is used in the host computer and the client computer. A lower transmission speed may be required for long and busy lines. The options are 9600, 19200, 38400, 57600, and **115200** (bits per second).

Data Bits

Use this feature to set the data transmission size for Console Redirection. The options are 7 and **8** (bits).

Parity

A parity bit can be sent along with regular data bits to detect data transmission errors. Select Even if the parity bit is set to 0, and the number of 1's in data bits is even. Select Odd if the parity bit is set to 0, and the number of 1's in data bits is odd. Select None if you do not want to send a parity bit with your data bits in transmission. Select Mark to add a mark as a parity bit to be sent along with the data bits. Select Space to add a Space as a parity bit to be sent with your data bits. The options are **None**, Even, Odd, Mark, and Space.

Stop Bits

A stop bit indicates the end of a serial data packet. Select 1 Stop Bit for standard serial data communication. Select 2 Stop Bits if slower devices are used. The options are **1** and 2.

Flow Control

Use this feature to set the flow control for Console Redirection to prevent data loss caused by buffer overflow. Send a "Stop" signal to stop sending data when the receiving buffer is full. Send a "Start" signal to start sending data when the receiving buffer is empty. The options are **None** and Hardware RTS/CTS.

VT-UTF8 Combo Key Support

Select Enabled to enable VT-UTF8 Combination Key support for ANSI/VT100 terminals. The options are Disabled and **Enabled**.

Recorder Mode

Select Enabled to capture the data displayed on a terminal and send it as text messages to a remote server. The options are **Disabled** and Enabled.

Resolution 100x31

Select Enabled for extended-terminal resolution support. The options are Disabled and **Enabled**.

Putty KeyPad

This feature selects Function Keys and KeyPad settings for Putty, which is a terminal emulator designed for the Windows OS. The options are **VT100**, LINUX, XTERMR6, SCO, ESCN, and VT400.

►Legacy Console Redirection Settings

Legacy Serial Redirection Port

Select a COM port to display redirection of legacy os and legacy oprom messages. The options are **COM1** and SOL.

Resolution

On legacy os, the number of rows and columns supported redirection. The options are 80x24 and **80x25**.

Redirection After BIOS Post

When bootloader is selected, then legacy console redirection is disabled before booting to legacy OS. When always is select, then legacy console redirection is enabled ofr legacy os.. The options are **Always Enable** and BootLoader.

Console Redirection EMS

Select Enabled to use the SOL port for Console Redirection. The options are **Disabled** and Enabled.

PCIe/PCI/PnP Configuration Menu

Above 4G Decoding

This setting enables 64-bit PCI device access to memory beyond 4 GB for improved memory utilization and performance. The options are Disabled and **Enabled**.

Re-Size BAR Support

This setting enables or disables the Re-Size Base Address Register feature for compatible PCIe devices, which allows the system to allocate more memory to the device. The options are **Disabled** and Enabled.

SR-IOV Support

This setting enables or disables Single Root I/O Virtualization support for the system's PCIe devices. The options are **Disabled** and Enabled.

BME DMA Mitigation

This setting enables or disables Bus Mastering Error (BME) Direct Memory Access (DMA) mitigation for protection during the pre-boot process. The options are **Disabled** and Enabled.

PCIe ARI Support

This setting enables alternative routing- ID interpretation. The options are Disabled, Enabled, and **Auto**.

PCIe ARI Enumeration

This setting controls the forwarding of Alternate Routing-ID Interpretation (ARI) information for each downstream port, which is essential for device identification in PCIe systems. The options are Disabled, Enabled, and **Auto**.

Relaxed Ordering

This setting determines whether PCI Express devices are permitted to bypass strict transaction ordering, which can lead to potential performance improvements. The options are Disabled and **Enabled**.

Clock Spread Spectrum

This setting allows the BIOS to monitor and reduce the level of Electromagnetic Interference (EMI) generated by system components. The options are **Disabled** and Enabled.

No Snoop

This setting configures the No Snoop option for PCI Express devices, determining whether memory accesses bypass the cache. The options are Disabled and **Enabled**.

VGA Priority

This setting allows you to choose the primary video output source for the system. The options are **Onboard** and External.

PCIe Ten Bit Tag Support

This setting enables the use of ten-bit tags for PCIe devices, which can improve data handling and management. The options are Disabled, Enabled, and **Auto**.

NVMe Firmware Source

This setting determines the source of firmware for NVMe devices, allowing you to select between native support or vendor-specific firmware. The options are Vendor Defined Firmware and **AMI Native Support**.

PCI Devices Option ROM Setting

CPU SLOT3-10 PCIe 5.0 x16 OPROM

This setting enables or disables the Option ROM for the SLOT3 PCIe 5.0 x16 interface. The options are Disabled and **EFI**.

M.2-C1 OPROM

This setting enables or disables the Option ROM for the M.2-C1 slot. The options are Disabled and **EFI**.

M.2-C2 OPROM

This setting enables or disables the Option ROM for the M.2-C2 slot. The options are Disabled and **EFI**.

Onboard Video Option ROM

This setting selects the type of firmware to be loaded for onboard video. The options are Disabled and **EFI**.

AOM-PTG-I2T OPROM

This setting allows you to select the firmware function to be loaded for the onboard LAN1 interface. The options are Disabled and **EFI**.

USB Configuration

USB Configuration

USB Module Version 29

USB Controllers: 3 XHCIs

USB Devices: 1 Keyboard, 1 Mouse, 1 Hub

XHCI Hand-off

This setting provides a workaround for operating systems that do not support XHCI hand-off. The XHCI ownership change must be claimed by the XHCI driver.The options are Enabled and **Disabled**.

Legacy USB Support

Select Enabled to support onboard legacy USB devices. Select Auto to disable legacy support if there are no legacy USB devices present. Select Disable to have all USB devices available for EFI applications only. The options are **Enabled**, Disabled, and Auto.

Network Configuration Menu

Network Stack

Select Enabled to enable Preboot Execution Environment (PXE) or Unified Extensible Firmware Interface (UEFI) for network stack support. The options are Disabled and **Enabled**.

IPv4 PXE Support (Available when "Network Stack" is set to Enabled)

Select Enabled to enable IPv4 PXE boot support. If this feature is disabled, it will not create the IPv4 PXE boot option. The options are Disabled and **Enabled**.

IPv4 HTTP Support (Available when "Network Stack" is set to Enabled)

Select Enabled to enable IPv4 HTTP boot support. If this feature is disabled, it will not create the IPv4 HTTP boot option. The options are **Disabled** and Enabled.

IPv6 PXE Support (Available when "Network Stack" is set to Enabled)

Select Enabled to enable IPv6 PXE boot support. If this feature is disabled, it will not create the IPv6 PXE boot option. The options are Disabled and **Enabled**.

IPv6 HTTP Support (Available when "Network Stack" is set to Enabled)

Select Enabled to enable IPv6 HTTP boot support. If this feature is disabled, it will not create the IPv6 HTTP boot optiont. The options are **Disabled** and Enabled.

PXE Boot Wait Time (Available when "Network Stack" is set to Enabled)

Use this feature to set the wait time (in seconds) upon which the system BIOS will wait for you to press the <ESC> key to abort PXE boot instead of proceeding with PXE boot by connecting to a network server immediately. Press the <+> or <-> key on your keyboard to change the value. The default setting is **0**.

Media Detect Count (Available when "Network Stack" is set to Enabled)

Use this feature to set the wait time (in seconds) for the BIOS ROM to detect the presence of a LAN media either via the Internet connection or via a LAN port. Press the <+> or <-> key on your keyboard to change the value. The default setting is **1**.

►IPv6 Network Configuration

►Enter Configuration Menu

Interface Name

Interface Type

MAC address

Host addresses

Route Table

Gateway addresses

DNS addresses

Interface ID

DAD Transmit Count

The number of consecutive Neighbor Solicitation messages sent while performing Duplicate Address Detection on a tentative address. A value of zero indicates that Duplicate Address Detection is not performed. The default value is **1**.

Policy

Use this feature to select how the policy is to be configured. The options are **Automatic** and Manual.

Save Changes and Exit

The options are **Yes** and No.

►IPv4 Network Configuration

►Configured (Available when set Enabled)

Enable DHCP

The options are **Disabled** and Enabled.

Local IP Address

Enter IP address in dotted-decimal notation. Example: 192.168.10.12

Local NetMask

Enter NetMask in dotted-deimal notation. Exmaple: 255.255.255.0

Local Gateway

Enter Gateway in dotted-decimal notation. Example: 192.168.10.1

Local DNS Servers

Enter DNS Servers in dotted-decimal notation. Example: 192.168.10.8

Save Changes and Exit

The options are **Yes** and No.

SATA Configuration Menu

ASMedia SATA Configuration

►ASMedia SATA Controller

Hot-Plug

Enable or disable hot-plug support for SATA devices, allowing them to be connected or disconnected while the system is running. The options are **Disabled** and Enabled.

►Serial ATA Contoller 0 Settings

SATA Enable

The options are Disabled, Enabled, and **Auto**.

►SATA Information

HTTP Boot Configuration Menu

HTTP Boot Configuration

HTTP Boot Policy

Use this feature to set the HTTP boot policy. The options are Apply to all LANs, **Apply to each LAN**, and Boot Priority #1 instantly.

HTTP Boot Checks Hostname

Enable this feature for HTTPS boot to check the hostname of the TLS certificates to see if it matches the host name provided by the remote server. The options are **Enabled** and Disabled (WARNING: Security Risk!).

Priority of HTTP Boot

Instance of Priority 1: (Available when your motherboard supports this feature)

This feature sets the rank target port. The default setting is **1**.

Select IPv4 or IPv6

This feature specifies which connection the target LAN port should boot from. The options are **IPv4** and IPv6.

Boot Description

Use this feature to enter a boot description, which cannot be longer than 75 characters. Please be sure to enter a boot description; otherwise, the boot option for the URI cannot be created.

Boot URI

Enter a Boot Uniform Research Identifier (URI) with 128 characters or shorter. This Boot URI determines how IPv4 Boot Option and IPv6 Boot Option will be created. This feature is only supported on Dual or EFI Boot Mode.

Supermicro KMS Server Configuration

Supermicro KMS Server IP address

Use this feature to set the Supermicro Key Management Service (KMS) server IPv4 address in dotted-decimal notation.

Second Supermicro KMS Server IP address

Use this feature to set the second Supermicro KMS server IPv4 address in dotted-decimal notation.

Supermicro KMS TCP Port number

Use this feature to set the TCP port number used in Supermicro KMS Server. The valid range is 100–9999. The default setting is **5696**. Do not change the default setting unless a different TCP port number has been specified and used in the Supermicro KMS Server.

KMS Time Out

Use this feature to enter the KMS server connecting time-out (in seconds). The default setting is **5** (seconds).

TimeZone

Use this feature to set the correct time zone. The default setting is **0** (not specified).

Client UserName

Press <Enter> to set the client identity (UserName). The username can be between 0 and 63 characters in length.

Client Password

Press <Enter> to set the client identity (Password). The password can be between 0 and 31 characters in length.

►CA Certificate

This setting provides options for managing the Certificate Authority (CA) certificate.The options are **Update**, Delete, and Export.

►Client Certificate

This setting provides options for managing the client certificate.The options are **Update**, Delete, and Export.

►Client Private Key

Use the three features to enroll factory defaults or load the KMS Transport Layer Security (TLS) certificates, which are generated by the KMS Server, from the file stored in the USB flash drive as shown below.

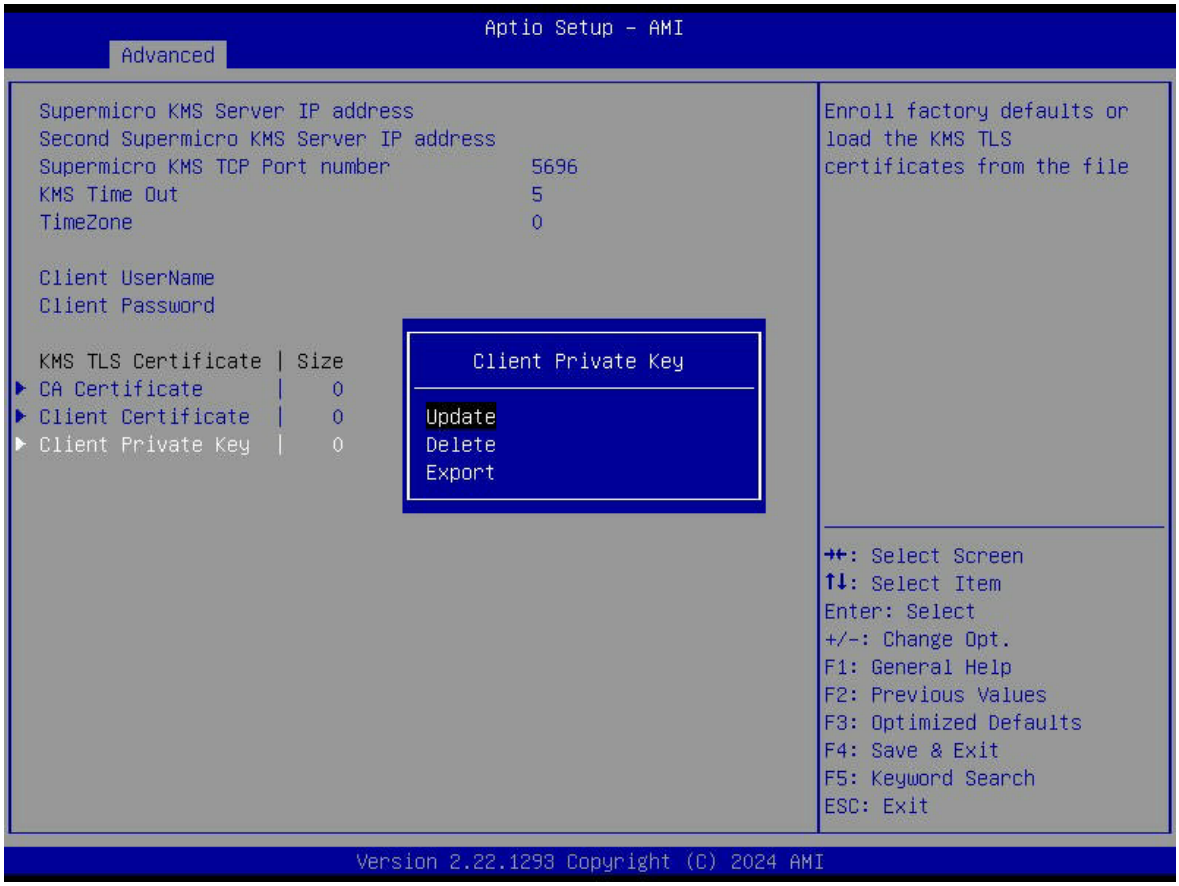

Figure 4-3. Private Key Password (Available when "Client Private Key" above has been set)

Private Key Password (Available when "Client Private Key" above has been set)

Use this feature to change the password for the client private key.

Super-Guardians Configuration

Super-Guardians Protection Policy

Use this feature to enable the Super-Guardians Protection Policy. The options are **Storage**, System, and System and Storage. Set this feature to Storage to protect and have secure access to Trusted Computing Group (TCG) NVMe devices with the Authentication-Key (AK). Set this feature to System to protect and have secure access to your system/motherboard with the AK. Set this feature to System and Storage to protect and have secure access to your system/motherboard/storage devices with the AK.

KMS Security Policy (Available when "TPM Security Policy" and "USB Security Policy" are set to Disabled)

Set this feature to Enabled to enable the KMS Security Policy. When this feature has not previously been set to Enabled, the options are **Disabled** and Enabled. Changes take effect after you save settings and reboot the system.

When this feature has previously been set to Enabled, the options are **Enabled**, Reset, and Key Rotation. Set this feature to Key Rotation to obtain an existing AK from the KMS server and create a new AK. To disable the KMS Security Policy, set this feature to Reset. When this feature is set to Reset, the system and TCG NVMe devices chosen in "Super-Guardians Protection Policy" will be in the unprotected mode.

Notes:

- Be sure that the KMS server is ready before configuring this feature.
- Use the professional KMS server solutions (e.g., Thales Server) or the Supermicro PyKMIP Software Package to establish the KMS server.

KMS Server Retry Count (Available when "TPM Security Policy" and "USB Security Policy" are set to Disabled)

Use this feature to specify how many times the system will attempt reconnecting to the KMS server. The valid range is 0–10. Press the <+> or <-> key on your keyboard to change the value. The default setting is **5**. If the value is 0, the system will retry infinitely.

TPM Security Policy (Available when "KMS Security Policy" and "USB Security Policy" are set to Disabled)

Set this feature to Enabled to enable the TPM Security Policy. When this feature has not previously been set to Enabled, the options are **Disabled** and Enabled. Changes take effect after you save settings and reboot the system.

When this feature has previously been set to Enabled, the options are **Enabled** and Reset. To disable the TPM Security Policy, set this feature to Reset. When this feature is set to reset, the system and TCG NVMe devices chosen in "Super-Guardians Protection Policy" will be in the unprotected mode.

Note: Be sure to install a TPM 2.0 device to your system before configuring this feature.

Load Authentication-Key (Available when "KMS Security Policy," "TPM Security Policy," and "USB Security Policy" are set to Disabled)

The options are **Disabled** and Enabled. Set this feature to Enabled. Changes take effect after you save settings and reboot the system. While booting, the BIOS will automatically load the Authentication-Key (filename: TPMAuth.bin) from the USB flash drive. Afterwards, the default setting will be set to Disabled by the BIOS.

Notes:

- Be sure to connect a USB flash drive with the Authentication-Key (filename: TPMAuth.bin) to your system before the system reboot.
- Be sure to save the Authentication-Key (filename: TPMAuth.bin) to the USB flash drive and have a backup. Please load the Authentication-Key (filename: TPMAuth.bin) after installing a TPM device. Otherwise, the TPM function can not work properly.

Save Authentication-Key (Available when "TPM Security Policy" is set to Enabled)

The options are **Disabled** and Enabled. Set this feature to Enabled. Changes take effect after you save settings and reboot the system. While booting, the BIOS will automatically save the Authentication-Key (filename: TPMAuth.bin) to the USB flash drive. Afterwards, the default setting will be set to Disabled by the BIOS.

Note: Be sure to connect a USB flash drive to your system before the system reboot.

USB Security Policy (Available when "KMS Security Policy" and "TPM Security Policy" are set to Disabled)

Use this feature to enable the USB Security Policy. The options are **Disabled** and Enabled. Set this feature to Enabled. Changes take effect after you save settings and reboot the system. Connect a USB flash drive to your system before the system reboot. While booting, the BIOS will automatically create the USB Authentication-Key (filename: USBAuth.bin) and save it to the USB flash drive.

When this feature has been previously set to Enabled, the options are **Enabled** and Reset. To disable the USB Security Policy, set this feature to Reset. When this feature is set to Reset, the system and TCG NVMe devices chosen in "Super-Guardians Protection Policy" will be in the unprotected mode.

Note: Be sure to connect a USB flash drive to your system before configuring this feature. Save the USB Authentication-Key (filename: USBAuth.bin) to the USB flash drive and keep a backup.

TLS Authenticate Configuration

►Server CA Configuration

This feature allows you to configure the client certificate that is to be used by the server.

►Enroll Certification

This feature allows you to enroll the certificate in the system.

►Enroll Certification Using File

This feature allows you to enroll the security certificate in the system by using a file.

Certification GUID

Press <Enter> and input the certification Global Unique Identifier (GUID).

►Commit Changes and Exit

Use this feature to save all changes and exit TLS settings.

►Discard Changes and Exit

Use this feature to discard all changes and exit TLS settings.

►Delete Certification

This feature is used to delete the certificate if a certificate has been enrolled in the system.

►Client Certification Configuration

RAM Disk Configuration

Disk Memory Type

This setting specifies the type of memory to use from the available memory pool in the system to create a disk. the options are **Boot Service Data** and Reserved.

Create raw

Size (Hex):

Set the size of the RAM disk. The valid size should be multiples of the RAM disk block size.

Create & Exit or **Discard & Exit**.

Create from file

Created RAM disk list:

This displays a list of the created RAM disks.

Created RAM disk list:

Remove selected RAM disk(s)

BROADCOM Configuration Utility

►Main Menu

The menu options are as below:

►Configuration Management

Clear Configuration: **No**

►Controller Management

Basic Properties: Product Name/Controller Status/Personality Mode/Select Boot Device/PCI ID/PCI Segment/PCI Slot Number/Package Version/Firmware Version/NVDATA Version/Supported Device Interfaces/Drive Count/JBOD Count/Virtual Drive Count

Advanced Controller Management

Advanced Controller Properties

►Virtual Drive Management

►Drive Management

►Hardware Components

►Help

The setting shows context sensitive help message.

Properties:

Status / Backplane / CacheVault / Enclosure / JBODs / Drive Groups / Virtual Drives

►View Server Profile

The setting shows the UEFI spec version that this system supports and menu options as below:

Server:

UEFI Spec Version

►Controller Management

►Hardware Components

►Drive Management

►Virtual Drive Management

Actions:

►Configure

The setting displays configuration options. Some options appear only if the controller supports them.

►Set Factory Defaults

The setting restores factory default values for all the controller properties.

►Update Firmware

The setting allows users to update the controller firmware to a newer version.

►Manage MegaRAID Advanced Software Options

The setting displays the activated Advanced Software Options on the controller and allows the user to configure the MegaRAID Advanced Software Options to use the advanced features.

Driver Health Menu

►Driver Health

This feature displays the health information of the drivers installed in your system, including LAN controllers, as detected by the BIOS. Select one and press <Enter> to see the details.

Note: This section is provided for reference only, for the driver health status will differ depending on the drivers installed in your system. It's also based on your system configuration and the environment that your system is operating in.

4.4 BMC

Use this menu to configure Baseboard Management Console (BMC) settings.

Figure 4-4. BMC Screen Tab

BMC Firmware Revision

This feature indicates the BMC firmware revision used in your system.

BMC STATUS

This feature indicates the status of the BMC firmware installed in your system.

System Event Log Menu

►System Event Log

Note: All values changed in this submenu do not take effect until computer is restarted.

SEL Components

Select Enabled to enable all system event logging upon system boot. The options are Disabled and **Enabled**.

Erasing Settings

Erase SEL (Available when "SEL Components" is set to Enabled)

Select (Yes, On next reset) to erase all system event logs upon next system boot. Select (Yes, On every reset) to erase all system event logs upon each system reboot. Select No to keep all system event logs after each system reboot. The options are **No**, (Yes, On next reset), and (Yes, On every reset).

When SEL is Full (Available when "SEL Components" is set to Enabled)

This feature defines what the BIOS should do when the system event log is full. Select Erase Immediately to erase all events in the log when the system event log is full. The options are **Do Nothing** and Erase Immediately.

BMC Network Configuration Menu

►BMC Network Configuration

Update BMC LAN Configuration

Select Yes for the BIOS to implement all IP/MAC address changes upon next system boot. The options are **No** and Yes.

****

Configure IPv4 Support

****

BMC LAN Selection

This feature displays the type of the BMC LAN.

BMC Network Link Status:

This feature displays the status of the BMC network link for this system.

Configuration Address Source (Available when "Update BMC LAN Configuration" is set to Yes)

Use this feature to select the source of the IPv4 connection. If Static is selected, note the IP address of the IPv4 connection and enter it to the system manually in the field. If DHCP is selected, the BIOS will search for a Dynamic Host Configuration Protocol (DHCP) server in the network that is attached to and request the next available IP address for this computer. The options are Static and **DHCP**.

Station IP Address

This feature displays the Station IP address in decimal and in dotted quad form (i.e., 172.29.176.131). It is available for configuration when "Configuration Address Source" above is set to Static.

Subnet Mask

This feature displays the sub- network that this computer belongs to. It is available for configuration when "Configuration Address Source" above is set to Static.

Station MAC Address

This feature displays the Station MAC address for this computer. Mac addresses are six two-digit hexadecimal numbers.

Gateway IP Address

This feature displays the Gateway IP address for this computer. This should be in decimal and in dotted quad form (i.e., 172.29.0.1). It is available for configuration when "Configuration Address Source" above is set to Static.

****

Configure IPv6 Support

****

IPv6 Address Status

This feature displays the status of the IPv6 address.

IPv6 Support (Available when "Update BMC LAN Configuration" is set to Yes)

Use this feature to enable IPv6 support. The options are **Enabled** and Disabled.

Configuration Address Source (Available when "IPv6 Support" is set to Enabled)

Use this feature to select the source of the IPv6 connection. If Static Configuration is selected, note the IP address of IPv6 connection and enter it to the system manually in the field. If the other two options are selected, the BIOS will search for a DHCP server in the network that is attached to and request the next available IP address for this computer. The options are Static Configuration, **DHCPv6 Stateless**, and DHCPv6 Stateful.

IPv6 Address ("Static," "DHCPv6 Stateless," or "DHCPv6 Stateful," depending on the option you selected for "Configuration Address Source" above)

This feature displays the station IPv6 address. It is available for configuration when "Configuration Address Source" above is set to Static Configuration.

Prefix Length

This feature displays the prefix length. It is available for configuration when "Configuration Address Source" above is set to Static Configuration.

Gateway IP

This feature displays the IPv6 gateway IP address. It is available for configuration when "Configuration Address Source" above is set to Static Configuration.

Advanced Settings (Available when "Configuration Address Source" is set to DHCPv6 Stateless)

Use this feature to set the DNS server IP. The default setting allows this system to obtain the DNS server IP automatically. The options are **Auto obtain DNS server IP** and Manually obtain DNS server IP.

Preferred DNS server IP (Available when "Advanced Settings" above is set to Manually obtain DNS server IP)

This feature displays the preferred DNS server IP. It can be configured via Redfish.

Alternative DNS server IP (Available when "Advanced Settings" above is set to Manually obtain DNS server IP)

This feature displays the alternative DNS server IP. It can be configured via Redfish.

****

Configure VLAN Support

****

Lan channel 1

VLAN Support (Available when "Update BMC LAN Configuration" is set to Yes)

Use this feature to enable the virtual LAN (VLAN) support. The options are Enabled and **Disabled**.

4.5 Event Logs

Use this menu to configure Event Logs settings.

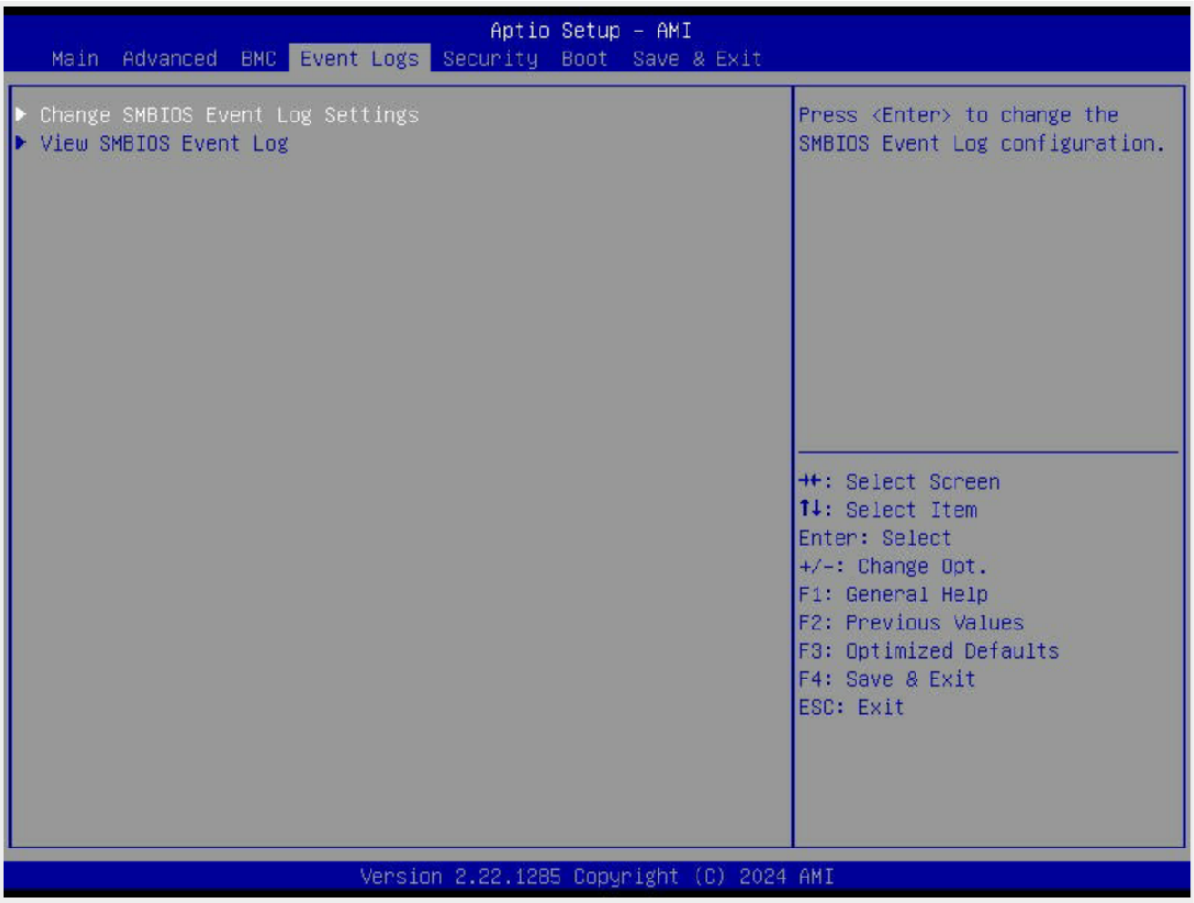

Figure 4-5. Event Logs Screen Tab

Note: After you've made any changes in this section, please be sure to reboot the system for the changes to take effect.

►Change SMBIOS Event Log Settings

Note: Reboot the system for the changes in this section to take effect.

Enabling/Disabling Options

SMBIOS Event Log

Select Enabled to enable System Management BIOS (SMBIOS) Event Logging during system boot. The options are Disabled and **Enabled**.

Erasing Settings

Erase Event Log (Available when "SMBIOS Event Log" is set to Enabled)

Select No to keep the event log without erasing it upon next system bootup. Select (Yes, Next reset) to erase the event log upon next system reboot. The options are **No**, (Yes, Next reset), and (Yes, Every reset).

When Log is Full (Available when "SMBIOS Event Log" is set to Enabled)

Select Erase Immediately to immediately erase all errors in the SMBIOS event log when the event log is full. Select Do Nothing for the system to do nothing when the SMBIOS event log is full. The options are **Do Nothing** and Erase Immediately.

SMBIOS Event Log Standard Settings

Log System Boot Event (Available when "SMBIOS Event Log" is set to Enabled)

Select Enabled to log system boot events. The options are Enabled and **Disabled**.

MECI (Available when "SMBIOS Event Log" is set to Enabled)

Enter the increment value for the multiple event counter. Enter a number between 1 and 255. The default setting is **1**. (MECI is the abbreviation for Multiple Event Count Increment.)

METW (Available when "SMBIOS Event Log" is set to Enabled)

Use this feature to determine how long (in minutes) should the multiple event counter wait before generating a new event log. Enter a number between 0 and 99. The default value is **60**. (METW is the abbreviation for Multiple Event Count Time Window.)

►View SMBIOS Event Log

Use this feature to view the event in the system event log. Select this feature and press <Enter> to view the status of an event in the log. The following information is displayed: DATE / TIME / ERROR CODE / SEVERITY.

4.6 Security

This menu allows you to configure the following security settings for the system.

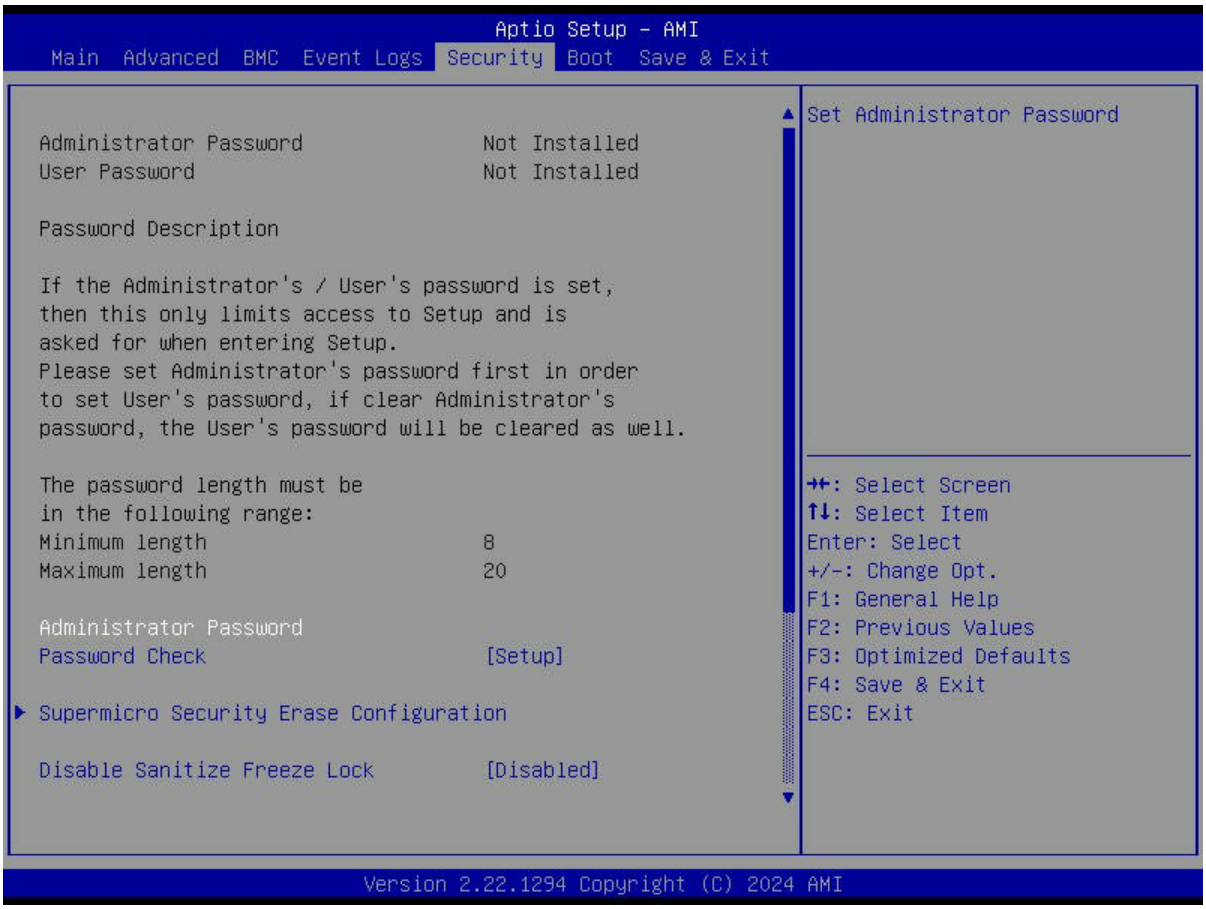

Figure 4-6. Security Screen Tab

Disable Block Sid and Freeze Lock (Available when your storage devices support TCG)

Select Enabled to allow SID authentication to be performed in TCG storage devices. The options are **Disabled** and Enabled.

The following information is displayed:

- Administrator Password
- User Password
- Password Description

Administrator Password

This feature indicates if an administrator password has been installed. Use this feature to set the administrator password, which is required to enter the BIOS Setup utility. The length of the password can be between three and 20 characters long.

User Password (Available when "Administrator Password" has been set)

This feature indicates if a user password has been installed. Use this feature to set the user password which is required to enter the BIOS Setup utility. The length of the password can be between three and 20 characters long.

Password Check

Select Setup for the system to check for a password upon entering the BIOS Setup utility. Select Always for the system to check for the passwords needed at bootup and upon entering the BIOS Setup utility. The options are **Setup** and Always.

Hard Drive Security Frozen

Select Enabled to freeze the Lock Security feature for HDD to protect key data in hard drives from being altered. The options are **Disabled** and Enabled.

►Supermicro Security Erase Configuration

Use this submenu to configure the Supermicro-proprietary Security Erase settings. When this submenu is selected, the following information is displayed. Please note that the order of the following information may differ based on the storage devices being detected.

- HDD Name: This feature displays the name of the storage device that is detected by the BIOS.
- HDD Serial Number: This feature displays the serial number of the storage device that is detected by the BIOS.
- Security Mode: This feature displays the security mode of the storage device that is detected by the BIOS.
- Estimated Time: This feature displays the estimate time needed to perform the selected Security Erase features.
- HDD User Pwd Status: This feature indicates if a password has been set as a storage device user password which enables configuring Supermicro Security Erase settings on the storage device by using this user password.

Security Function

Select Set Password to set a storage device password which enables configuring the security settings of the storage device. Select Security Erase - Password to enter a storage device user password to enable erasing the password and the contents previously stored in the storage device. Select Security Erase - Without Password to use the manufacturer default password "111111111" as the storage device user password and enable erasing the contents of the storage device by using this default password. The options are **Disabled**, Set Password, Security Erase - Password, and Security Erase - Without Password.

Password

Disable Sanitize Freeze Lock

If this option is enabled, then sending Sanitize Freeze Lock command to HDDs will be skipped in next boot. The options are **Disabled** and Enabled.

Lockdown Mode (Available when the DCMS key is activated)

Select Enabled to support the Lockdown Mode, which prevents the existing data or keys stored in the system from being altered or changed in an effort to preserve system integrity and security. The options are **Disabled** and Enabled.

HDD Security Configuration:

►Secure Boot

The following information is displayed:

- System Mode
- Secure Boot

Note: For detailed instructions on configuring Security Boot settings, refer to the Security Boot Configuration User's Guide at https://www.supermicro.com/support/manuals.

4.7 Boot

Use this menu to configure Boot settings.

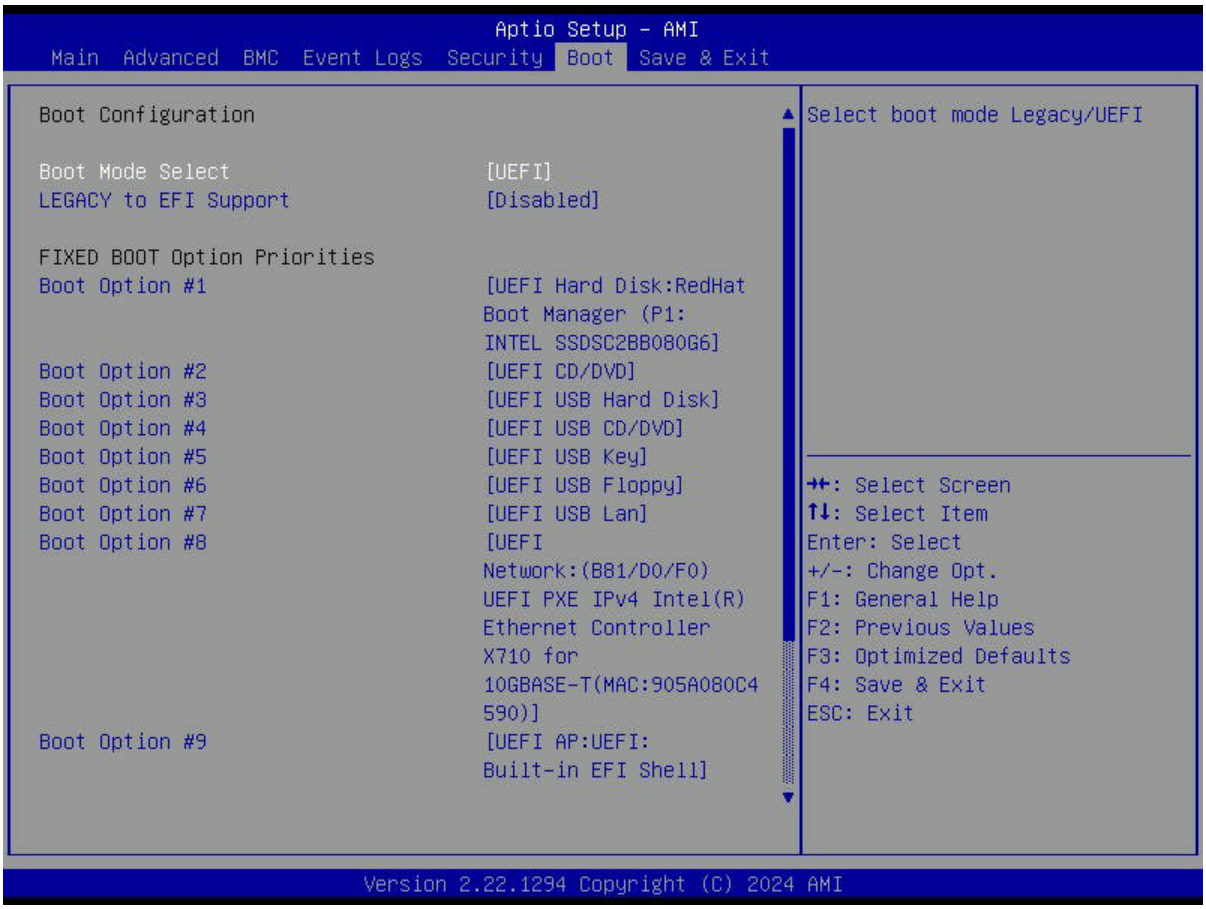

Figure 4-7. Boot Screen Tab

Boot Configuration

Boot Mode Select

Use this feature to select boot mode. The options are Legacy, **UEFI**, and Dual.

Legacy to EFI Support

Use this feature to enable system to boot to EFI OS after boot failed from legacy boot order. The options are **Disabled** and Enabled.

FIXED BOOT ORDER Priorities

Use this feature to prioritize the order of a bootable device from which the system will boot. Press <Enter> on each item sequentially to select the device.

- Boot Option #1 – Boot Option #9

►Add New Boot Option

Use this feature to add a new boot option to the boot priority features for system boot.

Note: This submenu is available when any storage device is detected by the BIOS.

Add boot option

Use this feature to specify the name for the new boot option.

Path for boot option

Use this feature to enter the path for the new boot option in the format fsx:\path\filename.efi.

Boot option File Path

Use this feature to specify the file path for the new boot option.

Create

After setting the name and the file path for the boot option, press <Enter> to create the new boot option in the boot priority list.

►Delete Boot Option

Use this feature to select a boot device to delete from the boot priority list.

Delete Boot Option

Use this feature to remove an EFI boot option from the boot priority list.

►UEFI Hard Disk Drive BBS Priorities

Use this feature to set the system boot order of detected devices.

►UEFI NETWORK Drive BBS Priorities

Use this feature to set the system boot order of detected devices.

►UEFI Application Boot Priorities

Use this feature to set the system boot order of detected devices.

4.8 Save & Exit

Select Save & Exit from the BIOS Setup screen to configure the settings below.

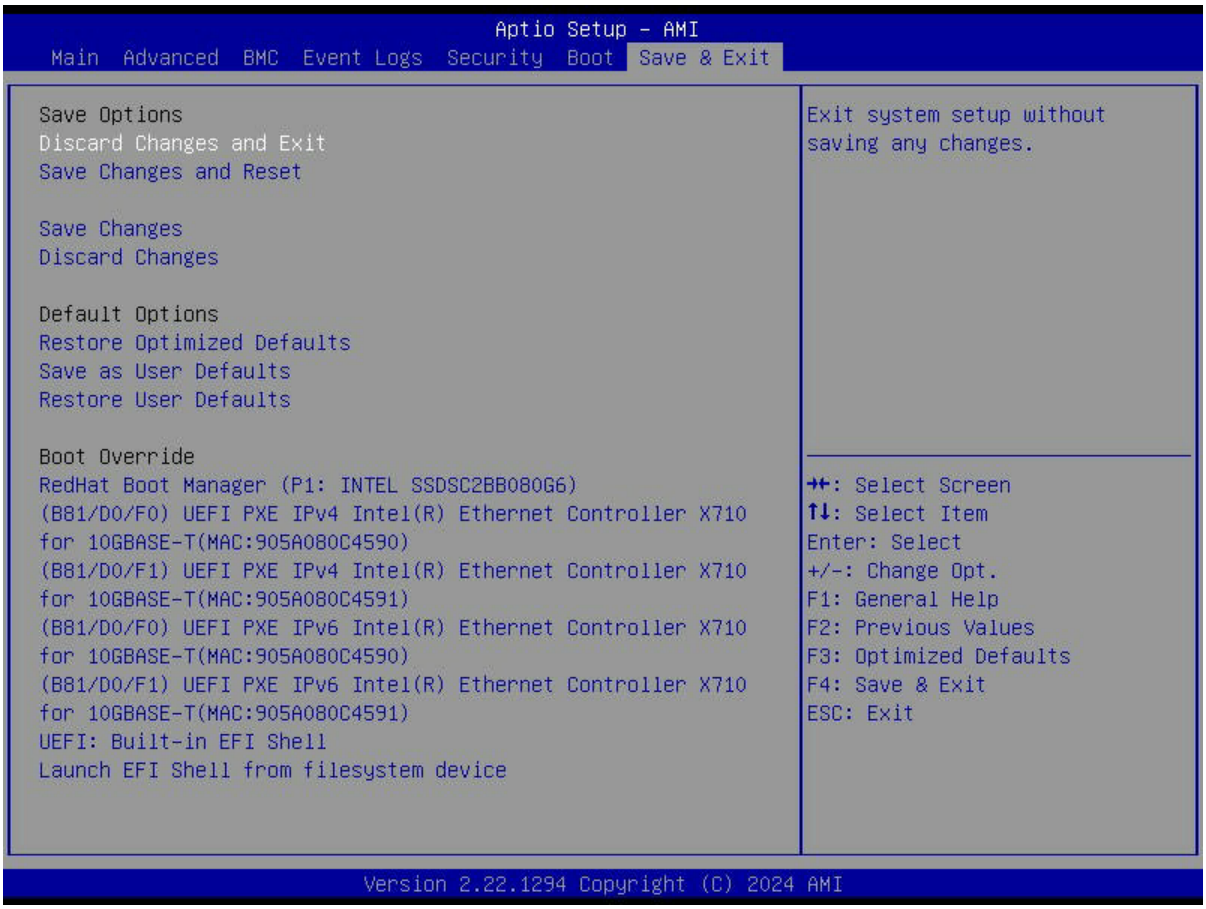

Figure 4-8. Save & Exit Screen Tab

Save Options

Discard Changes and Exit

Use this feature to exit from the BIOS Setup utility without making any permanent changes to the system configuration and reboot the computer.

Save Changes and Reset

On completing the system configuration changes, use this feature to exit the BIOS Setup utility and reboot the computer for the new system configuration parameters to take effect.

Save Changes

On completing the system configuration changes, use this feature to save all changes made. This will not reset (reboot) the system.

Discard Changes

Select this feature and press <Enter> to discard all changes made and return to the BIOS Setup utility.

Default Options

Restore Optimized Defaults

Select this feature and press <Enter> to load manufacturer optimized default settings, which are intended for maximum system performance but not for maximum stability.

Note: After pressing <Enter>, reboot the system for the changes to take effect, which ensures that this system has the optimized default settings.

Save As User Defaults

Select this feature and press <Enter> to save all changes as the default values specified to the BIOS Setup utility for future use.

Restore User Defaults

Select this feature and press <Enter> to retrieve user-defined default settings that have been saved previously.

Boot Override

Note: Use this section to override the Boot priorities sequence in the Boot menu, and immediately boot the system with a device specified here instead of the one specified in the boot list. This is a one-time boot override.

Appendix A:

Software

After the H14DSG-OD motherboard has been installed, you can install the Operating System (OS), configure RAID settings, and install the drivers.

Microsoft Windows OS Installation

If you will be using RAID, you must configure RAID settings before installing the Windows OS and the RAID driver. Refer to the RAID Configuration User Guides posted on our website at https://www.supermicro.com/support/manuals.

Installing the OS

1. Create a method to access the Microsoft Windows installation ISO file. That can be a USB flash or media drive, or the BMC KVM console.
2. Retrieve the proper drivers. Go to the Supermicro web page for your motherboard and click on "Download the Latest Drivers and Utilities," select the proper driver, and copy it to a USB flash drive.
3. Boot from a bootable device with Windows OS installation. You can see a bootable device list by pressing <F11> during the system bootup.

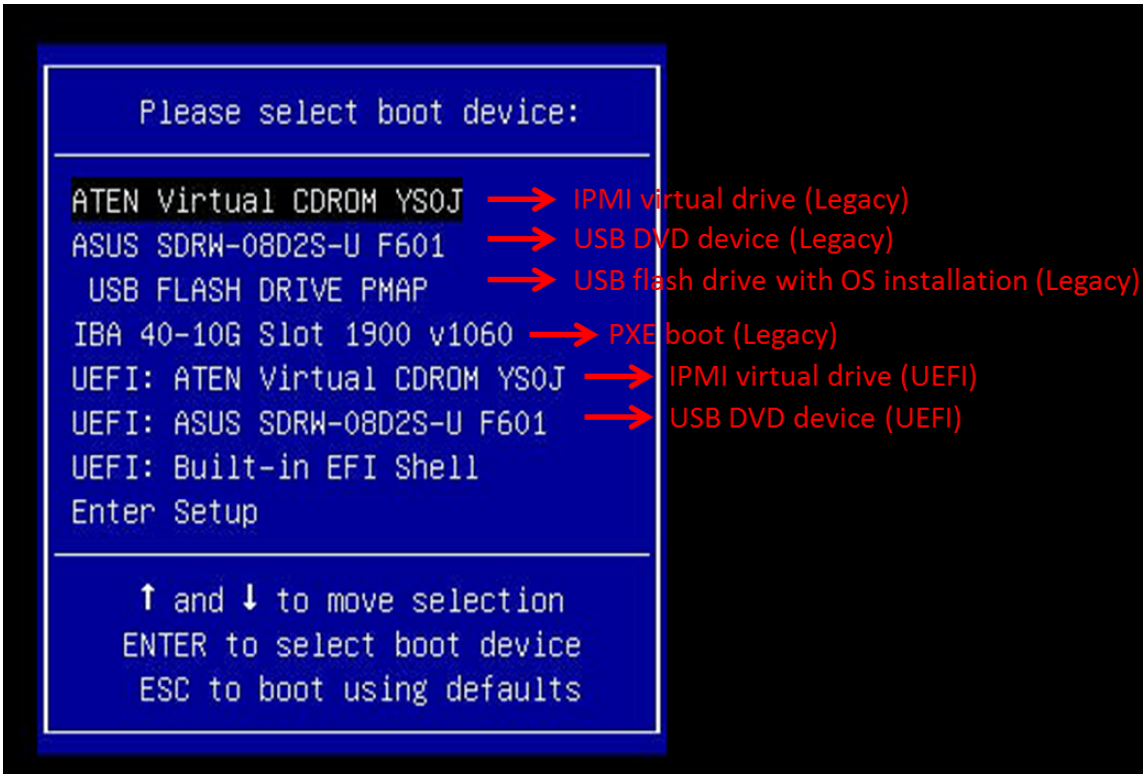

Figure A-1. Selecting the Boot Device

4. During Windows Setup, continue to the dialog box where you select the drives on which to install Windows. If the disk you want to use is not listed, click on the “Load driver” link at the bottom left corner.

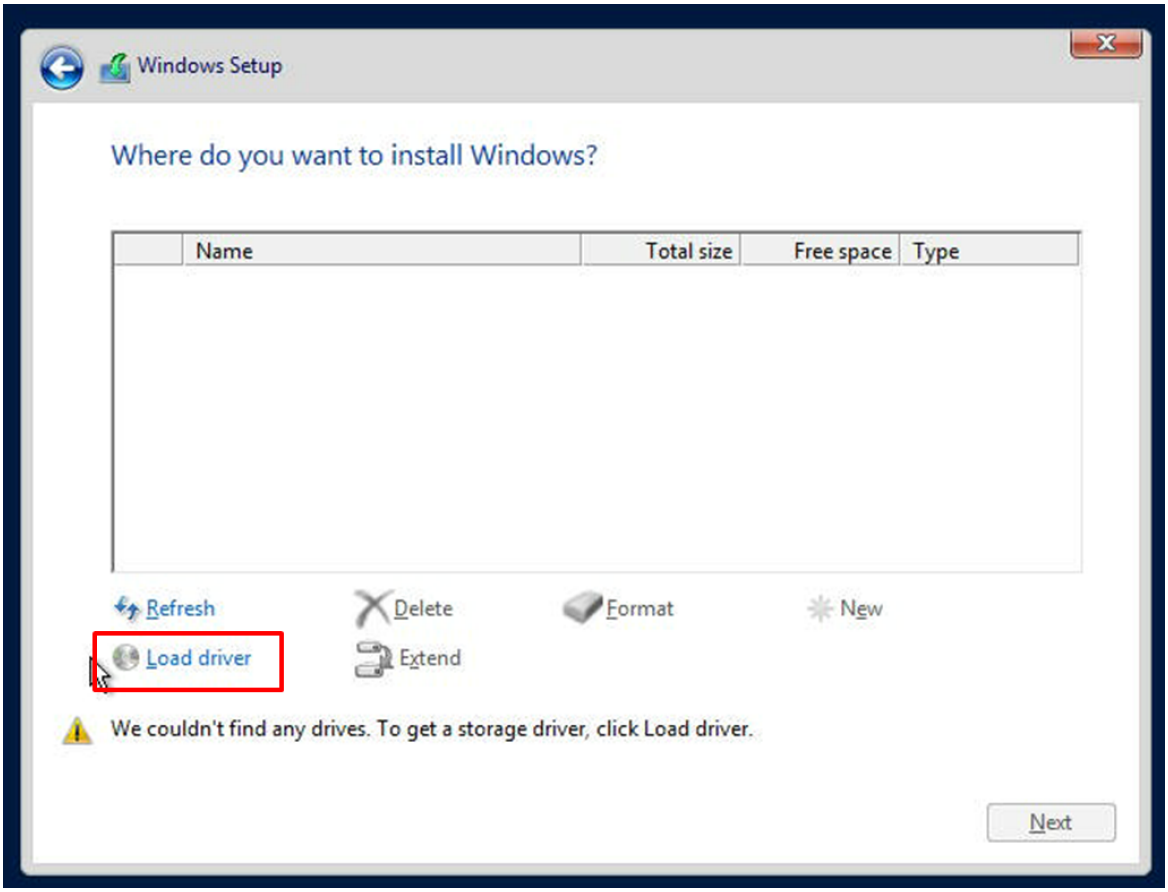

Figure A-2. Loading the Driver Link

To load the driver, browse the USB flash drive for the proper driver files.

5. Once all devices are specified, continue with the installation.
6. After the Windows OS installation has completed, the system will automatically reboot multiple times for system updates.

Driver Installation

The Supermicro website contains drivers and utilities for your system at the following page:

https://www.supermicro.com/wdl.

Some of these drivers and utilities must be installed, such as the chipset driver. After accessing the website, go into the CDR_Images (in the parent directory of the above link) and locate the ISO file for your motherboard. Download this file to a USB flash or media drive. You may also use a utility to extract the ISO file if preferred.

Another option is to go to the Supermicro website at https://www.supermicro.com. Find the product page for your motherboard and download the latest drivers and utilities.

Insert the flash drive or disk, and the screenshot shown below should appear.

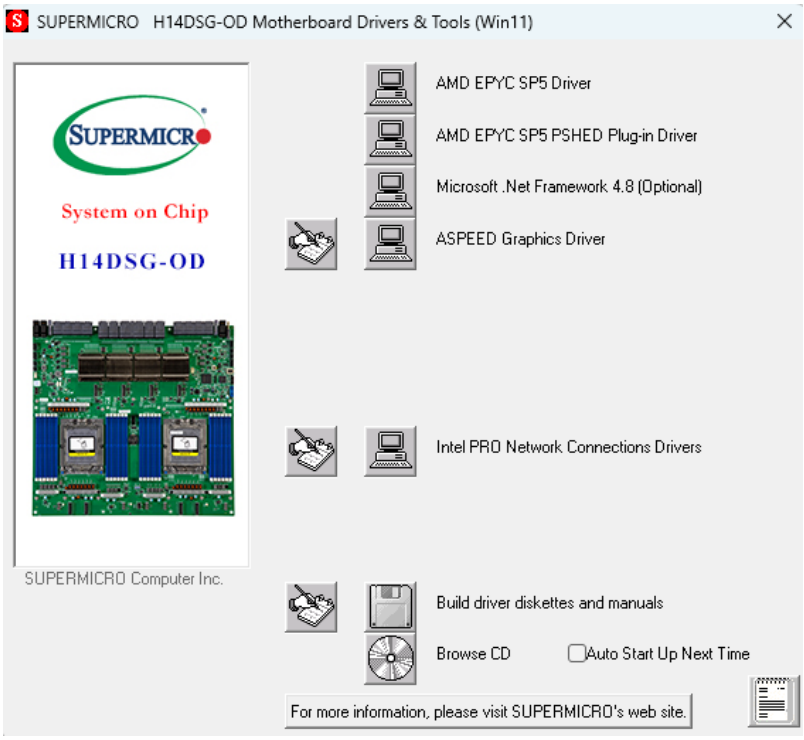

Figure A-3. Driver Download Screenshot

Note: Click the icons showing a hand writing on paper to view the readme files for each item. Click the computer icons to the right of these items to install each item (from top to bottom) one at a time. *After installing each item, you must reboot the system before moving on to the next item on the list.* The bottom icon with a CD on it allows you to view the entire contents.

BMC

The H14DSG-OD motherboard provides remote access, monitoring, and management through the baseboard management controller (BMC) and other management controllers distributed among different system modules. There are several BIOS settings that are related to BMC. For general documentation and information on BMC, visit our website at the following page:

https://www.supermicro.com/en/solutions/management-software/bmc-resources

BMC ADMIN User Password

For security, each system is assigned a unique default BMC password for the ADMIN user. The password can be found on a sticker on the motherboard and a sticker on the chassis, for Supermicro chassis. The sticker also displays the BMC MAC address. If necessary, the password can be reset using the Supermicro IPMICFG tool.

Figure A-4. BMC Password Label

Appendix B:

Standardized Warning Statements

The following statements are industry standard warnings, provided to warn the user of situations which have the potential for bodily injury. Should you have questions or experience difficulty, contact Supermicro's Technical Support department for assistance. Only certified technicians should attempt to install or configure components.

Read this section in its entirety before installing or configuring components in the Supermicro H14DSG-OD motherboard.

These warnings may also be found on our website at the following page:

https://www.supermicro.com/about/policies/safety_information.cfm

Battery Handling

CAUTION There is risk of explosion if the battery is replaced by an incorrect type. Replace the battery only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

電池の取り扱い

バッテリーを間違ったタイプに交換すると爆発の危険があります。交換する電池はメーカーが推奨する型、または同等のものを使用下さい。使用済電池は製造元の指示に従って処分して下さい。

警告

如果更换的电池类型不正确。请只使用同类电池或制造商推荐的功能相当的电池更换原有电池。请按制造商的说明处理废旧电池。

警告

如果更換的電池類型不正確。請使用製造商建議之相同或功能相當的電池更換原有電池。請按照製造商的說明指示處理廢棄舊電池。

WARNUNG

Es besteht Explosionsgefahr, wenn die Batterie durch einen falschen Typ ersetzt wird. Ersetzen Sie die Batterie nur durch den gleichen oder vom Hersteller empfohlenen Batterietyp. Entsorgen Sie die benutzten Batterien nach den Anweisungen des Herstellers.

ADVERTENCIA

Existe riesgo de explosión si la batería se reemplaza por un tipo incorrecto. Reemplazar la batería exclusivamente con el mismo tipo o el equivalente recomendado por el fabricante. Desechar las baterías gastadas según las instrucciones del fabricante.

ATTENTION

Il existe un risque d'explosion si la batterie est remplacée par un type incorrect. Ne la remplacer que par une pile de type semblable ou équivalent, recommandée par le fabricant. Jeter les piles usagées conformément aux instructions du fabricant.

אזהרה!

קיימת סכנת פיצוץ אם הסוללה תוחלף בסוג שגוי. יש להחליף

את הסוללה בסוג התואם מחברת יצרן מומלצת.

סילוק הסוללות המשומשות יש לבצע לפי הוראות היצרן.

.هناك خطر الانفجار إذا تم استبدال البطارية بنوع غير صحيح

اسحبذال البطارية

فقط بنفس النىع أو ما يعادلها مما أوصث به الشرمة المصنعة

جخلص من البطاريات المسحعملة وفقا لحعليمات الشرمة الصانعة

경고!

배터리를 잘못된 종류로 교체하면 폭발의 위험이 있습니다. 기존 배터리와 동일하거나 제조사에서 권장하는 동등한 종류의 배터리로만 교체해야 합니다. 제조사의 안내에 따라 사용된 배터리를 처리하여 주십시오.

WAARSCHUWING

Er bestaat explosiegevaar als de batterij wordt vervangen door een verkeerd type. Vervang de batterij slechts met hetzelfde of een equivalent type die door de fabrikant aanbevolen wordt. Gebruikte batterijen dienen overeenkomstig fabrieksvoorschriften afgevoerd te worden.

Product Disposal

Warning! Ultimate disposal of this product should be handled according to all national laws and regulations.

製品の廃棄

この製品を廃棄処分する場合、国の関係する全ての法律・条例に従い処理する必要があります。

警告

本产品的废弃处理应根据所有国家的法律和规章进行。

警告

本產品的廢棄處理應根據所有國家的法律和規章進行。

Warnung

Die Entsorgung dieses Produkts sollte gemäß allen Bestimmungen und Gesetzen des Landes erfolgen.

¡Advertencia!

Al deshacerse por completo de este producto debe seguir todas las leyes y reglamentos nacionales.

Attention

La mise au rebut ou le recyclage de ce produit sont généralement soumis à des lois et/ou directives de respect de l'environnement. Renseignez-vous auprès de l'organisme compétent.

סילוק המוצר

אזהרה!

סילוק סופי של מוצר זה חייב להיות בהתאם להנחיות וחוקי המדינה.

عند التخلص النهائي من هذا المنتج ينبغي التعامل معه وفقا لجميع القانين واللائح البطنية

경고!

이 제품은 해당 국가의 관련 법규 및 규정에 따라 폐기되어야 합니다.

Waarschuwing

De uiteindelijke verwijdering van dit product dient te geschieden in overeenstemming met alle nationale wetten en reglementen.