

SuperServer®

SYS-112HA-TN

USER'S MANUAL

Revision 1.0 (MNL-2788)

The information in this User's Manual has been carefully reviewed and is believed to be accurate. The vendor assumes no responsibility for any inaccuracies that may be contained in this document, and makes no commitment to update or to keep current the information in this manual, or to notify any person or organization of the updates. Note: For the most up-to-date version of this manual, see our website at https://www.supermicro.com.

Super Micro Computer, Inc. ("Supermicro") reserves the right to make changes to the product described in this manual at any time and without notice. This product, including software and documentation, is the property of Supermicro and/or its licensors, and is supplied only under a license. Any use or reproduction of this product is not allowed, except as expressly permitted by the terms of said license.

IN NO EVENT WILL Super Micro Computer, Inc. BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, SPECULATIVE OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OR INABILITY TO USE THIS PRODUCT OR DOCUMENTATION, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN PARTICULAR, SUPER MICRO COMPUTER, INC. SHALL NOT HAVE LIABILITY FOR ANY HARDWARE, SOFTWARE, OR DATA STORED OR USED WITH THE PRODUCT, INCLUDING THE COSTS OF REPAIRING, REPLACING, INTEGRATING, INSTALLING OR RECOVERING SUCH HARDWARE, SOFTWARE, OR DATA.

Any disputes arising between manufacturer and customer shall be governed by the laws of Santa Clara County in the State of California, USA. The State of California, County of Santa Clara shall be the exclusive venue for the resolution of any such disputes. Supermicro's total liability for all claims will not exceed the price paid for the hardware product.

FCC Statement: This equipment has been tested and found to comply with the limits for a Class A or Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in industrial environment for Class A device or in residential environment for Class B device. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer's instruction manual, may cause harmful interference with radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case you will be required to correct the interference at your own expense.

California Best Management Practices Regulations for Perchlorate Materials: This Perchlorate warning applies only to products containing CR (Manganese Dioxide) Lithium coin cells. "Perchlorate Material-special handling may apply. See https://www.dtsc.ca.gov/hazardouswaste/perchlorate".



WARNING: This product can expose you to chemicals including lead, known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to https://www.P65Warnings.ca.gov.



AVERTISSEMENT : Ce produit peut vous exposer à des agents chimiques, y compris le plomb, identifié par l'État de Californie comme pouvant causer le cancer, des malformations congénitales ou d'autres troubles de la reproduction. Pour de plus amples informations, prière de consulter https://www.P65Warnings.ca.gov.

The products sold by Supermicro are not intended for and will not be used in life support systems, medical equipment, nuclear facilities or systems, aircraft, aircraft devices, aircraft/emergency communication devices or other critical systems whose failure to perform be reasonably expected to result in significant injury or loss of life or catastrophic property damage. Accordingly, Supermicro disclaims any and all liability, and should buyer use or sell such products for use in such ultra-hazardous applications, it does so entirely at its own risk. Furthermore, buyer agrees to fully indemnify, defend and hold Supermicro harmless for and against any and all claims, demands, actions, litigation, and proceedings of any kind arising out of or related to such ultra-hazardous use or sale.

Manual Revision 1.0

Release Date: January 08, 2026

Unless you request and receive written permission from Super Micro Computer, Inc., you may not copy any part of this document. Information in this document is subject to change without notice. Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders.

Copyright © 2026 by Super Micro Computer, Inc.
All rights reserved.
Published in the United States of America

Preface

About This Manual

This manual is written for professional system integrators and PC technicians. It provides information for the installation and use of the SYS-112HA-TN server. Installation and maintenance should be performed by certified service technicians only.

Notes

For your system to work properly, follow the links below to download all necessary drivers/utilities and the user's manual for your server.

- Supermicro product manuals: https://www.supermicro.com/support/manuals
- Product drivers and utilities: https://www.supermicro.com/wdl
- Product safety info: https://www.supermicro.com/about/policies/safety_information.cfm
- A secure data deletion tool designed to fully erase all data from storage devices can be found on our website: https://www.supermicro.com/about/policies/disclaimer.cfm?url=/wdl/utility/Lot9_Secure_Data_Deletion_Utility
- Frequently Asked Questions: https://www.supermicro.com/FAQ/index.php
- If you still have questions after referring to our FAQs, contact our support team. Region-specific Technical Support email addresses can be found at: "Contacting Supermicro" on page 12
- If you have any feedback on Supermicro product manuals, contact our writing team at: Techwriterteam@supermicro.com

This manual may be periodically updated without notice. Check the Supermicro website for possible updates to the manual revision level.

Conventions Used in the Manual

Special attention should be given to the following symbols for proper installation and to prevent damage done to the components or injury to yourself.



Warning! Indicates important information given to prevent equipment/property damage or personal injury.



Warning! Indicates high voltage may be encountered while performing a procedure.

Important: Important information given to ensure proper server installation or to relay safety precautions.

Note: Additional information given to differentiate various models or to provide information for proper server setup.

Contents

Contacting Supermicro ***12***
Chapter 1: Introduction ***13***
1.1 Overview 14
1.2 System Features 17
Front View 17
NVMe SSD Drive Indicators 18
Control Panel 19
Rear View 20
1.3 System Architecture 22
Main Components 22
Motherboard Block Diagram 23
1.4 Motherboard Quick Reference 24
Motherboard Layout 24
Quick Reference 25
Chapter 2: Server Installation ***28***
2.1 Unpacking the System 29
2.2 Preparing for Setup 30
Choosing a Setup Location 30
Rack Precautions 30
System Precautions 30
Rack Mounting Considerations 31
Ambient Operating Temperature 32
Airflow 32
Mechanical Loading 32
Circuit Overloading 32
Reliable Ground 32
2.3 Installing the Rails 33
Identifying the Rails 33
Releasing the Inner Rail 33
Releasing the Inner Rail from the Middle and Outer Rails 33
Installing the Inner Rails onto the Chassis 34

Installing the Outer Rails onto the Rack 35
2.4 Installing the Chassis into the Rack 36
Installing the Chassis 36
Removing the Chassis from the Rack 37
Chapter 3: Maintenance and Component Installation 39
3.1 Removing Power 41
3.2 Accessing the System 42
Removing the Chassis Cover 42
3.3 Static-Sensitive Devices 43
Precautions 43
3.4 Processor and Heatsink Installation 44
Socket BR LGA7529 Processors 45
Processor Top View 45
Overview of the Processor Carrier 45
Overview of the Processor Socket 48
Overview of the Processor Heatsink Module 48
Installing the Processor 50
Assembling the Processor Heatsink Module 52
Preparing to Install the PHM into the Processor Socket 53
Preparing the Processor Socket for Installation 55
Installing the Processor Heatsink Module 56
Removing the Processor Heatsink Module 59
3.5 Memory Support and Installation 63
Memory Support 63
General Guidelines for Optimizing Memory Performance 66
DIMM Installation 66
DIMM Removal 68
3.6 Motherboard Battery Removal and Installation 70
Battery Removal 70
Proper Battery Disposal 70
Battery Installation 70
3.7 Storage Drives 71
Removing Drive Carriers from the Chassis 71
Installing a 2.5" Drive 72

Hot-Swap for NVMe Drives ... 73
Ejecting a Drive ... 73
Replacing a Drive ... 74
3.8 System Cooling ... 75
Fans ... 75
Changing a System Fan ... 75
Air Shroud ... 76
Air Shroud for CPU and Memory ... 76
Installing the Air Shroud ... 76
3.9 Expansion Cards ... 77
Riser Cards ... 77
Installing Riser Cards ... 77
AIOM Cards ... 79
Installing AIOM Cards ... 80
3.10 Power Supply ... 81
Replacing the Power Supply ... 81
3.11 Cable Routing Diagrams ... 82
Chapter 4: Motherboard Connections, Jumpers, and LEDs ... 87
4.1 Power Supply and Power Connections ... 89
Power Connectors ... 89
4.2 Headers and Connections ... 90
BMC LAN/USB/VGA Connector ... 90
Chassis Intrusion ... 90
External BMC I²C Headers for Backplane ... 90
Fan Headers ... 91
M.2 M-Key PCIe 5.0 x2 Slots ... 91
NC-SI Connection ... 91
NVMe I²C Headers ... 92
TPM/Port 80 Header ... 92
Universal Serial Bus (USB) Header ... 93
VROC RAID Key Header ... 93
4.3 Front Control Panel ... 95
Power On and BMC/BIOS Status LED Button ... 95
UID LED ... 96

Fail LED (Information LED for OH/FF/PF) 96
LAN1/LAN2 (NIC1/NIC2) LED 97
Storage Drive Activity LED 97
Standby Power LED 98
Root of Trust (RoT) Power LED 98
Standby Power 98
Power Fail LED Indicators 98
4.4 Input/Output Ports 100
I/O Connection 100
Advanced I/O Module (AIOM) for I/O Support 100
4.5 Jumper Settings 101
CMOS Clear 101
Onboard TPM Enable/Disable 102
UID LED and System_Reset Button Select Jumper 102
4.6 LED Indicators 103
BMC Heartbeat LED 103
Onboard Power LED 103
Chapter 5: Software ***104***
5.1 Microsoft Windows OS Installation 105
Installing the OS 105
5.2 Driver Installation 107
5.3 BMC 109
BMC ADMIN User Password 109
Logging into the BMC 109
Chapter 6: Optional Components ***110***
6.1 TPM Security Module 111
6.2 HBA Card 112
6.3 RAID Cards 113
6.4 Cable Management Arm 114
Installing the Cable Management Arm 115
Removing the Cable Management Arm 116
6.5 Intel Virtual RAID on CPU (VROC) 117
Requirements and Restrictions 117
Additional Information 117

Hardware Key 118
Configuring Intel VMD 118
Configuring VMD Manually 119
Creating NVMe RAID Configurations 122
Status Indications 124
Hot-Swap Drives 124
Hot-Unplug 124
Hot-Plug 125
Related Information Links 125
Chapter 7: Troubleshooting and Support ***126***
7.1 Online Resources 127
Direct Links for the SYS-112HA-TN System 127
Direct Links for General Support and Information 127
7.2 Baseboard Management Controller (BMC) 128
7.3 Troubleshooting Procedures 129
Before Power On 129
No Power 129
No Video 129
System Boot Failure 129
Memory Errors 130
Losing the System's Setup Configuration 130
If the System Becomes Unstable 130
7.4 CMOS Clear 132
7.5 Motherboard Battery 133
7.6 Where to Get Replacement Components 134
7.7 Technical Support Procedures 135
Returning Merchandise for Service 135
7.8 Feedback 137
Chapter 8: UEFI BIOS ***138***
8.1 Introduction 139
Updating BIOS 139
Starting the Setup Utility 139
8.2 Main Setup 141
8.3 Advanced Setup Configurations 143

8.4 Event Logs 144
8.5 BMC 146
8.6 Security 147
8.7 Boot 149
8.8 Save & Exit 151
Appendix A: BIOS Codes ***153***
BIOS Error POST (Beep) Codes 153
Additional BIOS POST Codes 153
Appendix B: Standardized Warning Statements for AC Systems ***154***
Warning Definition 154
Installation Instructions 156
Circuit Breaker 158
Power Disconnection Warning 159
Equipment Installation 161
Restricted Area 162
Battery Handling 164
Redundant Power Supplies 165
Backplane Voltage 167
Comply with Local and National Electrical Codes 168
Product Disposal 169
Fan Warning 171
Power Cable and AC Adapter 173
Appendix C: Standardized Warning Statements for DC Systems ***176***
Warning Definition 176
Installation Instructions 178
Circuit Breaker 180
Power Disconnection Warning 181
Equipment Installation 183
Restricted Area 184
Battery Handling 186
Redundant Power Supplies 187
Backplane Voltage 189
Comply with Local and National Electrical Codes 190
Product Disposal 191

Fan Warning 193
DC Power Supply 195
Power Disconnection Warning 196
Hazardous Voltage or Energy Present on DC Power Terminals 198
Appendix D: System Specifications ***200***

Contacting Supermicro

Headquarters

Address:	Super Micro Computer, Inc. 980 Rock Ave. San Jose, CA 95131 U.S.A.
Tel:	+1 (408) 503-8000
Fax:	+1 (408) 503-8008
Email:	Marketing@supermicro.com (General Information) Sales-USA@supermicro.com (Sales Inquiries) Government_Sales-USA@supermicro.com (Gov. Sales Inquiries) Support@supermicro.com (Technical Support) RMA@Supermicro.com (RMA Support) Webmaster@supermicro.com (Webmaster)
Website:	https://www.supermicro.com

Europe

Address:	Super Micro Computer B.V. Het Sterrenbeeld 28, 5215 ML 's-Hertogenbosch, The Netherlands
Tel:	+31 (0) 73-6400390
Fax:	+31 (0) 73-6416525
Email:	Sales_Europe@supermicro.com (Sales Inquiries) Support_Europe@supermicro.com (Technical Support) RMA_Europe@supermicro.com (RMA Support)
Website:	https://www.supermicro.nl

Asia-Pacific

Address:	Super Micro Computer, Inc. 3F, No. 150, Jian 1st Rd. Zhonghe Dist., New Taipei City 235 Taiwan (R.O.C)
Tel:	+886 (2) 8226-3990
Fax:	+886 (2) 8226-3992
Email:	Sales-Asia@supermicro.com.tw (Sales Inquiries) Support@supermicro.com.tw (Technical Support) RMA@supermicro.com.tw (RMA Support)
Website:	https://www.supermicro.com.tw

Chapter 1:

Introduction

This chapter provides a brief outline of the functions and features of the SYS-112HA-TN system. It is based on the X14SBH-AP motherboard and the CSE-HS101-R000NFP chassis.

1.1 Overview **14**
1.2 System Features **17**
Front View 17
Rear View 20
1.3 System Architecture **22**
Main Components 22
Motherboard Block Diagram 23
1.4 Motherboard Quick Reference **24**
Motherboard Layout 24
Quick Reference 25

1.1 Overview

The SuperServer® SYS-112HA-TN is a X14 Hyper system that supports single Intel® Xeon® 6900- series processor in a 1U form factor. The system is based on the X14SBH- AP motherboard and the CSE-HS101-R000NFP chassis.

The following provides an overview of the specifications and capabilities of the SYS-112HA-TN.

System Overview	
Motherboard	X14SBH-AP
Chassis	CSE-HS101-R000NFP
Processor	Single Intel® Xeon® 6900-series processor with P-cores (in Socket BR LGA7529) and a thermal design power (TDP) of up to 500 W
Memory	12 DIMM slots Max Memory (1DPC): 3 TB 8800 MT/s ECC DDR5 MRDIMM Max Memory (1DPC): Up to 3 TB 6400 MT/s ECC DDR5 RDIMM
Drive Support	Default: Total eight drives Eight front hot-swap 2.5" NVMe/SAS/SATA drive bays Optional: Total 12 drives Eight front hot-swap 2.5" NVMe/SAS/SATA drive bays Four front hot-swap 2.5" SAS/SATA drive bays NVMe/SAS/SATA support may require additional storage controller and/or cables, please see the Optional Parts list for details.
Expansion Slots	One PCIe 5.0 x16 slot (full-height, half-length) One PCIe 5.0 x16 slot (full-height, full-length) One PCIe 5.0 x8 slot (full-height, full-length) One PCIe 5.0 x16 AIOM slot (OCP 3.0 compatible)
I/O Ports	One RJ45 1 GbE Dedicated BMC LAN port Two USB 3.2 Gen1 ports (rear) One USB 3.2 Gen1 port (front) One VGA port
System Cooling	Eight counter-rotating 40x40x56 mm fans One CPU air shroud
Power	Two 1200 W Redundant (1 + 1) Titanium Level (96%) power supplies or Two 1300 W DC Redundant (1 + 1) Gold Level power supplies or Two 1600 W Redundant (1 + 1) Titanium Level (96%) power supplies or Two 2000 W Redundant (1 + 1) Titanium Level (96%) power supplies
Form Factor	1U Rackmount: 17.2 x 1.7 x 30.7 in. / 437 x 43 x 778.7 mm (W x H x D)

Notes:

- A Quick Reference Guide can be found on the following page of the Supermicro website: https://www.supermicro.com/QuickRefs/superserver/1U/LBL-4037-QRG.pdf
- The following safety models associated with the SYS-112HA-TN have been certified as compliant with UL or CSA: HS101-R12X14, HS101-R16X14, HS101-R13DX14, or HS101-R20X1.

1.2 System Features

The following views of the system display the main features. Refer to the System Specifications appendix of this manual for additional specifications.

Front View

The SYS-112HA-TN is a 1U system containing an Intel® Xeon® 6900-series processor for high-performance computing. The features on the front of the server are shown below.



Figure 1-1. Front View

Front Features	
Feature	**Description**
USB Port	One USB 3.2 Gen1 port
Control Panel	Front control panel with LEDs and buttons. See the Control Panel for more details.
Service/Asset Tag	Pull-out service or asset tag has the BMC password details
Storage I/O Bay	Additional storage I/O bays

Logical Storage Drive Numbers	
Item	**Description**
0-7	Eight hot-swap 2.5" NVMe/SAS3/SATA3 drive bays

NVMe SSD Drive Indicators

Each NVMe SSD module has two LED indicators: an activity indicator and a status indicator. For RAID configurations using a controller, the meaning of the status indicator is described in the table below. For OS RAID or non-RAID configurations, some LED indications are not supported, such as hot spare.

Rear I/O Ports			
LED	**Color**	**Pattern**	**Device Behavior**
Activity LED	Blue	Solid	Idle SAS/NVMe storage module installed
	Blue	Blinking	I/O activity
	Off	N/A	Idle SATA drive installed
Status LED	Red	Solid	Failure of drive with RSTe support
	Red	Blinking at 1 Hz	Rebuild drive with RSTe support
	Red	Blinking with two blinks and one stop at 1 Hz	Hot spare for drive with RSTe support
	Red	On for five seconds, then off	Power on for drive with RSTe support
	Red	Blinking at 4 Hz	Identify drive with RSTe support
	Green	Solid	Safe to remove NVMe storage module
	Amber	Blinking at 1 Hz	Do not remove NVMe storage module

Control Panel

The switches and LEDs located on the control panel of the SYS-112HA-TN server are described below.

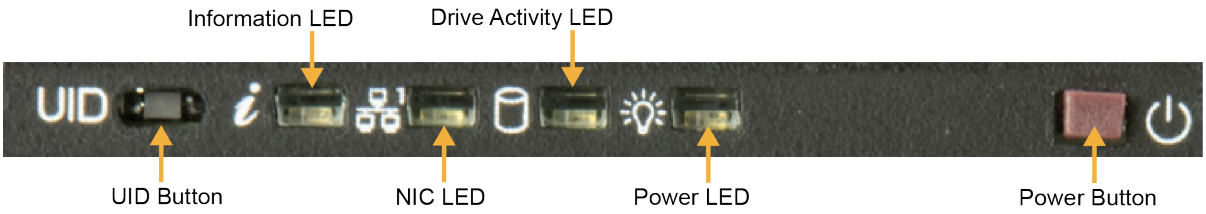


Figure 1-2. Control Panel

Control Panel Features	
Feature	**Description**
UID Button/BMC Reset	The button switch is a unit identifier button for easy system location in large stack configurations. When the UID button is pressed, the blue LED on both the front and rear of the chassis will be illuminated.
Information LED	See table below for details.
NIC LED	Indicates network activity on LAN port 1 when flashing.
Drive Activity LED	Indicates activity on a storage drive when flashing.
Power LED	Indicates power is being supplied to the system power supply. This LED should normally be illuminated when the system is operating.
Power Button	The main power button is used to apply or remove power from the power supply to the server. Turning off system power with this button removes the main power but maintains standby power. To perform many maintenance tasks, you must also unplug system before servicing.

Information LED	
Status	**Description**
Red, solid	An overheat condition has occurred. This may be caused by cable congestion.
Red, blinking at 1 Hz	Fan failure. Check for an inoperative fan.
Blue, solid	UID has been activated locally to locate the server in a rack environment.
Blue, blinking at 300 milliseconds	UID has been activated remotely using IPMI to locate the server in a rack environment.

Rear View

The illustration below shows the features included on the rear of the SYS-112HA-TN system, including the power supply module display status lights.

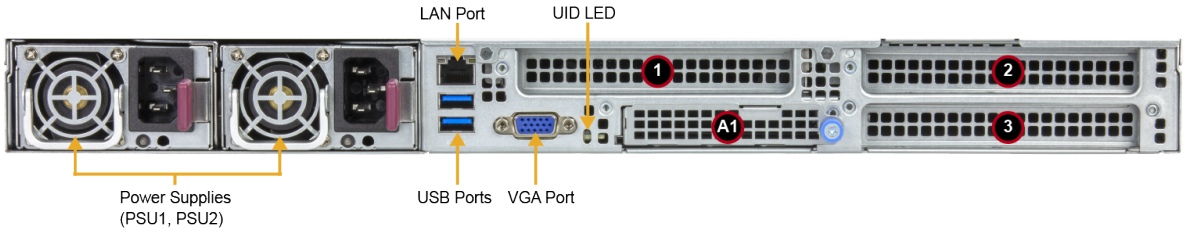


Figure 1-3. Rear View

Rear Features	
Feature	**Description**
Power Supplies	Two redundant power supplies (PSU1 on the left, PSU2 on the right). See table below for details.
LAN Port	One dedicated BMC RJ45 LAN port for remote management
USB Ports	Two 3.2 Gen1 USB ports
VGA Port	One video port
Unit identifier LED (UID LED)	Unit identifier indicator light

Expansion Slot Locations	
Item	**Description**
1	PCIe 5.0 x16 slot (full-height, 6.6" L)
2	PCIe 5.0 x16 slot (full-height, 10.5" L)
3	PCIe 5.0 x8 (in x16) slot (full-height, 10.5"L)
A1	AIOM/OCP 3.0 NIC slot

Status Indicator	
LED Color and State	**Power Supply Indicator**
Green, solid	Indicates that the power supply is on.
Green, blinking	Indicates that the power supply is plugged in and turned off by the system.
Amber, blinking	Indicates that the power supply has a warning condition and continues to operate.
Amber, solid	Indicates that the power supply is plugged in and is in an abnormal state. The system might need service. Contact Supermicro technical support.
Off	No AC power to modules.

1.3 System Architecture

This section covers the locations of the system's main components and provides a motherboard block diagram.

Main Components

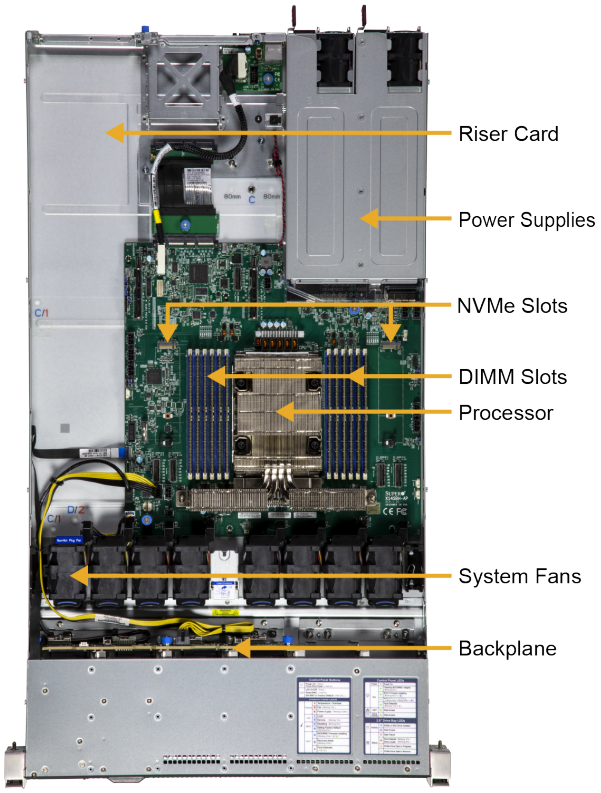


Figure 1-4. SYS-112HA-TN Main Component Locations

Top Features	
Feature	**Description**
Riser Card	Two riser cards (RSC-H-66G5L on the left, RSC-H-6G5L on the right)
Power Supplies	Two redundant power supply modules
NVMe Slots	Two NVMe M.2 slots
DIMM Slots	12 DDR5 DIMM slots
Processor	Intel® Xeon® 6900-series processor with a thermal design power (TDP) up to 500 W
System Fans	Eight internal fans
Backplane	8-slot backplane supports SAS3/SATA3/NVMe5 storage devices (BPN-NVME5-HS119N-S8L)

Motherboard Block Diagram

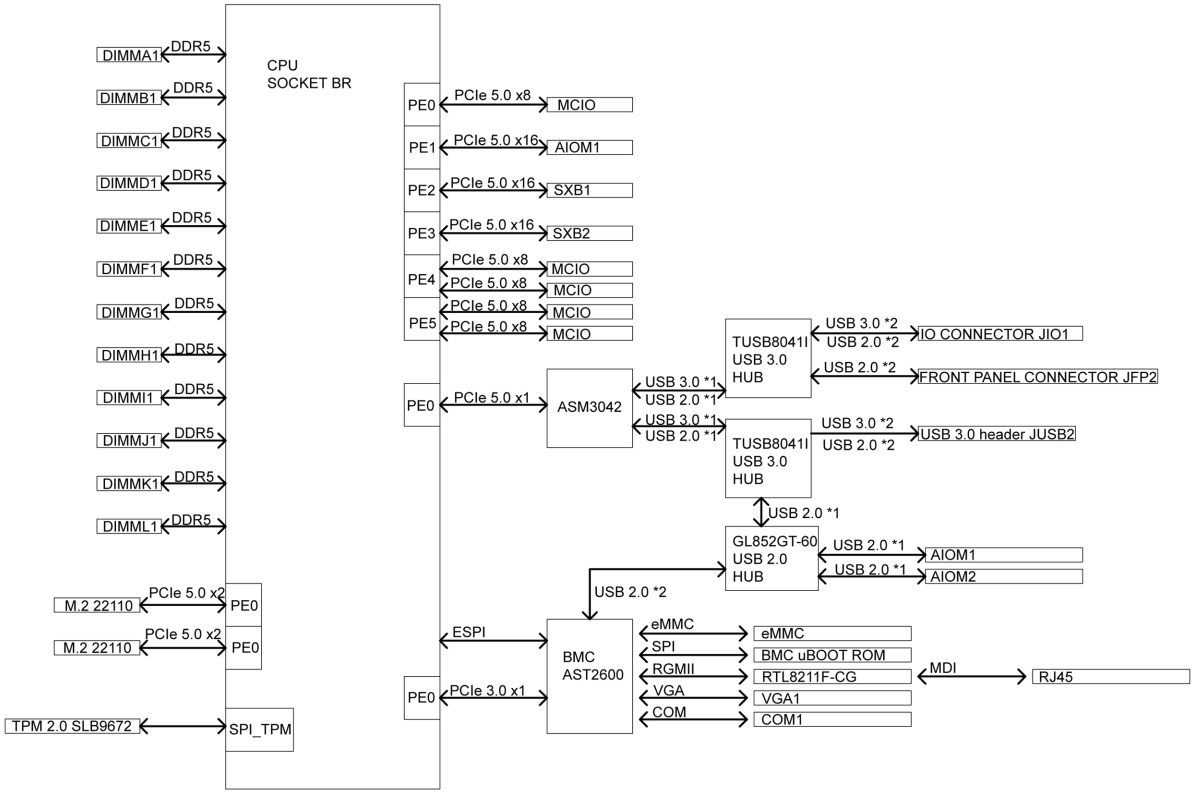


Figure 1-5. Motherboard Block Diagram

1.4 Motherboard Quick Reference

For details on the X14SBH-AP motherboard layout and other quick reference information, refer to the content below.

Motherboard Layout

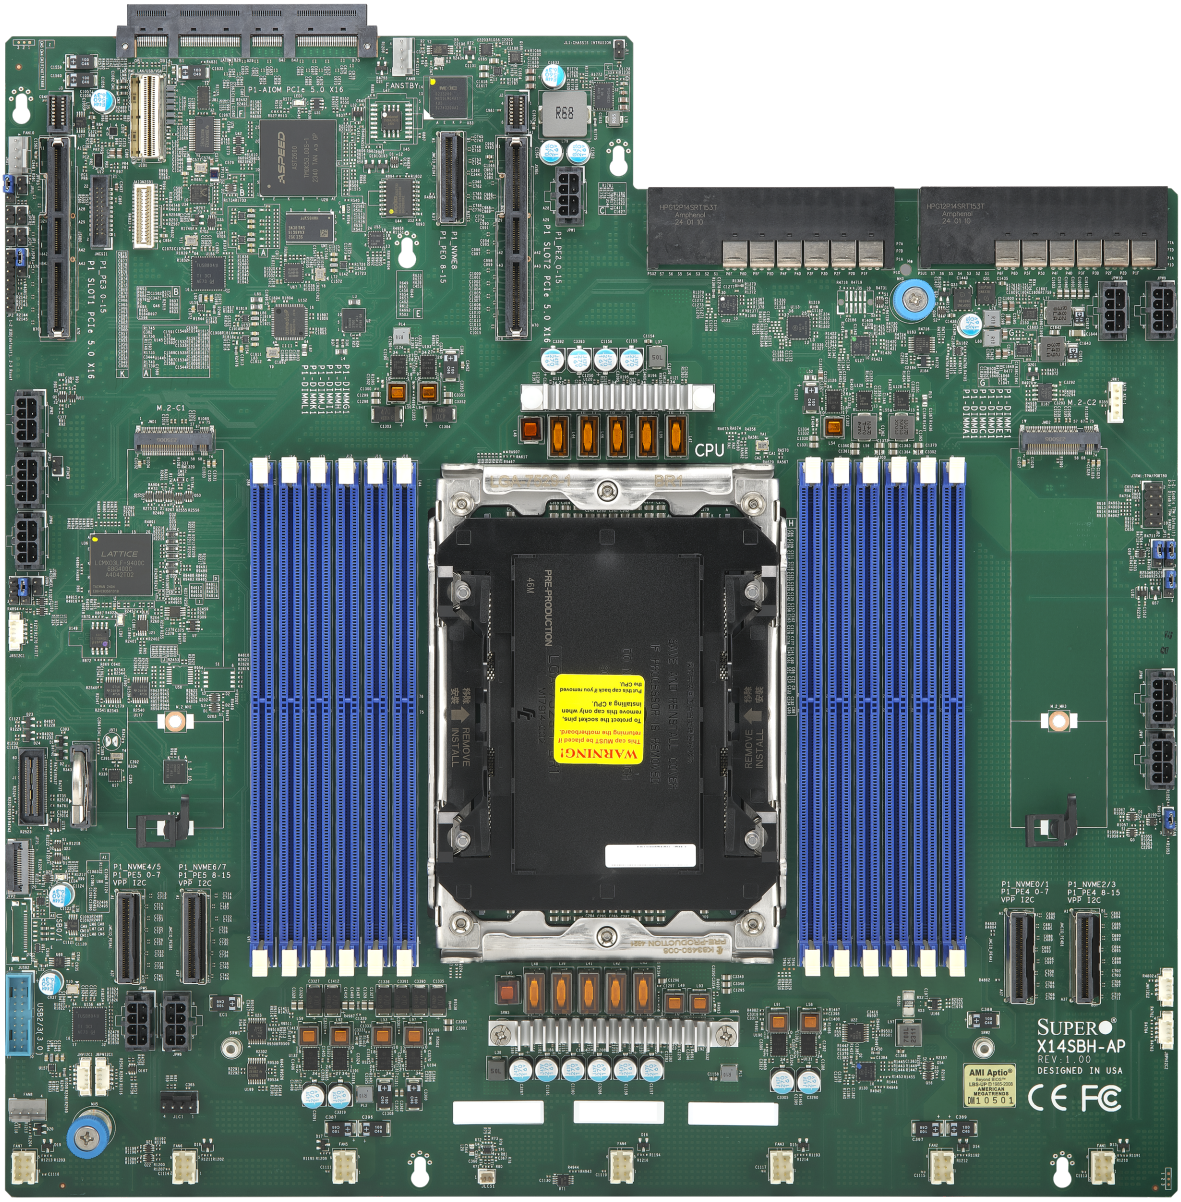


Figure 1-6. X14SBH-AP Motherboard Image

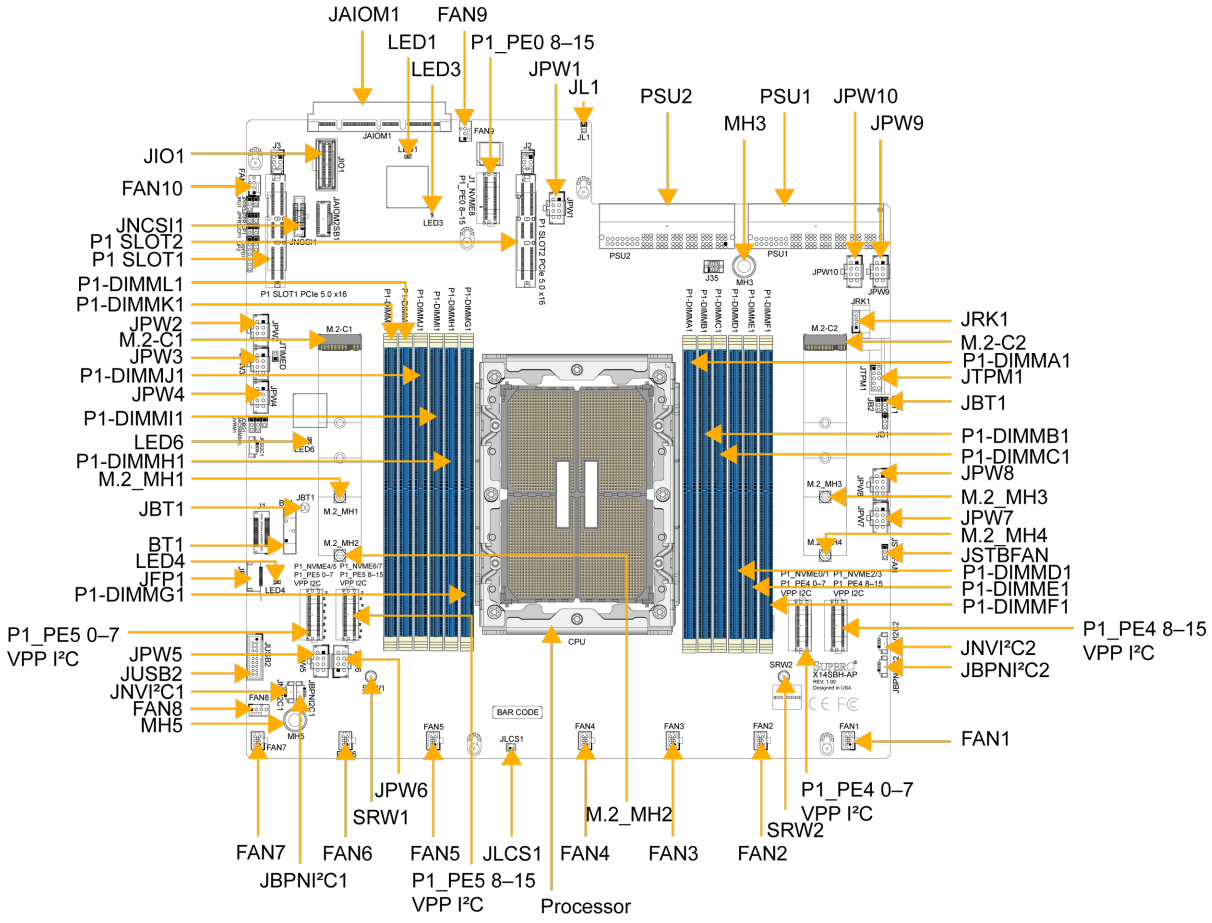


Figure 1-7. X14SBH-AP Motherboard Layout

Notes:

- For detailed information on jumpers, connectors, and LED indicators, see "Maintenance and Component Installation" on page 39.
- "■" indicates the location of pin 1.
- "MH" indicates the location of a mounting hole.
- Components not documented are for internal testing purposes only.
- Use only the correct type of onboard CMOS battery as specified by the manufacturer. To avoid possible explosion, do not install the onboard battery upside down.

Quick Reference

Jumper	Description	Default Setting
JBT1	CMOS Clear	Open (Normal)

Jumper	Description	Default Setting
JPT1	Onboard TPM Enable/Disable	Pins 1–2 (Enabled)
JRU1	Unit Identifier (UID)	Pins 1-2 (UID)

LED	Description	Status
LED3	BMC Heartbeat LED	Blinking Green: BMC Normal
LED4	Onboard Power LED	LED On: Onboard Power On

Connector	Description
BT1	Onboard Battery
FAN1–FAN7	6-pin Fan Headers
FAN8–FAN10	4-pin Fan Headers
JAIOM1	Supermicro Advanced Input/Output Module (AIOM) PCIe 5.0 x16 Connector
JBPNI²C1, JBPNI²C2	4-pin BMC External I²C Headers for Backplane
JFP1	Front Control Panel Header
JIO1	Front BMC and Onboard VGA/USB/LAN Module Connector
JL1	Chassis Intrusion Header
JLCS1	Liquid Cooling Solution Header
M.2-C1, M.2-C2	M.2 PCIe 5.0 x2 Slots in 25110/22110/2280 Form Factor
JNCSI1	Network Controller Sideband Interface (NC-SI) Connector
JNVI²C1, JNVI²C2	NVMe SMBus I²C Headers for PCIe SMBus Clock and Data Connections with Hot-Plug Support
JPW1–JPW10	8-pin Power Connectors
JRK1	Intel RAID Key Header
JUSB2	Front Accessible USB 3.2 Gen 1 Header
JTPM1	Trusted Platform Module/Port 80 Connector
M.2_MH1–M.2-MH4	M.2 Mounting Holes

Connector	Description
P1_PE0 8–15	MCIO PCIe 5.0 x8 Connector Support
P1_PE4 0–7 VPP I²C	MCIO PCIe 5.0 x8 Connector Support
P1_PE4 8–15 VPP I²C	MCIO PCIe 5.0 x8 Connector Support
P1_PE5 0-7 VPP I²C	MCIO PCIe 5.0 x8 Connector Support
P1_PE5 8–15 VPP I²C	MCIO PCIe 5.0 x8 Connector Support
P1 SLOT1, P1 SLOT2	PCIe 5.0 x16 Slots
PSU1, PSU2	Power Supply Unit 1/Power Supply Unit 2 for System Power Use
SRW1, SRW2	M.2 Holding Screws

Note: Jumpers, connectors, switches, and LED indicators that are not described in these tables are for manufacturing testing purposes only, and are not covered in this manual.

Chapter 2:

Server Installation

This chapter provides advice and instructions for mounting your server in a server rack. If your server is not already fully integrated with processors, system memory, etc., refer to "Maintenance and Component Installation" on page 39 for details on installing those specific components.

Important: Electrostatic Discharge (ESD) can damage electronic components. To prevent such damage to printed circuit boards (PCBs), it is important to use a grounded wrist strap, handle all PCBs by their edges, and keep PCBs in anti-static bags when not in use.

2.1 Unpacking the System **29**
2.2 Preparing for Setup **30**
Choosing a Setup Location 30
Rack Precautions 30
System Precautions 30
Rack Mounting Considerations 31
2.3 Installing the Rails **33**
Identifying the Rails 33
Releasing the Inner Rail 33
Installing the Inner Rails onto the Chassis 34
Installing the Outer Rails onto the Rack 35
2.4 Installing the Chassis into the Rack **36**
Installing the Chassis 36
Removing the Chassis from the Rack 37

2.1 Unpacking the System

Inspect the box the SYS-112HA-TN server was shipped in and note if it was damaged in any way. If any equipment appears damaged, file a damage claim with the carrier who delivered it.

Decide on a suitable location for the rack unit that will hold the server. It should be situated in a clean, dust-free area that is well ventilated. Avoid areas where heat, electrical noise and electromagnetic fields are generated. It will also require a grounded AC power outlet nearby. Be sure to read the precautions and considerations noted in "Standardized Warning Statements for AC Systems" on page 154.

2.2 Preparing for Setup

The box in which the SYS-112HA-TN server was shipped should include the rackmount hardware needed to install it into the rack. Read this section in its entirety before you begin the installation.

Choosing a Setup Location

- The server should be situated in a clean, dust-free area that is well ventilated. Avoid areas where heat, electrical noise and electromagnetic fields are generated.
- Leave enough clearance in front of the rack so that you can open the front door completely (~25 inches) and approximately 30 inches of clearance in the back of the rack to allow sufficient space for airflow and access when servicing.
- This product should be installed only in a Restricted Access Location (dedicated equipment rooms, service closets, etc.).
- This product is not suitable for use with visual display workplace devices according to §2 of the German Ordinance for Work with Visual Display Units.

Rack Precautions

- Ensure that the leveling jacks on the bottom of the rack are extended to the floor so that the full weight of the rack rests on them.
- In single rack installations, stabilizers should be attached to the rack. In multiple rack installations, the racks should be coupled together.
- Always make sure the rack is stable before extending a server or other component from the rack.
- You should extend only one server or component at a time. Extending two or more simultaneously may cause the rack to become unstable.

System Precautions

- Review the electrical and general safety precautions in "Standardized Warning Statements for AC Systems" on page 154.
- Determine the placement of each component in the rack before you install the rails.
- Install the heaviest server components at the bottom of the rack first and then work your way up.

- Use a regulating uninterruptible power supply (UPS) to protect the server from power surges and voltage spikes and to keep your system operating in case of a power failure.
- Allow any drives and power supply modules to cool before touching them.
- When not servicing, always keep the front door of the rack and all covers/panels on the servers closed to maintain proper cooling.

Rack Mounting Considerations



Warning! Stability hazard. The rack may tip over causing serious personal injury. Before extending the rack to the installation position, read the installation instructions. Do not put any load on the slide-rail mounted equipment in the installation position. Do not leave the slide-rail mounted equipment in the installation position.



Avertissement!
Danger d'instabilité. Le rack peut basculer et provoquer des blessures corporelles graves.
Avant d'étendre le rack en position d'installation, lire les instructions d'installation. Ne pas charger l'équipement monté sur rail de glissière en position d'installation. Ne pas laisser l'équipement monté sur rail de glissière en position d'installation.

Important: To prevent bodily injury when mounting or servicing this unit in a rack, you must take special precautions to ensure that the system remains stable. The following guidelines are provided to ensure your safety:

- If this unit is the only unit in the rack, it should be mounted at the bottom of the rack.
- When mounting this unit in a partially filled rack, load the rack from the bottom to the top, placing the heaviest component at the bottom of the rack.
- If the rack is provided with stabilizing devices, install the stabilizers before mounting or servicing the unit in the rack.
- Slide rail mounted equipment is not to be used as a shelf or a workspace.
- Do not pick up the server with the front handles. They are designed to pull the system from a rack only.

Ambient Operating Temperature

If installed in a closed or multi-unit rack assembly, the ambient operating temperature of the rack environment may be greater than the room's ambient temperature. Therefore, consideration should be given to installing the equipment in an environment compatible with the manufacturer's maximum rated ambient temperature (TMRA).

Airflow

Equipment should be mounted into a rack so that the amount of airflow required for safe operation is not compromised.

Mechanical Loading

Equipment should be mounted into a rack so that a hazardous condition does not arise due to uneven mechanical loading.

Circuit Overloading

Consideration should be given to the connection of the equipment to the power supply circuitry and the effect that any possible overloading of circuits might have on overcurrent protection and power supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

Reliable Ground

A reliable ground must be maintained at all times. To ensure this, the rack itself should be grounded. Particular attention should be given to power supply connections other than the direct connections to the branch circuit (i.e. the use of power strips, etc.).

2.3 Installing the Rails

This section provides information on installing the CSE-HS101-R000NFP chassis into a rack unit with the rails provided. There are a variety of rack units on the market, which may mean that the assembly procedure will differ slightly from the instructions provided. You should also refer to the installation instructions that came with the rack unit you are using.

Note: This rail will fit a rack between 26.5" and 36.4" deep.

Identifying the Rails

The chassis package includes two rail assemblies. Each assembly consists of three sections: An inner rail that secures directly to the chassis, an outer rail that secures to the rack, and a middle rail which extends from the outer rail. These assemblies are specifically designed for the left and right side of the chassis and labeled.

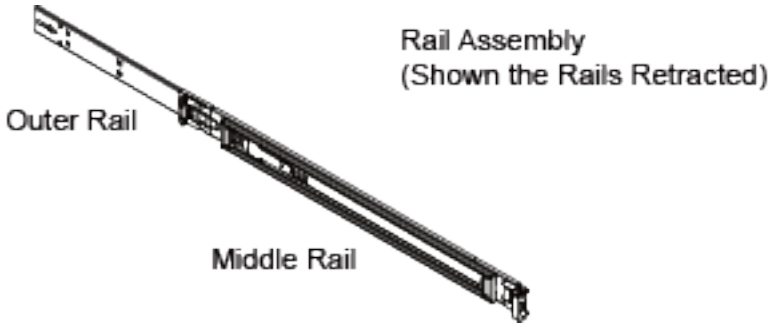


Figure 2-1. Identifying the Rails

Important: Slide rail mounted equipment is not to be used as a shelf or a work space.

Important: Do not pick up the server with the front handles. They are designed to pull the system from a rack only.

Releasing the Inner Rail

It is necessary to release the inner rail from the middle and outer rails before installing the inner rail on the CSE-HS101-R000NFP chassis.

Releasing the Inner Rail from the Middle and Outer Rails

1. Lift the front latch on the inner rail and pull the inner rail out of the middle rail, and the middle rail out of the outer rail until the rails are fully extended.

2. Press down the locking lever on the inside of the inner rail to release the inner rail. Continue to pull the inner rail out of the middle rail.

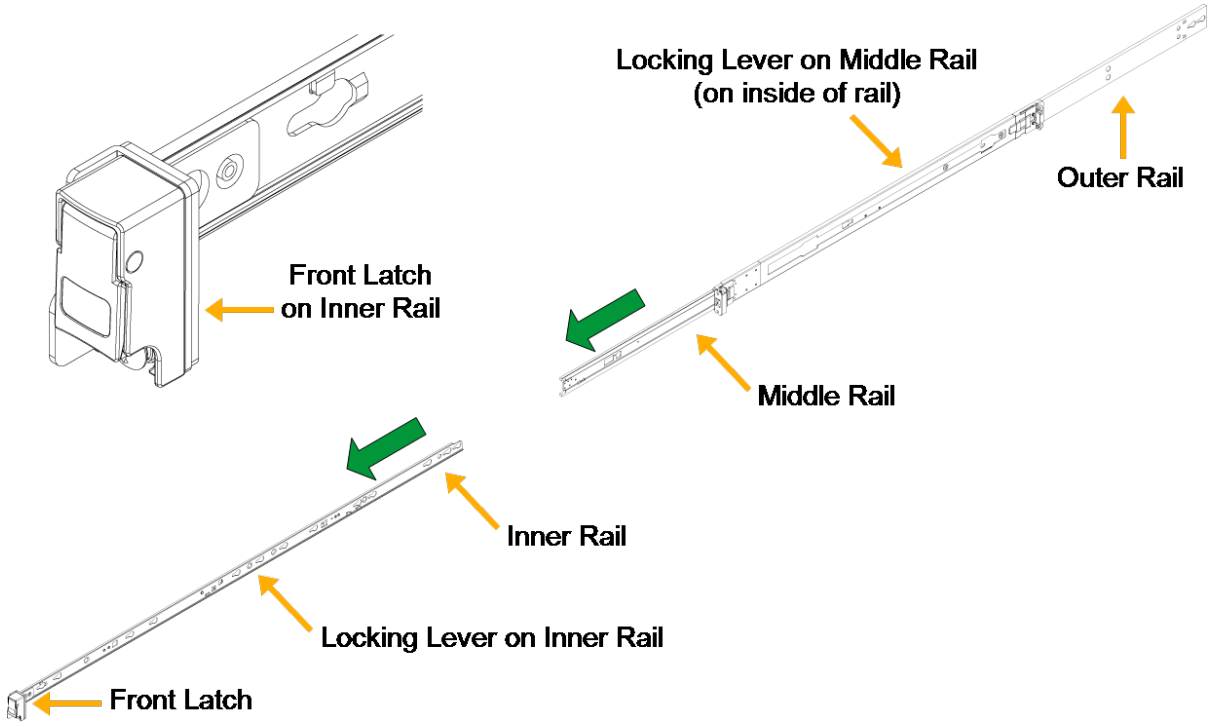


Figure 2-2. Extending the Rails and Releasing the Inner Rail

Installing the Inner Rails onto the Chassis

Begin the rack mounting procedure by installing the inner rails to the CSE-HS101-R000NFP chassis.

1. Confirm that the left and right inner rails have been correctly identified.
2. Place the inner rail firmly against the side of the chassis, aligning the pins on the side of the chassis with the holes in the inner rail.
3. Slide the inner rail toward the rear of the chassis until the pins are at the end of the narrow slot, which secures the inner rail to the chassis.
4. Secure the inner rail to the chassis with a screw.
5. Repeat for the other inner rail.

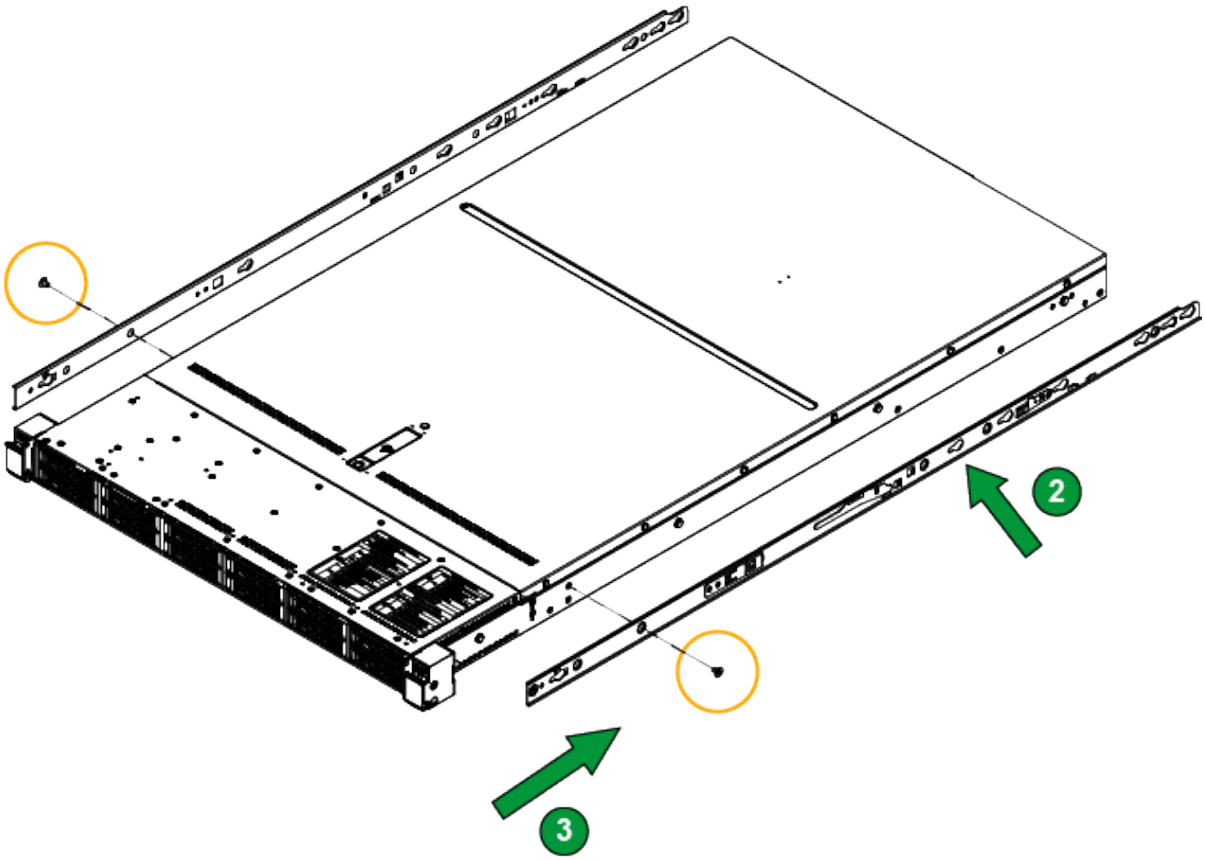


Figure 2-3. Installing the Inner Rails

Installing the Outer Rails onto the Rack

After the inner rails are installed onto the CSE-HS101-R000NFP chassis, begin installing the outer rails onto the rack.

1. Confirm that the left and right outer rails have been correctly identified.
2. Release the small locking lever on the inside of the middle rail and push the middle rail back into the outer rail.
3. Insert the pins at the front of the outer rail into the square holes on the front of the rack. Push until the latch snaps into place.
4. The outer rail is actually two pieces that slide to lengthen. Pull out the rear of the outer rail, adjusting the length until the square pin assembly passes, then fits against the back of the rear post. Be careful to keep the rail level.
5. Insert the pins at the rear of the outer rail into the square holes on the rear of the rack. Push until the latch snaps into place.
6. Repeat for the other outer rail.

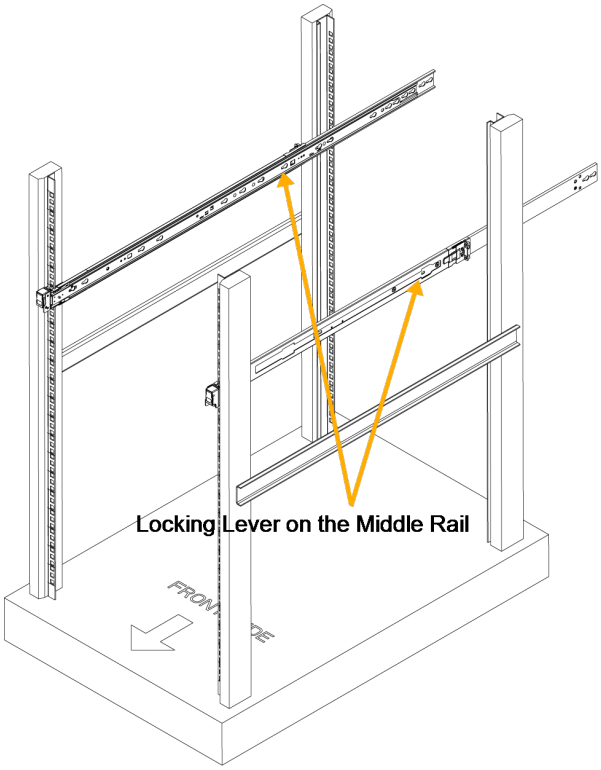


Figure 2-4. Installing the Outer Rails

Important: This figure is for illustrative purposes only. Always install servers to the bottom of a rack first.

2.4 Installing the Chassis into the Rack

After the rails are installed on the CSE-HS101-R000NFP chassis and on the rack, the server can be installed in the rack. It is heavy and requires two to three people to lift.

Installing the Chassis

1. Pull both middle rails out the front of the outer rail until each clicks to a stop.
2. Align the inner rails on the chassis with the front of the middle rails.
3. Slide the inner rails on the chassis into the middle rails, keeping the pressure even on both sides. When partially in, the locking levers will stop further progress.
4. Press down the locking levers on the inside of the inner rails and push the chassis all the way into the rear of the rack. The front latches will click into place.

The chassis is now mounted in the rack. It can be pulled partially out for service by lifting both front latches.

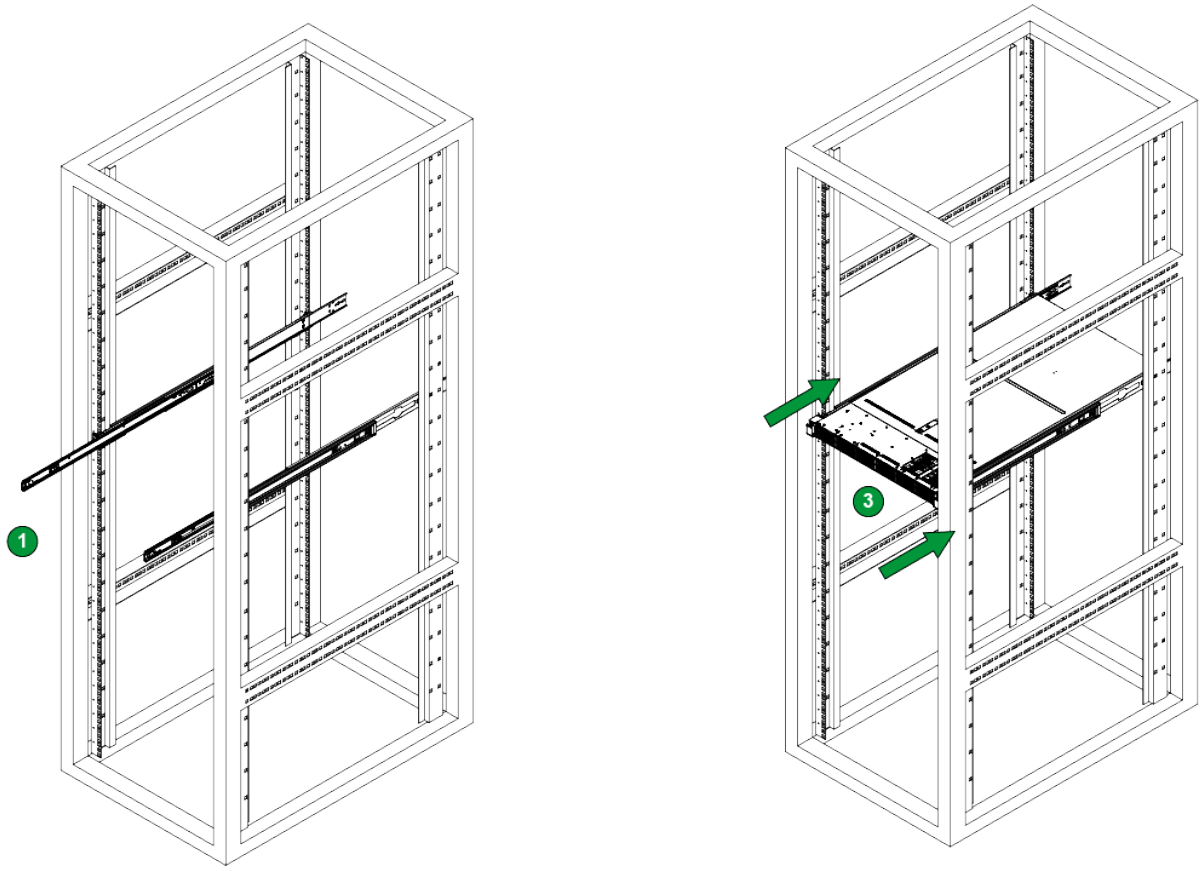


Figure 2-5. Installing the Chassis into the Rack

Important: This figure is for illustrative purposes only. Always install servers to the bottom of a rack first.

Removing the Chassis from the Rack

1. Lift the right and left front latches on either side of the front panel.
2. Pull the chassis forward until it clicks to a stop.
3. Press down the locking lever on the inside of the inner rail (see Releasing the Inner Rail) to release the chassis. Continue to pull the chassis out of the middle rails.

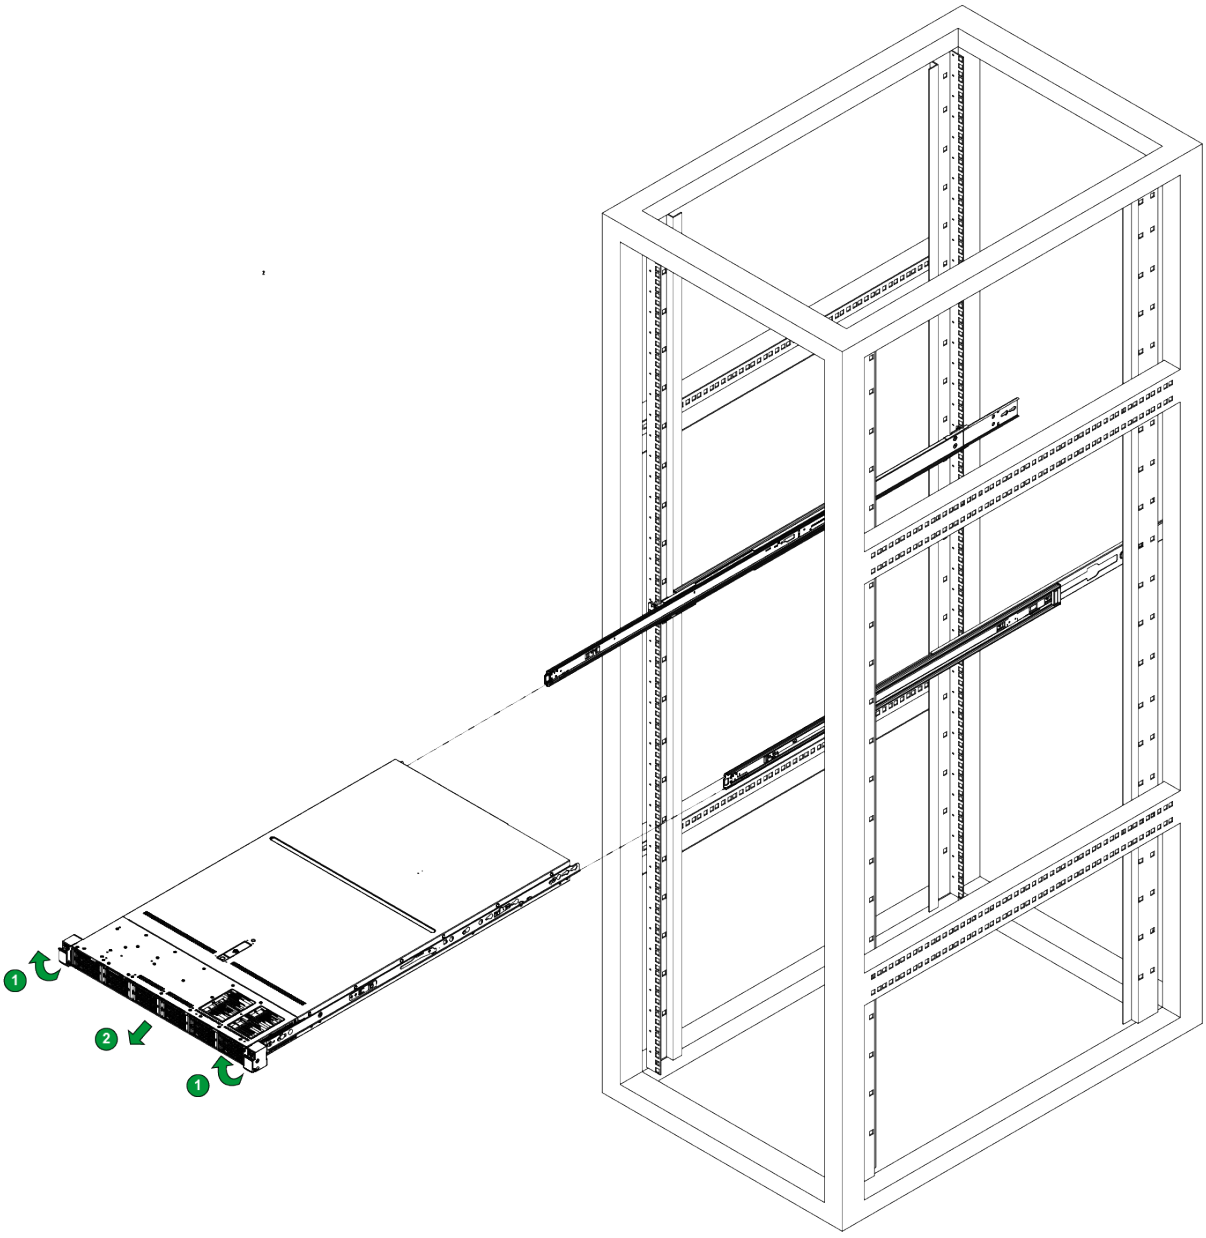


Figure 2-6. Removing the Chassis from the Rack

Important: This figure is for illustrative purposes only. Always install servers to the bottom of a rack first.

Chapter 3:

Maintenance and Component Installation

This chapter provides instructions on installing and replacing main system components for the SYS-112HA-TN server. To prevent compatibility issues, only use components that match the specifications and/or part numbers given.

Installation or replacement of most components require that power first be removed from the system. Follow the procedures given in each section.

3.1 Removing Power **41**
3.2 Accessing the System **42**
Removing the Chassis Cover 42
3.3 Static-Sensitive Devices **43**
Precautions 43
3.4 Processor and Heatsink Installation **44**
Socket BR LGA7529 Processors 45
Overview of the Processor Carrier 45
Overview of the Processor Socket 48
Overview of the Processor Heatsink Module 48
Installing the Processor 50
Assembling the Processor Heatsink Module 52
Preparing to Install the PHM into the Processor Socket 53
Preparing the Processor Socket for Installation 55
Installing the Processor Heatsink Module 56
Removing the Processor Heatsink Module 59
3.5 Memory Support and Installation **63**
Memory Support 63
General Guidelines for Optimizing Memory Performance 66
DIMM Installation 66
DIMM Removal 68
3.6 Motherboard Battery Removal and Installation **70**
Battery Removal 70
Proper Battery Disposal 70

Battery Installation 70
3.7 Storage Drives **71**
Removing Drive Carriers from the Chassis 71
Installing a 2.5" Drive 72
Hot-Swap for NVMe Drives 73
3.8 System Cooling **75**
Fans 75
Air Shroud 76
3.9 Expansion Cards **77**
Riser Cards 77
AIOM Cards 79
3.10 Power Supply **81**
Replacing the Power Supply 81
3.11 Cable Routing Diagrams **82**

3.1 Removing Power

Before performing some setup or maintenance tasks, use the following procedure to ensure that power has been removed from the SYS-112HA-TN server. This step is necessary when removing or installing non hot-swap components or when replacing a non-redundant power supply.

1. Use the operating system to power down the system.
2. After the system has completely shut-down, disconnect the AC power cord(s) from the power strip or outlet.
3. Disconnect the power cord(s) from the power supply module(s).

3.2 Accessing the System

The SYS-112HA-TN features a removable top cover for access to the internal components. When performing service on components inside the system, remove the system from the rack and place it on a work bench or desk. *Do not service with the system extended from the rack.*

Removing the Chassis Cover

The top cover can be removed to access the chassis fans while the server continues to operate.

Remove the screws securing the cover, release the latch, then lift the cover.

Important: Except for short periods of time, do not operate the server without the cover in place. The chassis cover must be in place to allow for proper airflow and to prevent overheating.

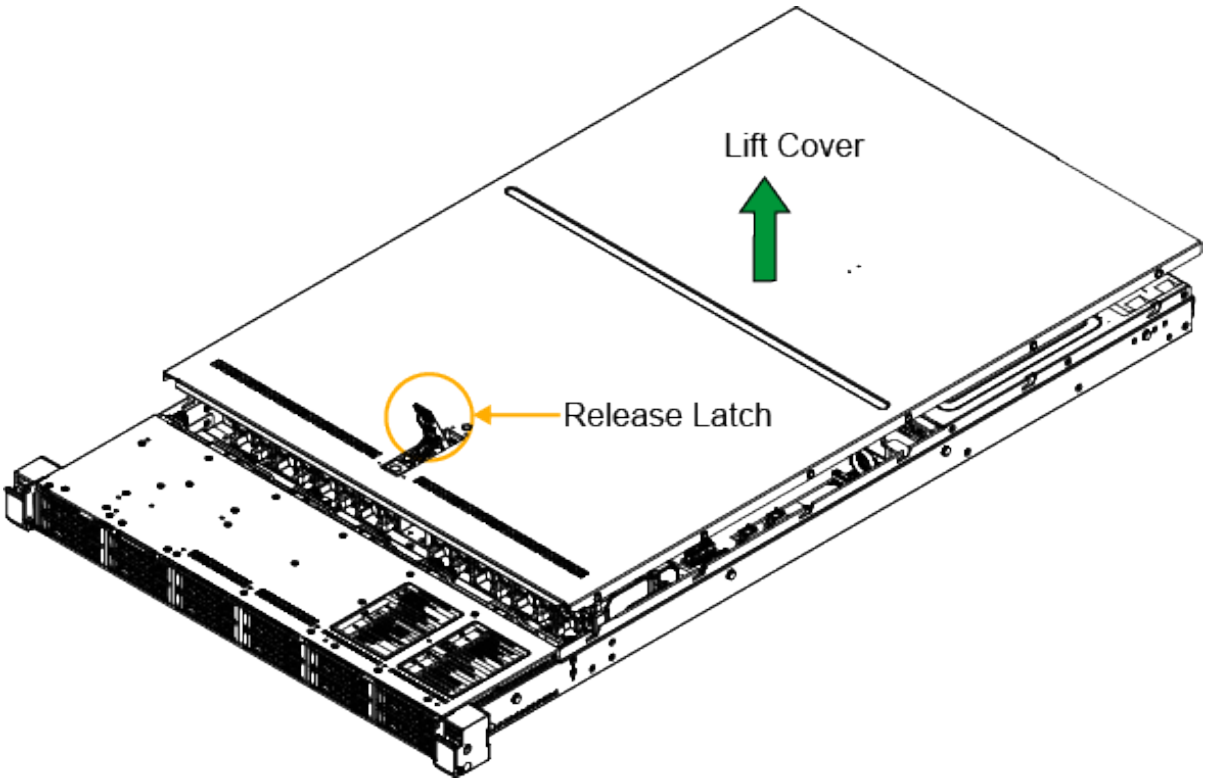


Figure 3-1. Removing the System Cover

3.3 Static-Sensitive Devices

Electrostatic Discharge (ESD) can damage electronic components. To avoid damaging your motherboard, it is important to handle it very carefully. The following measures are generally sufficient to protect your equipment from ESD.

Precautions

- Use a grounded wrist strap designed to prevent static discharge.
- Touch a grounded metal object before removing the board from the antistatic bag.
- Handle the motherboard only by its edges. Do not touch its components, peripheral chips, memory modules, or gold contacts.
- When handling chips or modules, avoid touching their pins.
- Put the motherboard and peripherals back into their antistatic bags when not in use.
- For grounding purposes, make sure that your computer chassis provides excellent conductivity between the power supply, the case, the mounting fasteners, and the motherboard.
- Use only the correct type of onboard CMOS battery. To avoid possible explosion, do not install the onboard battery upside down.

3.4 Processor and Heatsink Installation

This section provides procedures to install the processor(s) and heatsink(s).

Notes:

- Take industry standard precautions to avoid ESD damage. For details, see "Static-Sensitive Devices" on the previous page.
- Before starting, make sure that the plastic socket cap is in place and none of the socket pins are bent. If any damage is noted, contact your retailer.
- Do not connect the system power cord before the processor and heatsink installation is complete.
- When handling the processor, avoid touching or placing direct pressure on the LGA lands (gold contacts). Improper installation or socket misalignment can cause serious damage to the processor or processor socket.
- When buying a processor separately, use only a Supermicro certified heatsink.
- Refer to the Supermicro website for the most recent processor support.
- When installing the heatsink, ensure a torque driver set to the correct force is used for each screw.
- Thermal grease is pre-applied on a new heatsink. No additional thermal grease is needed.

Socket BR LGA7529 Processors

Processor Top View



Figure 3-2. Processor

Overview of the Processor Carrier

This section displays the X14SBH-AP motherboard processor carrier.

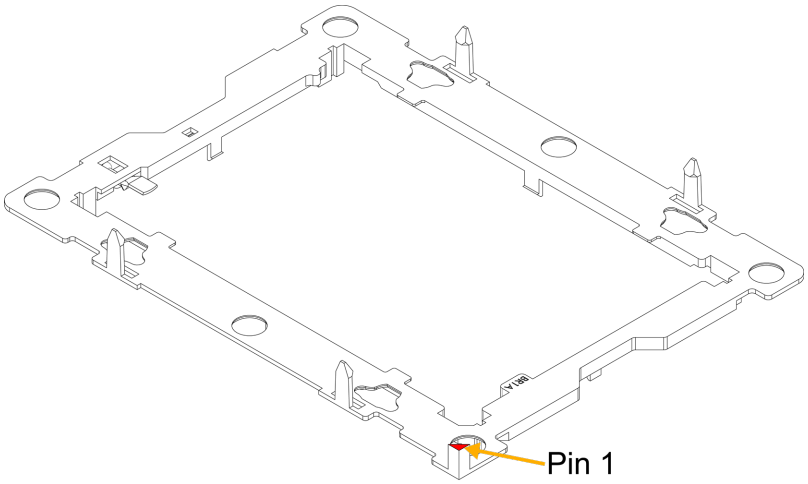


Figure 3-3. Carrier BR1A

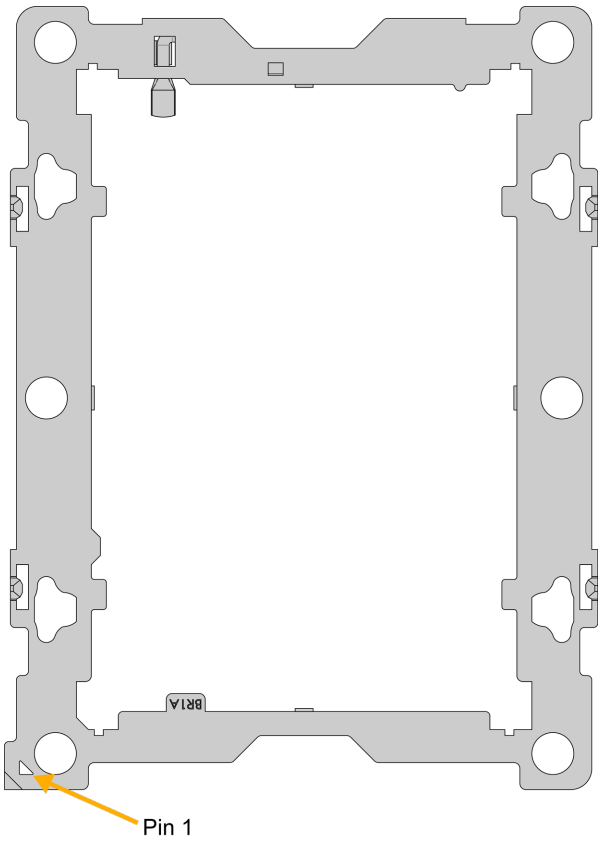


Figure 3-4. Carrier Top View

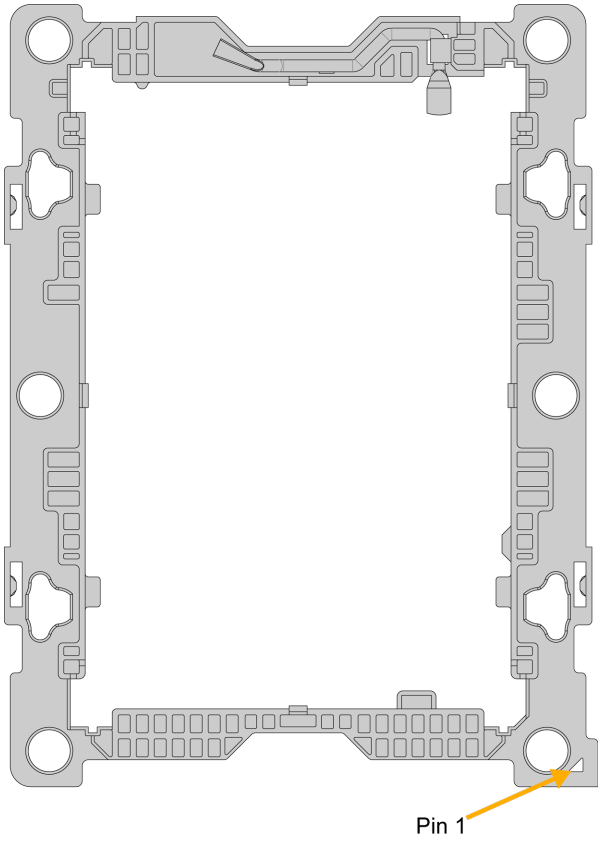


Figure 3-5. Carrier Bottom View

Overview of the Processor Socket

The processor socket is protected by a plastic protective cover.

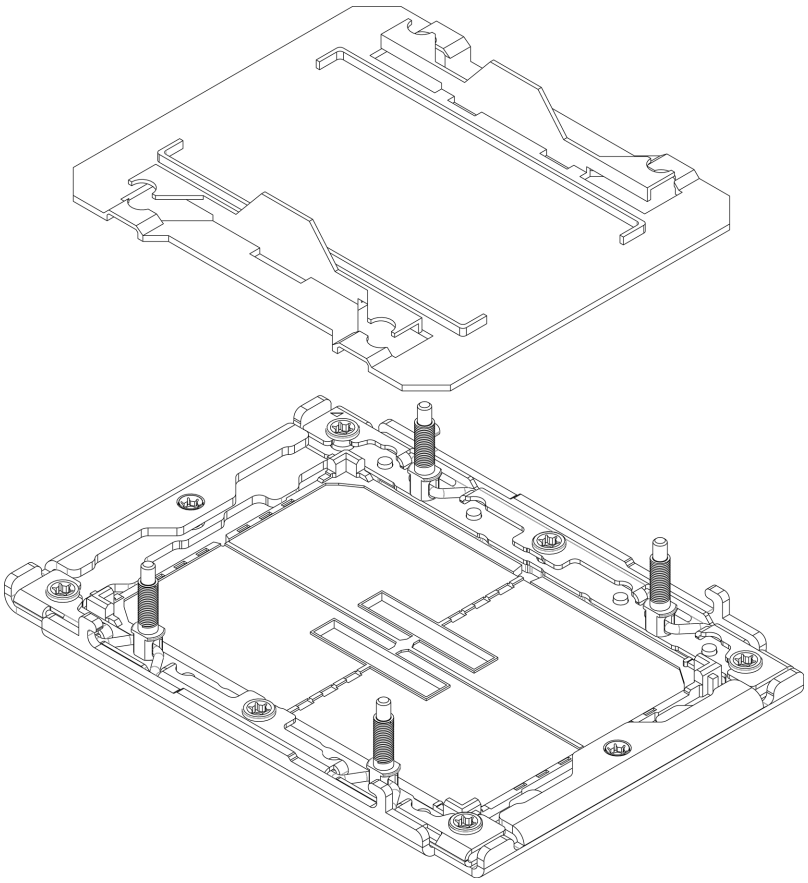


Figure 3-6. Plastic Protective Cover and Processor Socket

Overview of the Processor Heatsink Module

The Processor Heatsink Module (PHM) contains a heatsink, a processor carrier, and the processor.

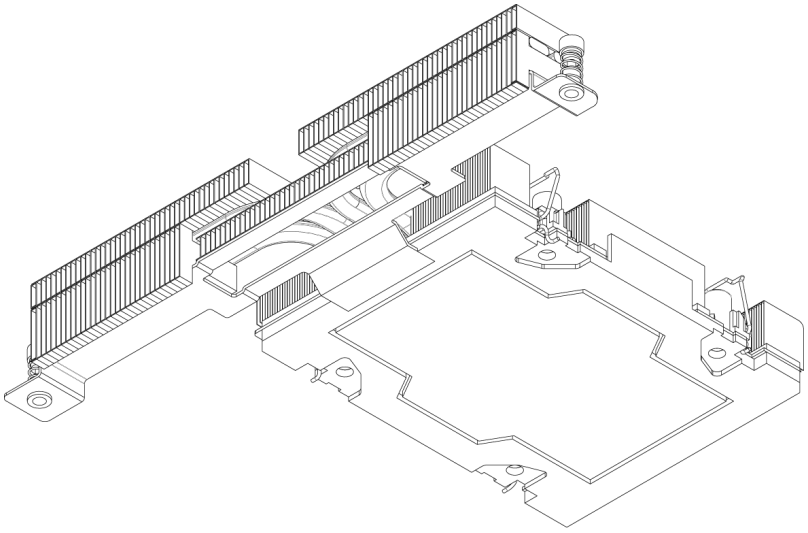


Figure 3-7. 1U Heatsink

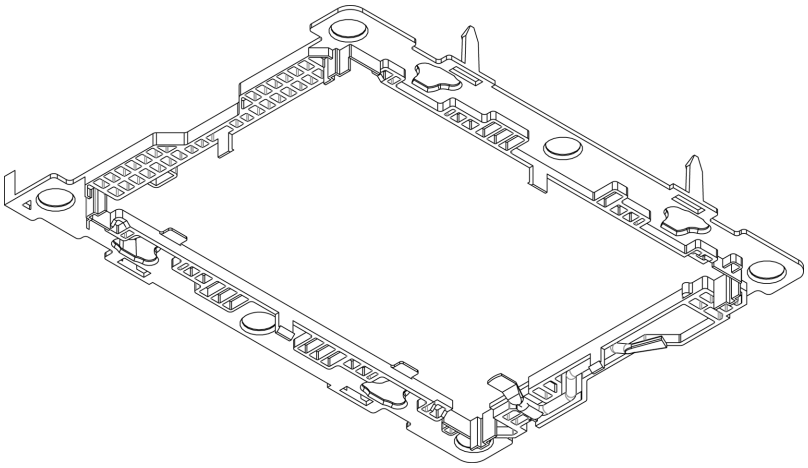


Figure 3-8. Carrier

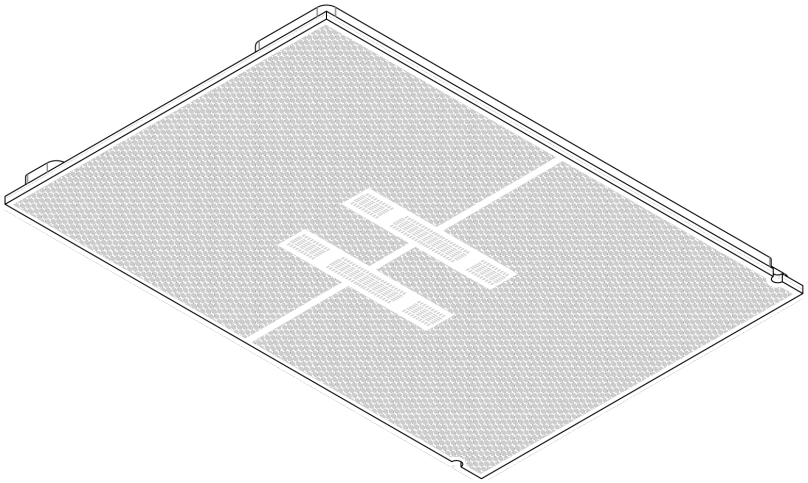


Figure 3-9. Processor

Installing the Processor

To install a processor into the processor carrier, follow the steps below:

1. Ensure the lever on the processor carrier is pressed down and held by a latch on the processor carrier as shown below.

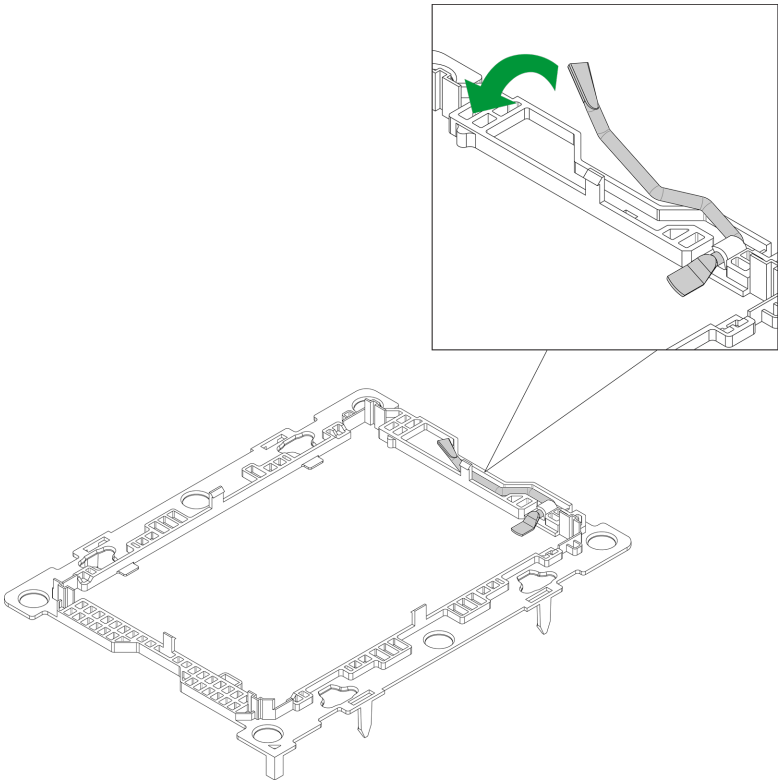


Figure 3-10. Carrier Lever

2. Hold the processor with the LGA lands (gold contacts) facing down. Locate the small, gold triangle in the corner of the processor and the corresponding hollowed triangle on the processor carrier. These triangles indicate pin 1.

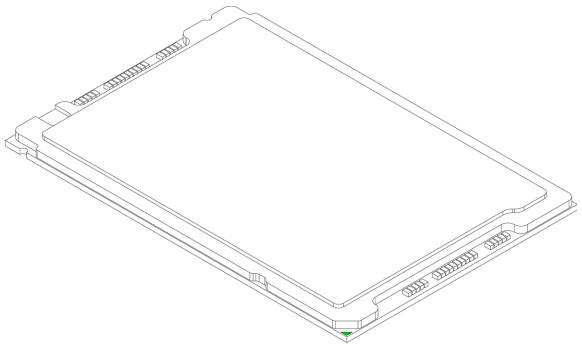


Figure 3-11. Processor

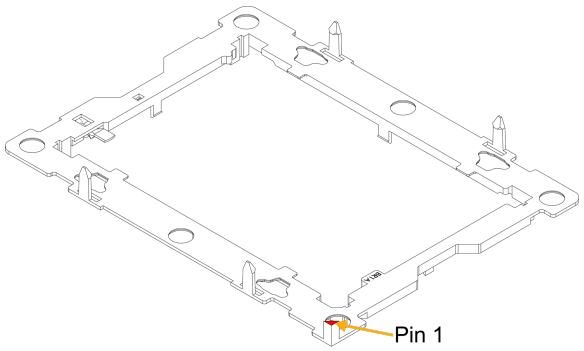


Figure 3-12. Carrier

3. While ensuring that the pin 1 triangles point towards the same direction, flip over the processor and processor carrier. Use the latches on the processor carrier to secure the processor onto the processor carrier. Processor keys on the processor and processor carrier will prevent securing the processor in an incorrect orientation.

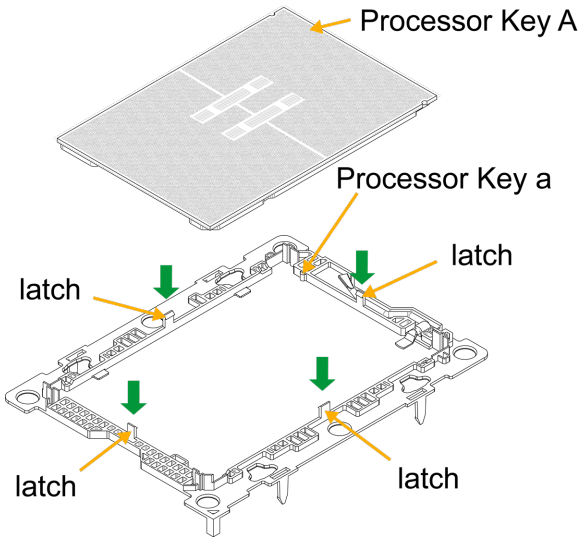


Figure 3-13. Key and Latch Locations

4. Examine all corners to verify that the processor is secured to the carrier. Two triangles indicating pin 1 on the processor and processor carrier should point towards the same direction.

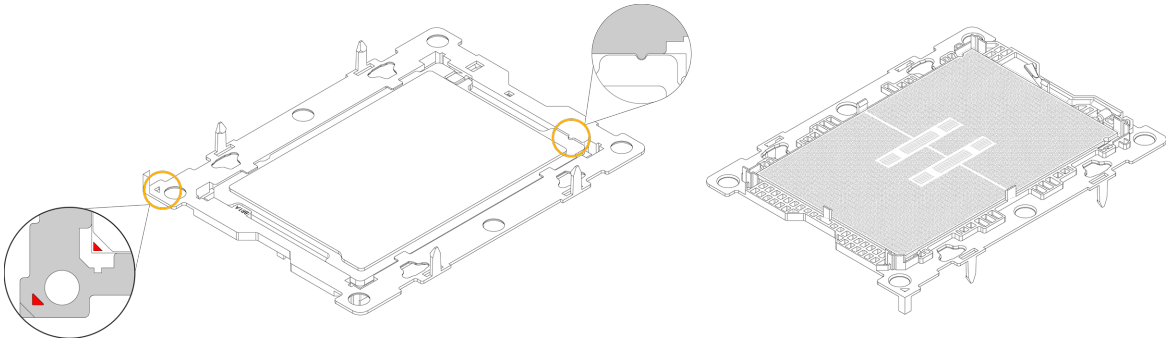


Figure 3-14. Processor and BR1A Keys and Latches

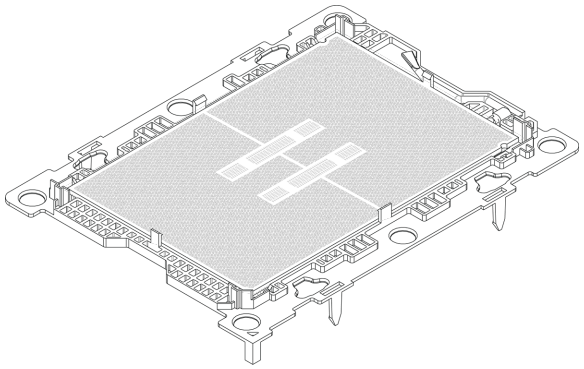


Figure 3-15. Completed Processor Carrier Installation

Assembling the Processor Heatsink Module

After installing the processor into the carrier, mount it onto the heatsink to create the processor heatsink module (PHM):

1. If this is a new heatsink, the thermal grease has been pre-applied. Otherwise, apply the proper amount of thermal grease.
2. Hold the processor carrier so the processor's gold contacts are facing up, then align the holes of the processor carrier with the holes on the heatsink. Press the processor carrier down until it snaps into place. The plastic clips of the processor carrier will lock at the four corners.

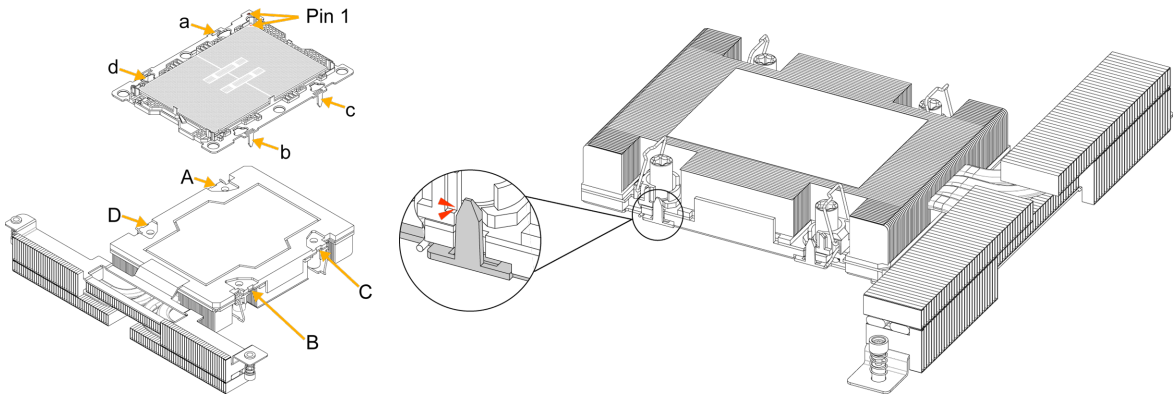


Figure 3-16. Carrier with 1U Heatsink (Left), PHM Plastic Clips Locked (Right)

3. Examine all corners to ensure that the plastic clips on the processor carrier are firmly attached to the heatsink.

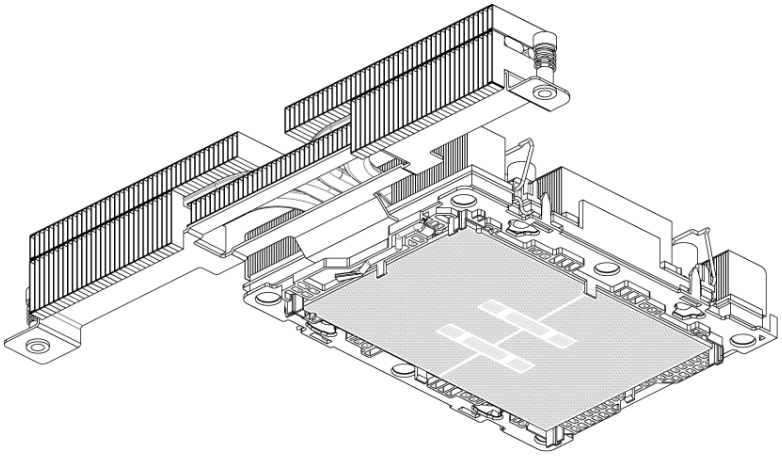


Figure 3-17. PHM Completed

Preparing to Install the PHM into the Processor Socket

After assembling the Processor Heatsink Module (PHM), you are ready to install it into the processor socket. To ensure the proper installation, follow the procedures below:

1. Locate the four threaded fasteners (marked a, b, c, and d) on the processor socket.

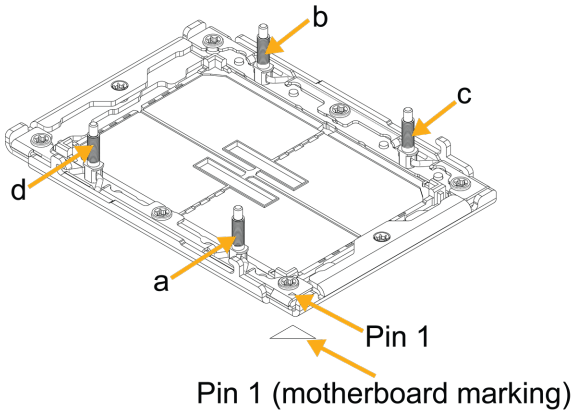


Figure 3-18. Threaded Fasteners

2. Locate the four PEEK nuts (marked A, B, C, and D) and four rotating wires (marked 1, 2, 3, and 4) on the heatsink. Align the PEEK nuts with the threads on the Socket BR LGA7529 (marked a, b, c, d).

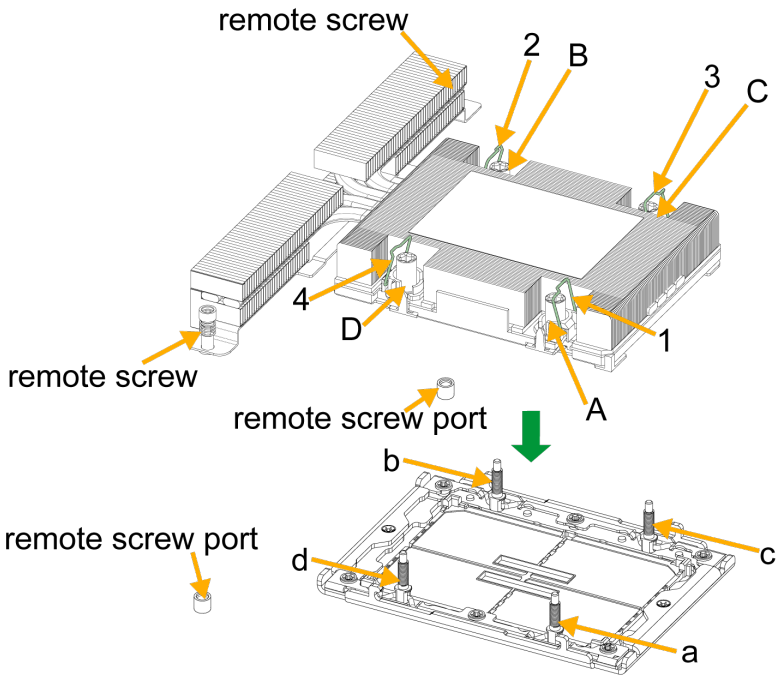


Figure 3-19. PEEK Nuts and Rotating Wires

3. Check the rotating wires (marked 1, 2, 3, and 4) to make sure that they are at unlatched positions before installing the PHM into the processor socket.

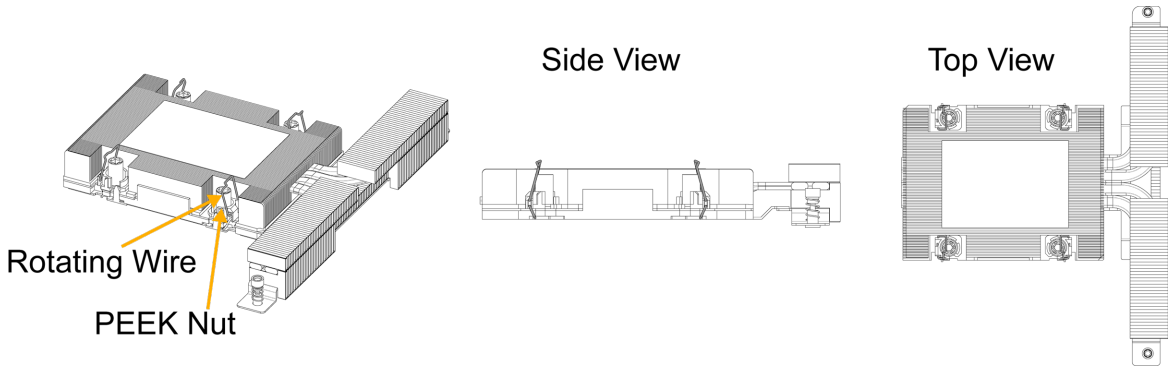


Figure 3-20. Unlatched Positions

Preparing the Processor Socket for Installation

This motherboard comes with a plastic protective cover installed on the processor socket. Remove it from the socket to install the Processor Heatsink Module (PHM). Gently pull up one corner of the plastic protective cover to remove it.

1. Press the tabs inward.

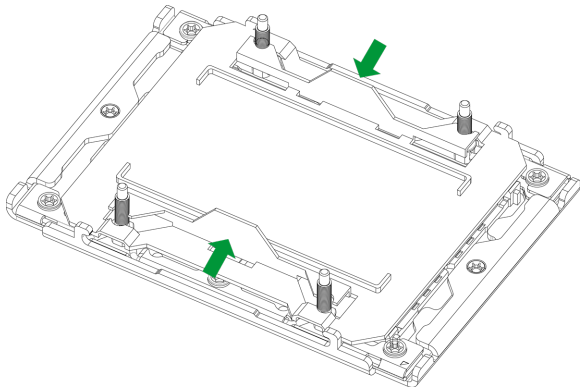


Figure 3-21. Processor Socket with Plastic Protective Cover

2. Pull up the protective cover from the socket.

Note: Do not touch or bend the socket pins.

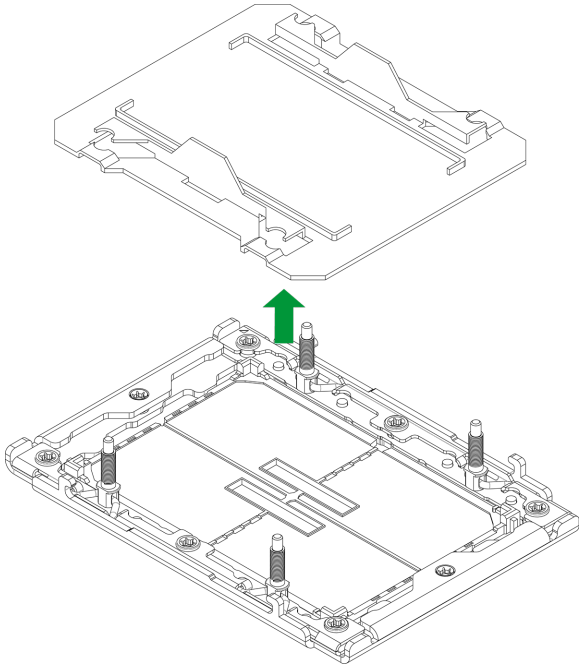


Figure 3-22. Plastic Protective Cover Removed

Installing the Processor Heatsink Module

1. Align pin 1 of the PHM with the printed triangle on the processor socket.
2. Make sure all four PEEK nuts of the heatsink (marked A, B, C, and D) are aligned with the threaded fasteners (marked a, b, c, and d), then gently place the heatsink on top of the processor socket.

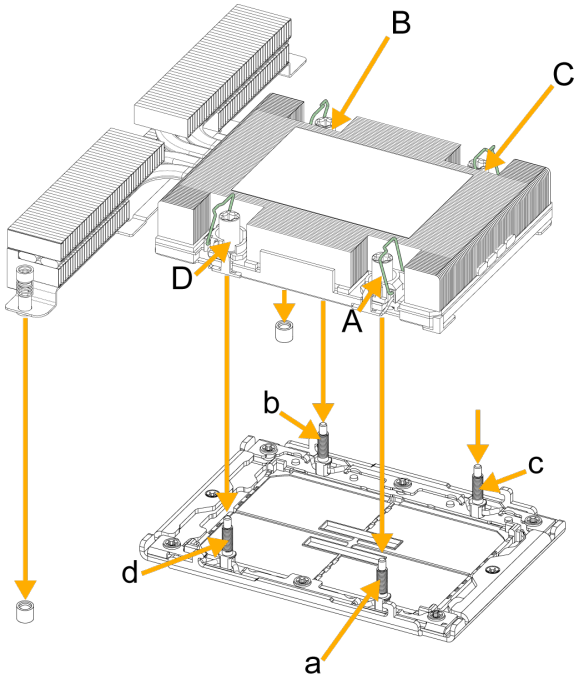


Figure 3-23. Aligning the 1U Heatsink with the Socket

3. Press all four rotating wires inwards and make sure that the heatsink is securely latched into the processor socket.

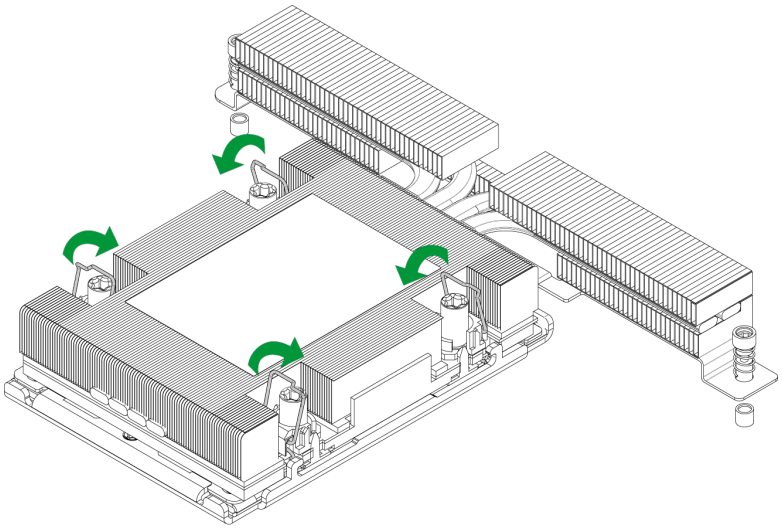


Figure 3-24. Latching the PHM

4. With a T30 bit torque driver set to a force of 8.0 lbf-in (0.904 N-m), gradually tighten the four screws to ensure even pressure. You can start with any screw, but make sure to tighten the screws in a diagonal pattern.

Important: Do not use a force greater than 8.0 lbf-in (0.904 N-m). Exceeding this force may over-torque the screw, causing damage to the processor, heatsink, and screw.

5. Examine all corners to ensure that the PHM is firmly attached to the socket.

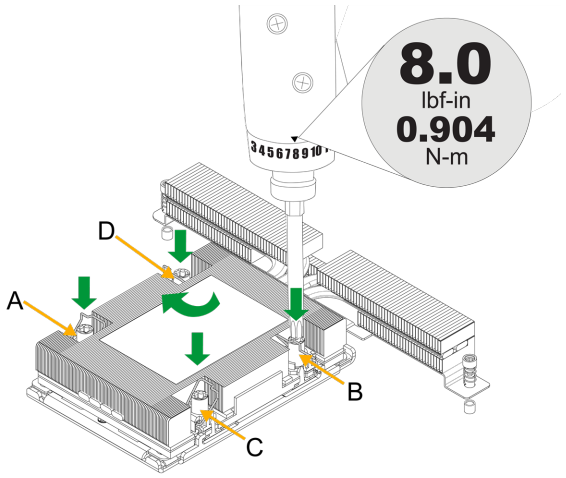


Figure 3-25. Installing the PHM with a Torque Driver

6. With a T30 bit torque driver set to a force of 2.6 lbf-in (0.294 N-m), tighten the remote screws in the following order: 1 and 2.

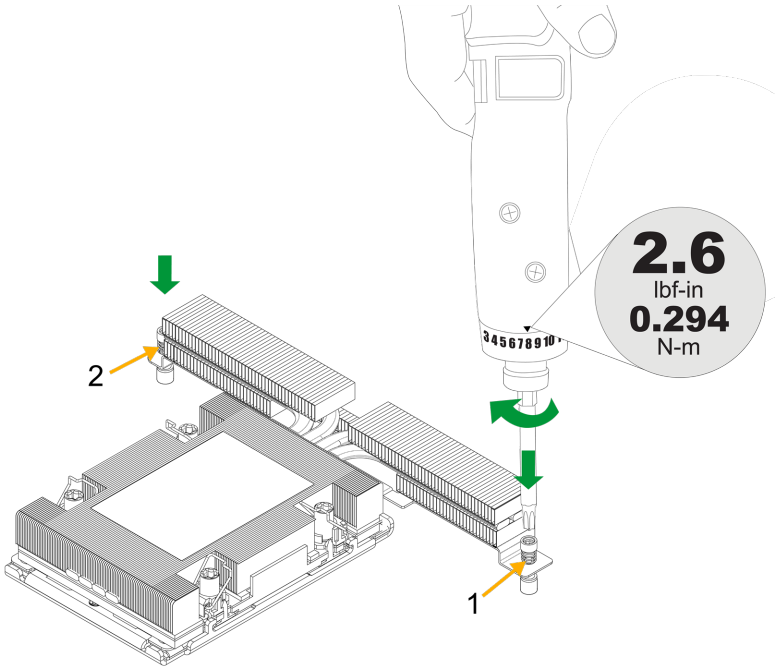


Figure 3-26. Tightening the Remote Screws with a Torque Driver

Removing the Processor Heatsink Module

Before removing the processor heatsink module (PHM) from the motherboard, shut down the system and then unplug the AC power cord from all power supplies.

Then follow the steps below:

1. Use a screwdriver to loosen the remote screws.

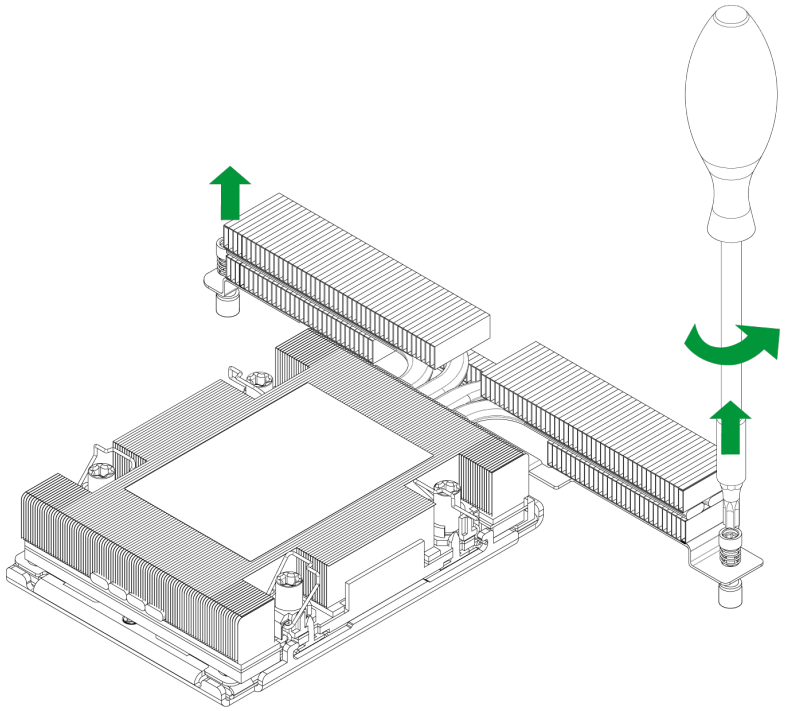


Figure 3-27. Loosening the Remote Screws

2. Use a screwdriver to loosen the four screws. You can start with any screw, but make sure to loosen the screws in a diagonal pattern.

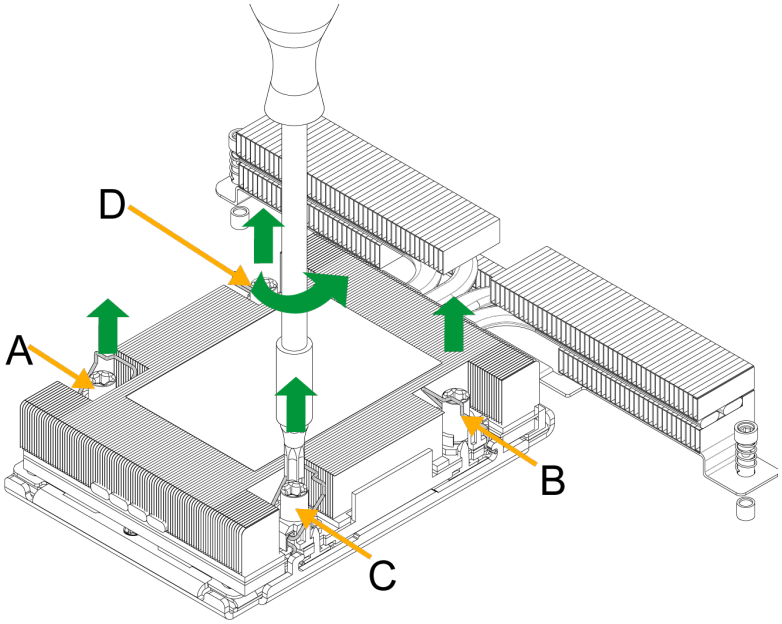


Figure 3-28. Loosening the Screws

3. Press the four rotating wires outwards to unlatch the PHM from the socket.

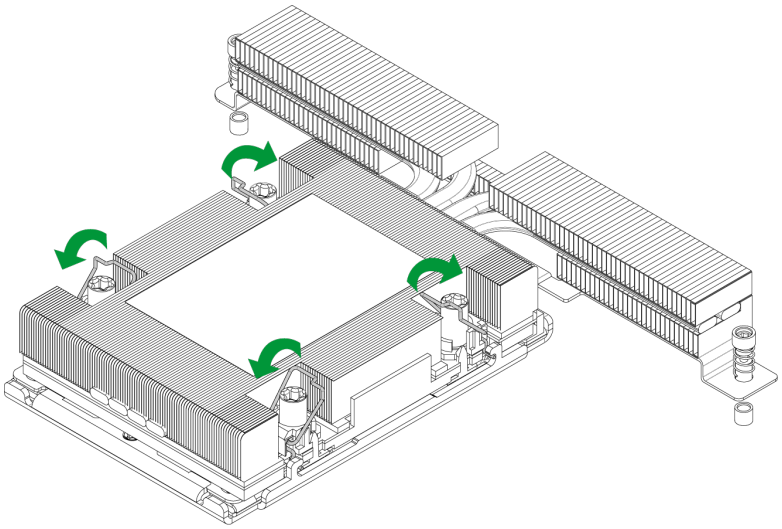


Figure 3-29. Unlatching the PHM

4. Gently lift the PHM upwards to remove it from the socket.

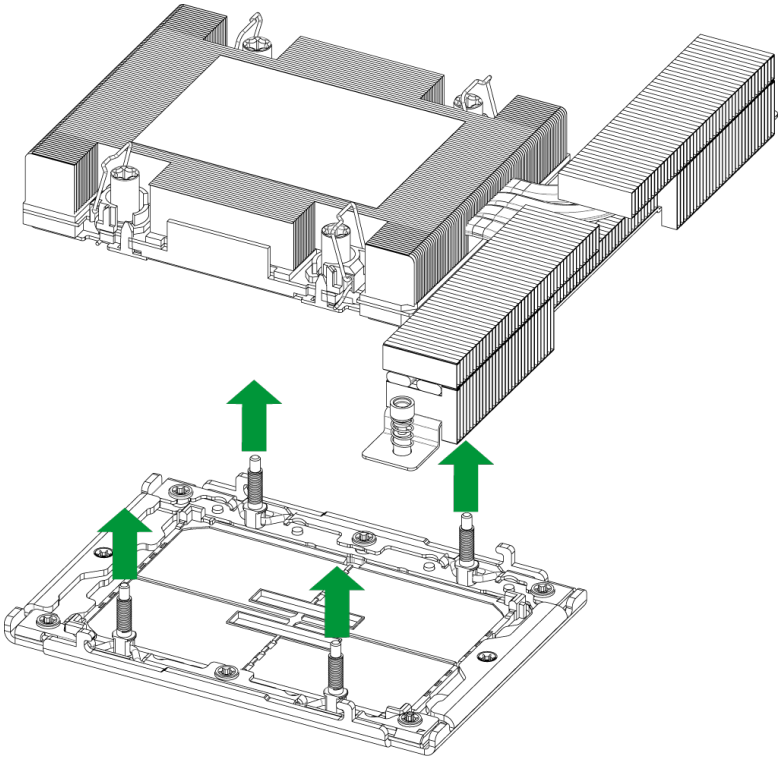


Figure 3-30. Removing the PHM from the Socket

5. To remove the processor from the heatsink, gently lift the lever from the processor carrier.

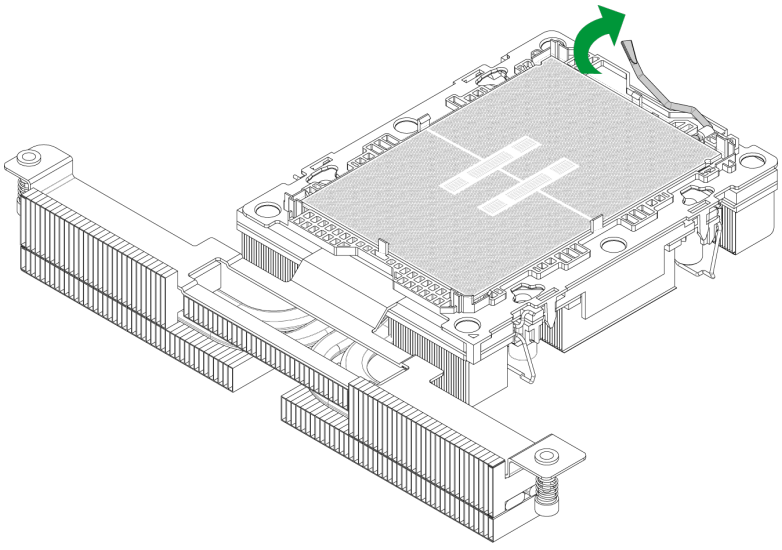


Figure 3-31. Carrier with 1U Heatsink

6. To remove the processor, move the lever to its unlocked position and gently remove the processor.

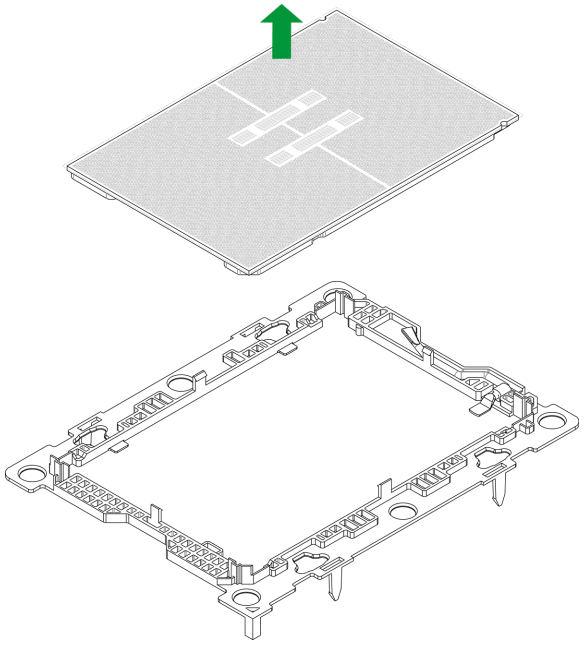


Figure 3-32. Removing the Processor

3.5 Memory Support and Installation

Important: To prevent any damage, exercise extreme care when installing or removing memory modules.

Note: Check the Supermicro website for recommended memory modules.

Memory Support

The X14SBH-AP motherboard supports up to 3 TB of 3DS RDIMM/MRDIMM DDR5 ECC memory with speeds of up to 8800 MT/s in 12 memory slots.

DDR5 Memory Support for Intel® Xeon® 6900-Series Processors with P-Cores					
Type	Ranks Per DIMM, Data Width (Stack)	DIMM Capacity (GB)			Speed (MT/s); Voltage (V); Slots per Channel (SPC) and DIMMs per Channel (DPC)
		DRAM Density			1DPC/1SPC
		16 Gb	24 Gb	32 Gb	+1.1 V
RDIMM	1Rx4	32 GB	48 GB	-	6400, 6000, 5600, 5200, 4800 (DDR5-6400 rated RDIMMs only)
	2Rx8	32 GB	48 GB	-	
	2Rx4	64 GB	96 GB	128 GB	
3DS RDIMM	8Rx4	256 GB	-	-	
	4Rx4	-	-	256 GB	
MRDIMM	2Rx8	32 GB	48 GB	-	8800, 8000, 7200 (MRDIMM-8800 only)
	2Rx4	64 GB	96 GB	128 GB	
	4Rx8	64 GB	96 GB	-	
	4Rx4 (2U)	128 GB	-	-	
	4Rx4 (2U)	-	-	256 GB	

Notes:

- Intel Xeon 6900-series processors with P-cores supports 1DPC configuration only
- Intel Xeon 6900-series processors with P-cores supports 1DIMM per processor socket with the following DIMM configuration only: 32 GB 2Rx8

CXL Memory Configuration Support for Intel® Xeon® 6900-Series Processors with P-Cores								
Native DDR5 Memory Per Socket				CXL Memory Per Socket				
Slot 1 DIMM Ranks	SLOT 1 DIMM Capacity (GB)	DIMM Type	DRAM Density (Gb)	CXL Memory Channels	CXL Memory Type	CXL Capacity Per Device/Module	CXL Interleave	CXL Mode
2Rx4	64	10x4	16	1+1	DDR5 x16	2ch 64 GB	Hetero x16	Hetero
2Rx4	64	10x4	16	2+2+2+2	DDR5 x8	64 GB	1x8*, 2x4, 4x2	1LM+Vol
2Rx4	64	10x4	16	1+1+1	DDR4 x8	128 GB	1x3 (BIOS)	1LM + Intel Flat Memory Mode

Notes:

1. The items with an asterisk (*) are the default settings in the BIOS
2. The Intel Xeon 6900-series processors with P-cores CXL memory configurations are 1DPC only for native DDR5
3. CXL Memory Channel: number of devices per root port, with root ports separated by "+", e.g. 2+2+2+2 = four root ports populated with two devices per root port
4. CXL Interleave: sets x ways, e.g. 2x4 = Set of two modules, interleaved four-way
5. CXL Modes:

- 1LM + Vol = DDR5 ('1LM') and (volatile) CXL memory visible to SW as separate tiers, separately interleaved
- Hetero x16 = DDR5 and (volatile) CXL memory interleaved together in one 16-way set
- Flat Memory Mode = HW manages data movement between DDR5 and CXL memory, total capacity visible to SW

Intel® Xeon® 6900-Series Processors with P-Cores DDR5 Memory Population Table (1 Processor and 12 DIMMs Installed, 1DPC)	
DIMM Counts	***Memory Population Sequence (1DPC)***

Intel® Xeon® 6900-Series Processors with P-Cores DDR5 Memory Population Table (1 Processor and 12 DIMMs Installed, 1DPC)	
1 Processor and 1 DIMM (Recommended)	P1-DIMMA1
1 Processor and 8 DIMMs	P1-DIMMC1/P1-DIMMD1/P1-DIMME1/P1-DIMMF1/P1-DIMMI1/P1-DIMMJ1/P1-DIMMK1/P1-DIMML1
1 Processor and 8 DIMMs	P1-DIMMA1/P1-DIMMB1/P1-DIMMD1/P1-DIMME1/P1-DIMMG1/P1-DIMMH1/P1-DIMMJ1/P1-DIMMK1
1 Processor and 8 DIMMs	P1-DIMMA1/P1-DIMMB1/P1-DIMMC1/P1-DIMMF1/P1-DIMMG1/P1-DIMMH1/P1-DIMMI1/P1-DIMML1
1 Processor and 12 DIMMs (Recommended)	P1-DIMMA1/P1-DIMMB1/P1-DIMMC1/P1-DIMMD1/P1-DIMME1/P1-DIMMF1/ P1-DIMMG1/P1-DIMMH1/P1-DIMMI1/P1-DIMMJ1/P1-DIMMK1/P1-DIMML1

Intel® Xeon® 6900-Series Processors with P-Cores DDR and MRDIMM Memory Configuration Support Table							
Memory Channels	**DIMM Type**	**Slots Per Channel**	**DIMMs Per Channel**	**Slot 0 DIMM Ranks, Width**	**Slot 0 DIMM Ranks, Capacity (GB)**	**DIMM Organization**	**DIMM Density (Gb)**
12	RDIMM	1	1	2Rx8	32	5x8	16
12	RDIMM	1	1	1Rx4	32	10x4	16
12	RDIMM	1	1	2Rx8	48	5x8	24
12	RDIMM	1	1	1Rx4	48	10x4	24
12	RDIMM	1	1	2Rx4	64	10x4	16
12	RDIMM	1	1	2Rx4	96	10x4	24
12	RDIMM	1	1	2Rx4	128	10x4	32
12	RDIMM	1	1	4H 3DS	256	10x4	16
12	MRDIMM	1	1	2Rx8	32	5x8	16
12	MRDIMM	1	1	2Rx8	48	5x8	24
12	MRDIMM	1	1	2Rx4	64	10x4	16
12	MRDIMM	1	1	4Rx8	64	5x8	16

Intel® Xeon® 6900-Series Processors with P-Cores DDR and MRDIMM Memory Configuration Support Table							
12	MRDIMM	1	1	2Rx4	96	10x4	24
12	MRDIMM	1	1	4Rx8	96	5x8	24
12	MRDIMM	1	1	2Rx4	128	10x4	32

General Guidelines for Optimizing Memory Performance

- It is recommended to use DDR5 memory of the same type, size, and speed.
- Mixed DIMM speeds can be installed. However, all DIMMs will run at the speed of the slowest DIMM.
- The motherboard will support an odd number amount of memory modules. However, to achieve the best memory performance, a balanced memory population is recommended.

DIMM Installation

Important: To avoid causing any damage to the memory module or the DIMM socket, do not use excessive force when pressing the release tabs on the ends of the DIMM socket. Handle memory modules with care. To avoid ESD-related damage to your memory modules or components, carefully follow all the instructions given in "Static-Sensitive Devices" on page 43.

1. Insert the desired number of DIMMs into the memory slots based on the recommended DIMM population table earlier in this section.
2. Push the release tabs outwards on both ends of the DIMM slot to unlock it.

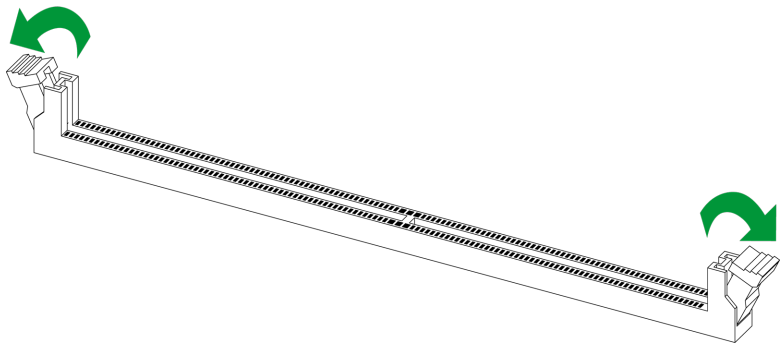


Figure 3-33. Unlocking the DIMM Slot

3. Align the key of the DIMM with the receptive point on the memory slot.

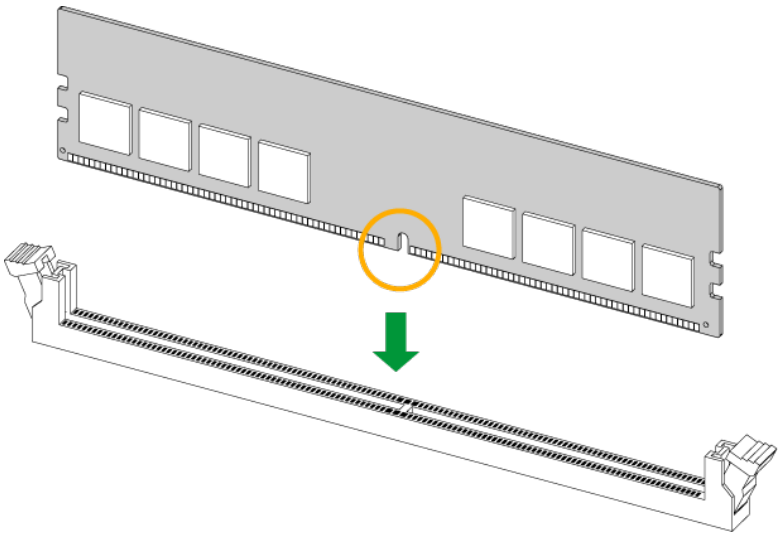


Figure 3-34. Aligning the DIMM Slot with the Receptive Point

4. Align the notches on both ends of the module against the receptive points on the ends of the slot.

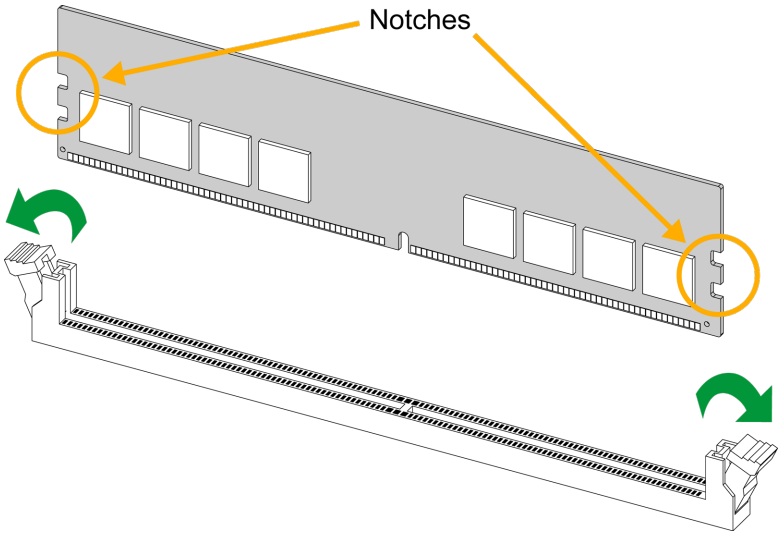


Figure 3-35. Aligning the Notches

5. Press both ends of the module straight down into the slot until the module snaps into place.
6. Press the release tabs to the lock positions to secure the DIMM into the slot.

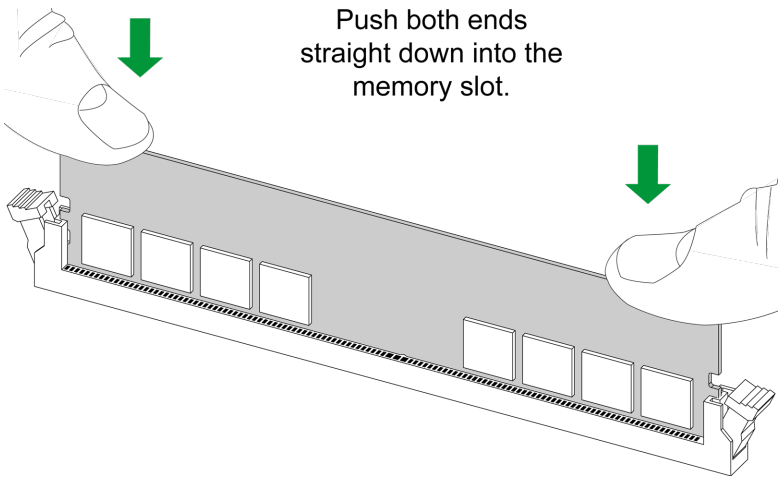


Figure 3-36. Securing the DIMM

For a detailed diagram of the X14SBH-AP motherboard, see the layout under "Motherboard Quick Reference" on page 24.

DIMM Removal

Important: To avoid causing any damage to the memory module or the DIMM socket, do not use excessive force when pressing the release tabs on the ends of the DIMM socket. Handle memory modules with care. To avoid ESD-related damage to your memory modules or components, carefully follow all the instructions given in "Static-Sensitive Devices" on page 43.

Press both release tabs on the ends of the DIMM socket to unlock it. Once the DIMM is loosened, remove it from the memory slot.

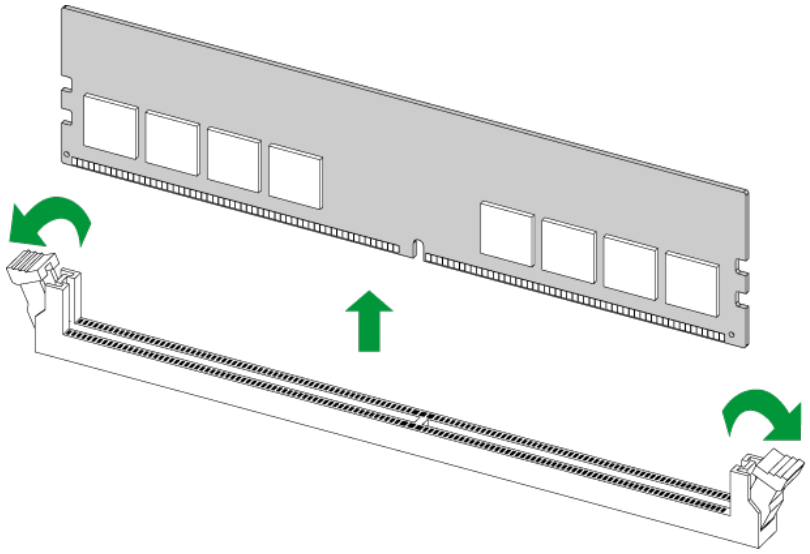


Figure 3-37. Unlocking the DIMM Slot

For a detailed diagram of the X14SBH-AP motherboard, see the layout under "Motherboard Quick Reference" on page 24.

3.6 Motherboard Battery Removal and Installation

Battery Removal

To remove the onboard battery, follow the steps below:

1. Power off your system and unplug your power cable.
2. Place the system on a workbench.
3. Remove the top cover from the system.
4. Locate the onboard battery as shown below.
5. Using a tool such as a pen or a small screwdriver, push the battery lock outwards to unlock it. Once unlocked, the battery will pop out from the holder.
6. Remove the battery.

Proper Battery Disposal

Important: Handle used batteries carefully. Do not damage the battery in any way; a damaged battery may release hazardous materials into the environment. Do not discard a used battery in the garbage or a public landfill. Comply with the regulations set up by your local hazardous waste management agency to dispose of your used battery properly.

Battery Installation

To install an onboard battery, follow steps 1 and 2 above and continue below:

Important: When replacing a battery, be sure to only replace it with the same type.

1. Identify the battery's polarity. The positive (+) side should be facing up.
2. Insert the battery into the battery holder and push it down until you hear a click to ensure that the battery is securely locked.

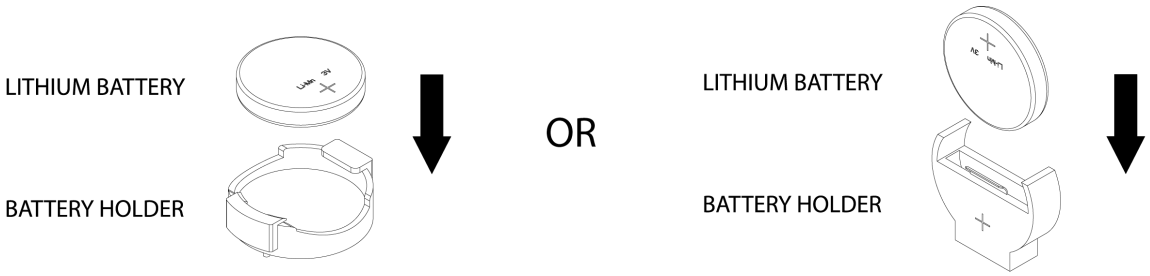


Figure 3-38. Installing a Battery

3.7 Storage Drives

The system supports up to eight front hot-swap 2.5" NVMe/SAS/SATA drive bays and (optional) four hot-swap 2.5" SAS/SATA drive bays.

Note: NVMe/SAS/SATA support may require additional storage controller and/or cables.



Figure 3-39. Logical Drive Numbers

Note: The 2.5” optional storage drives can only be installed during production and are not available for separate purchase. This decision affects PCIe slot lanes and cable compatibility. Please choose wisely during configuration.

Removing Drive Carriers from the Chassis

1. Press the release button on the drive carrier, which will extend the drive carrier handle.
2. Use the drive carrier handle to pull the drive out of the chassis.

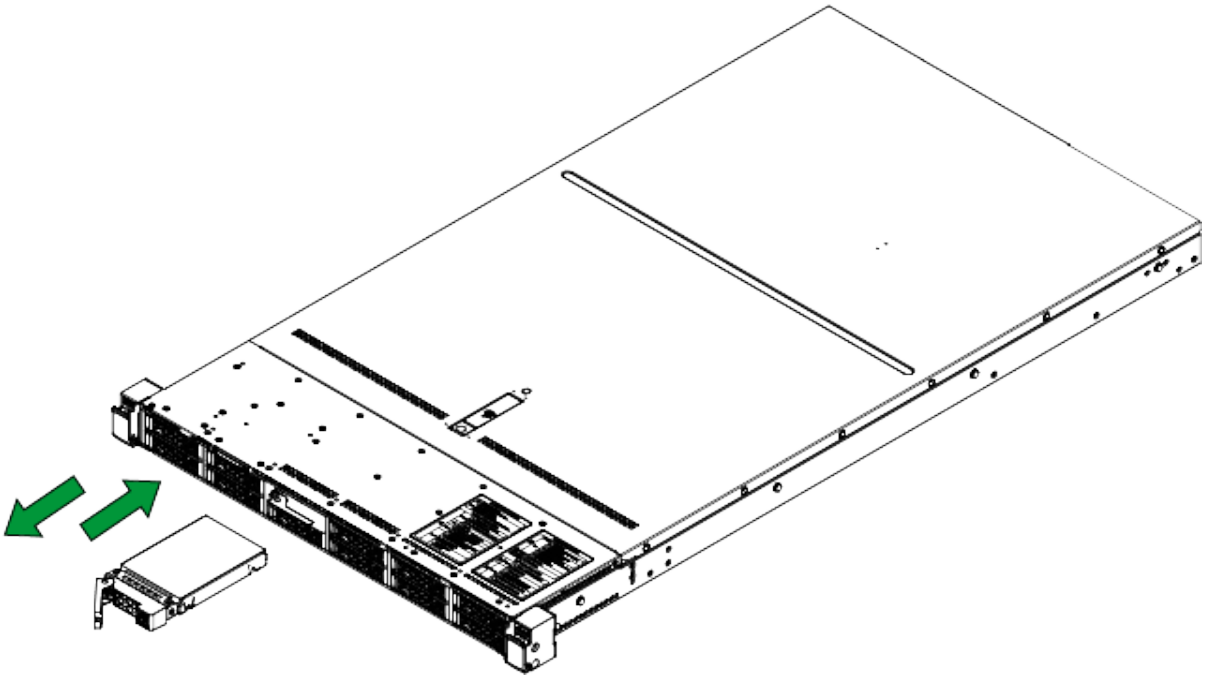


Figure 3-40. Removing Drive Carriers from the Chassis

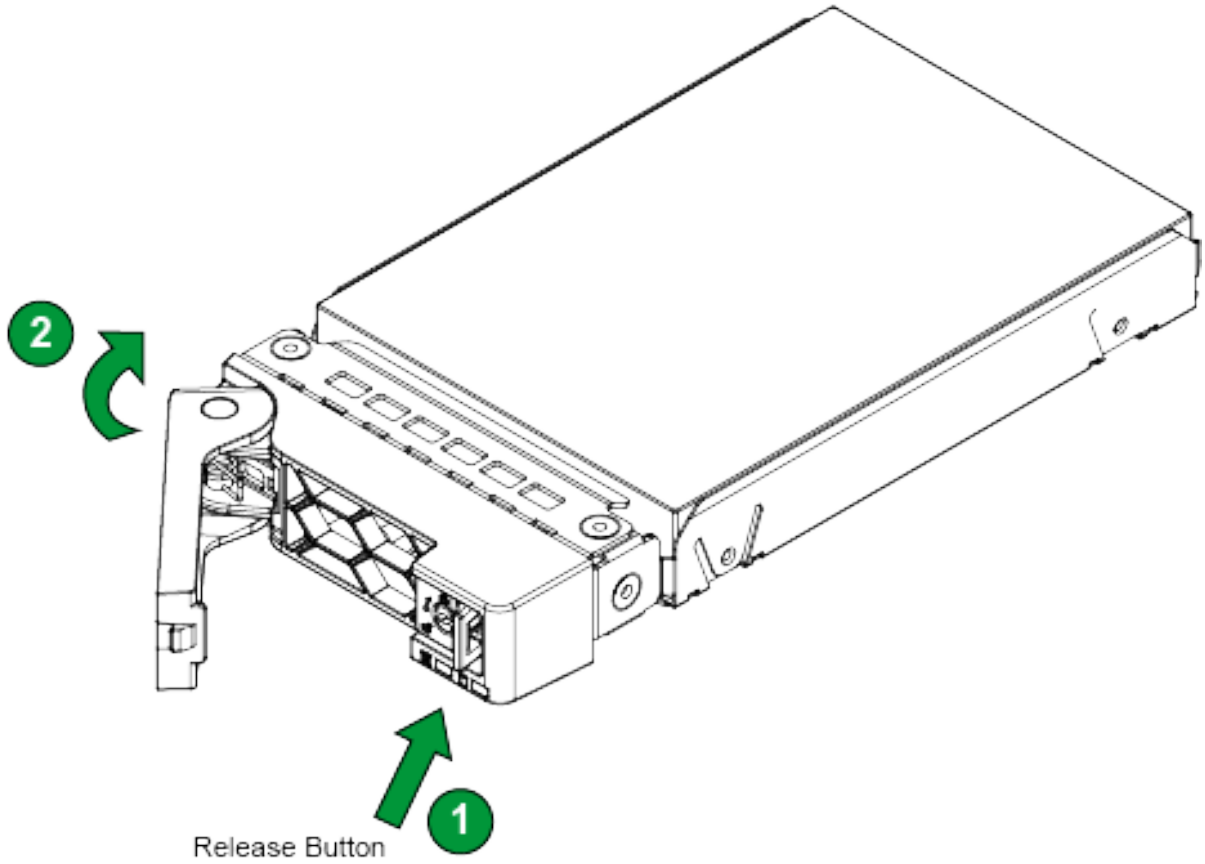


Figure 3-41. Removing a Drive Carrier

Installing a 2.5" Drive

1. Insert a drive into the carrier with the PCB side facing down and the connector end toward the rear of the carrier. Place the drive in the carrier so that the screw holes line up.
2. The drive carrier has a tool-less design but you also have the option to secure the drive to the carrier with two M3 screws.
3. Insert the drive carrier with the drive into its bay, keeping the carrier oriented so that the drive is on top of the carrier and the release button is on the right side. When the carrier reaches the rear of the bay, the release handle will retract.
4. Push the handle in until it clicks into its locked position.

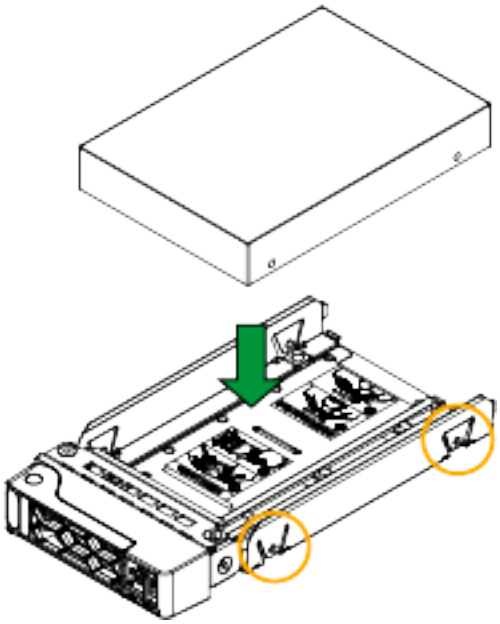


Figure 3-42. Installing a 2.5" Drive into a Carrier

Hot-Swap for NVMe Drives

Supermicro servers support NVMe surprise hot-swap. For even better data security, NVMe orderly hot-swap is recommended. NVMe drives can be ejected and replaced remotely using BMC.

Ejecting a Drive

1. **BMC > Server Health > NVMe SSD**
2. Select Device, Group, and Slot, and click **Eject**. After ejecting, the drive Status LED indicator turns green.
3. Remove the drive.

Note that Device and Group are categorized by the CPLD design architecture.

A Slot is the slot number on which the NVMe drives are mounted.

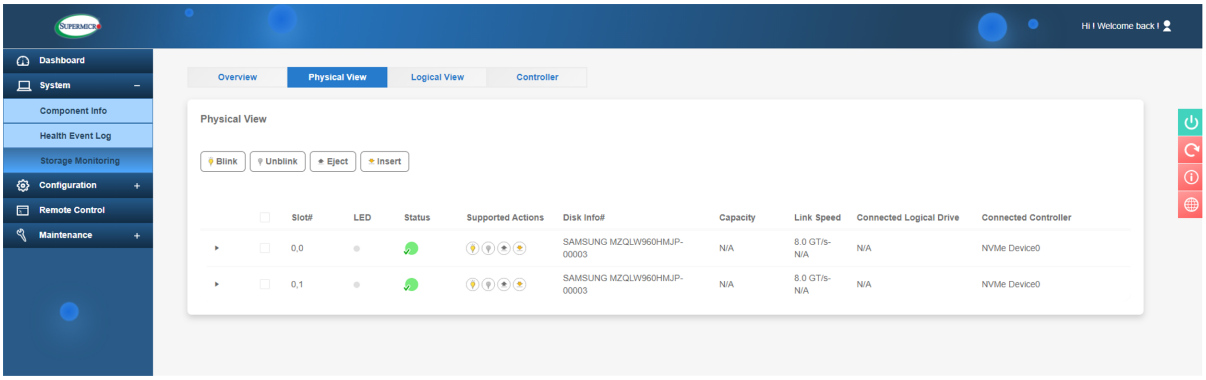


Figure 3-43. BMC Screenshot

Replacing a Drive

1. Insert the replacement drive.
2. **BMC > System > Storage Monitor > Physical View**
3. Select Device, Group, and slot and click **Insert**. The drive Status LED indicator flashes red, then turns off. The Activity LED turns blue.

3.8 System Cooling

Refer to the following sections for information about the cooling capabilities of the SYS-112HA-TN server.

Fans

Up to eight heavy-duty fans provide cooling for the SYS-112HA-TN server. They can be replaced without powering down the system.

Changing a System Fan

1. If necessary, open the chassis while the power is running to determine which fan requires changing. Never run the server for an extended period of time with the chassis open.
2. While the system is turned on, open the chassis cover as described earlier in this section.
3. Remove the fan bracket from the top of the fans. Unplug and lift the failed fan from the chassis and pull it completely out of the chassis. There are no screws to remove.
4. Place the new fan into the vacant space in the housing while making sure the arrows on the top of the fan (indicating air direction) point in the same direction as the arrows on the other fans. Plug the fan into the motherboard and ensure the fan is working properly.
5. The fan will automatically begin running at the correct speed.

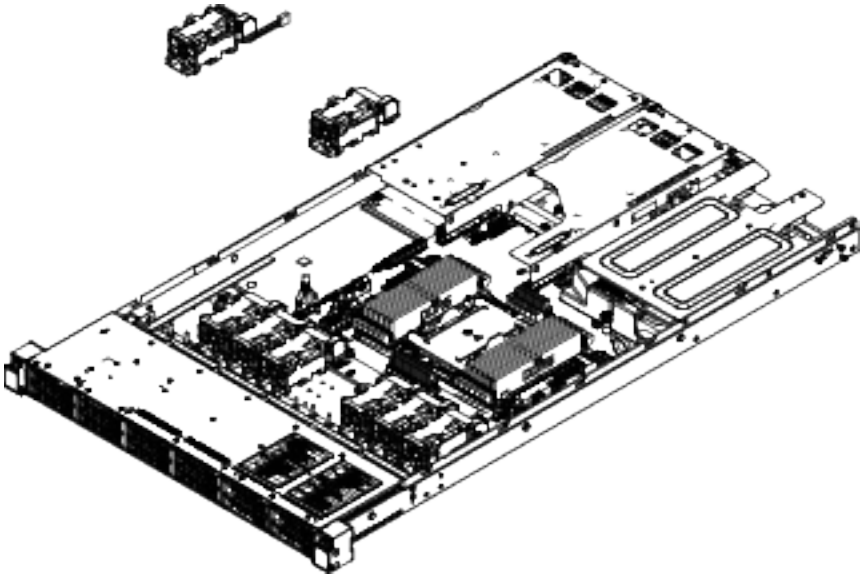


Figure 3-44. Placing a System Fan

Air Shroud

Air shrouds concentrate airflow to maximize fan efficiency. The SYS-112HA-TN includes one air shroud for the CPU.

Air Shroud for CPU and Memory

The air shroud cools the CPU and DIMM slots controlled by the CPU (see figure below).

1. Remove the system from the rack and remove the cover as described previously.
2. Place the air shroud over 12 DIMM slots and the CPU, as illustrated below.
3. Close the cover and push the system back into the rack.

Installing the Air Shroud

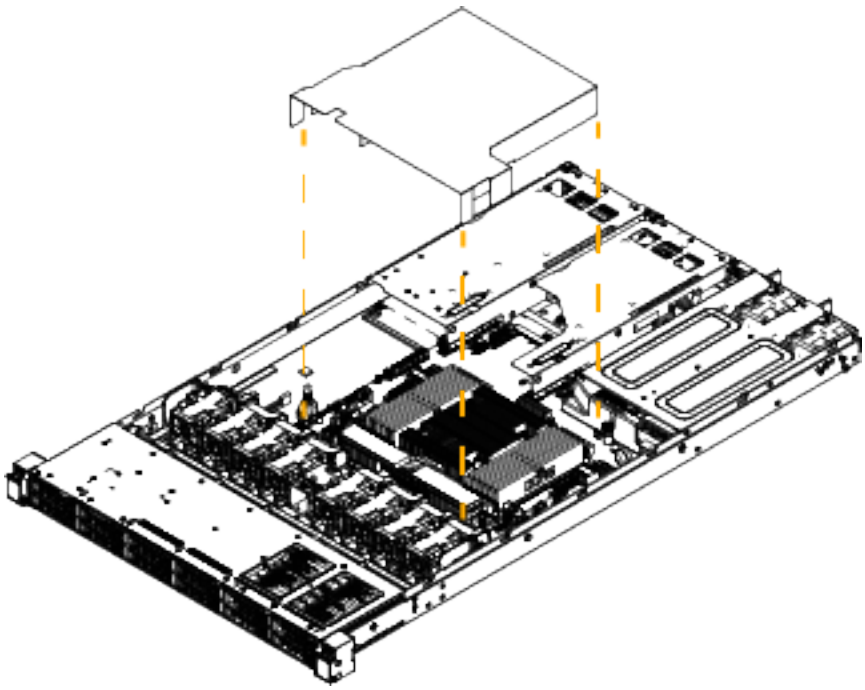


Figure 3-45. Installing Air Shrouds for the CPU and Memory

3.9 Expansion Cards

Refer to the following sections for information on the expansion cards supported by the SYS-112HA-TN server.

Riser Cards

The SYS-112HA-TN includes two riser cards to support the use of expansion (add-on) cards.



Figure 3-46. Expansion Card Chassis Slots

Note: This system includes riser cards that provide PCIe capabilities.

Expansion Slot Locations			
Slot	**Riser Card**	**Part Number**	**Description**
1	Left (from rear)	RSC-H-6G5L	PCIe 5.0 x16 slot (full-height, 6.6" L)
2	Right (from rear)	RSC-H-66G5L	PCIe 5.0 x16 slot (full-height, 10.5" L)
3	Right (from rear)	RSC-H-66G5L	PCIe 5.0 x8 (in x16) slot (full-height, 10.5" L)

Installing Riser Cards

Before following the procedure below to install expansion cards, first turn off and remove power from the system then remove the top cover.

1. Open any clips next to the slots and remove the PCI shield.
2. Install the riser card to the riser bracket, if necessary.
3. Install one or two expansion cards into the riser card. See the next page for the illustration.
4. Insert the riser card bracket with the expansion cards into the chassis rear and connect cables, if necessary.
5. Close any opened clips to secure the riser card bracket.

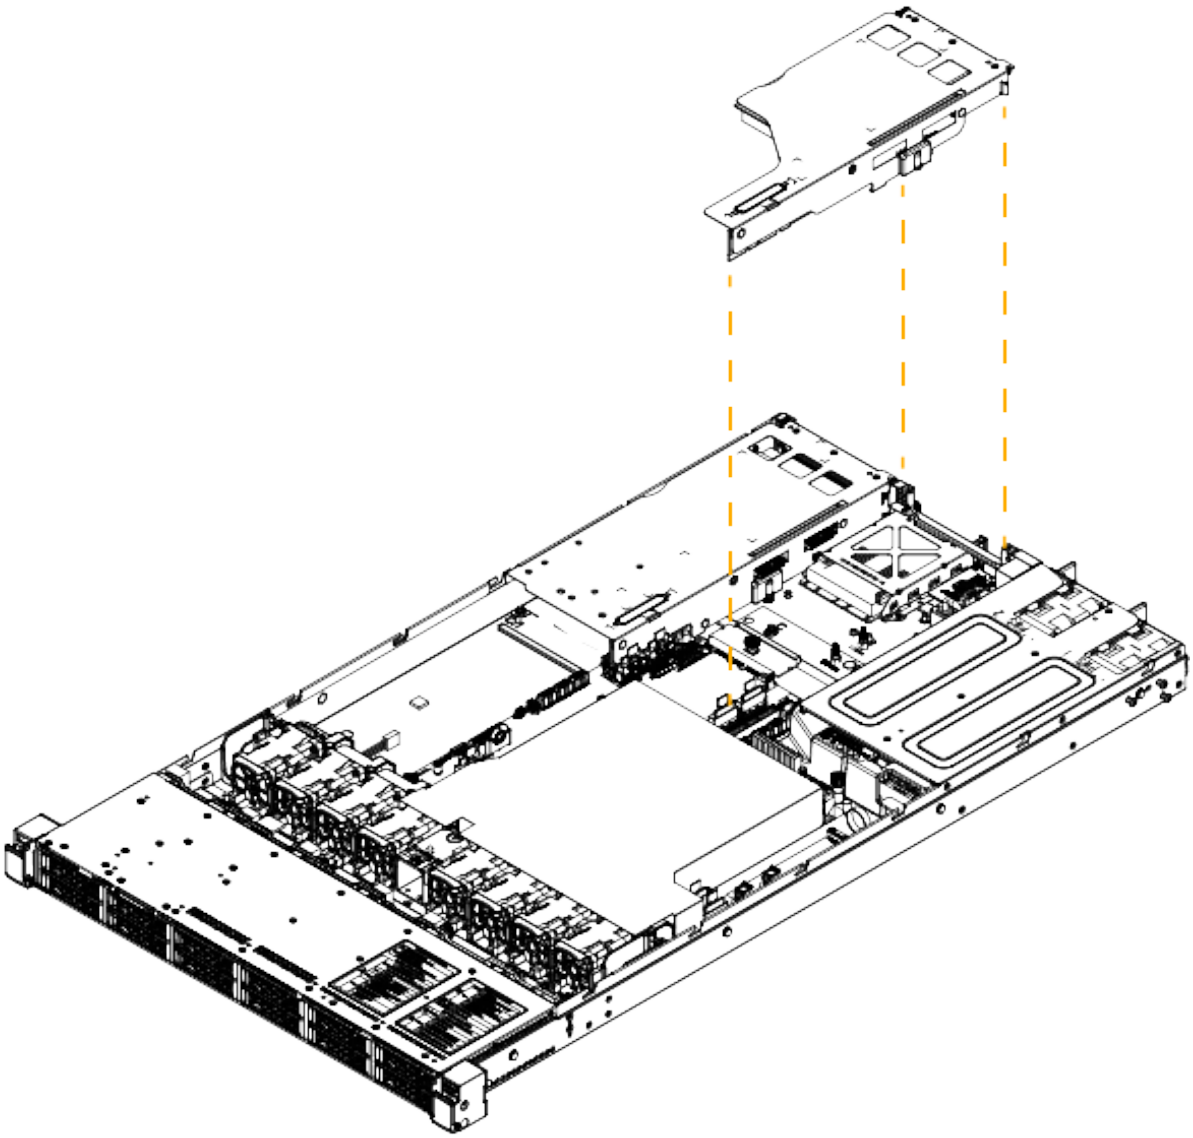


Figure 3-47. Installing Left Expansion Card (RSC-H-6G5L)

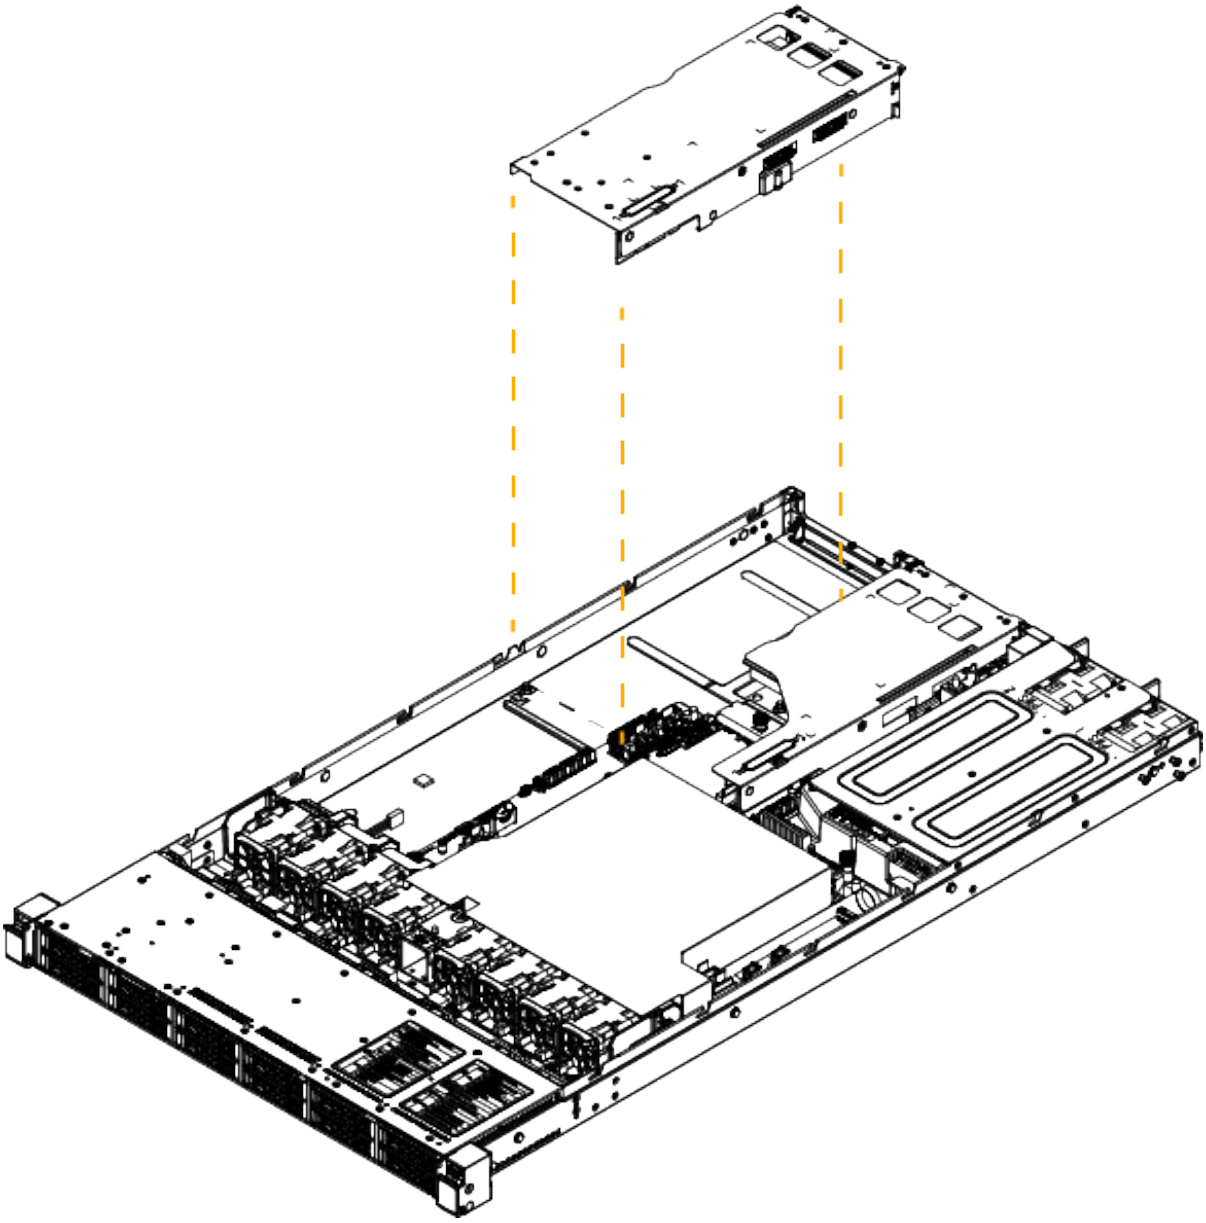


Figure 3-48. Installing Right Expansion Card (RSC-H-66G5L)

AIOM Cards

The system supports one AIOM/OCP NIC 3.0 network port card.

AIOM Configurations			
Slot	**Mechanical**	**Electrical**	**Slot Power**
A1	Small form factor, OCP 3.0	PCIe 5.0 x16 (CPU1)	Up to 50 W (see note below)

Note: AIOM cards exceeding the 15 W slot class may require restricted conditions to meet thermal specifications of the AIOM card. Contact your Supermicro account representative for more information.



Figure 3-49. AIOM Chassis Slot

Installing AIOM Cards

1. Remove the blank cover plate (A1), unscrewing the thumbscrew.
2. Slide the AIOM card in the opening until it seats in the motherboard slot.
3. Secure with the thumbscrew.

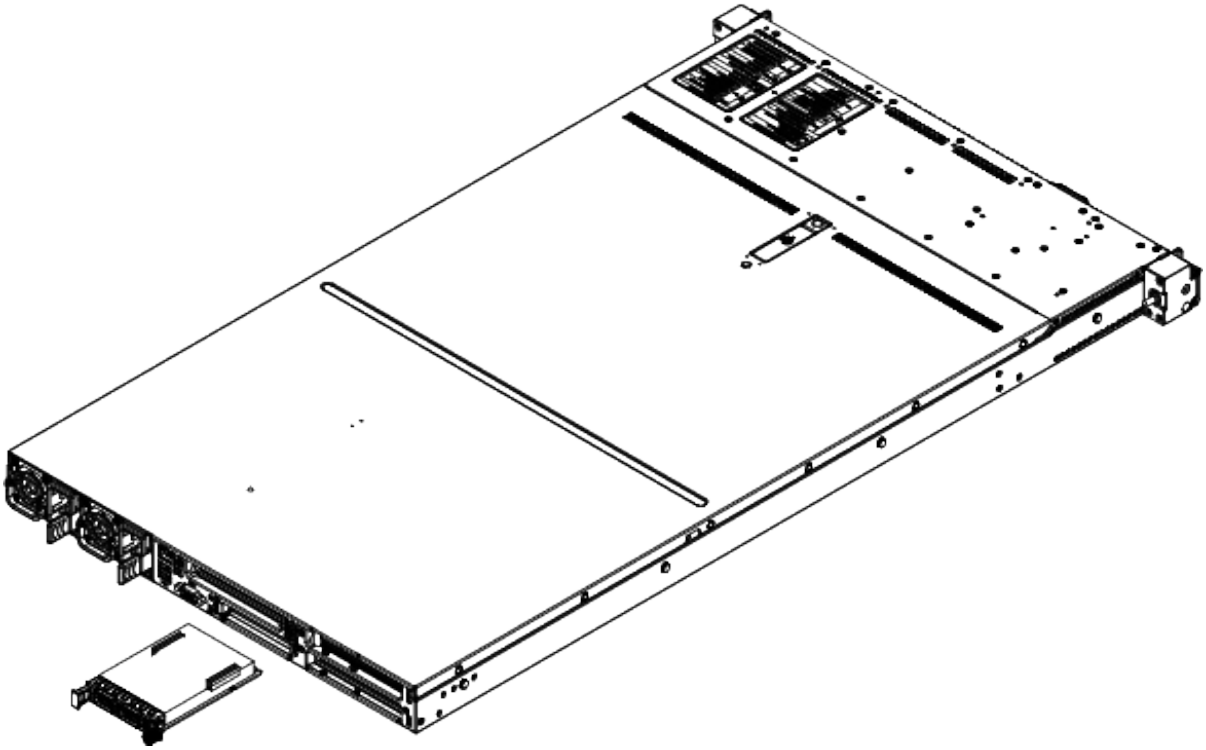


Figure 3-50. Installing AIOM cards

3.10 Power Supply

The SYS-112HA-TN server features two 1200 W/1600 W/2000 W AC redundant Titanium Level power supplies or two 1300 W DC redundant power supplies. Each power supply can be changed without powering down the system. New units can be ordered directly from Supermicro or authorized distributors.

These power supplies are auto-switching capable. This feature enables them to automatically sense the input voltage and operate at a 100–120 V or 180–240 V. An amber light will be illuminated on the power supply when the power is off. An illuminated green light indicates that the power supply is operating.

Replacing the Power Supply

1. Unplug the AC cord from the module to be replaced.
2. Push the release lever on the back of the power supply as illustrated.
3. Pull the power supply out using the handle provided.

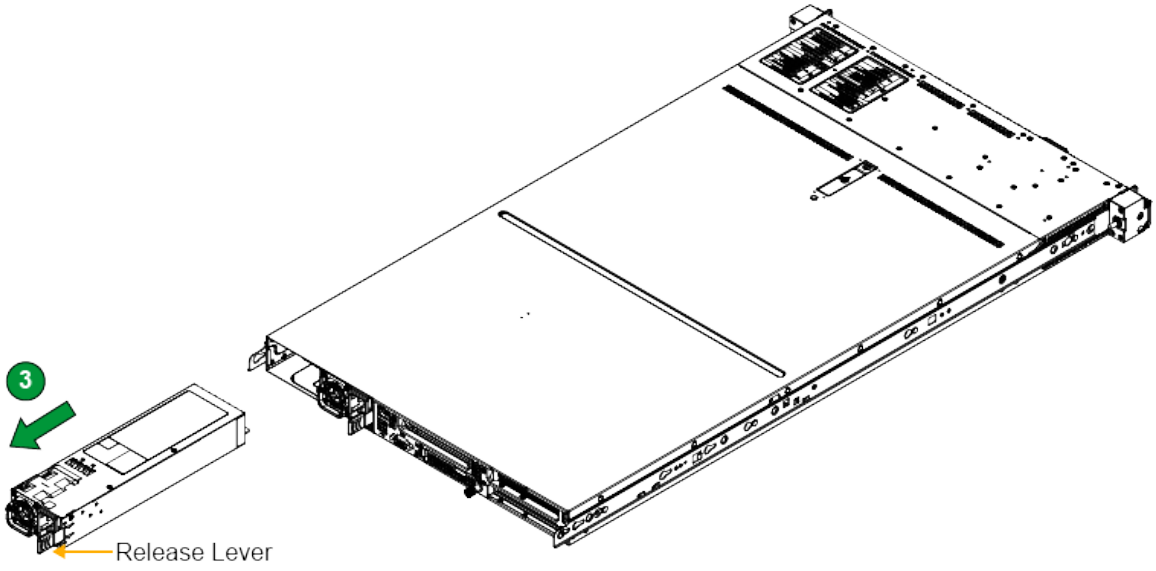


Figure 3-51. Power Supply Release Lever

4. Replace the failed power module with the same model.
5. Push the new power supply module into the power bay until it clicks.
6. Plug the AC power cord back into the module.

3.11 Cable Routing Diagrams

The below diagrams indicate the cable routing for the storage, PCIe, I/O, and power cables. When disconnecting cables to add or replace components, refer to the diagrams so you can reroute them in the same manner. If cables are not connected or routed properly it may lead to device detection or performance issues.

NVMe Drive Cable Routing

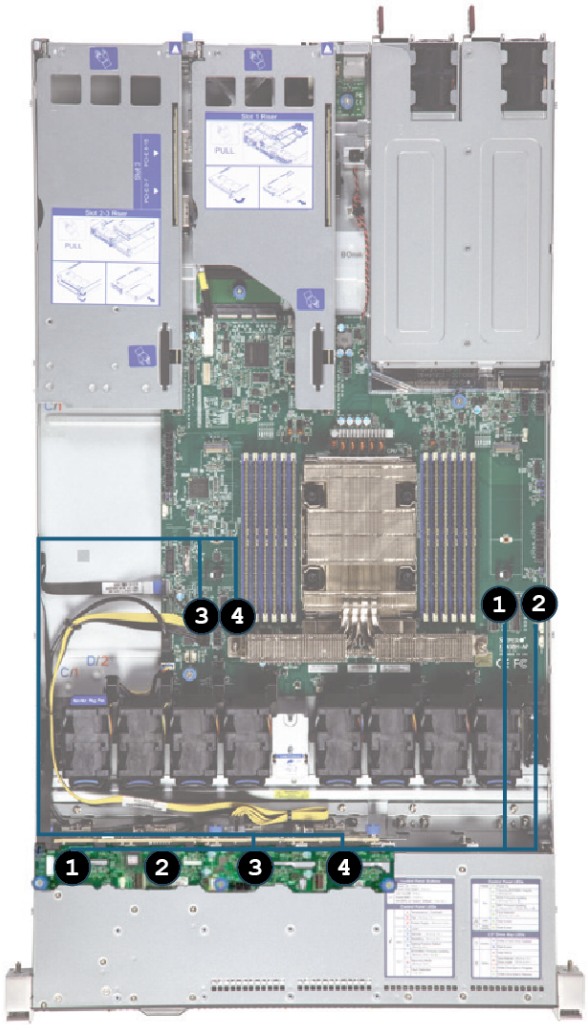


Figure 3-52. Eight NVMe Cable Routing

Eight NVMe			
Connector on Board/Card	**Backplane/Riser and Port**	**Drive Bay**	**SMC Cable P/N**
P1_NVME0/1	CN1 (BPN-NVME5-HS119N-S8L)	0-1	CBL-MCIO-1255M5REL
P1_NVME2/3	CN2 (BPN-NVME5-HS119N-S8L)	2-3	CBL-MCIO-1255M5REL
P1_NVME4/5	CN3 (BPN-NVME5-HS119N-S8L)	4-5	CBL-MCIO-1464M5FRFB-J
P1_NVME6/7	CN4 (BPN-NVME5-HS119N-S8L)	6-7	

Storage AOC Drive Cable Routing

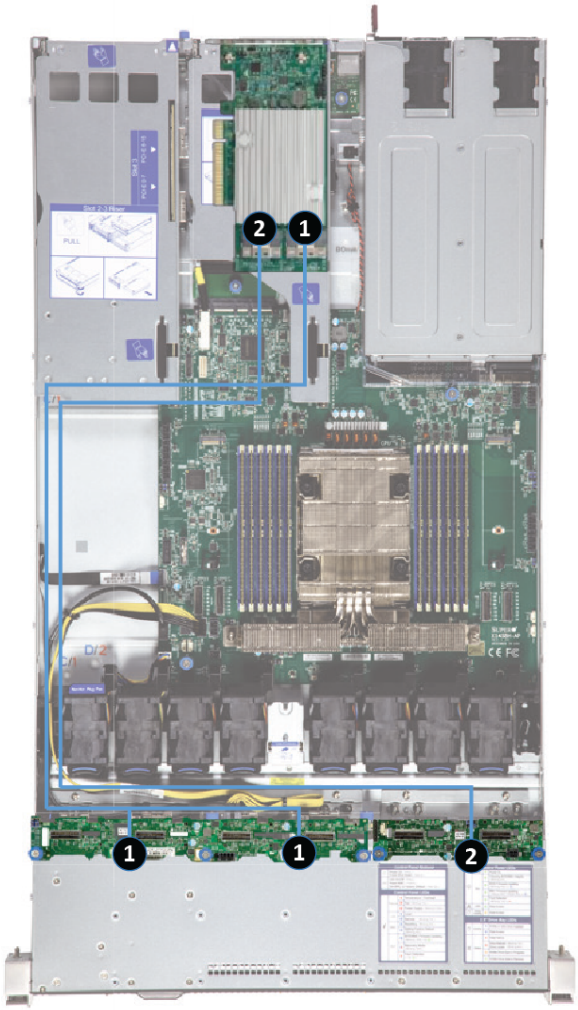


Figure 3-53. 12 SAS Cable Routing

12 SAS			
Connector on Board/Card	**Backplane/Riser and Port**	**Drive Bay**	**SMC Cable P/N**
SAS AOC CN1	JSM1/JSM2 (BPN-NVME5-HS119N-S8L)	0-7	CBL-SAST-1273LP-100
SAS AOC CN2	JSM1 (BPN-NVME5-HS119N-S4R)	8-11	CBL-SAST-1262LP-100

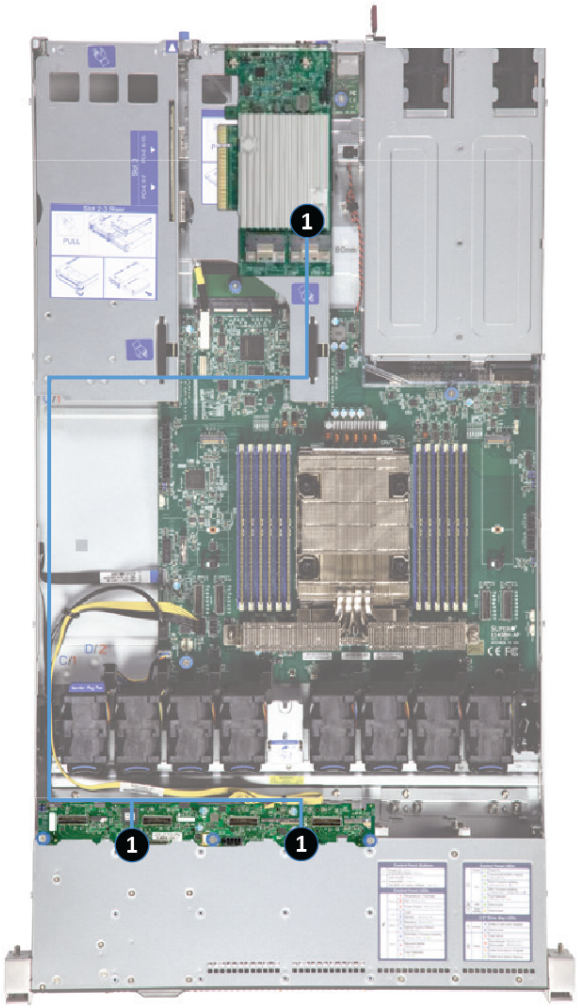


Figure 3-54. Eight NVMe Cable Routing

Eight SAS			
Connector on Board/Card	**Backplane/Riser and Port**	**Drive Bay**	**SMC Cable P/N**
SAS AOC CN1	JSM1/JSM2 (BPN-NVME5-HS119N-S8L)	0-7	CBL-SAST-1273LP-100

Chapter 4:

Motherboard Connections, Jumpers, and LEDs

This section describes the connections on the motherboard and provides pinout definitions. Note that depending on how the system is configured, not all connections are required. The LEDs on the motherboard are also described here. A motherboard layout indicating component locations may be found in the "Introduction" on page 13. More detail can be found in the X14SBH-AP motherboard manual.

Review the "Standardized Warning Statements for AC Systems" on page 154 before installing or removing components.

4.1 Power Supply and Power Connections 89
Power Connectors 89
4.2 Headers and Connections 90
BMC LAN/USB/VGA Connector 90
Chassis Intrusion 90
External BMC I²C Headers for Backplane 90
Fan Headers 91
M.2 M-Key PCIe 5.0 x2 Slots 91
NC-SI Connection 91
NVMe I²C Headers 92
TPM/Port 80 Header 92
Universal Serial Bus (USB) Header 93
VROC RAID Key Header 93
4.3 Front Control Panel 95
Power On and BMC/BIOS Status LED Button 95
UID LED 96
Fail LED (Information LED for OH/FF/PF) 96
LAN1/LAN2 (NIC1/NIC2) LED 97
Storage Drive Activity LED 97
Standby Power LED 98
Root of Trust (RoT) Power LED 98
Standby Power 98

Power Fail LED Indicators 98
4.4 Input/Output Ports 100
I/O Connection 100
Advanced I/O Module (AIOM) for I/O Support 100
4.5 Jumper Settings 101
CMOS Clear 101
Onboard TPM Enable/Disable 102
UID LED and System_Reset Button Select Jumper 102
4.6 LED Indicators 103
BMC Heartbeat LED 103
Onboard Power LED 103

4.1 Power Supply and Power Connections

For information about the power supply and power connections of the SYS-112HA-TN server, refer to the following content.

Power Connectors

JPW1–JPW10 are the 8-pin power connectors located on the X14SBH-AP motherboard. In addition, there are two power supply units for system use located at PSU1 and PSU2.

8-pin Power Connectors for Backplane/GPU Devices Pin Definitions: Eight Total	
Pin#	**Definition**
1–4	GND
5–8	+12 V (12 V Power)

4.2 Headers and Connections

For information about the headers on the X14SBH-AP motherboard, refer to the following content.

BMC LAN/USB/VGA Connector

A low-profile SlimSAS I/O x8 connector, located at JIO1 on the X14SBH-AP motherboard, provides dedicated BMC LAN/USB/VGA support for access.

For a detailed diagram of the X14SBH-AP motherboard, see the layout under "Motherboard Quick Reference" on page 24.

Chassis Intrusion

A Chassis Intrusion header is located at JL1 on the X14SBH-AP motherboard. Attach the appropriate cable from the chassis to inform you when the chassis is opened.

For a detailed diagram of the X14SBH-AP motherboard, see the layout under "Motherboard Quick Reference" on page 24.

Chassis Intrusion Pin Definitions: Two Total	
Pin#	**Definition**
1	Intrusion Input
2	GND

External BMC I²C Headers for Backplane

Two System Management Bus 4-pin headers for the BMC are located at JBPNI²C1 and JBPNI²C2 on the X14SBH-AP motherboard. Connect the appropriate cable here to connect the BMC to the backplane.

For a detailed diagram of the X14SBH-AP motherboard, see the layout under "Motherboard Quick Reference" on page 24.

External I²C Header Pin Definitions: Four Total	
Pin#	**Definition**
1	Data

External I²C Header Pin Definitions: Four Total	
Pin#	**Definition**
2	GND
3	Clock
4	+3.3 V

Fan Headers

There are seven 6-pin fan headers (FAN1–FAN7) and three 4-pin fan headers (FAN8–FAN10) on the X14SBH-AP motherboard. All the 4-pin fan headers are backwards compatible with the traditional 3-pin fans. However, fan speed control is available for all fans except FAN9 by Thermal Management via the IPMI 2.0 interface.

6-pin Fan Header Pin Definitions: Six Total			
Pin#	**Definition**	**Pin#**	**Definition**
1	GND	4	+12 V
2	+12 V	5	Tachometer
3	GND	6	PWM

4-pin Fan Header Pin Definitions: Four Total	
Pin#	**Definition**
1	GND (Black)
2	+12 V (Red)
3	Tachometer
4	PWM Control

M.2 M-Key PCIe 5.0 x2 Slots

Two M.2 M-key slots are located at M.2-C1 and M.2-C2 on the X14SBH-AP motherboard. The M.2 M-key slots on the motherboard support PCIe 5.0 x2 devices in a 25110/2280/22110 form factor.

For a detailed diagram of the X14SBH-AP motherboard, see the layout under "Motherboard Quick Reference" on page 24.

NC-SI Connection

The Network Controller Sideband Interface (NC-SI) connection is located at JNCSI1 on the X14SBH-AP motherboard. This connection is used to connect a Network Interface Card (NIC) to the motherboard to allow the onboard Baseboard Management Controller (BMC) to communicate with a network.

Note: For detailed instructions on how to configure Network Interface Card (NIC) settings, refer to the Network Interface Card Configuration User's Guide posted on the web page under the link: https://www.supermicro.com/support/manuals.

For a detailed diagram of the X14SBH-AP motherboard, see the layout under "Motherboard Quick Reference" on page 24.

NVMe I²C Headers

Connectors JNVI²C1 and JNVI²C2 on the X14SBH-AP motherboard are the NVMe hot-swap management headers for the Supermicro NVMe backplane. Connect the I²C cable to these connectors.

For a detailed diagram of the X14SBH-AP motherboard, see the layout under "Motherboard Quick Reference" on page 24.

NVMe I²C Pin Definitions: Four Total	
Pin#	**Definition**
1	Data
2	Ground
3	CLK
4	+3.3 V

TPM/Port 80 Header

The JTPM1 header on the X14SBH-AP motherboard is used to connect a Trusted Platform Module (TPM)/Port 80, which is available from Supermicro (optional). A TPM/Port 80 connector is a security device that supports encryption and authentication in hard drives. It allows the motherboard to deny access if the TPM associated with the hard drive is not installed in the system. Information on the TPM is available at the following page:

https://www.supermicro.com/en/products/accessories/addon/AOM-TPM-9672V.php

For a detailed diagram of the X14SBH-AP motherboard, see the layout under "Motherboard Quick Reference" on page 24.

Trusted Platform Module Header Pin Definitions: 10 Total			
Pin#	**Definition**	**Pin#**	**Definition**
1	+3.3 V	2	SPI_CS#
3	RESET#	4	SPI_MISO
5	SPI_CLK	6	Ground
7	SPI_MOSI	8	No Connection
9	+1.8 V Standby	10	SPI_IRQ#

Universal Serial Bus (USB) Header


There is one USB 3.2 Gen 1 header located at JUSB2 on the X14SBH-AP motherboard.

JUSB2 (USB 3.2 Gen 1) Header Pin Definitions: 20 Total			
Pin#	**Definitions**	**Pin#**	**Definitions**
1	VBUS	11	IntA_P2_D+
2	IntA_P1_SSRX-	12	IntA_P2_D-
3	IntA_P1_SSRX+	13	GND
4	GND	14	IntA_P2_SSTX+
5	IntA_P1_SSTX-	15	IntA_P2_SSTX-
6	IntA_P1_SSTX+	16	GND
7	GND	17	IntA_P2_SSRX+
8	IntA_P1_D-	18	IntA_P2_SSRX-
9	IntA_P1_D+	19	VBUS
10	GND	20	No Connection

VROC RAID Key Header

A VROC RAID Key header is located at JRK1 on the X14SBH-AP motherboard. Install a VROC RAID key on JRK1 for NVMe RAID support as shown in the illustration below.

For a detailed diagram of the X14SBH-AP motherboard, see the layout under "Motherboard Quick Reference" on page 24.

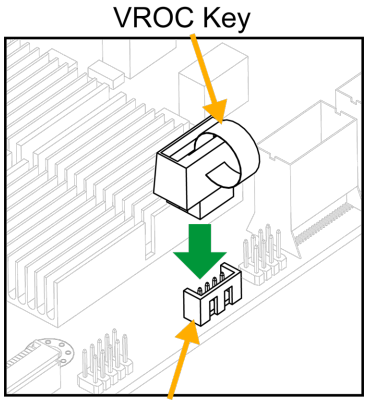

Intel VROC Key Pin Definitions: Four Total	
Pin#	**Definition**
1	GND
2	+3.3 V Standby
3	GND
4	CPU RAID Key

Note: Images displayed are for illustrative purposes only. The components installed in your system may or may not look exactly the same as the graphics shown in the manual.

Note: For detailed instructions on how to configure VROC RAID settings, refer to the VROC RAID Configuration User's Guide posted on the web page under the following link: https://www.supermicro.com/support/manuals.

4.3 Front Control Panel

There is a front control panel header located on this motherboard. The front control panel header, located at JFP1, contains header pins for various buttons and LED indicators with I²C support for front access. This head is designed specifically for use with the Supermicro chassis.

For a detailed diagram of the X14SBH-AP motherboard, see the layout under "Motherboard Quick Reference" on page 24.

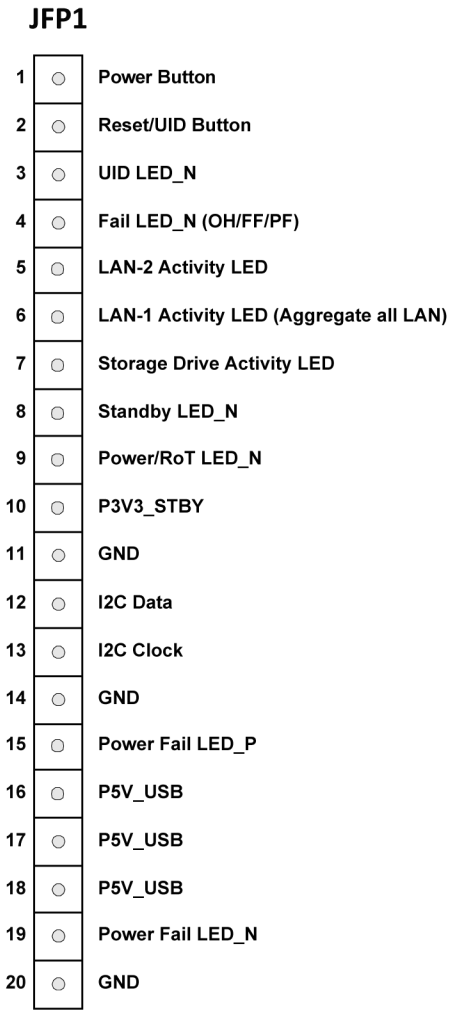


Figure 4-1. Front Control Panel Pin Definitions

Power On and BMC/BIOS Status LED Button

The Power On and BMC/BIOS Status LED button is located on pin 1 of the front control panel header located at JFP1 on the X14SBH-AP motherboard. Momentarily contacting pin 1 of JFP1 will power on/off the system or display BMC/BIOS status.

For a detailed diagram of the X14SBH-AP motherboard, see the layout under "Motherboard Quick Reference" on page 24.

Power Button BMC/BIOS Status LED Indicator	
Status	**Event**
Green: Solid on	System power on
BMC/BIOS blinking green at 4 Hz	BMC/BIOS checking
BIOS blinking green at 4 Hz	BIOS recovery/update in progress
BMC blinking red x2 (two blinks red) at 4 Hz, one pause at 2 Hz (on-on-off-off)	BMC recovery/update in progress
BMC/BIOS blinking green at 1 Hz	Flash not detected or golden image checking failure

UID LED

The unit identifier LED connection is located on pin 3 of JFP1 on the X14SBH-AP motherboard.

For a detailed diagram of the X14SBH-AP motherboard, see the layout under "Motherboard Quick Reference" on page 24.

Fail LED (Information LED for OH/FF/PF)

The Fail LED (Information LED for OH/Fan Fail/PWR Fail) connection, located on pin 4 of JFP1, provides warnings of overheating, power failure, or fan failure for the system.

For a detailed diagram of the X14SBH-AP motherboard, see the layout under "Motherboard Quick Reference" on page 24.

Fail LED (Information LED) (OH/Fan Fail/PWR Fail) LED States	
Status	**Description**
Solid red (on)	An overheat condition has occurred.
Blinking red (1 Hz)	Fan failure: check for an inoperative fan.
Blinking red (0.25 Hz)	Power failure: check for a non-operational power supply.
Blinking red (10 Hz) (FP red LED)	CPLD recovery mode error(s).
Solid blue	UID has been activated locally. Use this function to locate a unit in the system that might be in need of service.

Fail LED (Information LED) (OH/Fan Fail/PWR Fail) LED States	
Status	**Description**
Blinking blue (1 Hz)	Local UID has been activated locally on. Use this function to identify a unit that might be in need of service.
BIOS/BMC blinking blue (10 Hz)	BIOS/BMC: recovery and/or update in progress.
Red Info LED blinking (10 Hz) and MB UID LED blue blinking (10 Hz)	CPLD: recovery and/or update in progress.

LAN1/LAN2 (NIC1/NIC2) LED

The Network Interface Controller (NIC) LED connection for LAN Port 1 is located on pin 6 of JFP1 on the X14SBH-AP motherboard, and LAN Port 2 is on pin 5.

For a detailed diagram of the X14SBH-AP motherboard, see the layout under "Motherboard Quick Reference" on page 24.

LAN1/LAN2 LED LED States	
Color	**State**
NIC 2: Blinking green	LAN 2: Active
NIC 1: Blinking green	LAN 1: Active

Storage Drive Activity LED

The storage drive activity LED connection is located on pin 7 of JFP1 on the X14SBH-AP motherboard. When this LED is blinking green, it indicates storage drive activity.

For a detailed diagram of the X14SBH-AP motherboard, see the layout under "Motherboard Quick Reference" on page 24.

Storage Drive Activity LED LED State	
Color	**State**
Blinking Green	Storage Drive Activity

Standby Power LED

The LED indicator for standby power is located on pin 8 of JFP1 on the X14SBH-AP motherboard. If this LED is on, standby power is on.

For a detailed diagram of the X14SBH-AP motherboard, see the layout under "Motherboard Quick Reference" on page 24.

Root of Trust (RoT) Power LED

The Power LED for the Root of Trust (RoT) connection is located on pin 9 of JFP1 on the X14SBH-AP motherboard. If this LED is on, power for the RoT chip is on.

For a detailed diagram of the X14SBH-AP motherboard, see the layout under "Motherboard Quick Reference" on page 24.

Standby Power

A Standby Power (I²C) connection is located on pins 10–14 of JFP1 on the X14SBH-AP motherboard to provide power to the system when it is in standby mode.

For a detailed diagram of the X14SBH-AP motherboard, see the layout under "Motherboard Quick Reference" on page 24.

+3.3 V Standby Power Pin Definitions: Five Total	
Pin#	**Definition**
10	+3.3 Standby
11	Ground
12	I²C Data
13	I²C Clock
14	Ground

Power Fail LED Indicators

Power Failure LED Indicators are located on pins 15 and 19 of JFP1 on the X14SBH-AP motherboard.

For a detailed diagram of the X14SBH-AP motherboard, see the layout under "Motherboard Quick Reference" on page 24.

FP Power LED Pin Definitions (JFP1)	
Pin#	**Definition**
15	PWR Failure LED-Positive
19	PWR Failure LED-Negative

4.4 Input/Output Ports

For information about input/output ports on the SYS-112HA-TN server, refer to the following content.

I/O Connection

I/O Connection	
#	**Description**
1	JAIOM1

Advanced I/O Module (AIOM) for I/O Support

A Supermicro proprietary Advanced I/O Module (AIOM) connector used for an add-on module is located on the X14SBH-AP motherboard. This AIOM connector provides input/output connections on the I/O face of your system.

For a detailed diagram of the X14SBH-AP motherboard, see the layout under "Motherboard Quick Reference" on page 24.

4.5 Jumper Settings

To modify the operation of the motherboard, jumpers can be used to choose between optional settings. Jumpers create shorts between two pins to change the function of the connector. Pin 1 is identified with a square solder pad on the printed circuit board. See the diagram below for an example of jumping pins 1 and 2. Refer to the motherboard layout page for jumper locations.

Note: On two-pin jumpers, "Closed" means the jumper is on and "Open" means the jumper is off the pins.

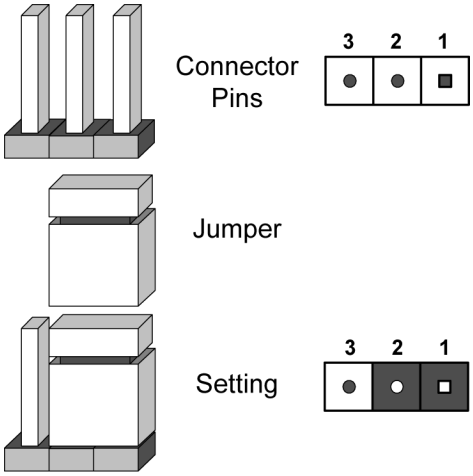


Figure 4-2. Jumping Connector Pins

CMOS Clear

JBT1 on the X14SBH-AP motherboard is used to clear CMOS, which will also clear any passwords. Instead of pins, this jumper consists of contact pads to prevent accidentally clearing the contents of CMOS.

For a detailed diagram of the X14SBH-AP motherboard, see the layout under "Motherboard Quick Reference" on page 24.



1. First power down the system and unplug the power cord(s).
2. Remove the cover of the chassis to access the motherboard.
3. Remove the onboard battery from the motherboard.

4. Short the CMOS pads, JBT1, with a metal object such as a small screwdriver for at least four seconds.

   Note: Clearing CMOS will also clear all passwords.

5. Remove the screwdriver (or shorting device).
6. Replace the cover, reconnect the power cord(s), and power on the system.

Onboard TPM Enable/Disable

Use JPT1 to enable or disable the onboard TPM.

For a detailed diagram of the X14SBH-AP motherboard, see the layout under "Motherboard Quick Reference" on page 24.

TPM Enable/Disable Jumper Settings	
Jumper Setting	**Definition**
Pins 1–2	Enabled (Default)
Pins 2–3	Disabled

UID LED and System_Reset Button Select Jumper

For a detailed diagram of the X14SBH-AP motherboard, see the layout under "Motherboard Quick Reference" on page 24.

4.6 LED Indicators

For information about the LED indicators on the SYS-112HA-TN server, refer to the following content.

BMC Heartbeat LED

A BMC Heartbeat LED is located at LED3 on the X14SBH-AP motherboard. When this LED is blinking, the BMC is functioning normally.

For a detailed diagram of the X14SBH-AP motherboard, see the layout under "Motherboard Quick Reference" on page 24.

BMC Heartbeat LED Indicator	
LED Color	**Definition**
Green: Blinking	BMC Normal

Onboard Power LED

The Onboard Power LED is located on the X14SBH-AP motherboard. When this LED is on, the system is on. Be sure to turn off the system and unplug the power cord before removing or installing components.

For a detailed diagram of the X14SBH-AP motherboard, see the layout under "Motherboard Quick Reference" on page 24.

Onboard Power LED Indicator	
LED Color	**Definition**
Off	System Power Off (power cable not connected)
Green	System Power On

Chapter 5:

Software

After the SYS-112HA-TN server has been installed, you can install the Operating System (OS), configure RAID settings, and install the drivers.

5.1 Microsoft Windows OS Installation **105**

Installing the OS 105

5.2 Driver Installation **107**

5.3 BMC **109**

BMC ADMIN User Password 109

Logging into the BMC **109**

5.1 Microsoft Windows OS Installation

If you will be using RAID, you must configure RAID settings before installing the Windows OS and the RAID driver. Refer to the RAID Configuration User Guides posted on our website at https://www.supermicro.com/support/manuals.

Installing the OS

1. Create a method to access the Microsoft Windows installation ISO file. That can be a USB flash or media drive, or the BMC KVM console.
2. Retrieve the proper drivers. Go to the Supermicro web page for your motherboard and click on "Download the Latest Drivers and Utilities," select the proper driver, and copy it to a USB flash drive.
3. Boot from a bootable device with Windows OS installation. You can see a bootable device list by pressing <F11> during the system bootup.

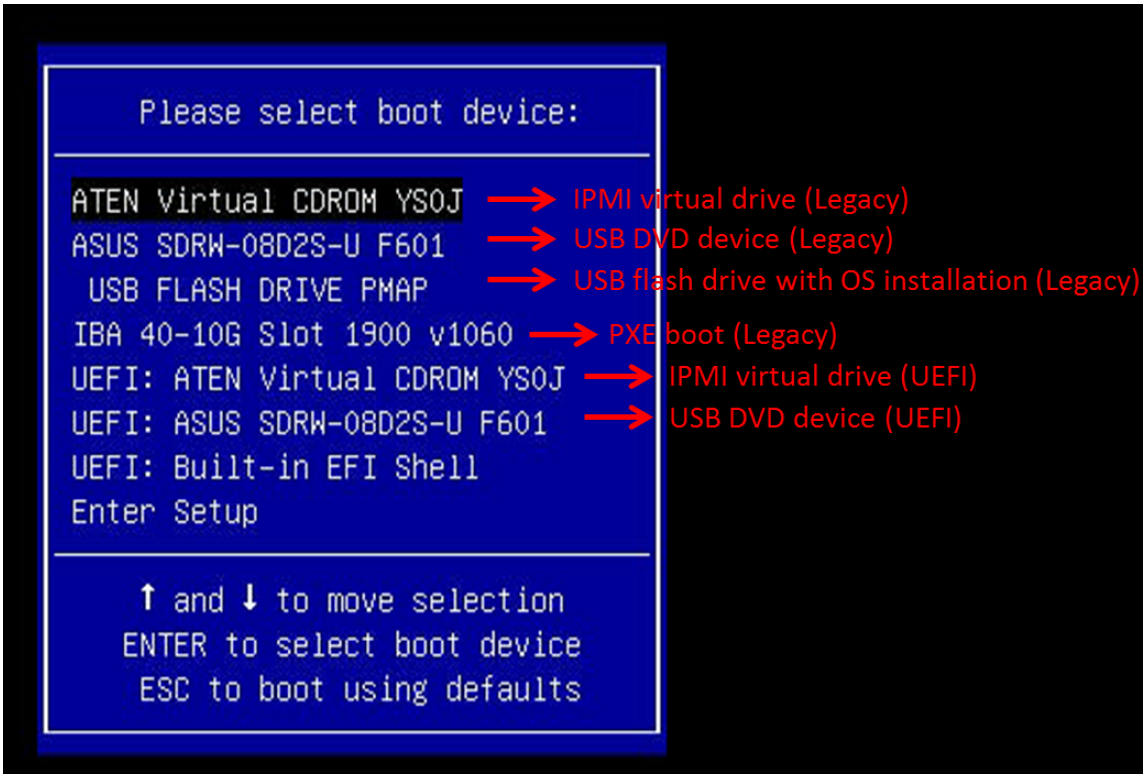


Figure 5-1. Selecting the Boot Device

4. During Windows Setup, continue to the dialog box where you select the drives on which to install Windows. If the disk you want to use is not listed, click on the “Load driver” link at the bottom left corner.

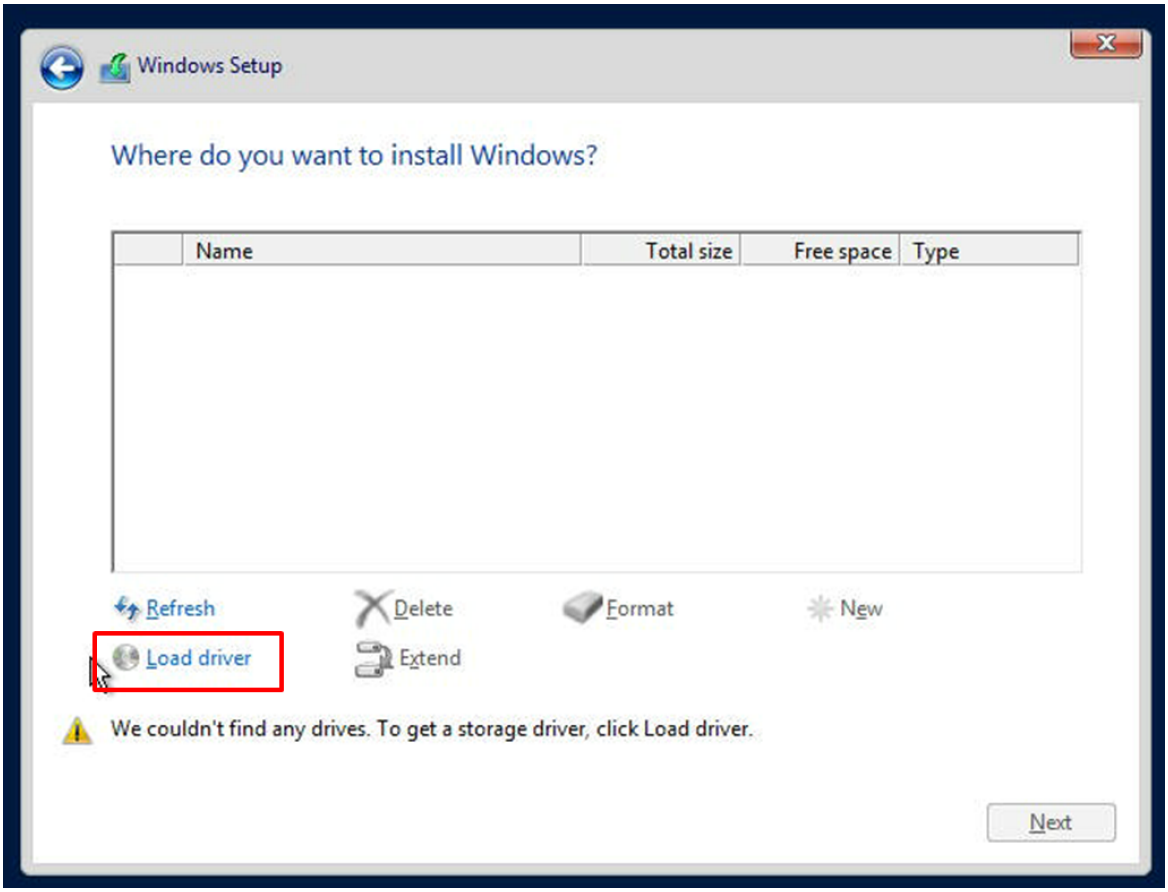


Figure 5-2. Loading the Driver Link

To load the driver, browse the USB flash drive for the proper driver files.

5. Once all devices are specified, continue with the installation.
6. After the Windows OS installation has completed, the system will automatically reboot multiple times for system updates.

5.2 Driver Installation

The Supermicro website contains drivers and utilities for your system at the following page:

https://www.supermicro.com/wdl.

Some of these drivers and utilities must be installed, such as the chipset driver. After accessing the website, go into the CDR_Images (in the parent directory of the above link) and locate the ISO file for your motherboard. Download this file to a USB flash or media drive. You may also use a utility to extract the ISO file if preferred.

Another option is to go to the Supermicro website at https://www.supermicro.com. Find the product page for your motherboard and download the latest drivers and utilities. Insert the flash drive or disk, and the screenshot shown below should appear.

Note: Click the icons showing a hand writing on paper to view the readme files for each item. Click the computer icons to the right of these items to install each item (from top to bottom) one at a time. *After installing each item, you must reboot the system before moving on to the next item on the list.* The bottom icon with a CD on it allows you to view the entire contents.

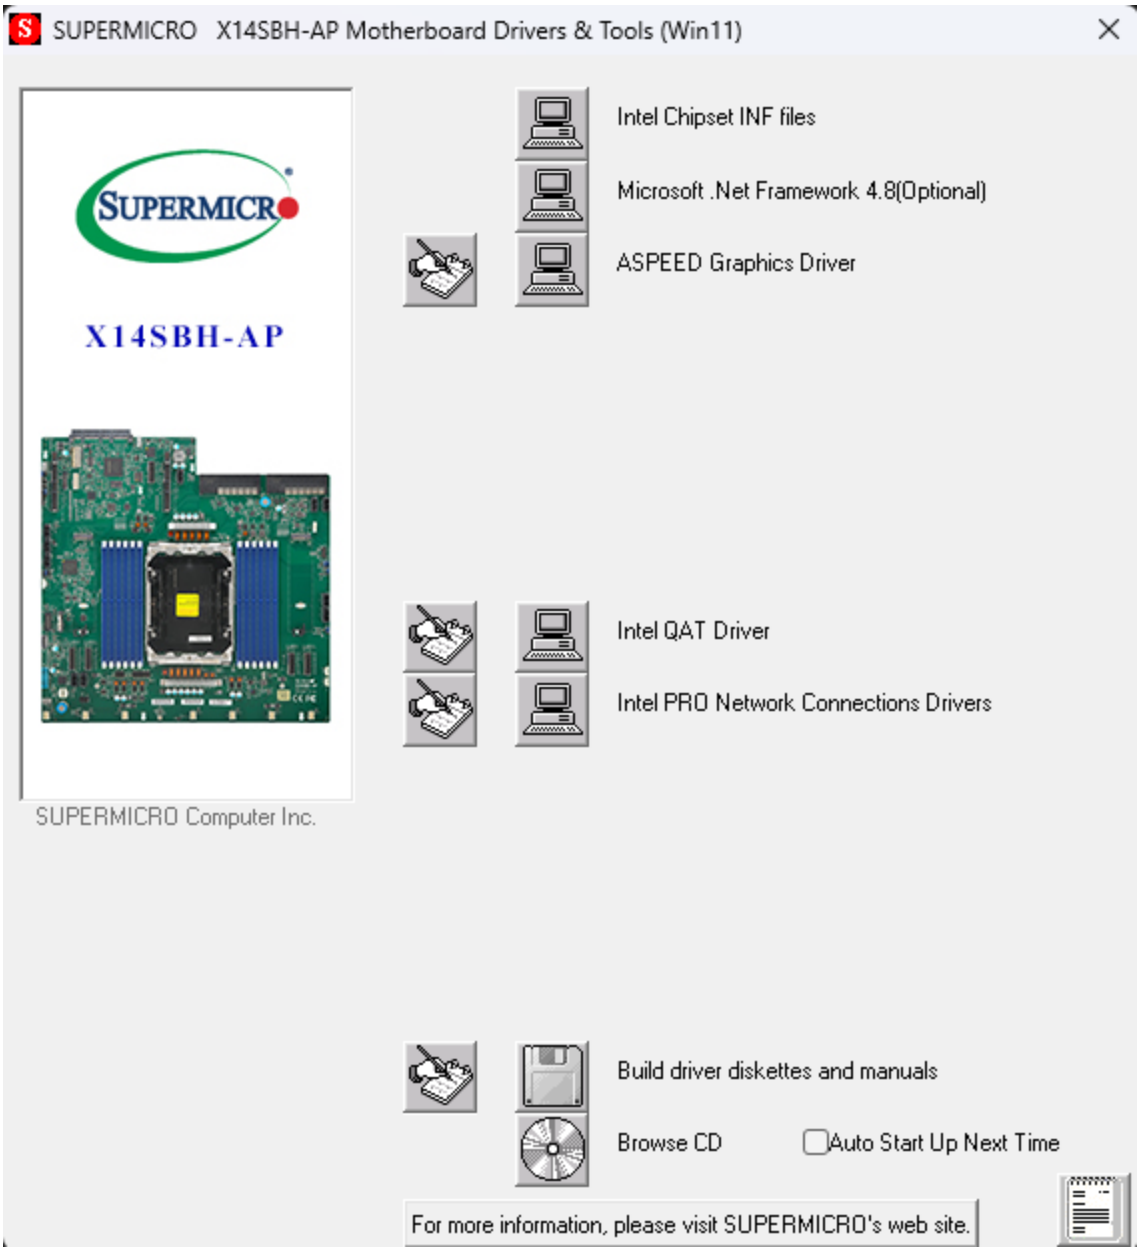


Figure 5-3. Driver & Tools Installation Screen

5.3 BMC

The X14SBH-AP motherboard provides remote access, monitoring, and management through the baseboard management controller (BMC) and other management controllers distributed among different system modules. There are several BIOS settings that are related to BMC. For general documentation and information on BMC, visit our website at the following page:

https://www.supermicro.com/en/solutions/management-software/bmc-resources

BMC ADMIN User Password

For security, each system is assigned a unique default BMC password for the ADMIN user. The password can be found on a sticker on the motherboard and a sticker on the chassis, for Supermicro chassis. The sticker also displays the BMC MAC address. If necessary, the password can be reset using the Supermicro IPMICFG tool.



Figure 5-4. BMC Password Label

Logging into the BMC

Supermicro ships standard products with a unique password for the BMC ADMIN user. This password can be found on a label on the motherboard.

When logging in to the BMC for the first time, use the unique password provided by Supermicro to log in. You can change the unique password to a user name and password of your choice for subsequent logins.

For more information regarding BMC passwords, visit our website at https://www.supermicro.com/en/support/BMC_Unique_Password.

Chapter 6:

Optional Components

This chapter describes alternate configurations and optional system components for the SYS-112HA-TN server.

6.1 TPM Security Module **111**
6.2 HBA Card **112**
6.3 RAID Cards **113**
6.4 Cable Management Arm **114**
Installing the Cable Management Arm 115
Removing the Cable Management Arm 116
6.5 Intel Virtual RAID on CPU (VROC) **117**
Requirements and Restrictions 117
Additional Information 117
Hardware Key 118
Configuring Intel VMD 118
Creating NVMe RAID Configurations 122

6.1 TPM Security Module

SPI capable TPM 2.0 with Infineon 9670 controller, vertical form factor.

The JTPM1 header is used to connect a Trusted Platform Module (TPM). A TPM is a security device that supports encryption and authentication in hard drives. It enables the X14SBH-AP motherboard to deny access if the TPM associated with the hard drive is not installed in the SYS-112HA-TN server.

For details and installation procedures, refer to the following page:

https://www.supermicro.com/manuals/other/AOM-TPM-9670V_9670H__X12_H12.pdf

- AOM-TPM-9670V (TCG 2.0)

6.2 HBA Card

This is a 12 Gb/s, multi-port SAS PCIe Gen 4.0 internal Host Bus Adapter (HBA) card.

The Supermicro HBA AOC-S3816L-L16iT features 16 internal SAS connectors, while the AOC-S3808L-L8iT features eight internal SAS connectors. Both are designed for high-performance storage connectivity.

These cards use Broadcom's 3816 and 3808 I/O processors for optimum performance with PCI Express Gen 4.0 host interface for increased bandwidth.

Each Add-On-Card supports up to 122 devices as HBA in IT mode via the expander backplane.

6.3 RAID Cards

These are Super Micro Computer, Inc. 12 Gb/s, multi-port PCIe Gen 4.0 RAID adapter cards.

The low-profile AOC-S3908L-H8iR RAID card features eight internal SAS connectors and the AOC-S3916L-H16iR features 16 internal SAS connectors. Both offer high-performance storage connectivity. These RAID cards are built on the Broadcom SAS IC technology and MegaRAID technology to address the growing demand for increased data throughput and scalability requirements across the enterprise-class server platforms.

With high-performance RAID architecture, including hardware RAID 5 and 6, these RAID controller cards support high capacity storage applications. They deliver cost-effective storage solutions using SATA drives and maximum performance and reliability with SAS drives. Using expander backplanes, they support up to 16, 32, and 240 drives (depending on SKU) with RAID 0, 1, 5, 6, 10, 50, and 60.

6.4 Cable Management Arm

The SYS-112HA-TN server supports a cable management arm (CMA), which keeps the rear cables organized and clear of the rail mechanisms when the system is extended out the front of the rack for maintenance.

The CMA attaches to the rack mounting rails using four connectors. They are labeled as connectors 1, 2, 3, and 4.

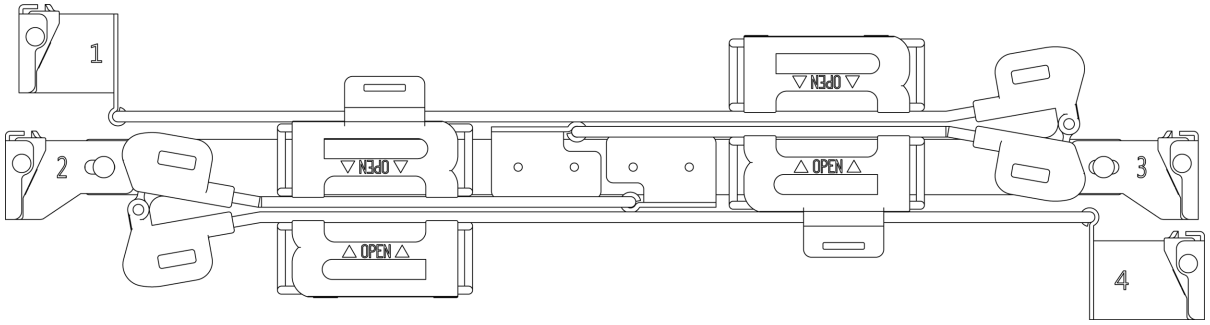


Figure 6-1. Cable Management Arm

Cable Arm Details		
Optional Part	**Part Number**	**Description**
Cable Arm	MCP-290-00168-0N	7.5" deep cable arm
Rail Set	MCP-290-11901-0N	41.2" rails (optimized for 1200-mm deep racks)

Installing the Cable Management Arm

1. Slide CMA connector #1 forward onto the two posts on the rear of the right inner rail (right side when viewed from the front). It snaps into place.
2. Slide CMA connector #2 forward onto the two posts on the rear of the right middle rail. It snaps into place.

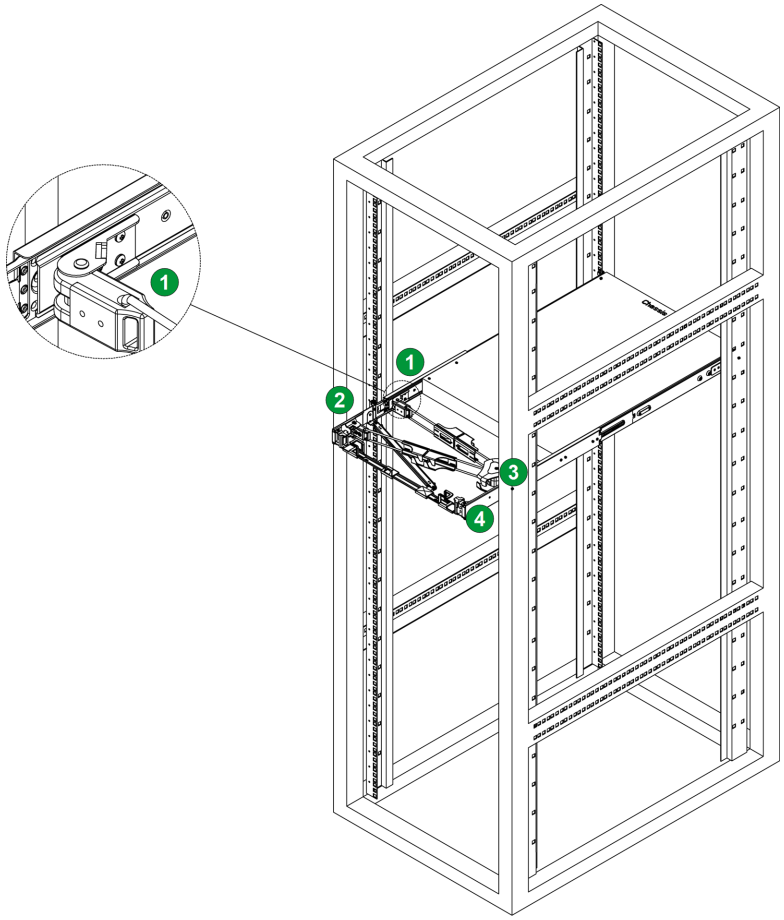


Figure 6-2. Installing the Connectors

3. Slide CMA connector #3 forward onto the two posts on the rear of the left middle rail. It snaps into place.
4. For CMA connector #4, align the metal tabs with the slots on the rear of the left outer rail and push it forward. It snaps into place.
5. Route the cables through the holding brackets, leaving enough slack.

Removing the Cable Management Arm

1. Remove cables from the CMA.
2. For CMA connector #4, pull the metal release tab toward the center of the rack and slide the connector toward the rear to release it.
3. For CMA connectors #3, #2, and #1, depress the front edge of the yellow plastic rocker lock and slide the connector toward the rear to release it.

6.5 Intel Virtual RAID on CPU (VROC)

Intel® Virtual RAID on CPU (Intel VROC) is an enterprise RAID solution for NVMe SSDs directly attached to Intel Xeon Scalable processors. Intel Volume Management Device (VMD) is an integrated controller inside the CPU PCIe root complex.

- A single processor supports up to 12 NVMe SSDs and up to 6 RAID arrays.
- A dual processor system supports up to 24 NVMe SSDs and 12 RAID arrays.

Stripe sizes are 4K, 8K, 16K, 32K, 64K, 128K.

Requirements and Restrictions

- *Intel VROC is only available when the system is configured for UEFI boot mode.*
- To enable the **mdadm** command and support for RSTe, install the patch from
  - Linux: https://downloadcenter.intel.com/download/28158/Intel-Virtual-RAID-on-CPU-Intel-VROC-and-Intel-Rapid-Storage-Technology-enterprise-Intel-RSTe-Driver-for-Linux-
  - Windows: https://downloadcenter.intel.com/download/28108/Intel-Virtual-RAID-on-CPU-Intel-VROC-and-Intel-Rapid-Storage-Technology-enterprise-Intel-RSTe-Driver-for-Windows-
- To enable Intel VROC, a hardware key must be inserted on the motherboard, and the appropriate processor's Virtual Management Devices must be enabled in the BIOS setup.
- It is possible to enable Intel VROC without a hardware key installed, but only RAID0 will be enabled.
- Intel VROC is not compatible with secure boot. This feature must be disabled.
- When creating bootable OS RAID1 devices, you must have both devices on the same CPU, and a VMD on that CPU.
- Spanning drives when creating RAID devices is not recommended due to performance issues, even though it is supported.

Additional Information

- Latest SSD and operating system information: https://www.intel.com/content/www/us/en/support/articles/000030310/memory-and-storage/ssd-software.html

- Additional information for the Supermicro add-on card and linked manuals: https://www.supermicro.com/products/accessories/addon/AOC-VROCxxxMOD.cfm

Hardware Key

The Intel VROC hardware key is a license key that detects the Intel VROC SKU and activates the function accordingly. The key must be plugged into the Supermicro motherboard (connector JRK1). The key options are:

Intel® VROC Keys			
VROC Package	**Description**	**Part Number**	**Intel MM Number**
Standard	RAID 0, 1, 10 Supports 3rd party SSDs	AOC-VROCSTNMOD	951605
Premium	RAID 0, 1, 5, 10 Supports 3rd party SSDs	AOC-VROCPREMOD	951606

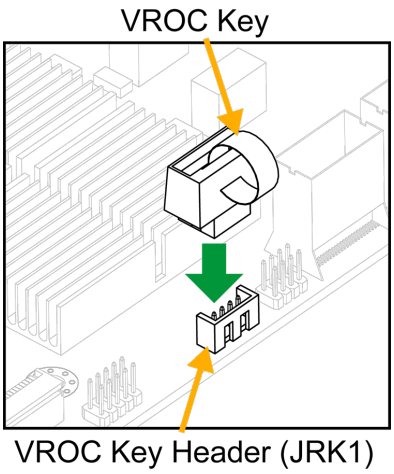


Figure 6-3. Intel VROC RAID Key and Motherboard Connector JRK1

Configuring Intel VMD

VMD must be enabled on PCIe ports which have NVMe drives attached to them in order for those drives to be added to a VROC RAID configuration. The default BIOS setting for the NVMe Mode Switch is Auto which automatically enables VMD on all installed NVMe drives.

NVMe Mode Switch:

- Auto: Enables VMD for all NVMe ports if VROC Key is installed.
- VMD: Enables VMD for all NVMe ports despite the lack of the VROC Key.
- Manual: Allows the user to select specific NVMe ports on which to enable VMD.

The NVMe Mode Switch can be viewed or selected at BIOS > Advanced > Chipset Configuration > North Bridge > IIO Configuration > Intel® VMD Technology.

Note: Without a VROC Key, there is no RAID support with the Auto switch. Only RAID 0 is supported with the VMD and Manual switches.

Configuring VMD Manually

The steps for manually configuring VMD on specific NVMe ports in UEFI BIOS are shown below. Example screenshots may differ from your server.

Important:

- If there is an existing RAID configuration, delete the RAID volume associated with the VMD controller before disabling the controller. Failure to do so may lead to unexpected behavior.
- The effects of physically changing or swapping a CPU on the VMD controller have not been thoroughly tested or documented.

1. Reboot the server and press [DEL] key to access the BIOS options.
2. Switch to Advanced > Chipset Configuration > North Bridge > IIO Configuration > Intel® VMD Technology.
3. Select VMD Mode Switch, then select Manual.

   Note that Socket 0 contains CPU1; Socket 1 contains CPU2.

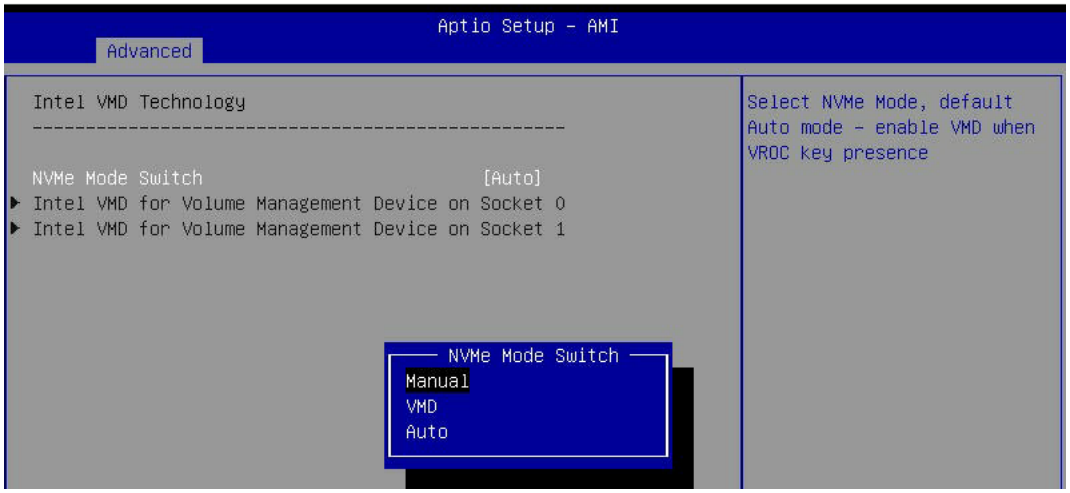


Figure 6-4. BIOS, Selecting VMD Mode

4. VMD must only be enabled on NVMe port resources. If VMD is enabled on other PCIe ports, the functionality of those ports will be impacted. See the table below.

   Select “Intel VMD for Volume Management Device on” on Socket 0 (CPU1) or Socket 1 (CPU2) to enable VMD for devices under the respective CPU.

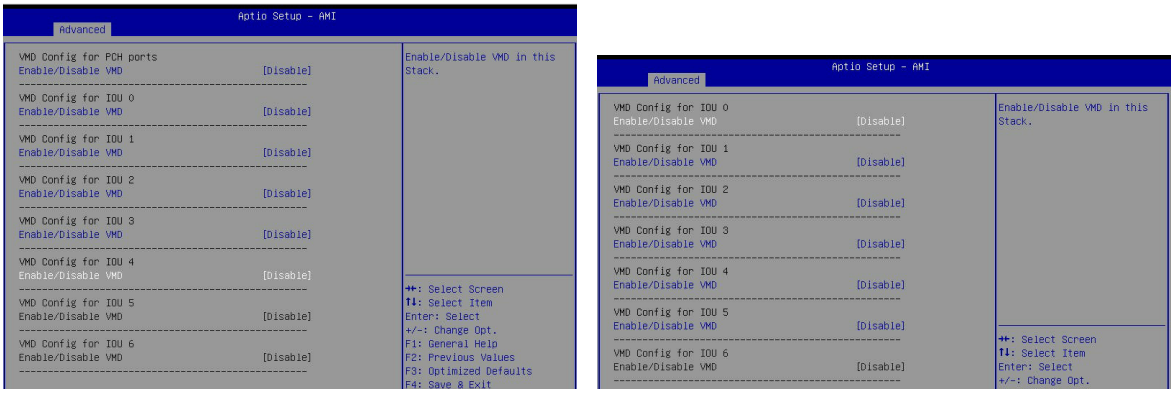


Figure 6-5. Intel VMD for Volume Management Device on Socket 0 and Socket 1

5. Choose Enable for “Enable/Disable VMD” for IOU 3 to list the available devices under IOU 3.

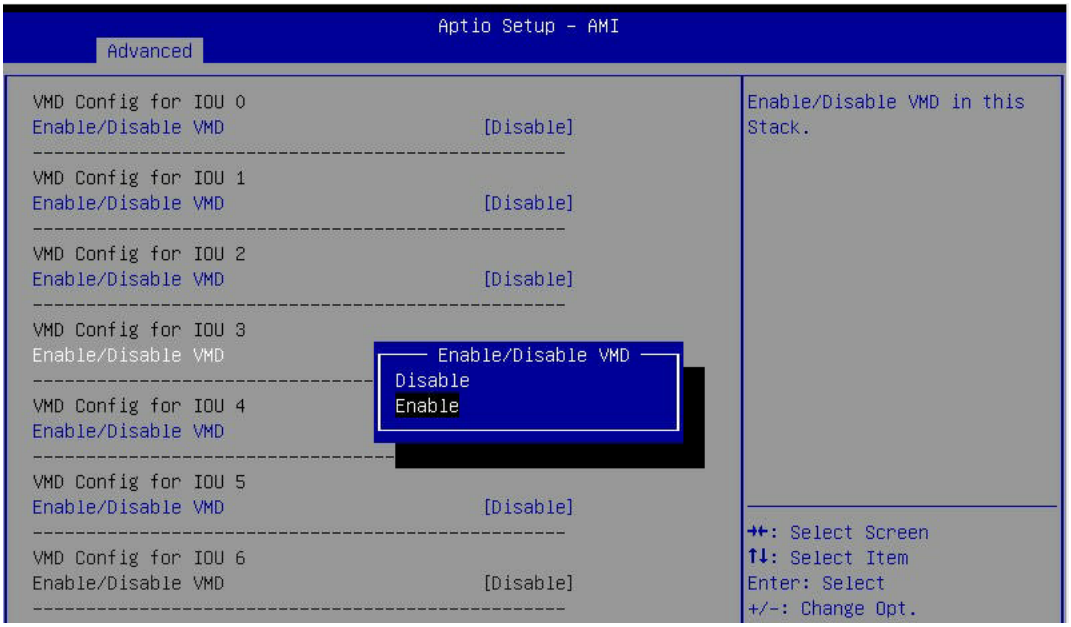


Figure 6-6. BIOS, Enabling VMD on Socket 1 (CPU2) (Example)

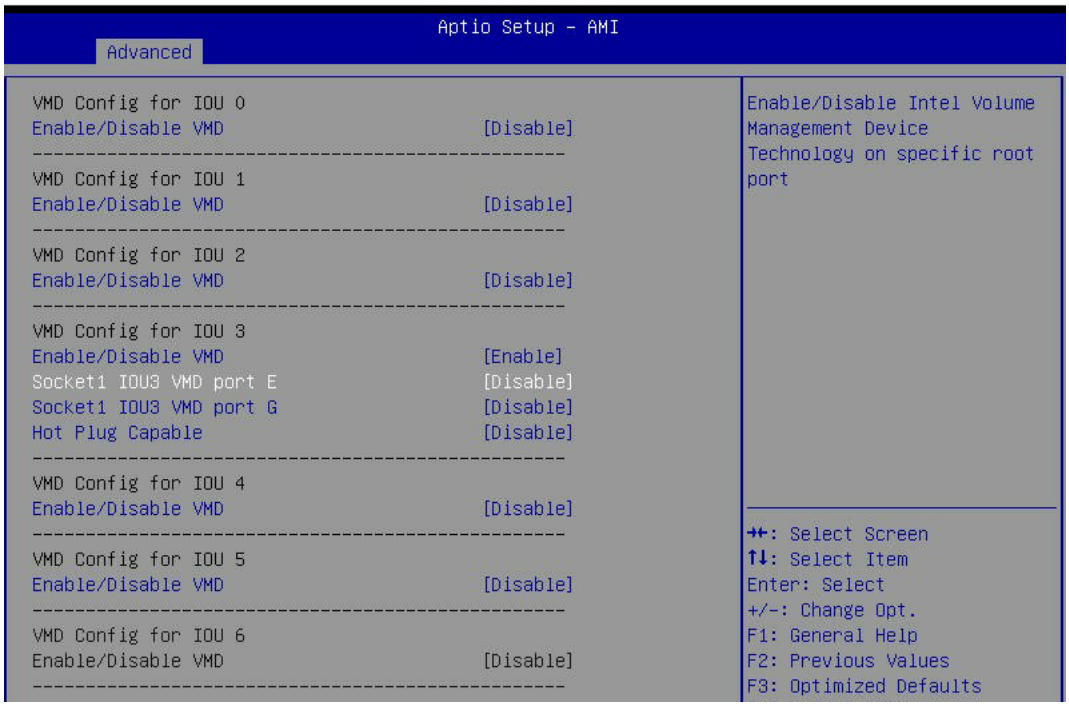


Figure 6-7. BIOS, Enabling VMD on Socket 1 (Example)

6. Enable the NVMe port resource according to table above for the NVMe drives that will be used in a RAID configuration.

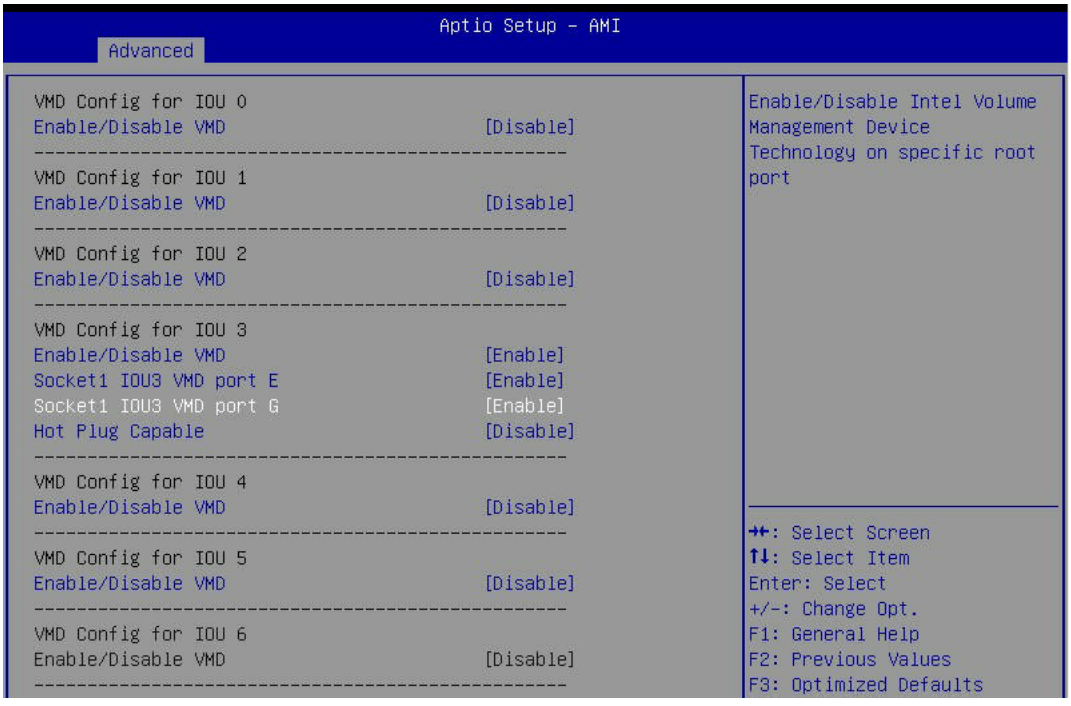


Figure 6-8. BIOS, Enabling Socket 1 (Example)

7. Choose whether to make the NVMe drives in this IOU Hot Plug Capable by selecting Enabled or Disabled.
8. Repeat steps 4 through 7 for each IOU # on each CPU to enable VMD on the desired NVMe ports.

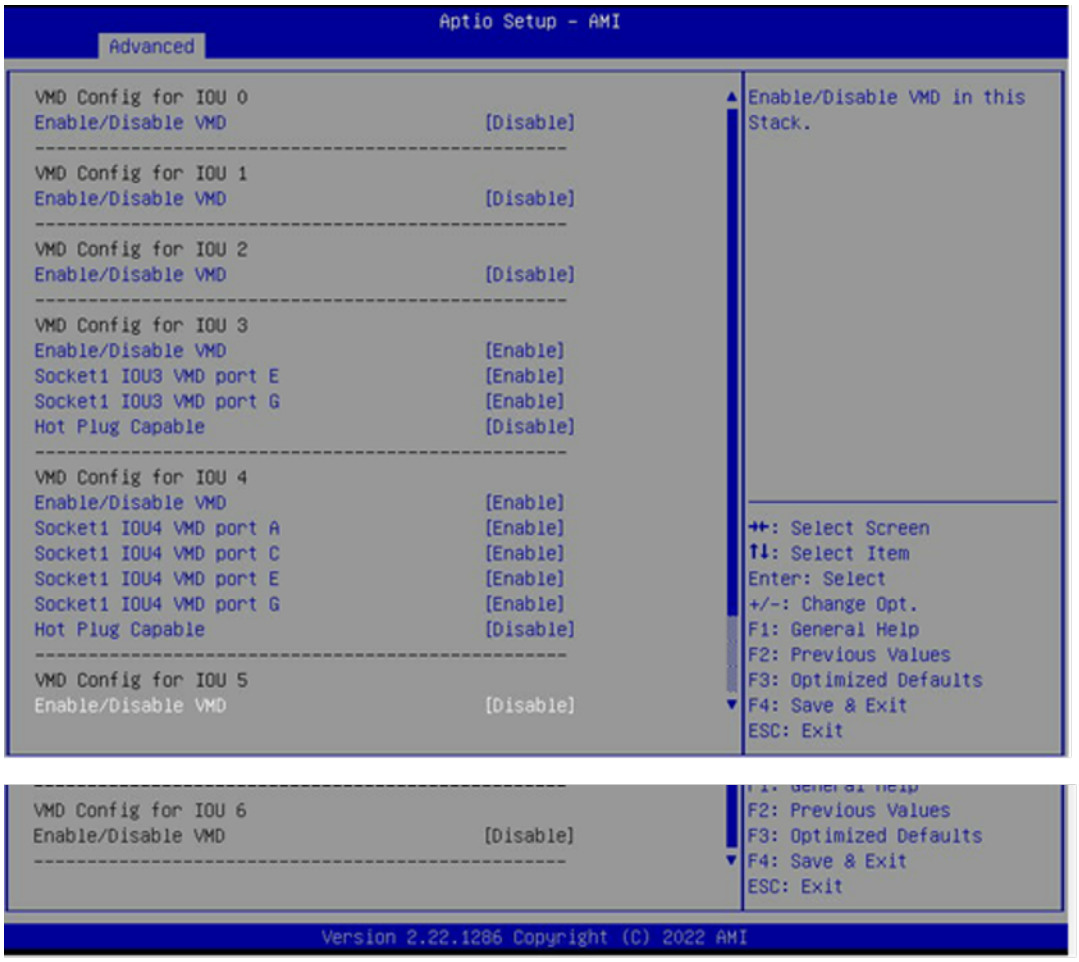


Figure 6-9. BIOS, Enabling Socket 1 Completed (Example)
(This example shows SYS-621H-TN12R with 12 NVMe. Other systems will look different.)

9. Press [F4] to save the configuration and reboot the system.

Creating NVMe RAID Configurations

1. Open Advanced > Intel(R) Virtual RAID on CPU > All Intel VMD Controllers > Create RAID Volume.

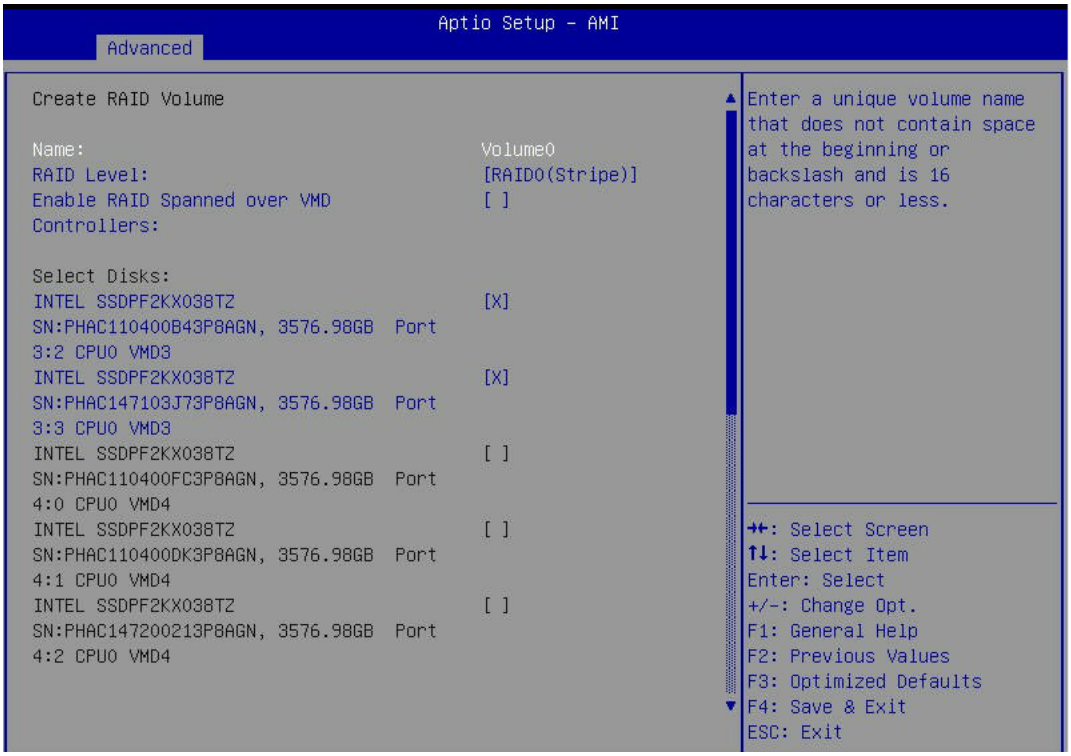


Figure 6-10. Creating Volume Without Enabling RAID Spanned over VMD Controller

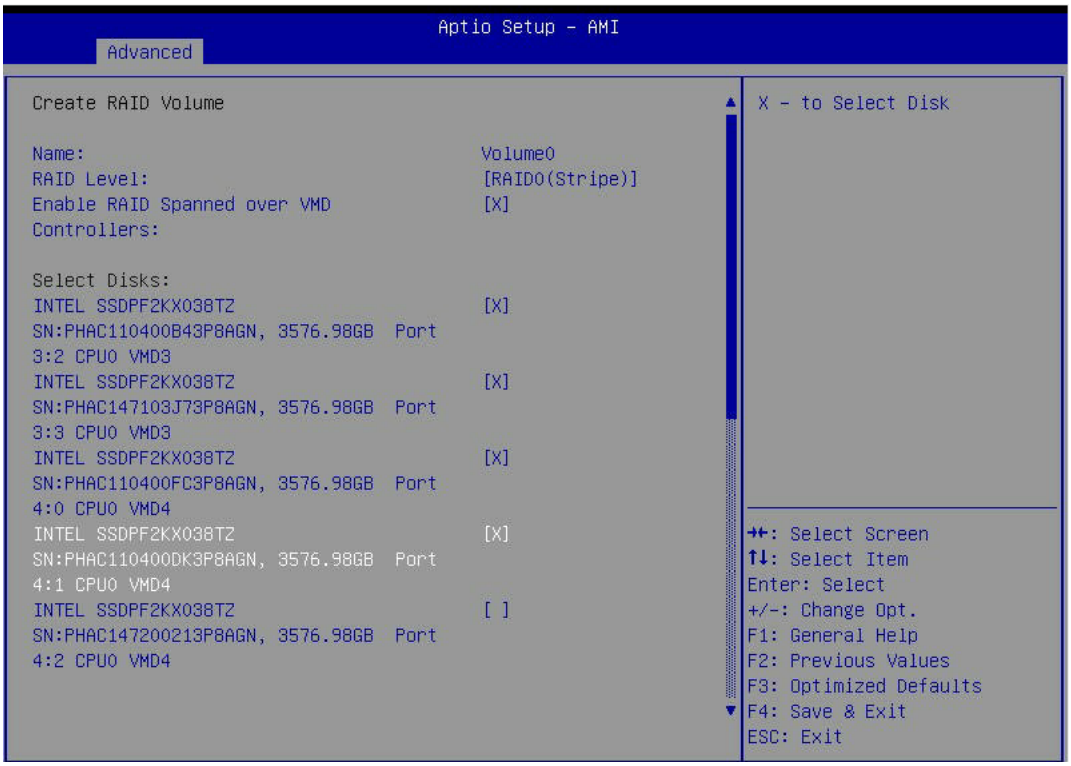


Figure 6-11. Creating Volume With Enabling RAID Spanned over VMD Controller

2. Set Name.
3. Set RAID Level.
4. If cross-controller RAID is required, select Enable RAID spanned over VMD Controller.
5. Select specific disks for RAID with an [X].
   - RAID0: Select at least two [2–24] disks
   - RAID1: Select only two disks
   - RAID5: Select at least three [3–24] disks
   - RAID10: Select only four disks
6. Select Strip Size (Default 64 KB).
7. Select Create Volume.
8. If another RAID is needed, start again at step 1.

Status Indications

An LED indicator on the drive carrier shows the RAID status of the drive.

Drive Carrier Status LED Indicator	
Status	**State (red)**
Normal function	Off
Locating	4 Hz blinking
Fault	Solid on
Rebuilding	1 Hz blinking
IBPI SFF 8489 Defined Status LED States	

Hot-Swap Drives

Intel VMD enables hot-plug and hot-unplug for NVMe SSDs, whether from Intel or other manufacturers. Under vSphere ESXi, several steps are necessary to avoid potential stability issues. See the information at link [1] below.

Hot-Unplug

1. Prevent devices from being re-detected during rescan:

   ```
   esxcli storage core claiming autoclaim --enabled=false
   ```

2. Unmount the VMFS volumes on the device. Check link [2] below for details.

3. Detach the device. Check link [3] below for details.
4. Physically remove the device.

Hot-Plug

- Physically install the device.

ESXi will automatically discover NVMe SSDs, but a manual scan may be required in some cases.

Related Information Links

1. https://kb.vmware.com/s/article/2151404
2. https://docs.vmware.com/en/VMware-vSphere/6.5/com.vmware.vsphere.storage.doc/GUID-1B56EF97-F60E-4F21-82A7-8F2A7294604D.html
3. https://docs.vmware.com/en/VMware-vSphere/6.5/com.vmware.vsphere.storage.doc/GUID-F2E75F67-740B-4406-9F0C-A2D99A698F2A.html

Chapter 7:

Troubleshooting and Support

The following content contains information on common issues and how to resolve them.

7.1 Online Resources **127**
Direct Links for the SYS-112HA-TN System 127
Direct Links for General Support and Information 127
7.2 Baseboard Management Controller (BMC) **128**
7.3 Troubleshooting Procedures **129**
Before Power On 129
No Power 129
No Video 129
System Boot Failure 129
Memory Errors 130
Losing the System's Setup Configuration 130
If the System Becomes Unstable 130
7.4 CMOS Clear **132**
7.5 Motherboard Battery **133**
7.6 Where to Get Replacement Components **134**
7.7 Technical Support Procedures **135**
Returning Merchandise for Service 135
7.8 Feedback **137**

7.1 Online Resources

A great deal of information is available on the Supermicro website. From the top menu of the Supermicro home page at https://www.supermicro.com:

- Specifications for servers and other hardware are available by clicking **Products**.
- The **Support** option offers downloads (manuals, BIOS/BMC, drivers, etc.), FAQs, RMA, warranty, and other service extensions.

Direct Links for the SYS-112HA-TN System

- SYS-112HA-TN system specifications page: https://www.supermicro.com/en/products/system/clouddc/emptyformfactor/sys-122c-tn
- X14SBH-AP motherboard page for links to the quick reference guide, user manual, validated storage drives, and more: https://www.supermicro.com/en/products/motherboard/x14dbhm

Direct Links for General Support and Information

- Frequently Asked Questions: https://www.supermicro.com/FAQ/index.php
- TPM User Guide: https://www.supermicro.com/manuals/other/AOM-TPM-9670V_9670H__X12_H12.pdf
- Product Resources page for validated memory details: https://www.supermicro.com/support/resources/mem.cfm
- Product Matrices page for links to tables summarizing specs for systems, motherboards, power supplies, riser cards, add-on cards, and more: https://www.supermicro.com/en/support/product-matrices
- Security Center for recent security notices: https://www.supermicro.com/en/support/security_center
- Supermicro Phone and Addresses: https://www.supermicro.com/en/about/contact

7.2 Baseboard Management Controller (BMC)

The SYS-112HA-TN server supports the Baseboard Management Controller (BMC). BMC is used to provide remote access, monitoring, and management. There are several BIOS settings that are related to BMC.

For general documentation and information on BMC, visit our website at the following page:

https://www.supermicro.com/en/solutions/management-software/bmc-resources

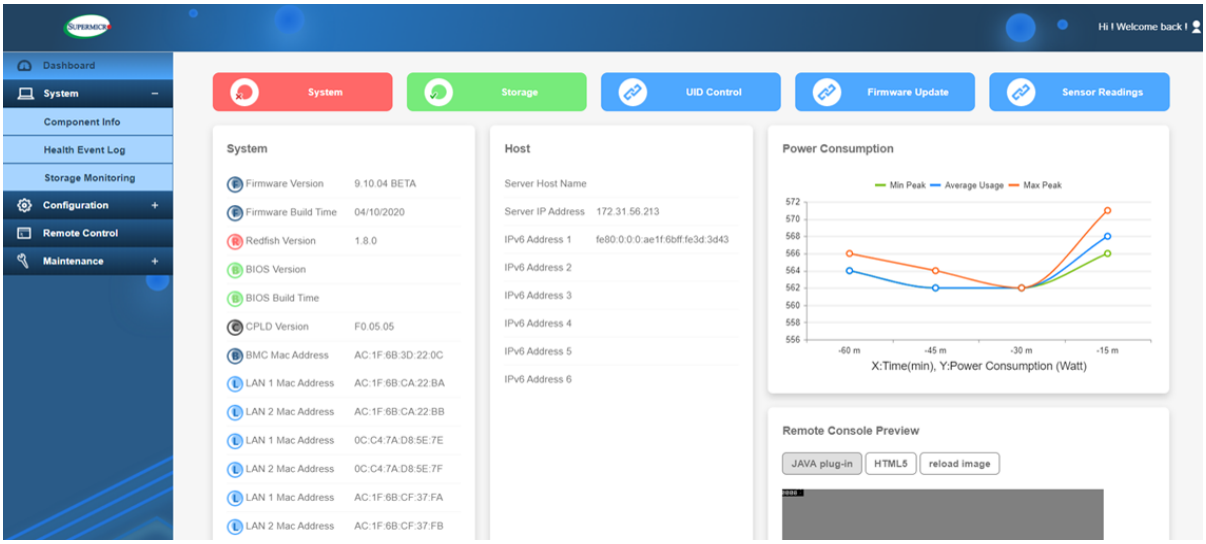


Figure 7-1. BMC Dashboard

7.3 Troubleshooting Procedures

Use the following procedures to troubleshoot your system. If you have followed all of the procedures below and still need assistance, refer to the "Technical Support Procedures" on page 135 section in this chapter. Always disconnect the AC power cord before adding, changing or installing any non hot-swap hardware components. If the below steps do not fix the setup configuration problem, contact your vendor for repairs.

Before Power On

1. Make sure that there are no short circuits between the motherboard and chassis.
2. Disconnect all ribbon/wire cables from the motherboard, including those for the keyboard and mouse.
3. Remove all add-on cards.
4. Install the processor (making sure it is fully seated) and connect the front panel connectors to the motherboard.

No Power

1. Make sure that there are no short circuits between the motherboard and the chassis.
2. The battery on your motherboard may be old. Check to verify that it still supplies approximately 3 VDC. If it does not, replace it with a new one.

No Video

1. If the power is on, but you do not have video, remove all add-on cards and cables.
2. Remove all memory modules and turn on the system (if the alarm is on, check the specs of memory modules, reset the memory, or try a different one).

System Boot Failure

If the system does not display Power-On-Self-Test (POST) or does not respond after the power is turned on, do the following:

1. Remove all components from the motherboard, especially the DIMMs. Power on the system and check if the power-on LED and the BMC Heartbeat LED are on, and system fans are spinning.

2. Turn on the system with only one DIMM installed. If the system boots, check for bad DIMMs or slots by following the Memory Errors Troubleshooting procedure in this chapter.

Memory Errors

When suspecting faulty memory is causing the system issue, check the following:

1. Make sure that the memory modules are compatible with the system and are properly installed. See "Maintenance and Component Installation" on page 39 for installation instructions. (For memory compatibility, refer to the "Tested Memory List" link on the motherboard's product page to see a list of supported memory.)
2. Check if different speeds of DIMMs have been installed. It is strongly recommended that you use the same RAM type and speed for all DIMMs in the system.
3. Make sure that you are using the correct type of DIMMs recommended by the manufacturer.
4. Check for bad DIMMs or slots by swapping a single module among all memory slots and check the results.

Losing the System's Setup Configuration

1. Make sure that you are using a high-quality power supply. A poor-quality power supply may cause the system to lose the CMOS setup information. Refer to "Introduction" on page 13 for details on recommended power supplies.
2. The battery on your motherboard may be old. Check to verify that it still supplies approximately 3 VDC. If it does not, replace it with a new one.

If the System Becomes Unstable

If the system becomes unstable during or after OS installation, check the following:

1. Processor/BIOS support: Make sure that your processor is supported and that you have the latest BIOS installed in your system.
2. Memory support: Make sure that the memory modules are supported. Refer to the product page on our website at https://www.supermicro.com. Test the modules using memtest86 or a similar utility.

   Note: Click on the "Tested Memory List" link on the motherboard's product page to see a list of supported memory.

3. Storage Drive support: Make sure that all storage drives work properly. Replace the failed storage drives with good ones.
4. System cooling: Check the system cooling to make sure that all heatsink fans and processor/system fans, etc., work properly. Check the hardware monitoring settings in the BMC to make sure that the processor and system temperatures are within the normal range. Also, check the front panel Overheat LED and make sure that it is not on.
5. Adequate power supply: Make sure that the power supply provides adequate power to the system. Make sure that all power connectors are connected. Refer to our website for more information on the minimum power requirements.
6. Proper software support: Make sure that the correct drivers are used.

If the system becomes unstable before or during OS installation, check the following:

1. Source of installation: Make sure that the devices used for installation are working properly, including boot devices such as a CD/Media drive.
2. Cable connection: Check to make sure that all cables are connected and working properly.
3. Use the minimum configuration for troubleshooting: Remove all unnecessary components (starting with add-on cards first), and use the minimum configuration (but with the processor and a memory module installed) to identify the trouble areas. Refer to the steps listed above in this section for proper troubleshooting procedures.
4. Identify bad components by isolating them: If necessary, remove a component in question from the chassis, and test it in isolation to make sure that it works properly. Replace a bad component with a good one.
5. Check and change one component at a time instead of changing several items at the same time. This will help isolate and identify the problem.
6. To find out if a component is good, swap this component with a new one to see if the system will work properly. If so, then the old component is bad. You can also install the component in question in another system. If the new system works, the component is good and the old system has problems.

7.4 CMOS Clear

JBT1 on the X14SBH-AP motherboard is used to clear CMOS, which will also clear any passwords. For information on clearing CMOS, refer to "CMOS Clear" on page 101 earlier in this manual.

7.5 Motherboard Battery

For information on removing, disposing of, and replacing the motherboard battery of your system, refer to "Motherboard Battery Removal and Installation" on page 70.

7.6 Where to Get Replacement Components

If you need replacement parts for your SYS-112HA-TN server, to ensure the highest level of professional service and technical support, purchase exclusively from our Supermicro Authorized Distributors/System Integrators/Resellers. A list can be found on the Supermicro website:

https://www.supermicro.com

Under the "Buy" menu, click the "Where to Buy" link.

7.7 Technical Support Procedures

Before contacting Technical Support, take the following steps. Also, note that as a motherboard manufacturer, Supermicro also sells motherboards through its channels, so it is best to first check with your distributor or reseller for troubleshooting services. They should know of any possible problems with the specific system configuration that was sold to you.

1. Refer to "Troubleshooting Procedures" on page 129 or see the FAQs on our website (https://www.supermicro.com/FAQ/index.php) before contacting Technical Support.
2. BIOS upgrades can be downloaded from our website (https://www.supermicro.com/support/resources/bios_ipmi.php).
3. If you still cannot resolve the problem, include the following information when contacting Supermicro for technical support:
   - Motherboard model and PCB revision number
   - BIOS release date/version (This can be seen on the initial display when your system first boots up.)
   - System configuration
4. An example of a Technical Support form is on our website at https://webpr3.supermicro.com/SupportPortal.
5. Distributors: For immediate assistance, have your account number ready when placing a call to our Technical Support department. For Supermicro contact information, refer to "Contacting Supermicro" on page 12.

Returning Merchandise for Service

A receipt or copy of your invoice marked with the date of purchase is required before any warranty service will be rendered. You can obtain service by calling your vendor for a Returned Merchandise Authorization (RMA) number. When returning the server to the manufacturer, the RMA number should be prominently displayed on the outside of the shipping carton, and the shipping package is mailed prepaid or hand-carried. Shipping and handling charges will be applied for all orders that must be mailed when service is complete.

For faster service, RMA authorizations can be requested online at the following page:

https://www.supermicro.com/RmaForm

Whenever possible, repack the server in the original Supermicro carton, using the original packaging material. If these are no longer available, be sure to pack the server securely, using packaging material to surround the server so that it does not shift within the carton and become damaged during shipping.

This warranty only covers normal consumer use and does not cover damages incurred in shipping or from failure due to the alternation, misuse, abuse or improper maintenance of products.

During the warranty period, contact your distributor first for any product problems.

7.8 Feedback

Supermicro values your feedback as we strive to improve our customer experience in all facets of our business. Email us at Techwriterteam@supermicro.com to provide feedback on our manuals.

Chapter 8:

UEFI BIOS

The following content contains information on BIOS configuration with the SYS-112HA-TN server.

8.1 Introduction **139**

8.2 Main Setup **141**

8.3 Advanced Setup Configurations **143**

8.4 Event Logs **144**

8.5 BMC **146**

8.6 Security **147**

8.7 Boot **149**

8.8 Save & Exit **151**

8.1 Introduction

This chapter describes the AMIBIOS™ Setup utility for the motherboard. The BIOS is stored on a chip and can be easily upgraded using the UEFI script (flash.nsh), the BMC WebUI, or the SuperServer Automation Assistant (SAA) utility.

Note: Due to periodic changes to the BIOS, some settings may have been added or deleted and might not yet be recorded in this manual. Refer to the Manual Download area of our website for any changes to BIOS that may not be reflected in this manual.

Updating BIOS

It is recommended that you do not upgrade your BIOS if you are not experiencing any problems with your system. Updated BIOS files are located on our website at the following page:

https://www.supermicro.com/support/resources/bios_ipmi.php

Check our BIOS warning message and the information on how to update your BIOS on our website. Select your motherboard model and download the BIOS file to your computer. Also, check the current BIOS revision to make sure that it is newer than your BIOS before downloading.

Important: Do not shut down or reset the system while updating the BIOS to prevent possible system boot failure! Read the motherboard README file carefully before you perform the BIOS update.

To update the BIOS under the UEFI Shell, unzip the BIOS file onto a bootable USB device and then boot into the built-in UEFI Shell. For motherboards with BMC support, type "flash.nsh <BIOS filename><BMC Username><BMC Password>" to start the BIOS update. The flash.nsh script will invoke the SAA (EFI) tool automatically to perform the BIOS update, beginning with uploading the BIOS image to BMC. After uploading the BIOS image, the system will reboot to continue the process. The BMC will take over and continue the BIOS update in the background. The process will take 3–5 minutes. Refer to the README file for more information.

Starting the Setup Utility

To enter the BIOS Setup utility, press the <Delete> key while the system is booting-up. In most cases, the <Delete> key is used to invoke the BIOS Setup screen. There are a few cases when other hot keys are used, such as <F1>, <F2>, etc. Each main BIOS menu option is described in this manual.

The Main BIOS screen has two main frames. The left frame displays all the options that can be configured. “Grayed-out” options cannot be configured. The right frame displays the key legend. Above the key legend is an area reserved for a text message. When a BIOS submenu or item is selected in the left frame, it is highlighted in white. Often a text message will accompany it. (Note that BIOS has default text messages built in. We retain the option to include, omit, or change any of these text messages.) Settings printed in Bold are the default values.

A "►" indicates a submenu. Highlighting such an item and pressing the <Enter> key open the list of settings within that submenu.

The BIOS Setup utility uses a key-based navigation system called hot keys. Most of these hot keys (<F1>, <F2>, <F3>, <F4>, <F5>, <F6>, <Enter>, <ESC>, the arrow keys, etc.) can be used at any time during the setup navigation process.

8.2 Main Setup

The Main setup screen appears when the AMI BIOS Setup utility is first entered. To return to the Main setup screen, select the Main tab at the top of the screen. The Main BIOS setup screen is shown below.

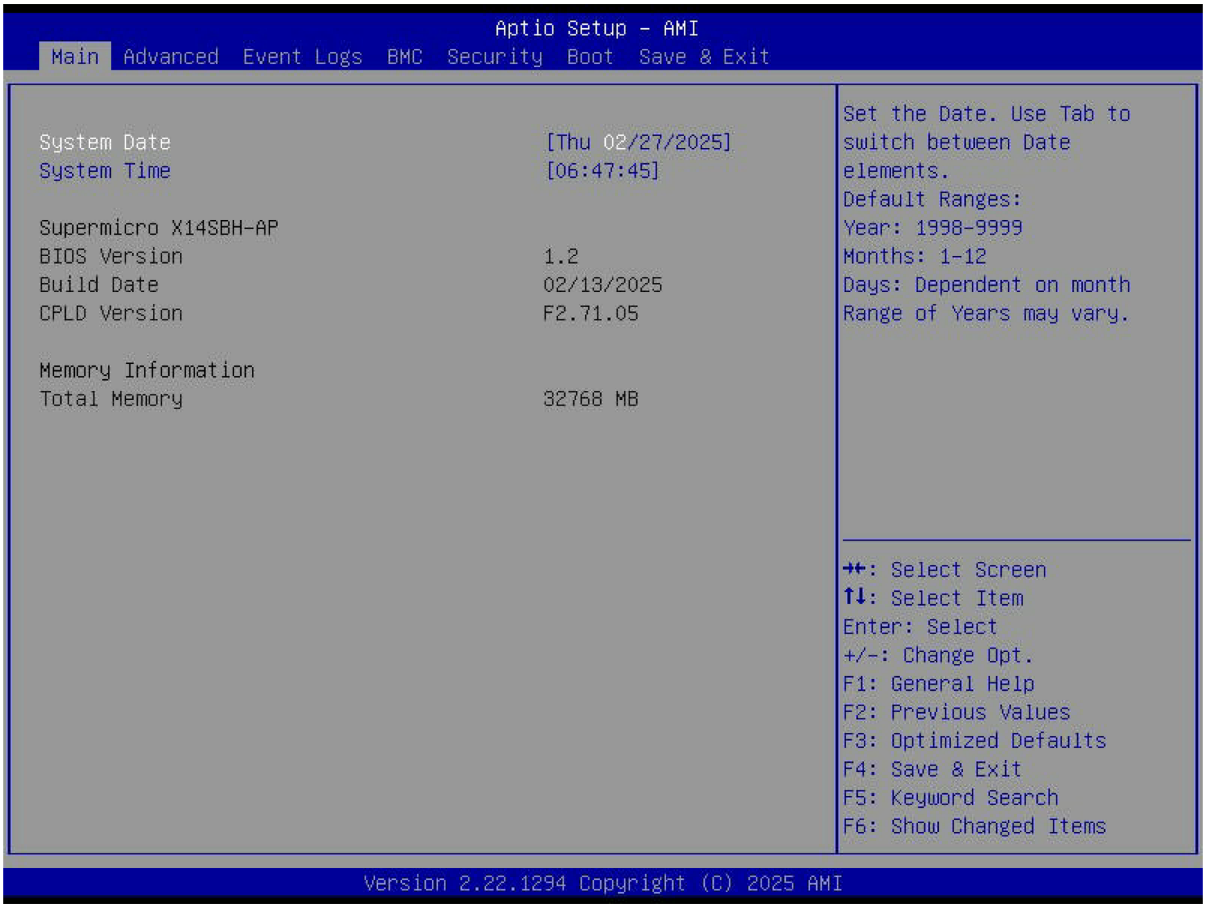


Figure 8-1. Main Setup Screen

System Date/System Time

Use the two features to change the system date and time. Highlight **System Date** or **System Time** using the arrow keys. Enter new values using the keyboard. Press the <Tab> key or the arrow keys to move between fields. The date must be entered in MM/DD/YYYY format. The time is entered in HH:MM:SS format.

Note: The time is in the 24-hour format. For example, 5:30 P.M. appears as 17:30:00.

Supermicro X14SBH-AP

BIOS Version

This feature displays the version of the BIOS ROM used in the system.

Build Date

This feature displays the date when the version of the BIOS ROM used in the system was built.

CPLD Version

This feature displays the version of the Complex-Programmable Logical Device (CPLD) used in the system.

Memory Information

Total Memory

This feature displays the total size of memory available in the system.

8.3 Advanced Setup Configurations

Use the arrow keys to select the Advanced submenu and press <Enter> to access the submenu items.

Important: Use caution when changing the Advanced settings. An incorrect value, an improper DRAM frequency, or a wrong BIOS timing setting may cause the system to malfunction. When this occurs, revert the settings to the default manufacturing settings.

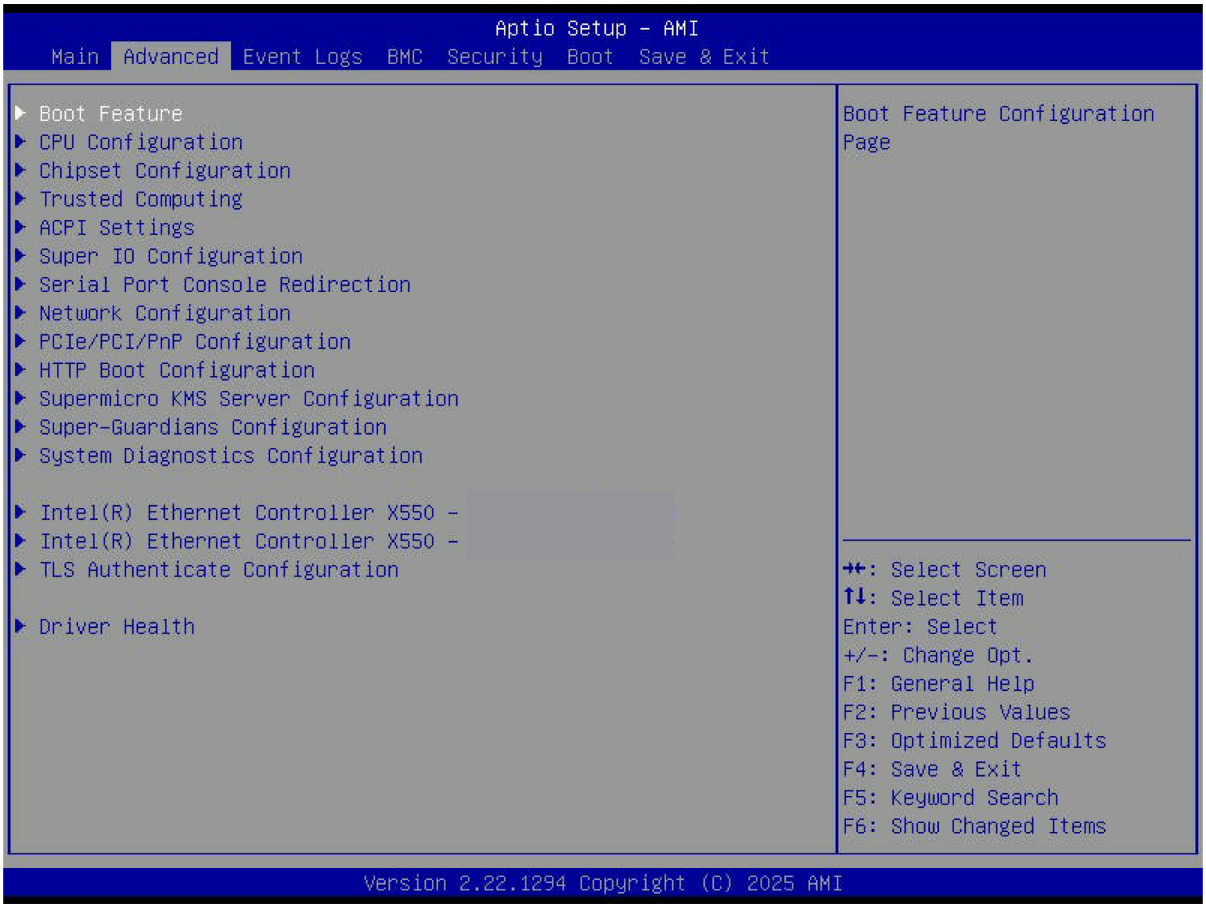


Figure 8-2. Advanced Setup Configurations Screen

8.4 Event Logs

Use this menu to configure Event Logs settings.

Note: After making any changes in this section, please be sure to reboot the system for the changes to take effect.

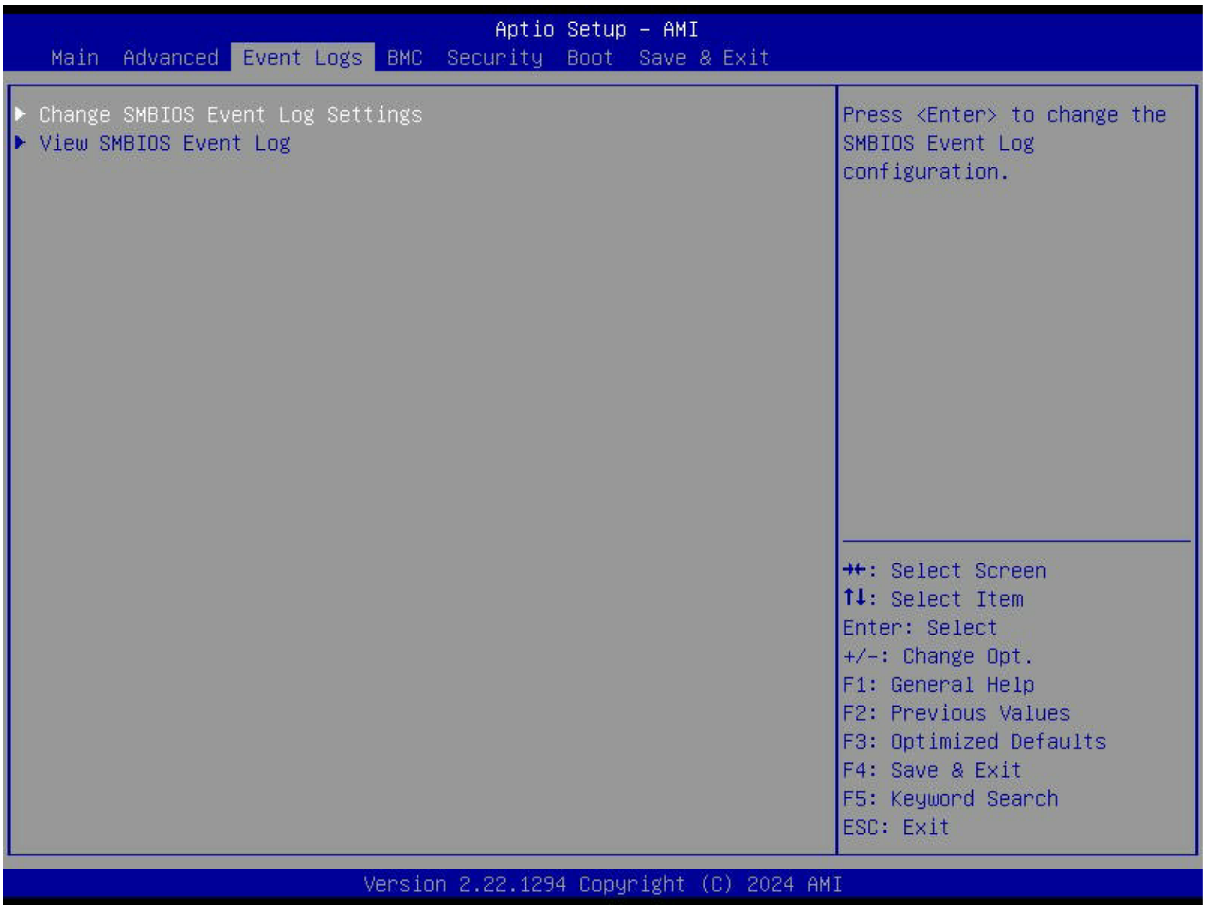


Figure 8-3. Event Logs Screen

►Change SMBIOS Event Log Settings

Note: Reboot the system for the changes in this section to take effect.

Enabling/Disabling Options

SMBIOS Event Log

Select Enabled to enable System Management BIOS (SMBIOS) Event Logging during system boot. The options are Disabled and **Enabled**.

Erasing Settings

Erase Event Log (Available when "SMBIOS Event Log" is set to Enabled)

Select No to keep the event log without erasing it upon next system bootup. Select (Yes, Next reset) to erase the event log upon next system reboot. The options are **No**, (Yes, Next reset), and (Yes, Every reset).

When Log is Full (Available when "SMBIOS Event Log" is set to Enabled)

Select Erase Immediately to immediately erase all errors in the SMBIOS event log when the event log is full. Select Do Nothing for the system to do nothing when the SMBIOS event log is full. The options are **Do Nothing** and Erase Immediately.

SMBIOS Event Log Standard Settings

Log System Boot Event (Available when "SMBIOS Event Log" is set to Enabled)

Select Enabled to log system boot events. The options are Enabled and **Disabled**.

MECI (Available when "SMBIOS Event Log" is set to Enabled)

Enter the increment value for the multiple event counter. Enter a number between 1 and 255. The default setting is **1**. (MECI is the abbreviation for Multiple Event Count Increment.)

METW (Available when "SMBIOS Event Log" is set to Enabled)

Use this feature to determine how long (in minutes) should the multiple event counter wait before generating a new event log. Enter a number between 0 and 99. The default value is **60**. (METW is the abbreviation for Multiple Event Count Time Window.)

►View SMBIOS Event Log

Use this feature to view the event in the system event log. Select this feature and press <Enter> to view the status of an event in the log. The following information is displayed: DATE / TIME / ERROR CODE / SEVERITY.

8.5 BMC

Use this menu to configure Baseboard Management Console (BMC) settings.



Figure 8-4. BMC Screen

BMC Firmware Revision

This feature indicates the BMC firmware revision used in this system.

BMC STATUS

This feature indicates the status of the BMC firmware installed in this system.

8.6 Security

Use this menu to configure the following security settings for the system.

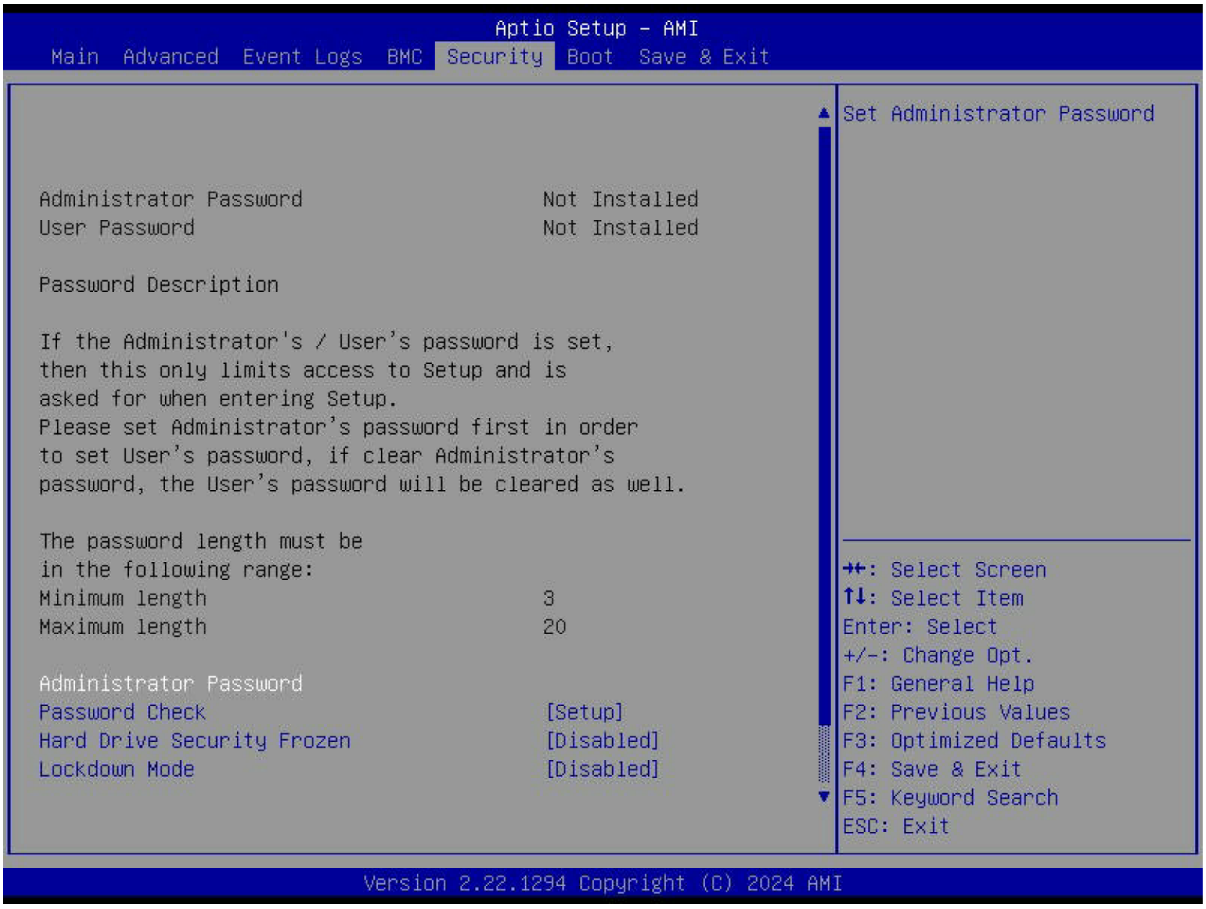


Figure 8-5. Security Screen

Disable Block Sid and Freeze Lock (Available when your storage devices support TCG)

Select Enabled to allow SID authentication to be performed in TCG storage devices. The options are **Disabled** and Enabled.

The following information is displayed:

- Administrator Password
- User Password
- Password Description

Administrator Password

This feature indicates if an administrator password has been installed. Use this feature to set the administrator password, which is required to enter the BIOS Setup utility. The length of the password can be between three and 20 characters long.

User Password (Available when "Administrator Password" has been set)

This feature indicates if a user password has been installed. Use this feature to set the user password which is required to enter the BIOS Setup utility. The length of the password can be between three and 20 characters long.

Password Check

Select Setup for the system to check for a password upon entering the BIOS Setup utility. Select Always for the system to check for the passwords needed at bootup and upon entering the BIOS Setup utility. The options are **Setup** and Always.

Hard Drive Security Frozen

Select Enabled to freeze the Lock Security feature for HDD to protect key data in hard drives from being altered. The options are **Disabled** and Enabled.

Lockdown Mode (Available when the DCMS key is activated)

Select Enabled to support the Lockdown Mode, which prevents the existing data or keys stored in the system from being altered or changed in an effort to preserve system integrity and security. The options are **Disabled** and Enabled.

8.7 Boot

Use this menu to configure Boot settings.

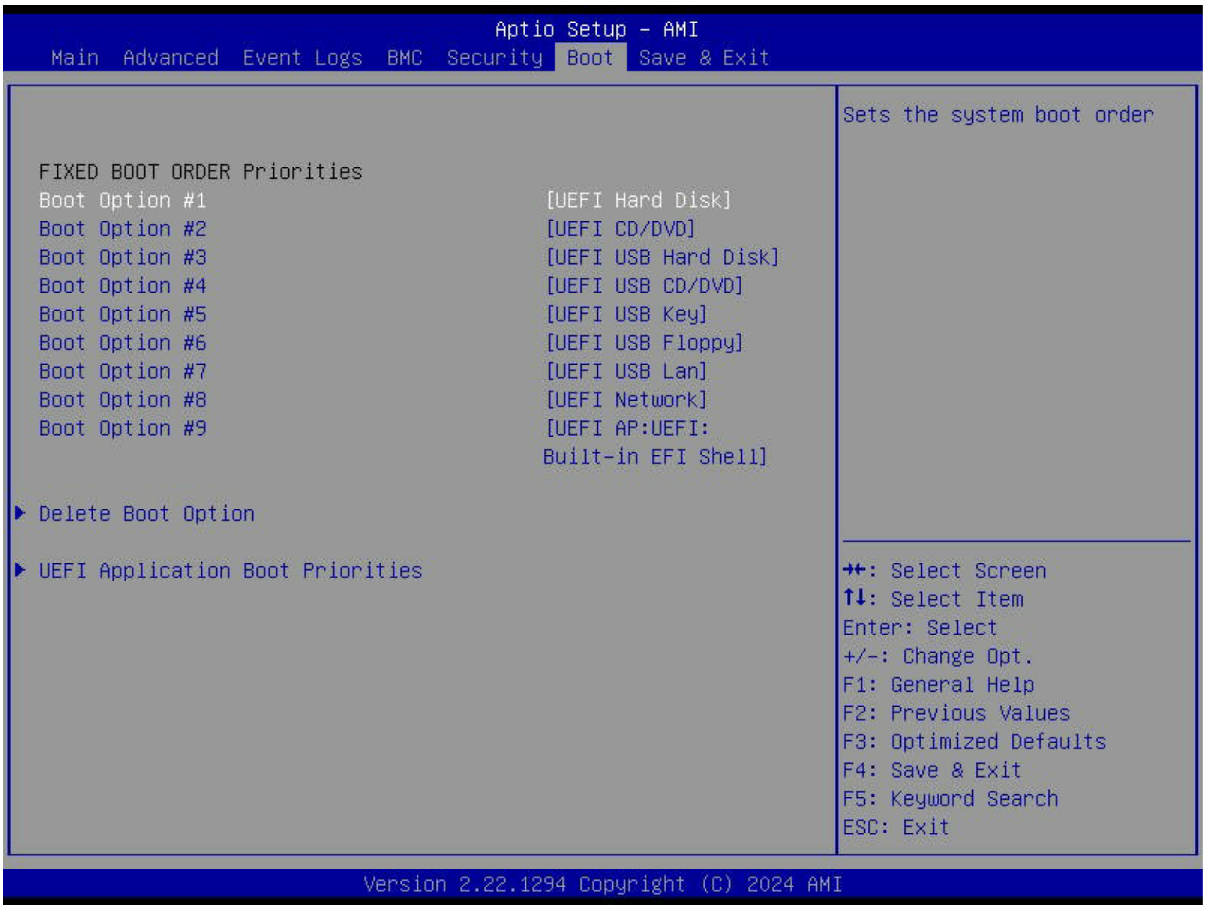


Figure 8-6. Boot Screen

FIXED BOOT ORDER Priorities

Use this feature to prioritize the order of a bootable device from which the system will boot. Press <Enter> on each item sequentially to select the device.

- Boot Option #1 – Boot Option #9

►Add New Boot Option

Use this feature to add a new boot option to the boot priority features for system boot.

Note: This submenu is available when any storage device is detected by the BIOS.

Add boot option

Use this feature to specify the name for the new boot option.

Path for boot option

Use this feature to enter the path for the new boot option in the format fsx:\path\filename.efi.

Boot option File Path

Use this feature to specify the file path for the new boot option.

Create

After setting the name and the file path for the boot option, press <Enter> to create the new boot option in the boot priority list.

►Delete Boot Option

Use this feature to select a boot device to delete from the boot priority list.

Delete Boot Option

Use this feature to remove an EFI boot option from the boot priority list.

►UEFI NETWORK Drive BBS Priorities

Use this feature to set the system boot order of detected devices.

►UEFI Application Boot Priorities

Use this feature to set the system boot order of detected devices.

►UEFI USB Key Drive BBS Priorities

Use this feature to set the system boot order of detected devices.

►UEFI Hard Disk Drive BBS Priorities

Use this feature to set the system boot order of detected devices.

8.8 Save & Exit

Select Save & Exit from the BIOS Setup screen to configure the settings below.

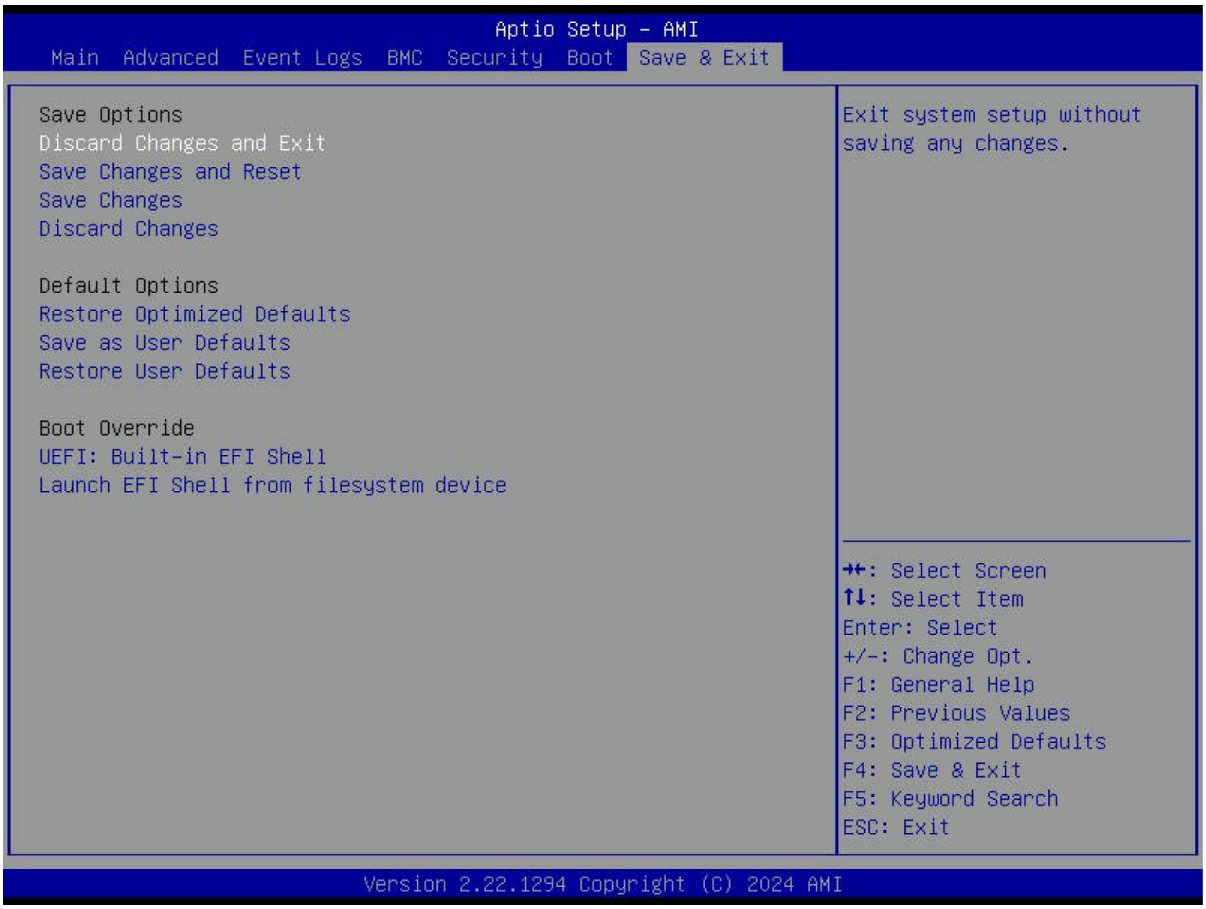


Figure 8-7. Save & Exit Screen

Save Options

Discard Changes and Exit

Use this feature to exit from the BIOS Setup utility without making any permanent changes to the system configuration and reboot the computer.

Save Changes and Reset

On completing the system configuration changes, use this feature to exit the BIOS Setup utility and reboot the computer for the new system configuration parameters to take effect.

Save Changes

On completing the system configuration changes, use this feature to save all changes made. This will not reset (reboot) the system.

Discard Changes

Select this feature and press <Enter> to discard all changes made and return to the BIOS Setup utility.

Default Options

Restore Optimized Defaults

Select this feature and press <Enter> to load manufacturer optimized default settings, which are intended for maximum system performance but not for maximum stability.

Note: After pressing <Enter>, reboot the system for the changes to take effect, which ensures that this system has the optimized default settings.

Save as User Defaults

Select this feature and press <Enter> to save all changes as the default values specified to the BIOS Setup utility for future use.

Restore User Defaults

Select this feature and press <Enter> to retrieve user-defined default settings that have been saved previously.

Boot Override

Note: Use this section to override the Boot priorities sequence in the Boot menu, and immediately boot the system with a device specified here instead of the one specified in the boot list. This is a one-time boot override.

Launch EFI Shell from filesystem device

Use this feature to launch the EFI shell application (Shell.efi) from one of the available filesystem devices. A filesystem is a virtual, logical, or physical system for organizing, managing, and accessing the files and directories on devices such as SSDs, HDDs, or other storage devices.

Appendix A:

BIOS Codes

For information about BIOS codes for the SYS-112HA-TN server, refer to the following content.

BIOS Error POST (Beep) Codes

During the Power-On Self-Test (POST) routines, which are performed each time the system is powered on, errors may occur.

Non-fatal errors are those which, in most cases, allow the system to continue the boot up process. The error messages normally appear on the screen.

Fatal errors are those which will not allow the system to continue the boot up process. If a fatal error occurs, you should consult with your system manufacturer for possible repairs.

These fatal errors are usually communicated through a series of audible beeps that can be heard on an external buzzer connected to JD1. The table shown below lists some common errors and their corresponding beep codes encountered by users.

BIOS Beep (POST) Codes		
Beep Code	**Error Message**	**Description**
1 beep	Refresh	Circuits have been reset (Ready to power up)
5 short, 1 long	Memory error	No memory detected in system
5 short, 2 long	Display memory read/write error	Video adapter missing or with faulty memory
1 long continuous	System OH	System overheat condition

Additional BIOS POST Codes

The AMI BIOS supplies additional checkpoint codes, which are documented online at https://www.supermicro.com/support/manuals ("AMI BIOS POST Codes User's Guide").

For information on AMI updates, refer to https://www.ami.com/products.

Appendix B:

Standardized Warning Statements for AC Systems

The following statements are industry standard warnings, provided to warn the user of situations which have the potential for bodily injury. Should you have questions or experience difficulty, contact Supermicro's Technical Support department for assistance. Only certified technicians should attempt to install or configure components.

Read this section in its entirety before installing or configuring components in the Supermicro SYS-112HA-TN server.

These warnings may also be found on our website at the following page:

https://www.supermicro.com/about/policies/safety_information.cfm

Warning Definition



Warning! This warning symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents.

この警告サインは危険を意味します。

人身事故につながる可能性がありますので、いずれの機器でも動作させる前に、

電気回路に含まれる危険性に注意して、標準的な事故防止策に精通して下さい。

此警告符号代表危险。

您正处于可能受到严重伤害的工作环境中。在您使用设备开始工作之前、必须充分意识到触电的危险、并熟练掌握防止事故发生的标准工作程序。请根据每项警告结尾的声明号码找到此设备的安全性警告说明的翻译文本。

此警告符號代表危險。

您正處於可能身體可能會受損傷的工作環境中。在您使用任何設備之前、請注意觸電的危險、並且要熟悉預防事故發生的標準工作程序。請依照每一注意事項後的號碼找到相關的翻譯說明內容。

WICHTIGE SICHERHEITSHINWEISE

Dieses Warnsymbol bedeutet Gefahr. Sie befinden sich in einer Situation, die zu Verletzungen führen kann. Machen Sie sich vor der Arbeit mit Geräten mit den Gefahren elektrischer Schaltungen und den üblichen Verfahren zur Vorbeugung vor Unfällen vertraut. Suchen Sie mit der am Ende jeder Warnung angegebenen Anweisungsnummer nach der jeweiligen Übersetzung in den übersetzten Sicherheitshinweisen, die zusammen mit diesem Gerät ausgeliefert wurden.

BEWAHREN SIE DIESE HINWEISE GUT AUF.

INSTRUCCIONES IMPORTANTES DE SEGURIDAD

Este símbolo de aviso indica peligro. Existe riesgo para su integridad física. Antes de manipular cualquier equipo, considere los riesgos de la corriente eléctrica y familiarícese con los procedimientos estándar de prevención de accidentes. Al final de cada advertencia encontrará el número que le ayudará a encontrar el texto traducido en el apartado de traducciones que acompaña a este dispositivo.

GUARDE ESTAS INSTRUCCIONES.

IMPORTANTES INFORMATIONS DE SÉCURITÉ

Ce symbole d'avertissement indique un danger. Vous vous trouvez dans une situation pouvant entraîner des blessures ou des dommages corporels. Avant de travailler sur un équipement, soyez conscient des dangers liés aux circuits électriques et familiarisez-vous avec les procédures couramment utilisées pour éviter les accidents. Pour prendre connaissance des traductions des avertissements figurant dans les consignes de sécurité traduites qui accompagnent cet appareil, référez-vous au numéro de l'instruction situé à la fin de chaque avertissement.

CONSERVEZ CES INFORMATIONS.

תקנון הצהרות אזהרה

הצהרות הבאות הן אזהרות על פי תקני התעשייה, על מנת להזהיר את המשתמש מפני חבלה

פיזית אפשרית. במידה ויש שאלות או היתקלות בבעיה כלשהי, יש ליצור קשר עם מחלקת תמיכה

טכנית של סופרמיקרו. טכנאים מוסמכים בלבד רשאים להתקין או להגדיר את הרכיבים.

יש לקרוא את הנספח במלואו לפני התקנת או הגדרת הרכיבים במארזי סופרמיקרו.

ا كً ف حالة وٌكي أى تتسبب ف اصابة جسذ ةٌ هذا الز هز عٌ خطز !تحذ زٌ.

قبل أى تعول على أي هعذات،كي على علن بالوخاطز ال اجٌوة عي الذوائز

الكهزبائ ةٍ

وكي على درا ةٌ بالووارسات النقائ ةٍ لو عٌ وقنع أي حادث

استخذم رقن الب إى الو صٌنص ف هًا ةٌ كل تحذ زٌ للعثر تزجوتها

안전을 위한 주의사항

이 경고 기호는 위험이 있음을 알려 줍니다. 작업자의 신체에 부상을 야기 할 수 있는 상태에 있게 됩니다. 모든 장비에 대한 작업을 수행하기 전에 전기회로와 관련된 위험요소들을 확인하시고 사전에 사고를 방지할 수 있도록 표준 작업절차를 준수해 주시기 바랍니다.

해당 번역문을 찾기 위해 각 경고의 마지막 부분에 제공된 경고문 번호를 참조하십시오

BELANGRIJKE VEILIGHEIDSINSTRUCTIES

Dit waarschuwings symbool betekent gevaar. U verkeert in een situatie die lichamelijk letsel kan veroorzaken. Voordat u aan enige apparatuur gaat werken, dient u zich bewust te zijn van de bij een elektrische installatie betrokken risico's en dient u op de hoogte te zijn van de standaard procedures om ongelukken te voorkomen. Gebruik de nummers aan het eind van elke waarschuwing om deze te herleiden naar de desbetreffende locatie.

BEWAAR DEZE INSTRUCTIES

Installation Instructions



Warning! Read the installation instructions before connecting the system to the power source.

警告!

システムを電源に接続する前に、設置手順書をお読み下さい。

警告!

将此系统连接电源前、请先阅读安装说明。

警告!

將系統與電源連接前、請先閱讀安裝說明。

Warnung!

Vor dem Anschließen des Systems an die Stromquelle die Installationsanweisungen lesen.

¡Advertencia!

Lea las instrucciones de instalación antes de conectar el sistema a la red de alimentación.

Attention!

Avant de brancher le système sur la source d'alimentation, consulter les directives d'installation.

אַזהָרָה!

יש לקרוא את הוראות התקנה לפני חיבור המערכת למקור מתח.

تحذير!

اقر إرشادات التركيب قبل توصيل النظام إلى مصدر للطاقة

경고!

시스템을 전원에 연결하기 전에 설치 안내를 읽어주십시오.

Waarschuwing!

Raadpleeg de installatie-instructies voordat u het systeem op de voedingsbron aansluit.

Circuit Breaker



Warning! This product relies on the building's installation for short-circuit (overcurrent) protection. Ensure that the protective device is rated not greater than: 250 V, 20 A.

警告!

この製品は、短絡(過電流)保護装置がある建物での設置を前提としています。

保護装置の定格が250 V、20 Aを超えないことを確認下さい。

警告!

此产品的短路(过载电流)保护由建筑物的供电系统提供,确保短路保护设备的额定电流不大于 250 V、20 A。

警告!

此產品的短路(過載電流)保護由建築物的供電系統提供,確保短路保護設備的額定電流不大於 250 V、20 A。

Warnung!

Dieses Produkt ist darauf angewiesen, dass im Gebäude ein Kurzschluss bzw. Überstromschutz installiert ist. Stellen Sie sicher, dass der Nennwert der Schutzvorrichtung nicht mehr als: 250 V, 20 A beträgt.

¡Advertencia!

Este equipo utiliza el sistema de protección contra cortocircuitos (o sobrecorrientes) del edificio. Asegúrese de que el dispositivo de protección no sea superior a: 250 V, 20 A.

Attention!

Pour ce qui est de la protection contre les courts-circuits (surtension), ce produit dépend de l'installation électrique du local. Vérifiez que le courant nominal du dispositif de protection n'est pas supérieur à :250 V, 20 A.

אזהרה!

מוצר זה מסתמך על הגנה המותקנת במבנים למניעת קצר חשמלי. יש לוודא כי

המכשיר המגן מפני הקצר החשמלי הוא לא יותר מ-250 V, 20 A

تحذير!

هذا المنتج يعتمد على معداث الحمايت مه الدوائر القصيرة التي تم تثبيتها في

المبنى

تأكد من أن تقييم الجهاز الوقائي ليس أكثر من : 20 A, 250 V

경고!

이 제품은 전원의 단락(과전류)방지에 대해서 전적으로 건물의 관련 설비에 의존합니다. 보호장치의 정격이 반드시 250 V(볼트), 20 A(암페어)를 초과하지 않도록 해야 합니다.

Waarschuwing!

Dit product is afhankelijk van de kortsluitbeveiliging (overspanning) van uw electrische installatie. Controleer of het beveiligde aparaat niet groter gedimensioneerd is dan 250 V, 20 A.

Power Disconnection Warning



Warning! The system must be disconnected from all sources of power and the power cord removed from the power supply module(s) before accessing the chassis interior to install or remove system components (except for hot-swap components).

警告!

システムコンポーネントの取り付けまたは取り外しのために、シャーシー内部にアクセスするには、

システムの電源はすべてのソースから切断され、電源コードは電源モジュールから取り外す必要があります。

警告!

在你打开机箱并安装或移除内部器件前、必须将系统完全断电、并移除电源线。

警告!

在您打開機殼安裝或移除內部元件前、必須將系統完全斷電、並移除電源線。

Warnung!

Das System muss von allen Quellen der Energie und vom Netzanschlusskabel getrennt sein, das von den Spg.Versorgungsteilmodulen entfernt wird, bevor es auf den Chassisinnenraum zurückgreift, um Systemsbestandteile anzubringen oder zu entfernen.

¡Advertencia!

El sistema debe ser disconnected de todas las fuentes de energía y del cable eléctrico quitado de los módulos de fuente de alimentación antes de tener acceso el interior del chasis para instalar o para quitar componentes de sistema.

Attention!

Le système doit être débranché de toutes les sources de puissance ainsi que de son cordon d'alimentation secteur avant d'accéder à l'intérieur du chassis pour installer ou enlever des composants de systéme.

אזהרה!

יש לנתק את המערכת מכל מקורות החשמל ויש להסיר את כבל החשמלי מהספק

לפני גישה לחלק הפנימי של המארז לצורך התקנת או הסרת רכיבים.

تحذير!

يجب فصم انتظاو من جميع مصادر انطاقت وإزانت سهك انكهرباء من وحدة امداد

انطاقت قبم

انصسل إنى انمناطق انداخهيت نههيكم نتثبيج أو إزانت مكنناث الجهاز

경고!

시스템에 부품들을 장착하거나 제거하기 위해서는 섀시 내부에 접근하기 전에 반드시 전원 공급장치로부터 연결되어있는 모든 전원과 전기코드를 분리해주어야 합니다.

Waarschuwing!

Voordat u toegang neemt tot het binnenwerk van de behuizing voor het installeren of verwijderen van systeem onderdelen, dient u alle spanningsbronnen en alle stroomkabels aangesloten op de voeding(en) van de behuizing te verwijderen

Equipment Installation



Warning! Only authorized personnel and qualified service persons should be allowed to install, replace, or service this equipment.

警告!

トレーニングを受け認定された人だけがこの装置の設置、交換、またはサービスを許可されています。

警告!

只有经过培训且具有资格的人员才能进行此设备的安装、更换和维修。

警告!

只有經過受訓且具資格人員才可安裝、更換與維修此設備。

Warnung!

Nur autorisiertes Personal und qualifizierte Servicetechniker dürfen dieses Gerät installieren, austauschen oder warten.

¡Advertencia!

Sólo el personal autorizado y el personal de servicio calificado deben poder instalar, reemplazar o dar servicio a este equipo.

Attention!

Seul le personnel autorisé et le personnel de maintenance qualifié doivent être autorisés à installer, remplacer ou entretenir cet équipement.

אזהרה!

יש לאפשר רק צוות מורשה ואנשי שירות מוסמכים להתקין, להחליף או לטפל בציוד זה.

تحذير!

ينبغي السماح فقط للموظفين المعتمدين وأفراد الخدمة المؤهلين بتركيب هذا الجهاز أو استبداله أو صيانته.

경고!

승인된 직원과 자격을 갖춘 서비스 담당자만이 이 장비를 설치, 교체 또는 서비스할 수 있습니다.

Waarschuwing!

Alleen geautoriseerd personeel en gekwalificeerd onderhoudspersoneel mag deze apparatuur installeren, vervangen of onderhouden.

Restricted Area



Warning! This unit is intended for installation in restricted access areas. A restricted access area can be accessed only through the use of a special tool, lock and key, or other means of security. (This warning does not apply to workstations).

警告!

このユニットは、アクセス制限区域に設置されることを想定しています。

アクセス制限区域は、特別なツール、鍵と錠前、その他のセキュリティの手段を用いてのみ出入りが可能です。

警告!

此部件应安装在限制进出的场所、限制进出的场所指只能通过使用特殊工具、锁和钥匙或其它安全手段进出的场所。

警告!

此裝置僅限安裝於進出管制區域、進出管制區域係指僅能以特殊工具、鎖頭及鑰匙或其他安全方式才能進入的區域。

Warnung!

Diese Einheit ist zur Installation in Bereichen mit beschränktem Zutritt vorgesehen. Der Zutritt zu derartigen Bereichen ist nur mit einem Spezialwerkzeug, Schloss und Schlüssel oder einer sonstigen Sicherheitsvorkehrung möglich.

¡Advertencia!

Esta unidad ha sido diseñada para instalación en áreas de acceso restringido. Sólo puede obtenerse acceso a una de estas áreas mediante la utilización de una herramienta especial, cerradura con llave u otro medio de seguridad.

Attention!

Cet appareil doit être installée dans des zones d'accès réservés. L'accès à une zone d'accès réservé n'est possible qu'en utilisant un outil spécial, un mécanisme de verrouillage et une clé, ou tout autre moyen de sécurité.

אזהרה!

יש להתקין את היחידה באזורים שיש בהם הגבלת גישה. הגישה ניתנת בעזרת

'כלי אבטחה בלבד (מפתח, מנעול וכד.)

تحذير!

اتخصيص هذه انحذة نترك بُها ف مناطق محظورة تم .

مَكن انصل إن منطقت محظورة فقط من خلال استخذاو أداة خاصت،

أو أ وس هُت أخري نلالأمما قفم ومفتاح

경고!

이 장치는 접근이 제한된 구역에 설치하도록 되어있습니다. 특수도구, 잠금 장치 및 키, 또는 기타 보안 수단을 통해서만 접근 제한 구역에 들어갈 수 있습니다.

Waarschuwing!

Dit apparaat is bedoeld voor installatie in gebieden met een beperkte toegang. Toegang tot dergelijke gebieden kunnen alleen verkregen worden door gebruik te maken van speciaal gereedschap, slot en sleutel of andere veiligheidsmaatregelen.

Battery Handling



CAUTION There is risk of explosion if the battery is replaced by an incorrect type. Replace the battery only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

警告!

バッテリーを間違ったタイプに交換すると爆発の危険があります。交換する電池はメーカーが推奨する型、または同等のものを使用下さい。使用済電池は製造元の指示に従って処分して下さい。

警告!

如果更换的电池类型不正确。请只使用同类电池或制造商推荐的功能相当的电池更换原有电池。请按制造商的说明处理废旧电池。

警告!

如果更換的電池類型不正確。請使用製造商建議之相同或功能相當的電池更換原有電池。請按照製造商的說明指示處理廢棄舊電池。

WARNUNG!

Es besteht Explosionsgefahr, wenn die Batterie durch einen falschen Typ ersetzt wird. Ersetzen Sie die Batterie nur durch den gleichen oder vom Hersteller empfohlenen Batterietyp. Entsorgen Sie die benutzten Batterien nach den Anweisungen des Herstellers.

¡ADVERTENCIA!

Existe riesgo de explosión si la batería se reemplaza por un tipo incorrecto. Reemplazar la batería exclusivamente con el mismo tipo o el equivalente recomendado por el fabricante. Desechar las baterías gastadas según las instrucciones del fabricante.

ATTENTION!

Il existe un risque d'explosion si la batterie est remplacée par un type incorrect. Ne la remplacer que par une pile de type semblable ou équivalent, recommandée par le fabricant. Jeter les piles usagées conformément aux instructions du fabricant.

אזהרה!

קיימת סכנת פיצוץ אם הסוללה תוחלף בסוג שגוי. יש להחליף

את הסוללה בסוג התואם מחברת יצרן מומלצת.

סילוק הסוללות המשומשות יש לבצע לפי הוראות היצרן.

تحذير!

.هناك خطر الانفجار إذا تم استبدال البطارية بنوع غير صحيح

اسحبذال البطارية

فقط بنفس النىع أو ما يعادلها مما أوصث به الشرمة المصنعة

جخلص من البطاريات المسحعملة وفقا لحعليمات الشرمة الصانعة

경고!

배터리를 잘못된 종류로 교체하면 폭발의 위험이 있습니다. 기존 배터리와 동일하거나 제조사에서 권장하는 동등한 종류의 배터리로만 교체해야 합니다. 제조사의 안내에 따라 사용된 배터리를 처리하여 주십시오.

WAARSCHUWING!

Er bestaat explosiegevaar als de batterij wordt vervangen door een verkeerd type. Vervang de batterij slechts met hetzelfde of een equivalent type die door de fabrikant aanbevolen wordt. Gebruikte batterijen dienen overeenkomstig fabrieksvoorschriften afgevoerd te worden.

Redundant Power Supplies



Warning! This unit might have more than one power supply connection. All connections must be removed to de-energize the unit.

警告!

このユニットは複数の電源装置が接続されている場合があります。

ユニットの電源を切るためには、すべての接続を取り外さなければなりません。

警告!

此部件连接的电源可能不止一个、必须将所有电源断开才能停止给该部件供电。

警告!

此裝置連接的電源可能不只一個、必須切斷所有電源才能停止對該裝置的供電。

Warnung!

Dieses Gerät kann mehr als eine Stromzufuhr haben. Um sicherzustellen, dass der Einheit kein trom zugeführt wird, müssen alle Verbindungen entfernt werden.

¡Advertencia!

Puede que esta unidad tenga más de una conexión para fuentes de alimentación. Para cortar por completo el suministro de energía, deben desconectarse todas las conexiones.

Attention!

Cette unité peut avoir plus d'une connexion d'alimentation. Pour supprimer toute tension et tout courant électrique de l'unité, toutes les connexions d'alimentation doivent être débranchées.

אזהרה!

ליחדה יש יותר מחיבור אחד של ספק. יש להסיר את כל החיבורים על מנת לרוקן

את היחידה.

تحذير!

قد يكون لهذا الجهاز عدة اتصالات بوحدات امداد الطاقة .

يجب إزالة كافة الاتصالات لعسل الوحدة عن الكهرباء

경고!

이 장치에는 한 개 이상의 전원 공급 단자가 연결되어 있을 수 있습니다. 이 장치에 전원을 차단하기 위해서는 모든 연결 단자를 제거해야만 합니다.

Waarschuwing!

Deze eenheid kan meer dan één stroomtoevoeraansluiting bevatten. Alle aansluitingen dienen verwijderd te worden om het apparaat stroomloos te maken.

Backplane Voltage



Warning! Hazardous voltage or energy is present on the backplane when the system is operating. Use caution when servicing.

警告!

システムの稼働中は危険な電圧または電力が、バックプレーン上にかかっています。

修理する際には注意ください。

警告!

当系统正在进行时、背板上有很危险的电压或能量、进行维修时务必小心。

警告!

當系統正在進行時、背板上有危險的電壓或能量、進行維修時務必小心。

Warnung!

Wenn das System in Betrieb ist, treten auf der Rückwandplatine gefährliche Spannungen oder Energien auf. Vorsicht bei der Wartung.

¡Advertencia!

Cuando el sistema está en funcionamiento, el voltaje del plano trasero es peligroso. Tenga cuidado cuando lo revise.

Attention!

Lorsque le système est en fonctionnement, des tensions électriques circulent sur le fond de panier. Prendre des précautions lors de la maintenance.

אזהרה!

קיימת סכנת מתח בפנל האחורי בזמן תפעול המערכת. יש להיזהר במהלך

העבודה.

تحذير!

هناك خطر مه التيار الكهزبائي أوالطاقة المىجىدة على اللىحة

عندما يكىن النظام يعمل كه حذرا عند خدمة هذا الجهاس

경고!

시스템이 동작 중일 때 후면판 (Backplane)에는 위험한 전압이나 에너지가 발생 합니다. 서비스 작업 시 주의하십시오.

Waarschuwing!

Een gevaarlijke spanning of energie is aanwezig op de backplane wanneer het systeem in gebruik is. Voorzichtigheid is geboden tijdens het onderhoud.

Comply with Local and National Electrical Codes



Warning! Installation of the equipment must comply with local and national electrical codes.

警告!

機器の取り付けはその地方および国の電気規格に準拠する必要があります。

警告!

设备安装必须符合本地与本国电气法规。

警告!

設備安裝必須符合本地與本國電氣法規。

Warnung!

Die Installation der Geräte muss den Sicherheitsstandards entsprechen.

¡Advertencia!

La instalacion del equipo debe cumplir con las normas de electricidad locales y nacionales.

Attention!

L'équipement doit être installé conformément aux normes électriques nationales et locales.

אזהרה!

התקנת הציוד חייבת להיות תואמת לחוקי החשמל המקומיים והארציים.

تحذير!

تركيب المعدات الكهربائية يجب أن يمتثل للقناويه المحلية والبطية المتعلقة

بالكهرباء

경고!

현 지역 및 국가의 전기 규정에 따라 장비를 설치해야 합니다.

Waarschuwing!

Bij installatie van de apparatuur moet worden voldaan aan de lokale en nationale elektriciteitsvoorschriften.

Product Disposal

Warning! Ultimate disposal of this product should be handled according to all national laws and regulations.

警告!

この製品を廃棄処分する場合、国の関係する全ての法律・条例に従い処理する必要があります。

警告!

本产品的废弃处理应根据所有国家的法律和规章进行。

警告!

本產品的廢棄處理應根據所有國家的法律和規章進行。

Warnung!

Die Entsorgung dieses Produkts sollte gemäß allen Bestimmungen und Gesetzen des Landes erfolgen.

¡Advertencia!

Al deshacerse por completo de este producto debe seguir todas las leyes y reglamentos nacionales.

Attention!

La mise au rebut ou le recyclage de ce produit sont généralement soumis à des lois et/ou directives de respect de l'environnement. Renseignez-vous auprès de l'organisme compétent.

אזהרה!

סילוק סופי של מוצר זה חייב להיות בהתאם להנחיות וחוקי המדינה.

تحذير!

عند التخلص النهائي من هذا المنتج ينبغي التعامل معه وفقا لجميع القوانين والأنظمة الوطنية

경고!

이 제품은 해당 국가의 관련 법규 및 규정에 따라 폐기되어야 합니다.

Waarschuwing!

De uiteindelijke verwijdering van dit product dient te geschieden in overeenstemming met alle nationale wetten en reglementen.

Fan Warning

Warning! Hazardous moving parts. Keep away from moving fan blades. The fans might still be turning when you remove the fan assembly from the chassis. Keep fingers, screwdrivers, and other objects away from the openings in the fan assembly's housing



警告!

警告！ 回転部品に注意。運転中は回転部(羽根)に触れないでください。シャーシから冷却ファン装置を取り外した際、ファンがまだ回転している可能性があります。ファンの開口部に、指、ドライバー、およびその他のものを近づけないで下さい。

警告!

警告！ 危险的可移动性零件。请务必与转动的风扇叶片保持距离。当您从机架移除风扇装置，风扇可能仍在转动。小心不要将手指、螺丝起子和其他物品太靠近风扇

警告!

危險的可移動性零件。請務必與轉動的風扇葉片保持距離。當您從機架移除風扇裝置，風扇可能仍在轉動。小心不要將手指、螺絲起子和其他物品太靠近風扇。

Warnung!

Gefährlich Bewegende Teile. Von den bewegenden Lüfterblätter fern halten. Die Lüfter drehen sich u. U. noch, wenn die Lüfterbaugruppe aus dem Chassis genommen wird. Halten Sie Finger, Schraubendreher und andere Gegenstände von den Öffnungen des Lüftergehäuses entfernt.

¡Advertencia!

Riesgo de piezas móviles. Mantener alejado de las aspas del ventilador. Los ventiladores podran dar vuelta cuando usted quite ell montaje del ventilador del chasis. Mandtenga los dedos, los destornilladores y todos los objetos lejos de las aberturas del ventilador.

Attention!

Pieces mobiles dangereuses. Se tenir a l'ecart des lames du ventilateur Il est possible que les ventilateurs soient toujours en rotation lorsque vous retirerez le bloc ventilateur du châssis. Prenez garde à ce que doigts, tournevis et autres objets soient éloignés du logement du bloc ventilateur.

אזהרה!

חלקים נעים מסוכנים. התרחק מלהבי המאוורר בפעולהכאשר מסירים את חלקי

המאוורר מהמארז, יתכן והמאווררים עדיין עובדים. יש להרחיק למרחק בטוח את

האצבעות וכלי עבודה שונים מהפתחים בתוך המאוורר

تحذير!

تحذير! أجزاء متحركة خطرة. ابتعد عن شفرات المروحة المتحركة.من الممكن أن

المراوح لا تزال تدور عند إزالة كتلة المروحة من الهيكل يجب إبقاء الأصابع

ومفكات البراغي وغيرها من الأشياء بعيدا عن الفتحات في كتلة المروحة.

경고!

움직이는 위험한 부품. 회전하는 송풍 날개에 접근하지 마세요. 섀시로부터 팬 조립품을 제거할 때 팬은 여전히 회전하고 있을 수 있습니다. 팬 조림품 외관의 열려있는 부분들로부터 손가락 및 스크류드라이버, 다른 물체들이 가까이 하지 않도록 배치해 주십시오.

Waarschuwing!

Gevaarlijk bewegende onderdelen. Houd voldoende afstand tot de bewegende ventilatorbladen. Het is mogelijk dat de ventilator nog draait tijdens het verwijderen van het ventilatorsamenstel uit het chassis. Houd uw vingers, schroevendraaiers en eventuele andere voorwerpen uit de buurt van de openingen in de ventilatorbehuizing.

Power Cable and AC Adapter



Warning! When installing the product, use the provided or designated connection cables, power cables and AC adaptors. Using any other cables and adaptors could cause a malfunction or a fire. Electrical Appliance and Material Safety Law prohibits the use of UL or CSA -certified cables (that have UL/CSA shown on the cord) for any other electrical devices than products designated by Supermicro only.

警告!

製品を設置する場合、提供または指定および購入された接続ケーブル、電源コードとACアダプターを該当する地域の条例や安全基準に適合するコードサイズやプラグと共に使用下さい。他のケーブルやアダプタを使用すると故障や火災の原因になることがあります。電気用品安全法は、ULまたはCSA認定のケーブル(UL/CSAマークがコードに表記) をSupermicro が指定する製品以外に使用することを禁止しています。

警告!

安装此产品时,请使用本身提供的或指定的或采购的连接线、电源线和电源适配器、包含遵照当 地法规和安全要求的合规的电源线尺寸和插头。使用其它线材或适配器可能会引起故障或火灾。除了Supermicro所指定的产品、电气用品和材料安全法律规定禁止使用未经UL或CSA认证的线材。(线材上会显示UL/CSA符号) 。

警告!

安裝此產品時,請使用本身提供的或指定的或採購的連接線、電源線和電源適配器、包含遵照當 地法規和安全要求的合規的電源線尺寸和插頭。使用其它線材或適配器可能會引起故障或火災。除了Supermicro所指定的產品、電氣用品和材料安全法律規定禁止使用未經UL或CSA認證的線材。(線材上會顯示UL/CSA符號) 。

Warnung!

Nutzen Sie beim Installieren des Produkts ausschließlich die von uns zur Verfügung gestellten Verbindungskabeln, Stromkabeln und/oder Adapater, die Ihre örtlichen Sicherheitsstandards einhalten. Der Gebrauch von anderen Kabeln und Adapter können Fehlfunktionen oder Feuer verursachen. Die Richtlinien untersagen das Nutzen von UL oder CAS zertifizierten Kabeln (mit UL/CSA gekennzeichnet), an Geräten oder Produkten die nicht mit Supermicro gekennzeichnet sind.

¡Advertencia!

Cuando instale el producto, utilice la conexión provista o designada o procure cables, Cables de alimentación y adaptadores de CA que cumplan con los códigos locales y los requisitos de seguridad, incluyendo el tamaño adecuado del cable y el enchufe. El uso de otros cables y adaptadores podría causar un mal funcionamiento o un incendio. La Ley de Seguridad de Aparatos Eléctricos y de Materiales prohíbe El uso de cables certificados por UL o CSA (que tienen el certificado UL / CSA en el código) para cualquier otros dispositivos eléctricos que los productos designados únicamente por Supermicro.

Attention!

Lors de l'installation du produit, utilisez les cables de connection fournis ou désigné ou achetez des cables, cables de puissance et adaptateurs respectant les normes locales et les conditions de securite y compris les tailles de cables et les prises electriques appropries. L'utilisation d'autres cables et adaptateurs peut provoquer un dysfonctionnement ou un incendie. Appareils électroménagers et la Loi sur la Sécurité Matériel interdit l'utilisation de câbles certifies- UL ou CSA (qui ont UL ou CSA indiqué sur le code) pour tous les autres appareils électriques sauf les produits désignés par Supermicro seulement.

אזהרה!

ררוצל ומאתוה וא ושכרנ רשא AC ימאתמו יקפס ,סילבכב שמתשהל שי ,רצומה תא סיניקתמ רשאכ לכב שומיש . עקתהו לבכה לש הנוכנ הדימ ללוכ ,תוימוקמה תוחיטבה תושירדל ומאתוה רשאו ,הנקתהה למשחה ירישכמב שומישה יקוחל סאתהב .ילמשח רצק וא הלקתל סורגל לולע ,רחא גוסמ סאתמ וא לבכ לש דוק סהילע עיפומ רשאכ) CSA- ב וא UL - ב סיכמסומה סילבכב שמתשהל רוסיא סייק ,תוחיטבה יקוחו דבלב Supermicro י"ע סאתוה רשא רצומב קר אלא ,רחא ילמשח רצומ לכ רובע UL/CSA).

تحذير!

تالباكلا ءارشب مق وأ ةددحملا وأ ةرفوتملا تاليصوتلا مادختساب مق ،جتنملا بيكرت دنع

كلذ يف امب ةيلحملا ةمالسلا تابلطتمو نيناوقب مازتلالا عم ددرتملا رايتلا تالوحمو ةيئابرهكلا

قيرح وأ لطع يف ببستي دق برخأ تالوحمو تالباك يأ مادختسا .ميلسلا سباقلاو لصوملا مجح.

CSA وأ UL لبق نم ةدمتعملا تالباكلا مادختسا تادعملاو ةيئابرهكلا ةزهجألل ةمالسلا نوناق رظحي

Supermicro لبق نم ةددحملاو ةينعملا تاجتنملا ريغ برخأ تادعم يأ عم (UL/CSA) ةمالع لمحت يتلاو.

경고!

제품을 설치할 때 현지 코드 및 적절한 굵기의 코드와 플러그를 포함한 안전 요구 사항을 준수하여 제공되거나 지정된 연결 혹은 구매 케이블, 전원 케이블 및 AC 어댑터를 사용하십시오.

다른 케이블이나 어댑터를 사용하면 오작동이나 화재가 발생할 수 있습니다. 전기 용품 안전법은 UL 또는 CSA 인증 케이블 (코드에 UL / CSA가 표시된 케이블)을 Supermicro 가 지정한 제품 이외의 전기 장치에 사용하는 것을 금지합니다.

Waarschuwing!

Bij het aansluiten van het Product uitsluitend gebruik maken van de geleverde Kabels of een andere geschikte aan te schaffen Aansluitmethode, deze moet altijd voldoen aan de lokale voorschriften en veiligheidsnormen, inclusief de juiste kabeldikte en stekker. Het gebruik van niet geschikte Kabels en/of Adapters kan een storing of brand veroorzaken. Wetgeving voor Elektrische apparatuur en Materiaalveiligheid verbied het gebruik van UL of CSA - gecertificeerde Kabels (met UL/CSA in de code) voor elke andere toepassing dan de door Supermicro hiervoor beoogde Producten.

Appendix C:

Standardized Warning Statements for DC Systems

The following statements are industry standard warnings, provided to warn the user of situations which have the potential for bodily injury. Should you have questions or experience difficulty, contact Supermicro's Technical Support department for assistance. Only certified technicians should attempt to install or configure components.

Read this section in its entirety before installing or configuring components in the Supermicro SYS-112HA-TN server.

These warnings may also be found on our website at the following page:

https://www.supermicro.com/about/policies/safety_information.cfm

Warning Definition



Warning! This warning symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents.

この警告サインは危険を意味します。

人身事故につながる可能性がありますので、いずれの機器でも動作させる前に、

電気回路に含まれる危険性に注意して、標準的な事故防止策に精通して下さい。

此警告符号代表危险。

您正处于可能受到严重伤害的工作环境中。在您使用设备开始工作之前、必须充分意识到触电的危险、并熟练掌握防止事故发生的标准工作程序。请根据每项警告结尾的声明号码找到此设备的安全性警告说明的翻译文本。

此警告符號代表危險。

您正處於可能身體可能會受損傷的工作環境中。在您使用任何設備之前、請注意觸電的危險、並且要熟悉預防事故發生的標準工作程序。請依照每一注意事項後的號碼找到相關的翻譯說明內容。

WICHTIGE SICHERHEITSHINWEISE

Dieses Warnsymbol bedeutet Gefahr. Sie befinden sich in einer Situation, die zu Verletzungen führen kann. Machen Sie sich vor der Arbeit mit Geräten mit den Gefahren elektrischer Schaltungen und den üblichen Verfahren zur Vorbeugung vor Unfällen vertraut. Suchen Sie mit der am Ende jeder Warnung angegebenen Anweisungsnummer nach der jeweiligen Übersetzung in den übersetzten Sicherheitshinweisen, die zusammen mit diesem Gerät ausgeliefert wurden.

BEWAHREN SIE DIESE HINWEISE GUT AUF.

INSTRUCCIONES IMPORTANTES DE SEGURIDAD

Este símbolo de aviso indica peligro. Existe riesgo para su integridad física. Antes de manipular cualquier equipo, considere los riesgos de la corriente eléctrica y familiarícese con los procedimientos estándar de prevención de accidentes. Al final de cada advertencia encontrará el número que le ayudará a encontrar el texto traducido en el apartado de traducciones que acompaña a este dispositivo.

GUARDE ESTAS INSTRUCCIONES.

IMPORTANTES INFORMATIONS DE SÉCURITÉ

Ce symbole d'avertissement indique un danger. Vous vous trouvez dans une situation pouvant entraîner des blessures ou des dommages corporels. Avant de travailler sur un équipement, soyez conscient des dangers liés aux circuits électriques et familiarisez- vous avec les procédures couramment utilisées pour éviter les accidents. Pour prendre connaissance des traductions des avertissements figurant dans les consignes de sécurité traduites qui accompagnent cet appareil, référez-vous au numéro de l'instruction situé à la fin de chaque avertissement.

CONSERVEZ CES INFORMATIONS.

תקנון הצהרות אזהרה

הצהרות הבאות הן אזהרות על פי תקני התעשייה, על מנת להזהיר את המשתמש מפני חבלה

פיזית אפשרית. במידה ויש שאלות או היתקלות בבעיה כלשהי, יש ליצור קשר עם מחלקת תמיכה

טכנית של סופרמיקרו. טכנאים מוסמכים בלבד רשאים להתקין או להגדיר את הרכיבים.

ا كً ف حالة وٌكي أى تتسبب ف اصابة جسذ ةٌ هذا الز هز عٌ خطز !تحذ زٌ.

قبل أى تعول على أي هعذات،كي على علن بالوخاطز ال اجٌوة عي الذوائز

الكهزبائ ةٍ

وكي على درا ةٌ بالووارسات النقائ ةٍ لو عٌ وقنع أي حادث

استخذم رقن الب إى الو صٌنص ف هًا ةٌ كل تحذ زٌ للعثر تزجوتها

안전을 위한 주의사항

이 경고 기호는 위험이 있음을 알려 줍니다. 작업자의 신체에 부상을 야기 할 수 있는 상태에 있게 됩니다. 모든 장비에 대한 작업을 수행하기 전에 전기회로와 관련된 위험요소들을 확인하시고 사전에 사고를 방지할 수 있도록 표준 작업절차를 준수해 주시기 바랍니다.

해당 번역문을 찾기 위해 각 경고의 마지막 부분에 제공된 경고문 번호를 참조하십시오

BELANGRIJKE VEILIGHEIDSINSTRUCTIES

Dit waarschuwings symbool betekent gevaar. U verkeert in een situatie die lichamelijk letsel kan veroorzaken. Voordat u aan enige apparatuur gaat werken, dient u zich bewust te zijn van de bij een elektrische installatie betrokken risico's en dient u op de hoogte te zijn van de standaard procedures om ongelukken te voorkomen. Gebruik de nummers aan het eind van elke waarschuwing om deze te herleiden naar de desbetreffende locatie.

BEWAAR DEZE INSTRUCTIES

Installation Instructions



Warning! Read the installation instructions before connecting the system to the power source.

警告!

システムを電源に接続する前に、設置手順書をお読み下さい。

警告!

将此系统连接电源前、请先阅读安装说明。

警告!

將系統與電源連接前、請先閱讀安裝說明。

Warnung!

Vor dem Anschließen des Systems an die Stromquelle die Installationsanweisungen lesen.

¡Advertencia!

Lea las instrucciones de instalación antes de conectar el sistema a la red de alimentación.

Attention!

Avant de brancher le système sur la source d'alimentation, consulter les directives d'installation.

אַזהָרָה!

יש לקרוא את הוראות התקנה לפני חיבור המערכת למקור מתח.

تحذير!

اقر إرشادات التركيب قبل توصيل النظام إلى مصدر للطاقة

경고!

시스템을 전원에 연결하기 전에 설치 안내를 읽어주십시오.

Waarschuwing!

Raadpleeg de installatie-instructies voordat u het systeem op de voedingsbron aansluit.

Circuit Breaker



Warning! This product relies on the building's installation for short-circuit (overcurrent) protection. Ensure that the protective device is rated not greater than: 250 V, 20 A.

警告!

この製品は、短絡(過電流)保護装置がある建物での設置を前提としています。

保護装置の定格が250 V、20 Aを超えないことを確認下さい。

警告!

此产品的短路(过载电流)保护由建筑物的供电系统提供,确保短路保护设备的额定电流不大于 250 V、20 A。

警告!

此產品的短路(過載電流)保護由建築物的供電系統提供,確保短路保護設備的額定電流不大於 250 V、20 A。

Warnung!

Dieses Produkt ist darauf angewiesen, dass im Gebäude ein Kurzschluss bzw. Überstromschutz installiert ist. Stellen Sie sicher, dass der Nennwert der Schutzvorrichtung nicht mehr als: 250 V, 20 A beträgt.

¡Advertencia!

Este equipo utiliza el sistema de protección contra cortocircuitos (o sobrecorrientes) del edificio. Asegúrese de que el dispositivo de protección no sea superior a: 250 V, 20 A.

Attention!

Pour ce qui est de la protection contre les courts-circuits (surtension), ce produit dépend de l'installation électrique du local. Vérifiez que le courant nominal du dispositif de protection n'est pas supérieur à :250 V, 20 A.

אזהרה!

מוצר זה מסתמך על הגנה המותקנת במבנים למניעת קצר חשמלי. יש לוודא כי

המכשיר המגן מפני הקצר החשמלי הוא לא יותר מ-250 V, 20 A

تحذير!

هذا المنتج يعتمد على معداث الحمايت مه الدوائر القصيرة التي تم تثبيتها في

المبنى

تأكد من أن تقييم الجهاز الوقائي ليس أكثر من : 20 A, 250 V

경고!

이 제품은 전원의 단락(과전류)방지에 대해서 전적으로 건물의 관련 설비에 의존합니다. 보호장치의 정격이 반드시 250 V(볼트), 20 A(암페어)를 초과하지 않도록 해야 합니다.

Waarschuwing!

Dit product is afhankelijk van de kortsluitbeveiliging (overspanning) van uw electrische installatie. Controleer of het beveiligde aparaat niet groter gedimensioneerd is dan 250 V, 20 A.

Power Disconnection Warning



Warning! The system must be disconnected from all sources of power and the power cord removed from the power supply module(s) before accessing the chassis interior to install or remove system components (except for hot-swap components).

警告!

システムコンポーネントの取り付けまたは取り外しのために、シャーシー内部にアクセスするには、

システムの電源はすべてのソースから切断され、電源コードは電源モジュールから取り外す必要があります。

警告!

在你打开机箱并安装或移除内部器件前、必须将系统完全断电、并移除电源线。

警告!

在您打開機殼安裝或移除內部元件前、必須將系統完全斷電、並移除電源線。

Warnung!

Das System muss von allen Quellen der Energie und vom Netzanschlusskabel getrennt sein, das von den Spg.Versorgungsteilmodulen entfernt wird, bevor es auf den Chassisinnenraum zurückgreift, um Systemsbestandteile anzubringen oder zu entfernen.

¡Advertencia!

El sistema debe ser disconnected de todas las fuentes de energía y del cable eléctrico quitado de los módulos de fuente de alimentación antes de tener acceso el interior del chasis para instalar o para quitar componentes de sistema.

Attention!

Le système doit être débranché de toutes les sources de puissance ainsi que de son cordon d'alimentation secteur avant d'accéder à l'intérieur du chassis pour installer ou enlever des composants de systéme.

אזהרה!

יש לנתק את המערכת מכל מקורות החשמל ויש להסיר את כבל החשמלי מהספק

לפני גישה לחלק הפנימי של המארז לצורך התקנת או הסרת רכיבים.

تحذير!

يجب فصم انتظاو من جميع مصادر انطاقت وإزانت سهك انكهرباء من وحدة امداد

انطاقت قبم

انصسل إنى انمناطق انداخهيت نههيكم نتثبيج أو إزانت مكنناث الجهاز

경고!

시스템에 부품들을 장착하거나 제거하기 위해서는 섀시 내부에 접근하기 전에 반드시 전원 공급장치로부터 연결되어있는 모든 전원과 전기코드를 분리해주어야 합니다.

Waarschuwing!

Voordat u toegang neemt tot het binnenwerk van de behuizing voor het installeren of verwijderen van systeem onderdelen, dient u alle spanningsbronnen en alle stroomkabels aangesloten op de voeding(en) van de behuizing te verwijderen

Equipment Installation



Warning! Only authorized personnel and qualified service persons should be allowed to install, replace, or service this equipment.

警告!

トレーニングを受け認定された人だけがこの装置の設置、交換、またはサービスを許可されています。

警告!

只有经过培训且具有资格的人员才能进行此设备的安装、更换和维修。

警告!

只有經過受訓且具資格人員才可安裝、更換與維修此設備。

Warnung!

Nur autorisiertes Personal und qualifizierte Servicetechniker dürfen dieses Gerät installieren, austauschen oder warten.

¡Advertencia!

Sólo el personal autorizado y el personal de servicio calificado deben poder instalar, reemplazar o dar servicio a este equipo.

Attention!

Seul le personnel autorisé et le personnel de maintenance qualifié doivent être autorisés à installer, remplacer ou entretenir cet équipement.

אזהרה!

יש לאפשר רק צוות מורשה ואנשי שירות מוסמכים להתקין, להחליף או לטפל בציוד זה.

تحذير!

ينبغي السماح فقط للموظفين المعتمدين وأفراد الخدمة المؤهلين بتركيب هذا الجهاز أو استبداله أو صيانته.

경고!

승인된 직원과 자격을 갖춘 서비스 담당자만이 이 장비를 설치, 교체 또는 서비스할 수 있습니다.

Waarschuwing!

Alleen geautoriseerd personeel en gekwalificeerd onderhoudspersoneel mag deze apparatuur installeren, vervangen of onderhouden.

Restricted Area



Warning! This unit is intended for installation in restricted access areas. A restricted access area can be accessed only through the use of a special tool, lock and key, or other means of security. (This warning does not apply to workstations).

警告!

このユニットは、アクセス制限区域に設置されることを想定しています。

アクセス制限区域は、特別なツール、鍵と錠前、その他のセキュリティの手段を用いてのみ出入りが可能です。

警告!

此部件应安装在限制进出的场所，限制进出的场所指只能通过使用特殊工具、锁和钥匙或其它安全手段进出的场所。

警告!

此裝置僅限安裝於進出管制區域，進出管制區域係指僅能以特殊工具、鎖頭及鑰匙或其他安全方式才能進入的區域。

Warnung!

Diese Einheit ist zur Installation in Bereichen mit beschränktem Zutritt vorgesehen. Der Zutritt zu derartigen Bereichen ist nur mit einem Spezialwerkzeug, Schloss und Schlüssel oder einer sonstigen Sicherheitsvorkehrung möglich.

¡Advertencia!

Esta unidad ha sido diseñada para instalación en áreas de acceso restringido. Sólo puede obtenerse acceso a una de estas áreas mediante la utilización de una herramienta especial, cerradura con llave u otro medio de seguridad.

Attention!

Cet appareil doit être installée dans des zones d'accès réservés. L'accès à une zone d'accès réservé n'est possible qu'en utilisant un outil spécial, un mécanisme de verrouillage et une clé, ou tout autre moyen de sécurité.

אזהרה!

יש להתקין את היחידה באזורים שיש בהם הגבלת גישה. הגישה ניתנת בעזרת

'כלי אבטחה בלבד (מפתח, מנעול וכד.)

تحذير!

اتخصيص هذه انحذة نترك بُها ف مناطق محظورة تم .

مَكن انصل إن منطقت محظورة فقط من خلال استخذاو أداة خاصت،

أو أ وس هُت أخري نلالأمما قفم ومفتاح

경고!

이 장치는 접근이 제한된 구역에 설치하도록 되어있습니다. 특수도구, 잠금 장치 및 키, 또는 기타 보안 수단을 통해서만 접근 제한 구역에 들어갈 수 있습니다.

Waarschuwing!

Dit apparaat is bedoeld voor installatie in gebieden met een beperkte toegang. Toegang tot dergelijke gebieden kunnen alleen verkregen worden door gebruik te maken van speciaal gereedschap, slot en sleutel of andere veiligheidsmaatregelen.

Battery Handling



CAUTION There is risk of explosion if the battery is replaced by an incorrect type. Replace the battery only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

警告!

バッテリーを間違ったタイプに交換すると爆発の危険があります。交換する電池はメーカーが推奨する型、または同等のものを使用下さい。使用済電池は製造元の指示に従って処分して下さい。

警告!

如果更换的电池类型不正确。请只使用同类电池或制造商推荐的功能相当的电池更换原有电池。请按制造商的说明处理废旧电池。

警告!

如果更換的電池類型不正確。請使用製造商建議之相同或功能相當的電池更換原有電池。請按照製造商的說明指示處理廢棄舊電池。

WARNUNG!

Es besteht Explosionsgefahr, wenn die Batterie durch einen falschen Typ ersetzt wird. Ersetzen Sie die Batterie nur durch den gleichen oder vom Hersteller empfohlenen Batterietyp. Entsorgen Sie die benutzten Batterien nach den Anweisungen des Herstellers.

¡ADVERTENCIA!

Existe riesgo de explosión si la batería se reemplaza por un tipo incorrecto. Reemplazar la batería exclusivamente con el mismo tipo o el equivalente recomendado por el fabricante. Desechar las baterías gastadas según las instrucciones del fabricante.

ATTENTION!

Il existe un risque d'explosion si la batterie est remplacée par un type incorrect. Ne la remplacer que par une pile de type semblable ou équivalent, recommandée par le fabricant. Jeter les piles usagées conformément aux instructions du fabricant.

אזהרה!

קיימת סכנת פיצוץ אם הסוללה תוחלף בסוג שגוי. יש להחליף

את הסוללה בסוג התואם מחברת יצרן מומלצת.

סילוק הסוללות המשומשות יש לבצע לפי הוראות היצרן.

تحذير!

.هناك خطر الانفجار إذا تم استبدال البطارية بنوع غير صحيح

اسحبذال البطارية

فقط بنفس النىع أو ما يعادلها مما أوصث به الشرمة المصنعة

جخلص من البطاريات المسحعملة وفقا لحعليمات الشرمة الصانعة

경고!

배터리를 잘못된 종류로 교체하면 폭발의 위험이 있습니다. 기존 배터리와 동일하거나 제조사에서 권장하는 동등한 종류의 배터리로만 교체해야 합니다. 제조사의 안내에 따라 사용된 배터리를 처리하여 주십시오.

WAARSCHUWING!

Er bestaat explosiegevaar als de batterij wordt vervangen door een verkeerd type. Vervang de batterij slechts met hetzelfde of een equivalent type die door de fabrikant aanbevolen wordt. Gebruikte batterijen dienen overeenkomstig fabrieksvoorschriften afgevoerd te worden.

Redundant Power Supplies



Warning! This unit might have more than one power supply connection. All connections must be removed to de-energize the unit.

警告!

このユニットは複数の電源装置が接続されている場合があります。

ユニットの電源を切るためには、すべての接続を取り外さなければなりません。

警告!

此部件连接的电源可能不止一个、必须将所有电源断开才能停止给该部件供电。

警告!

此裝置連接的電源可能不只一個、必須切斷所有電源才能停止對該裝置的供電。

Warnung!

Dieses Gerät kann mehr als eine Stromzufuhr haben. Um sicherzustellen, dass der Einheit kein trom zugeführt wird, müssen alle Verbindungen entfernt werden.

¡Advertencia!

Puede que esta unidad tenga más de una conexión para fuentes de alimentación. Para cortar por completo el suministro de energía, deben desconectarse todas las conexiones.

Attention!

Cette unité peut avoir plus d'une connexion d'alimentation. Pour supprimer toute tension et tout courant électrique de l'unité, toutes les connexions d'alimentation doivent être débranchées.

אזהרה!

ליחדה יש יותר מחיבור אחד של ספק. יש להסיר את כל החיבורים על מנת לרוקן

את היחידה.

تحذير!

قد يكون لهذا الجهاز عدة اتصالات بوحدات امداد الطاقة .

يجب إزالة كافة الاتصالات لعسل الوحدة عن الكهرباء

경고!

이 장치에는 한 개 이상의 전원 공급 단자가 연결되어 있을 수 있습니다. 이 장치에 전원을 차단하기 위해서는 모든 연결 단자를 제거해야만 합니다.

Waarschuwing!

Deze eenheid kan meer dan één stroomtoevoeraansluiting bevatten. Alle aansluitingen dienen verwijderd te worden om het apparaat stroomloos te maken.

Backplane Voltage



Warning! Hazardous voltage or energy is present on the backplane when the system is operating. Use caution when servicing.

警告!

システムの稼働中は危険な電圧または電力が、バックプレーン上にかかっています。

修理する際には注意ください。

警告!

当系统正在进行时、背板上有很危险的电压或能量、进行维修时务必小心。

警告!

當系統正在進行時、背板上有危險的電壓或能量、進行維修時務必小心。

Warnung!

Wenn das System in Betrieb ist, treten auf der Rückwandplatine gefährliche Spannungen oder Energien auf. Vorsicht bei der Wartung.

¡Advertencia!

Cuando el sistema está en funcionamiento, el voltaje del plano trasero es peligroso. Tenga cuidado cuando lo revise.

Attention!

Lorsque le système est en fonctionnement, des tensions électriques circulent sur le fond de panier. Prendre des précautions lors de la maintenance.

אזהרה!

קיימת סכנת מתח בפנל האחורי בזמן תפעול המערכת. יש להיזהר במהלך

העבודה.

تحذير!

هناك خطر مه التيار الكهزبائي أوالطاقة المىجىدة على اللىحة

عندما يكىن النظام يعمل كه حذرا عند خدمة هذا الجهاس

경고!

시스템이 동작 중일 때 후면판 (Backplane)에는 위험한 전압이나 에너지가 발생 합니다. 서비스 작업 시 주의하십시오.

Waarschuwing!

Een gevaarlijke spanning of energie is aanwezig op de backplane wanneer het systeem in gebruik is. Voorzichtigheid is geboden tijdens het onderhoud.

Comply with Local and National Electrical Codes



Warning! Installation of the equipment must comply with local and national electrical codes.

警告!

機器の取り付けはその地方および国の電気規格に準拠する必要があります。

警告!

设备安装必须符合本地与本国电气法规。

警告!

設備安裝必須符合本地與本國電氣法規。

Warnung!

Die Installation der Geräte muss den Sicherheitsstandards entsprechen.

¡Advertencia!

La instalacion del equipo debe cumplir con las normas de electricidad locales y nacionales.

Attention!

L'équipement doit être installé conformément aux normes électriques nationales et locales.

אזהרה!

התקנת הציוד חייבת להיות תואמת לחוקי החשמל המקומיים והארציים.

تحذير!

تركيب المعدات الكهربائية يجب أن يمتثل للقناويه المحلية والبطية المتعلقة

بالكهرباء

경고!

현 지역 및 국가의 전기 규정에 따라 장비를 설치해야 합니다.

Waarschuwing!

Bij installatie van de apparatuur moet worden voldaan aan de lokale en nationale elektriciteitsvoorschriften.

Product Disposal

Warning! Ultimate disposal of this product should be handled according to all national laws and regulations.

警告!

この製品を廃棄処分する場合、国の関係する全ての法律・条例に従い処理する必要があります。

警告!

本产品的废弃处理应根据所有国家的法律和规章进行。

警告!

本產品的廢棄處理應根據所有國家的法律和規章進行。

Warnung!

Die Entsorgung dieses Produkts sollte gemäß allen Bestimmungen und Gesetzen des Landes erfolgen.

¡Advertencia!

Al deshacerse por completo de este producto debe seguir todas las leyes y reglamentos nacionales.

Attention!

La mise au rebut ou le recyclage de ce produit sont généralement soumis à des lois et/ou directives de respect de l'environnement. Renseignez-vous auprès de l'organisme compétent.

אזהרה!

סילוק סופי של מוצר זה חייב להיות בהתאם להנחיות וחוקי המדינה.

تحذير!

عند التخلص النهائي من هذا المنتج ينبغي التعامل معه وفقا لجميع القوانين والأنظمة الوطنية

경고!

이 제품은 해당 국가의 관련 법규 및 규정에 따라 폐기되어야 합니다.

Waarschuwing!

De uiteindelijke verwijdering van dit product dient te geschieden in overeenstemming met alle nationale wetten en reglementen.

Fan Warning

Warning! Hazardous moving parts. Keep away from moving fan blades. The fans might still be turning when you remove the fan assembly from the chassis. Keep fingers, screwdrivers, and other objects away from the openings in the fan assembly's housing



警告!

警告！ 回転部品に注意。運転中は回転部(羽根)に触れないでください。シャーシから冷却ファン装置を取り外した際、ファンがまだ回転している可能性があります。ファンの開口部に、指、ドライバー、およびその他のものを近づけないで下さい。

警告!

警告！ 危险的可移动性零件。请务必与转动的风扇叶片保持距离。当您从机架移除风扇装置，风扇可能仍在转动。小心不要将手指、螺丝起子和其他物品太靠近风扇

警告!

危險的可移動性零件。請務必與轉動的風扇葉片保持距離。當您從機架移除風扇裝置，風扇可能仍在轉動。小心不要將手指、螺絲起子和其他物品太靠近風扇。

Warnung!

Gefährlich Bewegende Teile. Von den bewegenden Lüfterblätter fern halten. Die Lüfter drehen sich u. U. noch, wenn die Lüfterbaugruppe aus dem Chassis genommen wird. Halten Sie Finger, Schraubendreher und andere Gegenstände von den Öffnungen des Lüftergehäuses entfernt.

¡Advertencia!

Riesgo de piezas móviles. Mantener alejado de las aspas del ventilador. Los ventiladores podran dar vuelta cuando usted quite ell montaje del ventilador del chasis. Mandtenga los dedos, los destornilladores y todos los objetos lejos de las aberturas del ventilador.

Attention!

Pieces mobiles dangereuses. Se tenir a l'ecart des lames du ventilateur Il est possible que les ventilateurs soient toujours en rotation lorsque vous retirerez le bloc ventilateur du châssis. Prenez garde à ce que doigts, tournevis et autres objets soient éloignés du logement du bloc ventilateur.

אזהרה!

חלקים נעים מסוכנים. התרחק מלהבי המאוורר בפעולהכאשר מסירים את חלקי

המאוורר מהמארז, יתכן והמאווררים עדיין עובדים. יש להרחיק למרחק בטוח את

האצבעות וכלי עבודה שונים מהפתחים בתוך המאוורר

تحذير!

تحذير! أجزاء متحركة خطرة. ابتعد عن شفرات المروحة المتحركة.من الممكن أن

المراوح لا تزال تدور عند إزالة كتلة المروحة من الهيكل يجب إبقاء الأصابع

ومفكات البراغي وغيرها من الأشياء بعيدا عن الفتحات في كتلة المروحة.

경고!

움직이는 위험한 부품. 회전하는 송풍 날개에 접근하지 마세요. 섀시로부터 팬 조립품을 제거할 때 팬은 여전히 회전하고 있을 수 있습니다. 팬 조림품 외관의 열려있는 부분들로부터 손가락 및 스크류드라이버, 다른 물체들이 가까이 하지 않도록 배치해 주십시오.

Waarschuwing!

Gevaarlijk bewegende onderdelen. Houd voldoende afstand tot de bewegende ventilatorbladen. Het is mogelijk dat de ventilator nog draait tijdens het verwijderen van het ventilatorsamenstel uit het chassis. Houd uw vingers, schroevendraaiers en eventuele andere voorwerpen uit de buurt van de openingen in de ventilatorbehuizing.

DC Power Supply



Warning! When stranded wiring is required, use approved wiring terminations, such as closedloop or spade-type with upturned lugs. These terminations should be the appropriate size for the wires and should clamp both the insulation and conductor.

警告!

より線が必要な場合、承認済みのケーブル終端(上向きの端子を備えたクローズループ型またはU字型の終端など)を使用してください。使用するワイヤーに適したサイズで、絶縁体および導体が両方ともクランプされている終端でなければなりません。

警告!

需要多股佈線時、請使用經核准的佈線終端、例如閉環或鏟型接線片。這些終端的大小應適合線路、並且可以同時夾住絕緣體和導體。

警告!

需要使用绞线连接时、请使用经认可的连接端子、如闭环端子或具有接线柱的铲形端子。这些端子的大小应与线缆相吻合、并且可以将绝缘部分和导体夹紧固定。

Warnung!

Wenn Litzenverdrahtung erforderlich ist, sind zugelassene Verdrahtungsabschlüsse, z.B. für einen geschlossenen Regelkreis oder gabelförmig, mit nach oben gerichteten Kabelschuhen zu verwenden. Diese Abschlüsse sollten die angemessene Größe für die Drähte haben und sowohl die Isolierung als auch den Leiter festklemmen.

¡Advertencia!

Cuando se necesite hilo trenzado, utilizar terminales para cables homologados, tales como las de tipo "bucle cerrado" o "espada", con las lengüetas de conexión vueltas hacia arriba. Estos terminales deberán ser del tamaño apropiado para los cables que se utilicen, y tendrán que sujetar tanto el aislante como el conductor.

Attention!

Quand des fils torsadés sont nécessaires, utiliser des douilles terminales homologuées telles que celles à circuit fermé ou du type à plage ouverte avec cosses rebroussées. Ces douilles terminales doivent être de la taille qui convient aux fils et doivent être refermées sur la gaine isolante et sur le conducteur.

אזהרה!

כאשר נדרש חיווט תקוע, השתמש בסיומי חיווט מאושרים, כגון לולאה סגורה או מסוג כף עם זיזים הפוך..
סיומים אלה צריכים להיות בגודל המתאים לחוטים וצריכים להדק הן את הבידוד והן את המוליך

تحذير!

عند الحاجة إلى توصيل الأسلاك المجدولة، استخدم نهايات الأسلاك المعتمدة، مثل الحلقة المغلقة أو النوع المجرف مع العروات.
المقلوبة. يجب أن تكون هذه النهايات بالحجم المناسب للأسلاك ويجب أن تثبت كلاً من العزل والموصل

경고!

꼬인 배선이 요구 될 때에는 폐회로나 돌출부가 위로 튀어 나온 Spade형태의 승인된 배선 터미네이션들을 사용하세요.

이 터미네이션들은 배선들을 위해 적절한 크기여야 하고, 절연체와 도체 모두를 고정시킬 수 있어야 합니다.

Waarschuwing!

Wanneer geslagen bedrading vereist is, dient u bedrading te gebruiken die voorzien is van goedgekeurde aansluitingspunten, zoals het gesloten-lus type of het grijperschop type waarbij de aansluitpunten omhoog wijzen. Deze aansluitpunten dienen de juiste maat voor de draden te hebben en dienen zowel de isolatie als de geleider vast te klemmen.

Power Disconnection Warning



Warning! The system must be disconnected from all sources of power and the power cord removed from the power supply module(s) before accessing the chassis interior to install or remove system components (except for hot-swap components).

警告!

システムコンポーネントの取り付けまたは取り外しのために、シャーシー内部にアクセスするには、

システムの電源はすべてのソースから切断され、電源コードは電源モジュールから取り外す必要があります。

警告!

在你打开机箱并安装或移除内部器件前、必须将系统完全断电、并移除电源线。

警告!

在您打開機殼安裝或移除內部元件前、必須將系統完全斷電、並移除電源線。

Warnung!

Das System muss von allen Quellen der Energie und vom Netzanschlusskabel getrennt sein, das von den Spg.Versorgungsteilmodulen entfernt wird, bevor es auf den Chassisinnenraum zurückgreift, um Systemsbestandteile anzubringen oder zu entfernen.

¡Advertencia!

El sistema debe ser disconnected de todas las fuentes de energía y del cable eléctrico quitado de los módulos de fuente de alimentación antes de tener acceso el interior del chasis para instalar o para quitar componentes de sistema.

Attention!

Le système doit être débranché de toutes les sources de puissance ainsi que de son cordon d'alimentation secteur avant d'accéder à l'intérieur du chassis pour installer ou enlever des composants de systéme.

אזהרה!

יש לנתק את המערכת מכל מקורות החשמל ויש להסיר את כבל החשמלי מהספק

לפני גישה לחלק הפנימי של המארז לצורך התקנת או הסרת רכיבים.

تحذير!

يجب فصم انتظاو من جميع مصادر انطاقت وإزانت سهك انكهرباء من وحدة امداد

انطاقت قبم

انصل إنى انمناطق انداخهيت نههيكم نتثبيج أو إزانت مكنناث الجهاز

경고!

시스템에 부품들을 장착하거나 제거하기 위해서는 섀시 내부에 접근하기 전에 반드시 전원 공급장치로부터 연결되어있는 모든 전원과 전기코드를 분리해주어야 합니다.

Waarschuwing!

Voordat u toegang neemt tot het binnenwerk van de behuizing voor het installeren of verwijderen van systeem onderdelen, dient u alle spanningsbronnen en alle stroomkabels aangesloten op de voeding(en) van de behuizing te verwijderen

Hazardous Voltage or Energy Present on DC Power Terminals



Warning! Hazardous voltage or energy may be present on DC power terminals. Always replace cover when terminals are not in service. Be sure uninsulated conductors are not accessible when cover is in place.

警告!

直接電力端子に危険な電圧やエネルギーが発生している可能性があります。使用していない端子には常にカバーをつけてください。カバーがついているときは非絶縁形コンダクターに接触していないことを確認してください。

警告!

直流電源終端可能產生危險的電壓或能量。終端不使用時、請務必蓋上機蓋。當蓋上機蓋、確認不絕緣導體無法使用。

警告!

直流电源终端可能会产生危险的电压或能量。终端不使用时、请务必盖上机盖。机盖盖上后、请确保导体未绝缘部分无法使用。

Warnung!

In mit Gleichstrom betriebenen Terminals kann es zu gefählicher Spannung kommen. Die Terminals müssen abgedeckt werden, wenn sie nicht in Betrieb sind. Stellen Sie bei Benutzung der Abdeckung sicher, dass alle nicht isolierten, stromführenden Kabel abgedeckt sind.

¡Advertencia!

Puede haber energía o voltaje peligrosos en los terminales eléctricos de CC. Reemplace siempre la cubierta cuando no estén utilizándose los terminales. Asegúrese de que no haya acceso a conductores descubiertos cuando la cubierta esté colocada.

Attention!

Le voltage ou l'énergie électrique des terminaux à courant continu peuvent être dangereux. Veillez à toujours replacer le couvercle lors les terminaux ne sont pas en service. Assurez-vous que les conducteurs non isolés ne sont pas accessibles lorsque le couvercle est en place.

אַזהָרָה!

החלף תמיד את הכיסוי כאשר המסופים .DC מתח או אנרגיה מסוכנים עשויים להיות קיימים על מסופי מתח.
אינם בשירות. ודא שמוליכים לא מבודדים אינם נגישים כאשר המכסה במקומו

تحذير!

قد يكون هناك جهد أو طاقة خطرة على أطراف طاقة التيار المستمر. استبدل الغطاء دائمًا عندما لا تكون الأجهزة الطرفية في الخدمة..
تأكد من عدم إمكانية الوصول إلى الموصلات غير المعزولة عندما يكون الغطاء في مكانه

경고!

DC전원 단자들에 위험한 전압이나 에너지가 발생할 수 있습니다.

단말기들을 운영하지 않을 때에는 덮개로 다시 덮어 놓아 주십시오. 덮개가 제자리에 있어야만 절연되지 않은 도체들의 접근을 막을 수 있습니다.

Waarshuwing!

Op DC-aansluitingspunten kunnen zich gevaarlijke voltages of energieën voordoen. Plaats altijd de afsluiting wanneer de aansluitingspunten niet worden gebruikt Zorg ervoor dat blootliggende contactpunten niet toegankelijk zijn wanneer de afsluiting is geplaatst.

Appendix D:

System Specifications

Processor
Single Intel® Xeon® 6900-series processor with P-cores (in Socket BR LGA7529) and a thermal design power (TDP) of up to 500 W
Chipset
System on Chip
BIOS
AMI 64 MB SPI Flash
Memory
12 DIMM slots Max Memory (1DPC): 3 TB 8800 MT/s ECC DDR5 MRDIMM Max Memory (1DPC): Up to 3 TB 6400 MT/s ECC DDR5 RDIMM
Storage Drives
Default: Total eight drives Eight front hot-swap 2.5" NVMe/SAS/SATA drive bays Optional: Total 12 drives Eight front hot-swap 2.5" NVMe/SAS/SATA drive bays Four front hot-swap 2.5" SAS/SATA drive bays NVMe/SAS/SATA support may require additional storage controller and/or cables, please see the Optional Parts list for details.
PCI Expansion Slots
One PCIe 5.0 x16 slot (full-height, half-length) One PCIe 5.0 x16 slot (full-height, full-length) One PCIe 5.0 x16 AIOM slot (OCP 3.0 compatible) One PCIe 5.0 x8 slot (full-height, full-length)
Input/Output
One RJ45 1 GbE Dedicated BMC LAN port Two USB 3.2 Gen1 ports (rear) One USB 3.2 Gen1 port (front) One VGA port
Motherboard
X14SBH-AP
Chassis
CSE-HS101-R000NFP

System Cooling
Eight counter-rotating 40x40x56 mm fans One CPU air shroud
Power Supply
Two 1200 W Redundant (1 + 1) Titanium Level (96%) power supplies or Two 1300 W DC Redundant (1 + 1) Gold Level power supplies or Two 1600 W Redundant (1 + 1) Titanium Level (96%) power supplies or Two 2000 W Redundant (1 + 1) Titanium Level (96%) power supplies Input 800 W: 100-127 Vac 800 W: 100-127 Vac / 50-60 Hz 1200 W: 200-240 Vac 1200 W: 200-240 Vac / 50-60 Hz 1200 W: 230-240 Vdc / 50-60 Hz (for CCC only) +12 V Max: 66.7 A / Min: 0 A (100 Vac-127 Vac) Max: 83 A / Min: 0 A (100 Vac-127 Vac) Max: 100 A / Min: 0 A (200 Vac-240 Vac) Max: 100 A / Min: 0 A (230 Vdc-24 0Vdc) (for CCC only) 12 V SB Max: 2.1 A / Min: 0 A
Operating Environment
Operating Temperature: 10º to 35º C (50º to 95º F) Non-operating Temperature: -40º to 70º C (-40º to 158º F) Operating Relative Humidity: 8% to 90% (non-condensing) Non-operating Relative Humidity: 5% to 95% (non-condensing)
Regulatory Compliance
FCC, ICES, CE, VCCI, RCM, UKCA, NRTL, CB
Certified Safety Models
Compliant with UL or CSA: HS101-R12X14, HS101-R16X14 or HS101-R13DX14

Applied Directives, Standards

EMC/EMI: 2014/30/EU (EMC Directive)

Electromagnetic Compatibility Regulations 2016

FCC Part 15

ICES-003

VCCI-CISPR 32

AS/NZS CISPR 32

BS/EN55032

BS/EN55035

CISPR 32

CISPR 35

BS/EN 61000-3-2

BS/EN 61000-3-3

BS/EN 61000-4-2

BS/EN 61000-4-3

BS/EN 61000-4-4

BS/EN 61000-4-5

BS/EN 61000-4-6

BS/EN 61000-4-8

BS/EN 61000-4-11

Environment:

2011/65/EU (RoHS Directive)

EC 1907/2006 (REACH)

2012/19/EU (WEEE Directive)

California Proposition 65

Product Safety: 2014/35/EU (LVD Directive)

UL/CSA 62368-1 (USA and Canada)

Electrical Equipment (Safety) Regulations 2016

IEC/BS/EN 62368-1

Perchlorate Warning

California Best Management Practices Regulations for Perchlorate Materials: This Perchlorate warning applies only to products containing CR (Manganese Dioxide) Lithium coin cells. “Perchlorate Material-special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate”

この装置は、クラスA機器です。この装置を住宅環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

VCCI－A