SUPERSERVER®
AS -2145GH-TNMR-LCC

USER'S MANUAL

Revision 1.0

The information in this User's Manual has been carefully reviewed and is believed to be accurate. The vendor assumes no responsibility for any inaccuracies that may be contained in this document, and makes no commitment to update or to keep current the information in this manual, or to notify any person or organization of the updates. Please Note: For the most up-to-date version of this manual, please see our website at www.supermicro.com.

Super Micro Computer, Inc. ("Supermicro") reserves the right to make changes to the product described in this manual at any time and without notice. This product, including software and documentation, is the property of Supermicro and/or its licensors, and is supplied only under a license. Any use or reproduction of this product is not allowed, except as expressly permitted by the terms of said license.

IN NO EVENT WILL Super Micro Computer, Inc. BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, SPECULATIVE OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OR INABILITY TO USE THIS PRODUCT OR DOCUMENTATION, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN PARTICULAR, SUPER MICRO COMPUTER, INC. SHALL NOT HAVE LIABILITY FOR ANY HARDWARE, SOFTWARE, OR DATA STORED OR USED WITH THE PRODUCT, INCLUDING THE COSTS OF REPAIRING, REPLACING, INTEGRATING, INSTALLING OR RECOVERING SUCH HARDWARE, SOFTWARE, OR DATA.

Any disputes arising between manufacturer and customer shall be governed by the laws of Santa Clara County in the State of California, USA. The State of California, County of Santa Clara shall be the exclusive venue for the resolution of any such disputes. Supermicro's total liability for all claims will not exceed the price paid for the hardware product.

FCC Statement: This equipment has been tested and found to comply with the limits for a Class A or Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in industrial environment for Class A device or in residential environment for Class B device. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer's instruction manual, may cause harmful interference with radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case you will be required to correct the interference at your own expense.

California Best Management Practices Regulations for Perchlorate Materials: This Perchlorate warning applies only to products containing CR (Manganese Dioxide) Lithium coin cells. "Perchlorate Material-special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate".

WARNING: This product can expose you to chemicals including lead, known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

The products sold by Supermicro are not intended for and will not be used in life support systems, medical equipment, nuclear facilities or systems, aircraft, aircraft devices, aircraft/emergency communication devices or other critical systems whose failure to perform be reasonably expected to result in significant injury or loss of life or catastrophic property damage. Accordingly, Supermicro disclaims any and all liability, and should buyer use or sell such products for use in such ultra-hazardous applications, it does so entirely at its own risk. Furthermore, buyer agrees to fully indemnify, defend and hold Supermicro harmless for and against any and all claims, demands, actions, litigation, and proceedings of any kind arising out of or related to such ultra-hazardous use or sale.

Manual Revision 1.0

Release Date: February 13, 2025

Unless you request and receive written permission from Super Micro Computer, Inc., you may not copy any part of this document. Information in this document is subject to change without notice. Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders.

Copyright © 2025 by Super Micro Computer, Inc.
All rights reserved.
Printed in the United States of America

Preface

About this Manual

This manual is written for professional system integrators and PC technicians. It provides information for the installation and use of the server. Installation and maintenance should be performed by authorized personnel and qualified service persons only.

Please refer to the AS -2145GH-TNMR-LCC server specifications page on our website for updates on supported memory, processors and operating systems (http://www.supermicro.com).

Notes

For your system to work properly, please follow the links below to download all necessary drivers/utilities and the user's manual for your server.

- Supermicro product manuals: http://www.supermicro.com/support/manuals/
- Product drivers and utilities: https://www.supermicro.com/wdl/driver
- Product safety info: http://www.supermicro.com/about/policies/safety_information.cfm

If you have any questions, please contact our support team at: support@supermicro.com

This manual may be periodically updated without notice. Please check the Supermicro website for possible updates to the manual revision level.

Secure Data Deletion

A secure data deletion tool designed to fully erase all data from storage devices can be found on our website: https://www.supermicro.com/about/policies/disclaimer.cfm?url=/wdl/utility/Lot9_Secure_Data_Deletion_Utility/

Warnings

Special attention should be given to the following symbols used in this manual.

Warning! Indicates important information given to prevent equipment/property damage or personal injury.

Warning! Indicates high voltage may be encountered when performing a procedure.

Contents

Contacting Supermicro 7

Chapter 1 Introduction

1.1 Overview 8
1.2 System Features 9
Front View 9
Drive Carrier Indicators 10
Control Panel 11
Rear View 12
1.3 System Architecture 14
Main Components 14
System Block Diagram 15
1.4 Motherboard Layout 16
Quick Reference Table 17

Chapter 2 Server Installation

2.1 Overview 19
2.2 Unpacking the System 19
2.3 Preparing for Setup 19
Choosing a Setup Location 19
Rack Precautions 20
Server Precautions 20
Rack Mounting Considerations 20
Ambient Operating Temperature 20
Airflow 21
Mechanical Loading 21
Circuit Overloading 21
Reliable Ground 21
2.4 Installing the Rails 22
Identifying the Sections of the Rack Rails 22
Releasing the Inner Rail 23
Installing the Inner Rails 24
Installing the Outer Rails onto the Rack 25

2.5 Installing the Server into a Rack 26
Removing the Server from the Rack 27
Connecting to a Coolant Distribution Unit (CDU) 28

Chapter 3 Maintenance and Component Installation

3.1 Powering Down the System 29
3.2 Accessing the System 30
Removing the Top Cover 30
3.3 Static-Sensitive Devices 31
Precautions 31
3.4 Processor and Heatsink Installation 32
3.5 Memory 40
3.6 Motherboard Battery 41
3.7 Storage Drives 42
Checking the Temperature of an NVMe Drive 42
Installing Drives 42
NVMe Drives 45
Installing M.2 Solid State Drives 46
Installing M.2 Drives 46
3.8 System Cooling 47
Fans 47
3.9 Expansion Cards 48
Installing Expansion Cards 48
3.10 Power Supply 49
3.11 Cable Routing Diagram 50
3.12 BMC 52

Chapter 4 Motherboard Connections

4.1 Power Connections 53
4.2 Headers and Connectors 54
4.3 Input/Output Ports 57
4.4 Jumpers 60
4.5 LED Indicators 62
4.6 Front Control Panel 65

Chapter 5 Software

5.1 Ubuntu® Server 22.04 ISO Installation 70
5.2 Red Hat Enterprise Linux (RHEL) 9.3 ISO Installation 89
5.3 SUSE Linux Enterprise Server (SLES) 15 SP5 Installation 114
5.4 IPMI 133
5.5 Logging into the BMC (Baseboard Management Controller) 133
BMC ADMIN User Password 133

Chapter 6 Optional Components

6.1 Optional Parts List 134
6.2 Storage Protocols Supported 135
6.3 TPM Security Module 135

Chapter 7 Troubleshooting and Support

7.1 Information Resources 136
Website 136
Direct Links for the AS -2145GH-TNMR-LCC System 136
Direct Links for General Support and Information 136
7.2 Baseboard Management Controller (BMC) 137
7.3 Troubleshooting Procedures 138
Before Power On 138
No Power 138
No Video 139
System Boot Failure 139
The System Cannot Retain the Setup Configuration 139
When the System Becomes Unstable 139
7.4 Technical Support Procedures 140
7.5 Frequently Asked Questions 141
7.6 Returning Merchandise for Service 142
7.7 Battery Removal and Installation 143
Battery Removal 143
Proper Battery Disposal 143
Battery Installation 144

Appendix A Standardized Warning Statements for AC Systems

Appendix B System Specifications

Contacting Supermicro

Headquarters

Address:	Super Micro Computer, Inc. 980 Rock Ave. San Jose, CA 95131 U.S.A.
Tel:	+1 (408) 503-8000
Fax:	+1 (408) 503-8008
Email:	marketing@supermicro.com (General Information) Sales-USA@supermicro.com (Sales Inquiries) Government_Sales-USA@supermicro.com (Gov. Sales Inquiries) support@supermicro.com (Technical Support) RMA@supermicro.com (RMA Support) Webmaster@supermicro.com (Webmaster)
Website:	www.supermicro.com

Europe

Address:	Super Micro Computer B.V. Het Sterrenbeeld 28, 5215 ML 's-Hertogenbosch, The Netherlands
Tel:	+31 (0) 73-6400390
Fax:	+31 (0) 73-6416525
Email:	Sales_Europe@supermicro.com (Sales Inquiries) Support_Europe@supermicro.com (Technical Support) RMA_Europe@supermicro.com (RMA Support)
Website:	www.supermicro.nl

Asia-Pacific

Address:	Super Micro Computer, Inc. 3F, No. 150, Jian 1st Rd. Zhonghe Dist., New Taipei City 235 Taiwan (R.O.C)
Tel:	+886-(2) 8226-3990
Fax:	+886-(2) 8226-3992
Email:	Sales-Asia@supermicro.com.tw (Sales Inquiries) Support@supermicro.com.tw (Technical Support) RMA@supermicro.com.tw (RMA Support)
Website:	www.supermicro.com.tw

Chapter 1

Introduction

1.1 Overview

This chapter provides a brief outline of the functions and features of the A+ Server AS -2145GH-TNMR-LCC. It is based on the H13QSH motherboard and the CSE-218H2TS-R5K4AWP chassis. The following provides an overview of the specifications and capabilities of the system.

System Overview	
Motherboard	H13QSH
Chassis	CSE-218H2TS-R5K4AWP
Processor Support	Quad AMD Instinct™ MI300A APUs in sockets SH5
Memory	Total 512 GB HBM3
Drive Support	Default: Eight front 2.5" NVMe drive bays (The signals for the six NVMe drives are optional.) Option A: Eight front 2.5" SAS*/SATA* drive bays (*SAS/SATA support may require additional storage controller and/or cables, please see the optional parts list for details) Two 2280 or 22110 M.2 NVMe slots (M-key)
Expansion Slots	Four PCIe 5.0 x16 FHFL slots One PCIe 5.0 x16 AIOM slot (OCP 3.0 compatible) Two PCIe 5.0 x16 FHHL slots
I/O Ports	One RJ45 1 GbE Dedicated IPMI LAN port Two rear USB 3.0 ports Two front USB 2.0 ports One VGA port One rear DisplayPort One rear serial port
System Cooling	Three heavy-duty counter-rotating 8-cm fans Liquid cooling: Direct to Chip (D2C) cold plate
Power	Four 2700 W redundant Titanium level power supplies
Form Factor	2U Rackmount: 3.5 x 17.3 x 33.4 in. / 88.9 x 439.42 x 848.36 mm (H x W x D)

Notes: A Quick Reference Guide can be found on the product page of the Supermicro website. The following safety models associated with the AS -2145GH-TNMR-LCC have been certified as compliant with UL or CSA: 218H2-Q27H13 and 218H2-27.

1.2 System Features

The following views of the system display the main features. Refer to Appendix B for additional specifications.

Front View

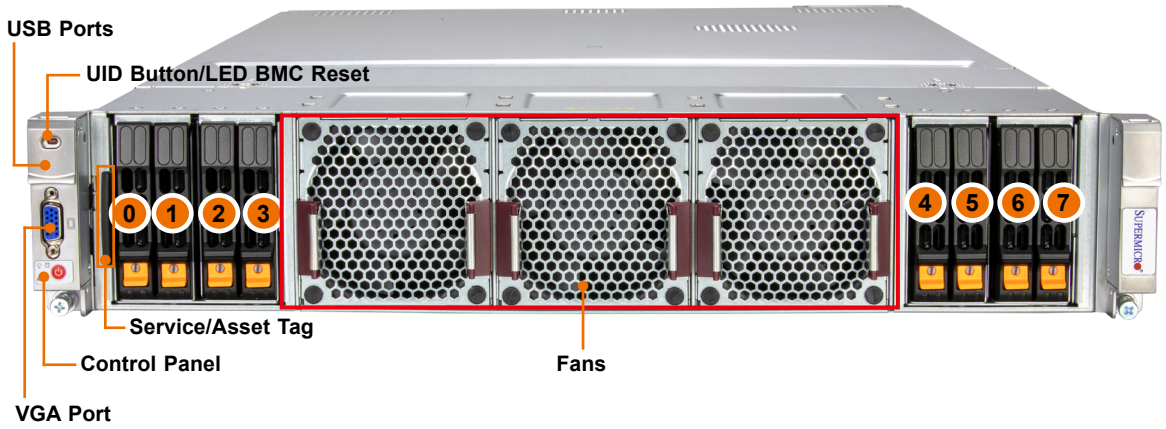

Figure 1-1. Front View

System Features: Front	
Feature	**Description**
USB Ports	Two USB 2.0 ports (USB ports under handle cover)
UID Button/ LED BMC Reset	Unit identifier button illuminates the Information LED. Reset BMC and restore to default configuration.
Service Tag	Service Tag with BMC Password Reset
VGA Port	One video port
Control Panel	Front control panel with LEDs and buttons (see Control Panel for details)
Fans	Three 8-cm heavy-duty external fans with optimal fan speed control

Logical Storage Drive Numbers	
Item	**Description**
0 to 7	Default: eight 2.5" NVMe drive bays (The signals for the six NVMe drives are optional.) Optional: eight 2.5" SAS/SATA drive bays (via RAID controller and cable)

Drive Carrier Indicators

Each drive carrier has two LED indicators: an activity indicator and a status indicator. For non-RAID configurations, some LED indications are not supported, such as hot spare.

Drive Carrier LED Indicators			
	Color	**Blinking Pattern**	**Behavior for Device**
Activity LED	Blue	Blinking	I/O activity
	Off		Idle SATA drive installed
Status LED	Green	Solid On	Safe to remove NVNE drive
	Amber	Blinking at 1 Hz	Do not remove NVME drive

Control Panel

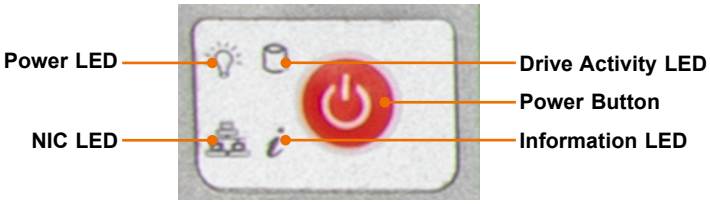

Figure 1-2. Control Panel

Control Panel Features	
Feature	**Description**
Power LED	Indicates power is being supplied to the system power supply units. This LED is illuminated when the system is operating normally.
NIC LED	Indicates network activity on the LAN when flashing.
Information LED	Alerts operator to several states, as noted in the table below.
Power Button	The main power switch applies or removes primary power from the power supplies to the server but maintains standby power.
Drive Activity LED	Indicates activity on the storage drives when flashing.

Information LED	
Color, Status	**Description**
Red, solid	An overheat condition has occurred.
Red, blinking at 1 Hz	Fan failure, check for an inoperative fan.
Red, blinking at 0.25 Hz	Power failure, check for a non-operational power supply.
Blue, solid	UID has been activated locally to locate the server in a rack environment.
Blue, blinking at 1 Hz	UID has been activated remotely using the BMC to locate the server in a rack environment.
Blue, blinking at 2 Hz	BMC is resetting
Blue, blinking at 4 Hz	BMC is setting factory defaults
Red, solid, with Power LED blinking green	Fault detected
Blue, blinking at 10 Hz with Power LED blinking green	BMC or BIOS firmware is updating. Blink pattern of Power LED identifies which firmware is being updated.
Blue and red, blinking at 10 Hz	Recovery mode

Rear View

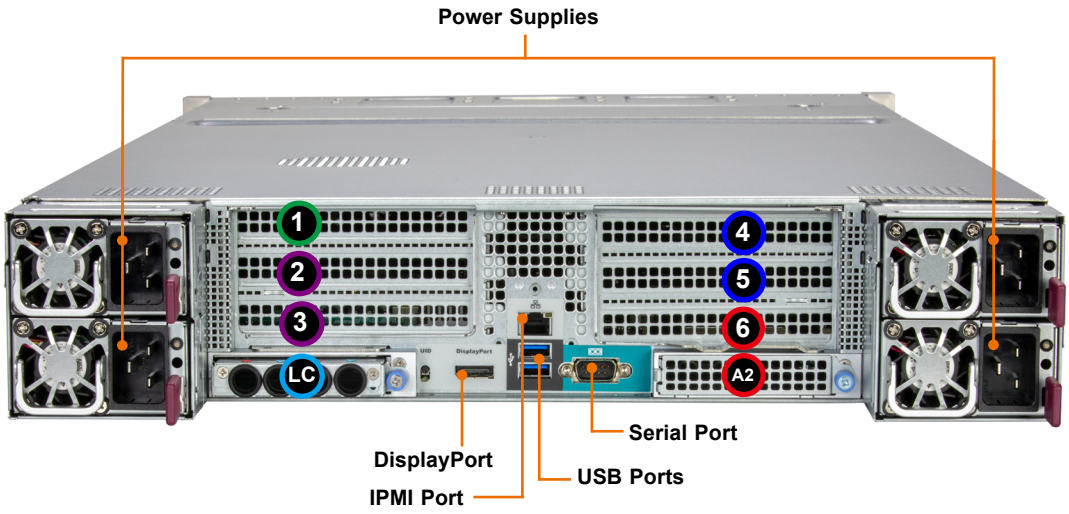

Figure 1-3. System: Rear View

System Features: Rear	
Feature	**Description**
Power Supplies	Four redundant 2700 W Titanium Level power supplies
DisplayPort	One DisplayPort 1.1a video interface
IPMI LAN Port	One RJ45 1 GbE dedicated IPMI LAN port for remote management
USB Ports	Two USB 3.0 ports
Serial Port	One serial communication port

Expansion Slot Locations	
Slot	**Description**
1 2 4 5	PCIe 5.0 x 16 FHFL
3 6	PCIe 5.0 x 16 FHHL
A2	PCIe 5.0 x 16 AIOM (OCP NIC)
LC	Reserved for liquid cooling interface

APU1 APU2 APU3 APU4

Note: FHFL = full height, full length. FHHL = full height, half length.

Full height = 4.2", low profile = 2.5", full length = 10.5", half length = 6.6"

Power Supply Indicators	
LED Color and State	**Condition**
Solid Green	Indicates that the power supply is on and working
Blinking Green	Indicates the system is off
Solid Amber	No AC power to module
Off	No AC power to all power supplies

1.3 System Architecture

This section covers the locations of the system's main components and a system block diagram.

Main Components

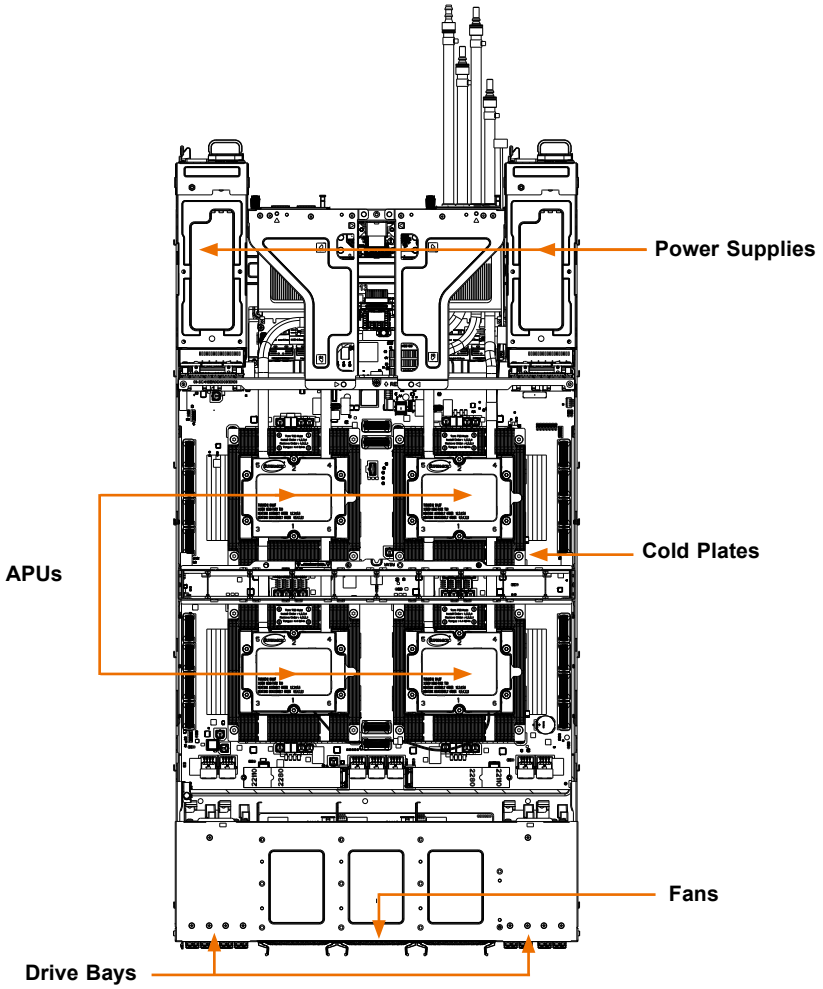

Figure 1-4. Main Component Locations

System Features: Top	
Feature	**Description**
Power Supplies	PWS-2K70A-1R, four redundant 2700 W power supply modules
System Fans	Three heavy duty counter-rotating 8-cm fans
Drive Bays	BPN-NVME5-826N-B2B, eight NVMe drive bays
Cold Plates	LCS-SLCM-H0013, liquid-cooled cold plate for AMD MI300A
Processors	GPU-AMD-MI300A-SH5-01H, Quad AMD Instinct™ MI300A APUs in sockets SH5

System Block Diagram

The block diagram below shows the connections and relationships between the subsystems and major components of the overall system.

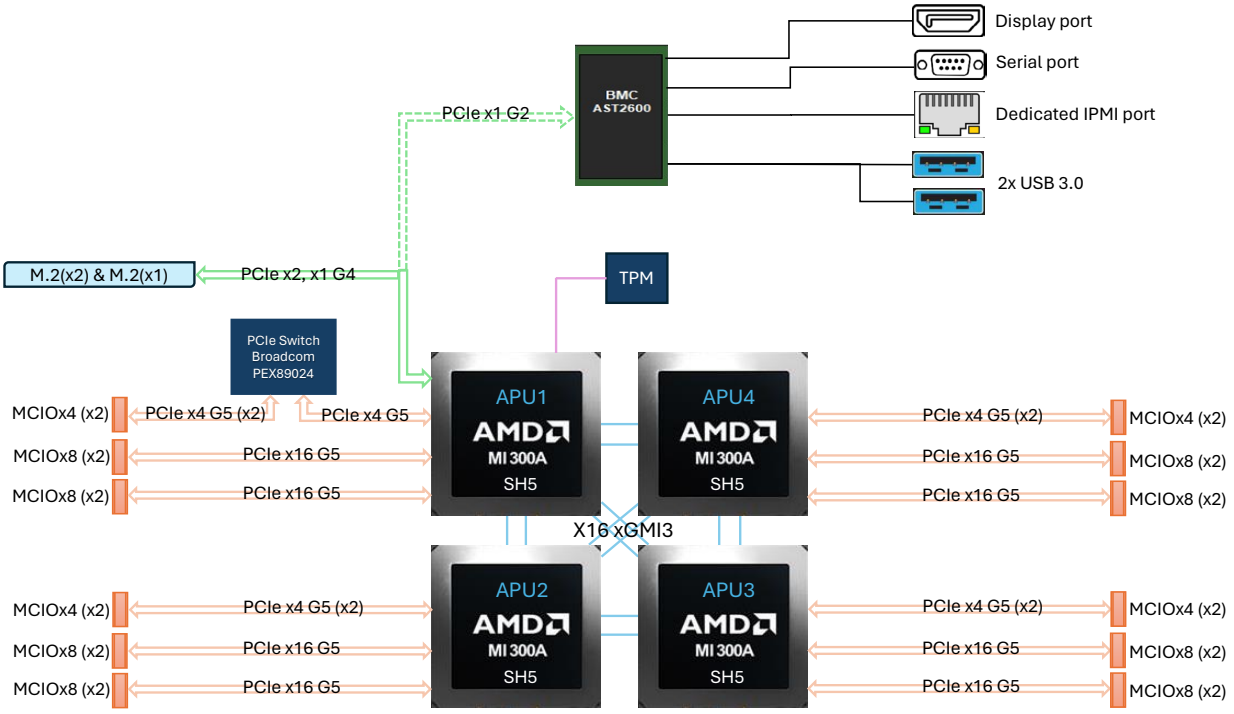

Figure 1-5. System Block Diagram

Note: This is a general block diagram and may not exactly represent the features on your motherboard. See the previous pages for the actual specifications of your motherboard.

1.4 Motherboard Layout

Below is a layout of the H13QSH motherboard with the jumper, connector and LED locations shown. See the table on the following page for descriptions. For detailed descriptions, pinout information and jumper settings, refer to Chapter 4 or the Motherboard Manual.

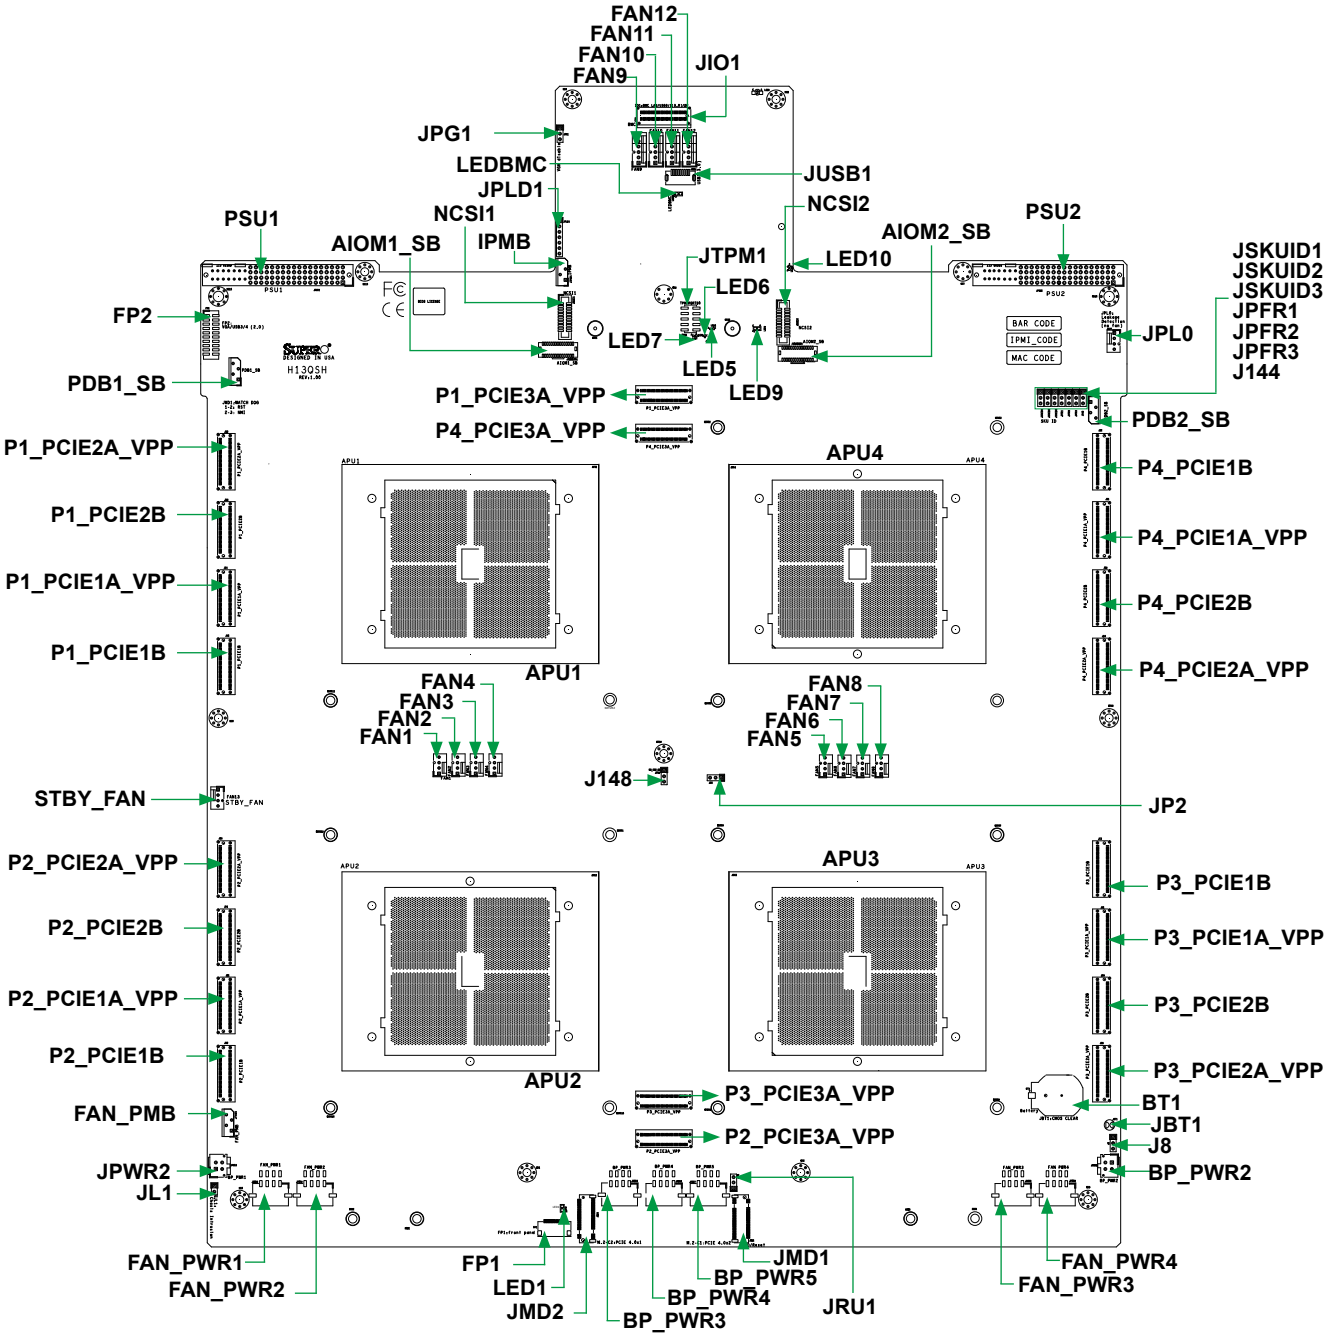

Figure 1-6. Motherboard Layout

Notes:

- Components not documented are for internal testing only.
- Use only the correct type of onboard CMOS battery as specified by the manufacturer. To avoid possible explosion, do not install the onboard battery upside down.

Quick Reference Table

Jumper	Description	Default Setting
JBT1	CMOS Clear	Open (Normal)
JPG1	Video Display Enable	Pins 1/2: Video Display Enabled
JPL0	4-pin Leakage Detection	
JRU1	UID LED/BMC Reset	Closed: Normal (UID LED)
JSKUID1-3	SKU Configurations	

LED	Description	Status
LED1 (LEDPWR)	Power LED	LED On: Onboard Power On
LEDBMC (LED3)	BMC Heartbeat LED	Blinking Green: BMC Normal (Active), Solid Green: (During BMC Reset or during a Cold Reboot)
LED5	APU2 Power Status LED	Solid Red: Power Failure
LED6	APU3 Power Status LED	Solid Red: Power Failure
LED7	APU4 Power Status LED	Solid Red: Power Failure
LED9	PCIE SW Heartbeat	Blinking Green: PCIe SW Normal, Solid Green: (During BMC Reset or during a Cold Reboot)
LED10	PCIE SW Error	Solid Red: SystemError / No PCIe Link

Connector	Description
AIOM1_SB (JAIOM1SB1) /AIOM2_SB (JAIOM2SB1)	Advanced I/O Module (AIOM) PCIe 5.0 x8 Slot Supported by APU
BT1	Onboard CMOS Battery
BMC (JIO1)	Dedicated BMC LAN on the Rear I/O Panel
BP_PWR2 (JPWR1)	4-pin Power Connector for Backplane Devices
BP_PWR1 (JPWR2)	4-pin Power Connector for Backplane Devices
BP_PWR3 (JPWR5)	8-pin Power Connector for Backplane Devices
BP_PWR4 (JPWR6)	8-pin Power Connector for Backplane Devices
BP_PWR5 (JPWR7)	8-pin Power Connector for Backplane Devices
FAN1-8	4-pin Fan Headers
FAN9-12	6-pin Cooling Fan Headers
FAN_PMB (JFAN1)	Fan for I²C Temperature Sensor
FAN_PWR1 (JPWR3)	8-pin Fan Power Connector
FAN_PWR2 (JPWR4)	8-pin Fan Power Connector
FAN_PWR3 (JPWR8)	8-pin Fan Power Connector
FAN_PWR4 (JPWR9)	8-pin Fan Power Connector
FP1	Front Control Panel Header with I²C
FP2	Front Control Panel Header with USB and VGA Support
IPMB (JIPMB1)	4-pin BMC external I²C Header (for an IPMI card)
JL1	Chassis Intrusion Header
JMD1-2 (M.2-C1/M.2-C2)	M.2 M-Key 2280/22110 (supports PCIe 4.0 x2/x1) Slot
JTPM1	Trusted Platform Module/Port 80 Connector

Connector	Description
NCSI1 (JNCSI1)/ NCSI2 (JNCSI2)	NCSI Headers for IPMI Support
PSU1 (JPSU1)/ PSU2 (JPSU2)	Supermicro Proprietary Power Supply Units 1/2 for System Use
PDB1_SB/PDB2_SB	SMB I²C for 4U Power Distribution Board
P1_PCIE1B/P1_PCIE2B	JA2 and JA4: PCIe 5.0 x8 by APU1
P2_PCIE1B/P2_PCIE2B	JB2 and JB4: PCIe 5.0 x8 by APU2
P3_PCIE1B/P3_PCIE2B	JC2 and JC4: PCIe 5.0 x8 by APU3
P4_PCIE1B/P4_PCIE2B	JD2 and JD4: PCIe 5.0 x8 by APU4
P1_PCIE1A_VPP/ P1_PCIE2A_VPP	JA1 and JA3: PCIe 5.0 x8 by APU1
P1_PCIE3A_VPP	2 x PCIe 5.0 x4 by PESW (APU1)
P2_PCIE1A_VPP/ P2_PCIE2A_VPP/ P2_PCIE3A_VPP	JB1 and JB3: PCIe 5.0 x8 by APU2, JB5: 2 x PCIe 5.0 x4 by APU2
P3_PCIE1A_VPP/ P3_PCIE2A_VPP/ P3_PCIE3A_VPP	JC1 and JC3: PCIe 5.0 x8 by APU3, JC5: 2 x PCIe 5.0 x4 by APU3
P4_PCIE1A_VPP/ P4_PCIE2A_VPP/ P4_PCIE3A_VPP	JD1 and JD3: PCIe 5.0 x8 by APU4, JD5: 2 x PCIe 5.0 x4 by APU4
STBY-FAN (FAN13)	Standby Fan Header
USB2 (3.0) (JUSB1)	Type A USB 3.0 Connector (USB2) for Front Access

Note: Jumpers, connectors, switches, and LED indicators that are not described in the preceding tables are for manufacturing testing purposes only, and are not covered in this manual.

Chapter 2

Server Installation

2.1 Overview

This chapter provides advice and instructions for mounting your system in a server rack. If your system is not already fully integrated with processors, system memory etc., refer to Chapter 3 for details on installing those specific components.

Important: Electrostatic Discharge (ESD) can damage electronic components. To prevent such damage to PCBs (printed circuit boards), it is important to use a grounded wrist strap, handle all PCBs by their edges and keep them in anti-static bags when not in use.

2.2 Unpacking the System

Inspect the box in which the AS -2145GH-TNMR-LCC was shipped, and note if it was damaged in any way. If any equipment appears damaged, file a damage claim with the carrier who delivered it.

Decide on a suitable location for the rack unit that will hold the server. It should be situated in a clean, dust-free area that is well ventilated. Avoid areas where heat, electrical noise and electromagnetic fields are generated. It will also require a grounded AC power outlet nearby. Be sure to read the precautions and considerations noted in Appendix A.

2.3 Preparing for Setup

The box in which the system was shipped should include the rackmount hardware needed to install it into the rack. Please read this section in its entirety before you begin the installation.

Choosing a Setup Location

- The system should be situated in a clean, dust-free area that is well ventilated. Avoid areas where heat, electrical noise and electromagnetic fields are generated.
- Leave enough clearance in front of the rack so that you can open the front door completely (~25 inches) and approximately 30 inches of clearance in the back of the rack to allow sufficient space for airflow and access when servicing.
- This product should be installed only in a Restricted Access Location (dedicated equipment rooms, service closets, etc.).

- This product is not suitable for use with visual display workplace devices according to §2 of the German Ordinance for Work with Visual Display Units.

Rack Precautions

- Ensure that the leveling jacks on the bottom of the rack are extended to the floor so that the full weight of the rack rests on them.
- In single rack installations, stabilizers should be attached to the rack. In multiple rack installations, the racks should be coupled together.
- Always make sure the rack is stable before extending a server or other component from the rack.
- You should extend only one server or component at a time - extending two or more simultaneously may cause the rack to become unstable.

Server Precautions

- Review the electrical and general safety precautions in Appendix A.
- Determine the placement of each component in the rack before you install the rails.
- Install the heaviest server components at the bottom of the rack first and then work your way up.
- Use a regulating uninterruptible power supply (UPS) to protect the server from power surges and voltage spikes and to keep your system operating in case of a power failure.
- Allow any drives and power supply modules to cool before touching them.
- When not servicing, always keep the front door of the rack and all covers/panels on the servers closed to maintain proper cooling.

Rack Mounting Considerations

Ambient Operating Temperature

If installed in a closed or multi-unit rack assembly, the ambient operating temperature of the rack environment may be greater than the room's ambient temperature. Therefore, consideration should be given to installing the equipment in an environment compatible with the manufacturer’s maximum rated ambient temperature (TMRA).

Airflow

Equipment should be mounted into a rack so that the amount of airflow required for safe operation is not compromised.

Mechanical Loading

Equipment should be mounted into a rack so that a hazardous condition does not arise due to uneven mechanical loading.

Circuit Overloading

Consideration should be given to the connection of the equipment to the power supply circuitry and the effect that any possible overloading of circuits might have on overcurrent protection and power supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

Reliable Ground

A reliable ground must be maintained at all times. To ensure this, the rack itself should be grounded. Particular attention should be given to power supply connections other than the direct connections to the branch circuit (i.e. the use of power strips, etc.).

To prevent bodily injury when mounting or servicing this unit in a rack, you must take special precautions to ensure that the system remains stable. The following guidelines are provided to ensure your safety:

- This unit should be mounted at the bottom of the rack if it is the only unit in the rack.
- When mounting this unit in a partially filled rack, load the rack from the bottom to the top with the heaviest component at the bottom of the rack.
- If the rack is provided with stabilizing devices, install the stabilizers before mounting or servicing the unit in the rack.
- Slide rail mounted equipment is not to be used as a shelf or a work space.

Important! Slide rail mounted equipment is not to be used as a shelf or a work space.

Important: do not pick up the server with the front handles. They are designed to pull the system from a rack only.

2.4 Installing the Rails

There are a variety of rack units on the market, which may require a slightly different assembly procedure. This rail set fits a rack between 25.6" and 33" deep.

The following is a basic guideline for installing the system into a rack with the rack mounting hardware provided. You should also refer to the installation instructions that came with the specific rack you are using.

If you are installing into a two-post "telco" rack, skip to that section later in this chapter.

Identifying the Sections of the Rack Rails

The chassis package includes two rail assemblies in the rack mounting kit. Each assembly consists of three sections: An inner chassis rail which secures directly to the chassis, an outer rail that secures to the rack, and a middle rail which extends from the outer rail. These assemblies are specifi cally designed for the left and right side of the chassis.

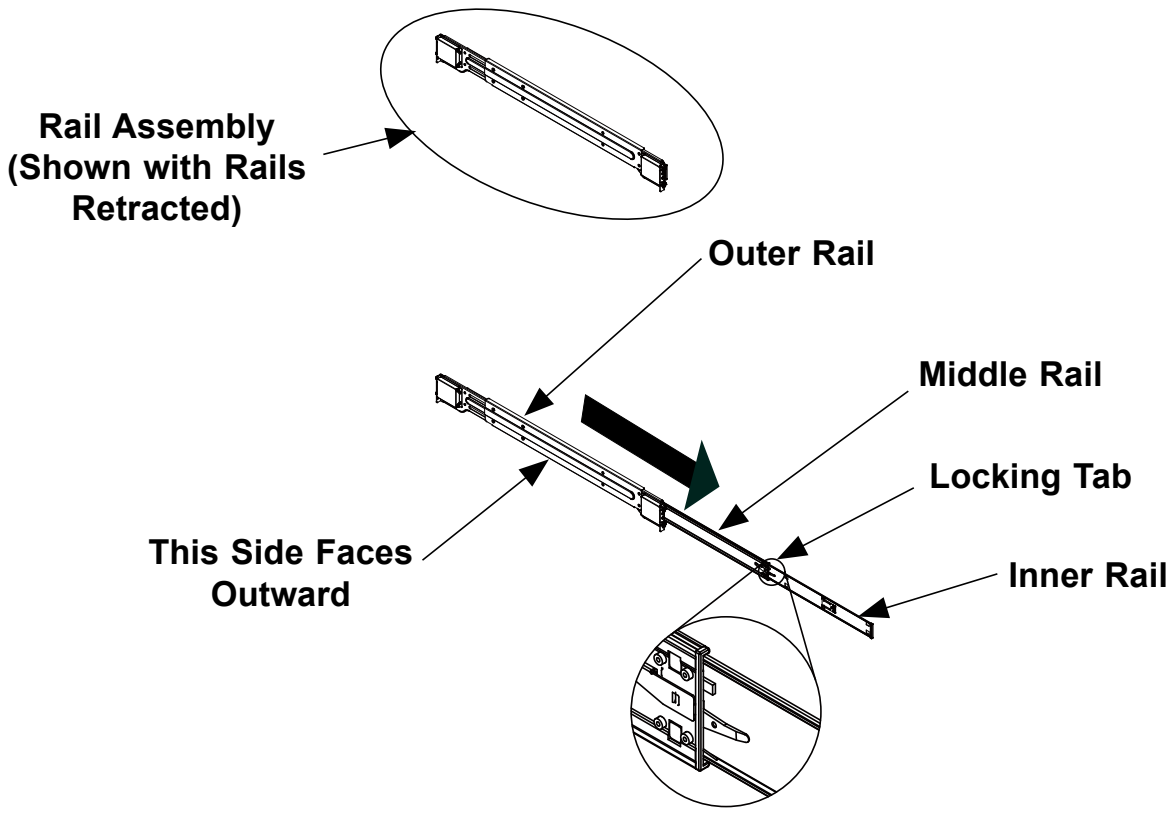

Figure 2-1. Identifying the Outer Rail, Middle Rail, and Inner Rails (Left Rail Assembly Shown)

Releasing the Inner Rail

Releasing Inner Rail from the Outer Rails

1. Identify the left and right outer rail assemblies as described on page 22.
2. Pull the inner rail out of the outer rail until it is fully extended as illustrated below.
3. Press the locking tab down to release the inner rail.
4. Repeat steps 1-3 for the second outer rail.

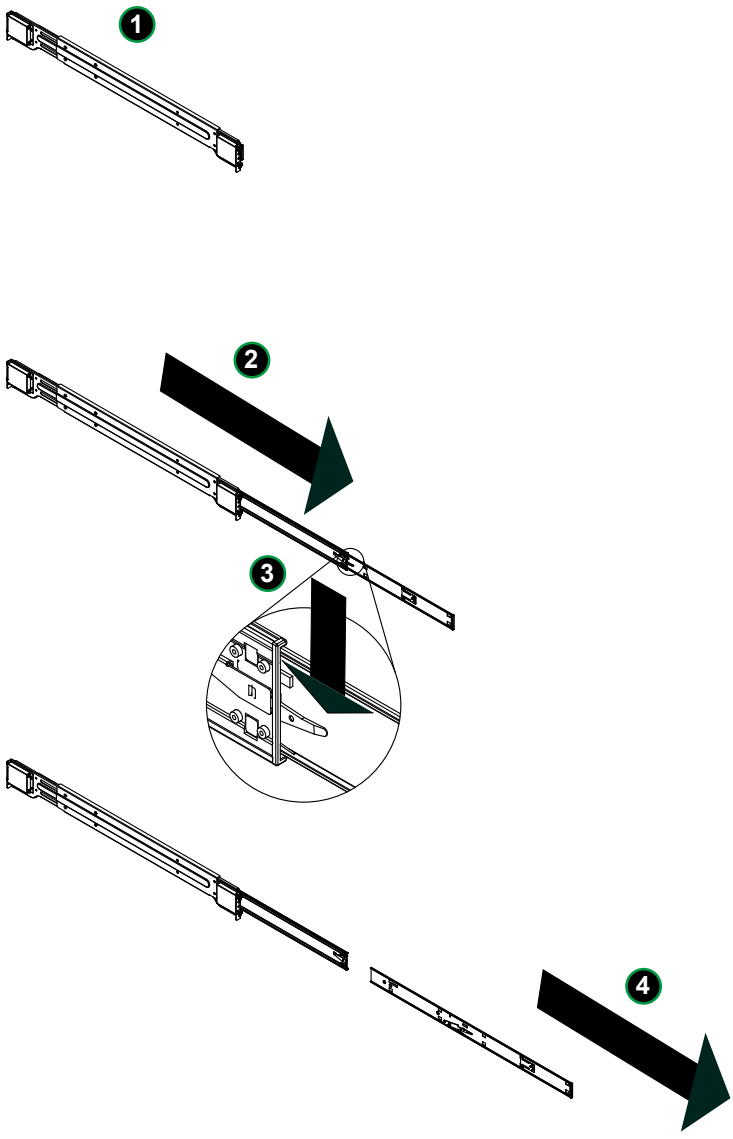

Figure 2-2. Extending and Releasing the Inner Rail

Installing the Inner Rails

The chassis comes with two sets of rack rails, one set for the right side of the chassis and one for the left. Each set consists of an inner rail that attaches to the chassis, and an outer rail that attaches to the rack.

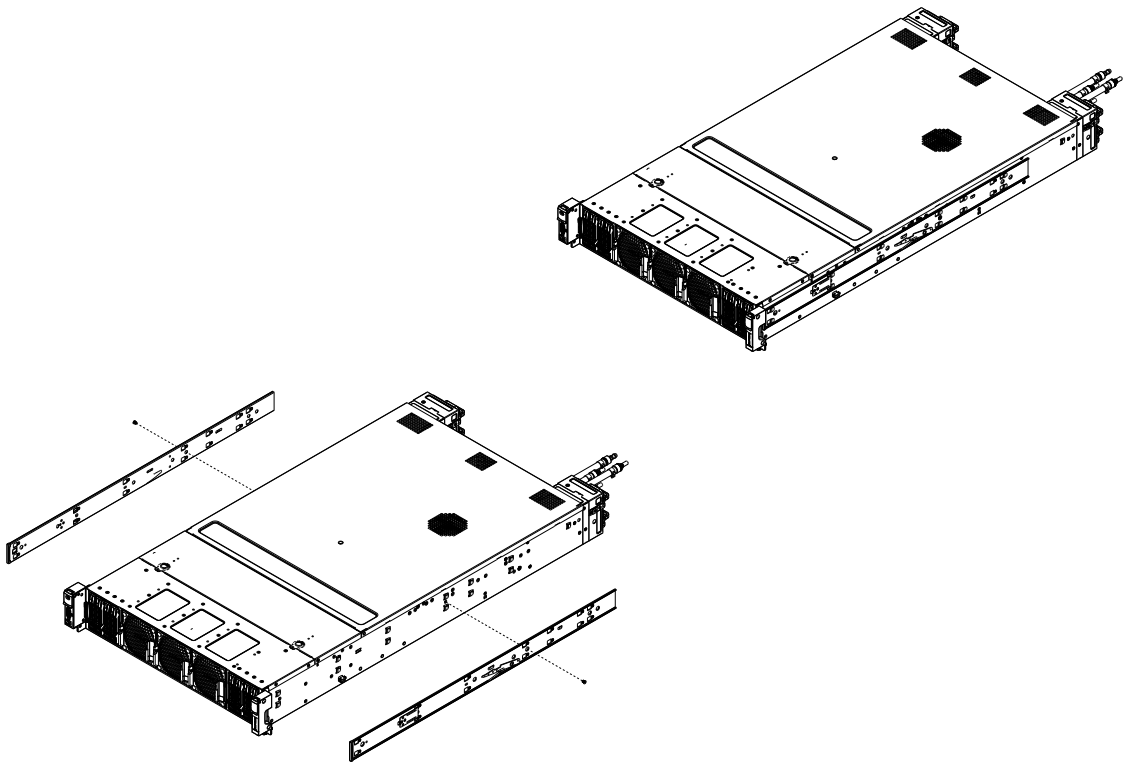

Figure 2-3. Attaching the Inner Rack Rails

Installing the Outer Rails onto the Rack

Installing the Outer Rails

1. Press upward on the locking tab at the rear end of the middle rail.
2. Push the middle rail back into the outer rail.
3. Hang the hooks on the front of the outer rail onto the square holes on the front of the rack. If desired, use screws to secure the outer rails to the rack.
4. Pull out the rear of the outer rail, adjusting the length until it just fits within the posts of the rack.
5. Hang the hooks of the rear section of the outer rail onto the square holes on the rear of the rack. Take care that the proper holes are used so the rails are level. If desired, use screws to secure the rear of the outer rail to the rear of the rack.
6. Repeat for the other outer rail.

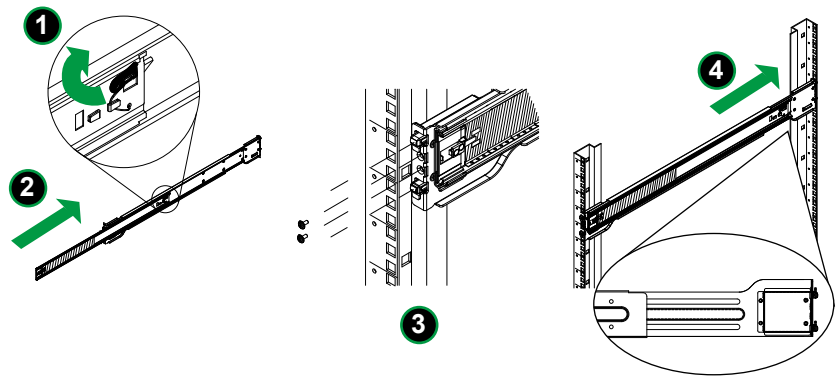

Figure 2-4. Installing the Outer Rails to the Rack

Note: The figure above is for illustrative purposes only. Always install servers at the bottom of the rack first.

Stability hazard. The rack stabilizing mechanism must be in place, or the rack must be bolted to the floor before you slide the unit out for servicing. Failure to stabilize the rack can cause the rack to tip over.

2.5 Installing the Server into a Rack

Once rails are attached to the chassis and the rack, you can install the server.

Installing the Server into a Rack

1. Extend the outer rails as illustrated above.
2. Align the inner rails of the chassis with the outer rails on the rack.
3. Slide the inner rails into the outer rails, keeping the pressure even on both sides. When the chassis has been pushed completely into the rack, it should click into the locked position.

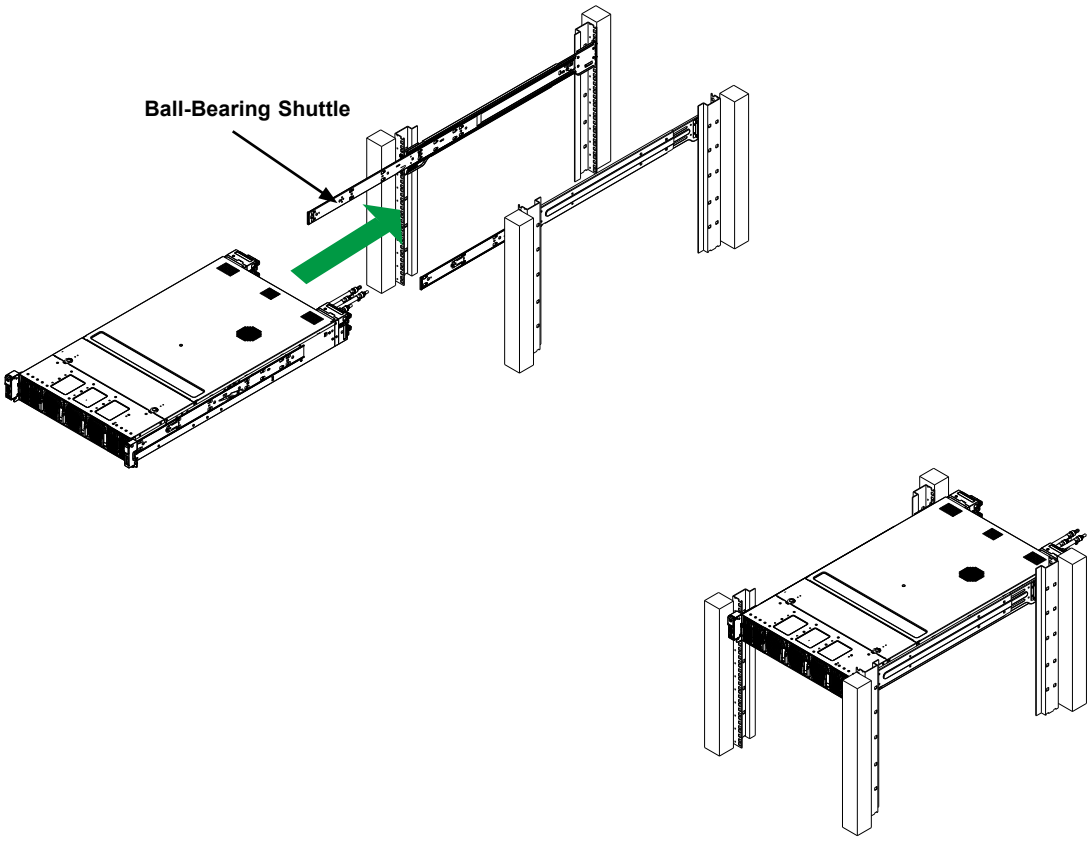

Figure 2-5. Installing the Server into the Rack

Note: Figure is for illustrative purposes only. Always install servers to the bottom of a rack first.

Removing the Server from the Rack

Important! It is dangerous for a single person to off-load the heavy chassis from the rack without assistance. Be sure to have sufficient assistance supporting the chassis when removing it from the rack. Use a lift.

1. If necessary, loosen the thumb screws on the front of the chassis that hold it in the rack.
2. Pull the chassis forward out the front of the rack until it stops.
3. Press the release latches on each of the inner rails downward simultaneously and continue to pull the chassis forward and out of the rack.

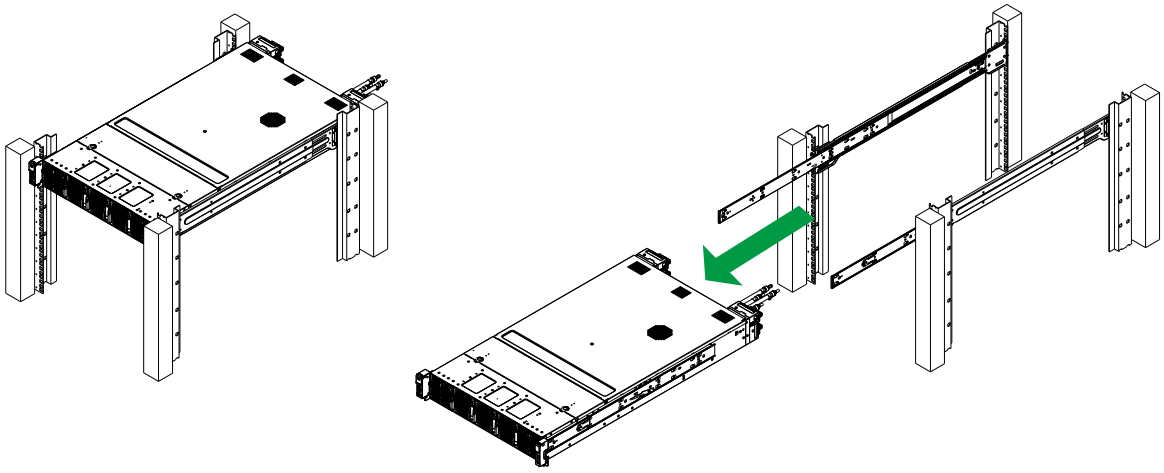

Figure 2-6. Removing the Server from the Rack

Note: Figure is for illustrative purposes only. Always install servers to the bottom of a rack first.

Connecting to a Coolant Distribution Unit (CDU)

Important: The chassis is heavy and requires two to three people to lift it out.

The CSE-218H2TS-R5K4AWP chassis uses a liquid-cooling solution to maintain operational temperature. The coolant from the chassis is circulated out to an external Coolant Distribution Unit (CDU) using specialized pipes and tubes, where it is cooled through a cooling tower or cooling unit, and circulated back to the CDU and back to the chassis.

A brief layout of the relationship between the devices explains the basic functions of each.

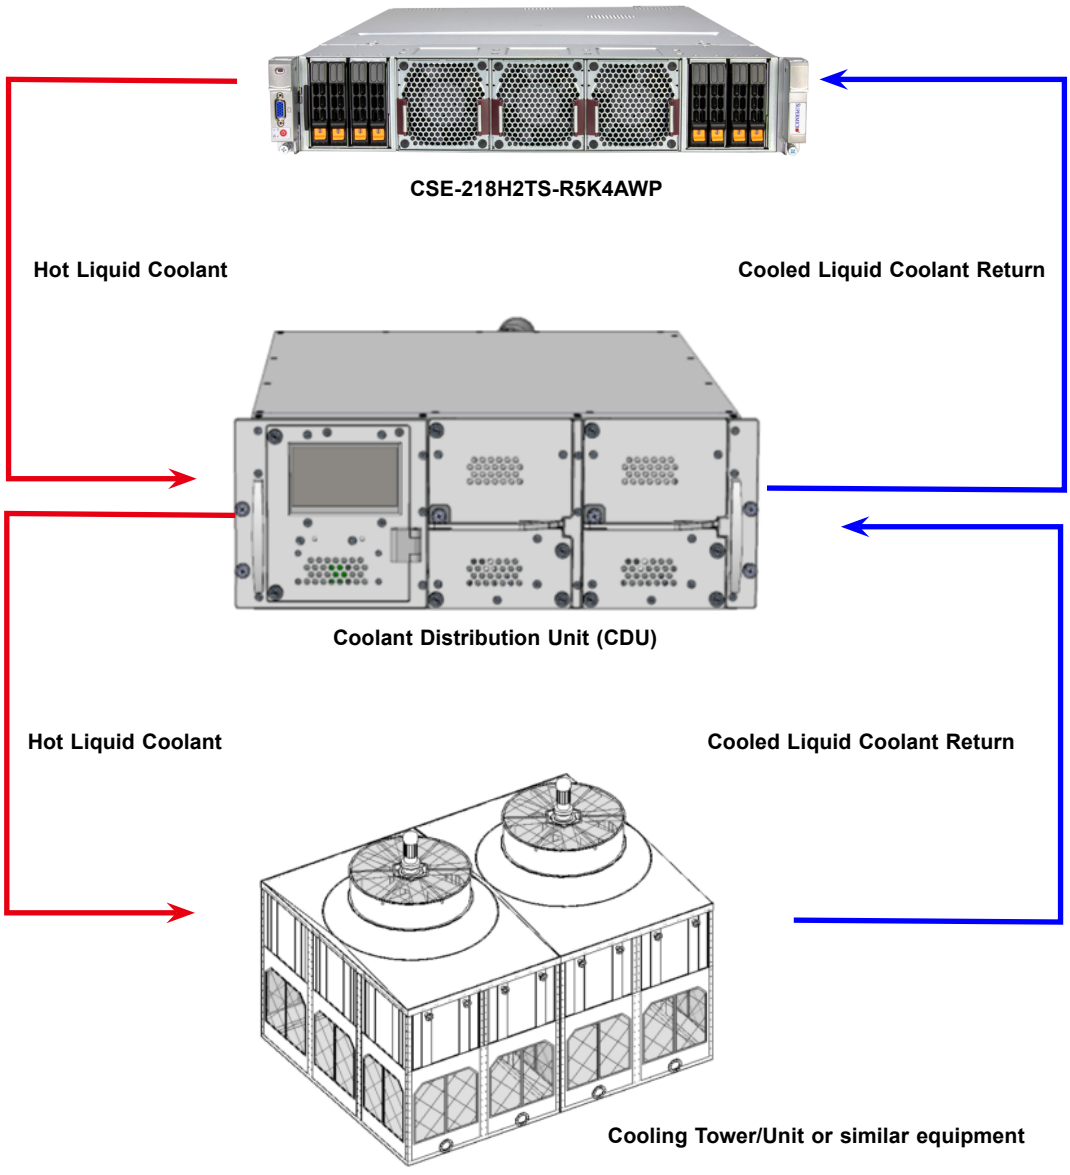

Figure 2-7. Liquid Cooling Layout

Chapter 3

Maintenance and Component Installation

This chapter provides instructions on installing and replacing main system components. To prevent compatibility issues, only use components that match the specifications and/or part numbers given.

Installation or replacement of most components require that power first be removed from the system. Please follow the procedures given in each section.

3.1 Powering Down the System

Use the following procedure to ensure that power has been removed from the system. This step is necessary when removing or installing non hot-swap components.

1. Use the operating system to power down the system.
2. After the system has completely shut down, disconnect the AC power cord(s) from the power strip or outlet and remove the AC power cords from all power supply modules.
3. Disconnect the power cord(s) from the power supply module(s).
4. When performing service on non hot-swap components, remove the system from the rack and place it on a bench or desk. Do not service with the system extended from the rack.

3.2 Accessing the System

The AS -2145GH-TNMR-LCC features a removable top cover, which allows easy access to the inside of the chassis.

Note: When opening the top cover and accessing the inside of the chassis, ensure the system is on the bench, not the rack.

Removing the Top Cover

1. Power down the system as described in Section 3.1.
2. Remove the two screws located towards the front of the chassis cover.
3. Press the two release buttons and slide the cover toward the rear.
4. Lift the top cover up.

Check that all ventilation openings on the top cover and the top of the chassis are clear and unobstructed.

Important: Except for short periods of time, do not operate the server without the cover in place. The chassis cover must be in place to allow for proper airflow and to prevent overheating.

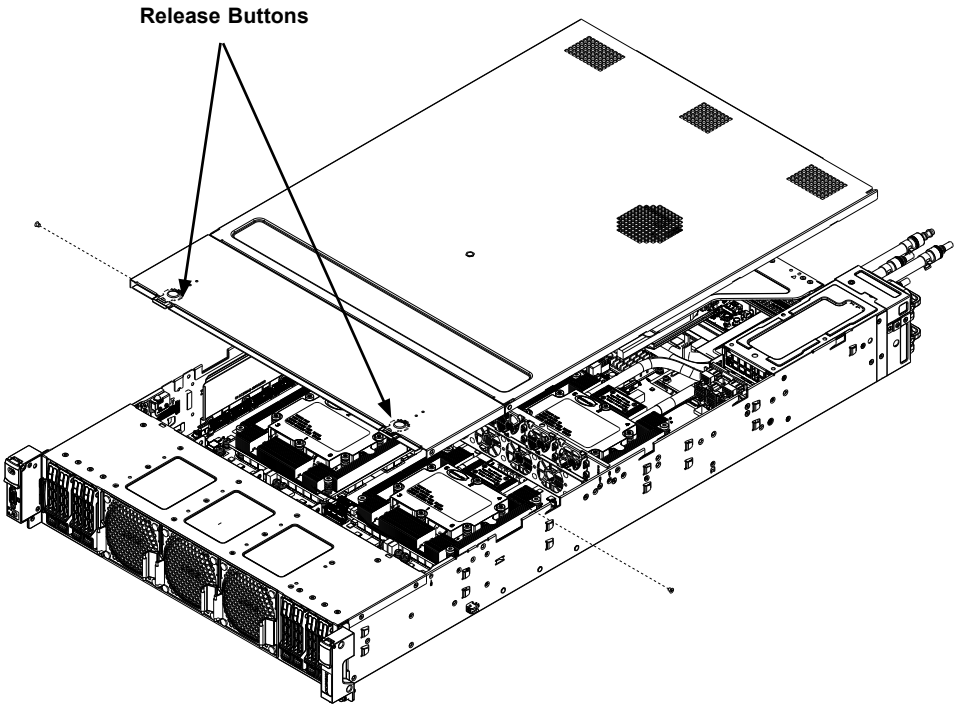

Figure 3-1. Removing the Chassis Cover

3.3 Static-Sensitive Devices

Electrostatic Discharge (ESD) can damage electronic components. To avoid damaging your motherboard, it is important to handle it very carefully. The following measures are generally sufficient to protect the system PCBs from ESD.

Precautions

- Use a grounded wrist strap designed to prevent static discharge.
- Touch a grounded metal object before removing any PCB (printed circuit board) from its antistatic bag.
- Handle PCBs by their edges only; do not touch its components, peripheral chips, memory modules or gold contacts.
- When handling chips or modules, avoid touching their pins.
- Put the PCBs back into their antistatic bags when not in use.
- Use only the correct type of onboard CMOS battery. Do not install the onboard battery upside down to avoid possible explosion.

3.4 Processor and Heatsink Installation

The processor (APU) and processor carrier should be assembled together first to form the processor carrier assembly. Before installation, be sure to perform the following steps below:

- Please carefully follow the instructions given on the previous page to avoid ESD-related damages.
- Unplug the AC power cords from all power supplies after shutting down the system.
- Check that the plastic protective cover is on the APU socket, and none of the socket pins are bent. If they are, contact your retailer.
- When handling the processor, avoid touching or placing direct pressure on the LGA lands (gold contacts). Improper installation or socket misalignment can cause serious damage to the processor or APU socket, which may require manufacturer repairs.
- Refer to the Supermicro website for updates on processor and memory support.
- When installing the processor and heatsink, ensure a torque driver set to the correct force is used for each screw.
- All graphics in this manual are for illustrations only. Your components may look different.
- Thermal grease is pre-applied on a new heatsink. No additional thermal grease is needed.
- Please note that the thermal pad is designed for single use only. Ensure it is properly aligned with the positioning points before securing it.

Installing the Processor and Heatsink

1. Unscrew the screw #1 holding down the force frame.

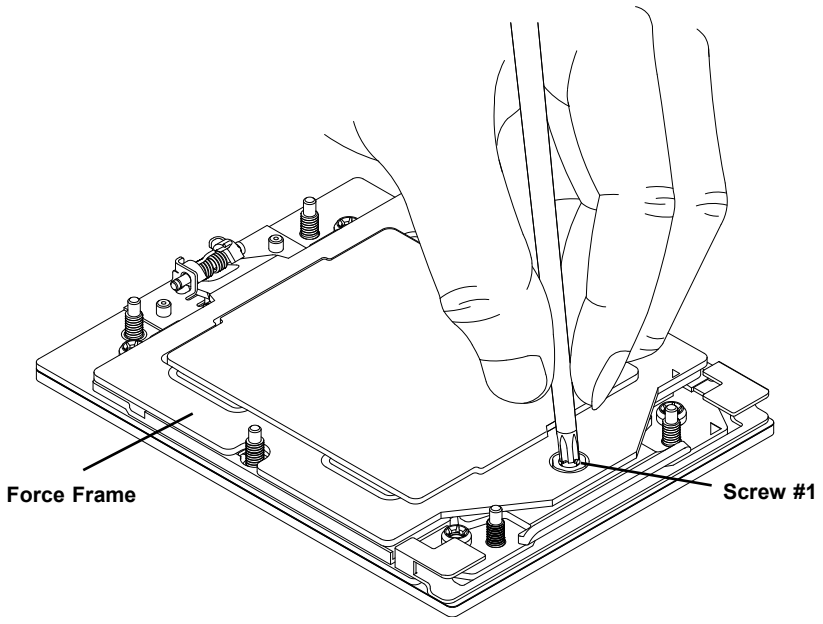

2. The spring-loaded force frame will raise up after the screw securing it (#1) is removed. Gently allow it to lift up to its stopping position.

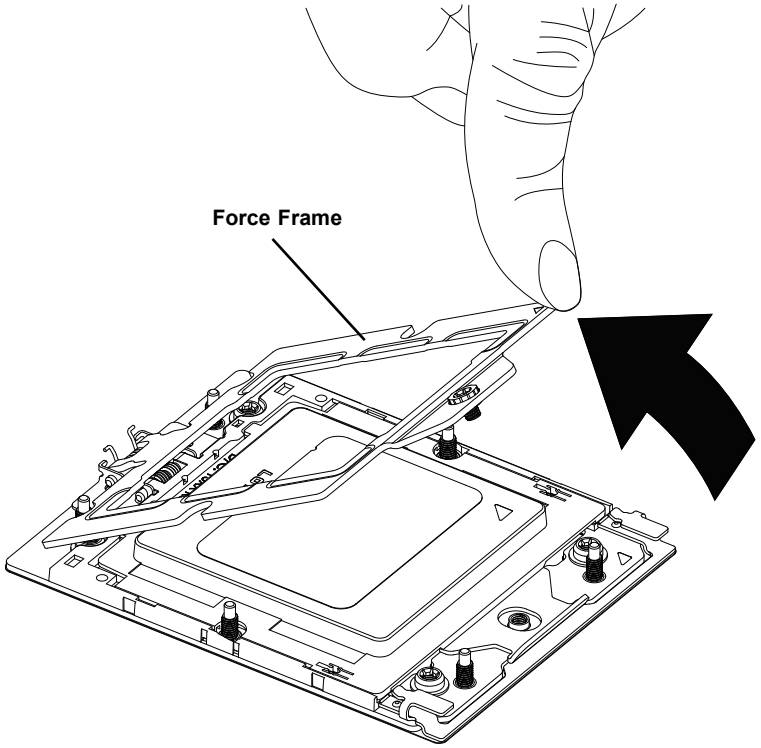

3. Lift the rail frame up by gripping the lift tabs near the front end of the rail frame. While keeping a secure grip of the rail frame, lift it to a position so you can do the next step of removing the external cap.

   Note: The rail frame is spring loaded, so keep a secure grip on it as you lift it so it does not snap up.

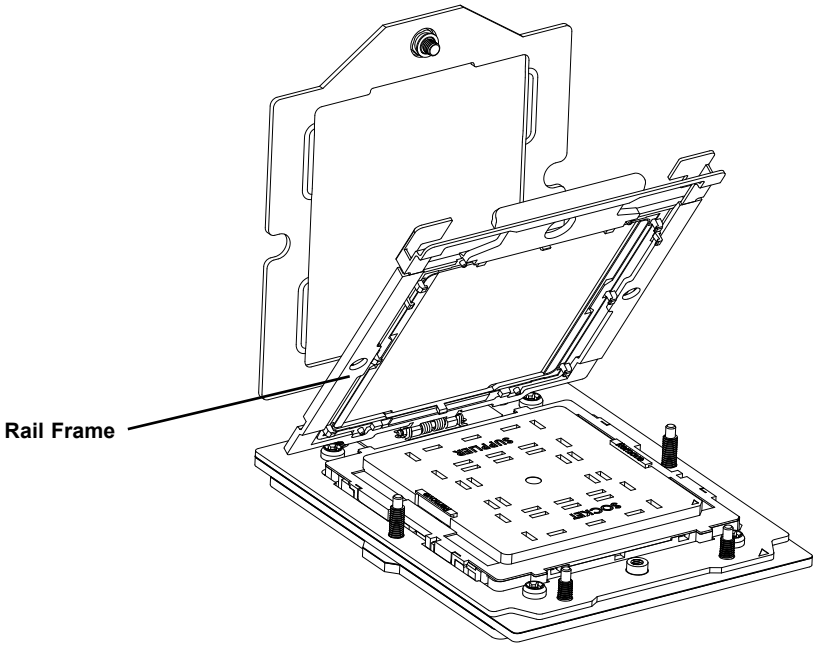

4. Remove the external cap from the rail frame by pulling it upwards through the rail guides on the rail frame.

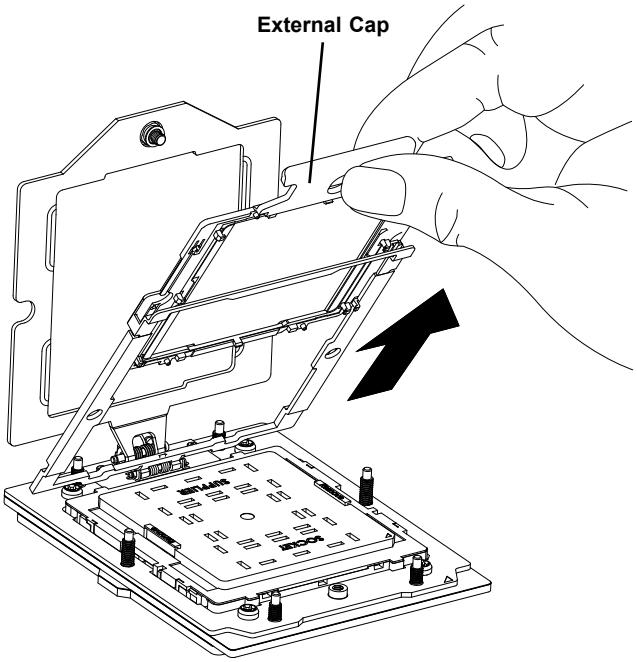

5. The APU package is shipped from the factory with the carrier frame pre-assembled. Grip the handle of the carrier frame/APU package assembly from its shipping tray, and while gripping the handle, align the flanges of the carrier frame onto the rails of the rail frame so its pins will be at the bottom when the rail frame is lowered later.

6. Slide the carrier frame/APU package downwards to the bottom of the rail frame. Ensure the flanges are secure on the rails as you lower it downwards.

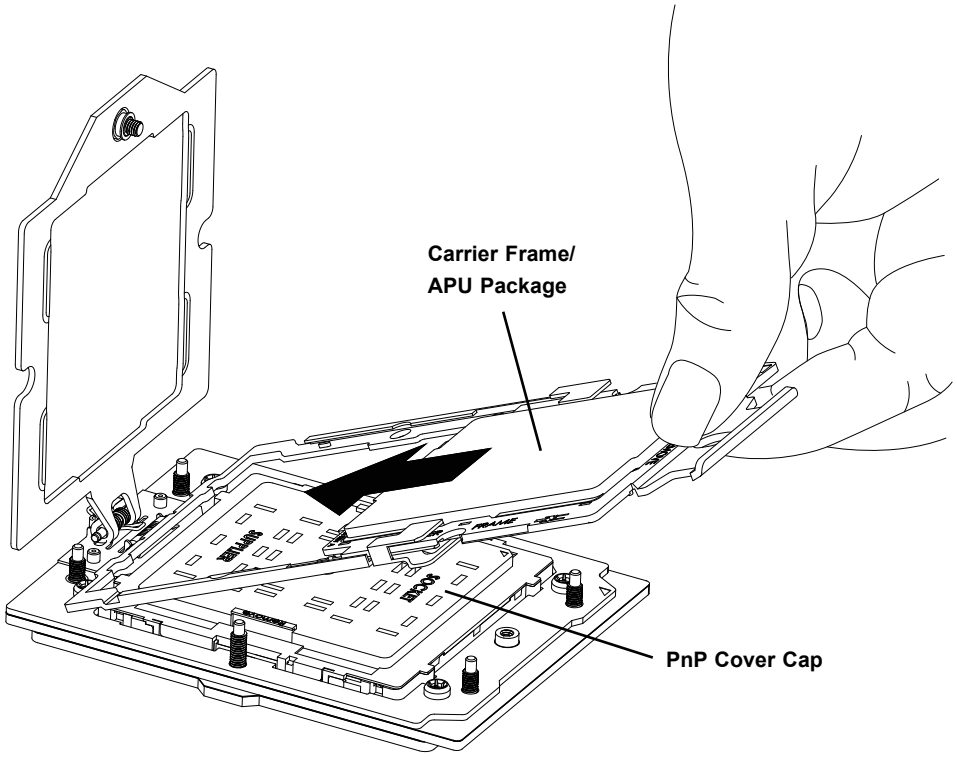

Note: You can only install the APU inside the socket in one direction with the handle at the top. Make sure that it is properly inserted into the APU socket before closing the rail frame plate. If it doesn't close properly, do not force it as it may damage your APU. Instead, open the rail frame plate again, and double-check that the APU is aligned properly.

7. Lift up the rail frame till it securely rests in upright position. Then remove the PnP cover cap from the APU socket below. Grip the two lift tabs marked "Remove" at the middle of the cap and pull vertically upwards to remove the PnP cover cap.

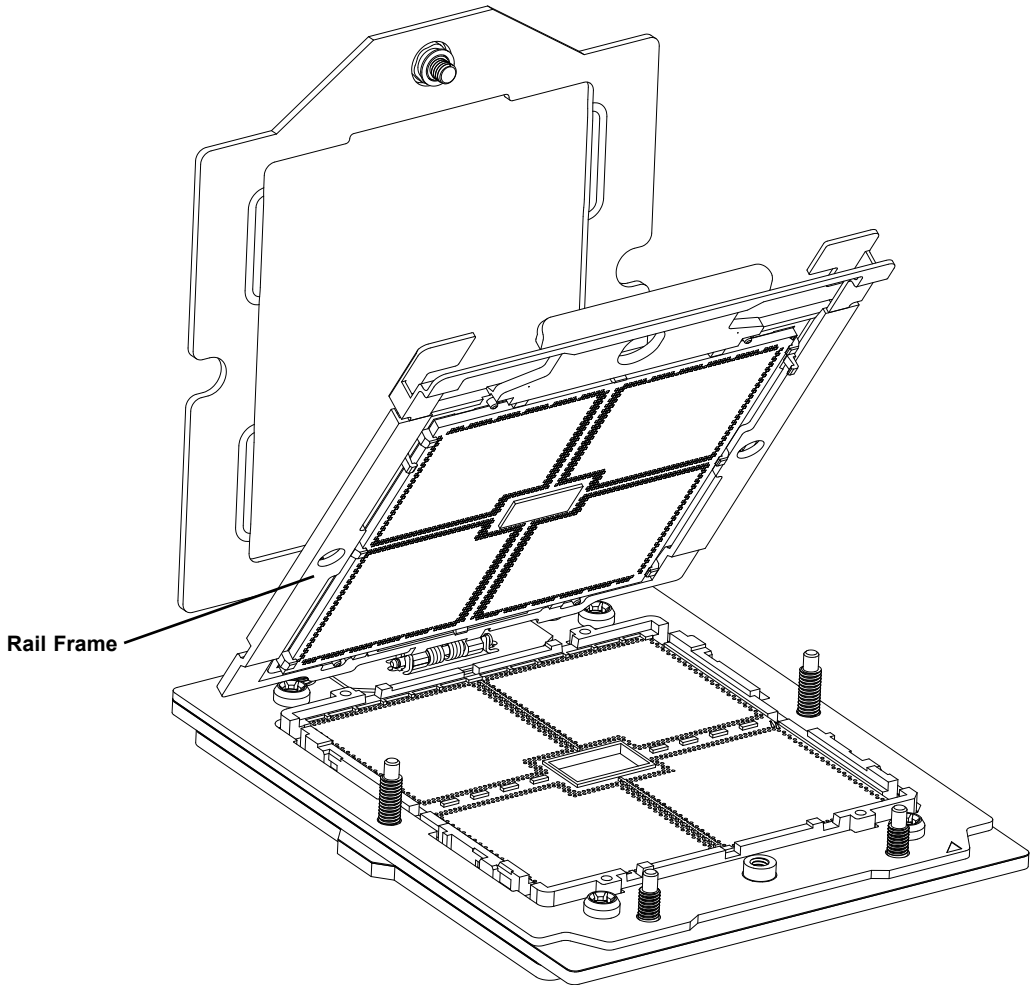

Important! The exposed socket contacts are extremely vulnerable and can be damaged easily. Do not touch or drop objects onto the contacts and be careful removing the PnP cover cap and when placing the rail frame over the socket.

8. Gently lower the rail frame down onto the socket until the latches on the rail frame engage with the socket housing and it rests in place. DO NOT force it into place!

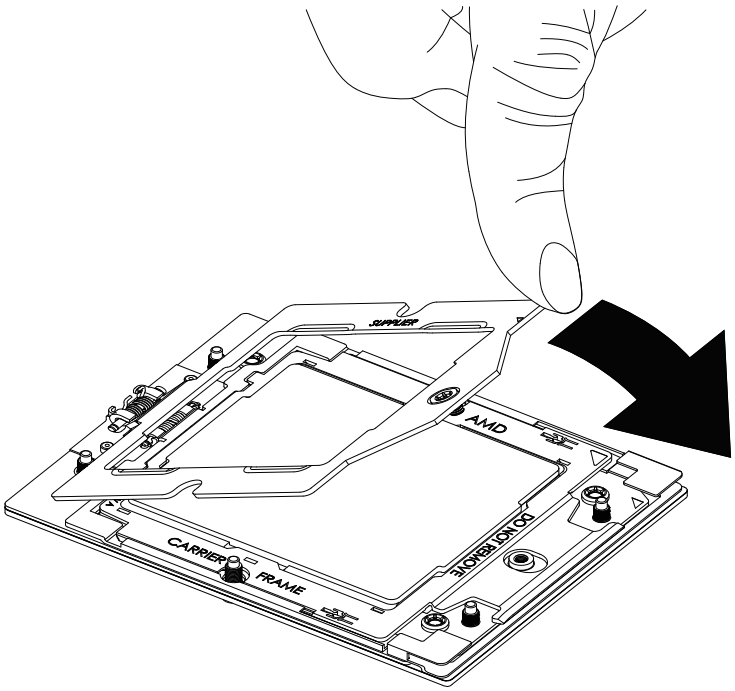

9. The force frame is spring loaded and has to be held in place before it is secured. **Important: Use a T20 bit torque driver with a torque of 12.5-15.0 kgf-cm (10.8-13.0 in-lbf) to prevent damage to the processor.**

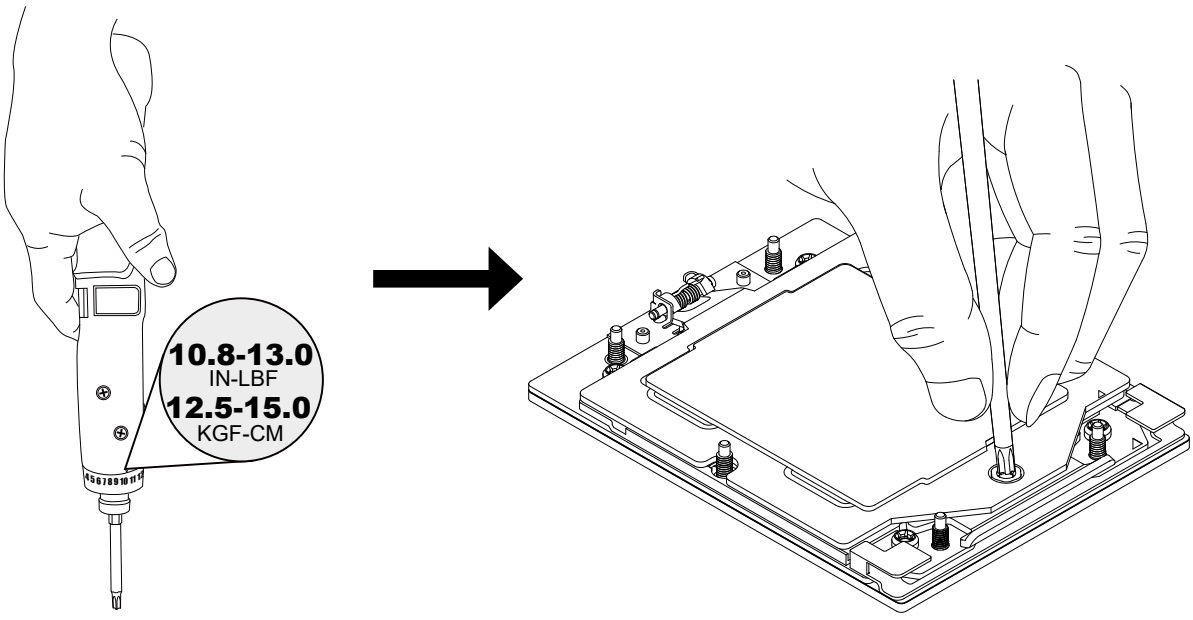

10. Replace and tighten the screws in the same order they were removed. When finished, the force frame will be secure over both the rail frame and APU package.

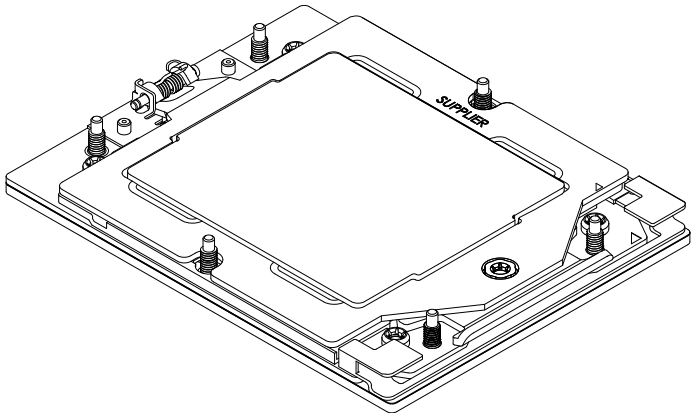

11. Peel off the thermal pad protectors underneath the heatsink. After the force frame is secured and the APU package is in place, now you must install the heatsink. Lower the heatsink down till it rests securely on the standoffs around the socket frame.

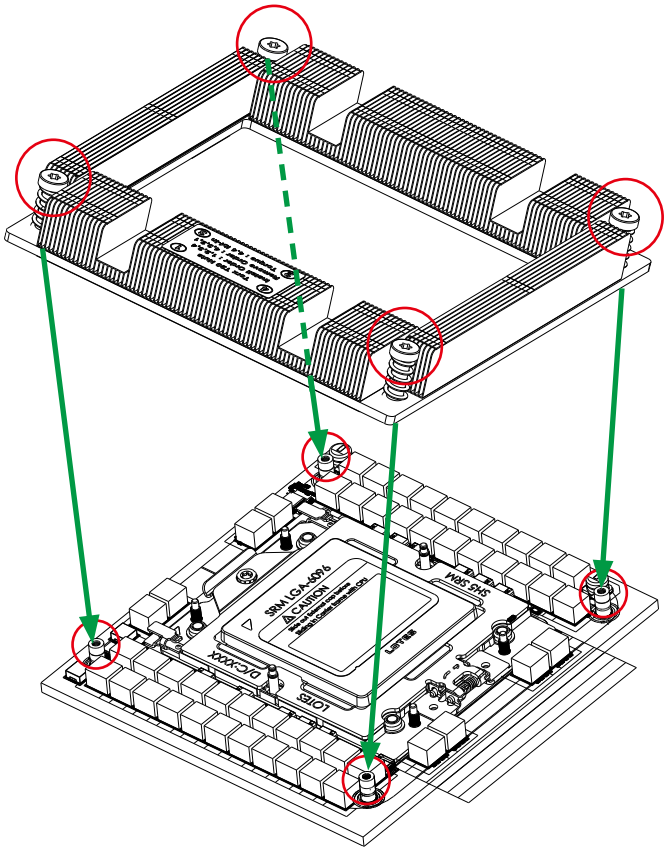

12. Using a diagonal pattern, tighten the four screws down on the heatsink until secure. Use a **T20 bit torque driver with a torque of 5.07 kgf-cm (4.4 in-lbf)** to prevent damage to the processor. The heatsink will now be secured and you have finished installing the processor and heatsink onto the motherboard. Repeat this procedure for any remaining APU sockets on the motherboard.

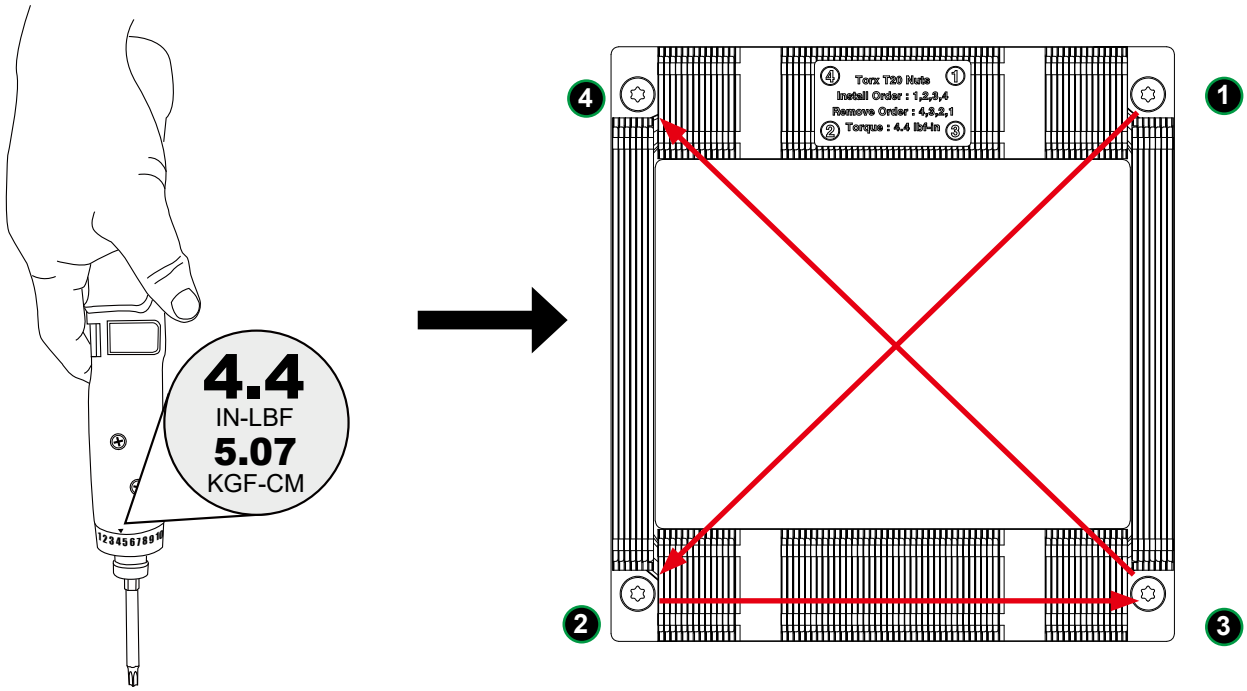

Un-installing the Processor and Heatsink

1. Remove the coldplate attached to the top of the APU package by reversing the installation procedure.
2. Clean the thermal grease left by the heatsink on the APU package lid to limit the risk of it contaminating the APU package land pads or contacts in the socket housing.
3. Unscrew the plate and lift the force frame to the vertical position.
4. Lift the rail frame using the lift tabs near the front end of the rail frame. Note that the rail frame is spring loaded, so be careful lifting it up into a vertical position.
5. Grip the handle of the carrier frame and pull upwards to extract it from the rail frame. Return the carrier frame/APU package to its original shipping container.
6. Grip the handle on the external cap and return it to the rail frame sliding it downwards till it rests in the frame.
7. Grip the rail frame, rotate it downwards till it rests above and locks over the socket housing in its horizontal position.
8. Push and rotate down the force frame till it is over the external cap and rail frame into a horizontal position.
9. While holding down the force frame, secure it back to the socket frame by securing screw #1 in place.

3.5 Memory

The H13QSH supports up to 512 GB of non-ECC HBM3 embedded memory. There are no DIMM slots to populate.

3.6 Motherboard Battery

The motherboard uses non-volatile memory to retain system information when system power is removed. This memory is powered by a lithium battery residing on the motherboard.

Replacing the Battery

Begin by removing power from the system.

1. Push aside the small clamp that covers the edge of the battery. When the battery is released, lift it out of the holder.
2. To insert a new battery, slide one edge under the lip of the holder with the positive (+) side facing up. Then push the other side down until the clamp snaps over it.

Note: Handle used batteries carefully. Do not damage the battery in any way; a damaged battery may release hazardous materials into the environment. Do not discard a used battery in the garbage or a public landfill. Please comply with the regulations set up by your local hazardous waste management agency to dispose of your used battery properly.

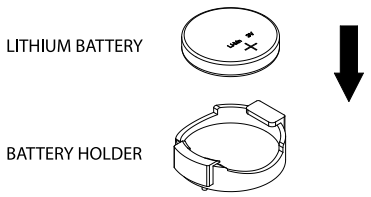

Figure 3-2. Installing the Onboard Battery

Important: There is a danger of explosion if the onboard battery is installed upside down (which reverses its polarities). This battery must be replaced only with the same or an equivalent type recommended by the manufacturer (CR2032).

3.7 Storage Drives

The system has eight 2.5" NVMe drive bays and two M.2 NVMe slots. Up to eight 2.5" SATA/SAS U.2 can be supported with optional backplanes, RAID card, and cables. For compatible storage drives, see the motherboard page.

The drives are mounted in toolless drive carriers that simplify their removal from the chassis. These carriers also help promote proper airflow.

Note: Enterprise level drives are recommended for use in Supermicro chassis and servers. For information on recommended drives, visit the Supermicro website product pages at https://www.supermicro.com/products/nfo/Ultra.cfm.

Checking the Temperature of an NVMe Drive

There are two ways to check using BMC.

Checking a Drive

- **BMC** > **Server Health** > **NVMe SSD –** Shows the temperatures of all NVMe drives.
- **BMC** > **Server Health** > **Sensor Reading** > **NVME_SSD –** Shows the single highest temperature among all the NVMe drives.

Installing Drives

The front of the system has eight drive bays that support NVMe5, SAS3, and SATA3 drives.

Figure 3-3. Logical Drive Numbers

Removing a Drive Carrier from the Server

1. Press the release button on the drive carrier, which will extend the drive carrier handle.
2. Use the drive carrier handle to pull the drive out of the chassis.

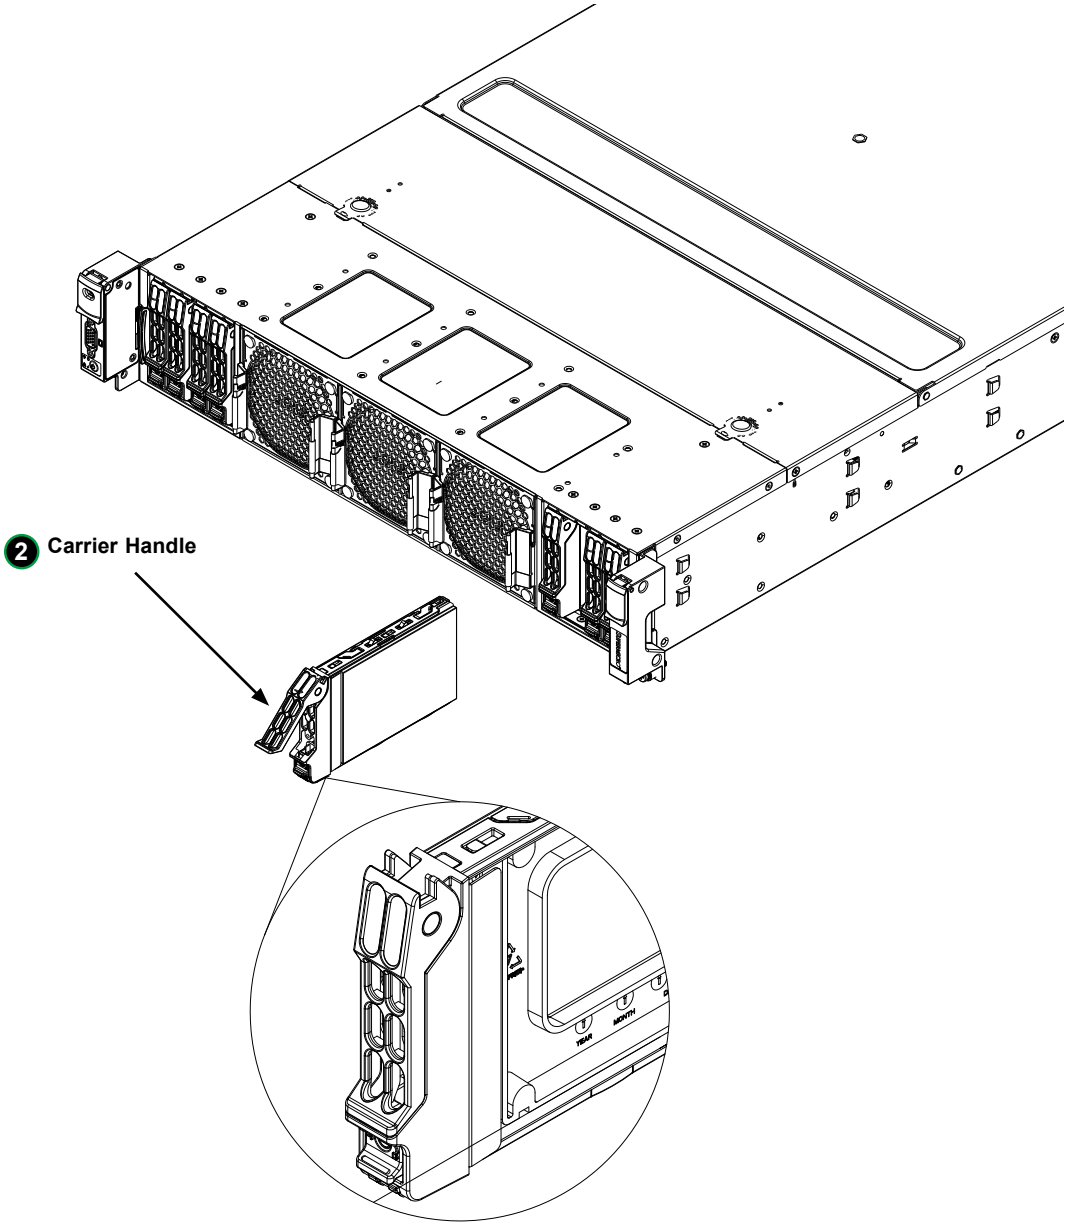

Figure 3-4. Removing a Drive Carrier

Installing a Storage Drive into a Drive Carrier

1. Remove the dummy drive, which comes pre-installed in the drive carrier. Pull out the two locking clasps on the left outside of the carrier and lift out the dummy drive.
2. Position the drive above the carrier with the PCB side facing down and the connector end toward the rear of the carrier.

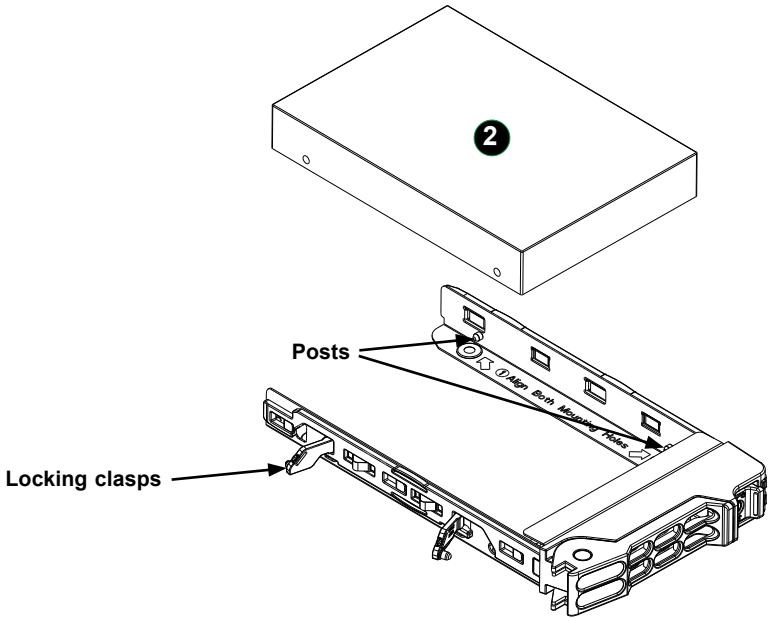

Figure 3-5. Installing a Drive into a Carrier

3. Tilt the drive to insert it onto the two posts inside of the carrier.
4. Pull out the two spring locking clasps and allow the drive to sit fully in the carrier, then close them to secure the drive.
5. Insert the drive carrier into its bay, keeping the release button on the bottom. When the carrier reaches the rear of the bay, the release handle will retract.
6. Push the handle in until it clicks into its locked position.

Note: Enterprise level drives are recommended for use in Supermicro chassis and servers.

NVMe Drives

Supermicro servers support NVMe drive replacement without interruption. For even better data security, orderly replacement of NVMe drives is recommended. NVMe drives can be ejected and replaced remotely using the BMC.

Ejecting a Drive

1. **BMC** > **Server Health** > **NVMe SSD**
2. Select Device, Group and Slot, and click **Eject**. After ejecting, the drive Status LED indicator turns green.
3. Remove the drive.

Note that Device and Group are categorized by the CPLD design architecture. The AS -2145GH-TNMR-LCC server has one Device and one Group.

Slot is the slot number on which the NVMe drives are mounted.

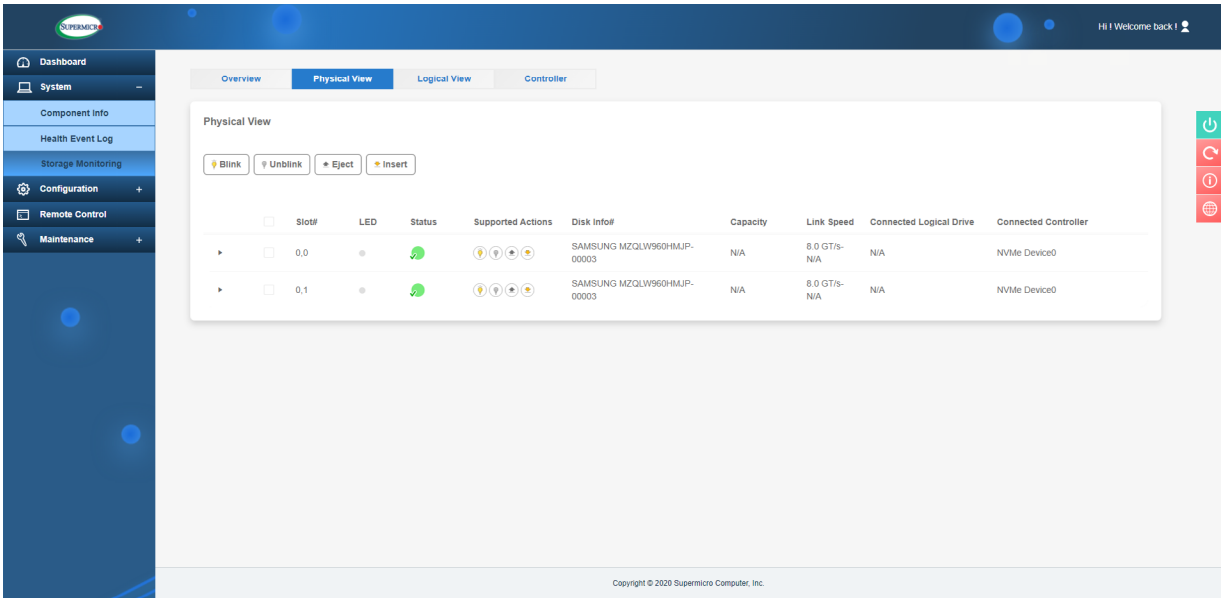

Figure 3-6. BMC Screenshot

Replacing the Drive

1. Insert the replacement drive.
2. **BMC** > **System** > **Storage Monitor** > **Physical View**
3. Select Device, Group and slot and click Insert. The drive Status LED indicator flashes red, then turns off. The Activity LED turns blue.

Installing M.2 Solid State Drives

The H13QSH supports M.2 SSDs with a PCIe 4.0 M.2 slot (PCIe M.2) and two M.2-HC S-SATA slots (JMD1/JMD2), which support PCIe 4.0 x2 and x1 NVMe SSDs. These M.2 slots support 2280 and 22110 form factors.

Important: DO NOT perform this service with the system mounted inside the rack.

Important: The handles used for pulling the system from the rack are not intended to be used to pick up or lift the system.

Installing M.2 Drives

1. Power down the system as described in Section 3.1.
2. Remove the system from the rack and place it on a bench, then remove the cover as described in Section 3.2.
3. Insert the M.2 sideways into the connector so that it lays flat, then secure it to the bracket with the screw.
4. Repeat as necessary for more M.2 drives.
5. Finish by replacing the cover and restoring power to the system.

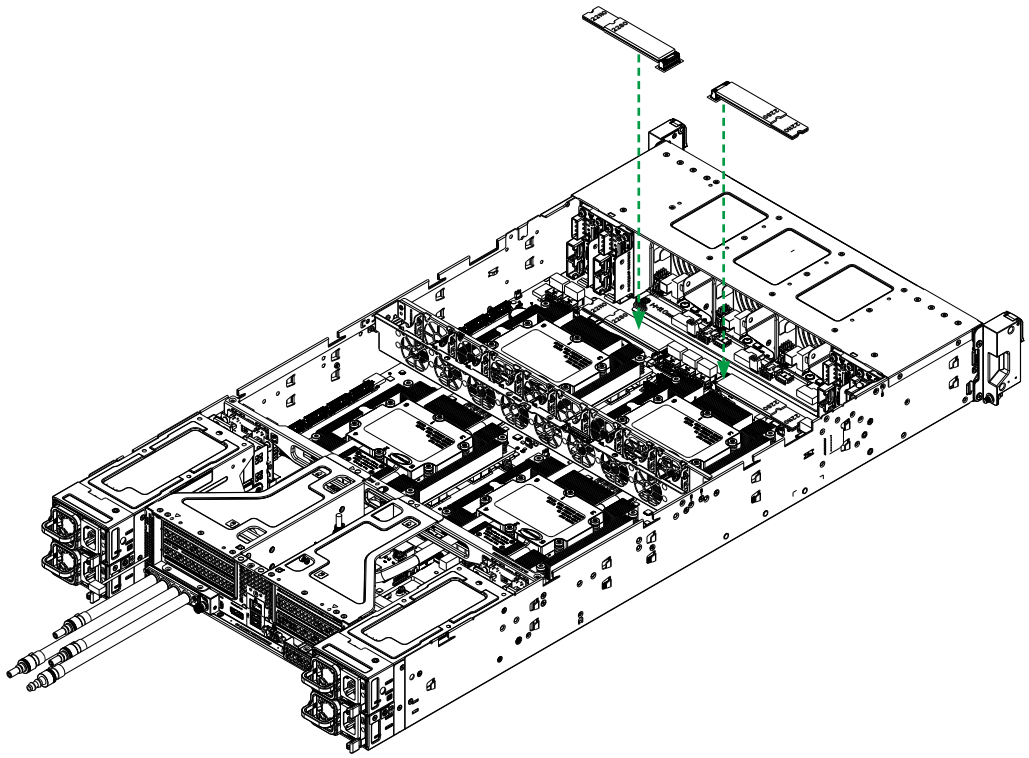

Figure 3-7. Installing an M.2 SSD

3.8 System Cooling

Fans

Three heavy duty counter-rotating 8-cm fans provide the cooling for the system. Fans are hot-swap and can be replaced without powering down the system. The electrical connections are automatically made when a fan is inserted into its slot.

Ensure the chassis cover is only off for a short time and makes a good seal when replaced for the cooling air to circulate properly. Fan speed is controlled by system temperature via BMC. If a fan fails, the remaining fans will ramp up to full speed.

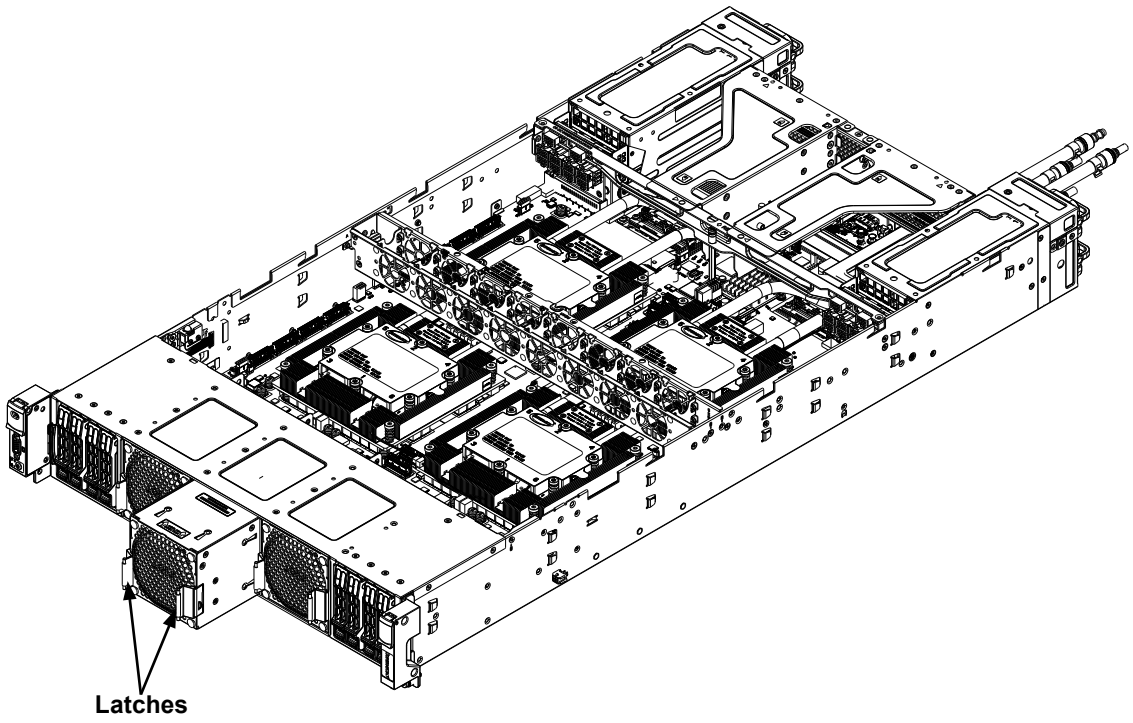

Figure 3-8. Installing a Fan

Changing an External System Fan

1. Determine which fan has failed using BMC if possible.
2. Locate the failed fan and pull it out by gripping the left latch with your thumb and the right latch with your index finger.
3. To install a fan, use the same grip as in the previous step to push it back into place until it clicks.

3.9 Expansion Cards

The AS -2145GH-TNMR-LCC includes two riser cards to support the use of expansion (add-on) cards.

Important: DO NOT perform this service with the system mounted inside the rack.

Installing Expansion Cards

1. Power down the system as described in Section 3.1.
2. Remove the system from the rack and place it on a bench, then remove the cover as described in Section 3.2.
3. Pull up the riser card brackets.
4. Remove the blank PCI shield from the bracket.
5. Slide the expansion card into the open slot while plugging the expansion card into the riser card.

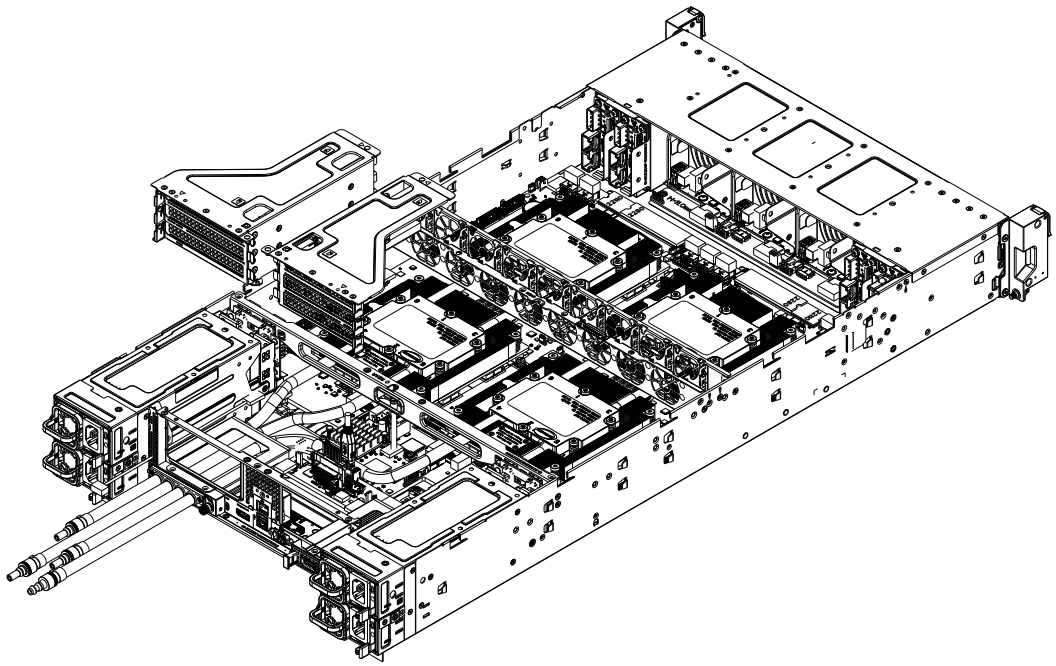

Figure 3-9. Installing PCIe Expansion Cards

3.10 Power Supply

The system includes four 2700 W hot-swappable power supply modules. These modules will automatically sense and operate at an input voltage between 200 V to 240 V. Replacement modules can be ordered directly from Supermicro.

In the event of a power module failure, the other power module will continue to power the system on its own. Failed power supply modules can be replaced without powering-down the system.

An amber light on the power supply is illuminated when the power is switched off. A green light indicates that the power supply is operating.

Replacing the Power Supply

1. Unplug the AC power cord from the failed power supply module.
2. Push and hold the release tab on the back of the power supply.
3. Grasp the handle of the power supply and pull it out of its bay.
4. Push the new power supply module into the power bay until it clicks into the locked position.
5. Plug the AC power cord back into the power supply module.

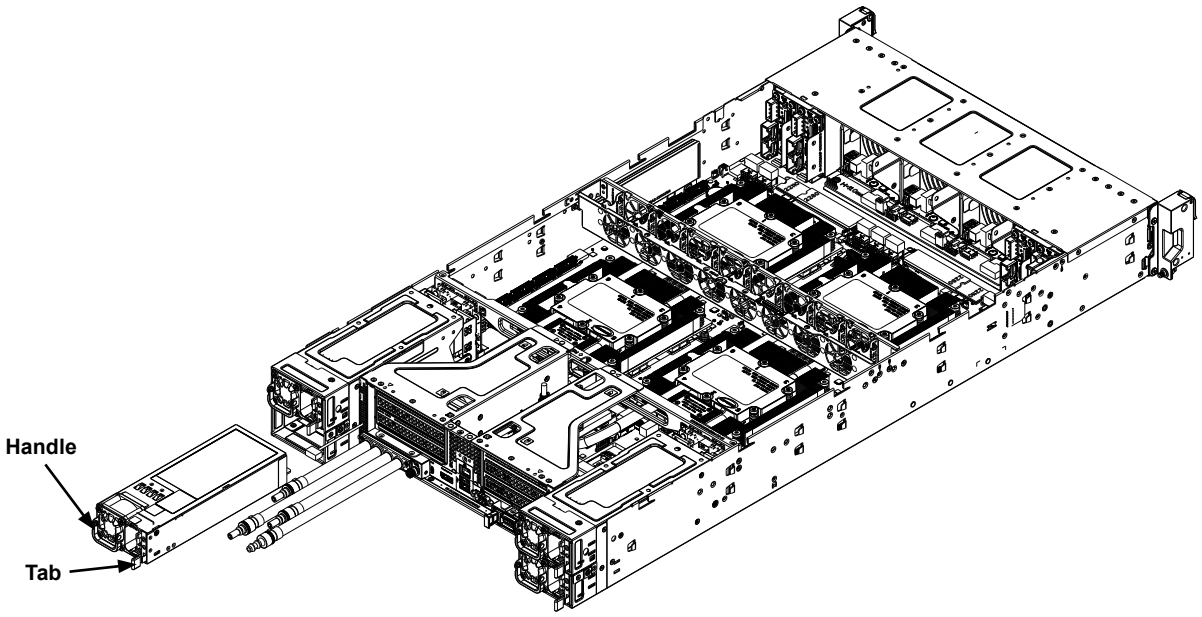

Figure 3-10. Installing a Power Supply Module

3.11 Cable Routing Diagram

Refer to the diagram below for a representation of how the main cables are routed throughout the system. When disconnecting cables to add or replace components, refer to this diagram when adding or replacing components so you can reroute them in the same manner. Proper cable routing is important in maintaining proper airflow through the system.

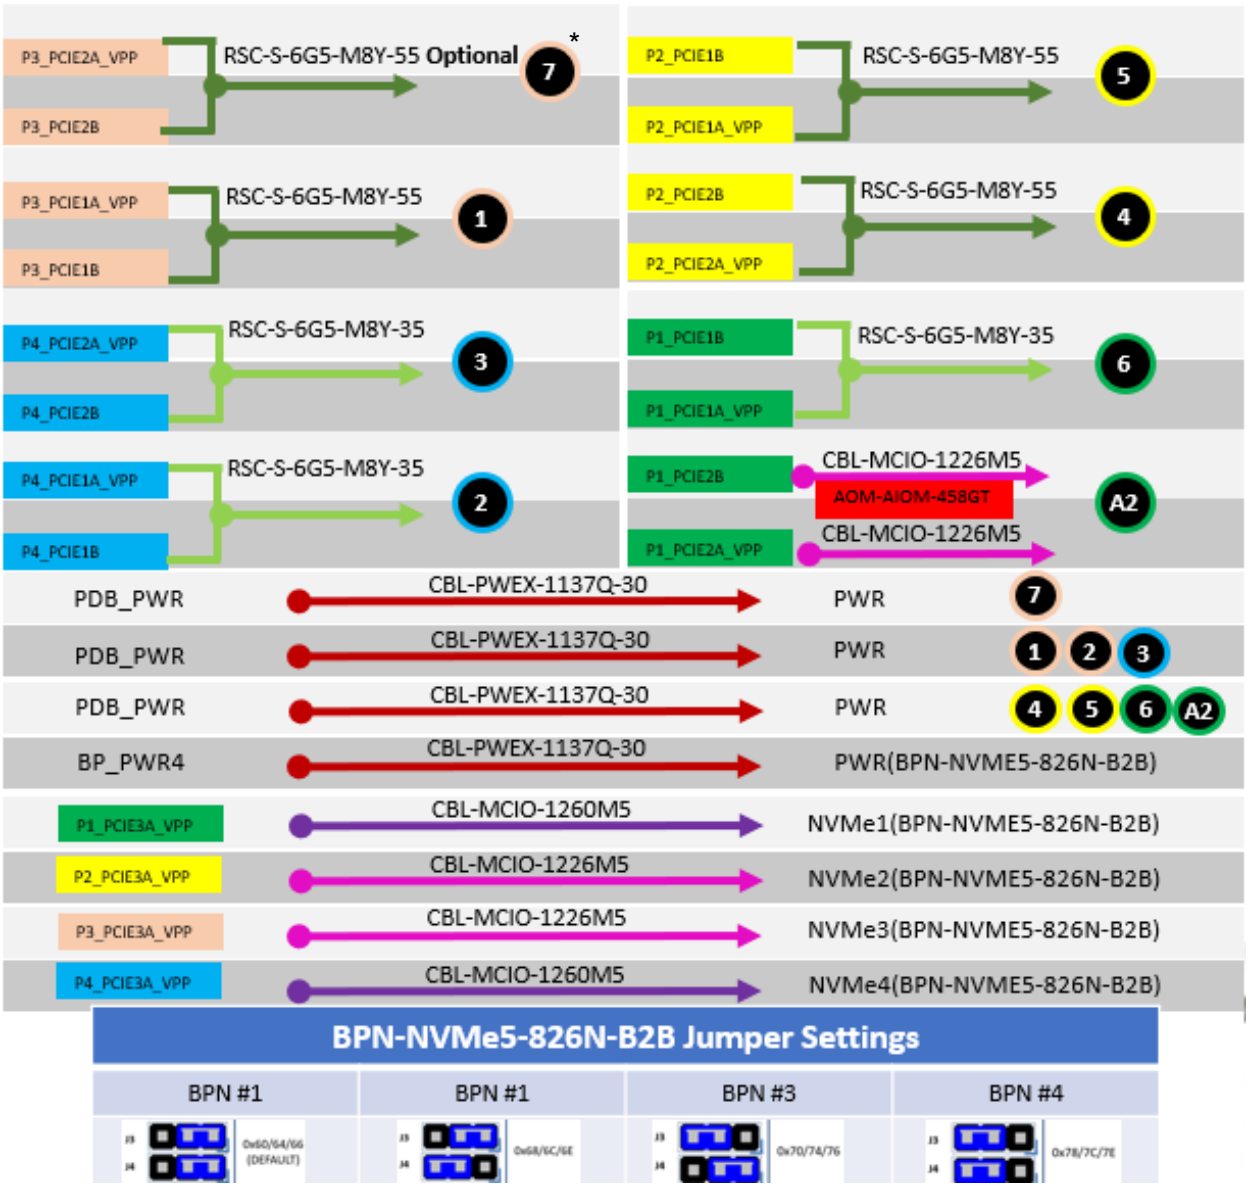

* **Note:** Please contact SMC for more detail.

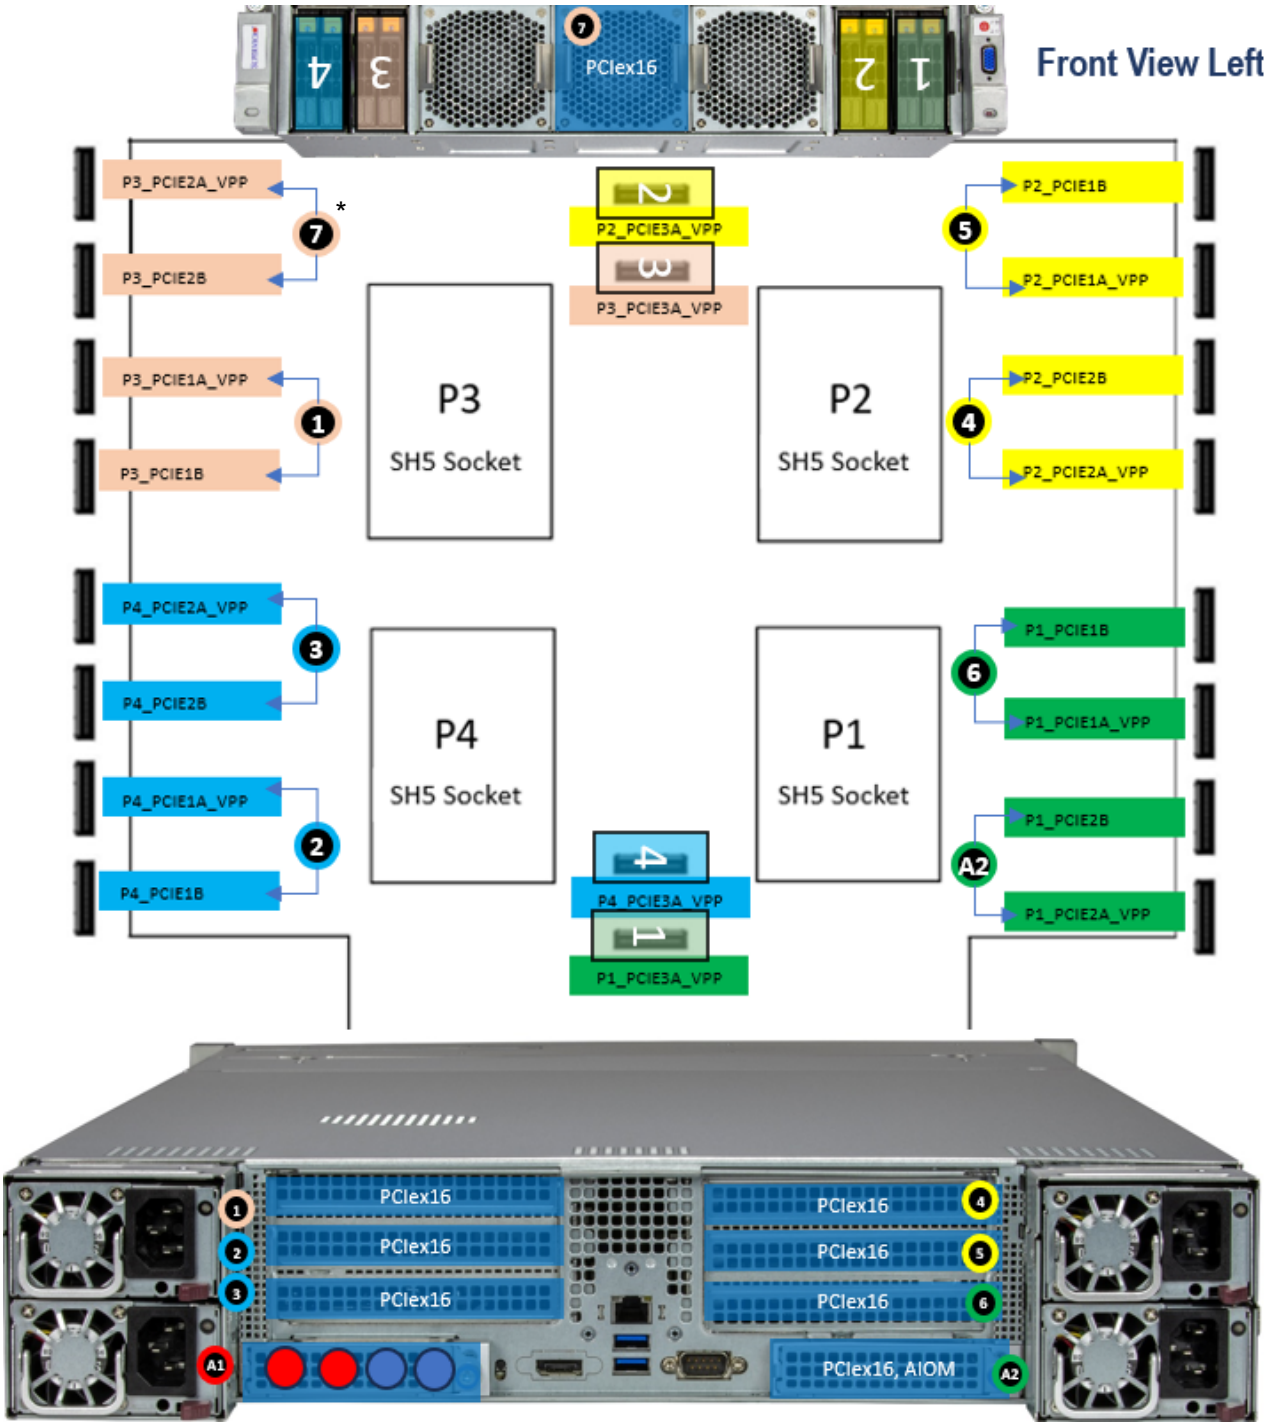

* **Note:** Please contact SMC for more detail.

3.12 BMC

The BMC can be reset using the button on the front control panel or on the chassis rear.

- Reset—Press and hold the button. After six seconds, the LED blinks at 2 Hz. The BMC resets and the reset duration is approximately 250 ms. Then the BMC starts to boot.
- Restore factory default configuration—Hold the button for twelve seconds. The LED blinks at 4 Hz while defaults are configured.
- Firmware update—the UID LED blinks at 10 Hz during a firmware update.

BMC Reset Options	
Event	**LED (Green)**
Reset	Blinking at 2 Hz
Restore Defaults	Blinking at 4 Hz
Update	Blinking at 10 Hz

Chapter 4

Motherboard Connections

This section describes the connections on the motherboard and provides pinout definitions. Note that depending on how the system is configured, not all connections are required. The LEDs on the motherboard are also described here. A motherboard layout indicating component locations may be found in Chapter 1. More detail can be found in the Motherboard Manual. Please review the Safety Precautions in Appendix A before installing or removing components.

4.1 Power Connections

Power Supply Connectors (PSU1/PSU2)

Two PDUs (Power Distribution Units) can be connected to PSU1/PSU2 and support a total of four Supermicro proprietary power supply units that provide the main power to your system.

4-Pin Backplane Power Connector (JPWR1-2)

Four 4-pin power connectors for backplane devices. Refer to the table below for pin definitions.

Power Connector Pin Definitions	
Pin#	**Definition**
1	GND
2	GND
3	12 V
4	5 V

8-Pin Fan Power Connector (JPWR3-9)

Seven 8-pin fan power connectors. Refer to the table below for pin definitions.

Power Connector Pin Definitions			
Pin#	**Definition**	**Pin#**	**Definition**
1	GND	5	12 V
2	GND	6	12 V
3	GND	7	12 V
4	GND	8	12 V

4.2 Headers and Connectors

Fan Headers

There are eight 4-pin fan headers (FAN 1-FAN 8) used for your system cooling fans. Additionally, four 6-pin fan headers (FAN 9-FAN 12), located at the rear side of the chassis, are for fans used to cool the backplane. In addition, an Fan_PMB header used for I^2C temperature sensor cooling is located at JFAN1. Fan speed control for these fans is supported by thermal management via the BMC interface. Refer to the table below for pin definitions.

4-Pin Fan Headers Pin Definitions

Pin#	Definition
1	GND
2	12 V
3	FANIO
4	PWM

6-Pin Fan Headers Pin Definitions

Pin#	Definition
1	GND
2	12 V
3	FANIO
4	PWM
5	12 V
6	GND

Fan_PMB Header Pin Definitions

Pin#	Definition	Pin#	Definition
1	SDA	5	GND
2	GND	6	12 V
3	SCL	7	FANIO
4	P3V3_AUX	8	PWM

STBY-FAN (FAN13)

STBY-FAN is a standby power header for the fan board. Refer to the table below for pin definitions.

STBY-FAN (FAN13) Pin Definitions

Pin#	Definition
1	Fan PWM
2	Fan IO
3	12 V
4	GND

NC-SI Connector

A Network-Controller Sideband Interface (NC-SI) header is located at JNCSI1 on the motherboard. The NCSI header is used to connect a Network Interface Card (NIC) to the motherboard so that the BMC is able to poll the temperature reading from it.

TPM/Port 80 Header

A Trusted Platform Module (TPM)/Port 80 header is located at JTPM1 to provide TPM support and Port 80 connection. Use this header to enhance system performance and data security. Refer to the table below for pin definitions. Please go to the following link for more information on the TPM: http://www.supermicro.com/manuals/other/TPM.pdf.

Trusted Platform Module Header Pin Definitions

Pin#	Definition	Pin#	Definition
1	+3.3 V	2	SPI_CS#
3	RESET#	4	SPI_MISO
5	SPI_CLK	6	GND
7	SPI_MOSI	8	NC
9	+3.3V Stdby	10	SPI_IRQ#

PCIe I²C Header

A PCIe I²C (SMBus) header is located at JRSI2C1 on the motherboard. The PCIe SMbus connector is used for PCIe cards to allow the BMC or the BIOS to read storage drive information or FRUs more effectively.

BMC SMB I²C Header

A System Management Bus I²C header for the BMC is located at JIPMB1. Connect the appropriate cable here to use the 4-pin BMC external I²C connection on your system.

SMB I²C for 2U Power Distribution Board (PDB) Headers

Two System Management Bus I2C for the power distribution boards are located at PDB1_SB and PDB2_SB. Connect a cable to PDB1_SB for Power Distribution Board 1 support, and connect a cable to PDB2_SB for Power Distribution Board 2 support.

4-Pin Leakage Detection (JPL0)

Refer to the table below for pin definitions.

4-pin Leakage Detection Pin Definitions

Pin#	Definition
1	GND
2	12 V
3	Liquid Detect
4	Present

Chassis Intrusion

A Chassis Intrusion header is located at JL1 on the motherboard. Attach the appropriate cable from the chassis to inform you when the chassis is opened. Refer to the table below for pin definitions.

Chassis Intrusion Pin Definitions

Pin#	Definition
1	Intrusion Input
2	Ground

JMD1/JMD2

Two hybrid M.2 slots are located at JMD1 and JMD2. JMD1 supports an M.2 SATA 2:0/PCIe 4.0 x2 hybrid slot, and JMD2 supports an M.2 SATA 2:4/PCIe 4.0 x1 slot. Both JMD1 and JMD2 slots support PCIe 4.0 devices in the 2280/22110 form factors. M.2 allows for a variety of card sizes, increased functionality, and spatial efficiency.

AIOM Sideband Signal Headers (AIOM1_SB/AIOM2_SB)

Advanced I/O Module (AIOM) PCIe 5.0 x8 slot supported by the APU.

Onboard Battery (BT1)

The onboard backup battery is located at BT1. It provides backup power to the on-chip CMOS, which stores the BIOS setup information. It also provides power to the Real-Time-Clock (RTC) to keep it running.

BMC (JIO1)

This is the I/O board socket used to connect the I/O board to the motherboard.

4.3 Input/Output Ports

See the figures below for the locations and descriptions of the I/O ports on the rear of the motherboard.

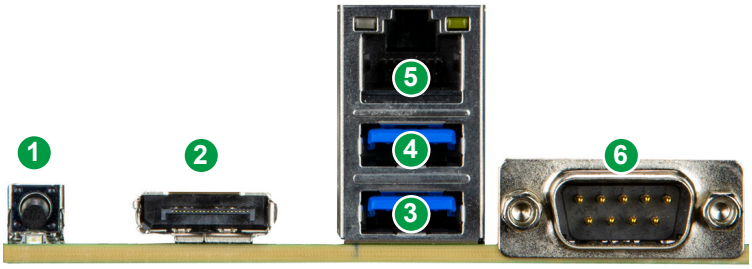

Figure 4-1. Rear I/O Ports

Rear I/O Ports	
#	**Definition**
1	UID Switch/LED
2	DP1
3	USB 0 (3.0)
4	USB 1 (3.0)
5	BMC LAN (IPMI LAN)
6	COM1

I/O Device Display Port

An I/O Device Display Port (DP) is located at JDP1 on the rear I/O panel. This display port provides visual display support for your I/O devices installed on the rear I/O panel.

Universal Serial Bus (USB) Ports and Headers

There are two USB 3.0 ports (USB0/1), located at JUSBRJ45, on the rear I/O panel. Type A USB 3.0 connector (USB 2) is located at JUSB1 for front access. These USB connections can be used for USB support via USB cables (not included).

Rear I/O Panel USB 2/3 (3.0) Pin Definitions

Pin#	Definition	Pin#	Definition
A1	VBUS	B1	Power
A2	D-	B2	USB_N
A3	D+	B3	USB_P
A4	GND	B4	GND
A5	Stda_SSRX-	B5	USB3_RN
A6	Stda_SSRX+	B6	USB_RP
A7	GND	B7	GND
A8	Stda_SSTX-	B8	USB3_TN
A9	Stda_SSTX+	B9	USB3_TP

Type A USB 6 (3.0) Pin Definitions

Pin#	Definition	Pin#	Definition
1	VBUS	5	SSRX-
2	USB_N	6	SSRX+
3	USB_P	7	GND
4	Ground	8	SSTX-
		9	SSTX+

BMC LAN

A dedicated BMC LAN (BMC LAN) is located on the rear I/O panel. This dedicated BMC LAN, located below USB Ports, provides Ethernet LAN support for the BMC (Baseboard Management Controller). Connect an RJ45 cable to JUSBRJ45 on the I/O rear panel for BMC LAN support.

COM Port

A COM (communication) port that supports serial link interface is on the motherboard. COM1 (JCOM1) is located on the rear I/O panel.

UID (Unit Idenfication)/BMC Reset Switch and LED Indicators

A UID LED/BMC Reset switch (JUIDB1) is located on the rear side of the motherboard. This switch has dual functions. It can be used to identify a system unit that is in need of service, and it can also be used to reset the BMC settings.

When functioning as a BMC reset switch, JUIDB1 will trigger a cold reboot when the user presses and holds the switch for 6 seconds. It will also restore the BMC to the manufacturer's default setting when the user presses and holds the switch for 12 seconds. When functioning as a UID LED switch, JUIDB1 will turn both rear UID LED (LED1) and front UID LED (pin 2 of FP1) on and off when the user presses the switch on/off.

To achieve these dual purposes, the UID LED/BMC Reset switch works in conjunction with the BMC Heartbeat LED (LED3) and front/rear UID LEDs. Please note that UID can also be triggered via BMC on the motherboard. For details on the UID LEDs and BMC LEDs, refer to the tables below. Also, refer to the BMC User's Guide posted on our website at http://www.supermicro.com for more information on BMC.

UID / BMC Reset Switch (JUIDB1)
Features & Settings

When Used as a UID LED Switch			When Used as a BMC Reset Switch		
Work w/Rear UID LED (LED1) & Front UID LED (FP1: Pin 2)			**Work with BMC Heartbeat LED (LED3)**		
Rear UID LED	LED1	Blue: Unit identified	BMC Heartbeat LED	LED3	Green Blinking: BMC Normal
Front UID LED	Pin 2 of FP1	Blue: Unit identified	BMC Reset: Press & hold the switch (JUIDB1) 6 seconds	LED3: Solid green: during reboot	
Press the switch (JUIDB1) to turn both rear and front UID LED indicators on and off;				Triggering a cold reboot; LED: solid green on during cold reboot	
			BMC Reset: Press & hold the switch (JUIDB1) 12 seconds	LED3: Solid green: during BMC reset	
				BMC: Reset to the manufacturer's default; LED solid on during BMC Reset	

UID / BMC Reset Switch (JUIDB1)
Pin Definitions

Pin#	Definition
A6	Ground
A7	Ground
A8	Button In
A9	Button In

4.4 Jumpers

Explanation of Jumpers

To modify the operation of the motherboard, jumpers are used to choose between optional settings. Jumpers create shorts between two pins to change the function associated with it. Pin 1 is identified with a square solder pad on the printed circuit board. See the motherboard layout page for jumper locations.

Note: On a two-pin jumper, "Closed" means the jumper is on both pins and "Open" indicates the jumper is either on only one pin or has been completely removed.

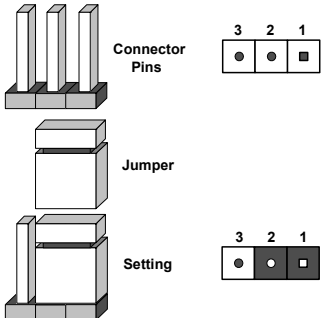

CMOS Clear

JBT1 is used to clear CMOS, which will also clear any passwords. Instead of pins, this jumper consists of contact pads to prevent accidentally clearing the contents of CMOS.

To Clear CMOS

1. First, power down the system and unplug the power cord(s).
2. Pull out the motherboard tray to access the motherboard.
3. Remove the CMOS battery from the motherboard.
4. Wait for around 30 seconds, and then re-install the CMOS battery on the motherboard.
5. Re-install the motherboard tray, reconnect the power cord(s), and power on the system.

Notes: Clearing CMOS will also clear all passwords.

Power Button and Front UID Button Select Jumper

Jumper JRU1 is used to configure pin 2 of Front Control Panel header 1 (FP1) to function as a Power button or as the Front UID button. To set pin 2 of FP1 for Front UID use in a chassis that supports front UID connection, close pin 1 and pin 2 of Jumper JRU1. To set pin 2 of FP1 for Power Signal use, keep jumper JRU1 open. Refer to the table below for JRU1 settings.

Front UID Button/Power Button Select Jumper (JRU1) Jumper Settings	
State	**Description**
Close pin 1 and pin 2 of JRU1	Pin 2 of FP1: used for Front UID button (Default)
Keep pin 1 and pin 2 of JRU1 Open	Pin 2 of FP1: used for system reset with front UID button

Video Display Enable

Jumper JPG1 is used to enable or disable the onboard VGA connector. The default setting is pins 1-2 to enable the connection. See the table below for jumper settings.

Video Display Enabled Jumper Settings (JPG1)	
Jumper Setting	**Definition**
Pins 1-2	Video Display Enabled (Default)
Pins 2-3	Video Display Disabled

SKUID Jumpers (JSKUID1-3)

Different SKUID jumper settings provide different PCIe lane allocations and distributions.

4.5 LED Indicators

BMC LAN Port LEDs

A dedicated BMC LAN connection is located on the rear I/O panel and has two LED indicators. The LED on the right indicates connection and activity, while the LED on the left indicates the speed of the connection. The Link LED may amber, green, or off to indicate the speed of the connection. Refer to the tables below for more information.

Link LED, Connection Link Speed Indicator	
LED Color	**Definition**
Amber	1 Gb/s
Green	100 Mb/s
Off	10 Mb/s

Activity LED		
Color	**State**	**Definition**
None	No Connection	
Yellow	Solid On	Link
Yellow	Flashing	Active

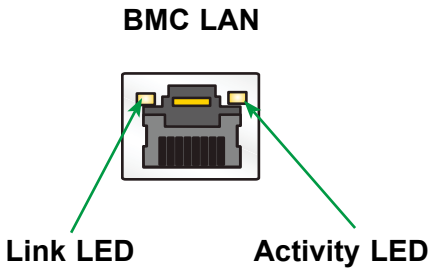

UID LED Indicator

The rear UID LED is located on the I/O board, while the front UID LED is located on the front panel. When you press the UID switch, both the rear and front UID LED indicators will turn on. Press the UID switch again to turn off the LED indicators. Use this UID Indicator to 'mark' the system, so it can be easily identified whether on the front or back (e.g., a system rack with multiple units installed).

UID LED Indicator		
Color	**State**	**Definition**
None	Off	UID Off
Blue	Solid On	Unit Identified by Local Site
Blue	Slow Blinking	Unit Identified by Remote Site
Blue	Slow Blinking	System Recovery

Onboard Power LED (LED1)

The Onboard Power LED (LEDPWR) is located at LED1 on the motherboard. When this LED is on, the system power is on. Be sure to turn off the system power and unplug the power cords before removing or installing components. Refer to the table below for more information.

Onboard Power LED Indicator (LED1) LED Status	
LED Color	**Definition**
Off	System Power Off (power cable not connected)
Green	System Power On

BMC Heartbeat LED (LED3)

A BMC Heartbeat LED is located at LED3 on the motherboard. When LED3 is blinking green, the BMC is functioning normally. See the table below for more information.

BMC Heartbeat LED Indicator (LED3) LED Status		
Color	**State**	**Definition**
Green	Solid On	BMC is not ready
Green	Blinking	BMC Normal
Green	Fast Blinking	BMC: Initializing

PCIe Switch Heartbeat LED (LED9)

A PCIe Switch Heartbeat LED is located at LED9 on the motherboard. When LED9 is blinking green, the PCIe Switch is functioning normally. Refer to the table below for more information.

PCIe Switch Heartbeat LED Indicator (LED9) LED Status		
Color	**State**	**Definition**
Green	Solid On	BMC is not ready
Green	Blinking	BMC Normal
Green	Fast Blinking	BMC: Initializing

PCIe Switch Error (LED10)

This LED will be solid red when the board is in standby power mode. If this LED is solid red when the board is on, there is an error with the PCIe switch.

APU Power Status LED Indicators

APU Power Status LED indicators are located at LED5, LED6, and LED7. When an APU power supply fails, the corresponding Power Status LED will turn solid red. Refer to the table below for more details.

APU Power Staus LED Indicators (LED5, LED6, and LED7) LED Status		
LED#	**Color**	**Definition**
LED5	Solid Red	APU2 Power Failure
LED6	Solid Red	APU3 Power Failure
LED7	Solid Red	APU4 Power Failure

4.6 Front Control Panel

There are two Front Control Panel headers located on this motherboard. Front Control Panel Header 1, located at FP1, contains header pins for various buttons and LED indications with I²C support for front access. Front Control Panel Header 2, located at FP2, provides additional functions, including USB and VGA support to the system. These Front Control Panel headers are designed specifically for use with Supermicro chassis.

1. Pin Definitions of FP1 (JF1)

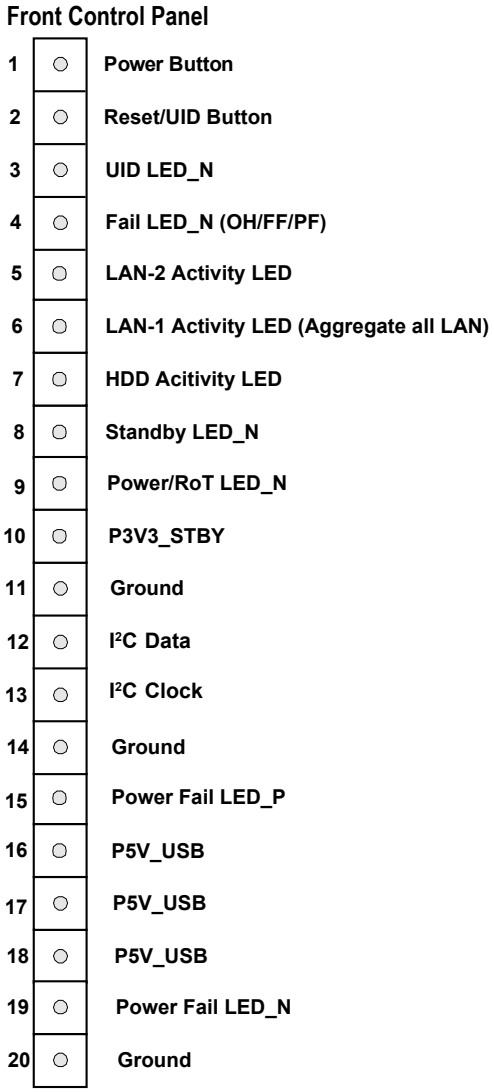

Figure 4-2. FP1 (JF1) Header Pins

Power On and BMC/BIOS Status LED Button

The Power On and BMC/BIOS Status LED button is located on pin 1 of front control panel header 1 (FP1). Momentarily contacting pin 1 of FP1 will power on/off the system or display BMC/BIOS status. Refer to the table below for more information.

Power Button BMC/BIOS Status LED Indicator	
Status	**Event**
Green: solid on	System power on
BMC/BIOS blinking green at 4 Hz	BMC/BIOS checking
BIOS blinking green at 4 Hz	BIOS recovery/update in progress
BMC blinking red x2 (2 blinks red) at 4 Hz, 1 pause at 2 Hz (on-on-off-off)	BMC recovery/update in progress
BMC/BIOS blinking green at 1 Hz	Flash not detected or golden image checking failure

BMC Reset Button/Front UID Switch

The BMC Reset button/Front UID switch connection is on pin 2 of FP1, and it is used in conjunction with the JRU1 Reset button/UID switch select jumper. Close pin 1 and pin 2 of jumper JRU1 to configure pin 2 of FP1 for front UID switch use in a chassis that supports front UID connection. To set pin 2 of FP1 for BMC Reset, close pin 3 and pin 4 of jumper JRU1.

Front UID Switch/Reset Button Select Jumper (JRU1) Jumper Settings	
State	**Description**
Close pin 1 and pin 2 of JRU1	Pin 2 of FP1: used for front UID switch support
Close pin 3 and pin 4 of JRU1	Pin 2 of FP1: used for BMC Reset support

UID LED

The unit identifier LED connection is located on pin 3 of FP1.

Fail LED (Information LED for OH/FF/PF)

The Fail LED (Information LED for OH/Fan Fail/PWR Fail) connection is located on pin 4 of FP1. This LED provides warnings of overheating, power failure, or fan failure. See the table below for FP1 pin definitions.

Power Button BMC/BIOS Status LED Indicator	
Status	**Description**
Solid red (on)	An overheat condition has occurred.
Blinking red (1 Hz)	Fan failure: check for an inoperative fan
Blinking red (0.25 Hz)	Power failure: check for a non-operational power supply
Blinking red (10 Hz) (FP red LED)	CPLD recovery mode error(s)
Solid blue	UID has been activated locally. Use this function to locate a unit in a rack mount environment that might be in need of service.
Blinking blue (1 Hz)	Local UID has been activated remotely on. Use this function to identify a unit that might be in need of service.
BIOS/BMC blinking blue (10 Hz)	BIOS/BMC: recovery and/or update in progress
Red Info LED blinking (10 Hz) and MB UID LED blue blinking (10 Hz)	CPLD: recovery and/or update in progress

LAN1/LAN2 (NIC1/NIC2)

The NIC (Network Interface Controller) LED connection for LAN Port 1 is located on pin 6 of FP1, and LAN Port 2 is on pin 5. See the table below for FP1 pin definitions.

LAN1/LAN2 LED LED States	
Color	**State**
NIC 2: Blinking green	LAN 2: Active
NIC 1: Blinking green	LAN 1: Active

Drive Activity LED

The drive activity LED connection is located on pin 7 of FP1. When this LED is blinking green, it indicates drive activity. Refer to the table below.

Drive Activity LED LED State	
Color	**State**
Blinking Green	Drive Active

Standby Power LED

The LED indicator for standby power is located on pin 8 of FP1. If this LED is on, standby power is on.

RoT (Root of Trust) Power LED

The Power LED for RoT (Root of Trust) connection is located on pin 9 of FP1. If this LED is on, power for the RoT chip is on.

Standby Power

A Standby Power (I^2C) connection is located on pin 10 - pin 14 of FP1 to provide power to the system when it is in standby mode. Refer to the table below for pin definitions.

3.3 V Standby PWR Pin Definitions

Pin#	Definition
10	P3V3 Standby
11	Ground
12	I^2C Data
13	I^2C Clock
14	Ground

Power Fail LED Indicator Connections

Power Failure LED Indicator connections are located on pin 15 and pin 19 of FP1. Refer to the table below for pin definitions.

FP Power LED Pin Definitions (FP1)

Pin#	Definition
15	PWR Failure LED-Positive
19	PWR Failure LED-Negative

FP USB Power

Front Panel USB power connections are located on pin 16 - pin 18 of FP1 to provide power to front USB devices. Refer to the table below for pin definitions.

FP USB PWR Pin Definitions

Pin#	Definition
16	+5V USB PWR
17	
18	

2. Front Control Panel Header 2 (FP2)

In addition to Front Control Panel header 1 (FP1), another Front Control Panel header, located at FP2, supports a VGA connector and two USB 2.0 ports (USB 3/4).

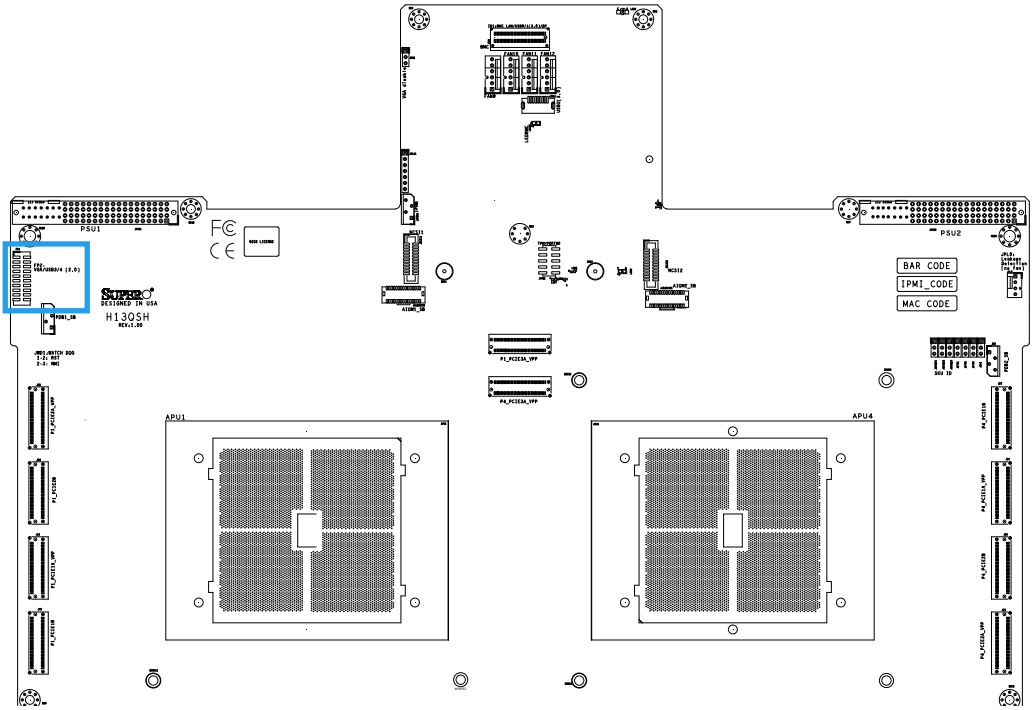

Figure 4-3. Location of FP2

Chapter 5

Software

After the hardware has been installed, you can boot the Operating System (OS). In addition, the following software is supported on the AS -2145GH-TNMR-LCC.

5.1 Ubuntu® Server 22.04 ISO Installation

Prerequisites

Ubuntu Server 22.04 ISO Image

Obtain the Ubuntu Server 22.04 ISO for AMD64 CPU architecture (amd64) and save it to your local drive or a shared server. It’s recommended to use Ubuntu Server 22.04.4 LTS.

BMC Network Connection

To utilize the BMC remote functionality, ensure that the network is connected to the BMC.

Ethernet Network Connection via a Network Card

During the Ubuntu 22.04 installation process, network configuration is essential to test the connection to mirror locations for Ubuntu repositories and archives. Please ensure Ethernet connectivity by using a network card. If there's a firewall configuration within your network, the mirror location test may fail. In such cases, disconnect the Ethernet cable for the OS installation. The OS installation can still be successful without an Ethernet connection **for** obtaining the latest updates. For further details, please refer to Step 6. Installing Ubuntu 22.04 OS.

Installing Ubuntu Server 22.04 OS

Step 1. Obtaining the BMC IP Address

Connect the system to a monitor or display using a VGA port or a DisplayPort (Mini DP). Ensure that network is connected to BMC using a network cable and power on the system. The BMC IP address will appear on the right corner of the Supermicro Logo screen.

Step 2. Accessing the BMC Remote Server

Log in to BMC Remote Server

1. In the terminal, execute a ping command to the BMC IP address, such as 10.184.13.17, to verify its connectivity.
2. Launch a new web browser and input the BMC IP address into the URL field.

Outcome: The BMC Remote Console login screen will appear.

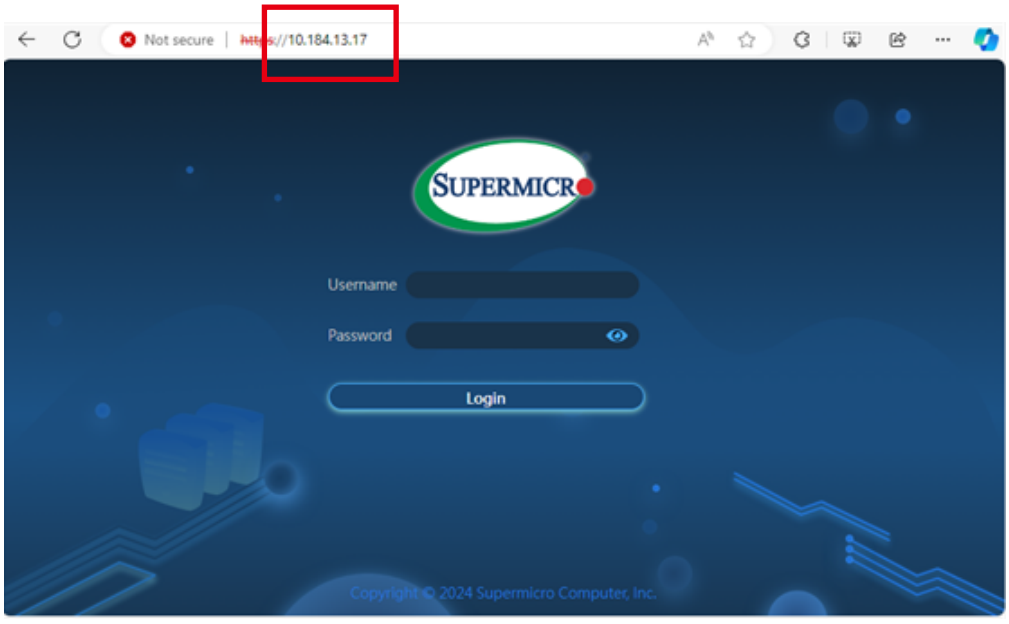

3. Input the username "**ADMIN**" and the unique BMC password, which is located on the label on the opposite side of the service tag of the system. Click the "**Login**" to proceed.

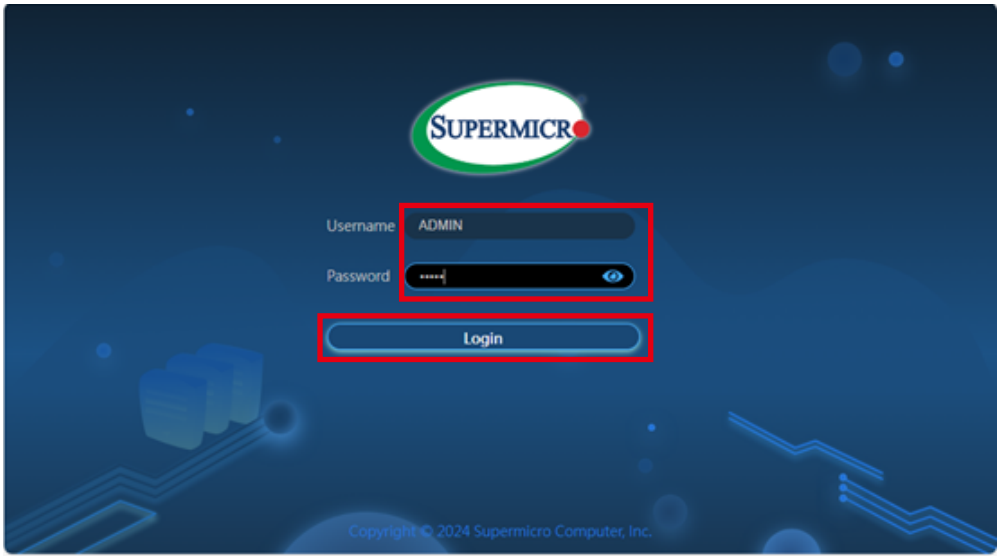

Outcome: The BMC Dashboard offers insights into system overview, configuration, health status, and maintenance.

Step 3. Controlling the System Remotely

1. The Remote Control menu in the RMC Remote Server enables remote server operations.

2. Use the Launch Console section to configure the remote console interface settings. Choose between the HTML5 interface or a JAVA plug-in.

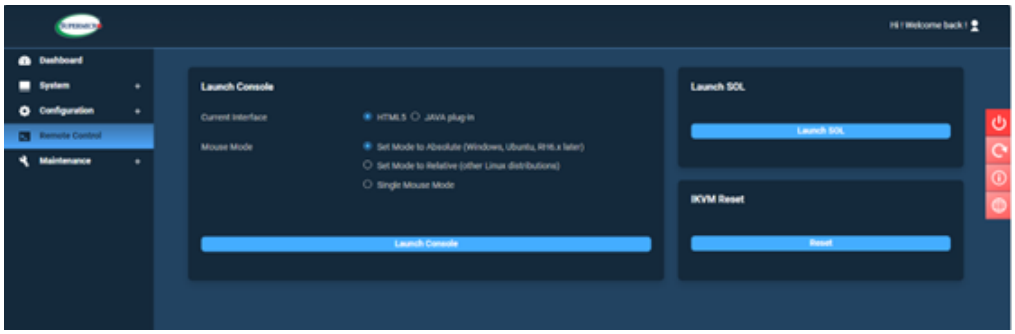

Launch a HTML5 Remote Browser

1. Set HTML5 as the current interface.
2. Choose the mouse mode according to your operating system, such as "**Set Mode to Absolute (Windows, Ubuntu, RH6.x, or later)**".
3. Click the "**Launch Console**" button to open a console in a new browser window.

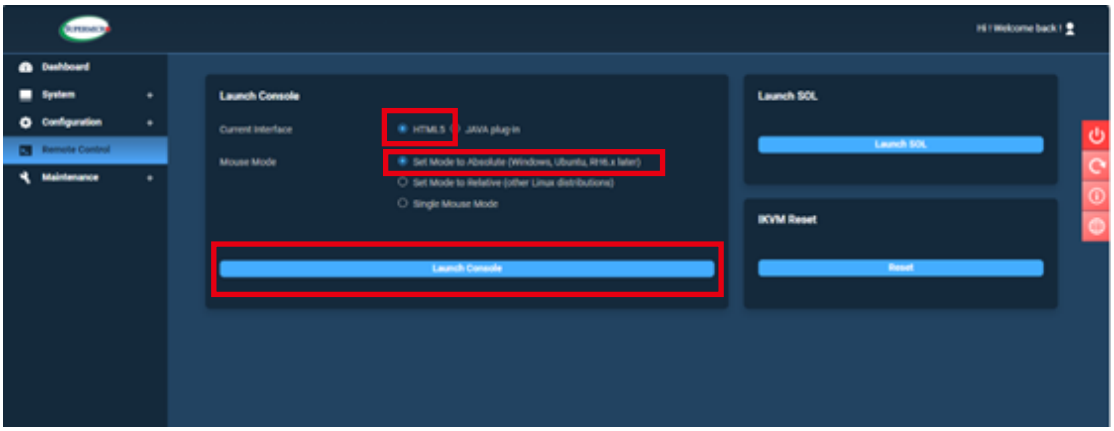

Step 4. Mounting the ISO Image

There are two methods to mount ISO images. If the ISO files are stored locally on your drive, you can mount them directly within the remote control browser. Alternatively, if the ISO files are located on a shared server, you can mount them via the Configuration > Virtual Media menu.

Method One: Mount the ISO Image Using a Local File

1. In the remote control browser, click the "**Virtual Media**" icon. This action will prompt a dialog box to appear, enabling you to select the image type and files for mounting.

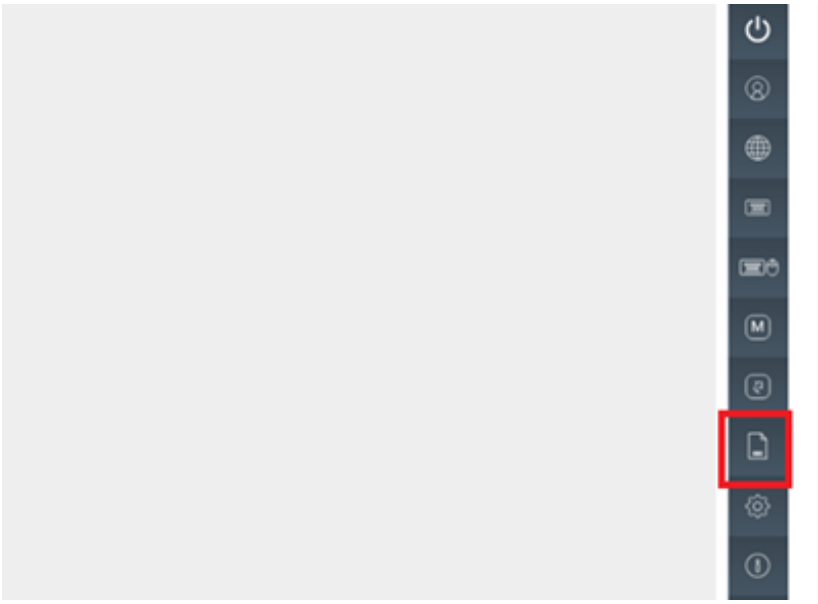

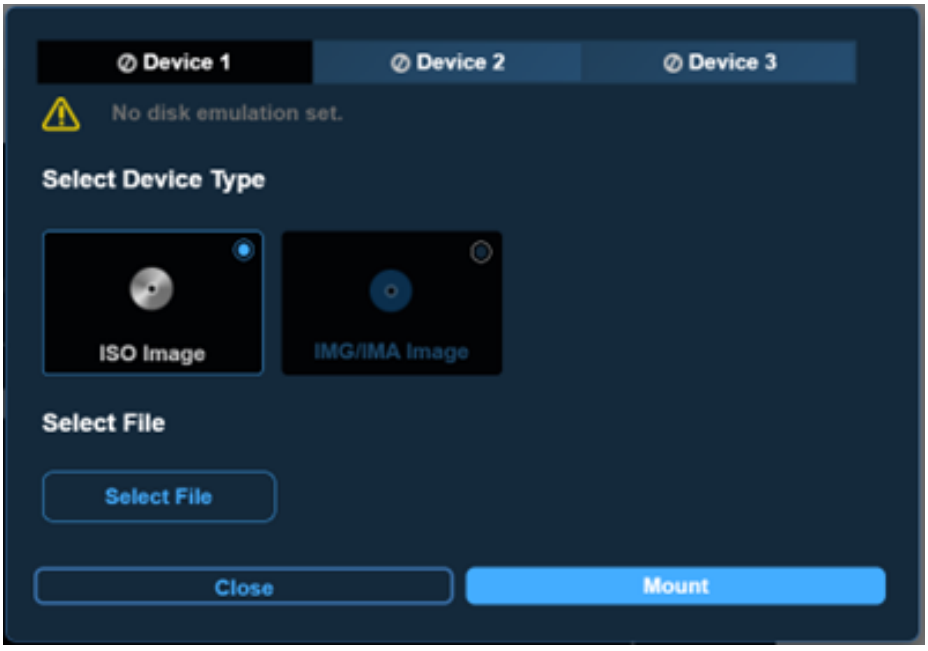

2. Choose the **"Select File"** button to browse and select the RHEL ISO image on your local drive for use.

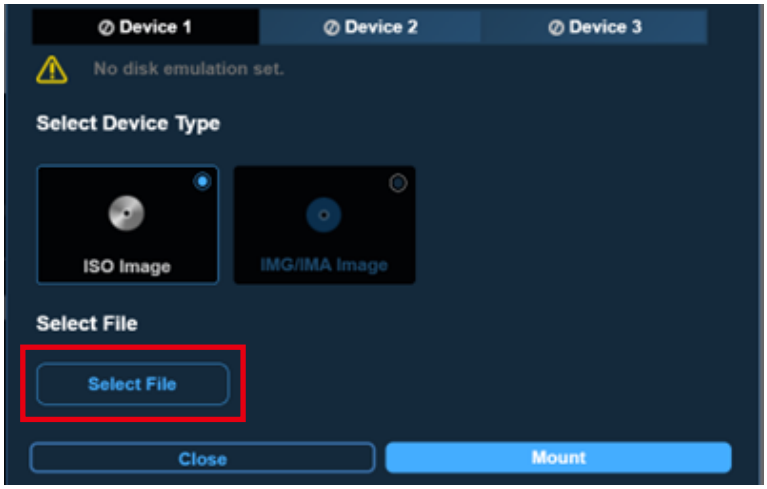

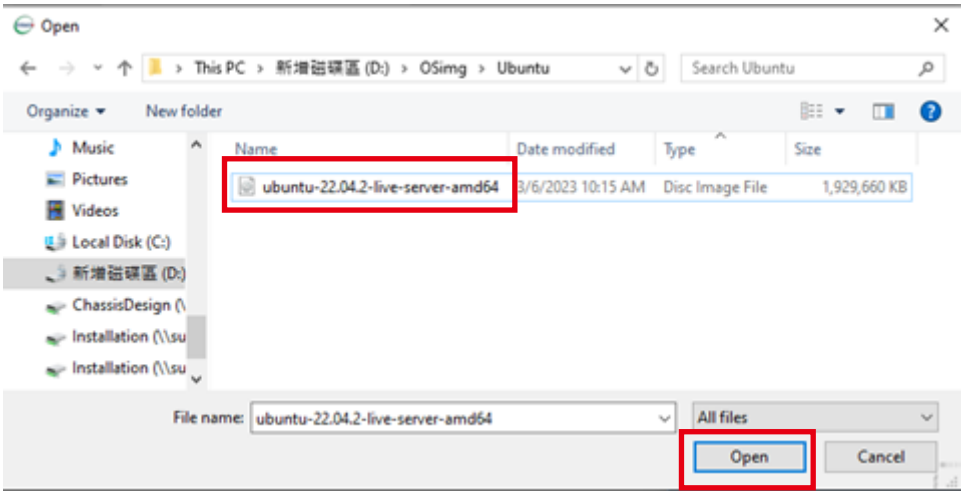

3. Click the "**Mount**" button to attach the chosen iso image.

Result: Upon successful mounting of the ISO image, a green indicator will appear in the "**Device**" tab. Close the dialog to continue.

Method Two: Mount the ISO Image through Shared Server

1. On the BMC dashboard, go to Configuration > Virtual Media, this allows you to attach an iso image from the server.

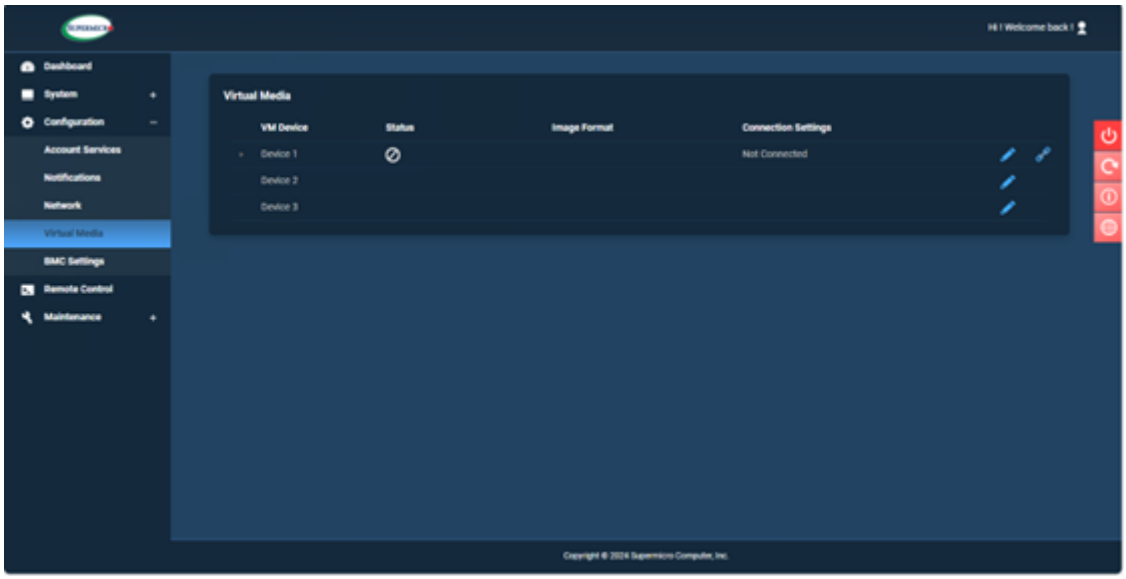

2. Click the "**Edit**" icon to adjust the VM configuration. Enter the server host address and the path to the ISO image. Then, click "**Save**" to apply the changes.

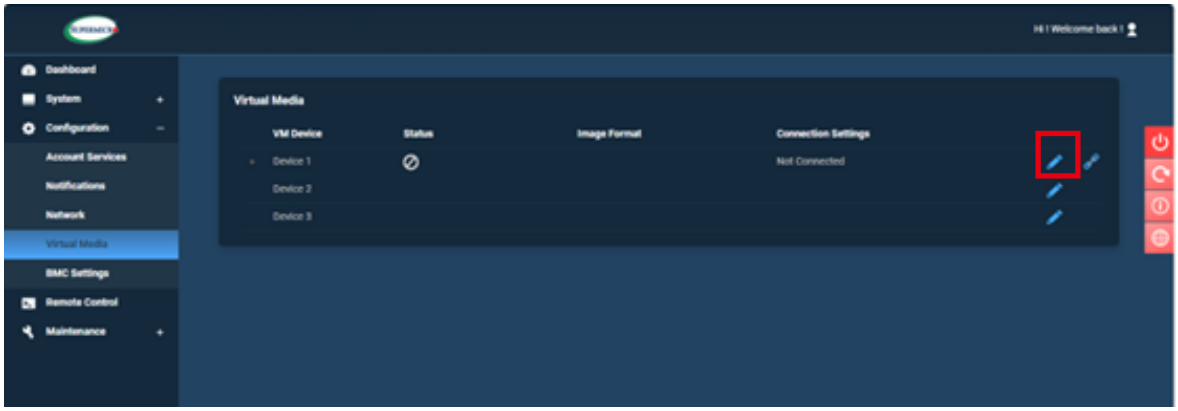

3. Click the "**Connect**" icon to mount the virtual media. The device status will display as green once the VM is successfully configured.

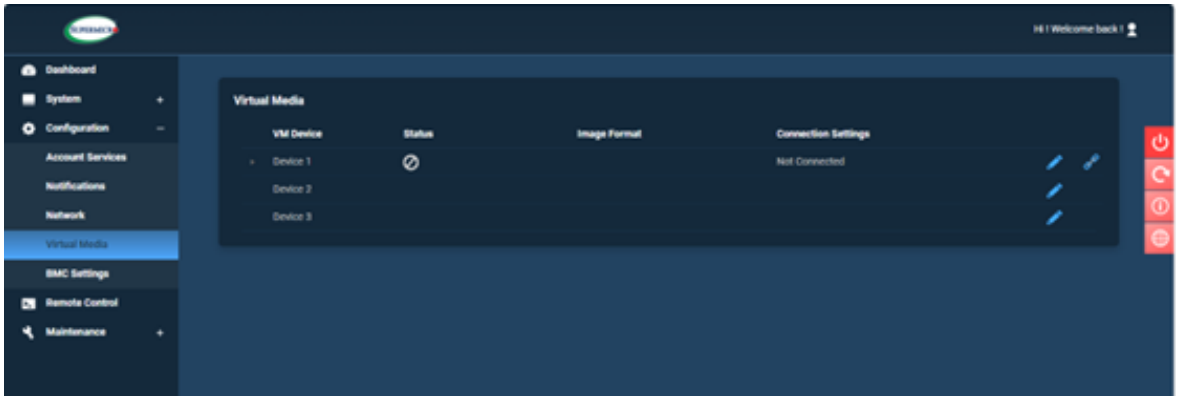

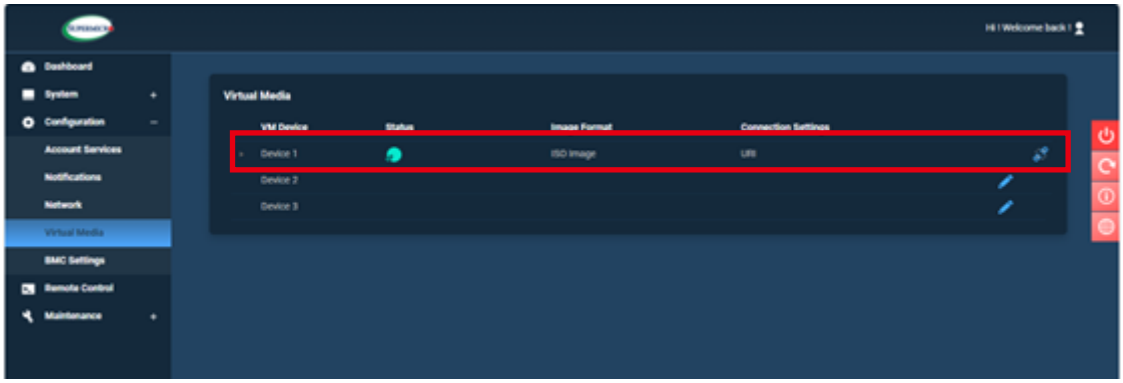

Step 5. Boot from Virtual Media

To boot from the mounted image in virtual media, users must manually select the boot device from the Boot Menu during BIOS POST.

1. Power on the system and wait for the Log screen to display. To access the Boot Menu, repeatedly press <**F11**> until "**Invoke Boot Menu**" appears at the bottom left corner of the screen.

Subsequently, the Boot Menu will appear.

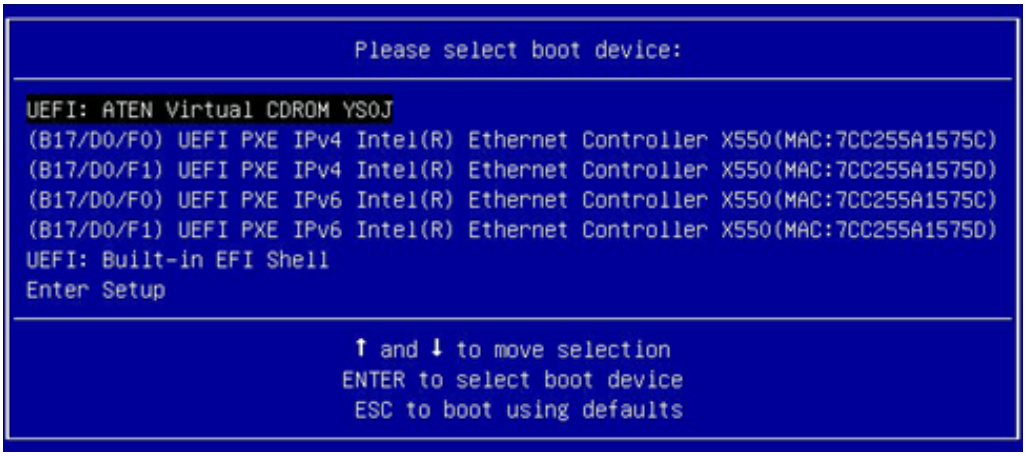

2. Select "**UEFI: ATEN Virtual CDROM YSOJ**" as the boot menu. This selection mounts the ISO image mounted in Virtual Media. Press **"Enter"** to proceed. The GRUB menu will be displayed.

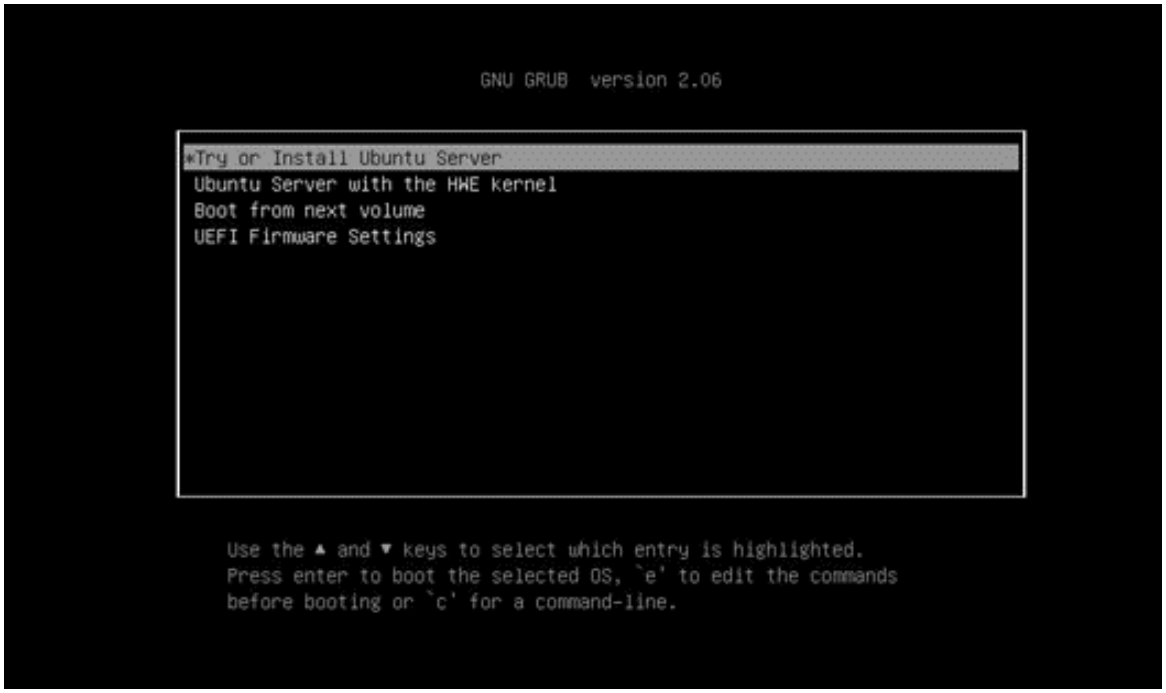

Step 6. Installing Ubuntu Server 22.04 OS

1. Follow the Ubuntu installer steps to continue installation. Choose **"Try or Install Ubuntu Server"** to proceed.

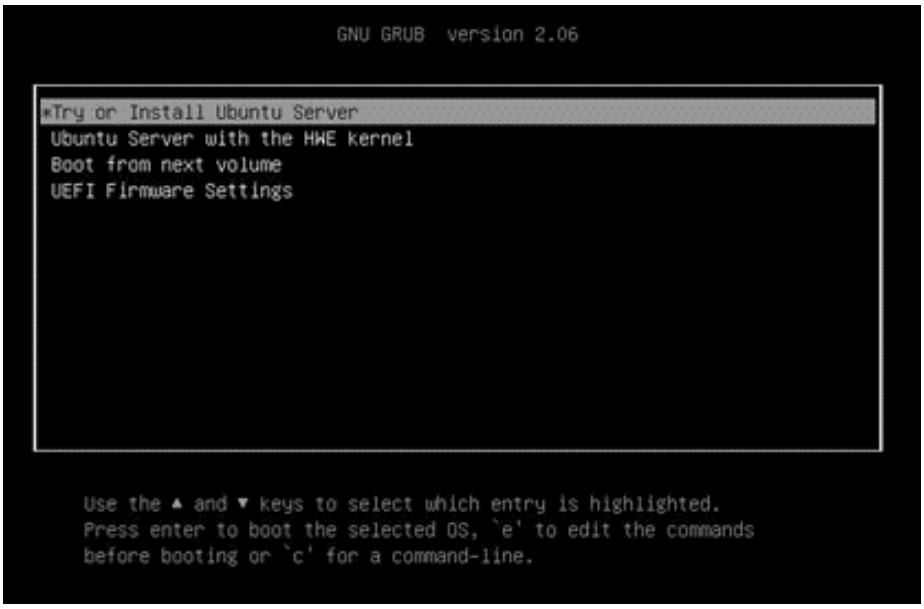

2. Select the language.

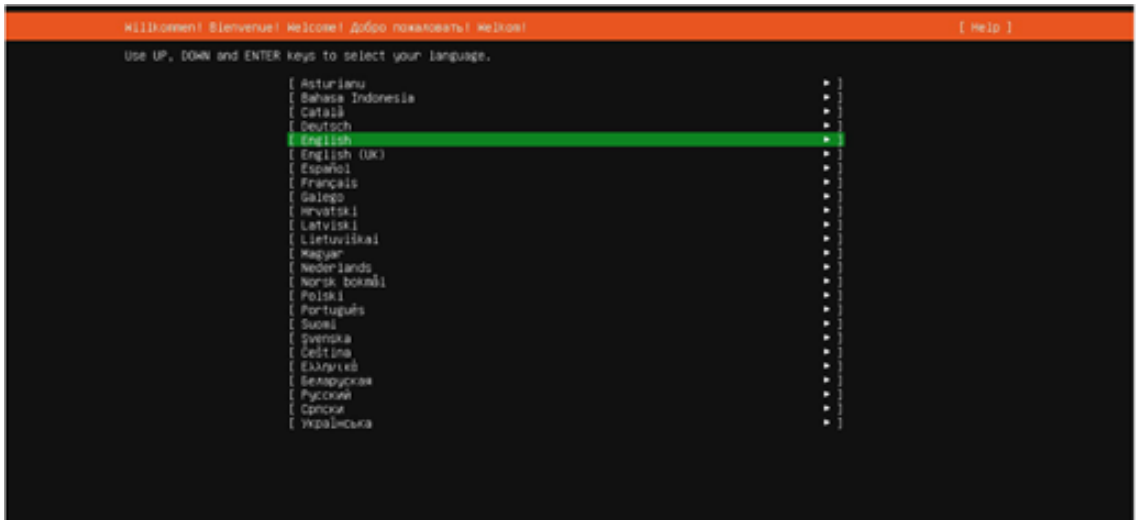

3. Determine whether to update to the new installer or not.

Note: Check whether the system supports the new version before installation.

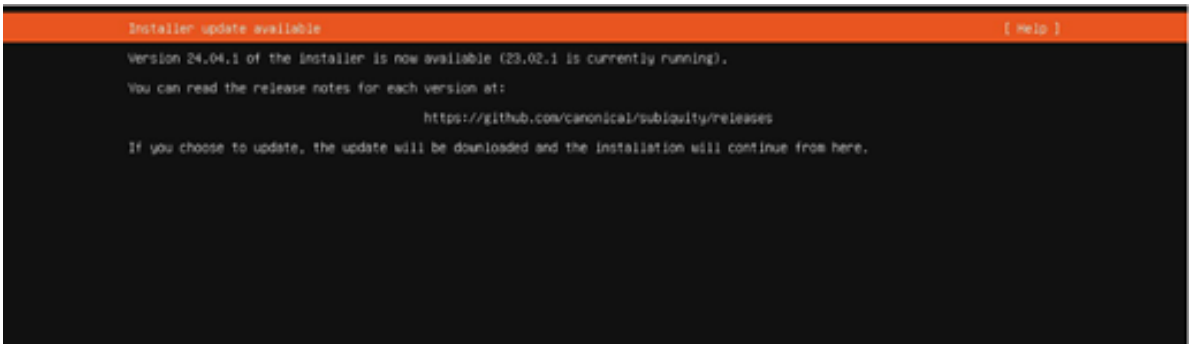

4. Select the keyboard layout.

5. Select the installation type.

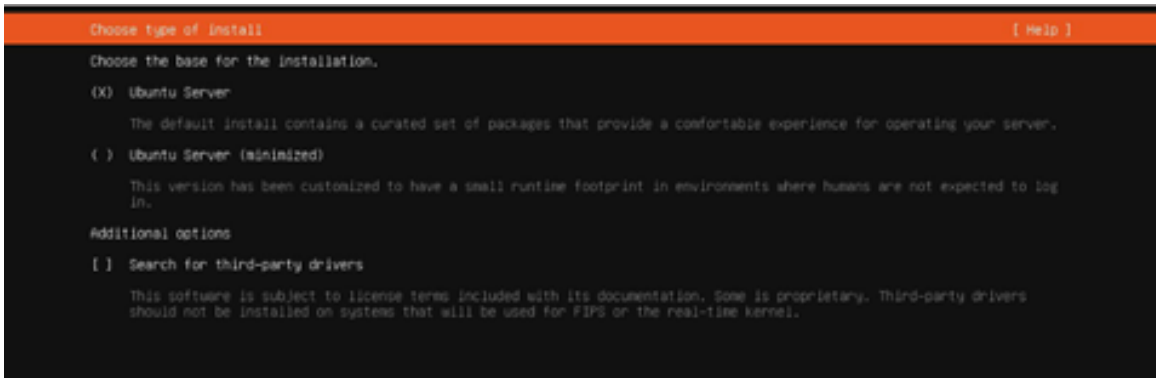

6. Configure the network connection to proceed. If an Ethernet network connection is available, proceed by selecting at least one network configuration option displayed on the installation UI.

7. Configure a proxy server or not.

8. Configure an Ubuntu archive mirror.

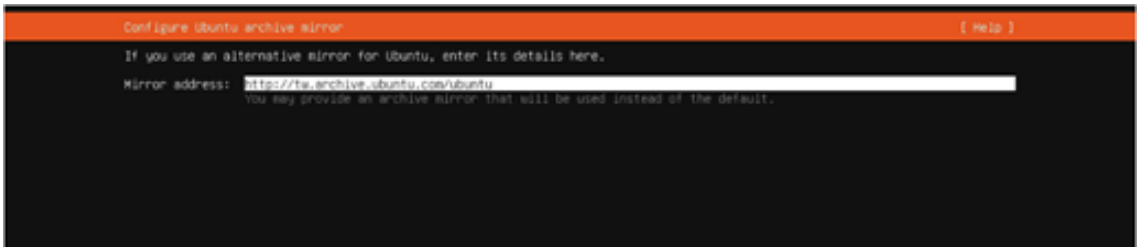

9. Select a drive for OS deployment and customize the storage layout or not.

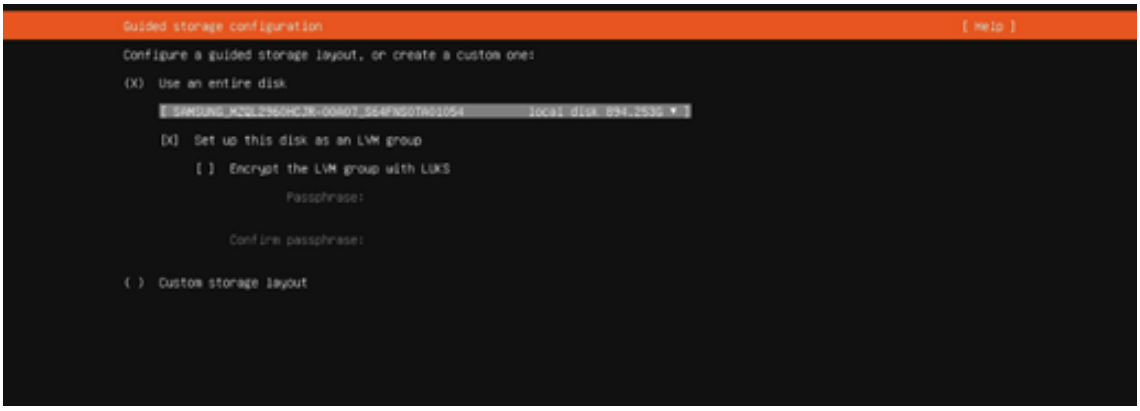

10. Confirm the storage layout and accept the irreversible change.

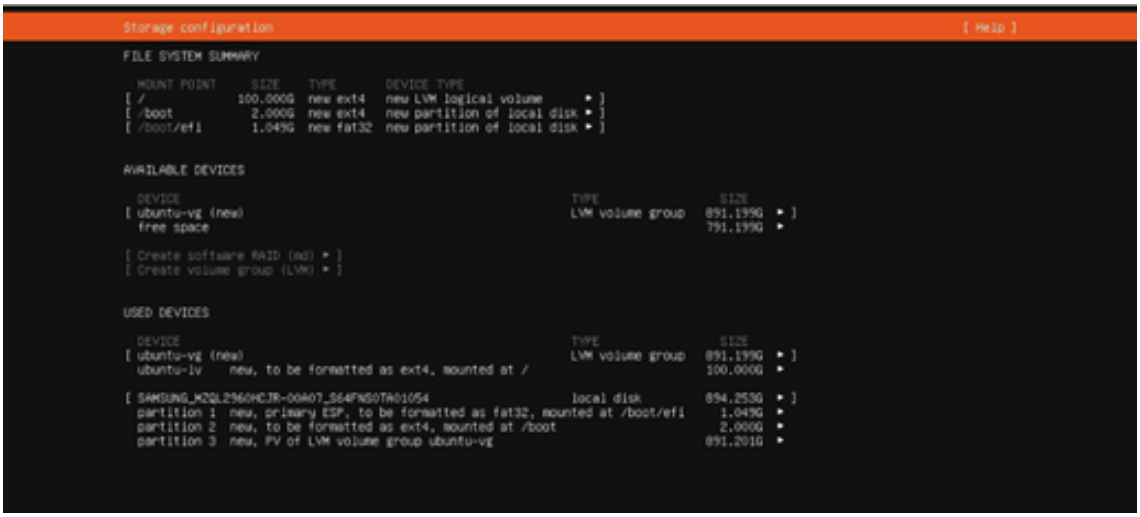

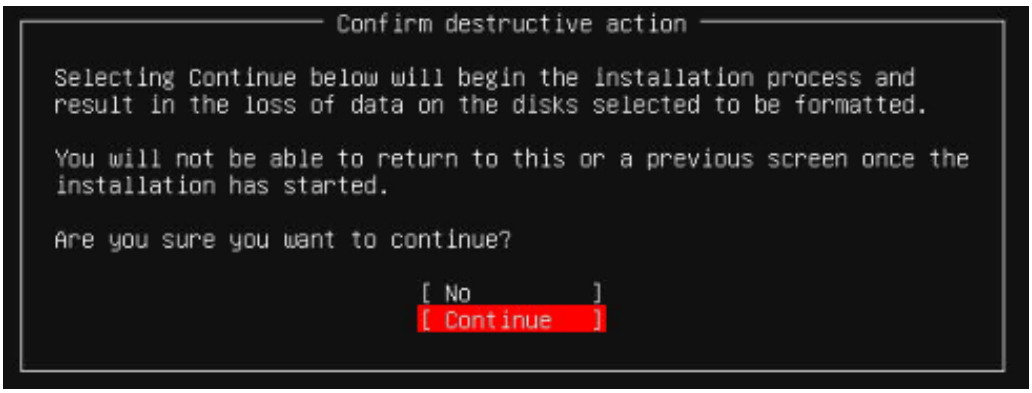

11. Enter the username and password.

12. Determine to upgrade to Ubuntu Pro or not.

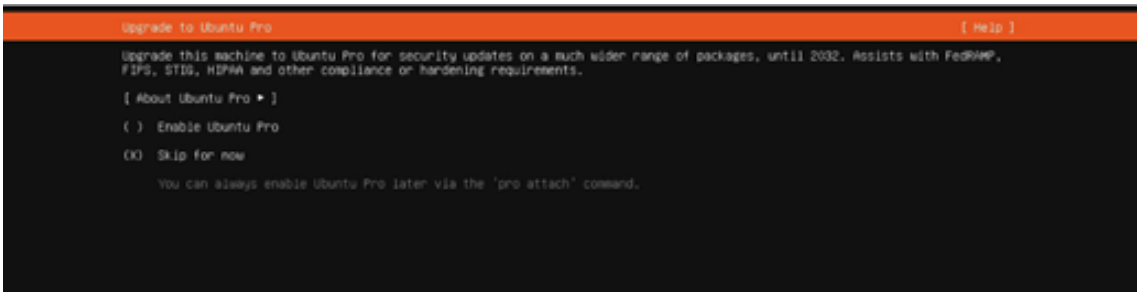

13. Determine to install OpenSSH server or not.

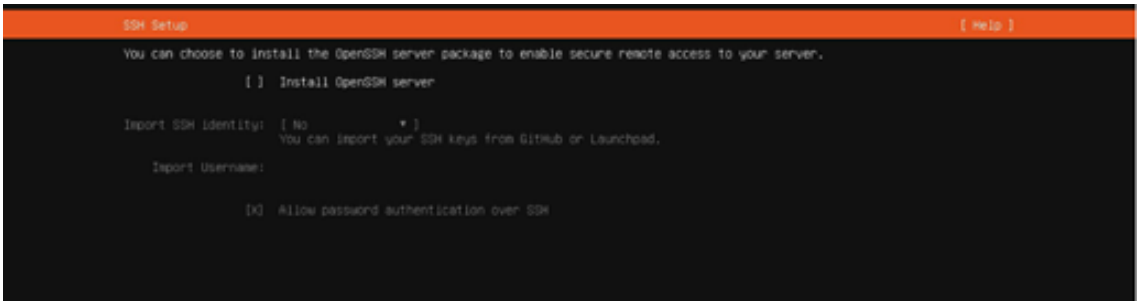

14. Choose the software packages on demand.

15. Installation begin and wait for the completion.

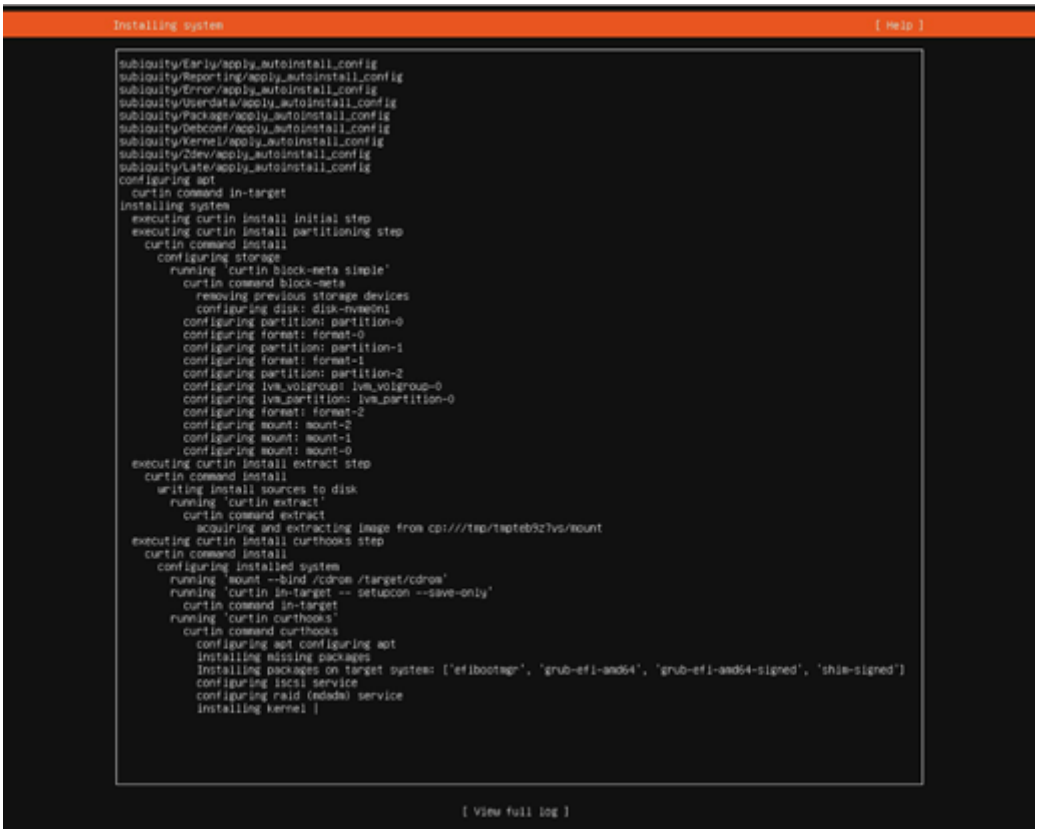

16. Reboot the system to complete the installation.

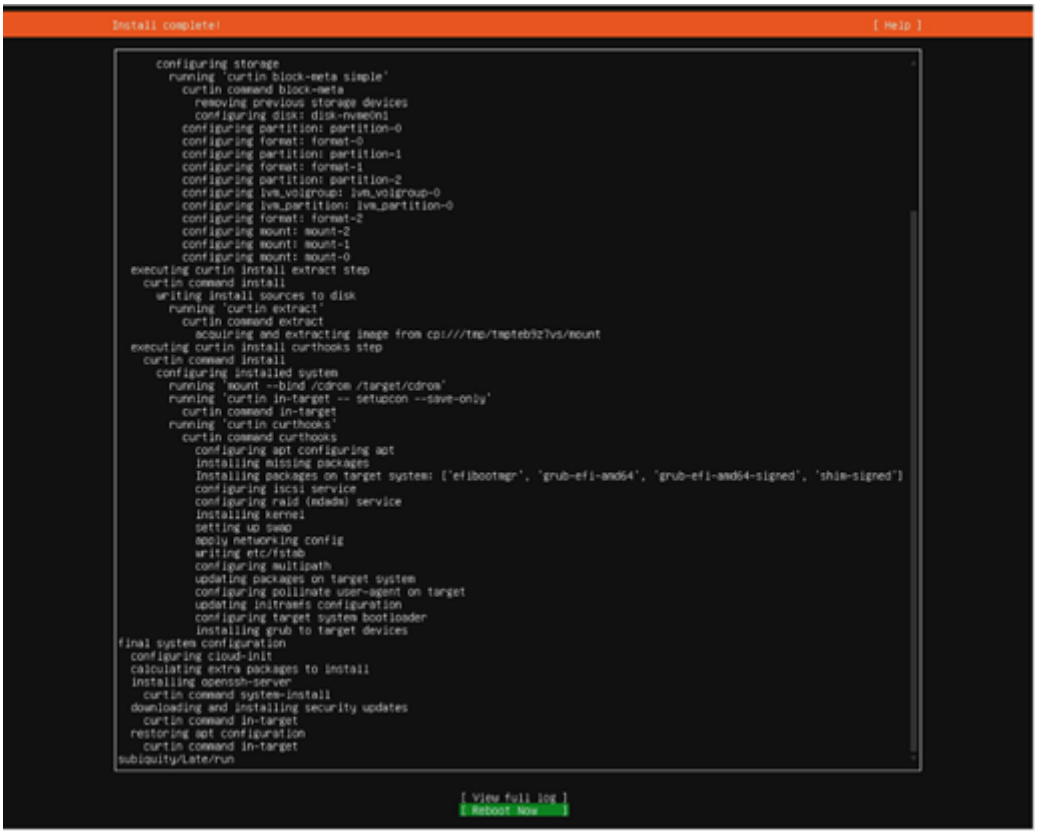

17. Remove the installation medium and press "**ENTER**" to continue the OS initialization.

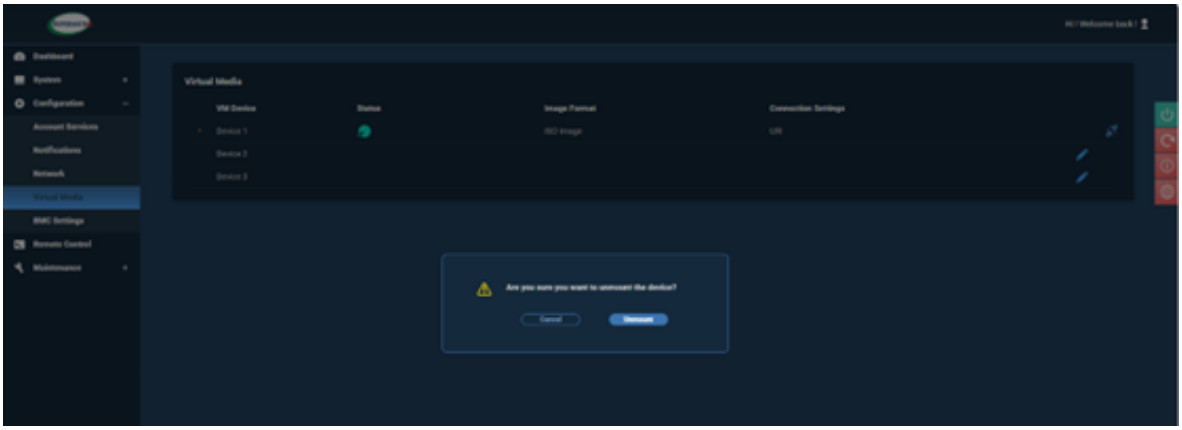

18. Boot into OS successfully

19. Login with the username and password and start to operate the system as demand.

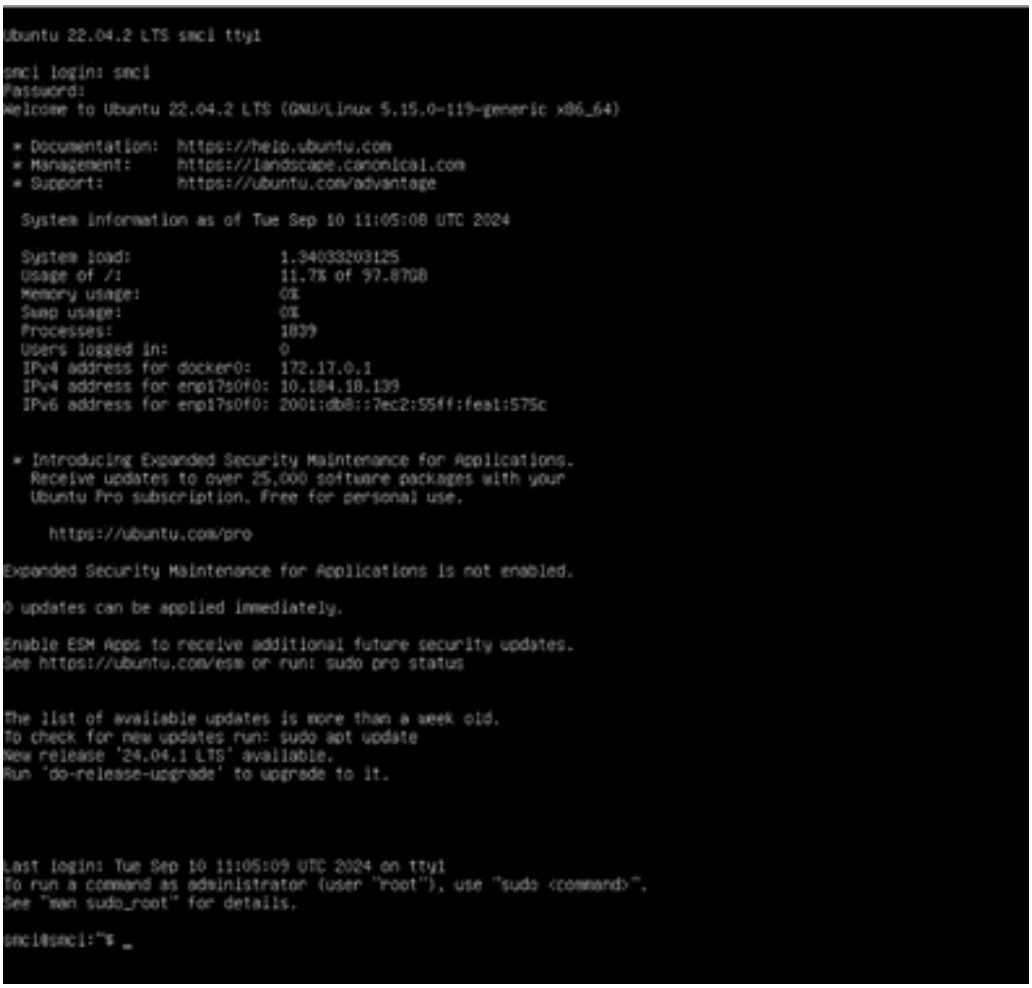

5.2 Red Hat Enterprise Linux (RHEL) 9.3 ISO Installation

Prerequisites

RHEL 9.3 ISO Image

Obtain RHEL 9.3 ISO for AMD64 CPU architecture (x86_64) and save it to your local drive or a shared server.

BMC Network Connection

To utilize the BMC remote functionality, ensure that the network is connected to the BMC.

Installing RHEL 9.3 OS

Step 1. Obtaining BMC IP Address

Connect the system to a monitor or display using a VGA port or a DisplayPort (DP). Ensure that the network is connected to the BMC using a network cable and power on the system. The BMC IP address will appear on the right corner of the Supermicro Logo screen.

Step 2. Accessing the BMC Remote Server

Log in to the BMC Remote Server

1. In the terminal, execute a ping command to the BMC IP address, such as 10.184.13.17, to verify its connectivity.

2. Launch a new web browser and input the BMC IP address into the URL field.

Outcome: The BMC Remote Console login screen will appear.

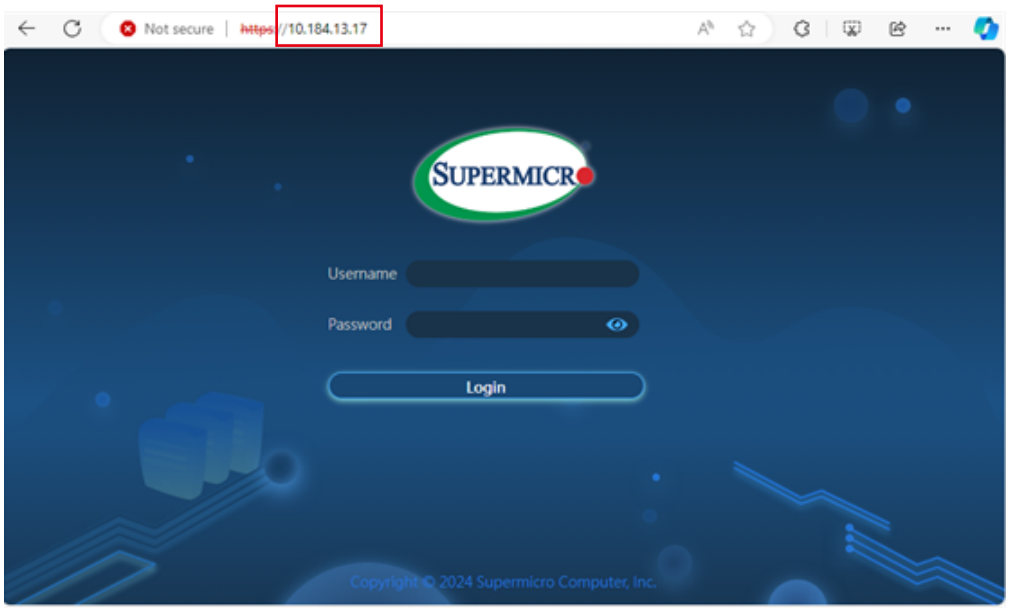

3. Input the username "**ADMIN**" and the unique BMC password, which is located on the label on the opposite side of the service tag of the system. Click the "**Login**" to proceed.

Outcome: The BMC Dashboard offers insights into system overview, configuration, health status, and maintenance.

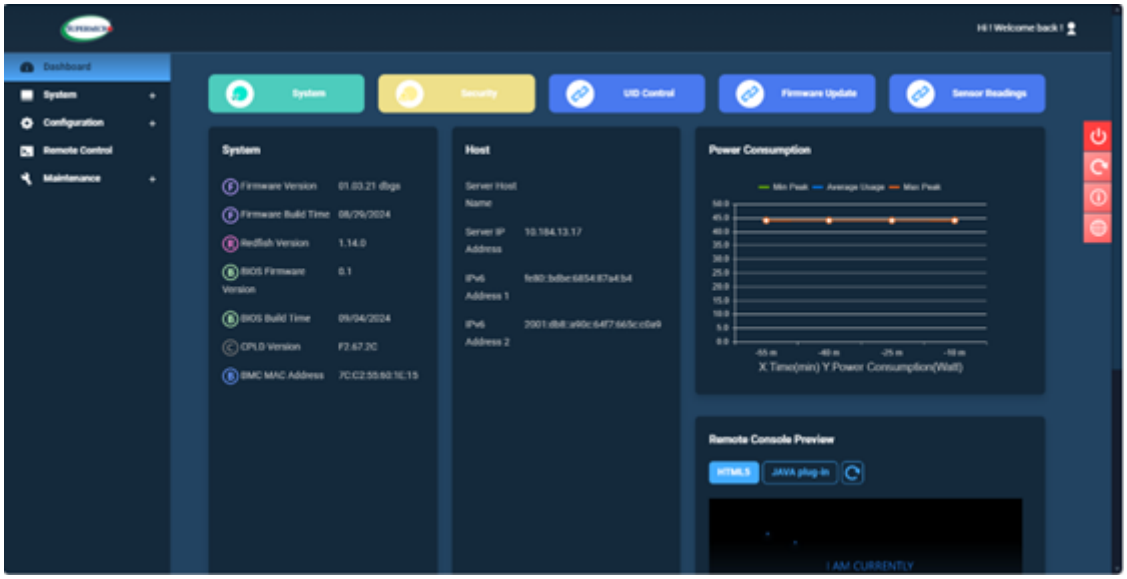

Step 3. Accessing the BMC Remote Server

1. The Remote Control menu in the BMC Remote Server enables remote server operations.

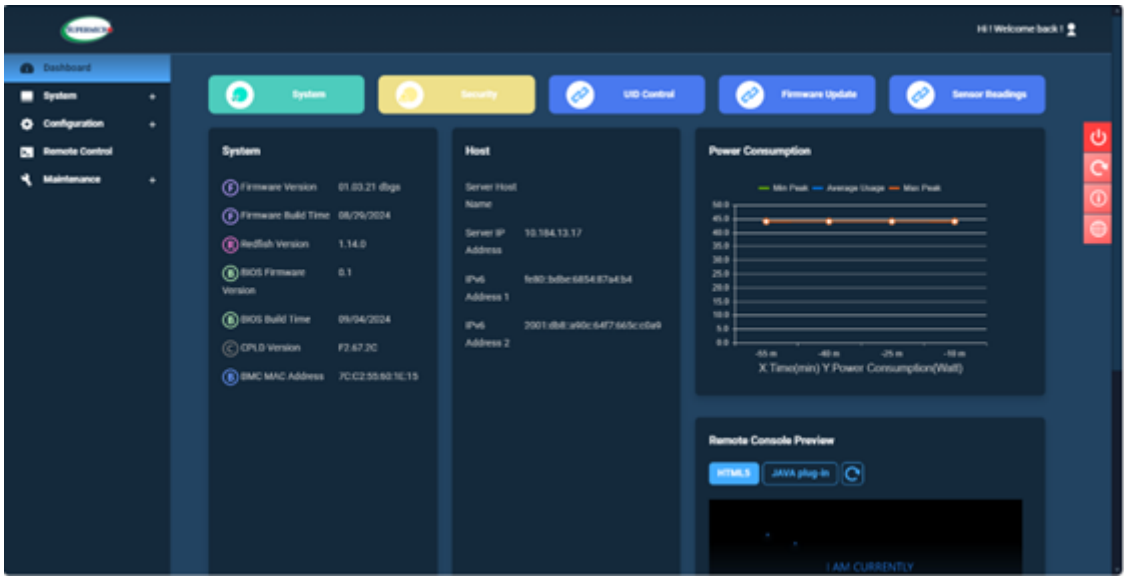

2. Use the Launch Console section to configure the remote console interface settings. Choose between the HTML5 interface or a JAVA plug-in.

Launch an HTML5 Remote Browser

1. Set HTML5 as the current interface.
2. Choose the mouse mode according to your operating system, such as "**Set Mode to Absolute (Windows, Ubuntu, RH6.x, or later)**."
3. Click the "**Launch Console**" button to open a console in a new browser window.

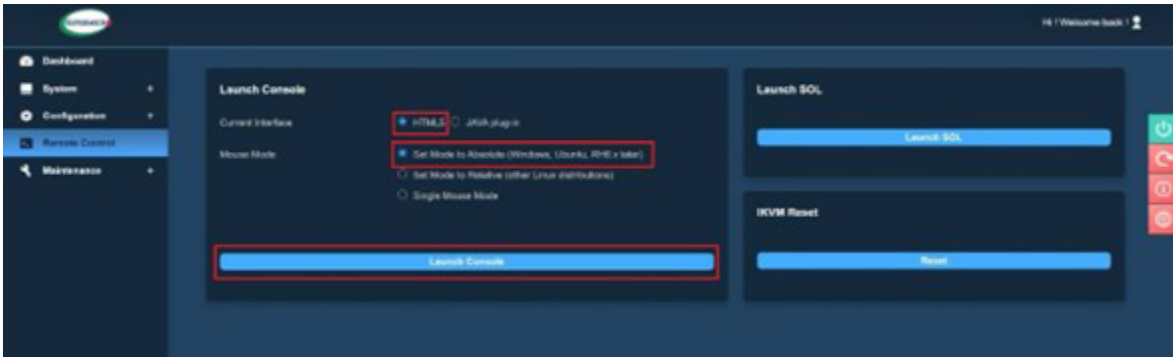

Step 4. Mounting the ISO Image

There are two methods to mount ISO images. If the ISO files are stored locally on your drive, you can mount them directly within the remote control browser. Alternatively, if the ISO files are located on a shared server, you can mount them via the Configuration > Virtual Media menu.

Method One: Mount the ISO Image Using a Local File

1. In the remote control browser, click the "**Virtual Media**" icon. This action will prompt a dialogue box to appear, enabling you to select the image type and files for mounting.

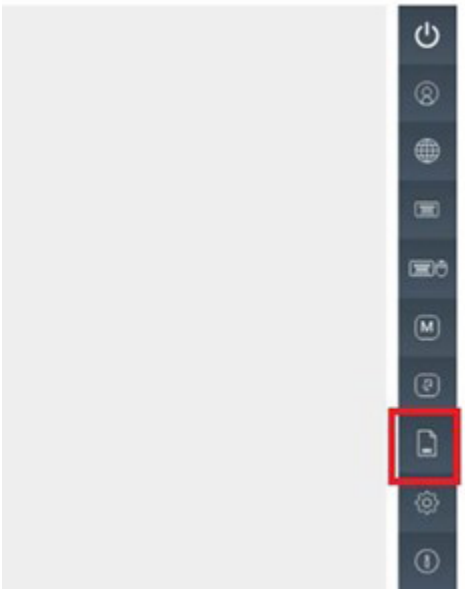

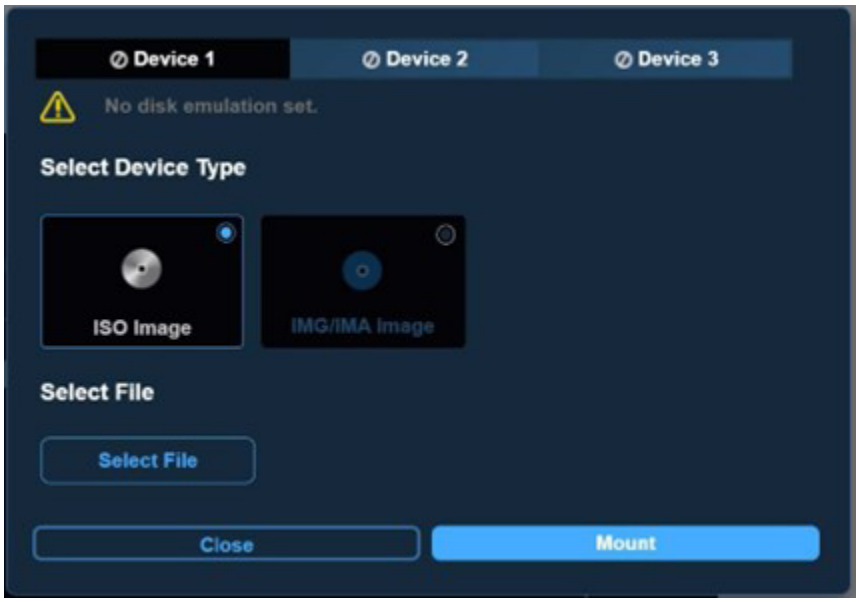

2. Choose the **"Select File"** button to browse and select the RHEL ISO image on your local driver for use.

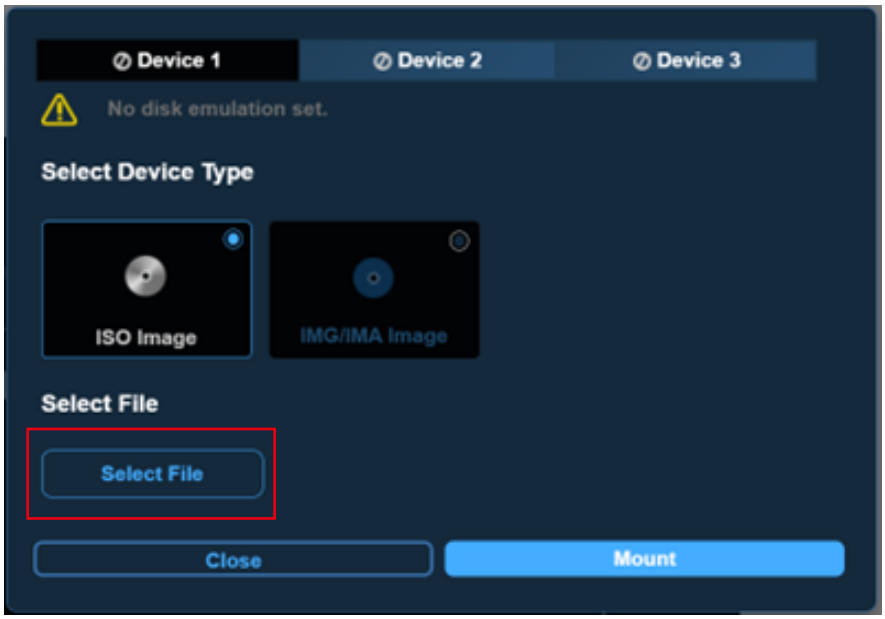

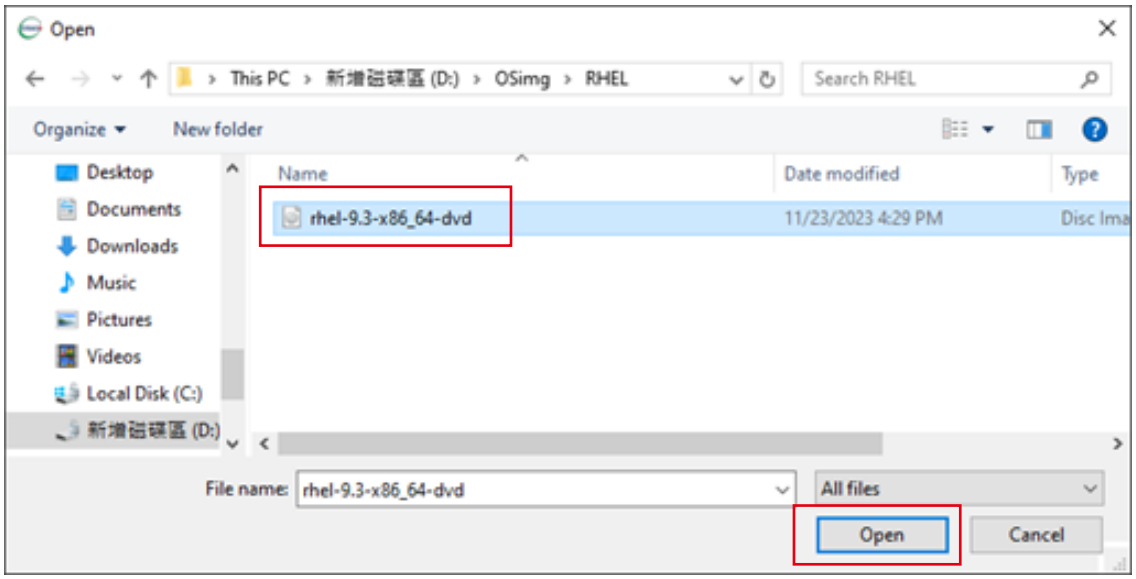

3. Click the "**Mount**" button to attach the chosen ISO image.

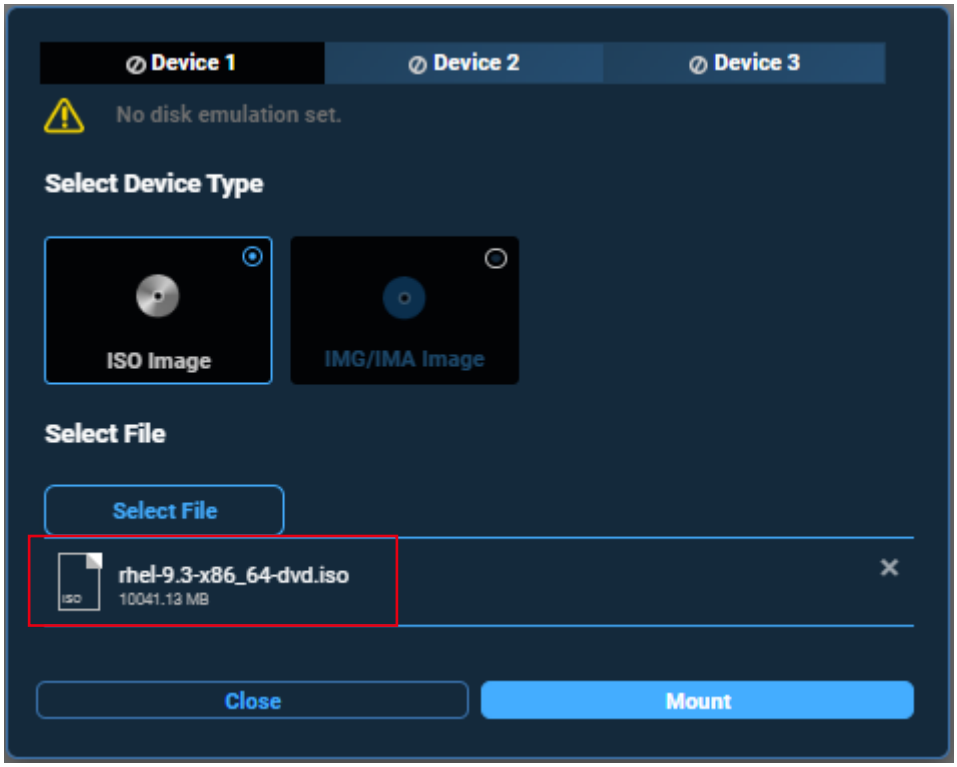

Result: Upon successful mounting of the ISO image, a green indicator will appear in the "**Device**" tab. Close the dialogue to continue.

Method Two: Mount the ISO Image through a Shared Server

1. On the BMC dashboard, go to Configuration > Virtual Media. This allows you to attach an ISO image from the server.

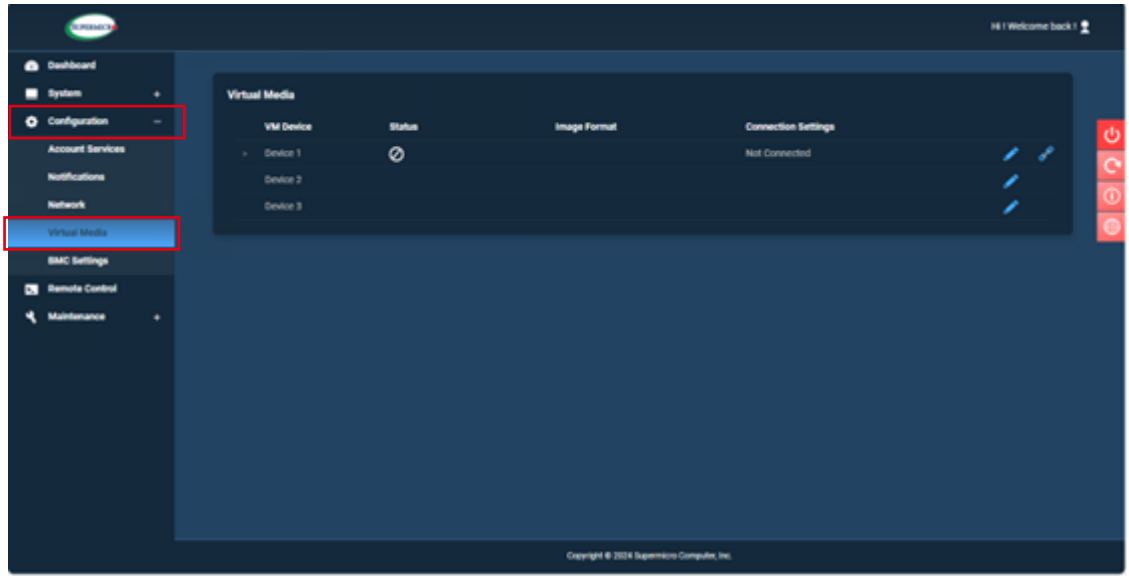

2. Click the "**Edit**" icon to adjust the VM configuration. Enter the server host address and the path to the ISO image. Then, click "**Save**" to apply the changes.

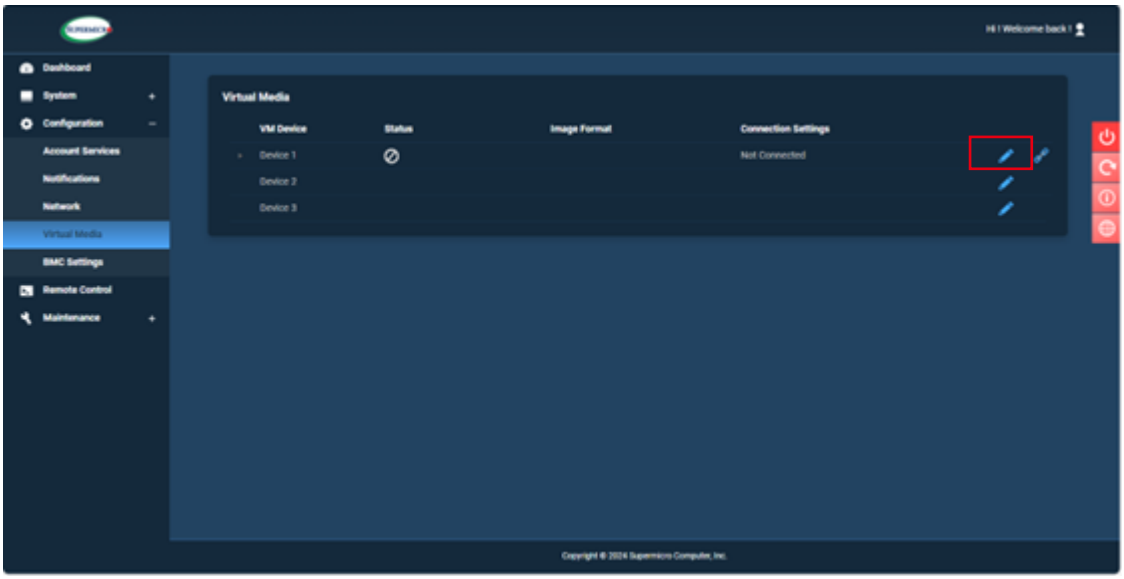

3. Click the "**Connect**" icon to mount the virtual media.

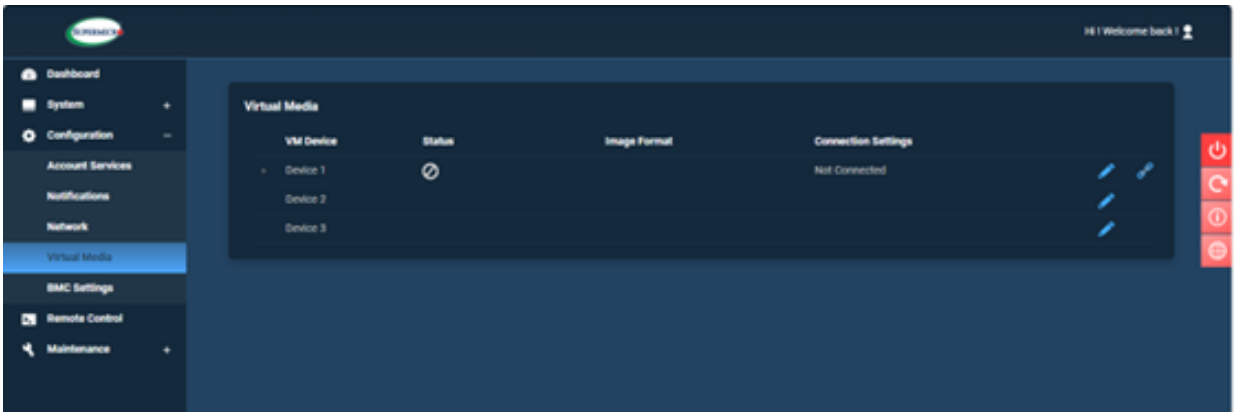

4. The device status will display as green once the VM is successfully configured.

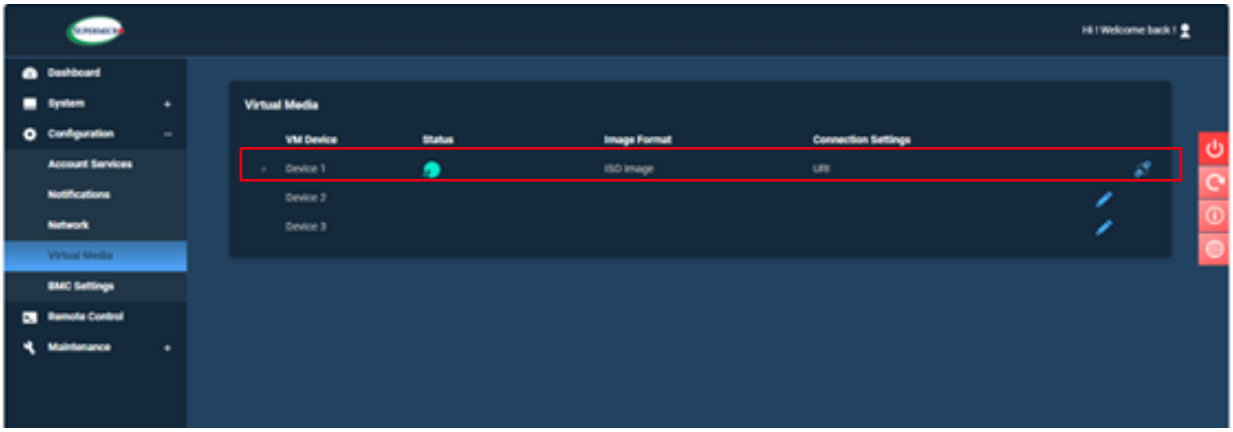

Step 5. Boot from Virtual Media

To boot from the mounted image in virtual media, users must manually select the boot device from the Boot Menu during BIOS POST.

1. Power on the system and wait for the Log screen to display. To access the BIOS setup menu, repeatedly press <**F11**> until "**Invoke Boot Menu**" appears at the bottom left corner of the screen.

Subsequently, the Boot Menu will appear.

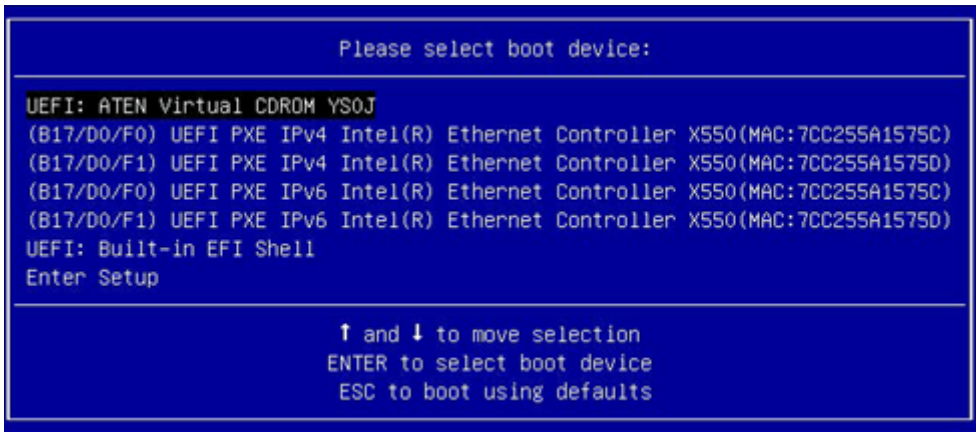

2. Select "**UEFI: ATEN Virtual CDROM YSOJ**" as the boot menu. This selection mounts the ISO image mounted in Virtual Media. Press "Enter" to proceed. The GRUB menu will be displayed.

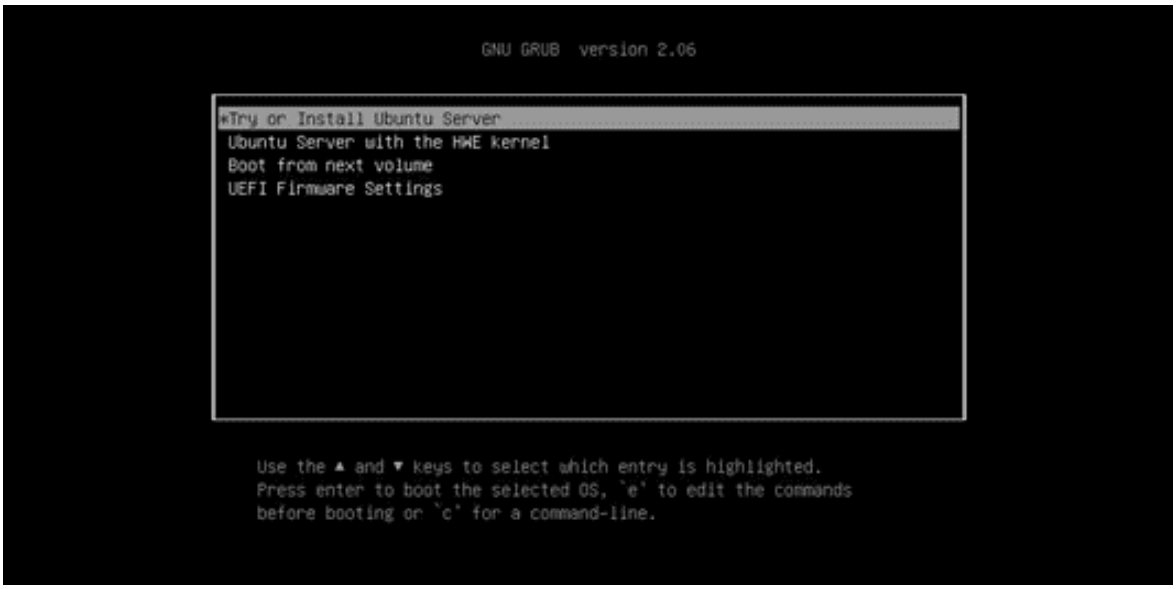

Step 6. Installing the RHEL 9.3 OS

1. Follow the Ubuntu installer steps to continue installation. Choose "**Try or Install Ubuntu Server**" to proceed.

2. Select the language.

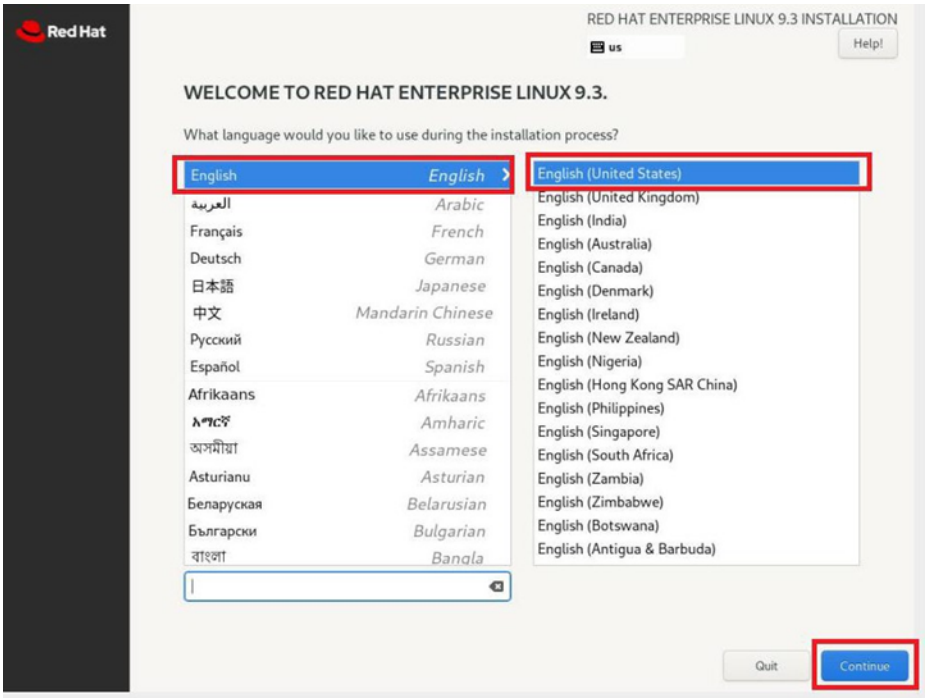

3. The Installation Summary window provides a glance of the configuration you need before you begin the installation.

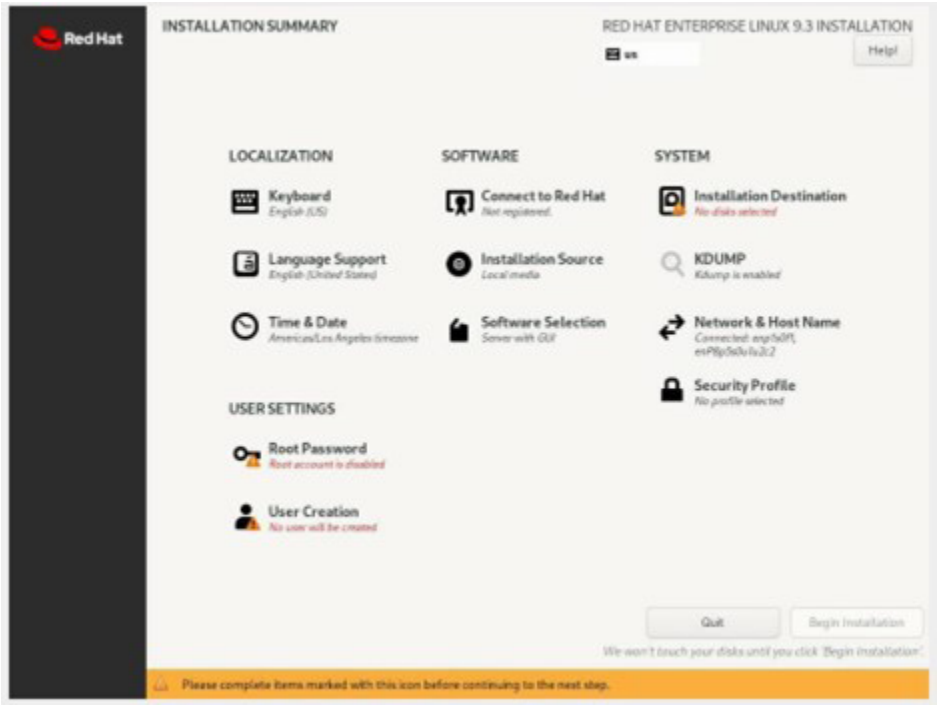

4. Click the "**Installation Destination**" button to select the storage drive.

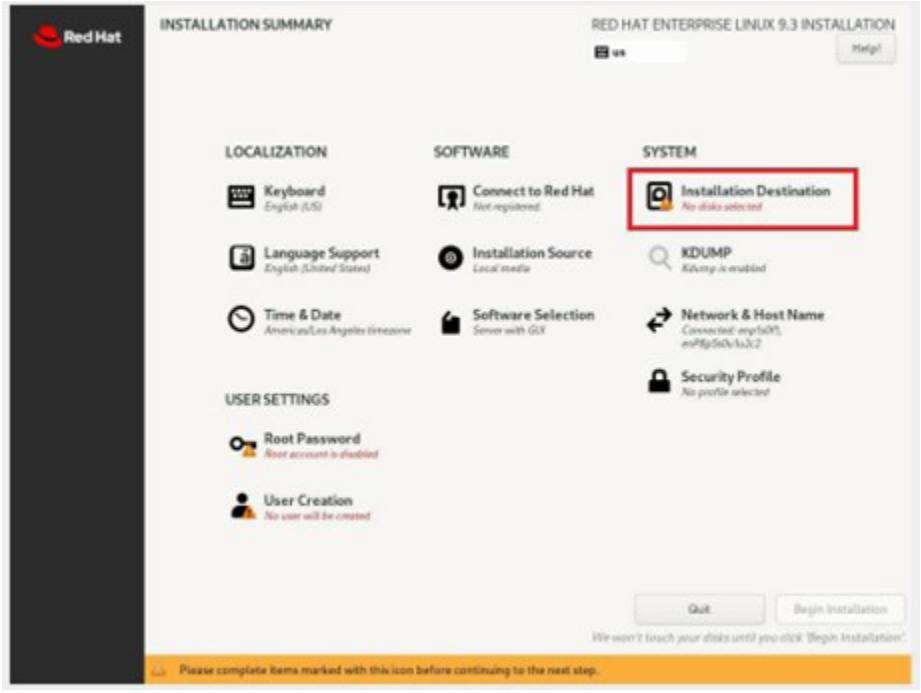

5. Select the drive to which you want to install the RHEL OS.

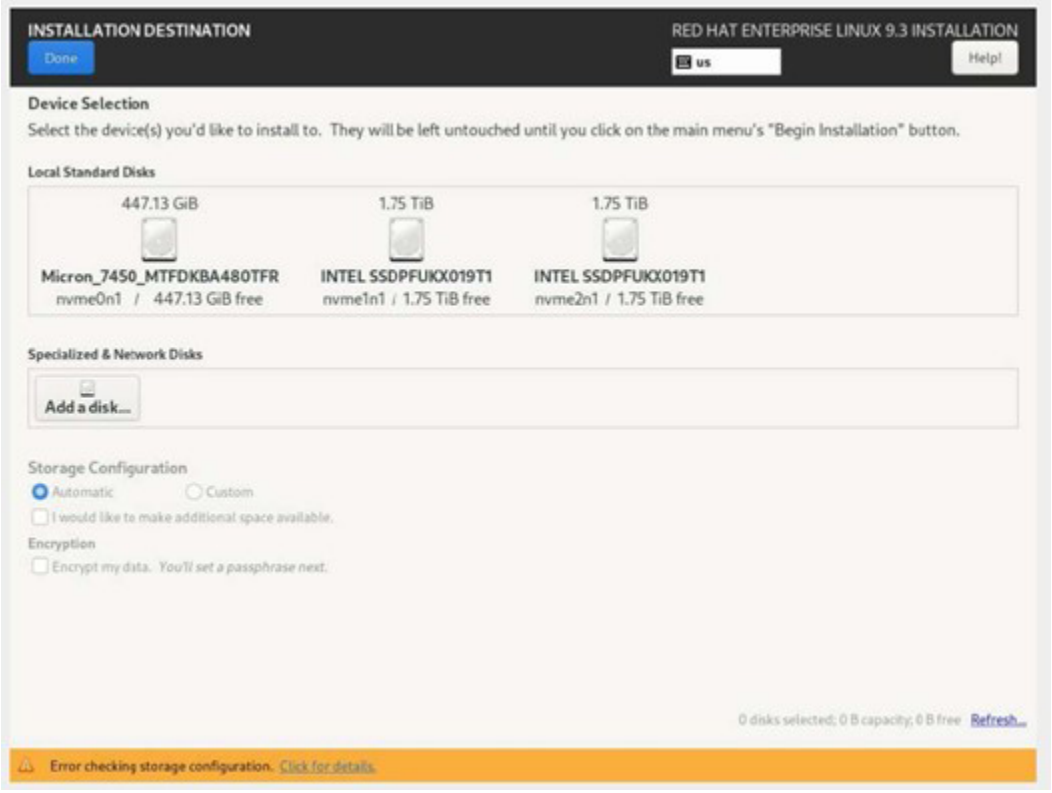

6. Select one of the drives and choose **"Custom"** if you want to customize the drive's volume. This will display the available space on the selected drive.

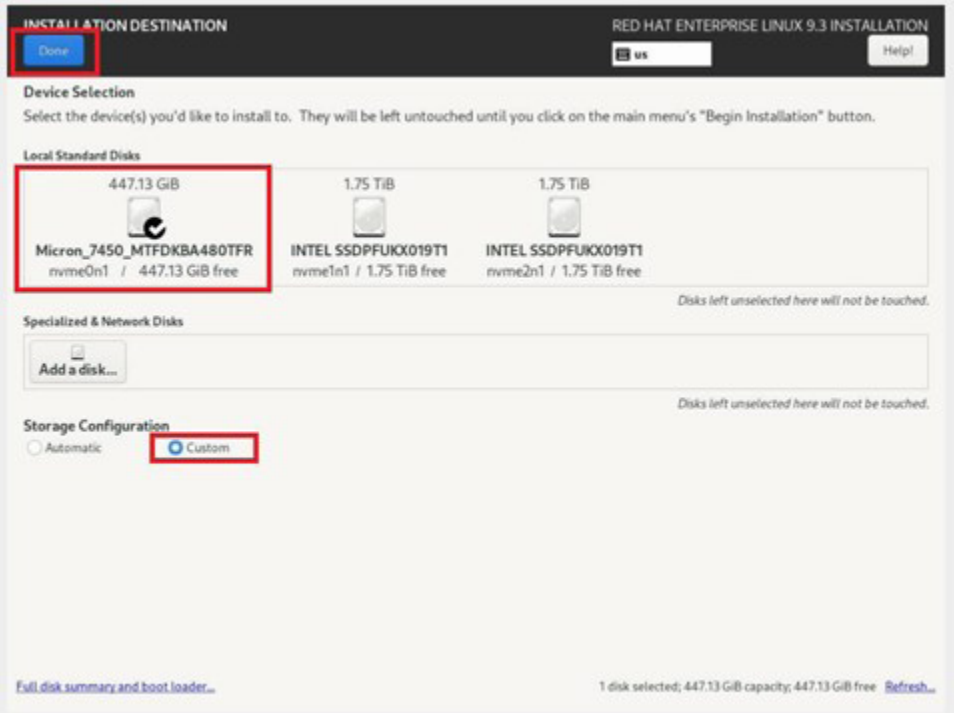

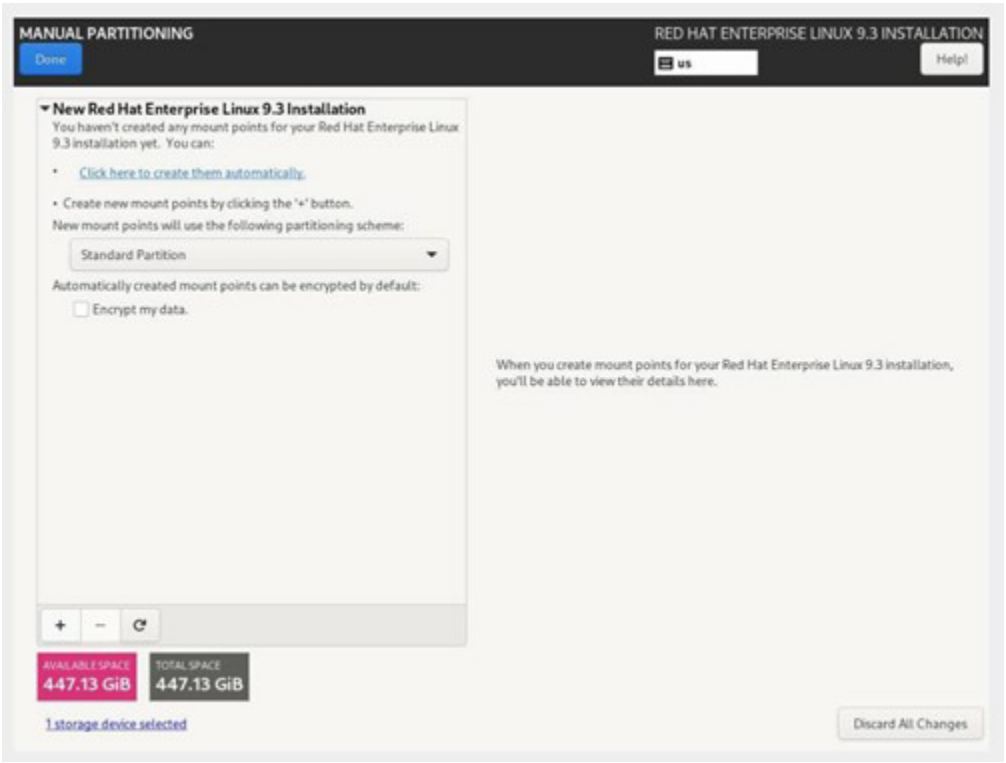

7. For RHEL, you need to have at least three mount points (/boot/efi, /, and swap). Click the "**+**" button to create new mount point "**/boot/efi**" as the boot partition for EFI system.

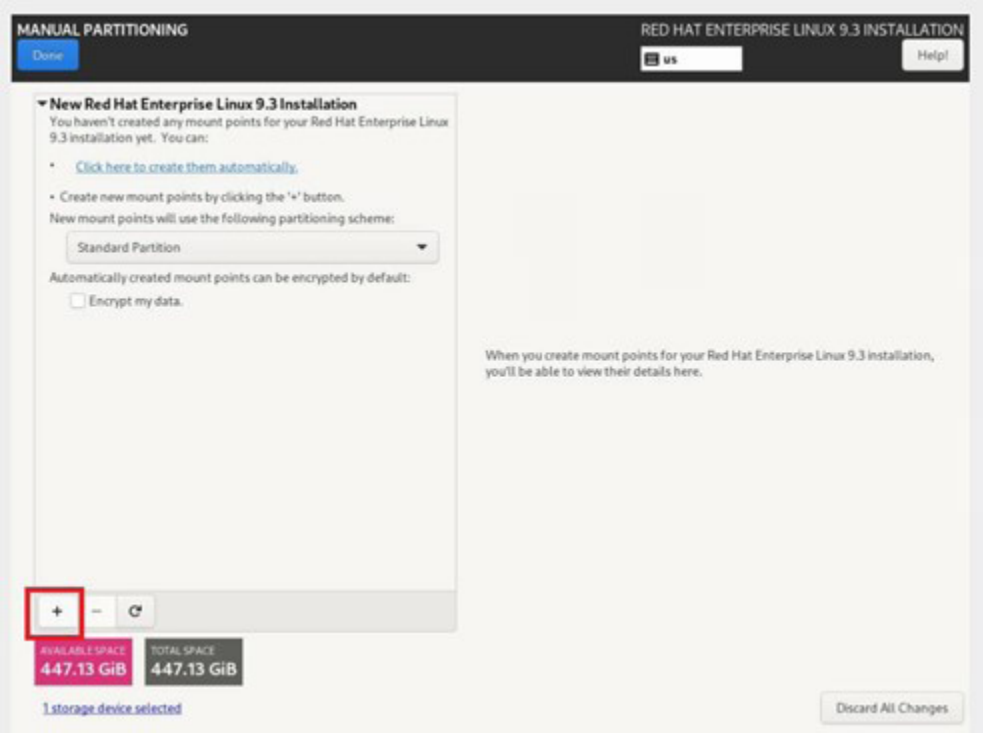

8. The **"Add a new mount point"** dialogue will pop up. Select the mount point "**/boot/efi**" and the storage size. Then, click the "**Add mount point**" button.

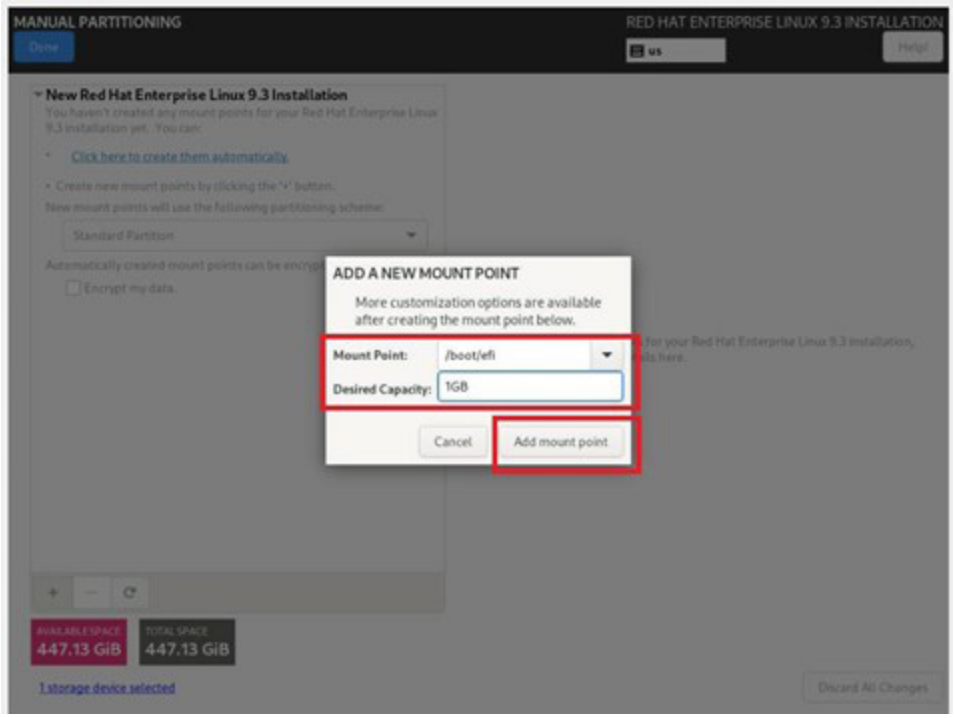

Result: The new mount point "**/boot/efi**" will be added under the "**New Red Hat Enterprise Linux 9.3 Installation**".

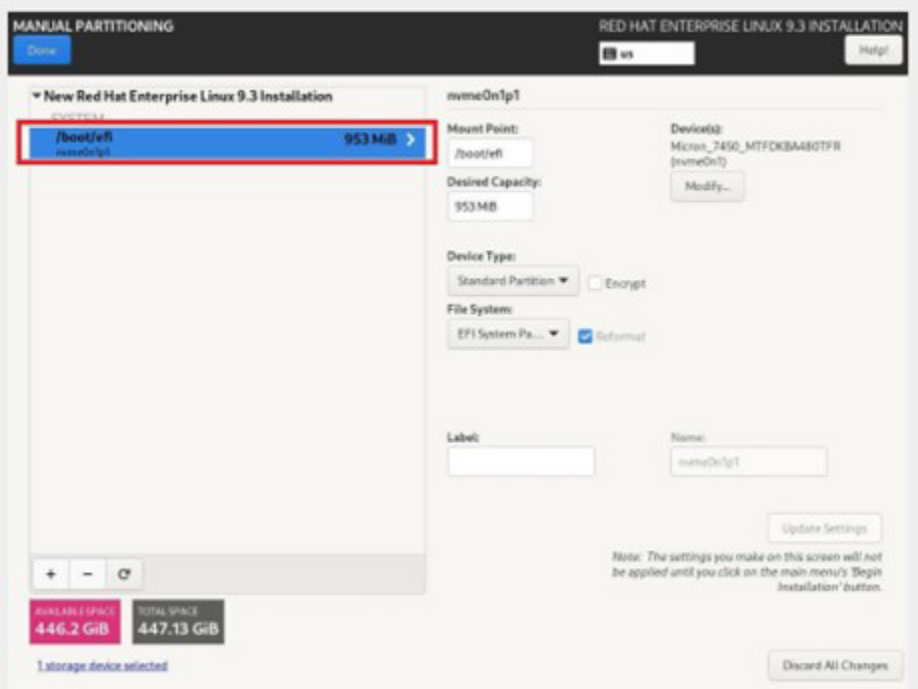

9. Click the "**+**" button to create another new mount point "**/**" as the root directory. Configure the mount point "**/**" and the desired storage size. Then, click the "**Add mount point**" button.

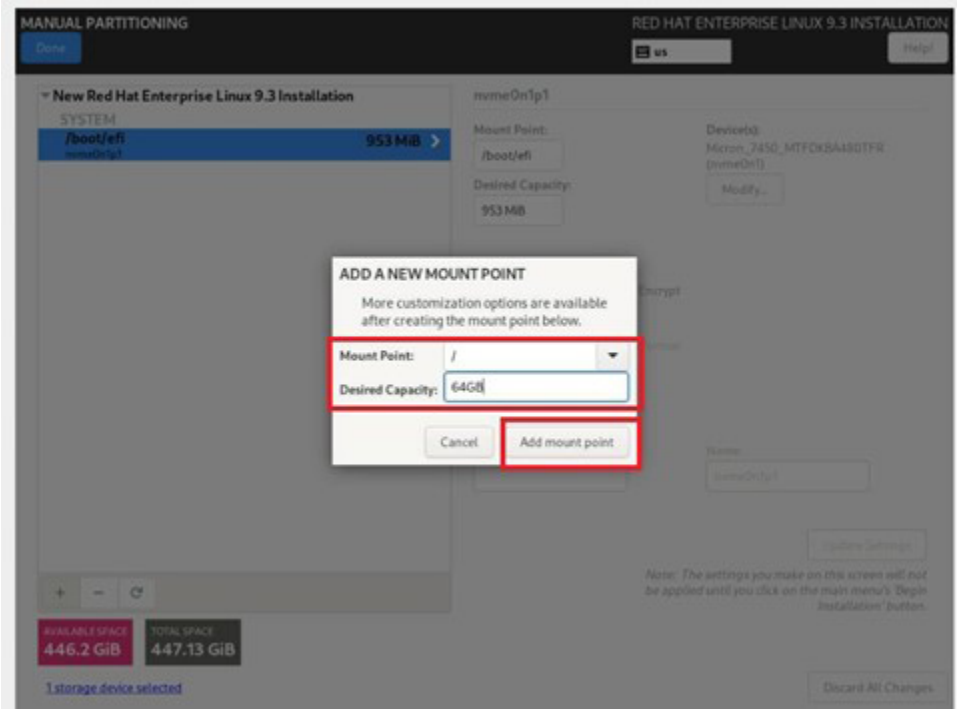

Result: The new mount point "**/**" will be added under the "**New Red Hat Enterprise Linux 9.3 Installation**".

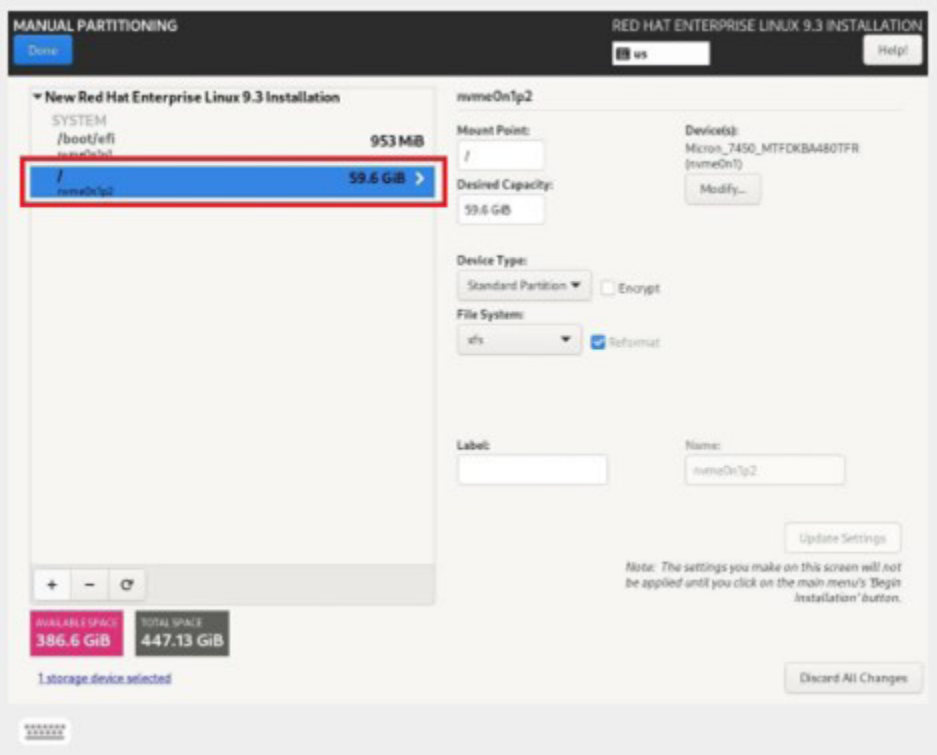

10. Click the "**+**" button to create another new mount point "**swap**" for virtual memory space. Configure the mount point "**swap**" and the desired storage size. Then, click the "**Add mount point**" button.

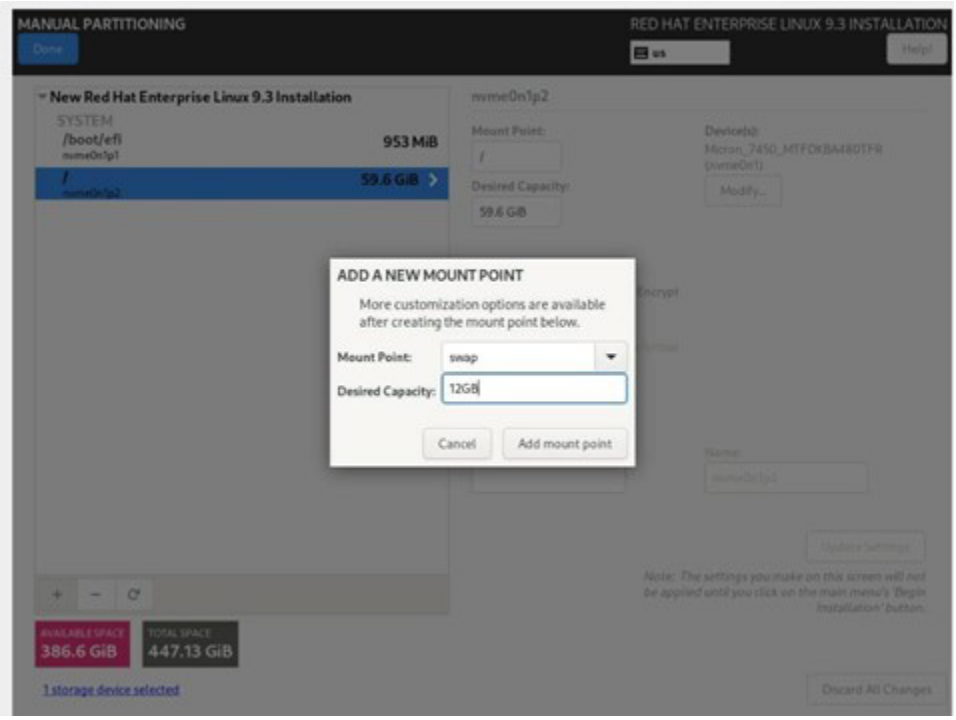

Result: The new mount point "**swap**" will be added under the "**New Red Hat Enterprise Linux 9.3 Installation**".

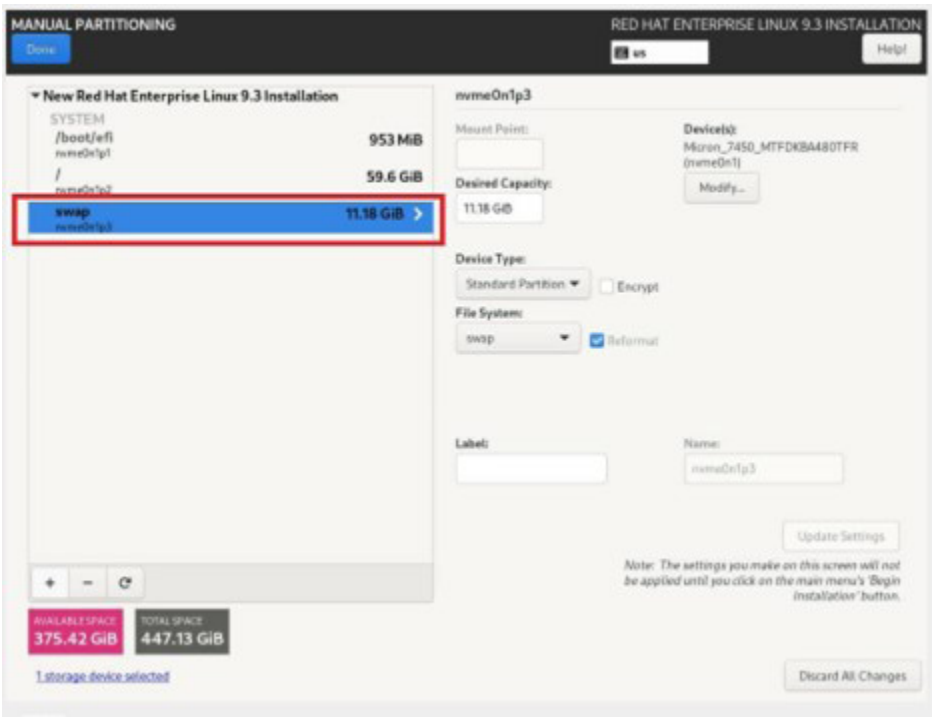

11. Click the "**Done**" button at the left top corner after all the required partitions are created.

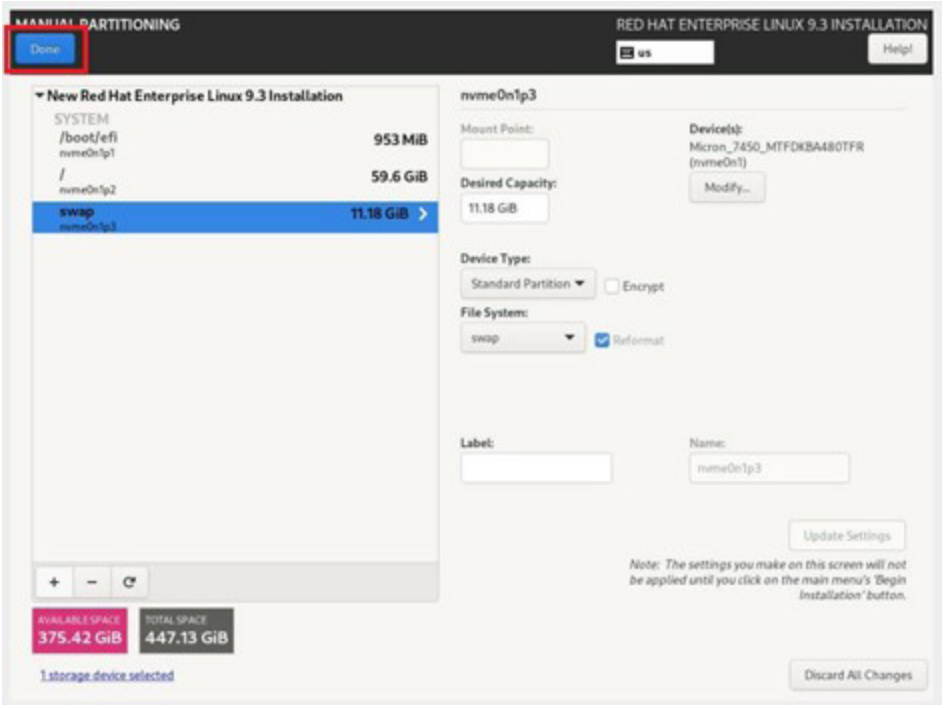

12. Accept the changes to customize the partitions.

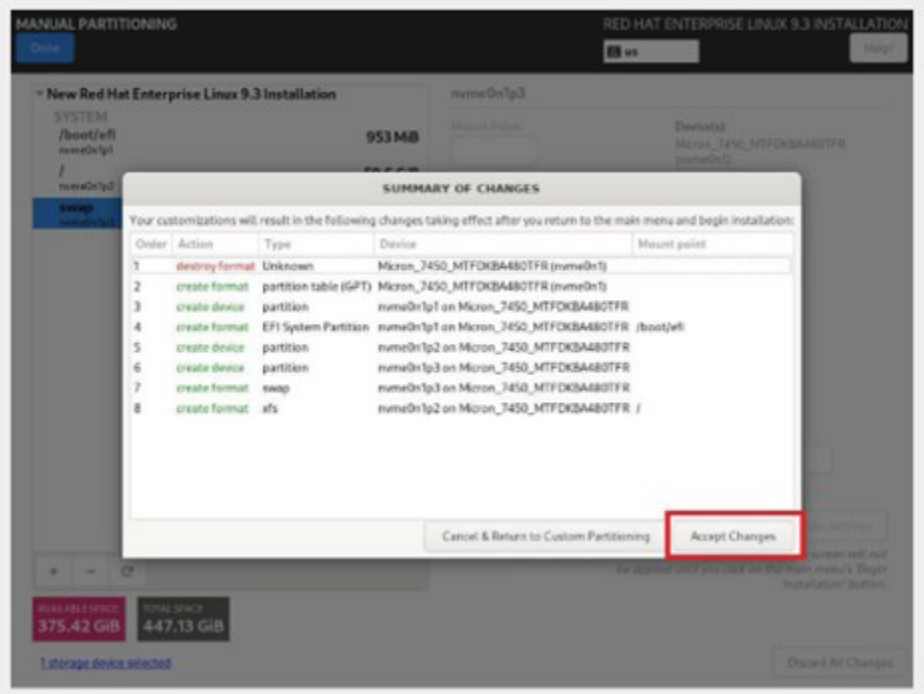

Result: In the "**Installation Summary**" screen, Installation Destination has been updated to "**Custom partitioning selected**."

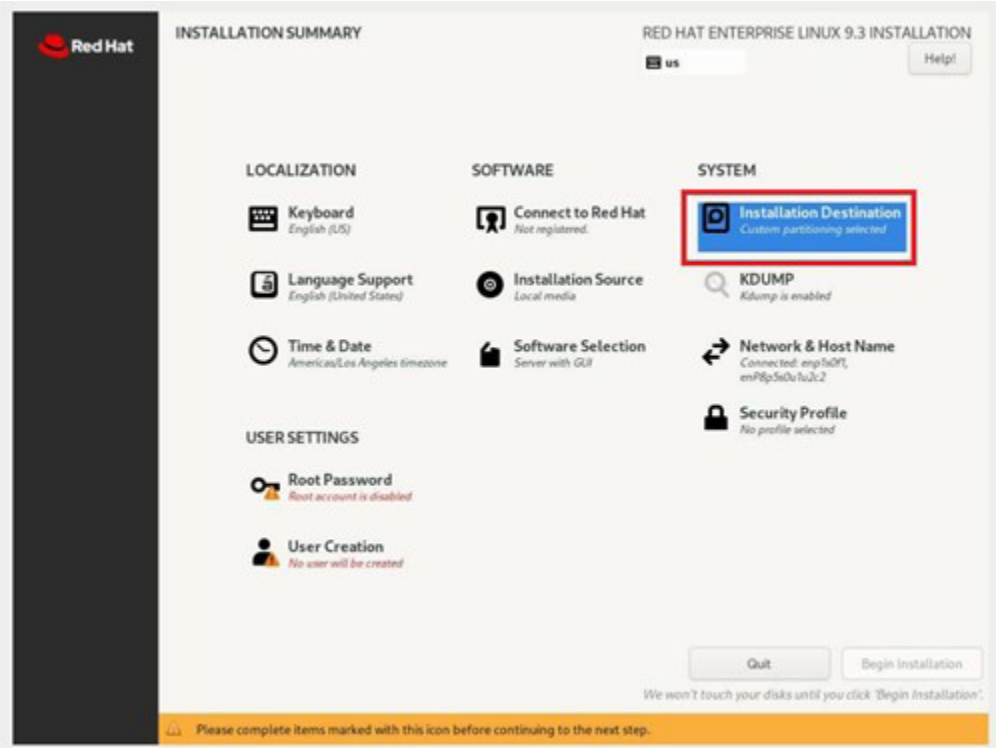

13. Click the "**Root Password**" in the "**Installation Summary**".

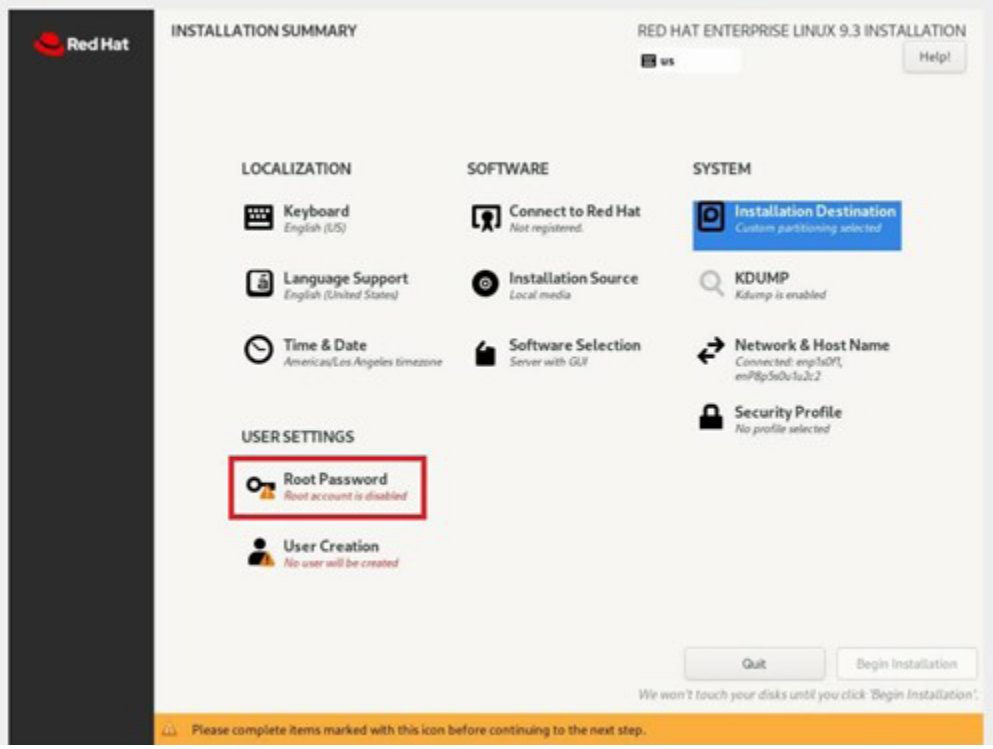

14. Enter the password for the root user.

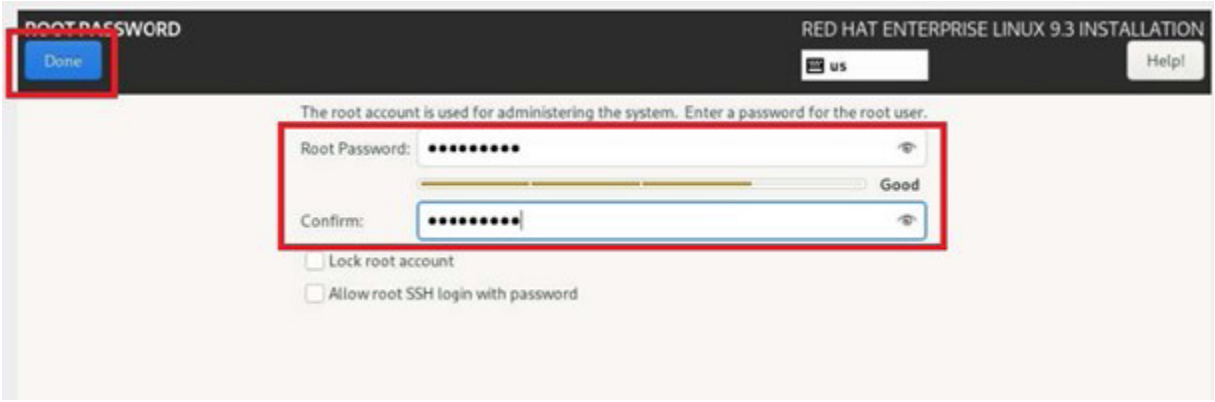

Result: The status of the Root User becomes "**Root Password is set**".

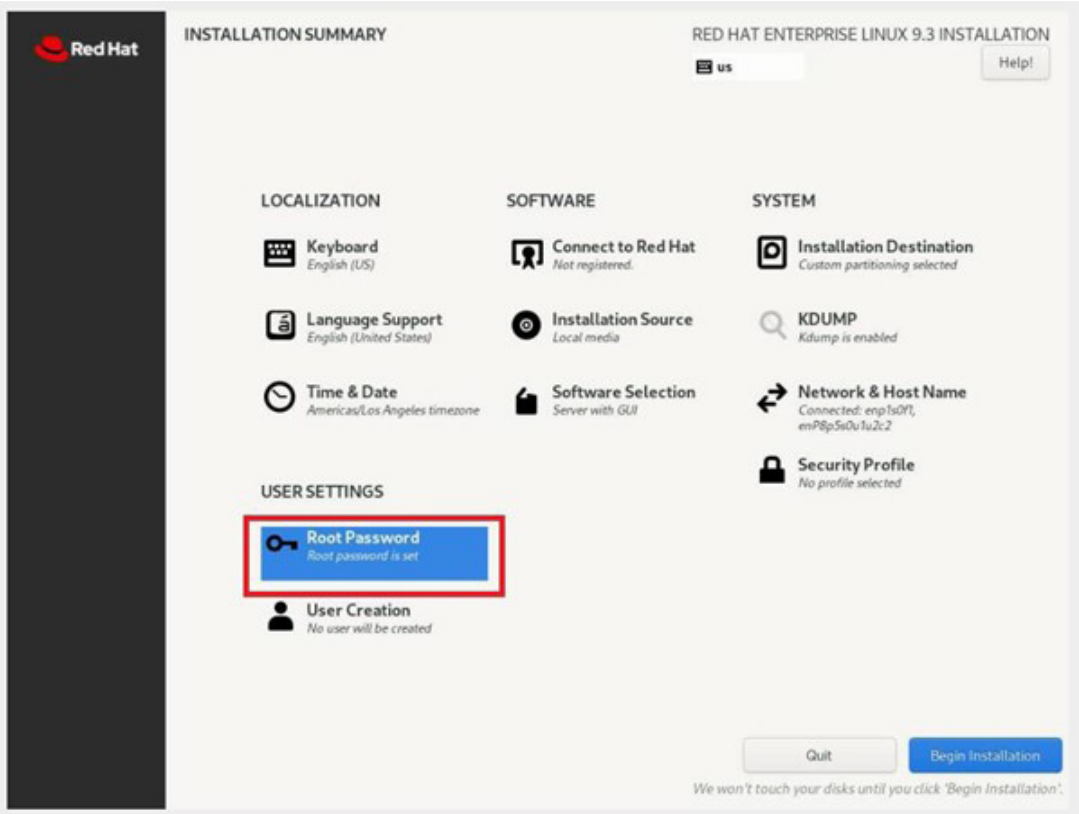

15. Click the "**User Password**" in "**Installation Summary**".

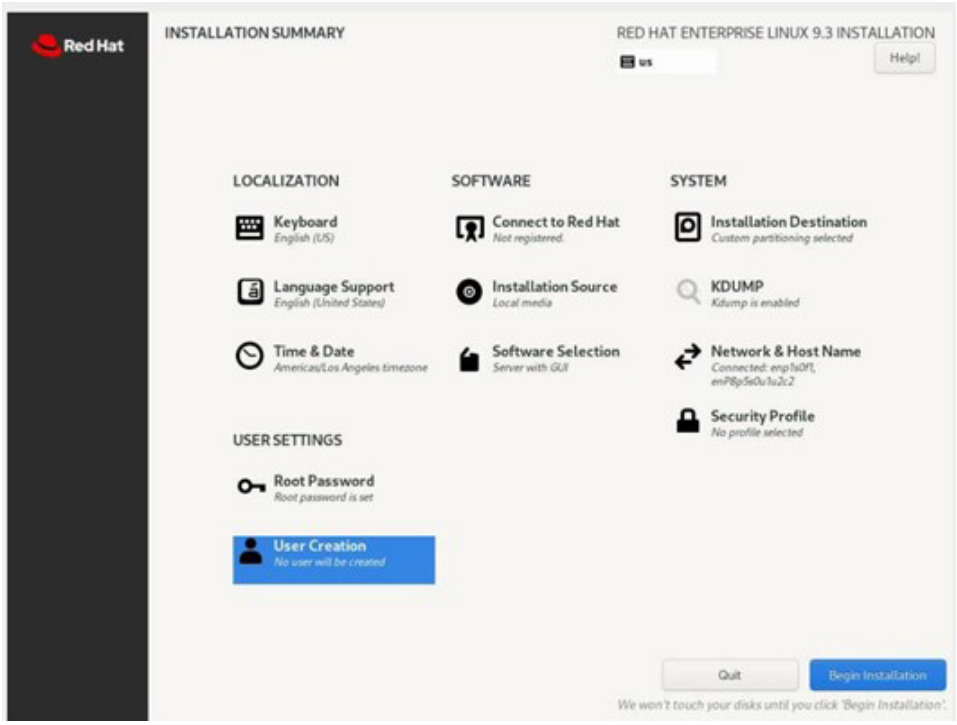

16. Enter "**Full Name**", "**User Name**" , "**Password**", and "**Confirm Password**" details. Once done, click the "**Done**" button.

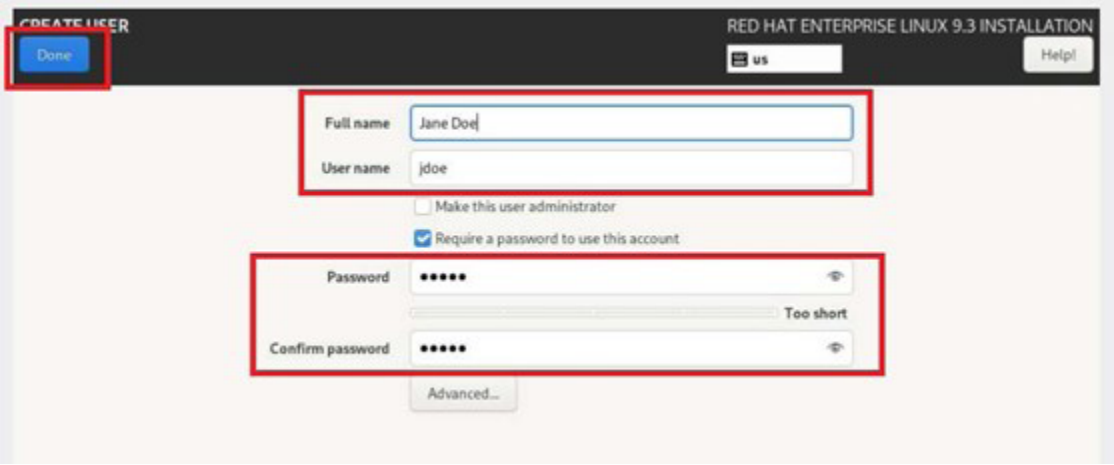

Result: The status of User Creation becomes "**User username is set**".

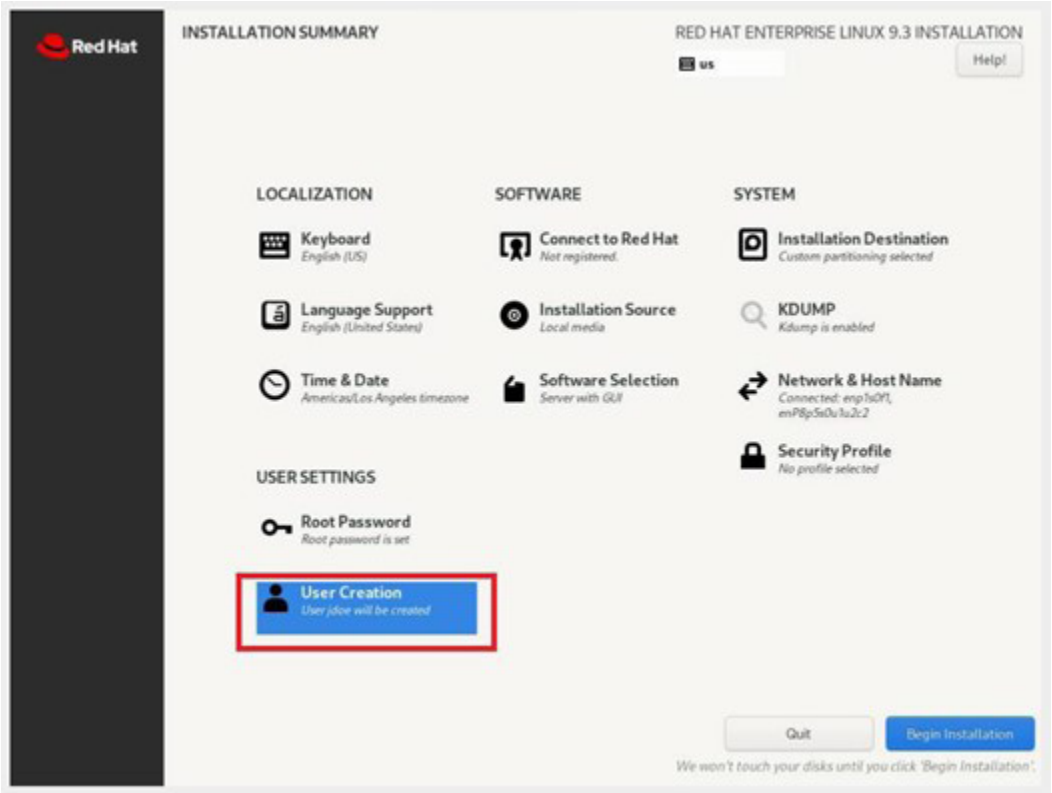

17. After completing all the above steps, click the "**Begin Installation**" to start the installation process.

Note: To get a Red Hat Enterprise Linux version without a graphical user interface (GUI), you need to choose the "Minimal Install" option during installation, which will only install the core system components without any desktop environment like GNOME; essentially providing a text-based interface for server management.

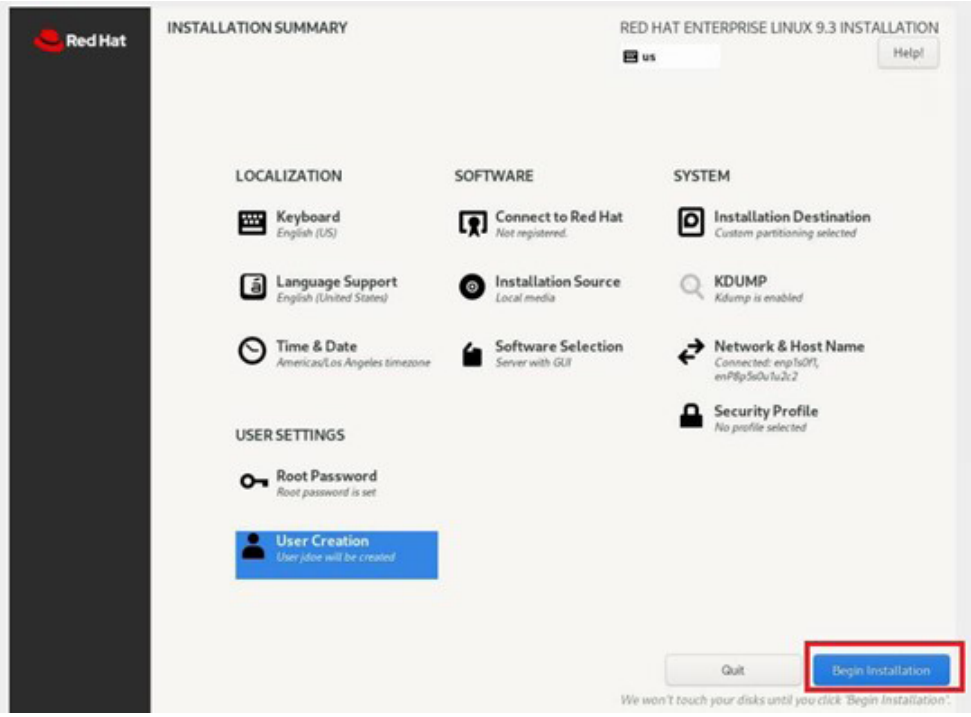

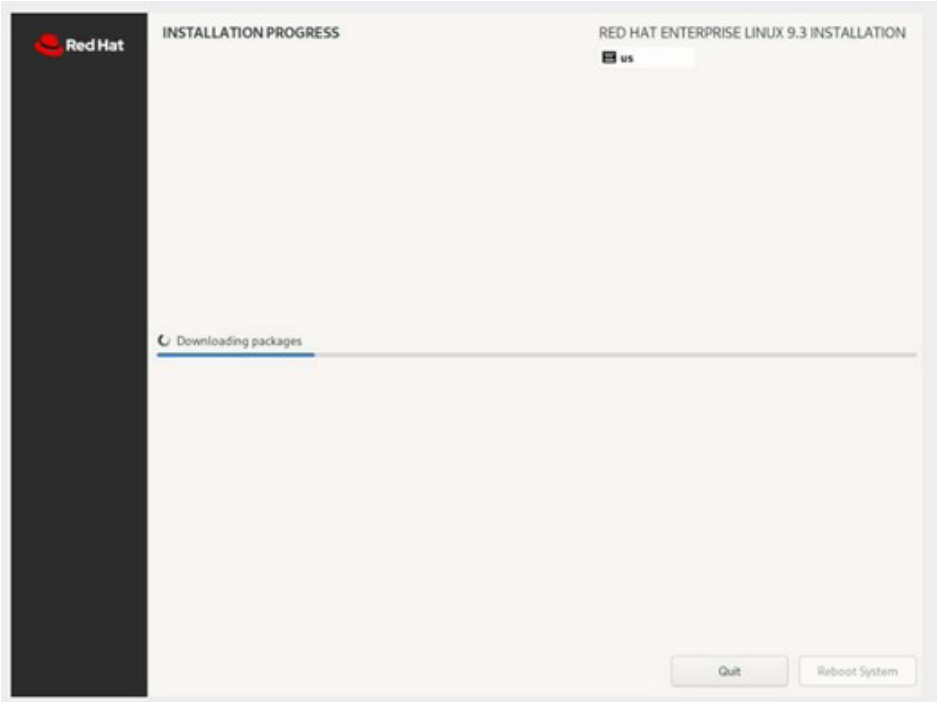

18. After the installation is complete, click the "**Reboot System**" to reboot.

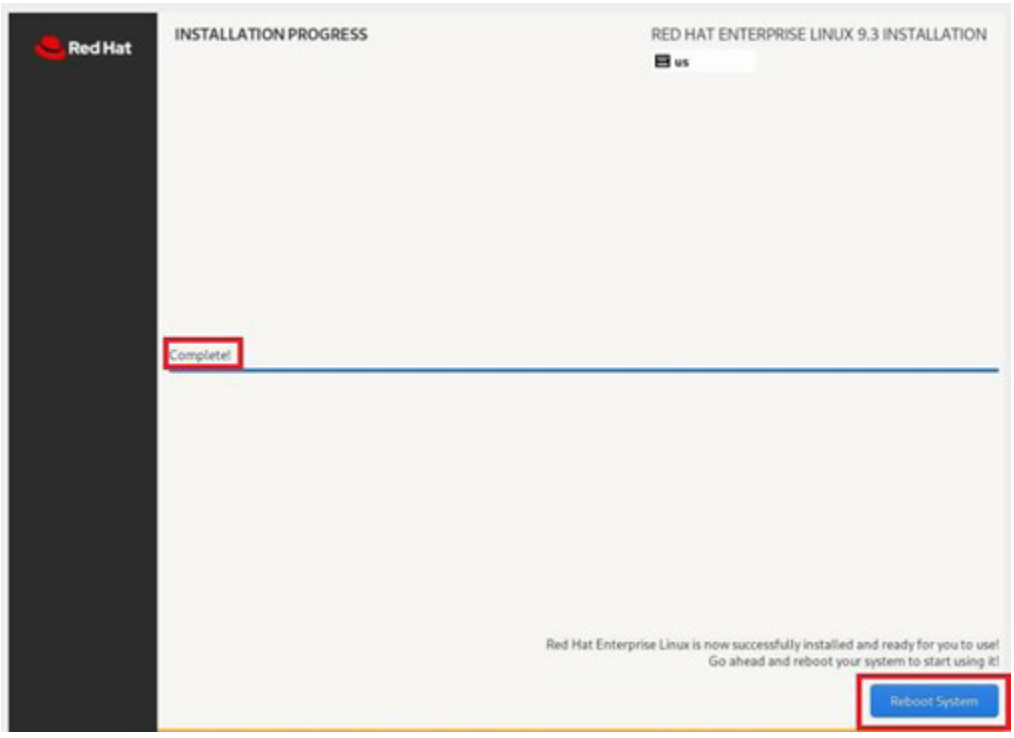

19. After rebooting, the user login page shows up. Enter the user password to log in.

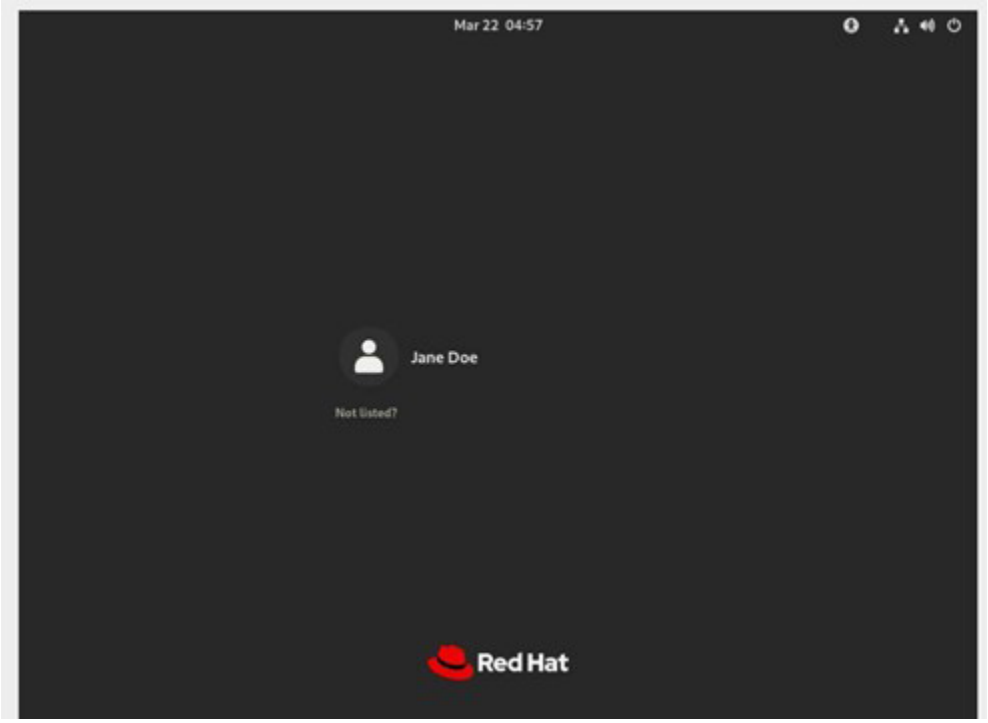

Result: Log in successfully. You can start using this system.

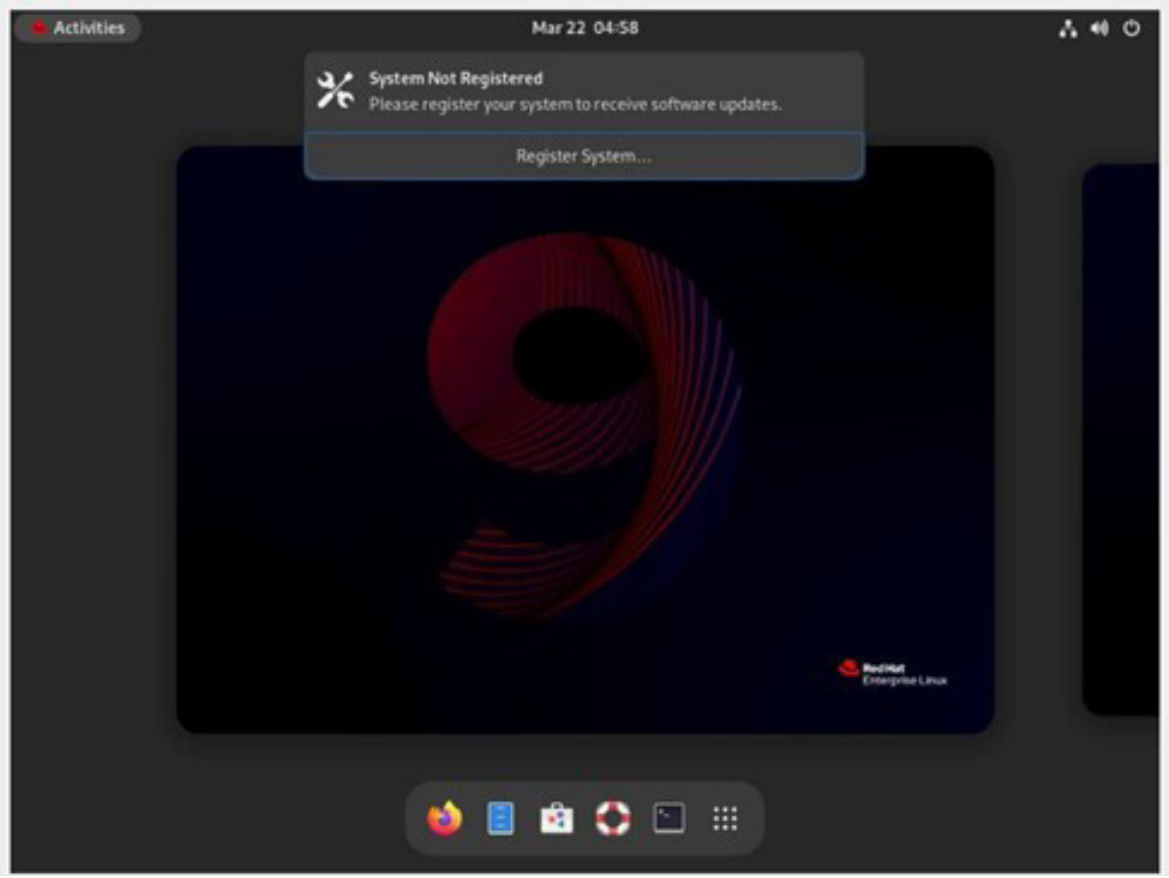

5.3 SUSE Linux Enterprise Server (SLES) 15 SP5 Installation

Prerequisites

SLED 15 SP5 ISO Image

Obtain the SLES 15 SP5 ISO for AMD64 CPU architecture (x86_64) and save it to your local drive or a shared server.

BMC Network Connection

To utilize the BMC remote functionality, ensure that the network is connected to the BMC.

Installing SLES 15 SP5 OS

Step 1. Obtaining the BMC IP Address

Connect the system to a monitor or display using a VGA port or a DisplayPort (Mini DP). Ensure that network is connected to BMC using a network cable and power on the system. The BMC IP address will appear on the right corner of the Supermicro Logo screen.

Step 2. Accessing the BMC Remote Server

Log in to BMC Remote Server

1. In the terminal, execute a ping command to the BMC IP address, such as 10.184.13.17, to verify its connectivity.

2. Launch a new web browser and input the BMC IP address into the URL field.

Outcome: The BMC Remote Console login screen will be displayed.

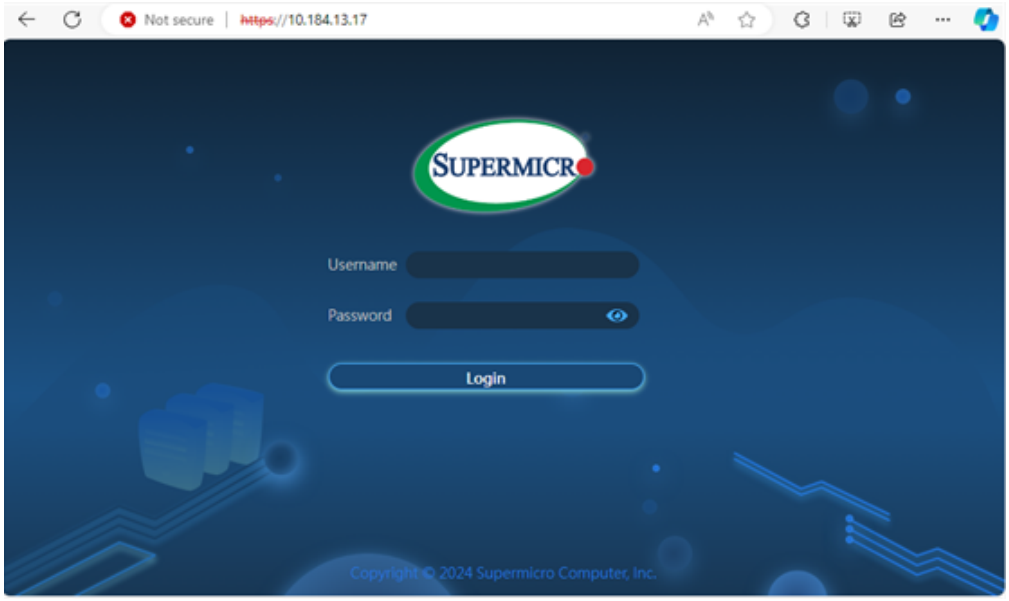

3. Input the username "**ADMIN**" and the unique BMC password, which is located on the label on the opposite side of the service tag of the system. Click the "**Login**" to proceed.

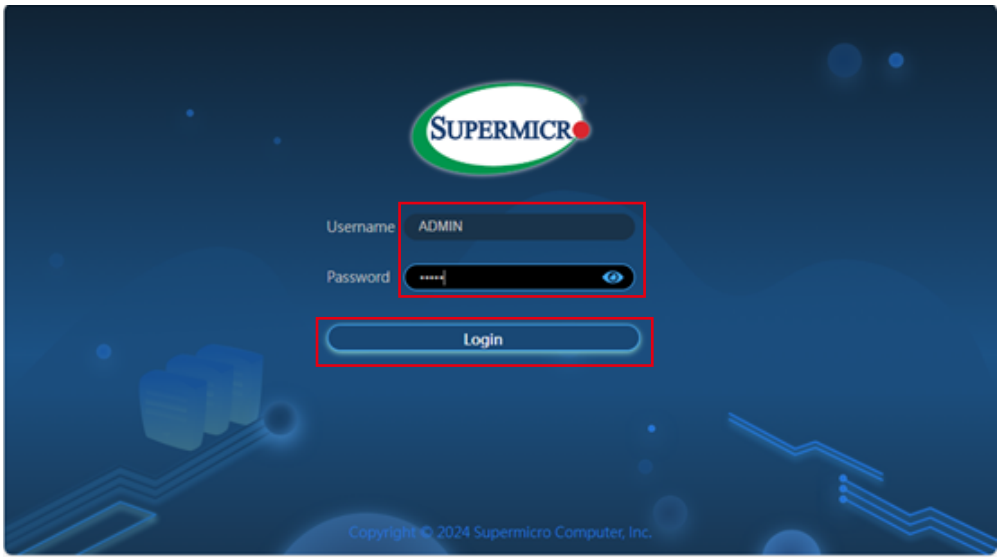

Outcome: The BMC Dashboard offers insights into system overview, configuration, health status, and maintenance.

Step 3. Controlling the System Remotely

1. The Remote Control menu in the BMC Remote Server enables remote server operations.

2. Use the Launch Console section to configure the remote console interface settings. Choose between the HTML5 interface or a JAVA plug-in. Launch an HTML5 remote browser.

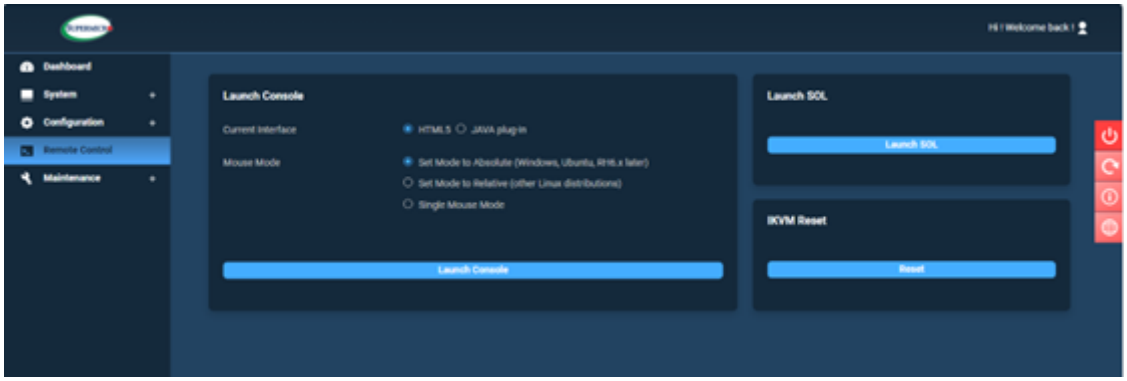

To launch an HTML5 Remote Browser

1. Set HTML5 as the current interface.
2. Choose the mouse mode according to your operating system, such as "**Set Mode to Absolute" (Windows, Ubuntu, RH6.x, or later).**"
3. Click the "**Launch Console**" button to open a console in a new browser window.

Step 4. Mounting the ISO Image

There are two methods to mount ISO images. If the ISO files are stored locally on your drive, you can mount them directly within the remote control browser. Alternatively, if the ISO files are located on a shared server, you can mount them via the Configuration > Virtual Media menu.

Method One: Mounting the ISO Image Using a Local File

1. In the remote control browser, click the "**Virtual Media**" icon. This action will prompt a dialogue box to appear, enabling you to select the image type and files for mounting.

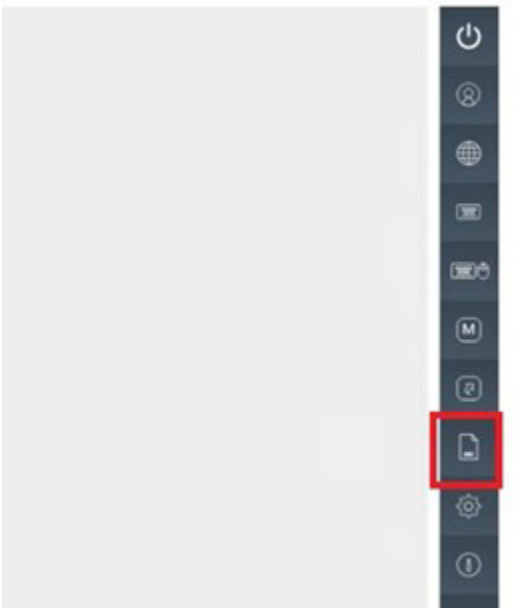

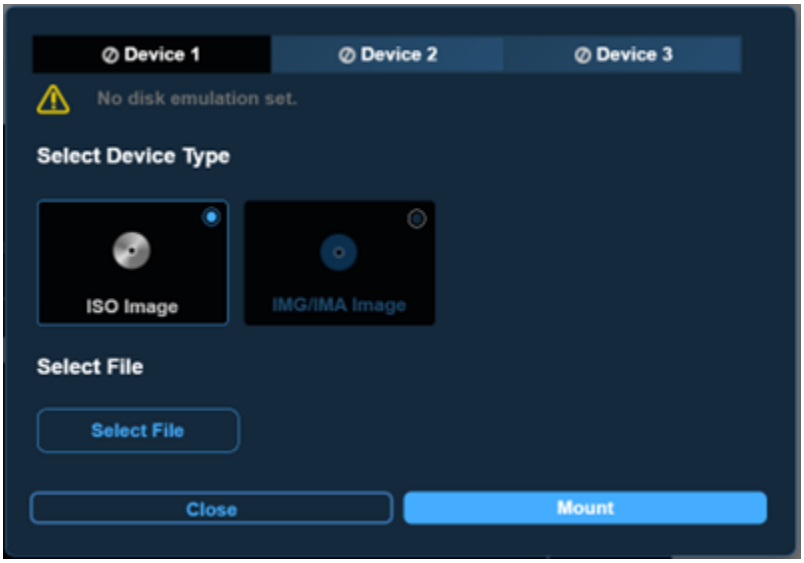

2. Choose the **"Select File"** button to browse and select the SLES ISO image on your local drive for use.

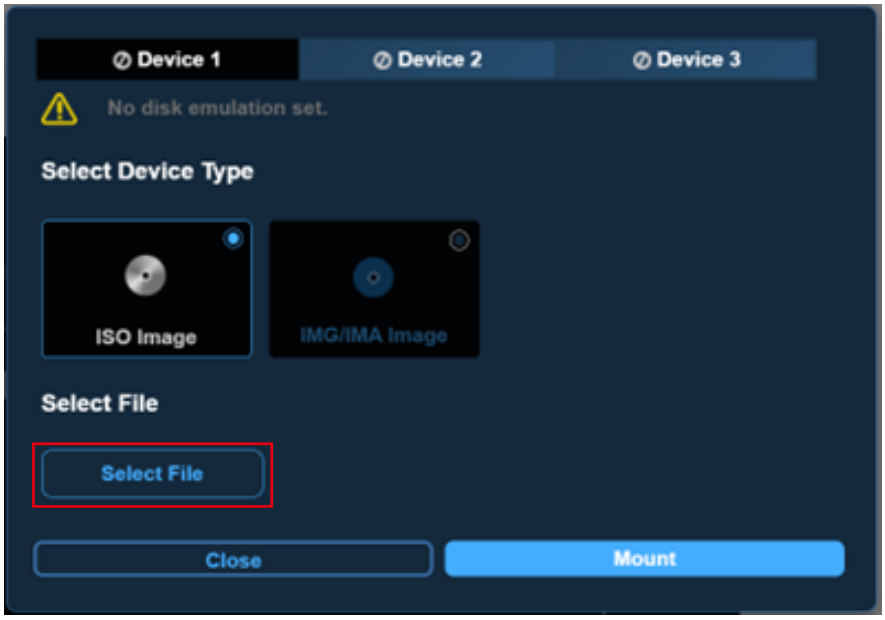

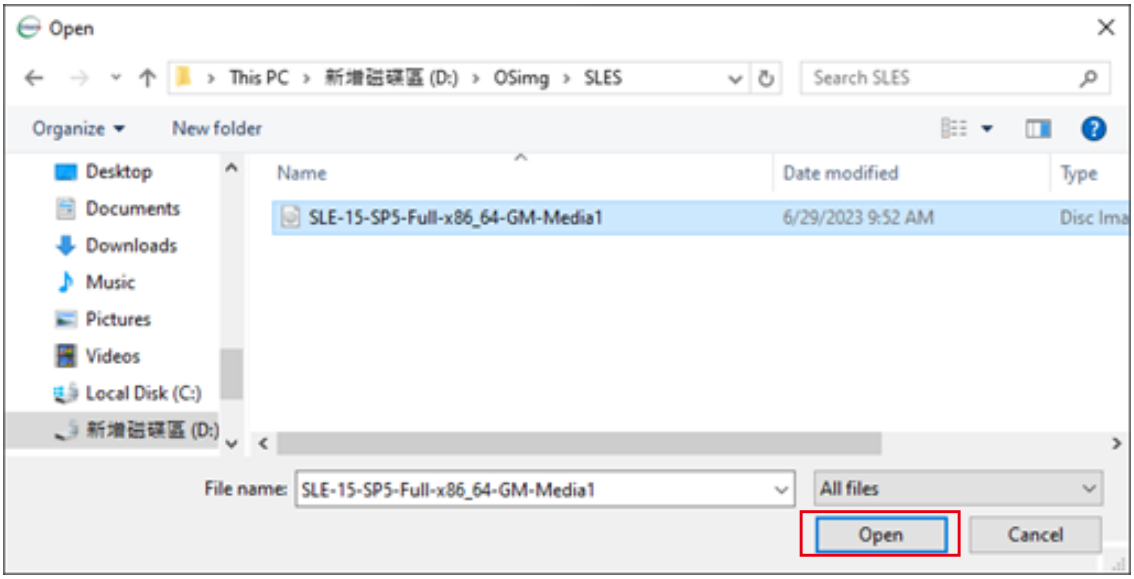

3. Click the "**Mount**" button to attach the chosen ISO image.

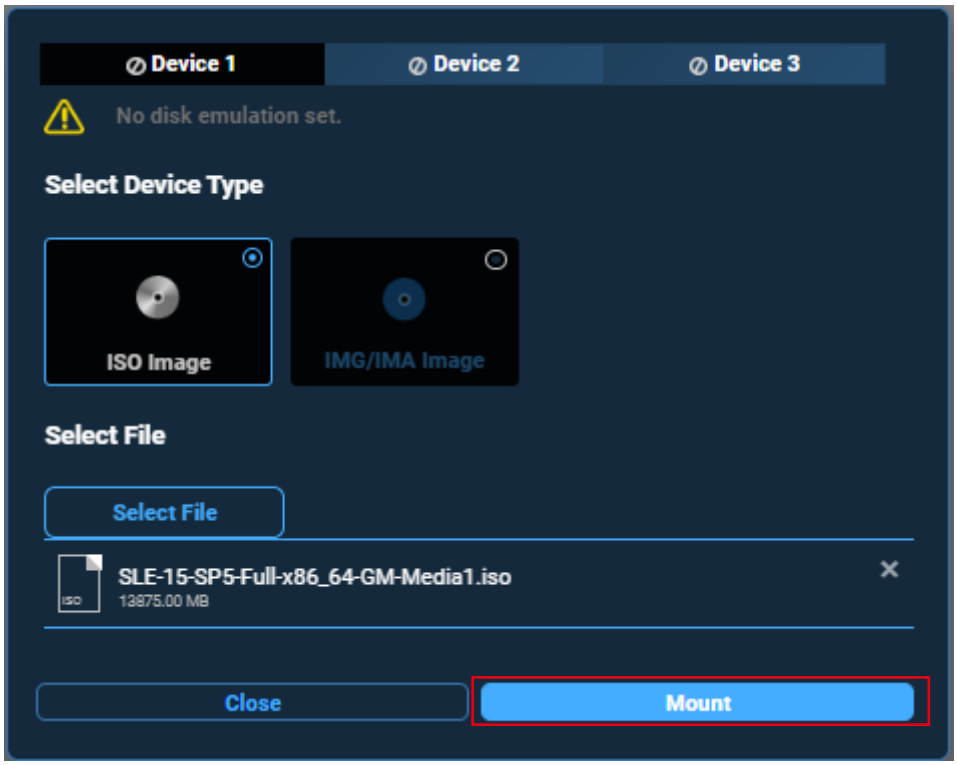

Result: Upon successful mounting of the ISO image, a green indicator will appear in the "**Device**" tab. Close the dialogue to continue.

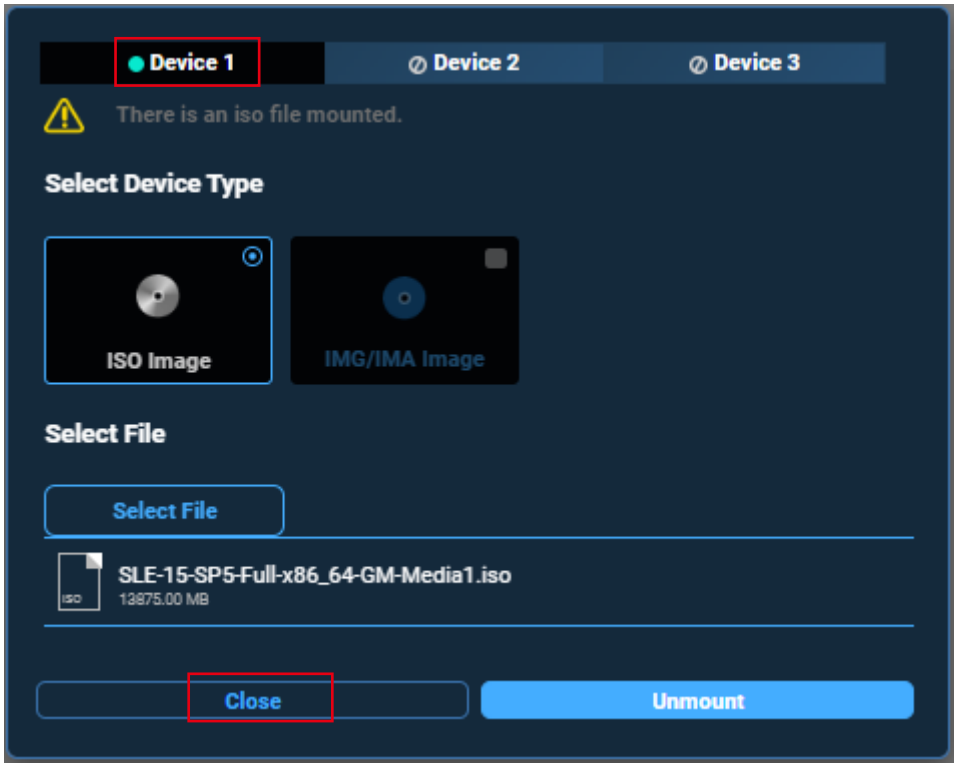

Method Two: Mounting the ISO Image through Shared Server

1. On the BMC dashboard, go to Configuration > Virtual Media. This allows you to attach an ISO image from the server.

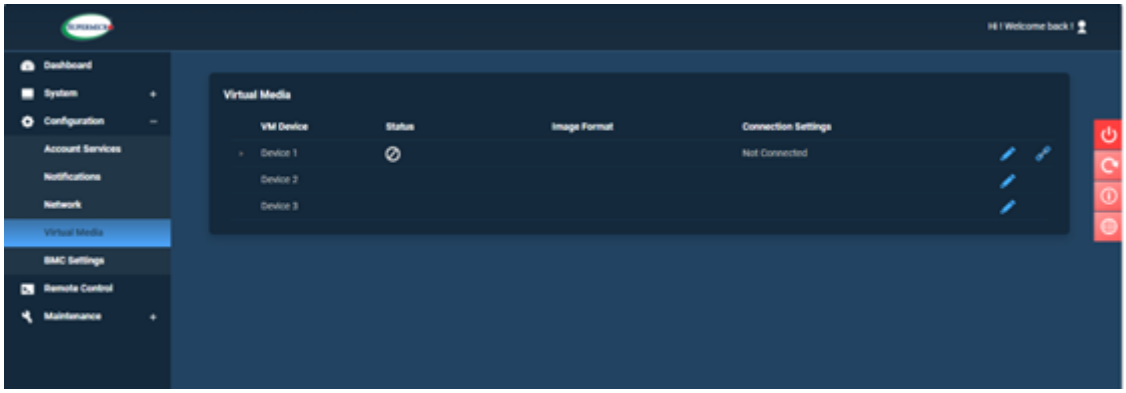

2. Click the "**Edit**" icon to adjust the VM configuration. Enter the server host address and the path to the ISO image. Then, click the "**Save**" to apply the changes.

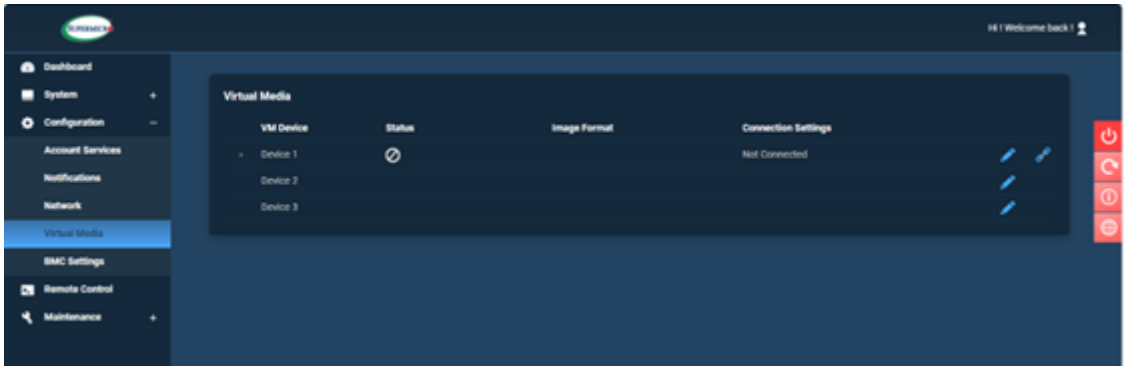

3. Click the "**Connect**" icon to mount the virtual media.

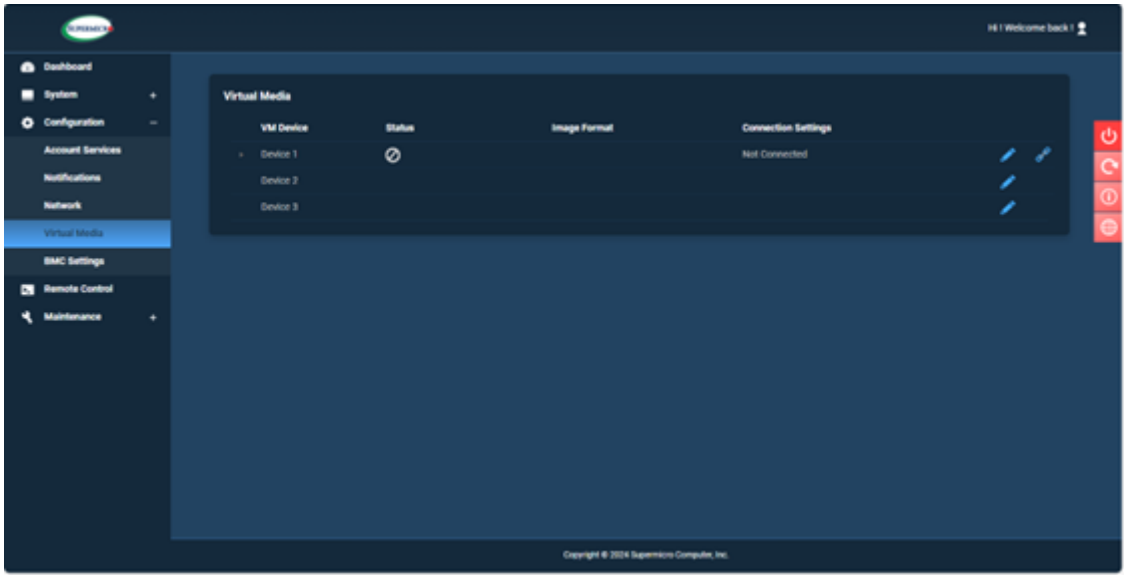

4. The device status will display as green once the VM is successfully configured.

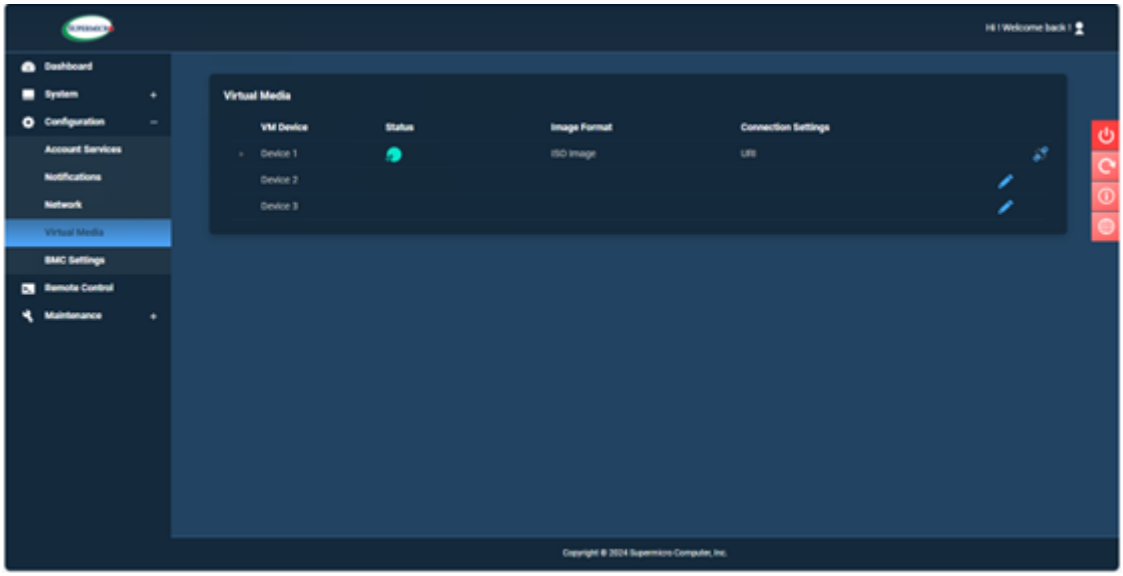

Step 5. Boot from Virtual Media

To boot from the mounted image in virtual media, users must manually select the boot device from the Boot Menu during BIOS POST.

1. Power on the system and wait for the Log screen to display. To access the BIOS setup menu, repeatedly press <**F11**> until "**Invoke Boot Menu**" appears at the bottom left corner of the screen.

Subsequently, the Boot Menu will appear.

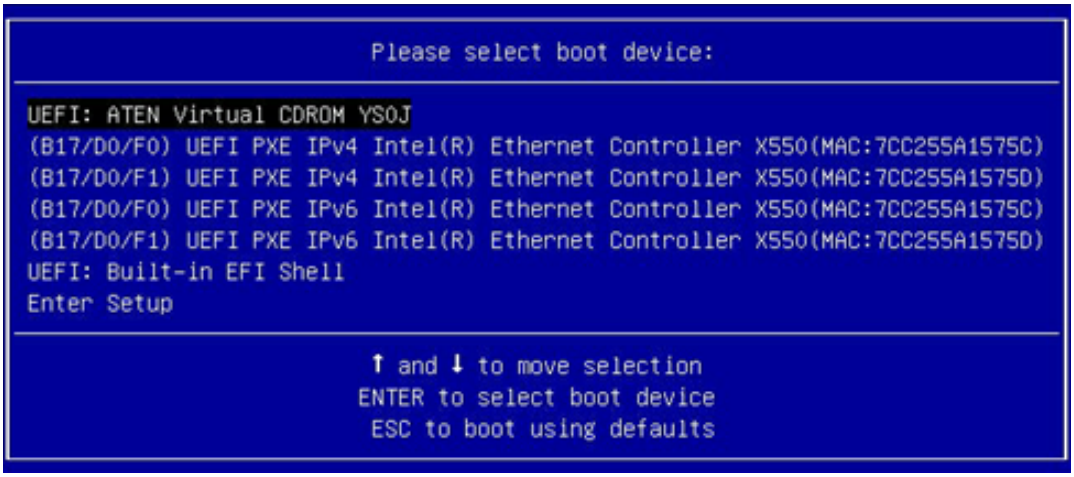

2. Select "**UEFI: ATEN Virtual CDROM YSOJ**" as the boot menu. This option will present the ISO image mounted in Virtual Media. Press "**Enter**" to proceed. You will see the GRUB Menu.

Step 6. Installing SLES 15 SP5 OS

1. Follow the SUSE installer steps to continue the installation. Select "**Installation**" to proceed.

2. Select the **Language**, **Keyboard Layout**, and **Product to Install**.

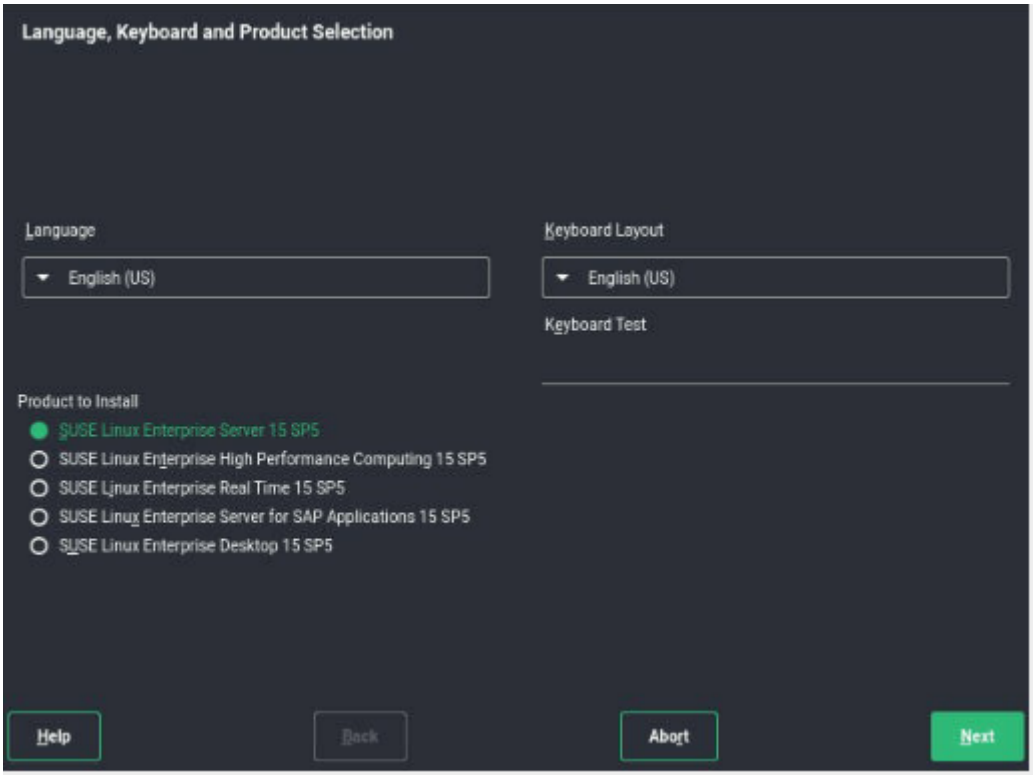

3. Read and agree the License Agreement to continue.

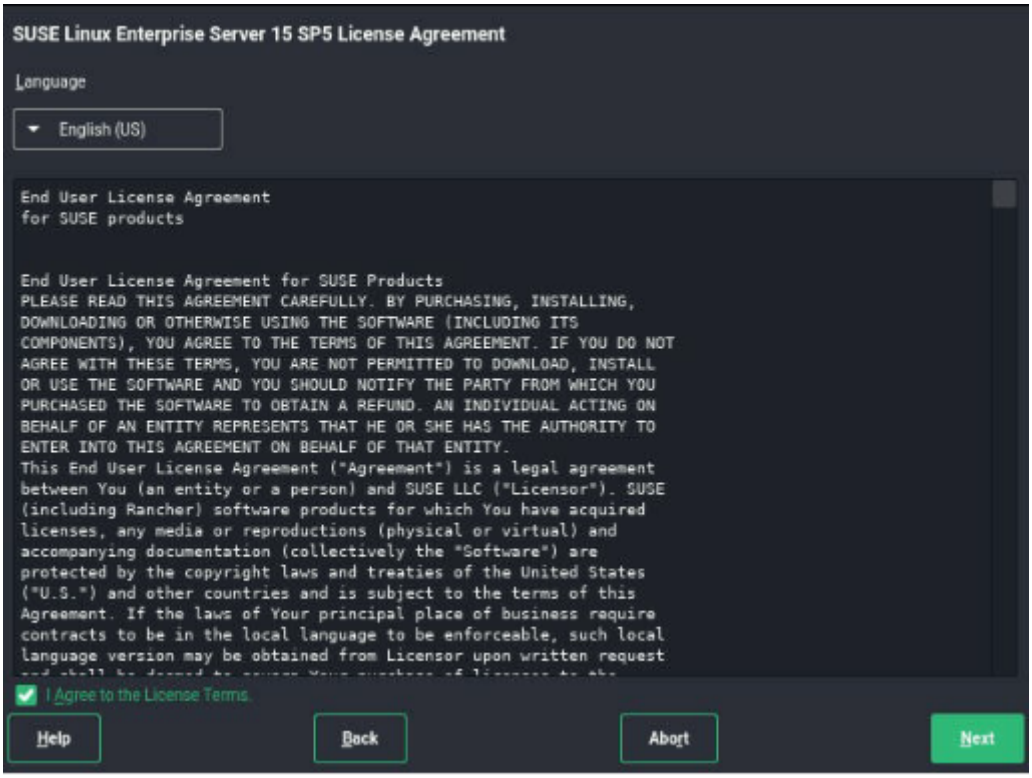

4. Register the system according to the requirements.

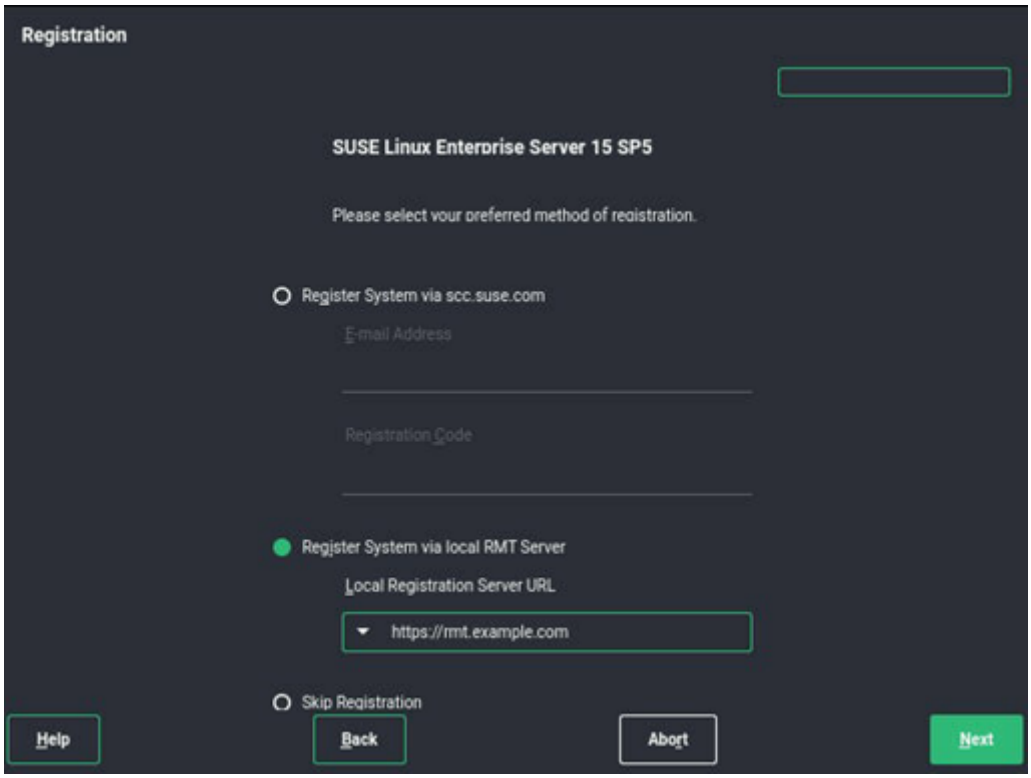

5. Select the Extensions and Modules for installation.

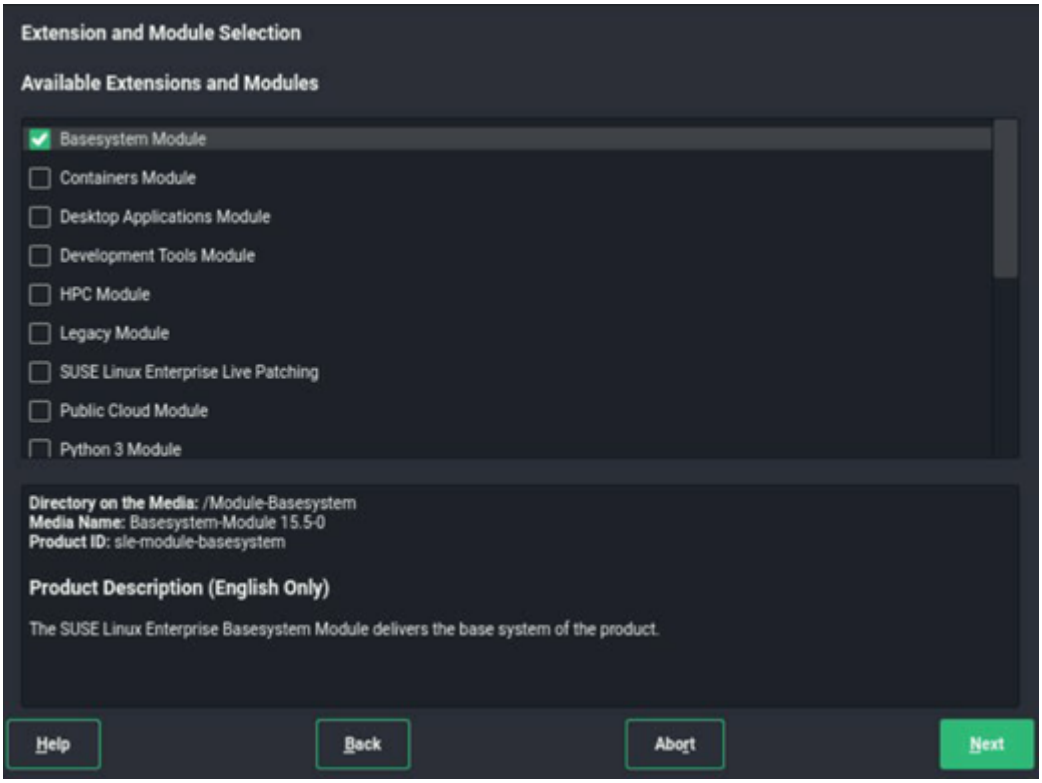

6. Confirm the media sources for the Add-On Product.

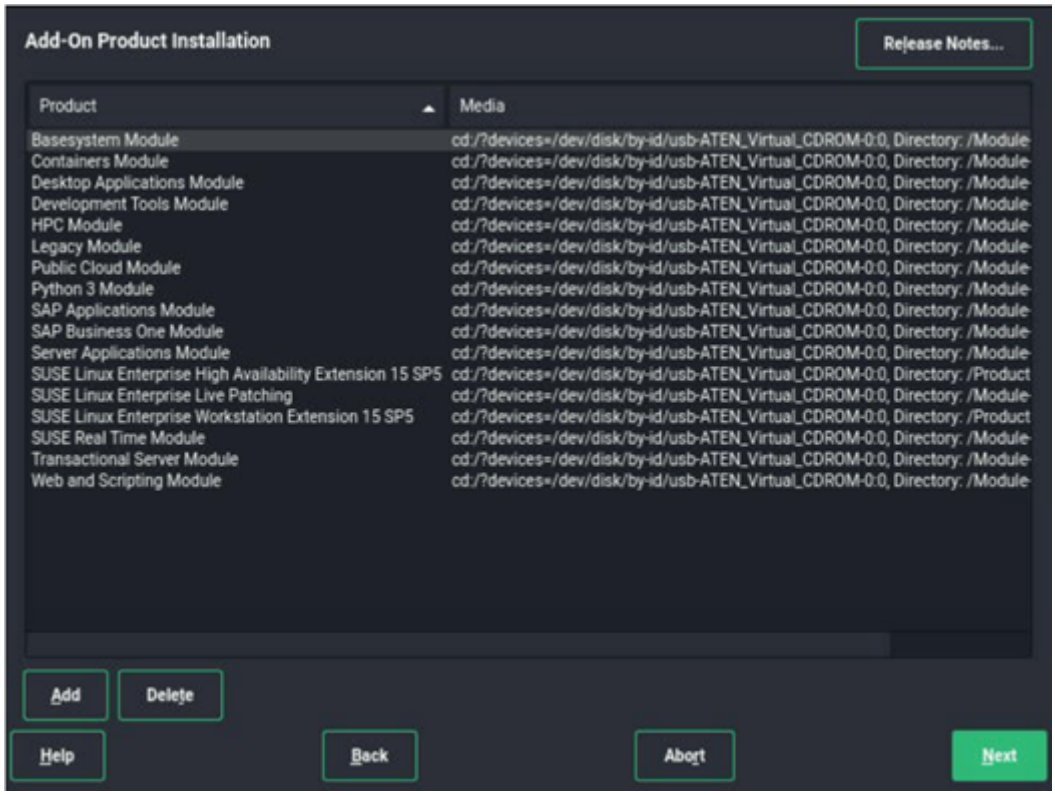

7. Select the System Role.

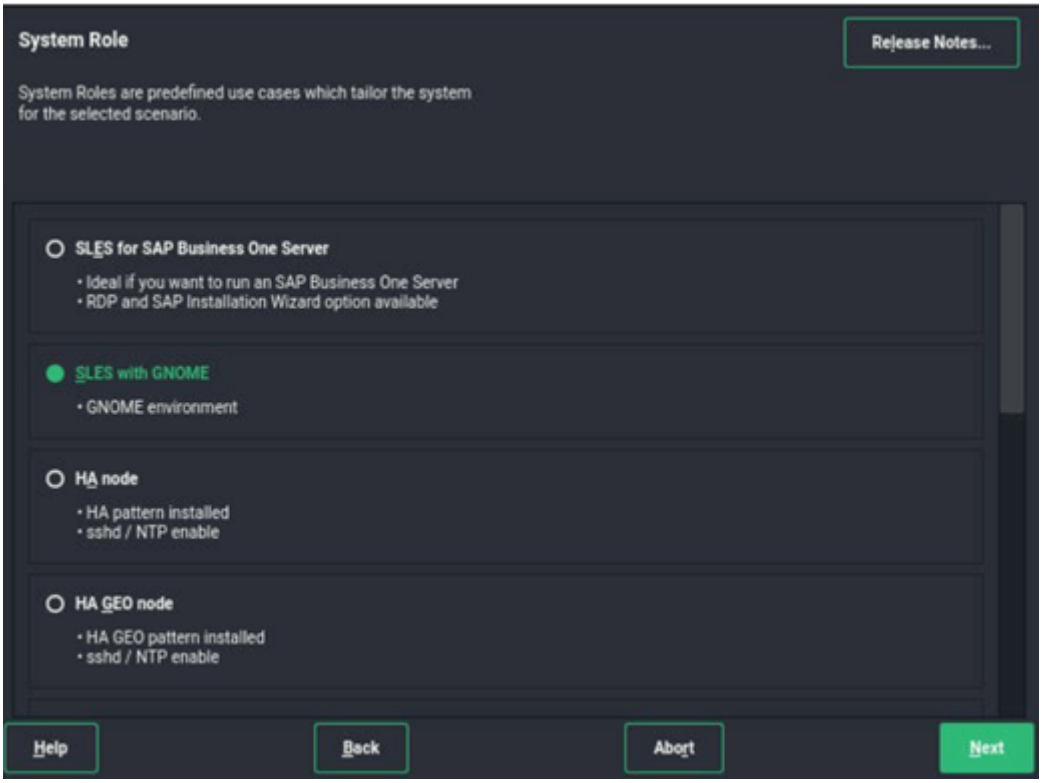

8. Define the partitions.

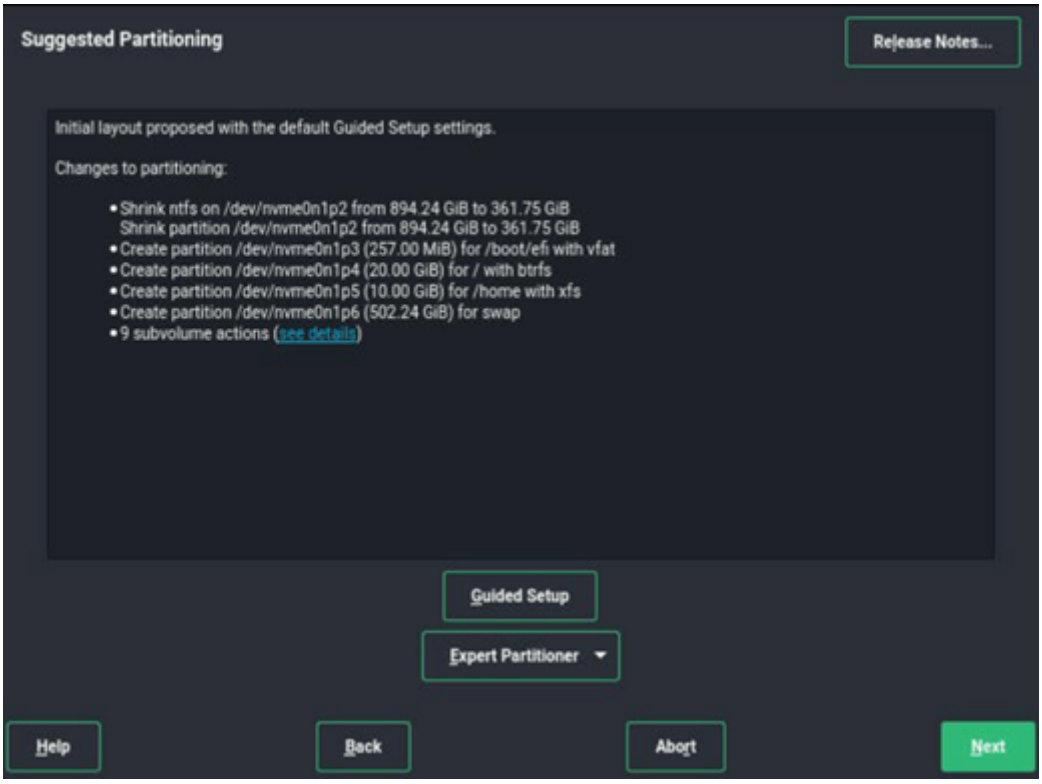

9. Choose the time zone.

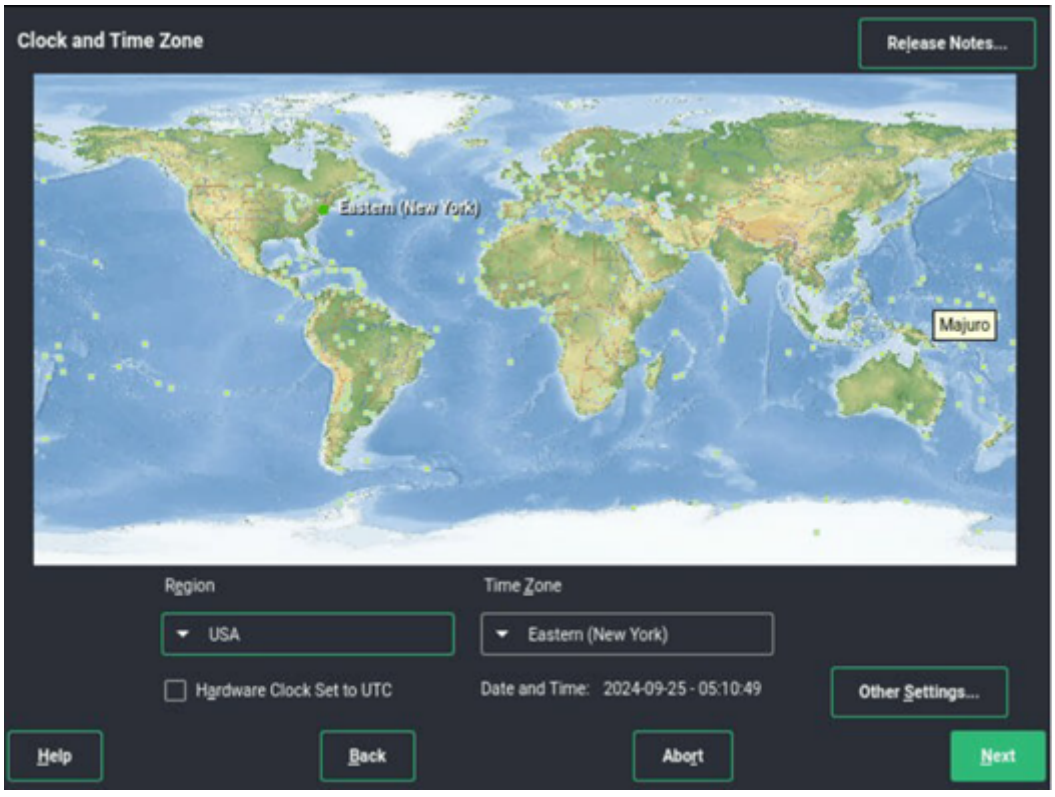

10. Create a new user.

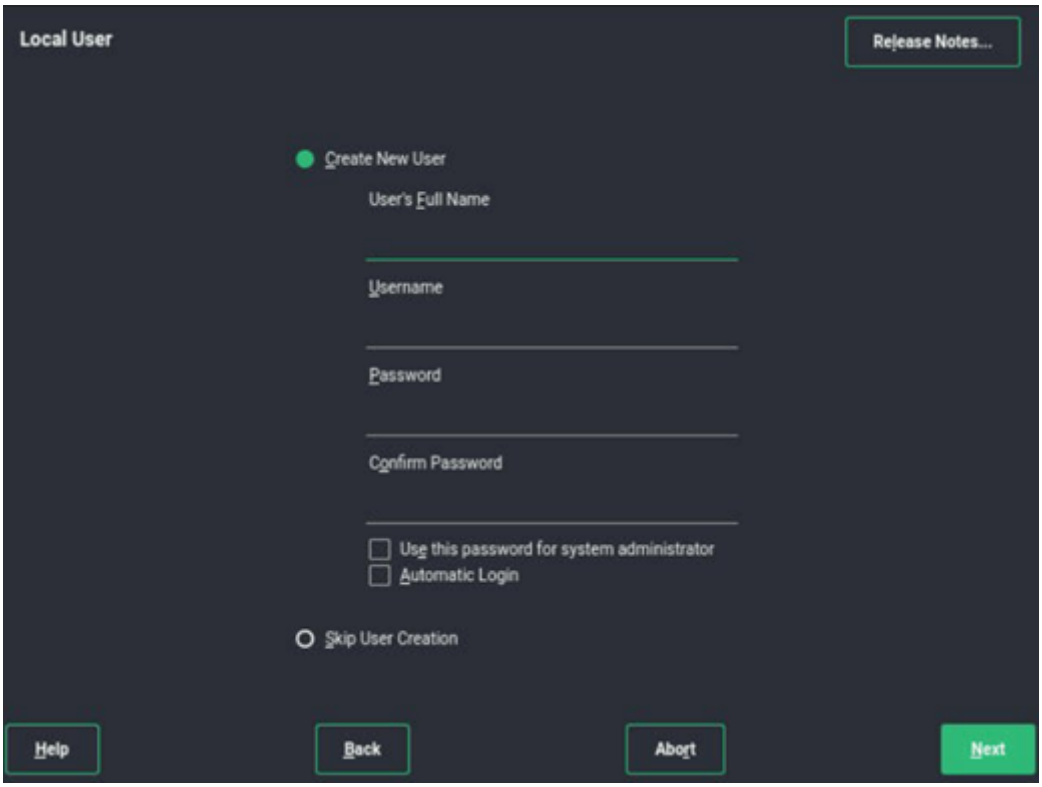

11. Set the password for the system administrator root.

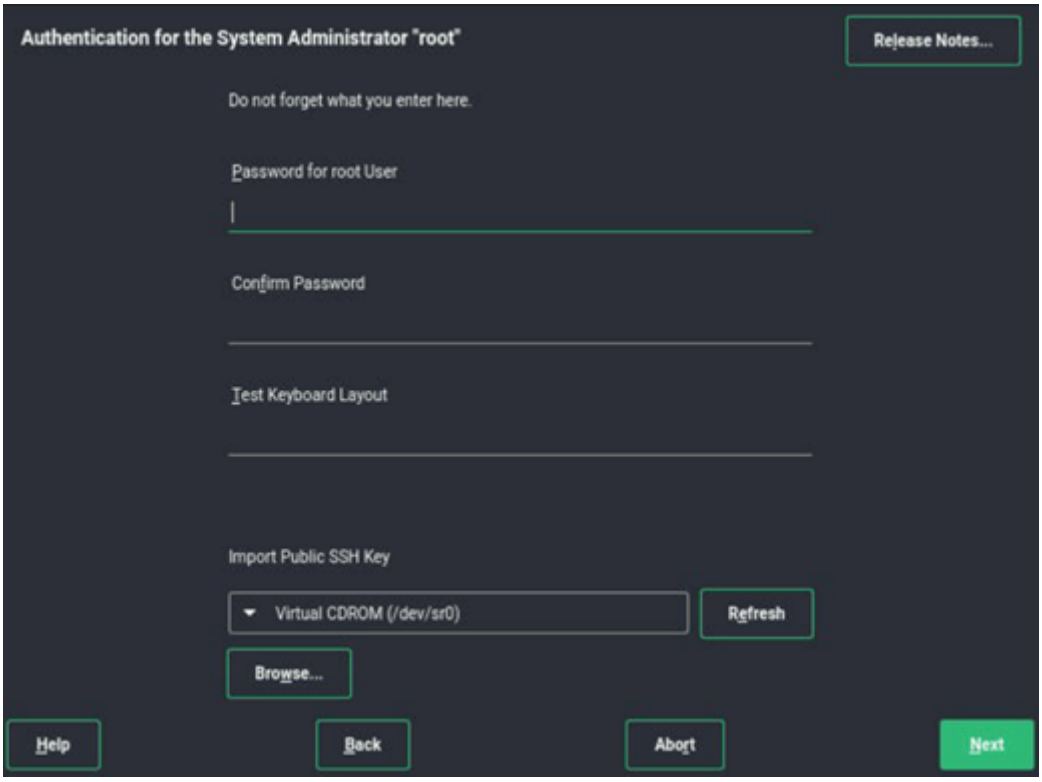

12. Confirm the installation settings before starting the installation.

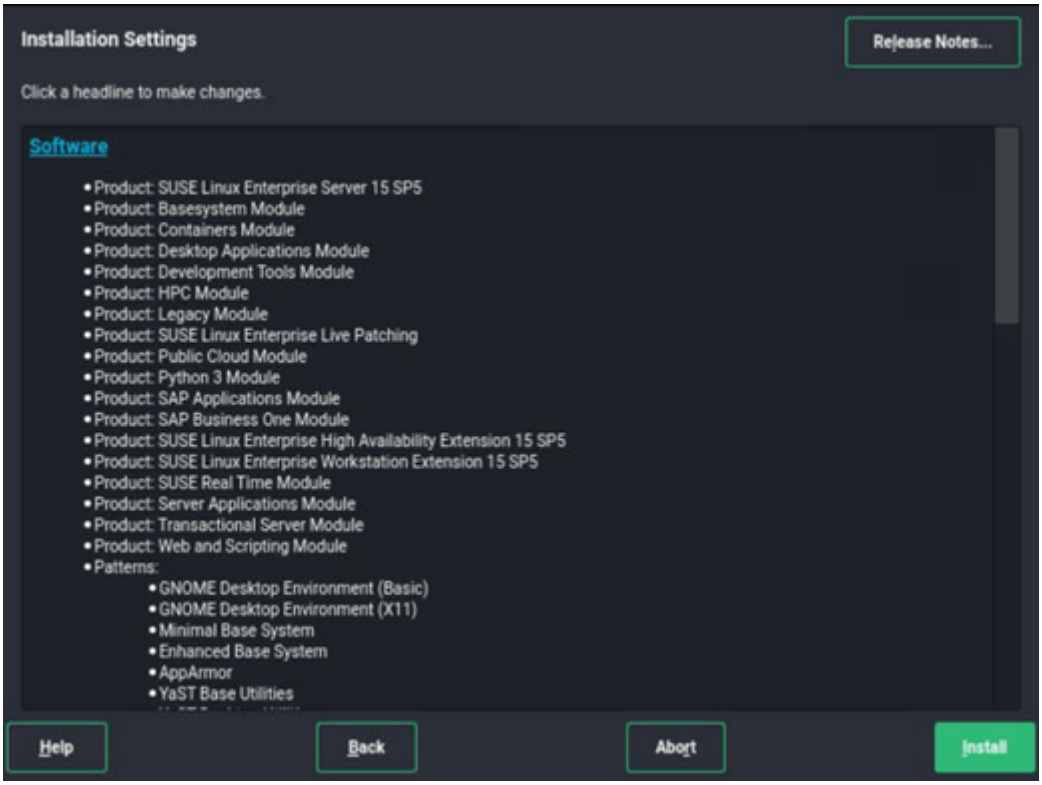

13. Press "**Install**" to begin the installation.

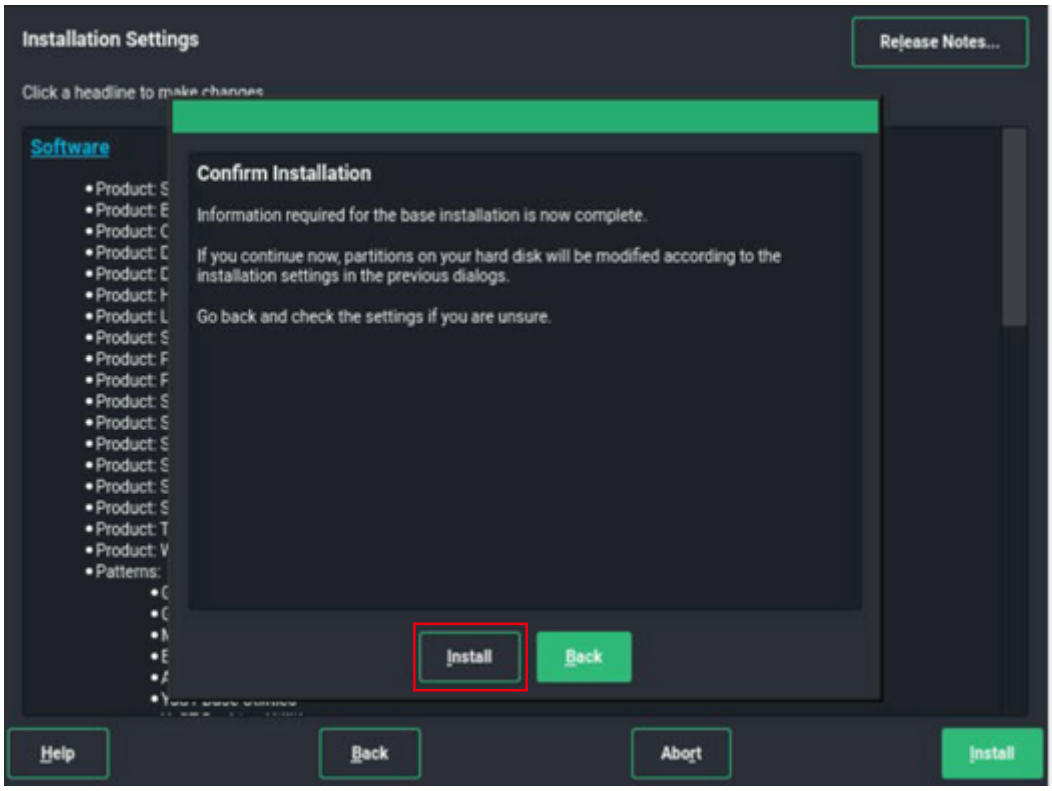

14. The Installation begins.

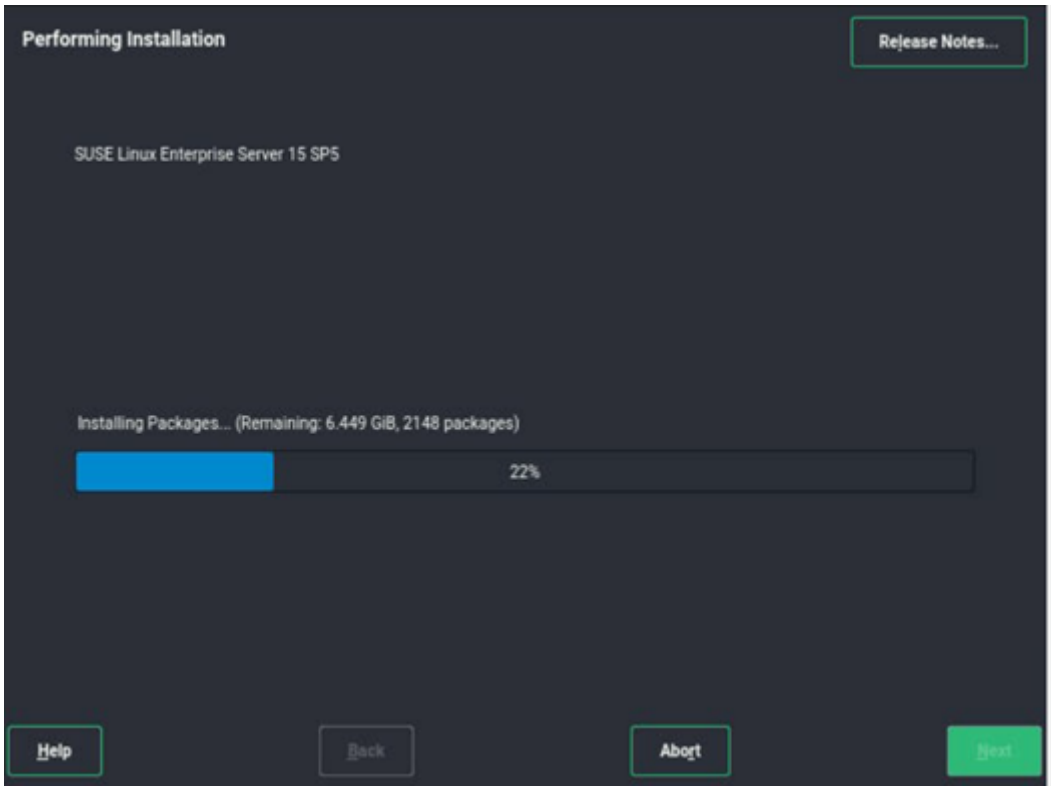

15. After the installation is complete, the system will automatically reboot until the user login page appears. Enter your user password to log in.

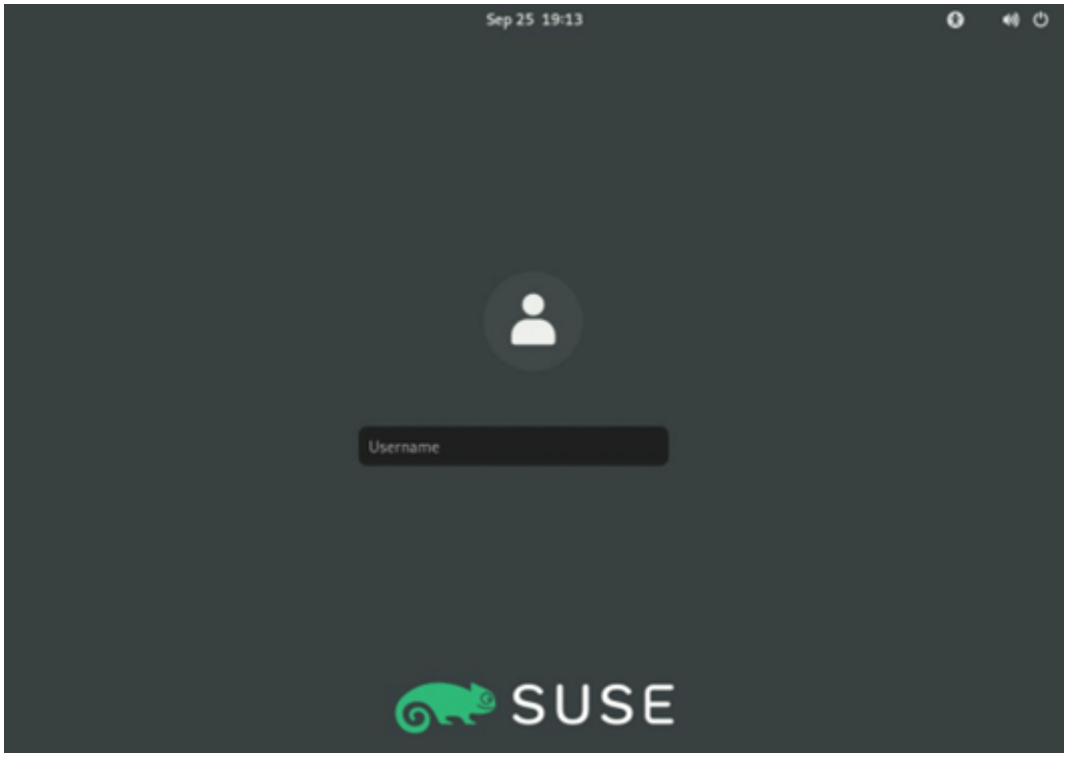

Result: You have successfully logged in and can now start using this system.

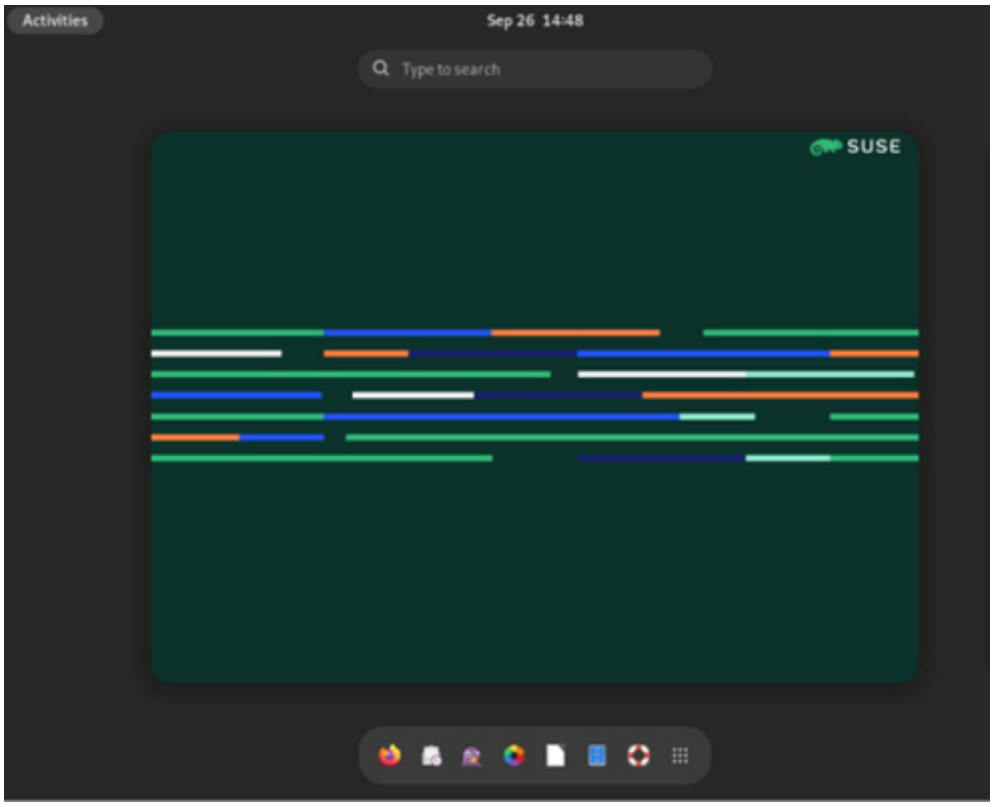

5.4 IPMI

The H13QSH supports the Intelligent Platform Management Interface (IPMI). IPMI is used to provide remote access, monitoring and management. There are several BIOS settings that are related to IPMI.

Supermicro ships standard products with a unique password for the BMC ADMIN user. This password can be found on a label on the motherboard.

For general documentation and information on IPMI, please visit our website at: http://www.supermicro.com/products/nfo/IPMI.cfm.

5.5 Logging into the BMC (Baseboard Management Controller)

Supermicro ships standard products with a unique password for the BMC ADMIN user. This password can be found on a label on the motherboard.

When logging in to the BMC for the first time, please use the unique password provided by Supermicro to log in. You can change the unique password to a user name and password of your choice for subsequent logins.

For more information regarding BMC passwords, please visit our website at http://www.supermicro.com/bmcpassword.

BMC ADMIN User Password

For security, each system is assigned a unique default BMC password for the ADMIN user. This can be found on a sticker on the chassis and a sticker on the motherboard. The sticker also displays the BMC MAC address.

Figure 5-4. BMC Password Label

Chapter 6

Optional Components

This chapter describes optional system components and installation procedures.

6.1 Optional Parts List

Optional Parts List			
Item	**Part Number**	**Quantity**	**Description**
AIOM Support Kit	CBL-CDAT-1060-30	1	AIOM sideband signal 2x15, PH1.0 to 2x15, PH1.0, 28 AWG, 30 CM, 1 A/pin, RoHS
	CBL-OTHR-0795	1	AIOM share LAN signal FLAT, IDC 2 X11F/P1.27 TO IDC 2 X11F/P1.27, NCSI, 14 CM,30 AWG, RoHS
	AOM-AIOM-458GT	1	AIOM slot adaptor board for cable connection
	CBL-MCIO-1226M5	1 or 2	MCIO (x8 STR to x8 STR), 26 CM,85 OHM, RoHS
BlueField 3 B3220 Power Cables	CBL-PWEX-1040	1/DPU	8-pin CPU to 8-pin PCIe power connector
	CBL-PWEX-1148-30	1/DPU	8-pin CPU power connector
Optional NVMe up to 8 Drive Bay	CBL-MCIO-1260M5	1	MCIO (x8 STR to x8 STR), 60 CM, 30 AWG, 85 OHM, RoHS
	CBL-MCIO-1226M5	1-2	MCIO (x8 STR to x8 STR), 26 CM, 85 OHM, RoHS
Optional PCIe Slot	MCP-240-21837-0N	1	Riser bracket set with riser cable, three slots, 218H2AW2
	RSC-S-6G5-M8Y-35	1-2	Cable Riser, 350 mm, 2 MCIO x8 to 1 PCIE x16 Slot, RoHS
	RSC-S-6G5-M8Y-55	1	Cable Riser, 550 mm, 2 MCIO x8 to 1 PCIE x16 Slot, RoHS
RAID Controller 8pcs SATA3/SAS Support Kit	BPN-SAS3-826TQ-B2B	1-4	2-Port 12 Gbps Backplane for 2 x2.5" SAS/SATA HDD/SSD
	MCP-220-00155-0B	2, 4, 6, or 8	Metallic black gen-3 hot-swap tool-less 2.5 HDD tray
	CBL-SAST-1295T8S4-100	1	SlimSAS x8 to 8x SATA 7pin w/ 4*SIGPO, 95/95 CM, RoHS
	CBL-PWEX-0947Y-30	1-2	MicroFit 2x2, PH3.0 to 2 1X4, PH5.08, 30 CM, 9.5A/p, 16 AWG, RoHS
	AOC-S3908L-H8IR-16DD	1	8 int 12 Gb/s ports, x8 Gen4, ROC- LP
RAID Controller CacheVault(s)	BTR-CVPM05	1	CacheVault for Broadcom RAID Controller (Ex. S3908/S3916)
	MCP-240-00203-0N	1	BTR-CVPM05 Supercap mounting bracket for PCIe location (Support up to two BTR)

6.2 Storage Protocols Supported

The storage drive bays can support SATA3/SAS3/NVMe.

NVMe – Additional cables are required.

SATA3 – Additional cables are required.

SAS3 – An add-on controller card can support up to SAS (or SATA) drives. Additional cables are required.

6.3 TPM Security Module

SPI capable TPM 2.0 with Infineon 9670 controller, vertical form factor.

The JTPM1 header is used to connect a Trusted Platform Module (TPM). A TPM is a security device that supports encryption and authentication in drives. It enables the motherboard to deny access if the TPM associated with the drive is not installed in the system.

Details and installation procedures are at:

http://www.supermicro.com/manuals/other/TPM.pdf.

- AOM-TPM-9672V-FIPS
- AOM-TPM-9672V

Chapter 7

Troubleshooting and Support

7.1 Information Resources

Website

A great deal of information is available on the Supermicro website, supermicro.com.

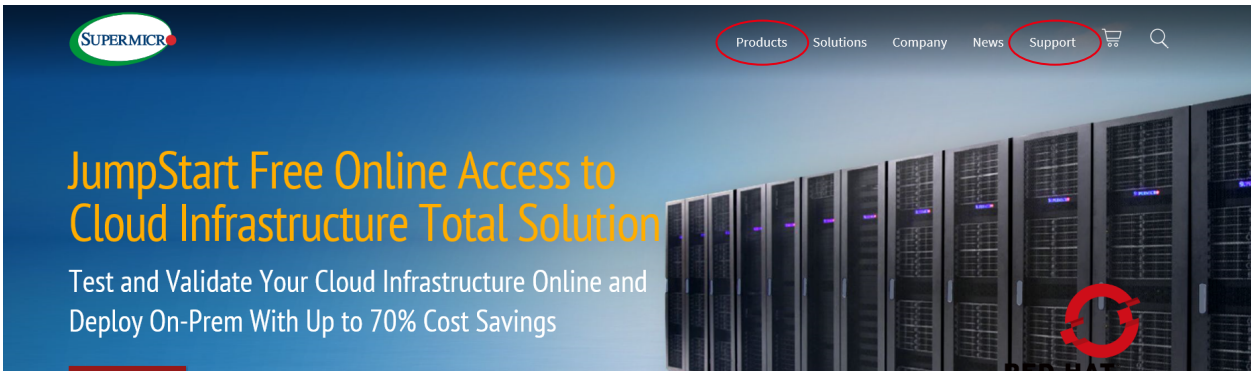

Figure 7-1. Supermicro Website

- Specifications for servers and other hardware are available by clicking the **Products** option.
- The **Support** option offers downloads (manuals, BIOS/BMC, drivers, etc.), FAQs, RMA, warranty, and other service extensions.

Direct Links for the AS -2145GH-TNMR-LCC System

AS -2145GH-TNMR-LCC specifications page

H13QSH motherboard page for links to the Quick Reference Guide, User Manual, validated storage drives, etc.

Direct Links for General Support and Information

Frequently Asked Questions

Add-on card descriptions

TPM User Guide

BMC User Guide

Direct Links (continued)

SuperDoctor5 Large Deployment Guide

For validated memory, use our Product Resources page

Product Matrices page for links to tables summarizing specs for systems, motherboards, power supplies, riser cards, add-on cards, etc.

Security Center for recent security notices

Supermicro Phone and Addresses

7.2 Baseboard Management Controller (BMC)

The system supports the Baseboard Management Controller (BMC). BMC is used to provide remote access, monitoring and management. There are several BIOS settings that are related to BMC.

For general documentation and information on BMC, please visit our website at: https://www.supermicro.com/en/solutions/management-software/bmc-resources.

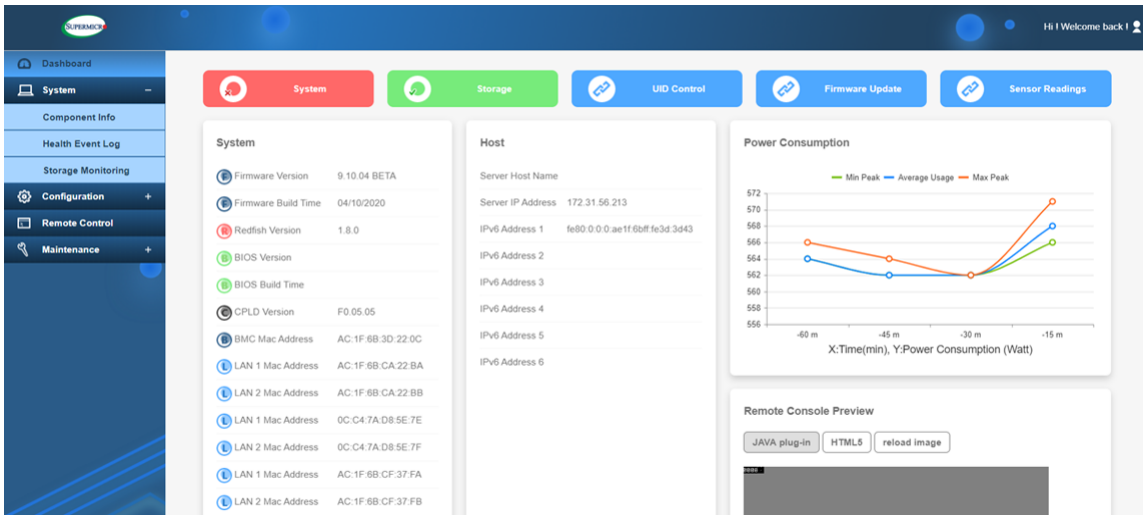

Figure 7-2. BMC Sample

7.3 Troubleshooting Procedures

Use the following procedures to troubleshoot your system. If you have followed all of the procedures below and still need assistance, refer to the Technical Support Procedures or Returning Merchandise for Service section(s) in this chapter. Always disconnect the AC power cord before adding, changing or installing any non hot-swap hardware components.

Before Power On

1. Check that the BMC_HB LED is blinking before the motherboard is turned on.
2. Check that the PWROK LED on the motherboard is on.
3. Make sure that the power connector is connected to your power supply.
4. Make sure that no short circuits exist between the motherboard and chassis.
5. Disconnect all cables from the motherboard, including those for the keyboard and mouse.
6. Remove all add-on cards.
7. Install an APU and a heatsink* on the motherboard. Check all jumper settings properly. *Make sure that the heatsink is fully seated.
8. Use the correct type of onboard CMOS battery (CR2032) as recommended by the manufacturer. To avoid possible explosion, do not install the CMOS battery upside down.

No Power

1. Make sure that no short circuits exist between the motherboard and the chassis.
2. Verify that all jumpers are set to their default positions.
3. Check that the 115 V/230 V switch on the power supply is properly set.
4. Turn the power switch on and off to test the system
5. The CMOS battery on your motherboard may be old. Check to verify that it still supplies approximately 3 VDC. If it does not, replace it with a new one.

No Video

1. If the power is on but you have no video, remove all add-on cards and cables.

Note: If you are a system integrator, VAR or OEM, a POST diagnostics card is recommended.

System Boot Failure

If the system does not display Power-On-Self-Test (POST) or does not respond after the power is turned on, try the following:

1. Clear the CMOS settings by unplugging the power cord and remove the battery for 30 seconds. Refer to Chapter 4, Section 4.4.
2. Remove all components from the moterboard, especially the DIMM modules.

The System Cannot Retain the Setup Configuration

1. Make sure that you are using a high quality power supply. A poor quality power supply may cause the system to lose the CMOS setup information. Refer to Section 1 for details on power supplies.
2. The battery on your motherboard may be old. Check to verify that it still supplies approximately 3 VDC. If it does not, replace it with a new one.
3. If the above steps do not fix the setup configuration problem, contact your vendor for repairs.

If the System Becomes Unstable

If the system becomes unstable during or after OS installation, check the following:

- APU/BIOS support: Make sure that your APU is supported and that you have the latest BIOS installed in your system.

Note: Refer to the product page on our website at http://www.supermicro.com for memory and APU support and updates.

- Storage drives support: Make sure that all drives work properly. Replace if necessary.
- System cooling: Check the system cooling to make sure that all heatsink fans and APU/system fans, etc., work properly. Check the hardware monitoring settings in the IPMI to make sure that the APU and system temperatures are within the normal range. Also check the front panel Overheat LED and make sure that it is not on.

- Adequate power supply: Make sure that the power supply provides adequate power to the system. Make sure that all power connectors are connected. Refer to the Supermicro website for the minimum power requirements.
- Proper software support: Make sure that the correct drivers are used.

If the system becomes unstable before or during OS installation, check the following:

1. Source of installation: Make sure that the devices used for installation are working properly, including boot devices such as USB flash or media drives.
2. Cable connection: Check to make sure that all cables are connected and working properly.
3. Using the minimum configuration for troubleshooting: Remove all unnecessary components (starting with add-on cards first), and use the minimum configuration (but with a APU and a memory module installed) to identify the trouble areas. Refer to the steps listed in Section A above for proper troubleshooting procedures.
4. Identifying bad components by isolating them: If necessary, remove a component in question from the chassis, and test it in isolation to make sure that it works properly. Replace a bad component with a good one.
5. Check and change one component at a time instead of changing several items at the same time. This will help isolate and identify the problem.
6. To find out if a component is good, swap this component with a new one to see if the system will work properly. If so, then the old component is bad. You can also install the component in question in another system. If the new system works, the component is good and the old system has problems.

7.4 Technical Support Procedures

Before contacting Technical Support, please take the following steps. Also, note that as a motherboard manufacturer, we do not sell directly to end-users, so it is best to first check with your distributor or reseller for troubleshooting services. They should know of any possible problem(s) with the specific system configuration that was sold to you.

1. Please review the ‘Troubleshooting Procedures’ and 'Frequently Asked Questions' (FAQs) sections in this chapter or see the FAQs on our website before contacting Technical Support.
2. BIOS upgrades can be downloaded from our website.

Note: Not all BIOS can be flashed depending on the modifications to the boot block code.

3. If you still cannot resolve the problem, include the following information when contacting us for technical support:

- Motherboard model and PCB revision number
- BIOS release date/version (this can be seen on the initial display when your system first boots up)
- System configuration

An example of a Technical Support form is posted on our website.

Distributors: For immediate assistance, please have your account number ready when contacting our technical support department by e-mail.

7.5 Frequently Asked Questions

Question: What type of memory does my motherboard support?

Answer: The H13QSH motherboard supports up to 512 GB HBM3 (128 GB per Socket) which is embedded in the APU.

Question: How do I update my BIOS?

Answer: It is recommended that you do not upgrade your BIOS if you are not experiencing any problems with your system. Updated BIOS files are located on our website at http://www.supermicro.com.

To update your BIOS:

1. Please check the BIOS warning message and the information on how to update your BIOS on our website.
2. Select your motherboard model and check the current BIOS revision to make sure it is newer than your motherboard's installed BIOS before downloading.
3. Download the zip file and save the BIOS package to your computer.
4. Unzip the BIOS files onto a USB stick with FAT/FAT32 file system.
5. Boot to the motherboard's built-in UEFI Shell and type the following to start the BIOS update process:

   FLASH.nsh BIOSname#.### <ENTER>

   Note: Supermicro no longer supports the BIOS update method in DOS.
6. Perform an A/C power cycle after the message indicating the BIOS update has completed. You may refer to the “Readme” file in BIOS package for more details.

Question: Why can't I turn off the power using the momentary power on/off switch?

Answer: The instant power off function is controlled in BIOS by the Power Button Mode setting. When the On/Off feature is enabled, the motherboard will have instant off capabilities as long as the BIOS has control of the system. When the 4 Seconds Override feature is enabled or when the BIOS is not in control such as during memory count (the first screen that appears when the system is turned on), the momentary on/off switch must be held for more than four seconds to shutdown the system. This feature is required to implement the ACPI features on the motherboard.

7.6 Returning Merchandise for Service

A receipt or copy of your invoice marked with the date of purchase is required before any warranty service will be rendered. You can obtain service by calling your vendor for a Returned Merchandise Authorization (RMA) number. When returning to the manufacturer, the RMA number should be prominently displayed on the outside of the shipping carton, and mailed prepaid or hand-carried. Shipping and handling charges will be applied for all orders that must be mailed when service is complete.

For faster service, RMA authorizations may be requested online (http://www.supermicro.com/support/rma/).

This warranty only covers normal consumer use and does not cover damages incurred in shipping or from failure due to the alteration, misuse, abuse or improper maintenance of products.

During the warranty period, contact your distributor first for any product problems.

7.7 Battery Removal and Installation

Battery Removal

To remove the onboard battery, follow the steps below:

1. Power off your system and unplug your power cable.
2. Locate the onboard battery (see Figure 3-1).
3. Using a tool such as a pen or a small screwdriver, push the battery lock outwards to unlock it. Once unlocked, the battery will pop out from the holder.
4. Remove the battery.

Proper Battery Disposal

Please handle used batteries carefully. Do not damage the battery in any way; a damaged battery may release hazardous materials into the environment. Do not discard a used battery in the garbage or a public landfill. Please comply with the regulations set up by your local hazardous waste management agency to dispose of your used battery properly.

Battery Installation

1. To install an onboard battery, follow steps 1 and 2 in Battery Removal section and continue below:
2. Identify the battery's polarity. The positive (+) side should be facing up.
3. Insert the battery into the battery holder and push it down until you hear a click to ensure that the battery is securely locked.

Important: When replacing a battery, be sure to only replace it with the same type.

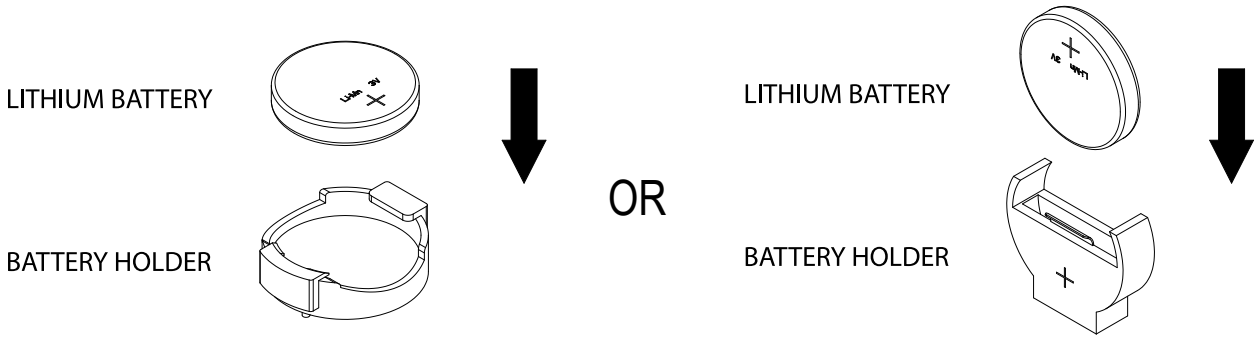

Figure 7-3. Battery Installation

Appendix A

Standardized Warning Statements for AC Systems

About Standardized Warning Statements

The following statements are industry standard warnings, provided to warn the user of situations which have the potential for bodily injury. Should you have questions or experience difficulty, contact Supermicro's Technical Support department for assistance. Only certified technicians should attempt to install or configure components.

Read this appendix in its entirety before installing or configuring components in the Supermicro chassis.

These warnings may also be found on our website at http://www.supermicro.com/about/policies/safety_information.cfm.

Warning Definition

Warning! This warning symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents.

警告の定義

この警告サインは危険を意味します。

人身事故につながる可能性がありますので、いずれの機器でも動作させる前に、

電気回路に含まれる危険性に注意して、標準的な事故防止策に精通して下さい。

此警告符号代表危险。

您正处于可能受到严重伤害的工作环境中。在您使用设备开始工作之前，必须充分意识到触电的危险，并熟练掌握防止事故发生的标准工作程序。请根据每项警告结尾的声明号码找到此设备的安全性警告说明的翻译文本。

此警告符號代表危險。

您正處於可能身體可能會受損傷的工作環境中。在您使用任何設備之前，請注意觸電的危險，並且要熟悉預防事故發生的標準工作程序。請依照每一注意事項後的號碼找到相關的翻譯說明內容。

Warnung

WICHTIGE SICHERHEITSHINWEISE

Dieses Warnsymbol bedeutet Gefahr. Sie befinden sich in einer Situation, die zu Verletzungen führen kann. Machen Sie sich vor der Arbeit mit Geräten mit den Gefahren elektrischer Schaltungen und den üblichen Verfahren zur Vorbeugung vor Unfällen vertraut. Suchen Sie mit der am Ende jeder Warnung angegebenen Anweisungsnummer nach der jeweiligen Übersetzung in den übersetzten Sicherheitshinweisen, die zusammen mit diesem Gerät ausgeliefert wurden.

BEWAHREN SIE DIESE HINWEISE GUT AUF.

INSTRUCCIONES IMPORTANTES DE SEGURIDAD

Este símbolo de aviso indica peligro. Existe riesgo para su integridad física. Antes de manipular cualquier equipo, considere los riesgos de la corriente eléctrica y familiarícese con los procedimientos estándar de prevención de accidentes. Al final de cada advertencia encontrará el número que le ayudará a encontrar el texto traducido en el apartado de traducciones que acompaña a este dispositivo.

GUARDE ESTAS INSTRUCCIONES.

IMPORTANTES INFORMATIONS DE SÉCURITÉ

Ce symbole d'avertissement indique un danger. Vous vous trouvez dans une situation pouvant entraîner des blessures ou des dommages corporels. Avant de travailler sur un équipement, soyez conscient des dangers liés aux circuits électriques et familiarisez-vous avec les procédures couramment utilisées pour éviter les accidents. Pour prendre connaissance des traductions des avertissements figurant dans les consignes de sécurité traduites qui accompagnent cet appareil, référez-vous au numéro de l'instruction situé à la fin de chaque avertissement.

CONSERVEZ CES INFORMATIONS.

תקנון הצהרות אזהרה

הצהרות הבאות הן אזהרות על פי תקני התעשייה, על מנת להזהיר את המשתמש מפני חבלה פיזית אפשרית. במידה ויש שאלות או היתקלות בבעיה כלשהי, יש ליצור קשר עם מחלקת תמיכה טכנית של סופרמיקרו. טכנאים מוסמכים בלבד רשאים להתקין או להגדיר את הרכיבים.

יש לקרוא את הנספח במלואו לפני התקנת או הגדרת הרכיבים במארזי סופרמיקרו.

ا كً ف حالة وٌكي أى تتسبب ف اصابة جسد ةٌ هذا الزهز عٌ خطز !تحذ زٌ .
قبل أى تعول على أي هعذات،كي على علن بالوخاطز ال ٌأجوة عي الذوائز
الكهزبائ ةٍ
وكي على درا ةٌ بالووارسات البقائ ةٍ لو عٌ وقع أي حادث
استخذم رقن الب إٍى الو صٌص ف هًا ةٌ كل تحذ زٌ للعشر تزجوتها

안전을 위한 주의사항

경고!

이 경고 기호는 위험이 있음을 알려 줍니다. 작업자의 신체에 부상을 야기 할 수 있는 상태에 있게 됩니다. 모든 장비에 대한 작업을 수행하기 전에 전기회로와 관련된 위험요소들을 확인하시고 사전에 사고를 방지할 수 있도록 표준 작업절차를 준수해 주시기 바랍니다.

해당 번역문을 찾기 위해 각 경고의 마지막 부분에 제공된 경고문 번호를 참조하십시오

BELANGRIJKE VEILIGHEIDSINSTRUCTIES

Dit waarschuwings symbool betekent gevaar. U verkeert in een situatie die lichamelijk letsel kan veroorzaken. Voordat u aan enige apparatuur gaat werken, dient u zich bewust te zijn van de bij een elektrische installatie betrokken risico's en dient u op de hoogte te zijn van de standaard procedures om ongelukken te voorkomen. Gebruik de nummers aan het eind van elke waarschuwing om deze te herleiden naar de desbetreffende locatie.

BEWAAR DEZE INSTRUCTIES

Installation Instructions

Warning! Read the installation instructions before connecting the system to the power source.

設置手順書

システムを電源に接続する前に、設置手順書をお読み下さい。

警告

将此系统连接电源前,请先阅读安装说明。

警告

將系統與電源連接前，請先閱讀安裝說明。

Warnung

Vor dem Anschließen des Systems an die Stromquelle die Installationsanweisungen lesen.

¡Advertencia!

Lea las instrucciones de instalación antes de conectar el sistema a la red de alimentación.

Attention

Avant de brancher le système sur la source d'alimentation, consulter les directives d'installation.

יש לקרוא את הוראות התקנה לפני חיבור המערכת למקור מתח.

اقر إرشادات التركيب قبل توصيل النظام إلى مصدر للطاقة

시스템을 전원에 연결하기 전에 설치 안내를 읽어주십시오.

Waarschuwing

Raadpleeg de installatie-instructies voordat u het systeem op de voedingsbron aansluit.

Circuit Breaker

Warning! This product relies on the building's installation for short-circuit (overcurrent) protection. Ensure that the protective device is rated not greater than: 250 V, 20 A.

サーキット・ブレーカー

この製品は、短絡（過電流）保護装置がある建物での設置を前提としています。

保護装置の定格が250 V、20 Aを超えないことを確認下さい。

警告

此产品的短路(过载电流)保护由建筑物的供电系统提供,确保短路保护设备的额定电流不大于250V,20A。

警告

此產品的短路(過載電流)保護由建築物的供電系統提供,確保短路保護設備的額定電流不大於250V,20A。

Warnung

Dieses Produkt ist darauf angewiesen, dass im Gebäude ein Kurzschluss- bzw. Überstromschutz installiert ist. Stellen Sie sicher, dass der Nennwert der Schutzvorrichtung nicht mehr als: 250 V, 20 A beträgt.

¡Advertencia!

Este equipo utiliza el sistema de protección contra cortocircuitos (o sobrecorrientes) del edificio. Asegúrese de que el dispositivo de protección no sea superior a: 250 V, 20 A.

Attention

Pour ce qui est de la protection contre les courts-circuits (surtension), ce produit dépend de l'installation électrique du local. Vérifiez que le courant nominal du dispositif de protection n'est pas supérieur à :250 V, 20 A.

מוצר זה מסתמך על הגנה המותקנת במבנים למניעת קצר חשמלי. יש לוודא כי
המכשיר המגן מפני הקצר החשמלי הוא לא יותר מ-250VDC, 20A

هذا المنتج يعتمد على معداث الحمايت مه الدوائرالقصيرة التي تم تثبيتها في
المبنى
تأكد من أن تقييم الجهاز الوقائي ليس أكثر من : 20A, 250V

경고!

이 제품은 전원의 단락(과전류)방지에 대해서 전적으로 건물의 관련 설비에 의존합니다.
보호장치의 정격이 반드시 250V(볼트), 20A(암페어)를 초과하지 않도록 해야 합니다.

Waarschuwing

Dit product is afhankelijk van de kortsluitbeveiliging (overspanning) van uw electrische installatie. Controleer of het beveiligde aparaat niet groter gedimensioneerd is dan 250V, 20A.

Power Disconnection Warning

Warning! The system must be disconnected from all sources of power and the power cord removed from the power supply module(s) before accessing the chassis interior to install or remove system components (except for hot-swap components).

電源切断の警告

システムコンポーネントの取り付けまたは取り外しのために、シャーシー内部にアクセスするには、

システムの電源はすべてのソースから切断され、電源コードは電源モジュールから取り外す必要があります。

警告

在你打开机箱并安装或移除内部器件前,必须将系统完全断电,并移除电源线。

警告

在您打開機殼安裝或移除內部元件前，必須將系統完全斷電，並移除電源線。

Warnung

Das System muss von allen Quellen der Energie und vom Netzanschlusskabel getrennt sein, das von den Spg.Versorgungsteilmodulen entfernt wird, bevor es auf den Chassisinnenraum zurückgreift, um Systemsbestandteile anzubringen oder zu entfernen.

¡Advertencia!

El sistema debe ser disconnected de todas las fuentes de energía y del cable eléctrico quitado de los módulos de fuente de alimentación antes de tener acceso el interior del chasis para instalar o para quitar componentes de sistema.

Attention

Le système doit être débranché de toutes les sources de puissance ainsi que de son cordon d'alimentation secteur avant d'accéder à l'intérieur du chassis pour installer ou enlever des composants de systéme.

אזהרה מפני ניתוק חשמלי

!אזהרה

יש לנתק את המערכת מכל מקורות החשמל ויש להסיר את כבל החשמלי מהספק לפני גישה לחלק הפנימי של המארז לצורך התקנת או הסרת רכיבים.

يجب فصم اننظاو من جميع مصادر انطاقت وإزانت سهك انكهرباء من وحدة امداد انطاقت قبم

انصل إنى اىمناطق انداخهيت نههيكم نتثبيج أو إزانت مكناث الجهاز

경고!

시스템에 부품들을 장착하거나 제거하기 위해서는 섀시 내부에 접근하기 전에 반드시 전원 공급장치로부터 연결되어있는 모든 전원과 전기코드를 분리해주어야 합니다.

Waarschuwing

Voordat u toegang neemt tot het binnenwerk van de behuizing voor het installeren of verwijderen van systeem onderdelen, dient u alle spanningsbronnen en alle stroomkabels aangesloten op de voeding(en) van de behuizing te verwijderen

Equipment Installation

Warning! Only authorized personnel and qualified service persons should be allowed to install, replace, or service this equipment.

機器の設置

トレーニングを受け認定された人だけがこの装置の設置、交換、またはサービスを許可されています。

警告

只有经过培训且具有资格的人员才能进行此设备的安装、更换和维修。

警告

只有經過受訓且具資格人員才可安裝、更換與維修此設備。

Warnung

Nur autorisiertes Personal und qualifizierte Servicetechniker dürfen dieses Gerät installieren, austauschen oder warten..

¡Advertencia!

Sólo el personal autorizado y el personal de servicio calificado deben poder instalar, reemplazar o dar servicio a este equipo.

Attention

Seul le personnel autorisé et le personnel de maintenance qualifié doivent être autorisés à installer, remplacer ou entretenir cet équipement..

אזהרה!

יש לאפשר רק צוות מורשה ואנשי שירות מוסמכים להתקין, להחליף או לטפל בציוד זה.

ينبغي السماح فقط للموظفين المعتمدين وأفراد الخدمة المؤهلين بتركيب هذا الجهاز أو استبداله أو صيانته.

경고!

승인된 직원과 자격을 갖춘 서비스 담당자만이 이 장비를 설치, 교체 또는 서비스할 수 있습니다.

Waarschuwing

Alleen geautoriseerd personeel en gekwalificeerd onderhoudspersoneel mag deze apparatuur installeren, vervangen of onderhouden..

Restricted Area

Warning! This unit is intended for installation in restricted access areas. A restricted access area can be accessed only through the use of a special tool, lock and key, or other means of security. (This warning does not apply to workstations).

アクセス制限区域

このユニットは、アクセス制限区域に設置されることを想定しています。

アクセス制限区域は、特別なツール、鍵と錠前、その他のセキュリティの手段を用いてのみ出入りが可能です。

警告

此部件应安装在限制进出的场所，限制进出的场所指只能通过使用特殊工具、锁和钥匙或其它安全手段进出的场所。

警告

此裝置僅限安裝於進出管制區域，進出管制區域係指僅能以特殊工具、鎖頭及鑰匙或其他安全方式才能進入的區域。

Warnung

Diese Einheit ist zur Installation in Bereichen mit beschränktem Zutritt vorgesehen. Der Zutritt zu derartigen Bereichen ist nur mit einem Spezialwerkzeug, Schloss und Schlüssel oder einer sonstigen Sicherheitsvorkehrung möglich.

¡Advertencia!

Esta unidad ha sido diseñada para instalación en áreas de acceso restringido. Sólo puede obtenerse acceso a una de estas áreas mediante la utilización de una herramienta especial, cerradura con llave u otro medio de seguridad.

Attention

Cet appareil doit être installée dans des zones d'accès réservés. L'accès à une zone d'accès réservé n'est possible qu'en utilisant un outil spécial, un mécanisme de verrouillage et une clé, ou tout autre moyen de sécurité.

אזור עם גישה מוגבלת

אזהרה!

יש להתקין את היחידה באזורים שיש בהם הגבלת גישה. הגישה ניתנת בעזרת
'כלי אבטחה בלבד)מפתח, מנעול וכד.)

تخصيص هذه انحذة نترك بُها ف مناطق محظورة تم .
،مَكن انصبل إن منطقت محظورة فقط من خلال استخذاو أداة خاصت
أو أ وس هُت أخري نلالأمما ققم ومفتاح

경고!

이 장치는 접근이 제한된 구역에 설치하도록 되어있습니다. 특수도구, 잠금 장치 및 키, 또는 기타 보안 수단을 통해서만 접근 제한 구역에 들어갈 수 있습니다.

Waarschuwing

Dit apparaat is bedoeld voor installatie in gebieden met een beperkte toegang. Toegang tot dergelijke gebieden kunnen alleen verkregen worden door gebruik te maken van speciaal gereedschap, slot en sleutel of andere veiligheidsmaatregelen.

Battery Handling

CAUTION: There is risk of explosion if the battery is replaced by an incorrect type. Replace the battery only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions

電池の取り扱い

バッテリーを間違ったタイプに交換すると爆発の危険があります。交換する電池はメーカーが推奨する型、または同等のものを使用下さい。使用済電池は製造元の指示に従って処分して下さい。

警告

如果更换的电池类型不正确，则存在爆炸危险。请只使用同类电池或制造商推荐的功能相当的电池更换原有电池。请按制造商的说明处理废旧电池。

警告

如果更換的電池類型不正確，則有爆炸危險。請使用製造商建議之相同或功能相當的電池更換原有電池。請按照製造商的說明指示處理廢棄舊電池。

WARNUNG

Es besteht Explosionsgefahr, wenn die Batterie durch einen falschen Typ ersetzt wird. Ersetzen Sie die Batterie nur durch den gleichen oder vom Hersteller empfohlenen Batterietyp. Entsorgen Sie die benutzten Batterien nach den Anweisungen des Herstellers.

ATTENTION

Il existe un risque d'explosion si la batterie est remplacée par un type incorrect. Ne la remplacer que par une pile de type semblable ou équivalent, recommandée par le fabricant. Jeter les piles usagées conformément aux instructions du fabricant.

ADVERTENCIA

Existe riesgo de explosión si la batería se reemplaza por un tipo incorrecto. Reemplazar la batería exclusivamente con el mismo tipo o el equivalente recomendado por el fabricante. Desechar las baterías gastadas según las instrucciones del fabricante.

!אזהרה

קיימת סכנת פיצוץ אם הסוללה תוחלף בסוג שגוי. יש להחליף

את הסוללה בסוג התואם מחברת יצרן מומלצת.

סילוק הסוללות המשומשות יש לבצע לפי הוראות היצרן.

هناك خطر الانفجار إذا تم استبدال البطارية بنوع غير صحيح.
اسحبذال البطارية
فقط بنفس النع أو ما يعادلها مما أوصث به الشرمة المصنعة
جخلص من البطاريات المسحعملة وفقا لحعليمات الشرمة الصانعة

경고!

배터리를 잘못된 종류로 교체하면 폭발의 위험이 있습니다. 기존 배터리와 동일하거나 제조사에서 권장하는 동등한 종류의 배터리로만 교체해야 합니다. 제조사의 안내에 따라 사용된 배터리를 처리하여 주십시오.

WAARSCHUWING

Er bestaat explosiegevaar als de batterij wordt vervangen door een verkeerd type. Vervang de batterij slechts met hetzelfde of een equivalent type die door de fabrikant aanbevolen wordt. Gebruikte batterijen dienen overeenkomstig fabrieksvoorschriften afgevoerd te worden.

Redundant Power Supplies

Warning! This unit might have more than one power supply connection. All connections must be removed to de-energize the unit.

冗長電源装置

このユニットは複数の電源装置が接続されている場合があります。

ユニットの電源を切るためには、すべての接続を取り外さなければなりません。

警告
此部件连接的电源可能不止一个，必须将所有电源断开才能停止给该部件供电。

警告
此裝置連接的電源可能不只一個，必須切斷所有電源才能停止對該裝置的供電。

Warnung

Dieses Gerät kann mehr als eine Stromzufuhr haben. Um sicherzustellen, dass der Einheit kein trom zugeführt wird, müssen alle Verbindungen entfernt werden.

¡Advertencia!

Puede que esta unidad tenga más de una conexión para fuentes de alimentación. Para cortar por completo el suministro de energía, deben desconectarse todas las conexiones.

Attention

Cette unité peut avoir plus d'une connexion d'alimentation. Pour supprimer toute tension et tout courant électrique de l'unité, toutes les connexions d'alimentation doivent être débranchées.

אם קיים יותר מספק אחד

אזהרה!

ליחדה יש יותר מחיבור אחד של ספק. יש להסיר את כל החיבורים על מנת לרוקן

את היחידה.

قد يكون لهذا الجهاز عدة اتصالات بوحدات امداد الطاقة .

يجب إزالة كافة الاتصالات لعسل الوحدة عن الكهرباء

경고!

이 장치에는 한 개 이상의 전원 공급 단자가 연결되어 있을 수 있습니다. 이 장치에 전원을 차단하기 위해서는 모든 연결 단자를 제거해야만 합니다.

Waarschuwing

Deze eenheid kan meer dan één stroomtoevoeraansluiting bevatten. Alle aansluitingen dienen verwijderd te worden om het apparaat stroomloos te maken.

Backplane Voltage

Warning! Hazardous voltage or energy is present on the backplane when the system is operating. Use caution when servicing.

バックプレーンの電圧

システムの稼働中は危険な電圧または電力が、バックプレーン上にかかっています。

修理する際には注意ください。

警告

当系统正在进行时，背板上有很危险的电压或能量，进行维修时务必小心。

警告

當系統正在進行時，背板上有危險的電壓或能量，進行維修時務必小心。

Warnung

Wenn das System in Betrieb ist, treten auf der Rückwandplatine gefährliche Spannungen oder Energien auf. Vorsicht bei der Wartung.

¡Advertencia!

Cuando el sistema está en funcionamiento, el voltaje del plano trasero es peligroso. Tenga cuidado cuando lo revise.

Attention

Lorsque le système est en fonctionnement, des tensions électriques circulent sur le fond de panier. Prendre des précautions lors de la maintenance.

מתח בפנל האחורי

אזהרה!

קיימת סכנת מתח בפנל האחורי בזמן תפעול המערכת. יש להיזהר במהלך העבודה.

هناك خطر مه التيار الكهزبائي أوالطاقة المجبدة على اللحة
عندما يكن النظام يعمل كه حذرا عند خدمة هذا الجهاس

경고!
시스템이 동작 중일 때 후면판 (Backplane)에는 위험한 전압이나 에너지가 발생 합니다. 서비스 작업 시 주의하십시오.

Waarschuwing
Een gevaarlijke spanning of energie is aanwezig op de backplane wanneer het systeem in gebruik is. Voorzichtigheid is geboden tijdens het onderhoud.

Comply with Local and National Electrical Codes

Warning! Installation of the equipment must comply with local and national electrical codes.

地方および国の電気規格に準拠
機器の取り付けはその地方および国の電気規格に準拠する必要があります。

警告
设备安装必须符合本地与本国电气法规。

警告
設備安裝必須符合本地與本國電氣法規。

Warnung
Die Installation der Geräte muss den Sicherheitsstandards entsprechen.

¡Advertencia!
La instalacion del equipo debe cumplir con las normas de electricidad locales y nacionales.

Attention
L'équipement doit être installé conformément aux normes électriques nationales et locales.

תיאום חוקי החשמל הארצי
אזהרה!
התקנת הציוד חייבת להיות תואמת לחוקי החשמל המקומיים והארציים.

تركيب المعدات الكهربائية يجب أن يمتثل للقاويه المحلية والسطية المتعلقة
بالكهرباء

경고!
현 지역 및 국가의 전기 규정에 따라 장비를 설치해야 합니다.

Waarschuwing
Bij installatie van de apparatuur moet worden voldaan aan de lokale en nationale elektriciteitsvoorschriften.

Product Disposal

Warning! Ultimate disposal of this product should be handled according to all national laws and regulations.

製品の廃棄
この製品を廃棄処分する場合、国の関係する全ての法律・条例に従い処理する必要があります。

警告
本产品的废弃处理应根据所有国家的法律和规章进行。

警告
本產品的廢棄處理應根據所有國家的法律和規章進行。

Warnung
Die Entsorgung dieses Produkts sollte gemäß allen Bestimmungen und Gesetzen des Landes erfolgen.

¡Advertencia!
Al deshacerse por completo de este producto debe seguir todas las leyes y reglamentos nacionales.

Attention

La mise au rebut ou le recyclage de ce produit sont généralement soumis à des lois et/ou directives de respect de l'environnement. Renseignez-vous auprès de l'organisme compétent.

סילוק המוצר

אזהרה!

סילוק סופי של מוצר זה חייב להיות בהתאם להנחיות וחוקי המדינה.

التخلص النهائي من هذا المنتج ينبغي التعامل معه وفقا لجميع القانين واللائح البطنية عند

경고!

이 제품은 해당 국가의 관련 법규 및 규정에 따라 폐기되어야 합니다.

Waarschuwing

De uiteindelijke verwijdering van dit product dient te geschieden in overeenstemming met alle nationale wetten en reglementen.

Fan Warning

Warning! Hazardous moving parts. Keep away from moving fan blades. The fans might still be turning when you remove the fan assembly from the chassis. Keep fingers, screwdrivers, and other objects away from the openings in the fan assembly's housing.

ファンの警告

警告!回転部品に注意。運転中は回転部(羽根)に触れないでください。シャーシから冷却ファン装置を取り外した際、ファンがまだ回転している可能性があります。ファンの開口部に、指、ドライバー、およびその他のものを近づけないで下さい。

警告!

警告！危险的可移动性零件。请务必与转动的风扇叶片保持距离。 当您从机架移除风扇装置，风扇可能仍在转动。小心不要将手指、螺丝起子和其他物品太靠近风扇

警告

危險的可移動性零件。請務必與轉動的風扇葉片保持距離。 當您從機架移除風扇裝置，風扇可能仍在轉動。小心不要將手指、螺絲起子和其他物品太靠近風扇。

Warnung

Gefährlich Bewegende Teile. Von den bewegenden Lüfterblätter fern halten. Die Lüfter drehen sich u. U. noch, wenn die Lüfterbaugruppe aus dem Chassis genommen wird. Halten Sie Finger, Schraubendreher und andere Gegenstände von den Öffnungen des Lüftergehäuses entfernt.

¡Advertencia!

Riesgo de piezas móviles. Mantener alejado de las aspas del ventilador. Los ventiladores podran dar vuelta cuando usted quite ell montaje del ventilador del chasis. Mandtenga los dedos, los destornilladores y todos los objetos lejos de las aberturas del ventilador

Attention

Pieces mobiles dangereuses. Se tenir a l'ecart des lames du ventilateur Il est possible que les ventilateurs soient toujours en rotation lorsque vous retirerez le bloc ventilateur du châssis. Prenez garde à ce que doigts, tournevis et autres objets soient éloignés du logement du bloc ventilateur.

אזהרה!

חלקים נעים מסוכנים. התרחק מלהבי המאוורר בפעולהכאשר מסירים את חלקי
המאוורר מהמארז, יתכן והמאוררים עדיין עובדים. יש להרחיק למרחק בטוח את
האצבעות וכלי עבודה שונים מהפתחים בתוך המאוורר

تحذير! أجزاء متحركة خطرة. ابتعد عن شفرات المروحة المتحركة.من الممكن أن
المراوح لا تزال تدورعند إزالة كتلة المروحة من الهيكل يجب إبقاء الأصابع
.ومفكات البراغي وغيرها من الأشياء بعيدا عن الفتحات في كتلة المروحة

경고!

움직이는 위험한 부품. 회전하는 송풍 날개에 접근하지 마세요. 섀시로부터 팬 조립품을 제거할 때 팬은 여전히 회전하고 있을 수 있습니다. 팬 조림품 외관의 열려있는 부분들로부터 손가락 및 스크류드라이버, 다른 물체들이 가까이 하지 않도록 배치해 주십시오.

Waarschuwing

Gevaarlijk bewegende onderdelen. Houd voldoende afstand tot de bewegende ventilatorbladen. Het is mogelijk dat de ventilator nog draait tijdens het verwijderen van het ventilatorsamenstel uit het chassis. Houd uw vingers, schroevendraaiers en eventuele andere voorwerpen uit de buurt van de openingen in de ventilatorbehuizing.

Power Cable and AC Adapter

Warning! When installing the product, use the provided or designated connection cables, power cables and AC adaptors. Using any other cables and adaptors could cause a malfunction or a fire. Electrical Appliance and Material Safety Law prohibits the use of UL or CSA -certified cables (that have UL/CSA shown on the cord) for any other electrical devices than products designated by Supermicro only.

電源コードとACアダプター

製品を設置する場合、提供または指定および購入された接続ケーブル、電源コードとACアダプターを 該当する地域の条例や安全基準に適合するコードサイズやプラグと共に使用下さい。他のケーブルやアダプタを使用すると故障や火災の原因になることがあります。

電気用品安全法は、ULまたはCSA認定のケーブル(UL/CSAマークがコードに表記)を Supermicroが指定する製品以外に使用することを禁止しています。

警告

安装此产品时,请使用本身提供的或指定的或采购的连接线,电源线和电源适配器，包含遵照当地法规和安全要求的合规的电源线尺寸和插头.使用其它线材或适配器可能会引起故障或火灾。除了Supermicro所指定的产品,电气用品和材料安全法律规定禁止
使用未经UL或CSA认证的线材。(线材上会显示UL/CSA符号)。

警告

安裝此產品時,請使用本身提供的或指定的或採購的連接線,電源線和電源適配器，包含遵照當地法規和安全要求的合規的電源線尺寸和插頭.使用其它線材或適配器可能會引起故障或火災。除了Supermicro所指定的產品,電氣用品和材料安全法律規定禁止
使用未經UL或CSA認證的線材。 (線材上會顯示UL/CSA符號)。

Warnung

Nutzen Sie beim Installieren des Produkts ausschließlich die von uns zur Verfügung gestellten Verbindungskabeln, Stromkabeln und/oder Adapater, die Ihre örtlichen Sicherheitsstandards einhalten. Der Gebrauch von anderen Kabeln und Adapter können Fehlfunktionen oder Feuer verursachen. Die Richtlinien untersagen das Nutzen von UL oder CAS zertifizierten Kabeln (mit UL/CSA gekennzeichnet), an Geräten oder Produkten die nicht mit Supermicro gekennzeichnet sind.

¡Advertencia!

Cuando instale el producto, utilice la conexión provista o designada o procure cables, Cables de alimentación y adaptadores de CA que cumplan con los códigos locales y los requisitos de seguridad, incluyendo el tamaño adecuado del cable y el enchufe. El uso de otros cables y adaptadores podría causar un mal funcionamiento o un incendio. La Ley de Seguridad de Aparatos Eléctricos y de Materiales prohíbe El uso de cables certificados por UL o CSA (que tienen el certificado UL / CSA en el código) para cualquier otros dispositivos eléctricos que los productos designados únicamente por Supermicro.

Attention

Lors de l'installation du produit, utilisez les cables de connection fournis ou désigné ou achetez des cables, cables de puissance et adaptateurs respectant les normes locales et les conditions de securite y compris les tailles de cables et les prises electriques appropries. L'utilisation d'autres cables et adaptateurs peut provoquer un dysfonctionnement ou un incendie. Appareils électroménagers et la Loi sur la Sécurité Matériel interdit l'utilisation de câbles certifies- UL ou CSA (qui ont UL ou CSA indiqué sur le code) pour tous les autres appareils électriques sauf les produits désignés par Supermicro seulement.

AC ימאתמו מיילמשח מילבכ

!הרהזא

ךרוצל ומאתוה וא ושכרנ רשא AC מימאתמו מיקפס ,מילבכב שמתשהל שי ,רצומה תא מיניקתמ רשאכ לכב שומיש . עקתהו לבכה לש הנוכנ הדימ ללוכ ,תוימוקמה תוחיטבה תושירדל ומאתוה רשאו ,הנקתהה למשחה יריש כמב שומישה יקוחל מאתהב .ילמשח רצק וא הלקתל מורגל לולע ,רחא גוסמ מאתמ וא לבכ לש דוק מהילע עיפומ רשאכ) CSA-ב וא UL -ב מיכמסומה מילבכב שמתשהל רוסיא מייק ,תוחיטבה יקוחו .דבלב Supermicro י"ע מאתוה רשא רצומב קר אלא ,רחא ילמשח רצומ לכ רובע UL/CSA)

تالبكاب ءارش بق وأ ةمدحملا وأ ةفرتوملا تايلصوتلا مادختساب قفر ،جتنملا بكرت دنع كلذ يف امب ةيلحملا ةمالسلا تابلطتمو نيناوقلا عم ددرتملا يارتلا تالوحمو ةيئابرهكلا .يملسلا راتخإ وأ لطع يف ببستي دق رخأ تالوحمو كابلا .حجم لصوملاو قابسلا ةعتمدلا نم قبل UL وأ CSA ةمالسلا نوناق رظحي يحلأا ةزهجلا ةيئابرهكلا تالبكلا مادختسا تادعاو ةمدحملاو ةنيعملا جاتنملا ريغ رخأ تادعاب أ عم (UL/CSA) ةمالسلا عضخت يتلاو .Supermicro نم قبل

전원 케이블 및 AC 어댑터

경고! 제품을 설치할 때 현지 코드 및 적절한 굵기의 코드와 플러그를 포함한 안전 요구 사항을 준수하여 제공되거나 지정된 연결 혹은 구매 케이블, 전원 케이블 및 AC 어댑터를 사용하십시오.

다른 케이블이나 어댑터를 사용하면 오작동이나 화재가 발생할 수 있습니다. 전기 용품 안전법은 UL 또는 CSA 인증 케이블 (코드에 UL / CSA가 표시된 케이블)을 Supermicro 가 지정한 제품 이외의 전기 장치에 사용하는 것을 금지합니다.

Stroomkabel en AC-Adapter

Waarschuwing! Bij het aansluiten van het Product uitsluitend gebruik maken van de geleverde Kabels of een andere geschikte aan te schaffen Aansluitmethode, deze moet altijd voldoen aan de lokale voorschriften en veiligheidsnormen, inclusief de juiste kabeldikte en stekker. Het gebruik van niet geschikte Kabels en/of Adapters kan een storing of brand veroorzaken. Wetgeving voor Elektrische apparatuur en Materiaalveiligheid verbied het gebruik van UL of CSA -gecertificeerde Kabels (met UL/CSA in de code) voor elke andere toepassing dan de door Supermicro hiervoor beoogde Producten.

Appendix B

System Specifications

Processors	
Quad AMD Instinct™ MI300A APUs in sockets SH5	
Chipset	
System on Chip (SoC)	
BIOS	
AMI 32 MB SPI Flash EEPROM	
Memory	
Total 512 GB HBM3	
Storage Drives	
Default: Eight front hot-swap 2.5" NVMe drive bays (The signals for the six NVMe drives are optional.) Option A: Eight front hot-swap 2.5" SAS*/SATA* drive bays (*SAS/SATA support may require additional storage controller and/or cables, please see the optional parts list for details) Two 2280 or 22110 M.2 NVMe slots (M-key)	
PCI Expansion Slots	
Four PCIe 5.0 x16 FHFL slots One PCIe 5.0 x16 AIOM slot (OCP 3.0 compatible) Two PCIe 5.0 x16 FHHL slots	
Input/Output	
One RJ45 Dedicated IPMI LAN port Two rear USB 3.0 ports Two front USB 2.0 ports One VGA port One rear DisplayPort One rear serial port	
Motherboard	
H13QSH; 17.04" (W) x 21.35" (L), (432.82 mm x 542.29 mm)	
Chassis	
CSE-218H2TS-R5K4AWP; 2U rackmount: 3.5 x 17.3 x 33.4 in. / 88.9 x 439.42 x 848.36 mm (H x W x D)	
System Cooling	
Three heavy-duty counter-rotating 8-cm fans Liquid cooling: Direct to Chip (D2C) cold plate	
Power Supply	
Model: PWS-2K70A-1R, Titanium Level Power Supply (80 Plus) Input: 200-240 V ~, 50-60 Hz, 16-13.5 A or Output: +12 Vdc, 225 A, +12 Vdc, 4 A, 2700 W	
Operating Environment	
Operating Temperature: 10º to 35º C (50º to 95º F) Non-operating Temperature: -40º to 60º C (-40º to 140º F) Operating Relative Humidity: 8% to 90% (non-condensing) Non-operating Relative Humidity: 5% to 95% (non-condensing)	

Regulatory Compliance

FCC, CE, VCCI, RCM

Applied Directives, Standards

EMC/EMI: 2014/30/EU (EMC Directive)
FCC Part 15 Subpart B
ICES-003
VCCI-CISPR 32
AS/NZS CISPR 32
EN/BS EN55032
EN/BS EN55035
CISPR 32
CISPR 35
EN/BS 61000-3-2
EN/BS 61000-3-3
EN/BS 61000-4-2
EN/BS 61000-4-3
EN/BS 61000-4-4
EN/BS 61000-4-5
EN/BS 61000-4-6
EN/BS 61000-4-8
EN/BS 61000-4-11

Environment:
Delegated Directive (EU) 2015/863
Directive 2011/65/EU (RoHS)
REACH Regulation EC 1907/2006
WEEE Directive 2012/19/EU
California Proposition 65

Product Safety: 2014/35/EU (LVD Directive)
IEC/EN 62368-1

Perchlorate Warning

California Best Management Practices Regulations for Perchlorate Materials: This Perchlorate warning applies only to products containing CR (Manganese Dioxide) Lithium coin cells. “Perchlorate Material-special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate”

この装置は、クラスＡ機器です。この装置を住宅環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

VCCI ー A