

A+ Server®

AS -2116S-FTNRT
AS -2116S-TNRT

USER'S MANUAL

Revision 1.0 (MNL-2836)

The information in this User's Manual has been carefully reviewed and is believed to be accurate. The vendor assumes no responsibility for any inaccuracies that may be contained in this document, and makes no commitment to update or to keep current the information in this manual, or to notify any person or organization of the updates. Note: For the most up-to-date version of this manual, see our website at https://www.supermicro.com.

Super Micro Computer, Inc. ("Supermicro") reserves the right to make changes to the product described in this manual at any time and without notice. This product, including software and documentation, is the property of Supermicro and/or its licensors, and is supplied only under a license. Any use or reproduction of this product is not allowed, except as expressly permitted by the terms of said license.

IN NO EVENT WILL Super Micro Computer, Inc. BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, SPECULATIVE OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OR INABILITY TO USE THIS PRODUCT OR DOCUMENTATION, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN PARTICULAR, SUPER MICRO COMPUTER, INC. SHALL NOT HAVE LIABILITY FOR ANY HARDWARE, SOFTWARE, OR DATA STORED OR USED WITH THE PRODUCT, INCLUDING THE COSTS OF REPAIRING, REPLACING, INTEGRATING, INSTALLING OR RECOVERING SUCH HARDWARE, SOFTWARE, OR DATA.

Any disputes arising between manufacturer and customer shall be governed by the laws of Santa Clara County in the State of California, USA. The State of California, County of Santa Clara shall be the exclusive venue for the resolution of any such disputes. Supermicro's total liability for all claims will not exceed the price paid for the hardware product.

FCC Statement: This equipment has been tested and found to comply with the limits for a Class A or Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in industrial environment for Class A device or in residential environment for Class B device. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer's instruction manual, may cause harmful interference with radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case you will be required to correct the interference at your own expense.

California Best Management Practices Regulations for Perchlorate Materials: This Perchlorate warning applies only to products containing CR (Manganese Dioxide) Lithium coin cells. "Perchlorate Material-special handling may apply. See https://www.dtsc.ca.gov/hazardouswaste/perchlorate".



WARNING: This product can expose you to chemicals including lead, known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to https://www.P65Warnings.ca.gov.



AVERTISSEMENT : Ce produit peut vous exposer à des agents chimiques, y compris le plomb, identifié par l'État de Californie comme pouvant causer le cancer, des malformations congénitales ou d'autres troubles de la reproduction. Pour de plus amples informations, prière de consulter https://www.P65Warnings.ca.gov.

The products sold by Supermicro are not intended for and will not be used in life support systems, medical equipment, nuclear facilities or systems, aircraft, aircraft devices, aircraft/emergency communication devices or other critical systems whose failure to perform be reasonably expected to result in significant injury or loss of life or catastrophic property damage. Accordingly, Supermicro disclaims any and all liability, and should buyer use or sell such products for use in such ultra-hazardous applications, it does so entirely at its own risk. Furthermore, buyer agrees to fully indemnify, defend and hold Supermicro harmless for and against any and all claims, demands, actions, litigation, and proceedings of any kind arising out of or related to such ultra-hazardous use or sale.

Manual Revision 1.0

Release Date: April 21, 2026

Unless you request and receive written permission from Super Micro Computer, Inc., you may not copy any part of this document. Information in this document is subject to change without notice. Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders.

Copyright © 2026 by Super Micro Computer, Inc.
All rights reserved.
Published in the United States of America

Preface

About This Manual

This manual is written for professional system integrators and PC technicians. It provides information for the installation and use of the AS -2116S-FTNRT/TNRT server. Installation and maintenance should be performed by certified service technicians only.

Notes

For your system to work properly, follow the links below to download all necessary drivers/utilities and the user's manual for your server.

- Supermicro product manuals: https://www.supermicro.com/support/manuals
- Product drivers and utilities: https://www.supermicro.com/wdl
- Product safety info: https://www.supermicro.com/about/policies/safety_information.cfm
- A secure data deletion tool designed to fully erase all data from storage devices can be found on our website: https://www.supermicro.com/about/policies/disclaimer.cfm?url=/wdl/utility/Lot9_Secure_Data_Deletion_Utility
- Frequently Asked Questions: https://www.supermicro.com/FAQ/index.php
- If you still have questions after referring to our FAQs, contact our support team. Region-specific Technical Support email addresses can be found at: "Contacting Supermicro" on page 11
- If you have any feedback on Supermicro product manuals, contact our writing team at: Techwriterteam@supermicro.com

This manual may be periodically updated without notice. Check the Supermicro website for possible updates to the manual revision level.

Conventions Used in the Manual

Special attention should be given to the following symbols for proper installation and to prevent damage done to the components or injury to yourself.



Warning! Indicates important information given to prevent equipment/property damage or personal injury.



Warning! Indicates high voltage may be encountered while performing a procedure.



Warning! Indicates hazardous moving parts may be encountered while handling a fan or components near a fan.

Important: Important information given to ensure proper server installation or to relay safety precautions.

Note: Additional information given to differentiate various models or to provide information for proper server setup.

Contents

Contacting Supermicro ***11***
Chapter 1: Introduction ***12***
1.1 Overview 13
1.2 System Features 15
AS -2116S-FTNRT System Views 15
Drive Carrier LED Indicators 16
AS -2116S-TNRT System Views 17
Drive Carrier LED Indicators 18
Control Panel 20
1.3 System Architecture 22
Main Components 22
Motherboard Block Diagram 24
1.4 Motherboard Quick Reference 25
Motherboard Layout 25
Quick Reference Table 27
Chapter 2: Server Installation ***29***
2.1 Unpacking the System 30
2.2 Preparing for Setup in a Rack 31
Choosing a Setup Location 31
Rack Precautions 31
System Precautions 31
Rack Mounting Considerations 32
Ambient Operating Temperature 33
Airflow 33
Mechanical Loading 33
Circuit Overloading 33
Reliable Ground 33
Installing the Rails 33
Identifying the Rails 33
Locking Tabs 34
Separating the Inner and Outer Rails 34

Assembling the Inner and Outer Rails 34
Installing the Inner Rails onto the Chassis 36
Installing the Outer Rails onto the Rack 37
Installing the Chassis into the Rack 38
Removing the Chassis from the Rack 39
Removing the Outer Rails from the Rack 40
Releasing the Outer Rails 40
2.3 Preparing for Setup on a Wall 41
Unpacking the System 41
Warnings and Precautions 41
Adding System Components 41
Wall Mounting Procedure 41
Mounting the Chassis 42
Chapter 3: Maintenance and Component Installation 44
3.1 Removing Power 46
3.2 Accessing the System 47
Removing the Top Cover 47
3.3 Static-Sensitive Devices 48
Precautions 48
3.4 Processor and Heatsink Installation 49
Preparing the Processor Socket 49
Installing the Processor into the Frame 52
Installing the Heatsink 55
Uninstalling the Heatsink and Processor 57
3.5 Memory Support and Installation 58
Memory Support 58
General Guidelines for Optimizing Memory Performance 59
DIMM Installation 60
DIMM Removal 62
3.6 Motherboard Battery Removal and Installation 63
Battery Removal 63
Proper Battery Disposal 63
Battery Installation 63
3.7 Storage Drives 64

Removing Hard Drive Carriers from the Chassis 64
Installing a Storage Drive into a Drive Carrier 64
Hot-Swap for NVMe Drives 65
Ejecting a Drive 65
Replacing a Drive 65
3.8 System Cooling 66
Fans 66
Changing a Fan 66
Air Shrouds 67
Installing an Air Shroud 67
3.9 Expansion Cards 68
Riser Cards 68
Installing Expansion Cards into Brackets 68
3.10 Power Supply 70
Replacing the Power Supply 70
Chapter 4: Motherboard Connections, Jumpers, and LEDs 72
4.1 Power Supply and Power Connections 74
Main Power Supply Connector (JPWR3) 74
12 V 8-pin Auxilliary Power Connector (JPWR1, JPWR2) 74
4.2 JF1 Front Control Panel Headers 75
4.3 Headers and Connections 76
Chassis Intrusion 76
COM1 Header 76
Disk-On-Module Power Connectors (JSD1 and JSD2) 77
IPMB (Intelligent Platform Management Bus) Header (JIPMB1) 77
NCSI Header (JNCSI1) 77
Onboard Battery (BT1) 78
Onboard Fan Headers (FAN1–FAN4, FANA, FANB) 78
Power System Management Bus (SMBus/I²C) Header (PWRI2C) 79
SATA (SATA8–15) 79
TPM/Port 80 Header 80
USB Ports (USB4–USB5) 80
VGA Port 81
4.4 Jumper Settings 82

CMOS Clear 82
LAN Enable/Disable (JPL1) 83
JMCIO3 NVMe/SATA Switch (JSATA1) 83
4.5 LED Indicators 84
LAN Port LEDs 84
BMC Heartbeat LED 84
BMC LAN LEDs 85
Onboard Power LED (LED9) 85
Unit ID (UID) LED 86
Chapter 5: Software ***87***
5.1 Microsoft Windows OS Installation 88
Installing the OS 88
5.2 Driver Installation 90
5.3 BMC 91
BMC ADMIN User Password 91
Chapter 6: Optional Components ***92***
6.1 Rackmount Rails or Wall-Mounting Brackets 93
Chapter 7: Troubleshooting and Support ***94***
7.1 Online Resources 95
Direct Links for the AS -2116S-FTNRT/TNRT System 95
Direct Links for General Support and Information 95
7.2 Baseboard Management Controller (BMC) 96
7.3 Troubleshooting Procedures 97
Before Power On 97
No Power 97
No Video 97
System Boot Failure 97
Memory Errors 98
Losing the System's Setup Configuration 98
If the System Becomes Unstable 98
7.4 CMOS Clear 100
7.5 Motherboard Battery 101
7.6 Where to Get Replacement Components 102
7.7 Technical Support Procedures 103

Returning Merchandise for Service 103
7.8 Feedback 105
Chapter 8: UEFI BIOS ***106***
8.1 Introduction 107
Updating BIOS 107
Starting the Setup Utility 107
8.2 Main Setup 109
8.3 Advanced Setup Configurations 111
Boot Feature Menu 111
CPU Configuration Menu 113
NB Configuration 115
ACPI Settings Menu 118
Super IO Configuration Menu 118
Serial Port 1 Configuration Menu 118
Serial Port 2 Configuration Menu 119
Serial Port Console Redirection Menu 119
PCIe/PCI/PnP Configuration Menu 121
USB Configuration 123
Network Configuration Menu 123
SATA Configuration Menu 126
HTTP Boot Configuration Menu 126
Supermicro KMS Server Configuration Menu 127
Super-Guardians Configuration Menu 129
System Diagnostics Configuration 131
Supermicro Network Adapter Menu 131
TLS Authenticate Configuration Menu 134
RAM Disk Configuration 135
Driver Health Menu 136
8.4 BMC 137
System Event Log Menu 137
BMC Network Configuration Menu 138
8.5 Event Logs 141
8.6 Security 143
8.7 Boot 145

8.8 Save & Exit 147
Appendix A: BIOS Codes ***149***
BIOS Error POST (Beep) Codes 149
Additional BIOS POST Codes 149
Appendix B: Standardized Warning Statements for AC Systems ***150***
Standard Warning Definition 150
Electrical Warning Definition 152
Installation Instructions 154
Circuit Breaker 155
Power Disconnection Warning 156
Equipment Installation 158
Rack Stability Hazard 160
Rack-Mounted Equipment Warning 162
Restricted Access Location 163
Battery Handling 165
Redundant Power Supplies 167
Backplane Voltage 168
Comply with Local and National Electrical Codes 170
Fan Warning 171
Connection to Earth 173
Power Cable and AC Adapter 174
Product Disposal 177
Appendix C: System Specifications ***179***
Appendix D: General Data Center Environmental Specifications ***183***

Contacting Supermicro

Headquarters

Address:	Super Micro Computer, Inc. 980 Rock Ave. San Jose, CA 95131 U.S.A.
Tel:	+1 (408) 503-8000
Fax:	+1 (408) 503-8008
Email:	Marketing@supermicro.com (General Information) Sales-USA@supermicro.com (Sales Inquiries) Government_Sales-USA@supermicro.com (Gov. Sales Inquiries) Support@supermicro.com (Technical Support) RMA@Supermicro.com (RMA Support) Webmaster@supermicro.com (Webmaster)
Website:	https://www.supermicro.com

Europe

Address:	Super Micro Computer B.V. Het Sterrenbeeld 28, 5215 ML 's-Hertogenbosch, The Netherlands
Tel:	+31 (0) 73-6400390
Fax:	+31 (0) 73-6416525
Email:	Sales_Europe@supermicro.com (Sales Inquiries) Support_Europe@supermicro.com (Technical Support) RMA_Europe@supermicro.com (RMA Support)
Website:	https://www.supermicro.nl

Asia-Pacific

Address:	Super Micro Computer, Inc. 3F, No. 150, Jian 1st Rd. Zhonghe Dist., New Taipei City 235 Taiwan (R.O.C)
Tel:	+886 (2) 8226-3990
Fax:	+886 (2) 8226-3992
Email:	Sales-Asia@supermicro.com.tw (Sales Inquiries) Support@supermicro.com.tw (Technical Support) RMA@supermicro.com.tw (RMA Support)
Website:	https://www.supermicro.com.tw

Chapter 1:

Introduction

This chapter provides a brief outline of the functions and features of the AS -2116S-FTNRT/TNRT system. It is based on the H14SSL-NT motherboard and the CSE-223M/223M2-R000LPNDP chassis.

1.1 Overview **13**
1.2 System Features **15**
AS -2116S-FTNRT System Views 15
AS -2116S-TNRT System Views 17
Control Panel 20
1.3 System Architecture **22**
Main Components 22
Motherboard Block Diagram 24
1.4 Motherboard Quick Reference **25**
Motherboard Layout 25
Quick Reference Table 27

1.1 Overview

This chapter provides a brief outline of the functions and features of the A+ Server AS -2116S-FTNRT/TNRT. The following provides an overview of the system specifications and capabilities.

System Overview	
Motherboard	H14SSL-NT
Chassis	For AS -2116S-FTNRT: CSE-223M-R000LPNDP For AS -2116S-TNRT: CSE-223M2-R000LPNDP
Processor	Single AMD EPYC™ 9005 Series Processor with Socket SP5
Memory	12 DIMM slots, supporting up to 3 TB registered ECC DDR5 at 6400 MT/s
Drive Support	Four hot-swappable 2.5” NVMe/SATA drive bays (NVMe support may require optional parts) Two M.2 PCIe 5.0 x4 NVMe/SATA slots (M-key 22110/2280)
Expansion Slots	**Default:** Three PCIe 5.0 x16 half-height, full-length (HHFL) slots Two PCIe 5.0 x8 HHFL slots **Option A:** One PCIe 5.0 x16 full-height, full-length (FHFL) double-width slot
I/O Ports	One RJ45 1 GbE dedicated BMC LAN port Two RJ45 10 GbE LAN ports Four USB 3.2 Gen 1 Type-A ports One VGA port
System Cooling	Four 8-cm hot-swappable fans One air shroud per node
Power	For power supply details, refer to "System Specifications" on page 179: For AS -2116S-FTNRT only: Two redundant (1+1) 2000 W Titanium Level (96%) power supplies For AS -2116S-TNRT only: Two redundant (1+1) 1000 W (upgradeable to 2000 W) Titanium Level (96%) power supplies
Form Factor	2U rackmount; 17.2” x 3.5” x 17.72” (437 x 89 x 450 mm) (WxHxD)

Notes:

- A Quick Reference Guide can be found on the following pages of the Supermicro website:
  - https://www.supermicro.com/en/products/system/iot/2u/as%20-2116s-ftnrt
  - https://www.supermicro.com/en/products/system/iot/2u/as%20-2116s-tnrt
- The following safety models associated with the AS -2116S-FTNRT/TNRT have been certified as compliant with UL or CSA:
  - For AS -2116S-FTNRT only: 223M-R20H14 or 223M-20
  - For AS -2116S-TNRT only: 223M2-R20H14, 223M2-20, 223M2-R10H14, or 223M2-10

1.2 System Features

The following views of the system display the main features. Refer to the System Specifications appendix of this manual for additional specifications.

AS -2116S-FTNRT System Views

The following features are located on the front and rear of the AS -2116S-FTNRT server.

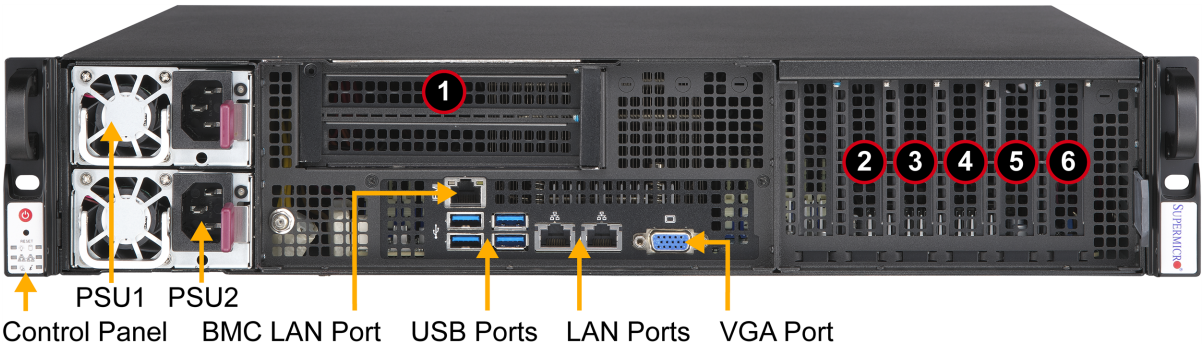


Figure 1-1. AS -2116S-FTNRT Front View

AS -2116S-FTNRT Features: Front	
Feature	**Description**
Control Panel	One system control panel with a power button and status LEDs
Power Supplies	Two redundant 2000 W power supplies
BMC LAN Port	One RJ45 1 GbE dedicated BMC LAN port
USB Ports	Four USB 3.2 Gen 1 Type-A ports
LAN Ports	Two RJ45 10 GbE LAN ports
VGA Port	One legacy VGA port

Expansion Slot Locations	
Slot	**Description**
1	(Optional) One PCIe 5.0 x16 FHFL double-width slot
2, 4, 6	Three PCIe 5.0 x16 HHFL slots
3, 5	Two PCIe 5.0 x8 HHFL slots

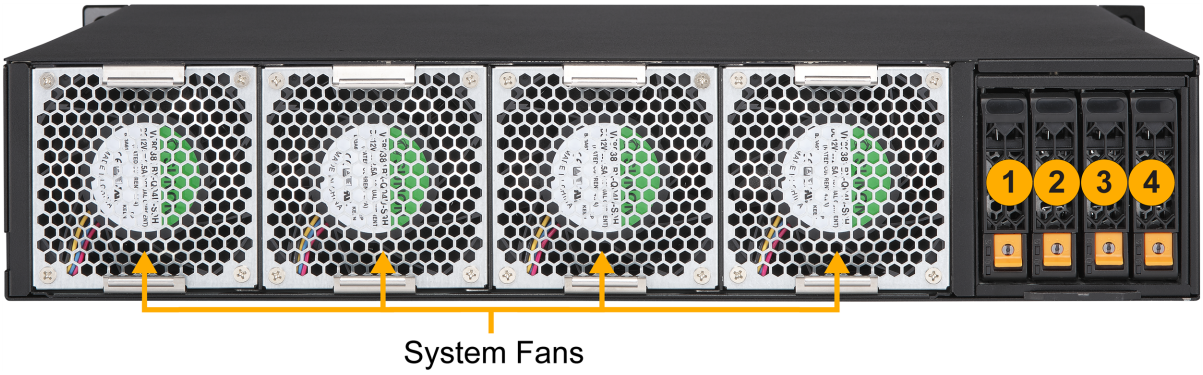


Figure 1-2. AS -2116S-FTNRT Rear View

AS -2116S-FTNRT Features: Rear	
Feature	**Description**
System Fans	Four 8-cm hot-swappable fans

Storage Drive Locations	
Slot	**Description**
1–4	Four hot-swappable 2.5” NVMe/SATA drive bays
NVMe support may require additional storage controller and/or cables	

Drive Carrier LED Indicators

Each drive carrier has two LED indicators: an activity indicator and a status indicator. For RAID configurations using a controller, the meaning of the status indicator is described in the table below. For OS RAID or non-RAID configurations, some LED indications are not supported, such as hot spare.

Drive Carrier LED Indicators			
LED	**Color**	**Pattern**	**Device Behavior**
Activity LED	Blue	Solid	Idle SAS/NVMe drive installed
	Blue	Blinking	I/O activity
	Off	N/A	Idle SATA or no drive

Drive Carrier LED Indicators			
LED	**Color**	**Pattern**	**Device Behavior**
Status LED	Red	Solid	Failure of a drive with RSTe support
	Red	Blinking at 1 Hz	Rebuild required for a drive with RSTe support
	Red	Blinking with two blinks and one stop at 1 Hz	Hot spare for a drive with RSTe support
	Red	On for five seconds, then off	Power on for a drive with RSTe support
	Red	Blinking at 4 Hz	Identification for a drive with RSTe support
	Off	N/A	Idle SATA or no drive

AS -2116S-TNRT System Views

The following features are located on the front and rear of the AS -2116S-TNRT server.

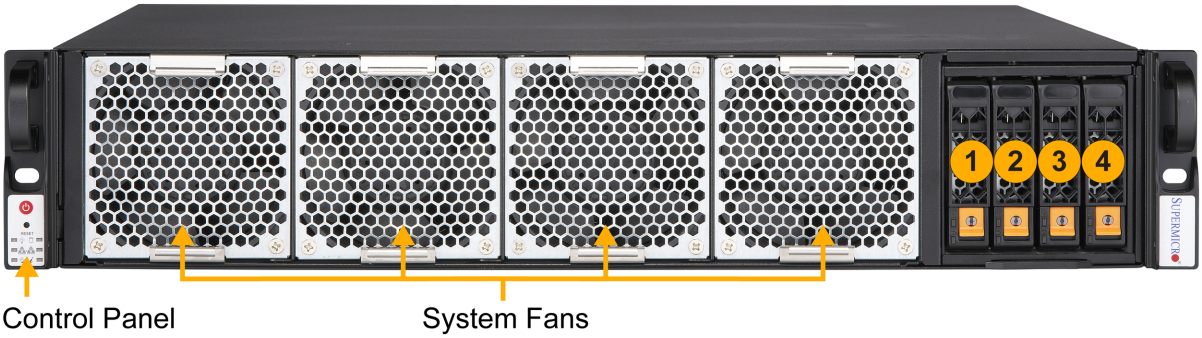


Figure 1-3. AS -2116S-TNRT Front View

AS -2116S-TNRT Features: Front	
Feature	**Description**
Control Panel	One system control panel with a power button and status LEDs
System Fans	Four 8-cm hot-swappable fans

Storage Drive Locations	
Slot	**Description**
1–4	Four hot-swappable 2.5” NVMe/SATA drive bays
NVMe support may require additional storage controller and/or cables	

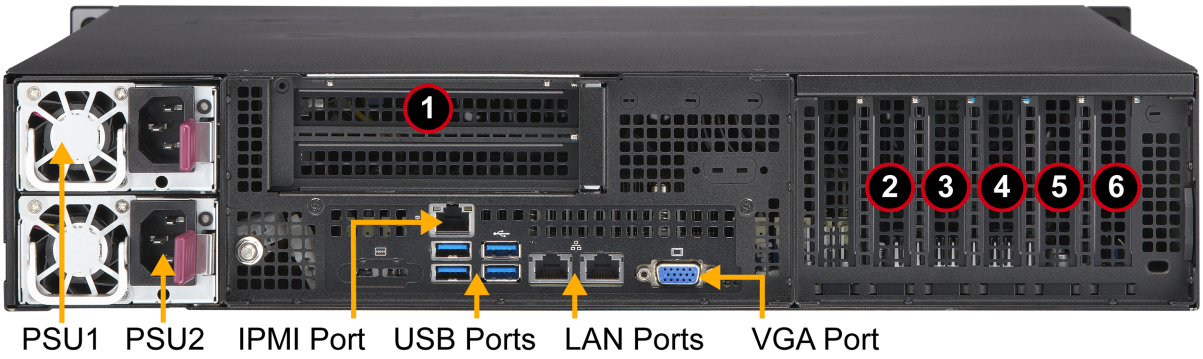


Figure 1-4. AS -2116S-TNRT Rear View

AS -2116S-TNRT Features: Rear	
Feature	**Description**
Power Supplies	Two redundant 2000 W power supplies
BMC LAN Port	One RJ45 1 GbE dedicated BMC LAN port
USB Ports	Four USB 3.2 Gen 1 Type-A ports
LAN Ports	Two RJ45 10 GbE LAN ports
VGA Port	One legacy VGA port

Expansion Slot Locations	
Slot	**Description**
1	(Optional) One PCIe 5.0 x16 FHFL double-width slot
2, 4, 6	Three PCIe 5.0 x16 HHFL slots
3, 5	Two PCIe 5.0 x8 HHFL slots

Drive Carrier LED Indicators

Each drive carrier has two LED indicators: an activity indicator and a status indicator. For RAID configurations using a controller, the meaning of the status indicator is described in the table below. For OS RAID or non-RAID configurations, some LED indications are not supported, such as hot spare.

Drive Carrier LED Indicators			
LED	**Color**	**Pattern**	**Device Behavior**
Activity LED	Blue	Solid	Idle SAS/NVMe drive installed
	Blue	Blinking	I/O activity
	Off	N/A	Idle SATA or no drive

Drive Carrier LED Indicators			
LED	**Color**	**Pattern**	**Device Behavior**
Status LED	Red	Solid	Failure of a drive with RSTe support
	Red	Blinking at 1 Hz	Rebuild required for a drive with RSTe support
	Red	Blinking with two blinks and one stop at 1 Hz	Hot spare for a drive with RSTe support
	Red	On for five seconds, then off	Power on for a drive with RSTe support
	Red	Blinking at 4 Hz	Identification for a drive with RSTe support
	Off	N/A	Idle SATA or no drive

Control Panel

The following switches and LEDs are located on the AS -2116S-FTNRT/TNRT server control panel.

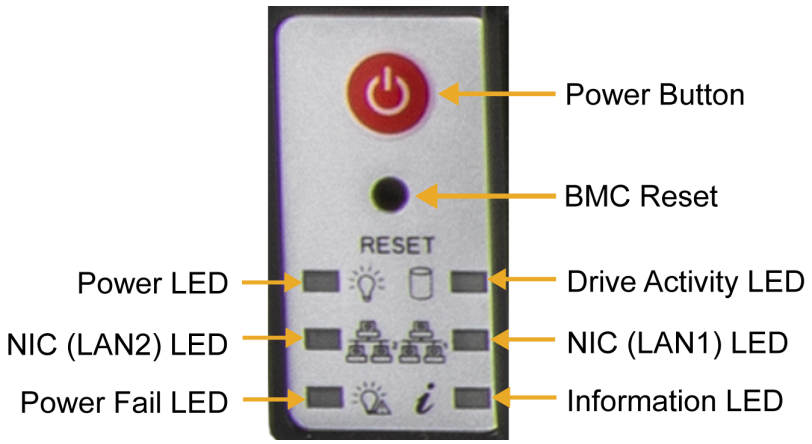


Figure 1-5. AS -2116S-FTNRT/TNRT Control Panel

Control Panel Features	
Feature	**Description**
Power Button	Button applying/removing main power Standby power maintained when LED is off
BMC Reset	BMC firmware reset button
Power LED	LED indicating power on (steady)
Drive Activity LED	LED indicating activity on any installed storage drive
NIC (LAN1) LED	LED indicating network activity on LAN1 when flashing
NIC (LAN2) LED	LED indicating network activity on LAN2 when flashing
Power Fail LED	LED indicating power support module failure (flashing) LED is off during normal operation
Information LED	LED indicating system states (see Information LED table below for details)

Information LED	
Color, Status	**Description**
Red, solid	Overheating condition
Red, blinking at 1 Hz	Fan failure (check for an inoperative fan)
Red, blinking at 0.25 Hz	Power failure (check for an inoperative power supply)
Red, solid with Power LED blinking green	Fault detected
Blue and red, blinking at 10 Hz	Recovery mode

Information LED	
Color, Status	**Description**
Blue, solid	UID activated locally to locate the server in a rack environment
Blue, blinking at 1 Hz	UID activated via BMC to locate the server in a rack environment
Blue, blinking at 2 Hz	BMC resetting
Blue, blinking at 4 Hz	BMC setting factory defaults
Blue, blinking at 10 Hz with Power LED blinking green	BMC/BIOS firmware updating

1.3 System Architecture

This section covers the locations of the system's main components and provides a motherboard block diagram.

Main Components

The following main components are located inside the AS -2116S-FTNRT/TNRT server.

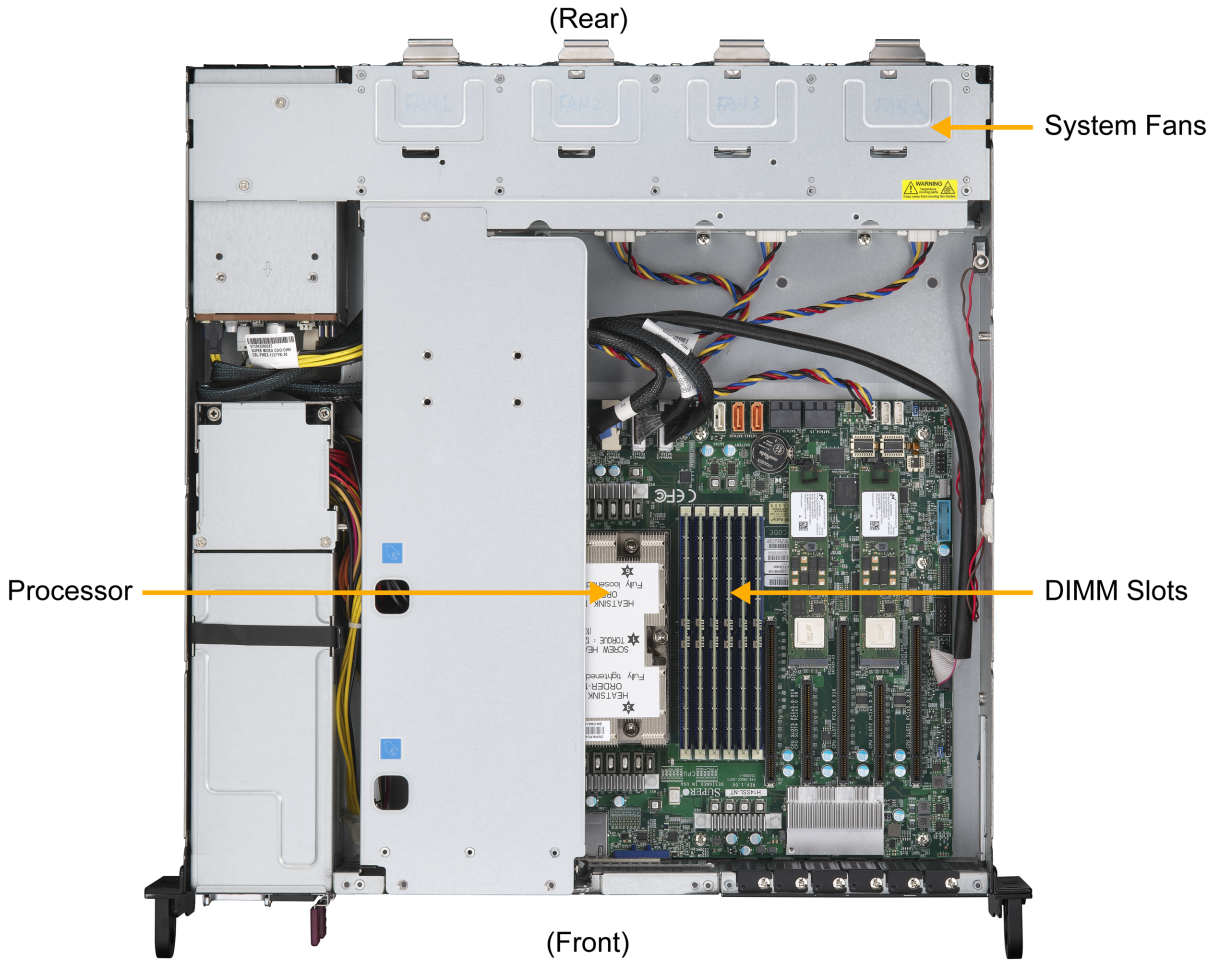


Figure 1-6. AS -2116S-FTNRT Main Component Locations

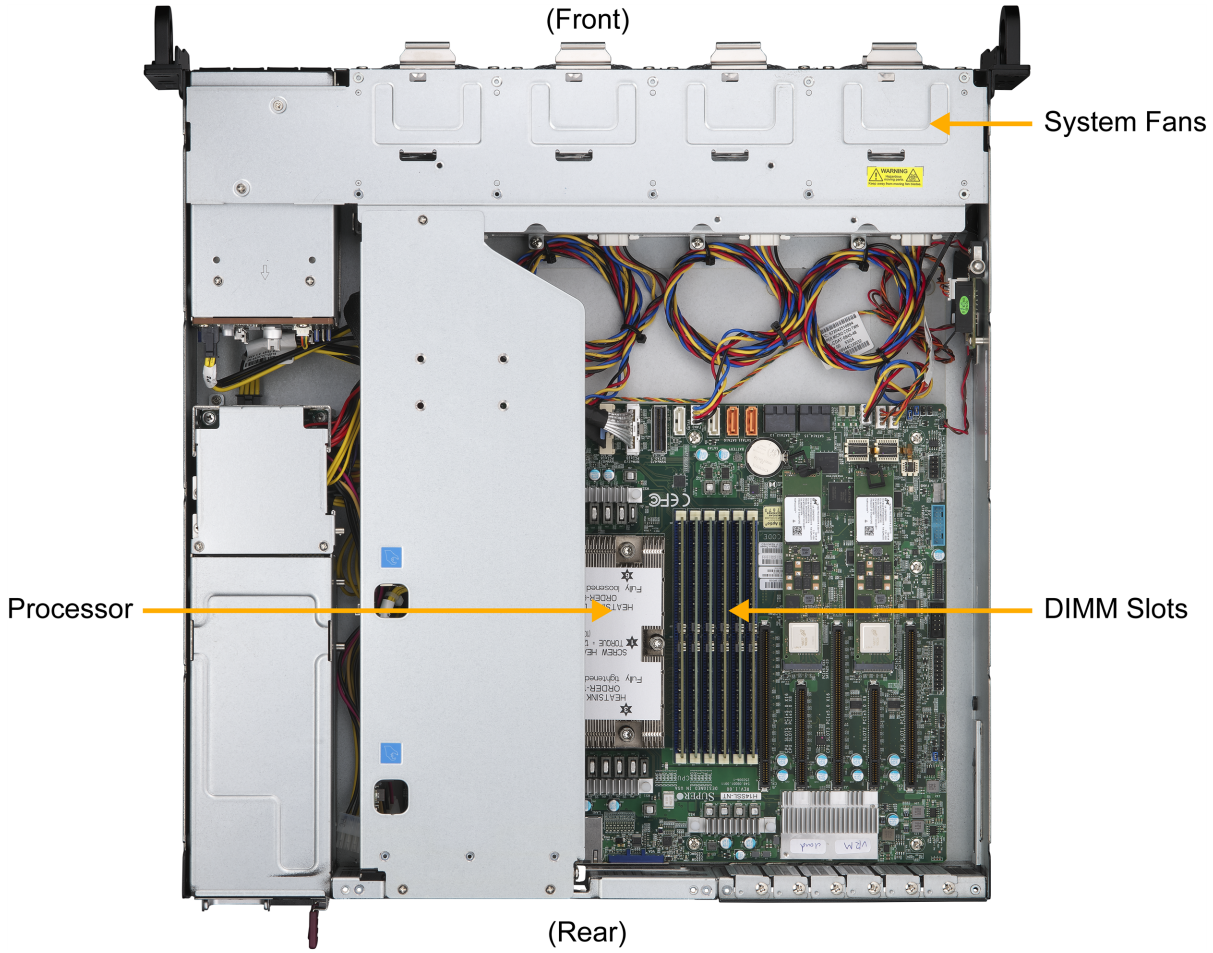


Figure 1-7. AS -2116S-TNRT Main Component Locations

Main System Components	
Feature	**Description**
System Fans	Four 8-cm hot-swappable fans
Processor	Single AMD EPYC™ 9005 Series Processor with Socket SP5
DIMM Slots	12 DIMM slots DDR5

Motherboard Block Diagram

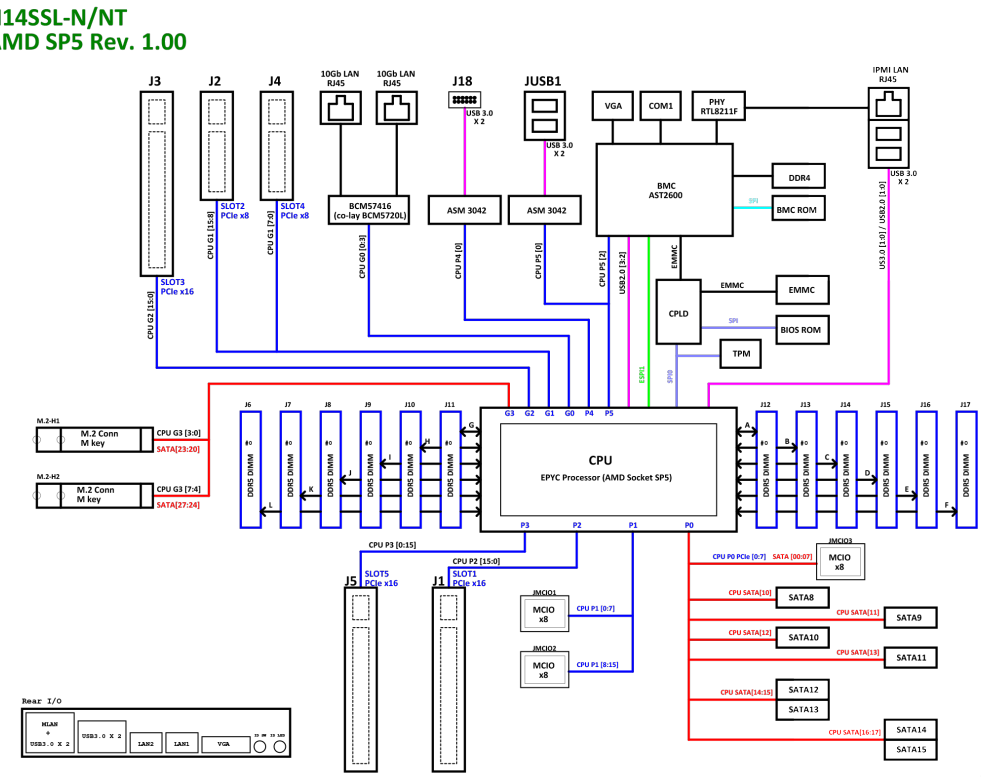


Figure 1-8. Motherboard Block Diagram

1.4 Motherboard Quick Reference

For details on the H14SSL-NT motherboard layout and other quick reference information, refer to the content below.

Motherboard Layout

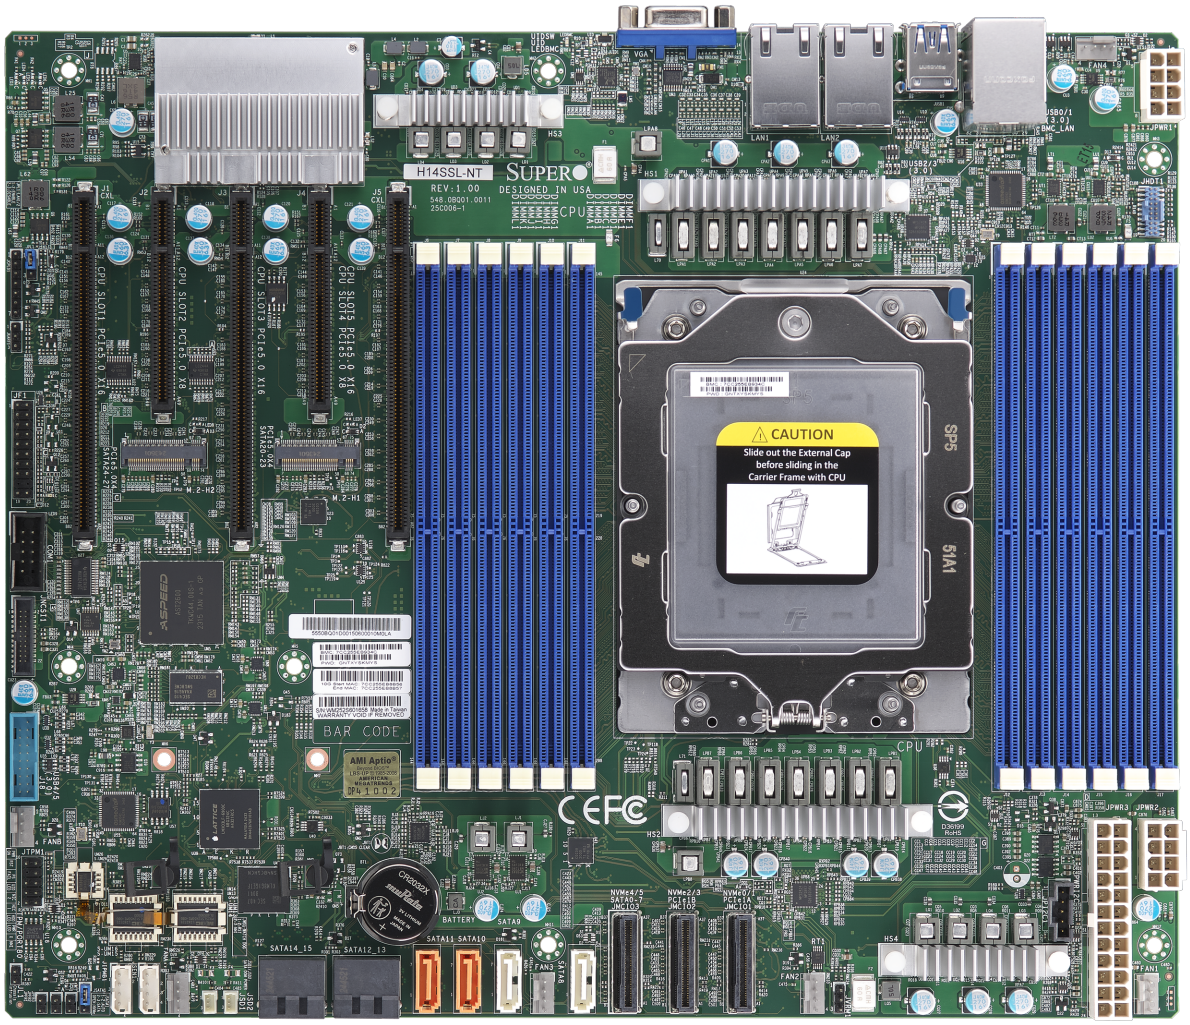


Figure 1-9. H14SSL-NT Motherboard Image

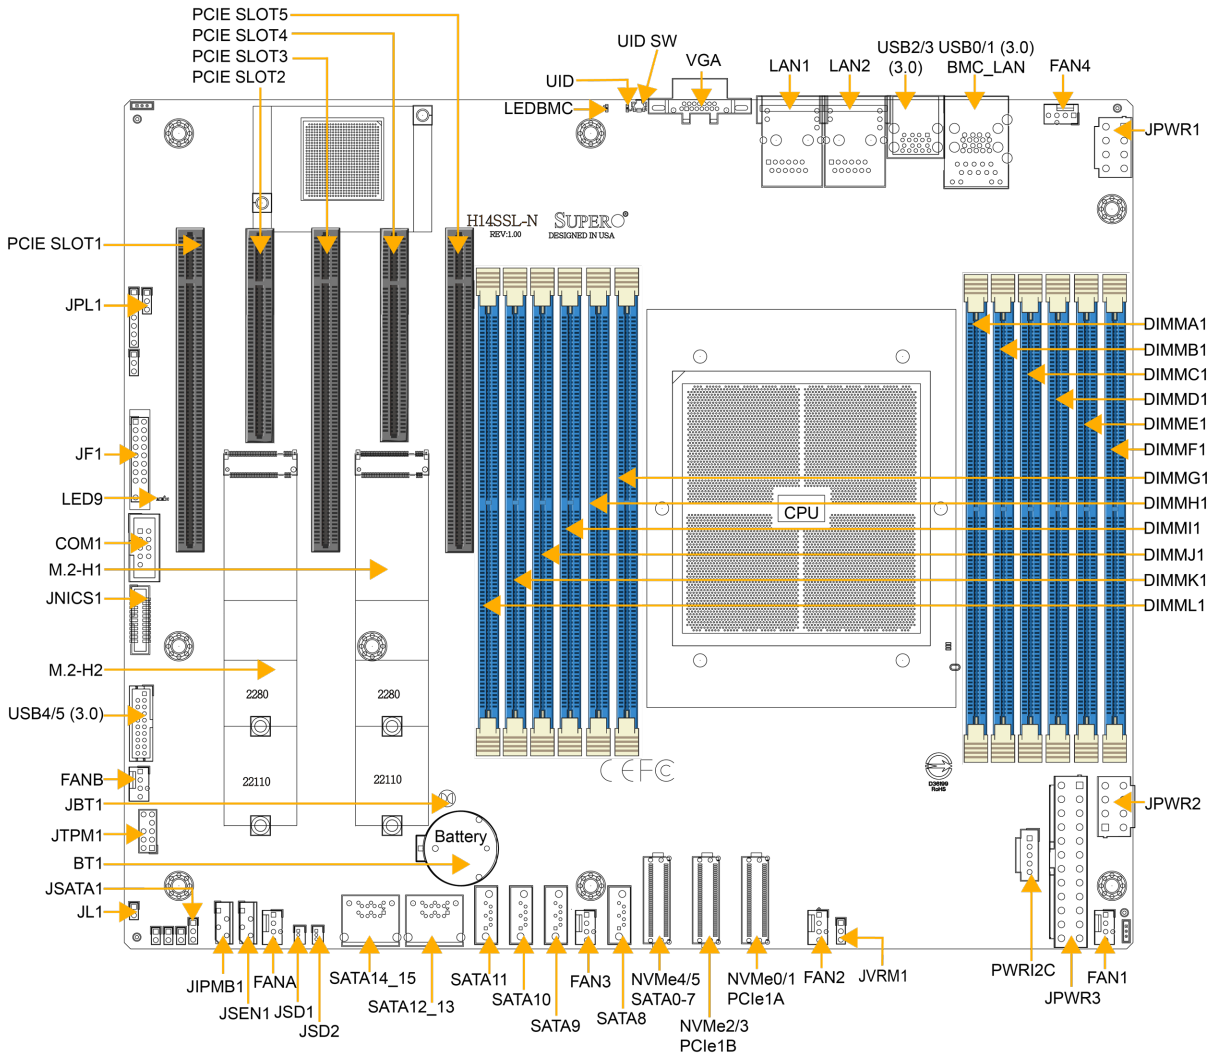


Figure 1-10. H14SSL-NT Motherboard Layout (H14SSL-N Shown)

Notes:

- For detailed information on jumpers, connectors, and LED indicators, see Component Installation.
- "■" indicates the location of pin 1.
- Components not documented are for internal testing purposes only.
- Use only the correct type of onboard CMOS battery as specified by the manufacturer. To avoid possible explosion, do not install the onboard battery upside down.

Quick Reference Table

Jumper	Description	Default Setting
JBT1	CMOS Clear	Open (Normal)
JPL1	LAN Enable/Disable	Pins 1–2 (Enabled)
JSATA1	Hybrid MCIO Select	Pins 1–2 (Auto)
UID SW	Unit ID switch (push-button toggle switch ON/OFF)	Off

LED	Description	Status
LEDBMC	BMC Heartbeat LED	Green: Blinking (BMC Normal) Green: Fast blinking (BMC Initializing)
LED9	Power LED	Green: Blinking (BIOS initializing) Green: Solid on (Power on)
UID	UID LED	Blue: Blinking (BMC remote unit identified) Blue: Solid on (UID switched to unit identified)

Connector	Description
BT1	Onboard Battery
BMC_LAN	Dedicated BMC LAN Port
COM1	Front Accessible COM Port Header
DIMMA to DIMML	Twelve Memory Module Slots
FAN1, 2, 3, 4, A, B	4-pin System/CPU Cooling Fan Headers
JF1	Front Control Panel Header
JIPMB1	4-pin BMC External I^2C Header (for an IPMI Card)
JL1	Chassis Intrusion Header
JNCSI1	NC-SI (Network Controller Sideband Interface) Connector
JPWR1, JPWR2	8-pin CPU Power Connectors
JPWR3	24-pin ATX Power Supply Connector
JSD1, JSD2	SATA DOM Power Connector
JSEN1	Thermal Sensor Header

Connector	Description
JTPM1	Trusted Platform Module/Port 80 Connector
LAN1, LAN2	Back Panel LAN1, LAN2 Connectors
M.2-H1, M.2-H2	M.2 Slots
NVMe0/1 PCIe1A	NVMe Ports 0/1, PCIe Port 1A
NVMe2/3 PCIe1B	NVMe Ports 2/3, PCIe Port 1B
NVMe4/5 SATA0–7	NVMe Ports 4/5 or SATA Ports 0–7
PCIE SLOT1, 3, 5	PCIE Slot PCIe 5.0 x16
PCIE SLOT2, 4	PCIE Slot PCIe 5.0 x8
PWRI2C	Power Supply SMBus I^2C Header
SATA0–7	SATA 0–7 via JMCIO3
SATA8, SATA9, SATA10, SATA11	Onboard SATA Ports 8–11
SATA12–13; 14–15	Onboard SATA ports 12–13; 14–15
USB0/1 (3.0)	Back Panel USB 3.0 Ports (USB0/1)
USB2/3 (3.0)	Back Panel USB 3.0 Ports (USB2/3)
USB4/5 (3.0)	Internal USB 3.0 header (USB4/5)
VGA	Back Panel VGA Port

Note: Jumpers, connectors, switches, and LED indicators that are not described in these tables are for manufacturing testing purposes only, and are not covered in this manual.

Chapter 2:

Server Installation

This chapter provides advice and instructions for mounting your AS -2116S-FTNRT/TNRT server in a server rack or on a wall. If ordered, rackmount rails or wall-mounting brackets will be shipped with your system. Depending on your configuration, see setup information for "Preparing for Setup in a Rack" on page 31 or "Preparing for Setup on a Wall" on page 41.

Note: By default, the server is shipped without rackmount rails or wall-mounting brackets; these parts must be requested while ordering.

If your server is not already fully integrated with processors, system memory, etc., refer to "Maintenance and Component Installation" on page 44 for details on installing those specific components.

Important: Electrostatic Discharge (ESD) can damage electronic components. To prevent such damage to printed circuit boards (PCBs), it is important to use a grounded wrist strap, handle all PCBs by their edges, and keep PCBs in anti-static bags when not in use.

2.1 Unpacking the System 30
2.2 Preparing for Setup in a Rack 31
Choosing a Setup Location 31
Rack Precautions 31
System Precautions 31
Rack Mounting Considerations 32
Installing the Rails 33
Installing the Chassis into the Rack 38
2.3 Preparing for Setup on a Wall 41
Unpacking the System 41
Warnings and Precautions 41
Adding System Components 41
Wall Mounting Procedure 41

2.1 Unpacking the System

Inspect the box the server was shipped in and note if it was damaged in any way. If any equipment appears damaged, file a damage claim with the carrier who delivered it.

If you ordered optional rackmount rails or wall-mounting brackets with your server, decide on a suitable location for the rack unit or the wall-mounting brackets that will hold the server. It should be situated in a clean, dust-free area that is well ventilated. Avoid areas where heat, electrical noise, and electromagnetic fields are generated. It will also require a grounded AC power outlet nearby. Be sure to read the precautions and considerations noted in "Standardized Warning Statements for AC Systems" on page 150.

2.2 Preparing for Setup in a Rack

If you ordered rackmount rails with the AS -2116S-FTNRT/TNRT server, the box in which the server was shipped should include the rackmount hardware needed to install it into the rack. Read this section in its entirety before you begin the installation.

Choosing a Setup Location

- The server should be situated in a clean, dust-free area that is well ventilated. Avoid areas where heat, electrical noise and electromagnetic fields are generated.
- Leave enough clearance in front of the rack so that you can open the front door completely (~25 inches) and approximately 30 inches of clearance in the back of the rack to allow sufficient space for airflow and access when servicing.
- This product should be installed only in a Restricted Access Location (dedicated equipment rooms, service closets, etc.).
- This product is not suitable for use with visual display workplace devices according to §2 of the German Ordinance for Work with Visual Display Units.

Rack Precautions

- Ensure that the leveling jacks on the bottom of the rack are extended to the floor so that the full weight of the rack rests on them.
- In single rack installations, stabilizers should be attached to the rack. In multiple rack installations, the racks should be coupled together.
- Always make sure the rack is stable before extending a server or other component from the rack.
- You should extend only one server or component at a time. Extending two or more simultaneously may cause the rack to become unstable.

System Precautions

- Review the electrical and general safety precautions in "Standardized Warning Statements for AC Systems" on page 150.
- Determine the placement of each component in the rack before you install the rails.
- Install the heaviest server components at the bottom of the rack first and then work your way up.

- Use a regulating uninterruptible power supply (UPS) to protect the server from power surges and voltage spikes and to keep your system operating in case of a power failure.
- Allow any drives and power supply modules to cool before touching them.
- When not servicing, always keep the front door of the rack and all covers/panels on the server closed to maintain proper cooling.

Rack Mounting Considerations

Warning! Stability hazard. The rack may tip over causing serious personal injury. Before extending the rack to the installation position, read the installation instructions. Do not put any load on the slide-rail mounted equipment in the installation position. Do not leave the slide-rail mounted equipment in the installation position.

Avertissement!
Danger d'instabilité. Le rack peut basculer et provoquer des blessures corporelles graves.
Avant d'étendre le rack en position d'installation, lire les instructions d'installation. Ne pas charger l'équipement monté sur rail de glissière en position d'installation. Ne pas laisser l'équipement monté sur rail de glissière en position d'installation.

Important: To prevent bodily injury when mounting or servicing this unit in a rack, you must take special precautions to ensure that the server remains stable. The following guidelines are provided to ensure your safety:

- If this unit is the only unit in the rack, it should be mounted at the bottom of the rack.
- When mounting this unit in a partially filled rack, load the rack from the bottom to the top, placing the heaviest component at the bottom of the rack.
- If the rack is provided with stabilizing devices, install the stabilizers before mounting or servicing the unit in the rack.
- Slide rail mounted equipment is not to be used as a shelf or a workspace.
- Do not pick up the server with the front handles. They are designed to pull the server from a rack only.

Ambient Operating Temperature

If installed in a closed or multi-unit rack assembly, the ambient operating temperature of the rack environment may be greater than the room's ambient temperature. Therefore, consideration should be given to installing the equipment in an environment compatible with the manufacturer's maximum rated ambient temperature (TMRA).

Airflow

Equipment should be mounted into a rack so that the amount of airflow required for safe operation is not compromised.

Mechanical Loading

Equipment should be mounted into a rack so that a hazardous condition does not arise due to uneven mechanical loading.

Circuit Overloading

Consideration should be given to the connection of the equipment to the power supply circuitry and the effect that any possible overloading of circuits might have on overcurrent protection and power supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

Reliable Ground

A reliable ground must be maintained at all times. To ensure this, the rack itself should be grounded. Particular attention should be given to power supply connections other than the direct connections to the branch circuit (i.e. the use of power strips, etc.).

Installing the Rails

This section provides information on installing the CSE-223M/223M2-R000LPNDP chassis into a rack unit with optional rails ordered. There are a variety of rack units on the market, which may mean that the assembly procedure will differ slightly from the instructions provided. You should also refer to the installation instructions that came with the rack unit you are using.

Note: The short rail will fit a rack between 17" and 24" deep. The long rail will fit a rack between 22" and 33" deep.

Identifying the Rails

The CSE-223M/223M2-R000LPNDP chassis package can be ordered with two optional rail assemblies. Each assembly consists of three sections: an inner rail that secures directly to the

chassis, an outer rail that secures to the rack, and a middle rail which extends from the outer rail. These assemblies are specifically designed for the left and right side of the chassis and labeled.

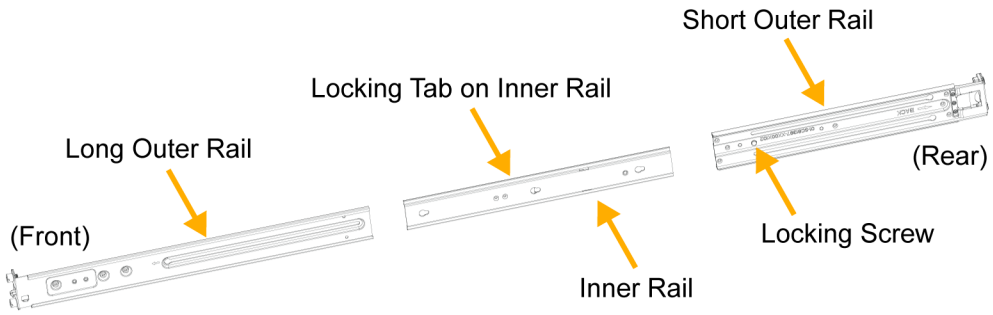


Figure 2-1. Identifying the Inner and Outer Rails

Locking Tabs

The inner rails have a locking tab. These tabs also lock the server in place when fully extended from the rack. This prevents the server from coming completely out of the rack when you pull it out for servicing.

Separating the Inner and Outer Rails

1. Locate the rail assembly in the server packaging.
2. Extend the rail assembly by pulling it outward.
3. Press the quick-release tab.
4. Separate the inner rail extension from the outer rail assembly.

Assembling the Inner and Outer Rails

1. Identify the left and right outer rails. Begin by assembling the left outer rail set.
2. Align the rear side of the long outer rail with the short outer rail. Ensure that the locking screw on the shorter rail fits between the longer rail.

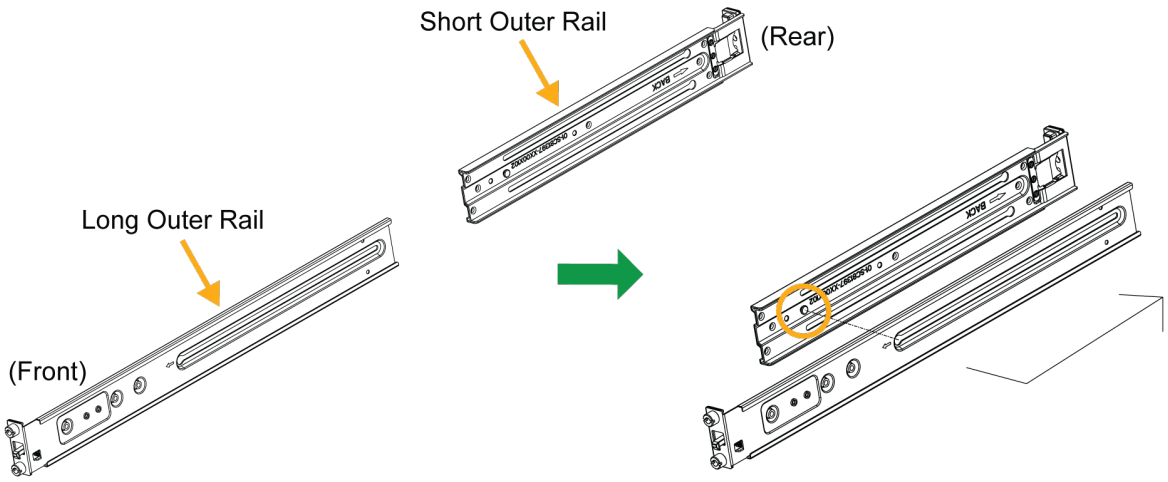


Figure 2-2. Assembling the Outer Rails

3. Slide the long outer rail to the front until it is fully extended and the locking screw is secure.

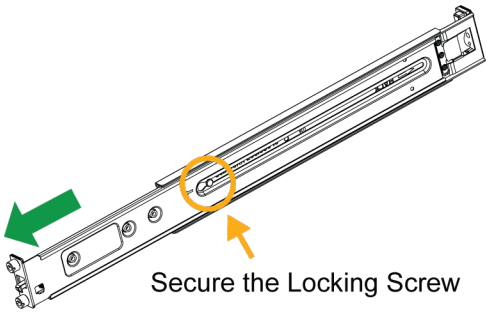


Figure 2-3. Extending the Long Outer Rail

4. Insert the inner rail in the longer outer rail, then secure it by pressing the locking tab on the back side as shown below.

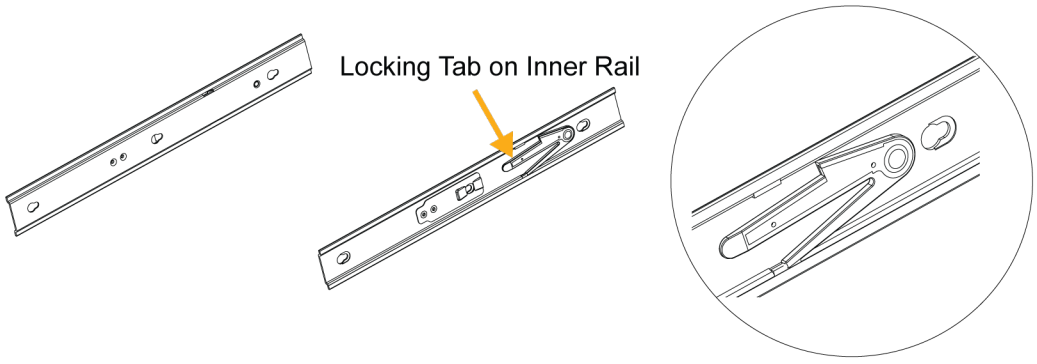


Figure 2-4. Identifying the Locking Tab on the Inner Rail

5. Slide the inner rail inward until the rails are securely connected.
6. Repeat steps 1–5 for the right rail set.

Installing the Inner Rails onto the Chassis

The inner rails can be installed onto the AS -2116S-FTNRT/TNRT server without any tools.

Important: Do not pick up the server with the front handles. They are designed to pull the system from a rack only.

Begin the rack mounting procedure by installing the inner rails to the CSE-223M/223M2-R000LPNDP chassis.

1. Confirm that the left and right inner rails have been correctly identified.
2. Place the inner rail firmly against the side of the chassis, aligning the hooks on the side of the chassis with the holes in the inner rail.
3. Slide the inner rail forward toward the front of the chassis and under the hooks until the quick release bracket snaps into place, securing the rail to the chassis.
4. Optionally, you can further secure the inner rail to the chassis with a screw.
5. Repeat for the other inner rail.

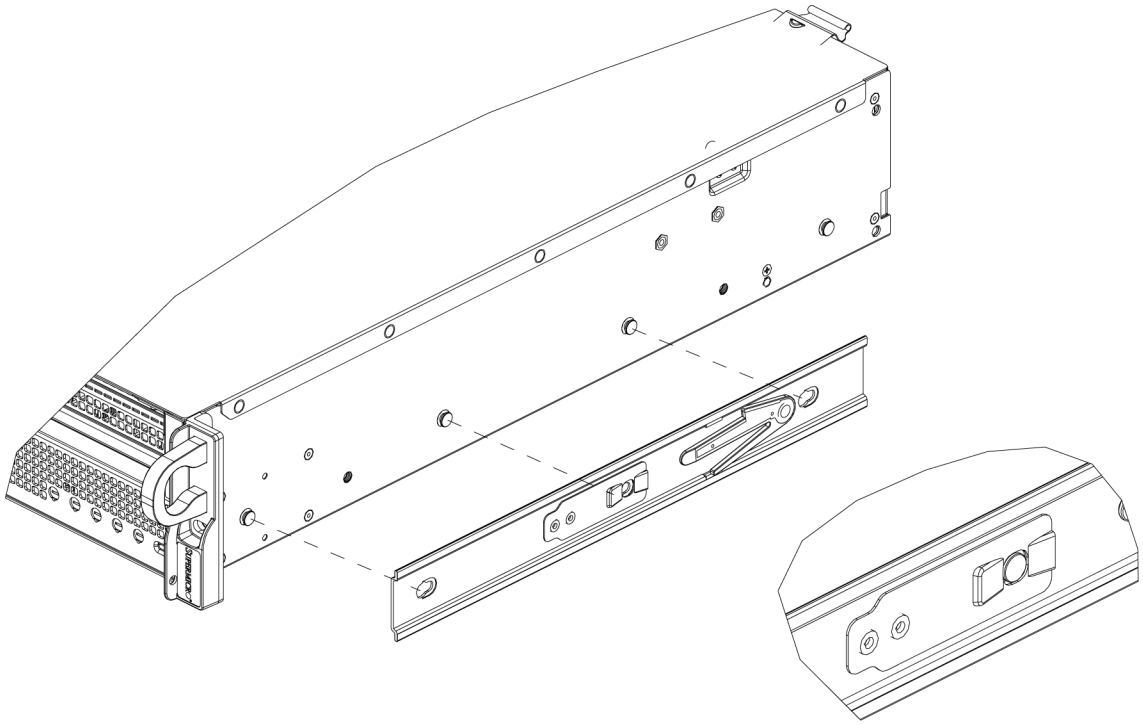


Figure 2-5. Installing the Inner Rails

Installing the Outer Rails onto the Rack

Each end of the assembled outer rail includes a bracket with hooks and square, spring-loaded pegs to fit into the square holes in your rack.

Important: Stability hazard. The rack stabilizing mechanism must be in place, or the rack must be bolted to the floor before you slide the unit out for servicing. Failure to stabilize the rack can cause the rack to tip over.

Important: Do not pick up the server with the front handles. They are designed to pull the system from a rack only.

1. Hang the hooks on the front of the outer rail onto the square holes on the front of the rack. If desired, use screws to secure the outer rails to the rack.
2. Pull out the rear of the outer rail, adjusting the length to fit just within the rack posts.
3. Hang the hooks of the rear section of the outer rail onto the square holes on the rear of the rack. Take care that the proper holes are used so the rails are level. If desired, use screws to secure the rear of the outer rail to the rear of the rack.
4. Install a screw at the center of the rail.
5. Repeat for the other outer rail.

Important: This figure is for illustrative purposes only. Always install servers to the bottom of a rack first.

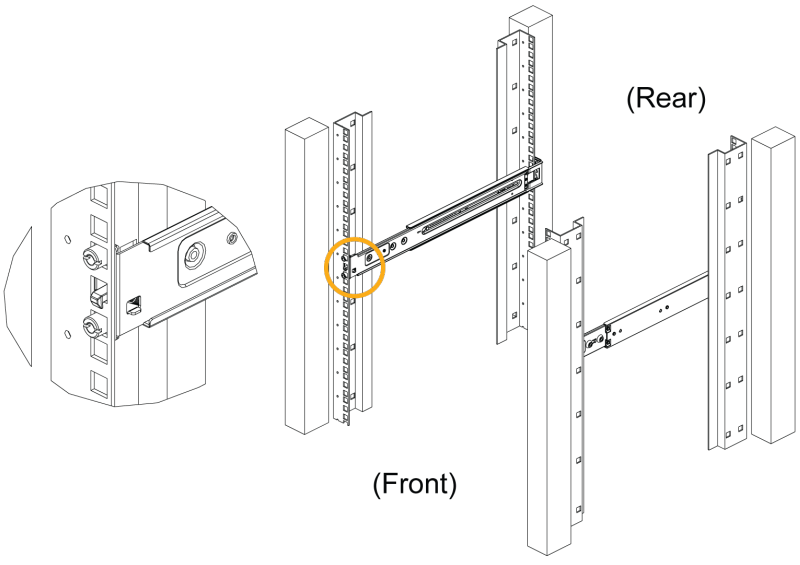


Figure 2-6. Installing the Outer Rails

Installing the Chassis into the Rack

After the rails are installed on the AS -2116S-FTNRT/TNRT server and on the rack, the server can be installed in the rack.

Important: Use caution when mounting or removing the system from the rack. For large systems, at least one other person must assist during installation or removal. Follow the safety recommendations printed on the rails. Depending on the size of the system, you might need to use a lift.

Slide the server into the rack so that the bottom of the AS -2116S-FTNRT/TNRT server slides onto the bottom lip of the rails. Carefully align the left and right inner rails on the server to the matching outer rails on the rack.

Note: Images displayed are for illustrative purposes only. The components installed in your system may or may not look exactly the same as the graphics shown in the manual.

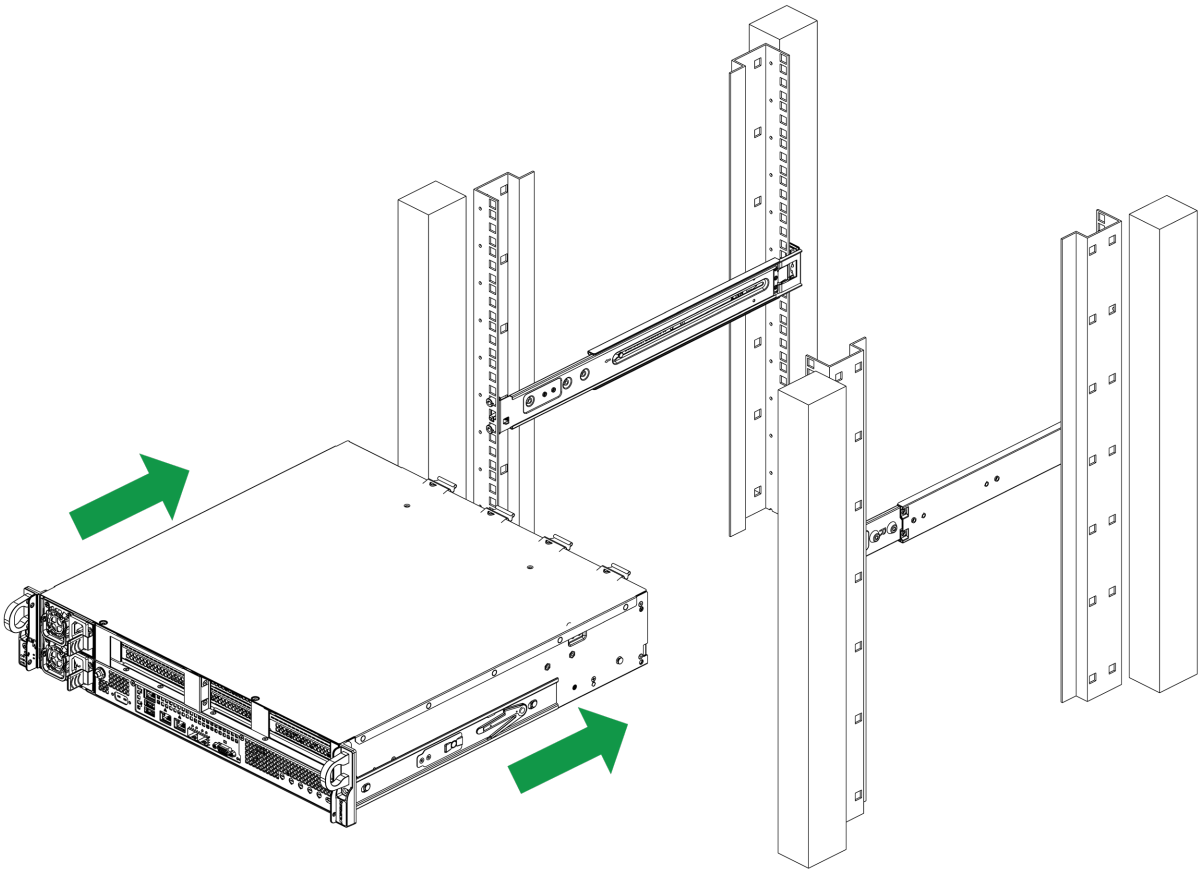


Figure 2-7. Sliding the AS -2116S-FTNRT/TNRT into the Rack

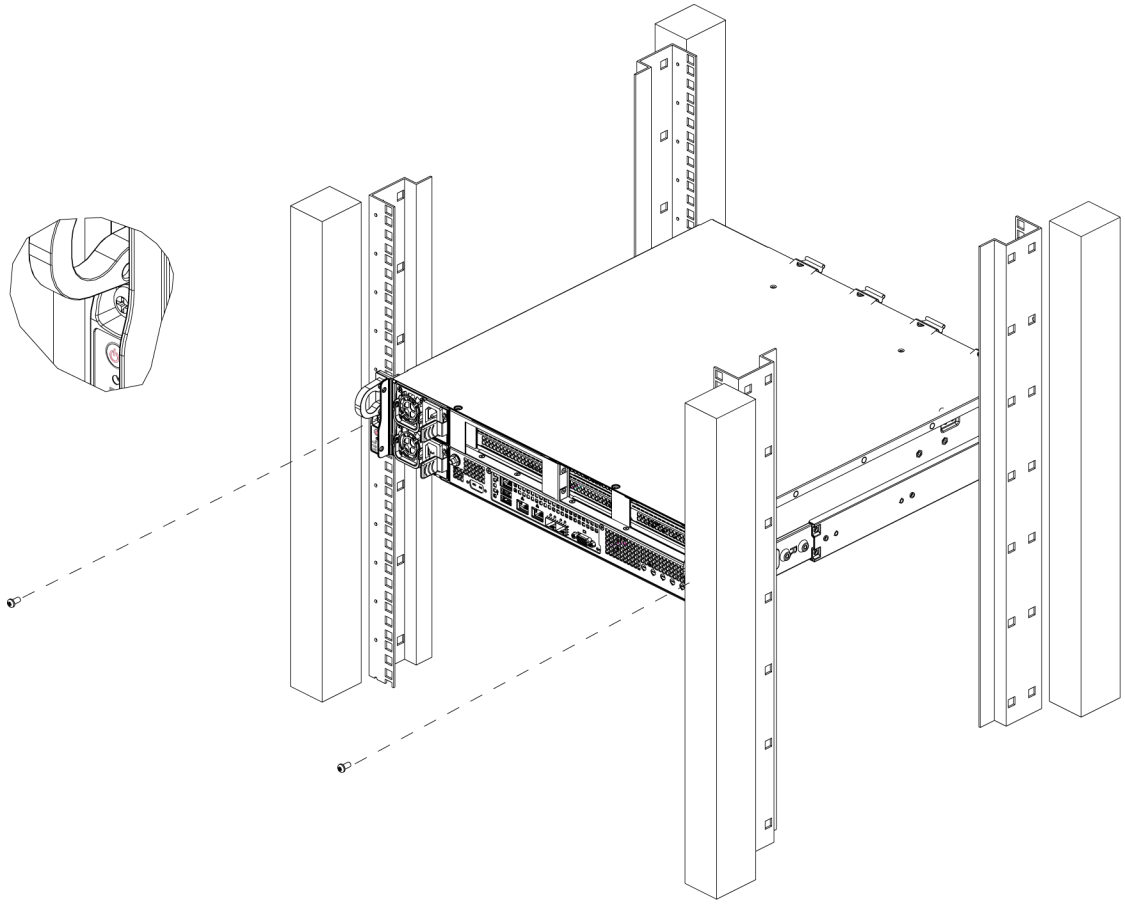


Figure 2-8. Fastening the AS -2116S-FTNRT/TNRT into the Rack

Removing the Chassis from the Rack

Important: Use caution when mounting or removing the system from the rack. For large systems, at least one other person must assist during installation or removal. Follow the safety recommendations printed on the rails. Depending on the size of the system, you might need to use a lift.

1. Remove the front screws.
2. Pull the server by the handles until the chassis is stopped by the locking tabs.
3. Press down on the locking tab while holding both side of the server.
4. Pull the server completely out of the rack.

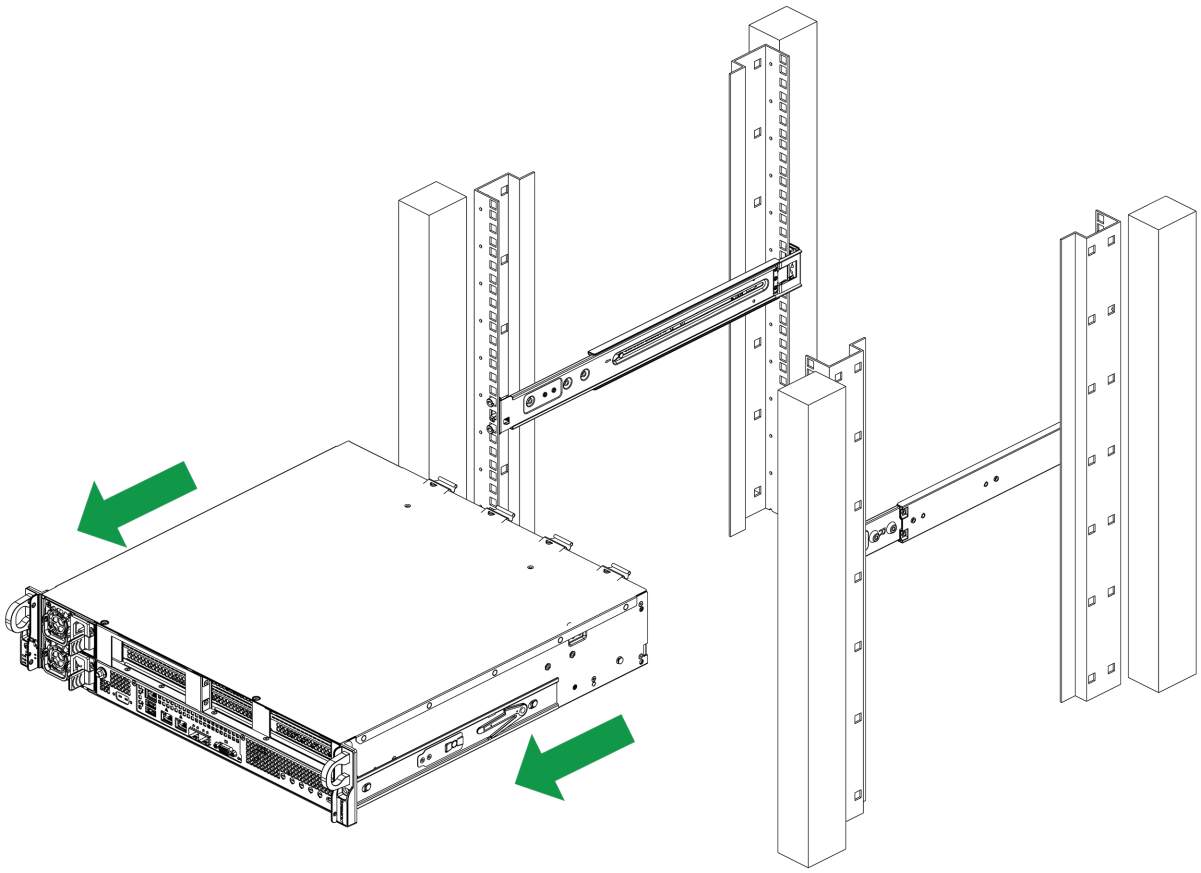


Figure 2-9. Removing the AS -2116S-FTNRT/TNRT from the Rack

Removing the Outer Rails from the Rack

In the uncommon event that it is necessary to remove the outer rails from the rack, follow these instructions. The AS -2116S-FTNRT/TNRT server must first be out of the rack.

Releasing the Outer Rails

1. On the front of the outer rail, slide the small plastic safety slider up and hold it while pushing the plastic release button just below it.
2. While holding the release button in, pull the outer rail forward to disengage the pins and the front of the rail from the rack.
3. Support the front of the outer and middle rail assembly while releasing the rear.
4. Remove the outer rail from the rear of the rack in the same way as the front. Slide the safety slider up and push and hold the release button, then pull the rear pins out of the rack and remove the rail.

2.3 Preparing for Setup on a Wall

If you ordered wall-mounting brackets with the AS -2116S-FTNRT/TNRT server, this section provides advice and instructions for mounting the server on a wall or other suitable surface.

Unpacking the System

Inspect the box in which the system was shipped and note if it was damaged. If the system itself shows damage, file a damage claim with the carrier.

Warnings and Precautions

Review the electrical and general safety precautions in "Standardized Warning Statements for AC Systems" on page 150.

Adding System Components

- **Memory**: If your system is not already fully integrated with system memory, see "Maintenance and Component Installation" on page 44 for details on compatible types of memory and the relevant installation procedures.
- **Drives and Storage**: See "Maintenance and Component Installation" on page 44 to add storage capabilities to your server.
- **Input/Output**: See "Motherboard Connections, Jumpers, and LEDs" on page 72 for I/O ports, and connect them as needed.
- **Software**: See "Software" on page 87 for description and procedures for installing software, including drivers and monitoring programs.

Wall Mounting Procedure

The AS -2116S-FTNRT/TNRT can be mounted directly on a surface using the mounting brackets and mounting screws or nails. The following procedure describes how to mount the server to a sturdy surface. Use screws or nails of sufficient strength to support the weight of the server.

Note: The weight of a fully populated system can reach up to 24.5 lbs or 11 kg.

Mounting the Chassis

1. Attach the two mounting brackets to the server using the four T-pins and two screws for each side. Push the T-pins through the holes in the mounting bracket, highlighted in yellow. Then, secure the M4 screws that came with the server as shown below.

   Note: Images displayed are for illustrative purposes only. The components installed in your system may or may not look exactly the same as the graphics shown in the manual.

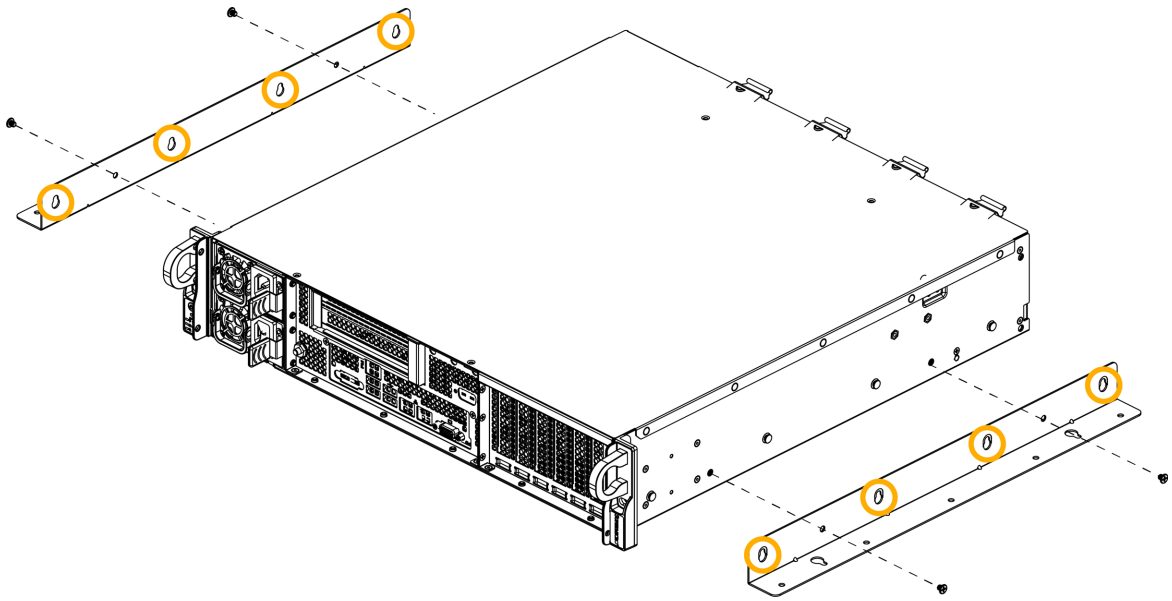


Figure 2-10. Installing the Mounting Brackets

2. Decide on an orientation to mount the server. The server can only be mounted with the I/O panel facing left or right.

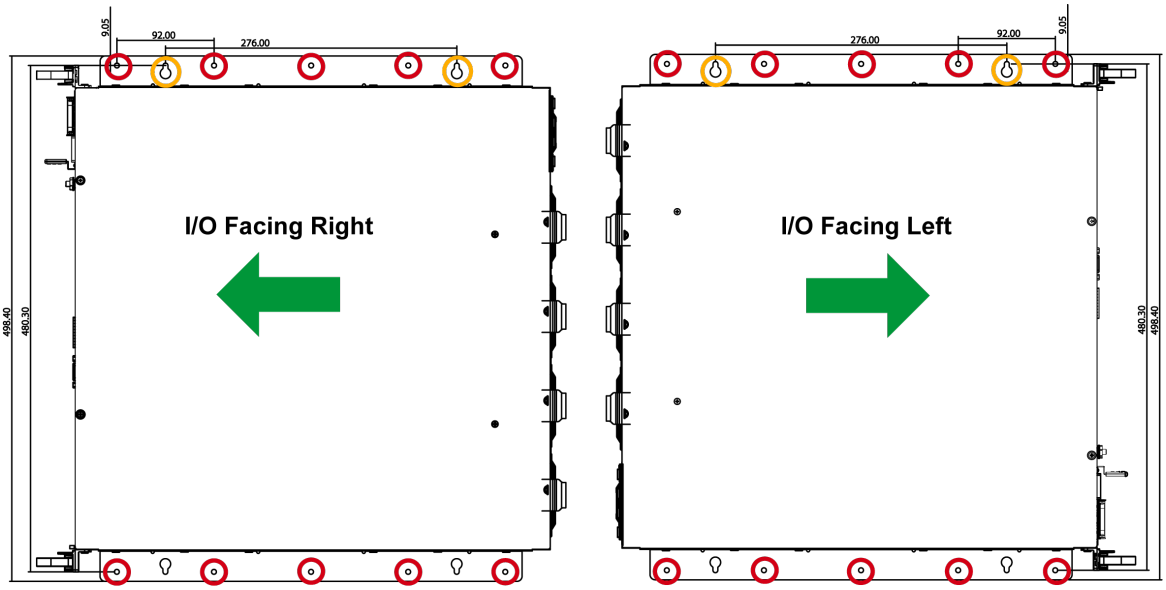


Figure 2-11. Possible Mounting Orientations

3. Mark two keyhole spots on the surface where the server will be mounted. The two keyholes for each orientation are circled in yellow above.
4. Install the two keyhole screws or nails.
5. Mount the server onto the two screws or nails.
6. Install screws or nails in all the holes circled in red above.

Chapter 3:

Maintenance and Component Installation

This chapter provides instructions on installing and replacing main system components for the AS -2116S-FTNRT/TNRT server. To prevent compatibility issues, only use components that match the specifications and/or part numbers given.

Installation or replacement of most components require that power first be removed from the system. Follow the procedures given in each section.

3.1 Removing Power **46**

3.2 Accessing the System **47**

Removing the Top Cover 47

3.3 Static-Sensitive Devices **48**

Precautions 48

3.4 Processor and Heatsink Installation **49**

Preparing the Processor Socket 49

Installing the Processor into the Frame 52

Installing the Heatsink 55

Uninstalling the Heatsink and Processor 57

3.5 Memory Support and Installation **58**

Memory Support 58

General Guidelines for Optimizing Memory Performance 59

DIMM Installation 60

DIMM Removal 62

3.6 Motherboard Battery Removal and Installation **63**

Battery Removal 63

Proper Battery Disposal 63

Battery Installation 63

3.7 Storage Drives **64**

Removing Hard Drive Carriers from the Chassis 64

Installing a Storage Drive into a Drive Carrier 64

Hot-Swap for NVMe Drives 65

3.8 System Cooling **66**

Fans 66
Air Shrouds 67
3.9 Expansion Cards 68
Riser Cards 68
3.10 Power Supply 70
Replacing the Power Supply 70

3.1 Removing Power

Before performing some setup or maintenance tasks, use the following procedure to ensure that power has been removed from the AS -2116S-FTNRT/TNRT server. This step is necessary when removing or installing non hot-swappable components or when replacing a non-redundant power supply.

1. Use the operating system to power down the system.
2. After the system has completely shut-down, disconnect the AC power cord(s) from the power strip or outlet.
3. Disconnect the power cord(s) from the power supply module(s).

3.2 Accessing the System

The AS -2116S-FTNRT/TNRT server features a removable top cover, which allows easy access to the inside of the server.

Removing the Top Cover

Important: Use caution when mounting or removing the system from the rack. For large systems, at least one other person must assist during installation or removal. Follow the safety recommendations printed on the rails. Depending on the size of the system, you might need to use a lift.

Important: Except for short periods of time, do not operate the server without the cover in place. The chassis cover must be in place to allow for proper airflow and to prevent overheating.

1. Power down the system as described in "Removing Power" on the previous page.
2. Carefully remove the system from the rack or wall, placing the system on a workbench.
3. Remove the four screws holding the cover in place.
4. Lift the top cover up.

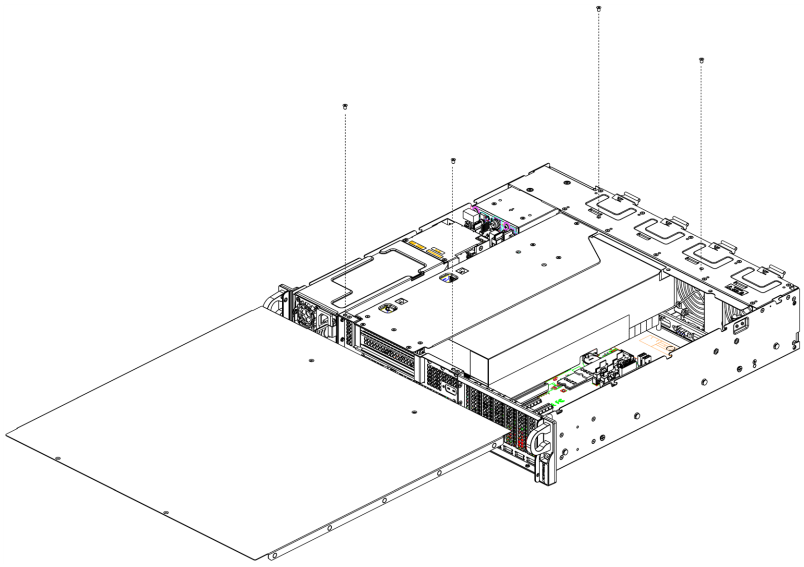


Figure 3-1. Removing the Top Cover (AS -2116S-FTNRT shown)

3.3 Static-Sensitive Devices

Electrostatic Discharge (ESD) can damage electronic components. To avoid damaging your motherboard, it is important to handle it very carefully. The following measures are generally sufficient to protect your equipment from ESD.

Precautions

- Use a grounded wrist strap designed to prevent static discharge.
- Touch a grounded metal object before removing the board from the antistatic bag.
- Handle the motherboard only by its edges. Do not touch its components, peripheral chips, memory modules, or gold contacts.
- When handling chips or modules, avoid touching their pins.
- Put the motherboard and peripherals back into their antistatic bags when not in use.
- For grounding purposes, make sure that your computer chassis provides excellent conductivity between the power supply, the case, the mounting fasteners, and the motherboard.
- Use only the correct type of onboard CMOS battery. To avoid possible explosion, do not install the onboard battery upside down.

3.4 Processor and Heatsink Installation

This section provides procedures to install the processor(s) and heatsink(s).

Notes:

- Take industry standard precautions to avoid ESD damage. For details, see "Static-Sensitive Devices" on the previous page.
- Before starting, make sure that the plastic socket cap is in place and none of the socket pins are bent. If any damage is noted, contact your retailer.
- Do not connect the system power cord before the processor and heatsink installation is complete.
- When handling the processor, avoid touching or placing direct pressure on the LGA lands (gold contacts). Improper installation or socket misalignment can cause serious damage to the processor or processor socket.
- When buying a processor separately, use only a Supermicro certified heatsink.
- Refer to the Supermicro website for the most recent processor support.
- When installing the heatsink, ensure a torque driver set to the correct force is used for each screw.
- Thermal grease is pre-applied on a new heatsink. No additional thermal grease is needed.

Preparing the Processor Socket

1. Remove the screw holding down the force frame. The spring-loaded force frame will raise up. Allow it to lift up to its stopped position.

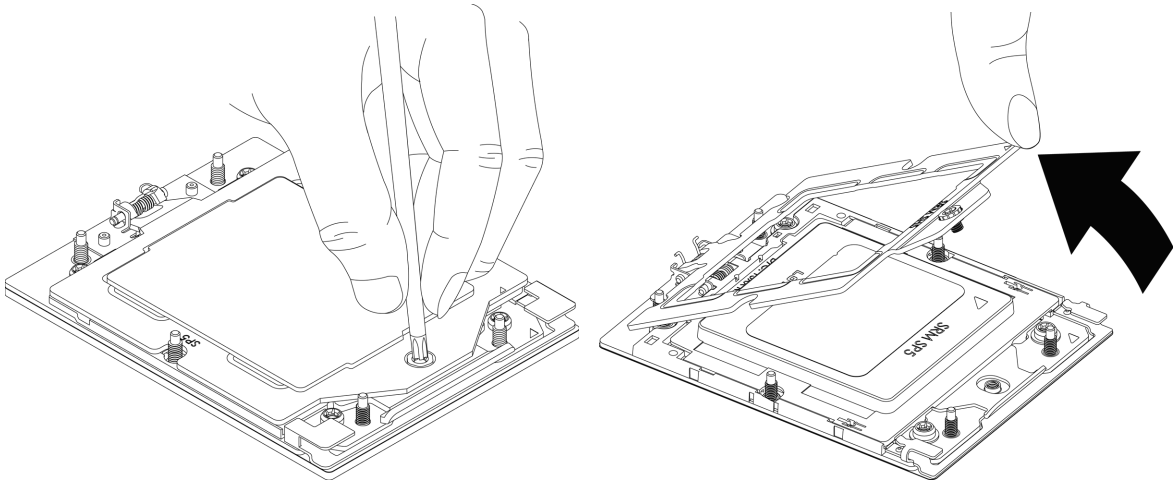


Figure 3-2. Removing Screw from the Force Frame

2. Lift the rail frame up by gripping the lift tabs near the front end of the rail frame. While keeping a secure grip of the rail frame, lift it to a position so you can do the next step of removing the external cap.

   Note: The rail frame is spring loaded, so keep a secure grip on it as you lift it so it does not snap up.

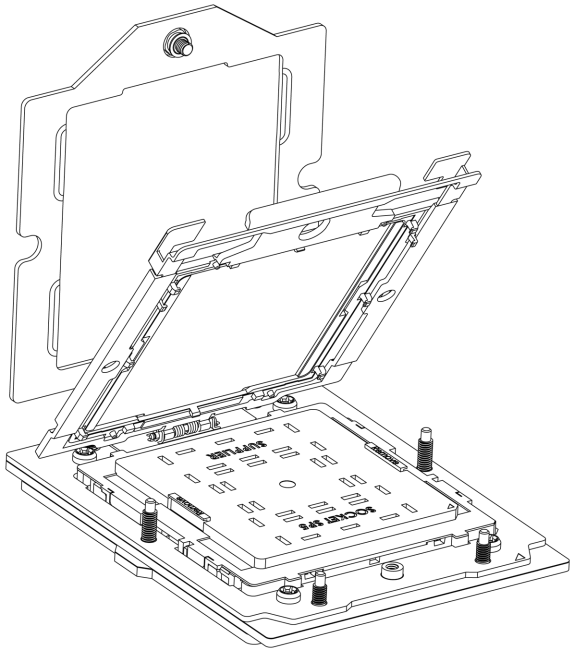


Figure 3-3. Lifting the Frame

3. Remove the external cap from the rail frame by pulling it upwards through the rail guides on the rail frame.

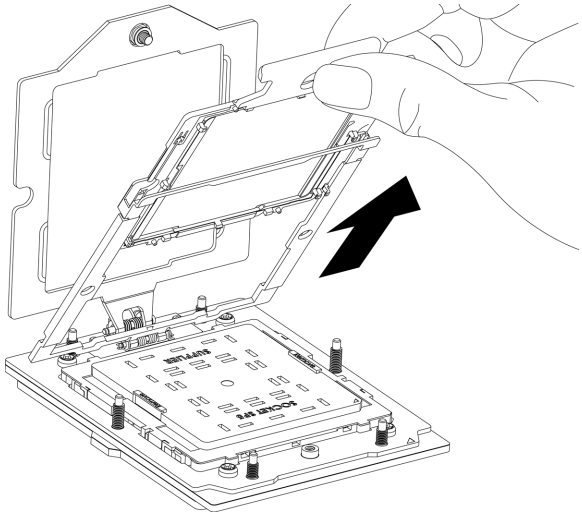


Figure 3-4. Removing the Cap

Installing the Processor into the Frame

1. The processor package is shipped from the factory with the carrier frame pre-assembled. Grip the handle of the carrier frame/processor assembly from its shipping tray, and while gripping the handle, align the flanges of the carrier frame onto the rails of the rail frame so its pins will be at the bottom when the rail frame is lowered later.
2. Slide the carrier frame/processor assembly downwards to the bottom of the rail frame. Ensure the flanges are secure on the rails as you lower it downwards.

   Note: You can only install the processor inside the socket in one direction with the handle at the top. Make sure that it is properly inserted into the socket before closing the rail frame plate. If it doesn't close properly, do not force it as it may damage your processor. Instead, open the rail frame plate again, and double-check that the processor is aligned properly.

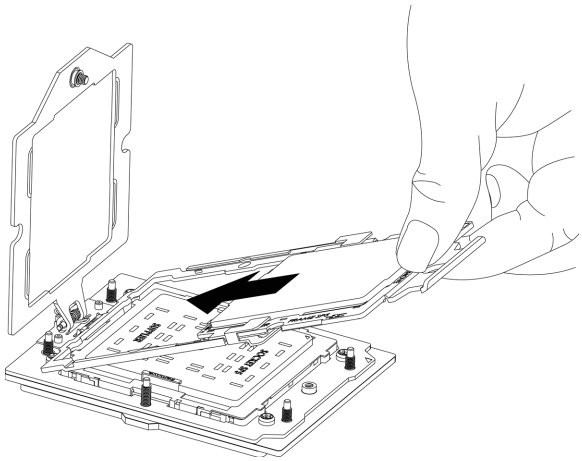


Figure 3-5. Installing into the Rail Frame

3. Lift up the rail frame until it securely rests in upright position. Then remove the cover cap from the socket below. Grip the two lift tabs marked "Remove" at the middle of the cap and pull vertically upwards to remove the cover cap.

Important: The exposed socket contacts are extremely vulnerable and can be damaged easily. Do not touch or drop objects onto the contacts and be careful removing the cover cap and when placing the rail frame over the socket.

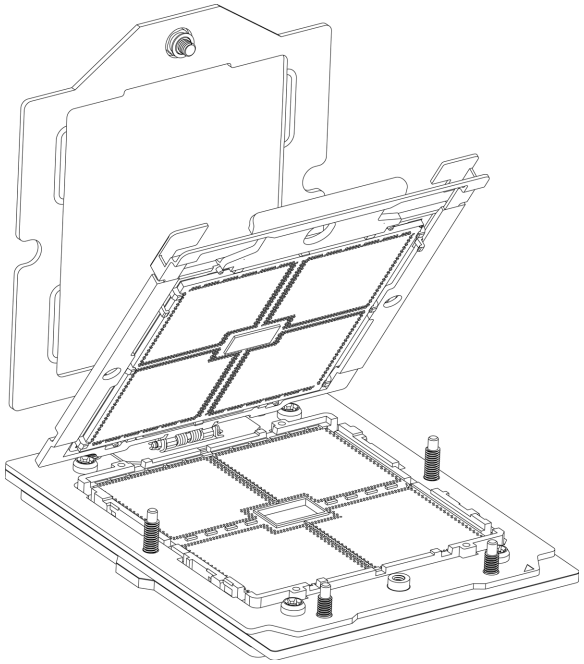


Figure 3-6. Removing the Cover Cap

4. Gently lower the rail frame down onto the socket until the latches on the rail frame engage with the socket housing and it rests in place. Do not force it into place! Note that the force frame is spring loaded and must be held in place before it is secured.

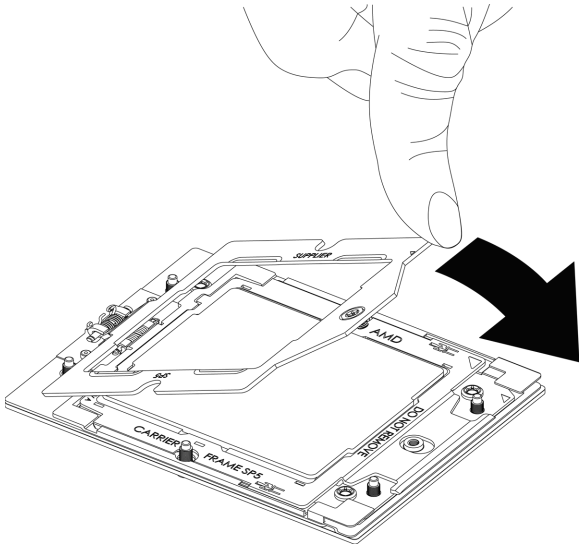


Figure 3-7. Securing the Force Frame

5. Use a T20 bit torque driver, set at 12.5–15.0 kgf-cm (10.8–13.0 lbf-in) to prevent damage to the processor. Replace and tighten the screws in the same order they were removed. When finished, the force frame will be secure over both the rail frame and processor package.

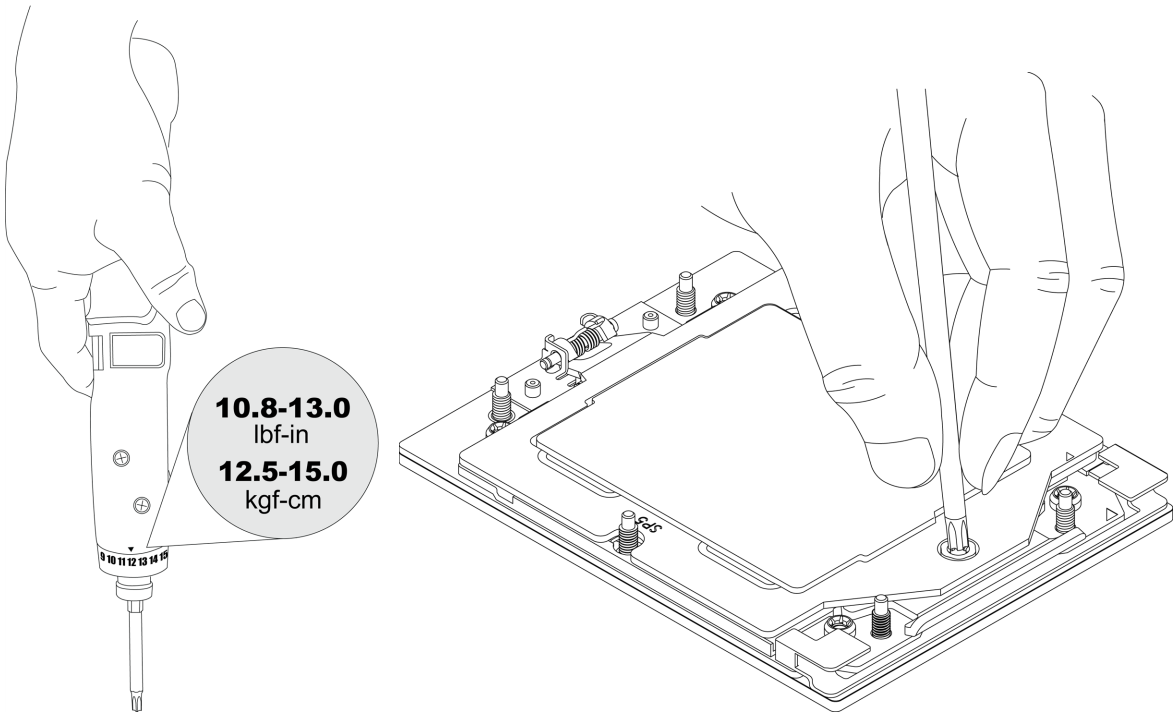


Figure 3-8. Replacing Screws with Torque Driver

Installing the Heatsink

After the force frame is secured and the processor is in place, install the heatsink onto the processor.

1. Place the heatsink so that it rests on the processor aligning the six screws on the socket frame.

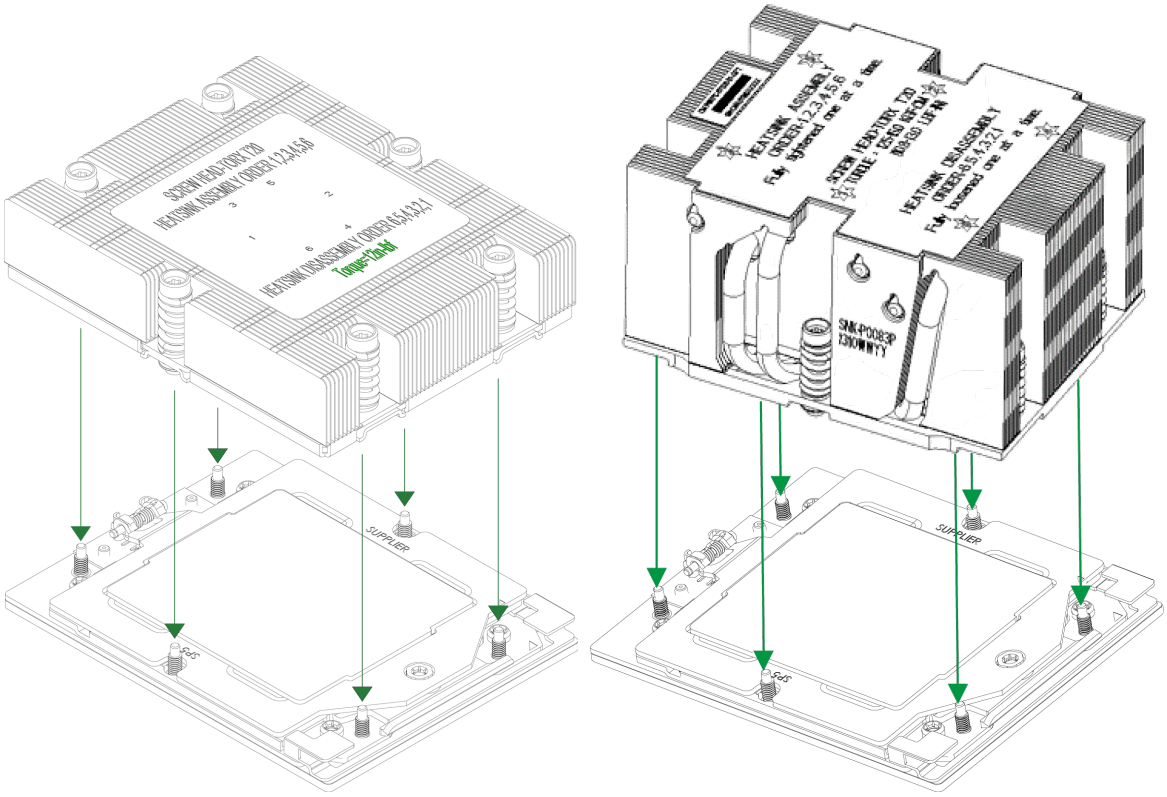


Figure 3-9. Placing the Heatsink (1U left, 2U right)

2. Using a diagonal pattern, tighten the six screws down on the heatsink in a clockwise fashion until secure. Use a T30 bit torque driver with a torque of 12.5–15.0 kgf-cm (10.8–13.0 in-lbf) to prevent damage to the processor. The heatsink will now be secured and you have finished installing the processor and heatsink onto the motherboard. Repeat this procedure for any remaining CPU sockets on the motherboard.

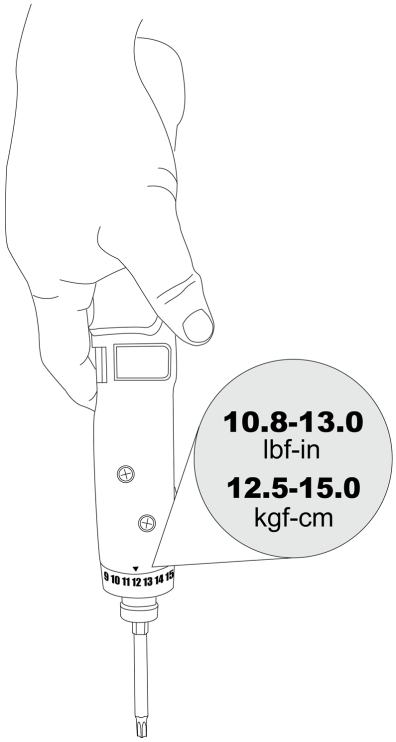


Figure 3-10. Using a T30 Bit Torque Driver

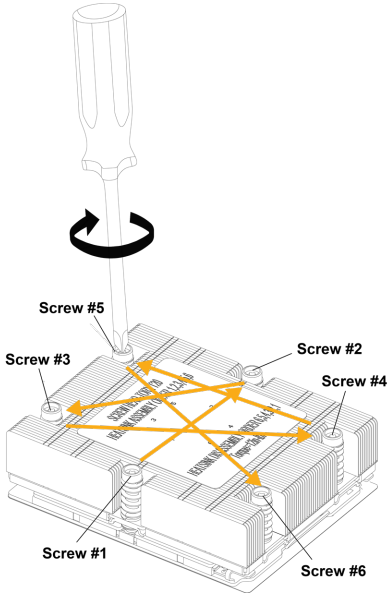


Figure 3-11. Tightening the Six Heatsink Screws in a Clockwise Sequence

The heatsink is now secured.

Uninstalling the Heatsink and Processor

1. Remove the screws holding the heatsink and gently work it loose.
2. Clean the thermal grease left by the heatsink on the processor assembly to limit the risk of contaminating the land pads or contacts in the socket housing.
3. Unscrew the plate and lift the force frame to the vertical position.
4. Lift the rail frame using the lift tabs near the front end of the rail frame. Note that the rail frame is spring loaded, so be careful lifting it up into a vertical position.
5. Grip the handle of the carrier frame and pull upwards to extract it from the rail frame. Return the processor assembly to its original shipping container.
6. Grip the handle on the external cap and return it to the rail frame, sliding it downwards until it rests in the frame.
7. Gripping the rail frame, rotate it downwards until it rests above and locks over the socket housing in its horizontal position.
8. Push and rotate down the force frame until it is over the external cap and rail frame in a horizontal position.
9. While holding down the force frame, secure it back to the socket frame by securing screw #1 in place.

3.5 Memory Support and Installation

Important: To prevent any damage, exercise extreme care when installing or removing memory modules.

Note: Check the Supermicro website for recommended memory modules.

Memory Support

The motherboard supports up to 3 TB of ECC DDR5 RDIMM/3DS RDIMM/MRDIMM memory in 12 DIMM slots.

Note: Check the Supermicro website for possible updates to memory support.

DIMM Population Slots														
Type	Channel													Nodes per Socket (NPS) Supported
	F1	E1	D1	C1	B1	A1	(Occupied by CPU)	G1	H1	I1	J1	K1	L1	
CPU1 & 1 DIMM						V								NPS1
CPU1 & 2 DIMMs						V		V						NPS2, NPS1
CPU1 & 4 DIMMs				V		V		V		V				NPS4, NPS2, NPS1
CPU1 & 6 DIMMs				V	V	V		V	V	V				NPS2, NPS1
CPU1 & 8 DIMMs		V		V	V	V		V	V	V		V		NPS4, NPS2, NPS1
CPU1 & 10 DIMMs		V	V	V	V	V		V	V	V	V	V		NPS2, NPS1
CPU1 & 12 DIMMs	V	V	V	V	V	V		V	V	V	V	V	V	NPS4, NPS2, NPS1

Note: Fully populate the motherboard with validated memory modules to achieve the best memory performance. Configure the NPS settings based on your applications. Selecting Auto in BIOS will default to NPS1.

Populating RDIMM/RDIMM 3DS DDR5 Memory Modules with AMD EPYC 9005 Series Processors				
Type	DIMM Population	Maximum DIMM Capacity		Maximum Frequency (MT/s)
	DIMM1	1 Channel	12 Channels	
RDIMM	1R (1 rank)	32 GB	384 GB	6400
	2R (2 ranks)	64 GB	768 GB	
3DS RDIMM	2Rx2 (4 ranks)	128 GB	1.5 TB	
	2Rx4 (8 ranks)	256 GB	3 TB	

General Guidelines for Optimizing Memory Performance

- It is recommended to use DDR5 memory of the same type, size, and speed.
- Mixed DIMM speeds can be installed. However, all DIMMs will run at the speed of the slowest DIMM.
- The motherboard will support an odd number amount of memory modules. However, to achieve the best memory performance, a balanced memory population is recommended.

DIMM Installation

Important: To avoid causing any damage to the memory module or the DIMM socket, do not use excessive force when pressing the release tabs on the ends of the DIMM socket. Handle memory modules with care. To avoid ESD-related damage to your memory modules or components, carefully follow all the instructions given in "Static-Sensitive Devices" on page 48.

1. Insert the desired number of DIMMs into the memory slots based on the recommended DIMM population table earlier in this section.
2. Push the release tabs outwards on both ends of the DIMM slot to unlock it.

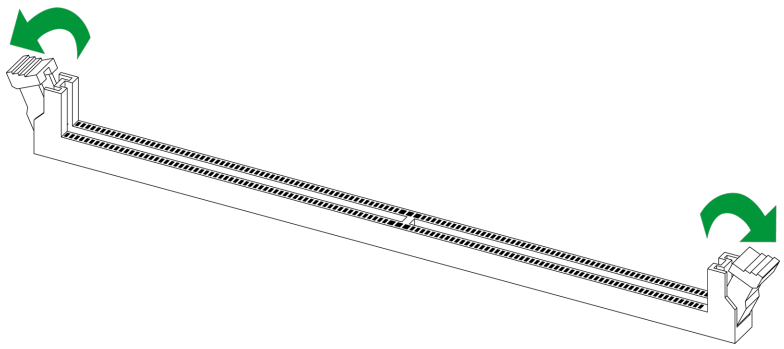


Figure 3-12. Unlocking the DIMM Slot

3. Align the key of the DIMM with the receptive point on the memory slot.

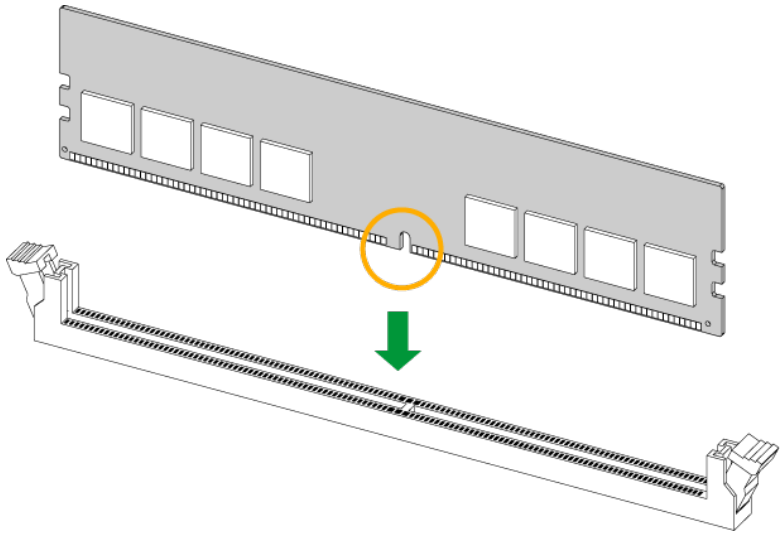


Figure 3-13. Aligning the DIMM Slot with the Receptive Point

4. Align the notches on both ends of the module against the receptive points on the ends of the slot.

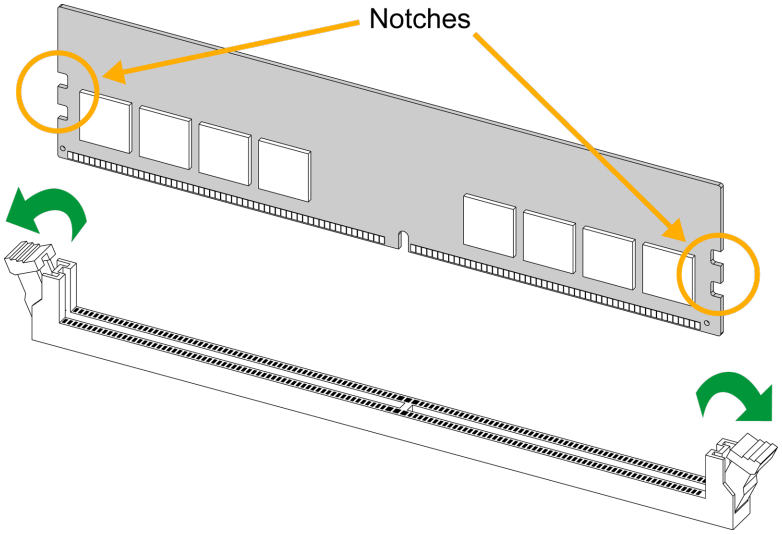


Figure 3-14. Aligning the Notches

5. Press both ends of the module straight down into the slot until the module snaps into place.
6. Press the release tabs to the lock positions to secure the DIMM into the slot.

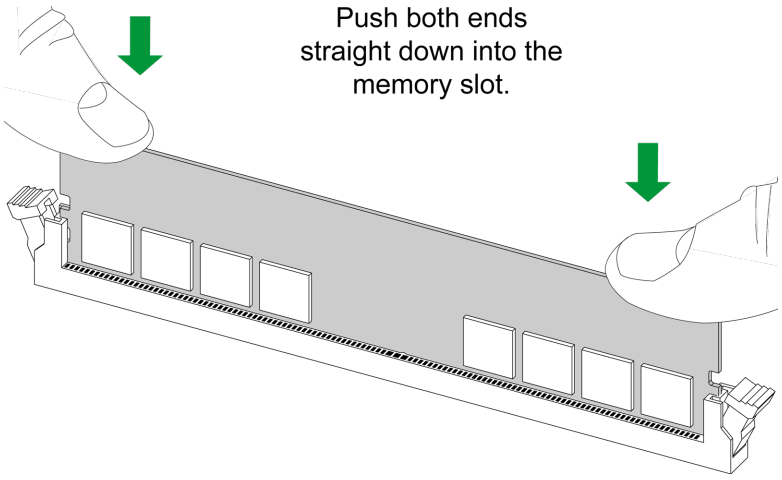


Figure 3-15. Securing the DIMM

For a detailed diagram of the H14SSL-NT motherboard, see the layout under "Motherboard Quick Reference" on page 25.

DIMM Removal

Important: To avoid causing any damage to the memory module or the DIMM socket, do not use excessive force when pressing the release tabs on the ends of the DIMM socket. Handle memory modules with care. To avoid ESD-related damage to your memory modules or components, carefully follow all the instructions given in "Static-Sensitive Devices" on page 48.

Press both release tabs on the ends of the DIMM socket to unlock it. Once the DIMM is loosened, remove it from the memory slot.

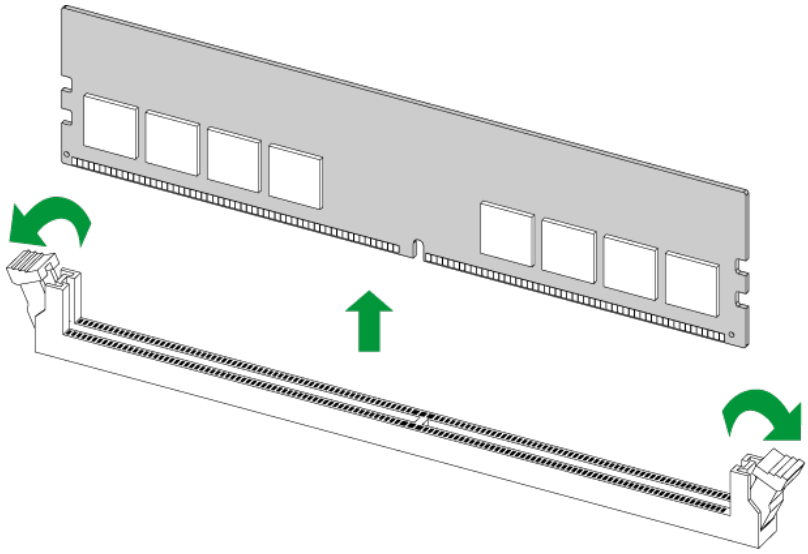


Figure 3-16. Unlocking the DIMM Slot

For a detailed diagram of the H14SSL-NT motherboard, see the layout under "Motherboard Quick Reference" on page 25.

3.6 Motherboard Battery Removal and Installation

Battery Removal

To remove the onboard battery, follow the steps below:

1. Power off your system and unplug your power cable.
2. Place the system on a workbench.
3. Remove the top cover from the system.
4. Locate the onboard battery as shown below.
5. Using a tool such as a pen or a small screwdriver, push the battery lock outwards to unlock it. Once unlocked, the battery will pop out from the holder.
6. Remove the battery.

Proper Battery Disposal

Important: Handle used batteries carefully. Do not damage the battery in any way; a damaged battery may release hazardous materials into the environment. Do not discard a used battery in the garbage or a public landfill. Comply with the regulations set up by your local hazardous waste management agency to dispose of your used battery properly.

Battery Installation

To install an onboard battery, follow steps 1 and 2 above and continue below:

Important: When replacing a battery, be sure to only replace it with the same type.

1. Identify the battery's polarity. The positive (+) side should be facing up.
2. Insert the battery into the battery holder and push it down until you hear a click to ensure that the battery is securely locked.

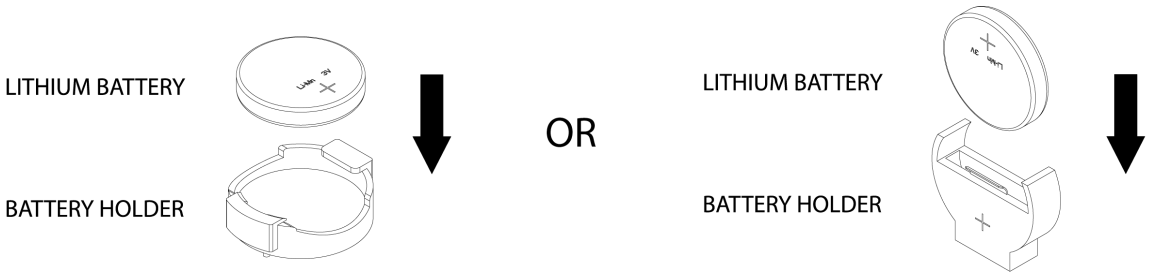


Figure 3-17. Installing a Battery

3.7 Storage Drives

The storage drives are mounted in tool-less drive carriers that simplify their removal from the AS -2116S-FTNRT/TNRT server. These carriers also help promote proper airflow.

Note: Enterprise-level storage modules are recommended for use in Supermicro servers.

Removing Hard Drive Carriers from the Chassis

1. Press the release button on the drive carrier, which will extend the driver carrier handle, then use the drive carrier handle to pull the drive out of the server.
2. Use the handle to pull the drive carrier out of the server.

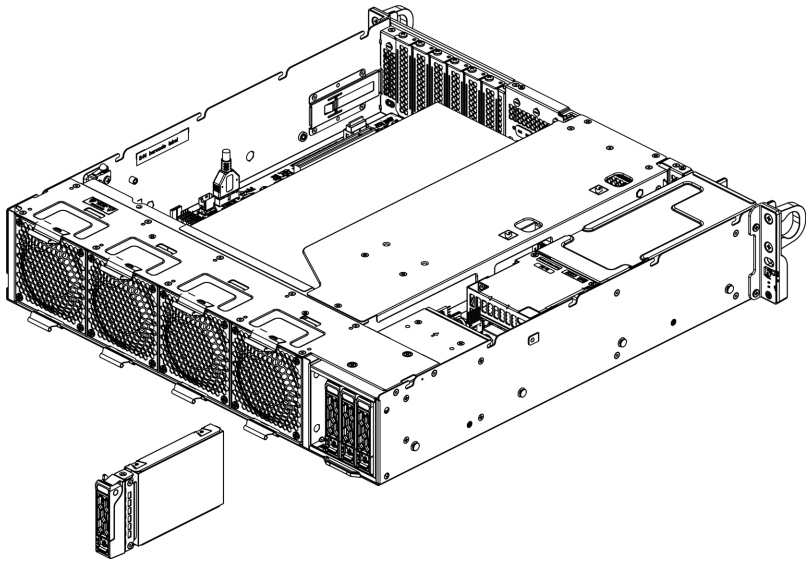


Figure 3-18. Removing a Drive Carrier (AS -2116S-FTNRT shown)

Installing a Storage Drive into a Drive Carrier

1. Remove the dummy drive, which comes pre-installed in the drive carrier, by pushing it out of the drive carrier.
2. Insert a drive into the carrier with the PCB side facing down and the connector end toward the rear of the carrier.
3. Insert the drive carrier into its bay, keeping the carrier oriented so that the release button is on the bottom side. When the carrier reaches the rear of the bay, the release handle will retract.
4. Push the handle in until it clicks into its locked position.

Hot-Swap for NVMe Drives

Supermicro servers support NVMe surprise hot-swap. For even better data security, NVMe orderly hot-swap is recommended. NVMe drives can be ejected and replaced remotely using BMC.

Ejecting a Drive

1. **BMC > Server Health > NVMe SSD**
2. Select Device, Group, and Slot, and click **Eject**. After ejecting, the drive Status LED indicator turns green.
3. Remove the drive.

Note that Device and Group are categorized by the CPLD design architecture.

A Slot is the slot number on which the NVMe drives are mounted.

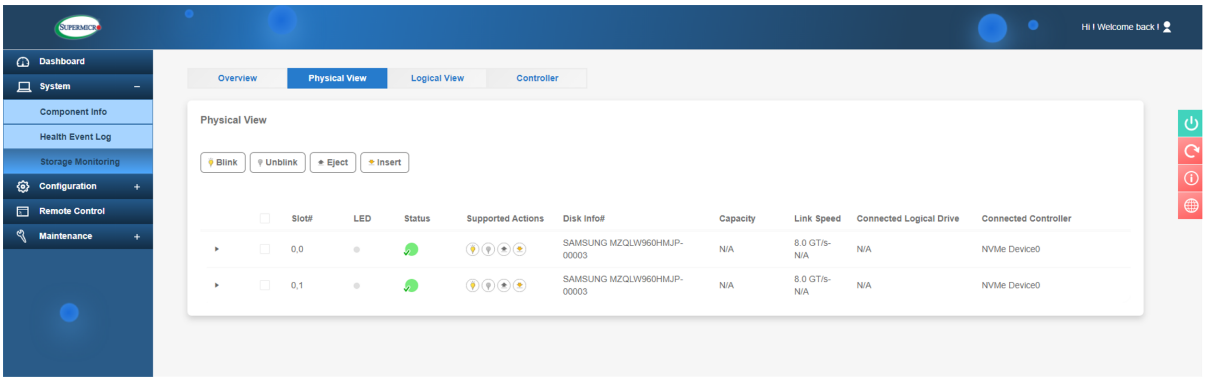


Figure 3-19. BMC Screenshot

Replacing a Drive

1. Insert the replacement drive.
2. **BMC > System > Storage Monitor > Physical View**
3. Select Device, Group, and slot and click **Insert**. The drive Status LED indicator flashes red, then turns off. The Activity LED turns blue.

3.8 System Cooling

Refer to the following sections for information about the cooling capabilities of the AS -2116S-FTNRT/TNRT server.

Fans

The AS -2116S-FTNRT/TNRT server supports four hot-swappable fans with fan cages.

Changing a Fan

1. Determine which fan is failing.
2. Remove the fan cable from the midplane for the failed fan.
3. Lift the fan housing up and out of the server.
4. Push the fan up from the bottom.
5. Put the new fan back into the server and reconnect the cable.
6. Power on the system to confirm that the fan is working properly before replacing the server cover.

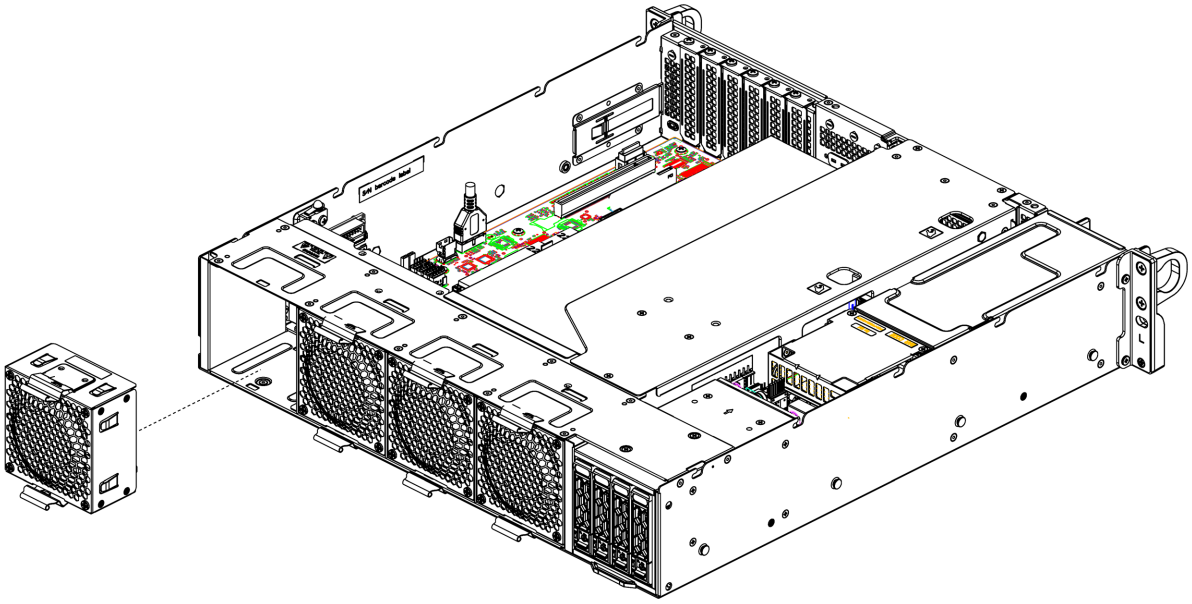


Figure 3-20. Changing a Fan (AS -2116S-FTNRT shown)

Air Shrouds

Air shrouds concentrate airflow to maximize fan efficiency.

Installing an Air Shroud

1. Power down the system as described in "Removing Power" on page 46.
2. Carefully remove the system from the rack or wall and place it on a workbench as described in "Accessing the System" on page 47 before removing the cover.
3. Ensure the CPU, CPU heatsinks, and configured DIMMs are installed.
4. Remove all riser card brackets first and position the air shroud as shown below.
5. Gently push the air shroud into place.

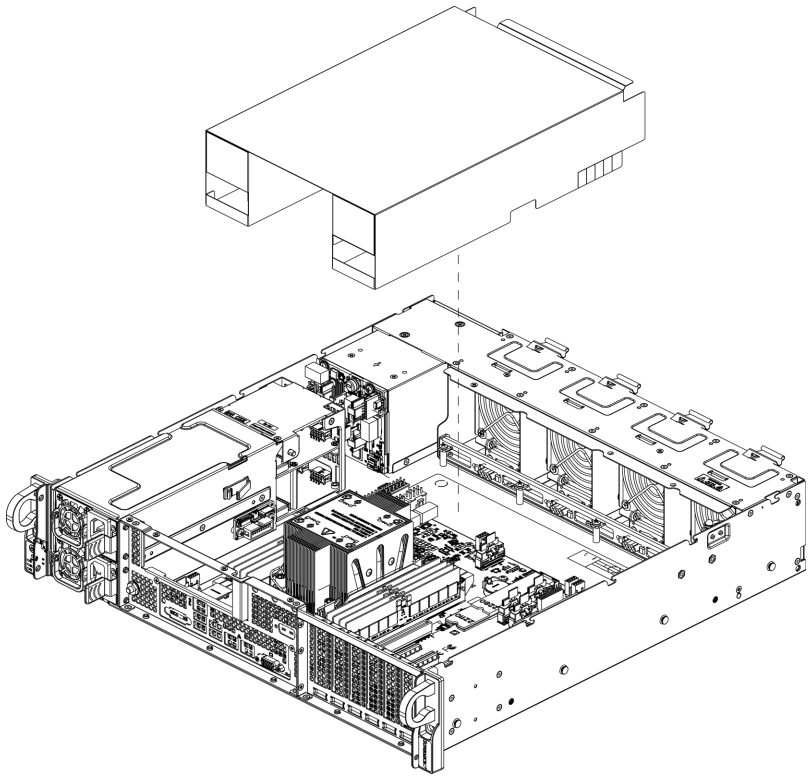


Figure 3-21. Installing an Air Shroud (AS -2116S-FTNRT shown)

3.9 Expansion Cards

Refer to the following sections for information on the expansion cards supported by the AS -2116S-FTNRT/TNRT server.

Riser Cards

The AS -2116S-FTNRT/TNRT server supports one bracket for installing expansion cards in one PCIe 5.0 x16 FHFL double-width slot. Riser cards position the expansion cards at a 90-degree angle, allowing them to fit inside the 2U server.

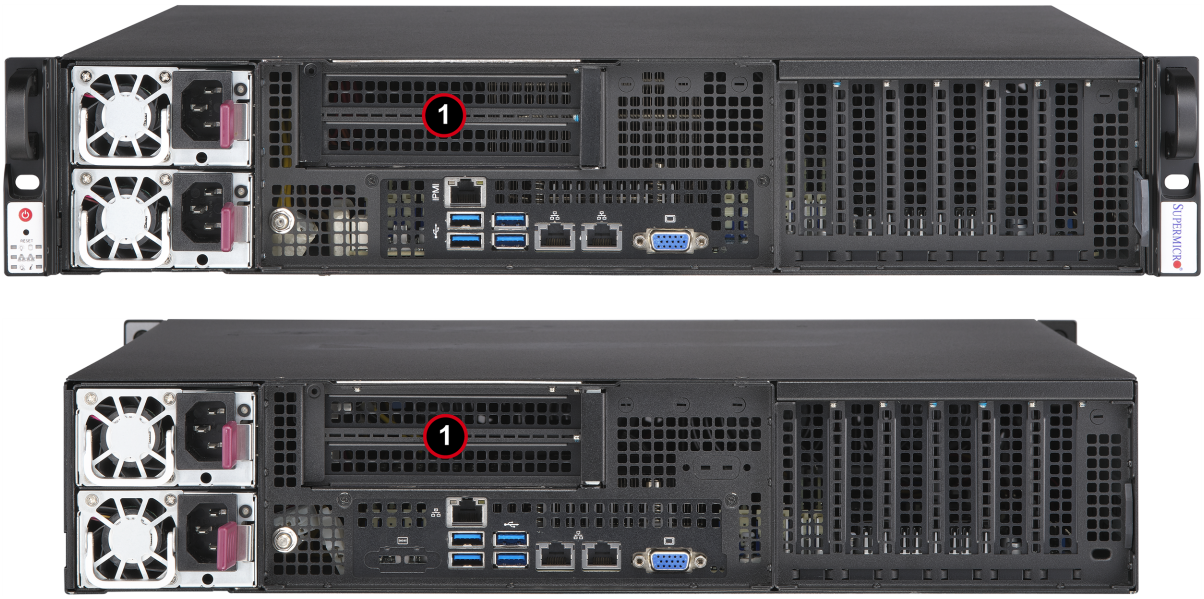


Figure 3-22. Expansion Bracket Location
(AS -2116S-FTNRT above, AS -2116S-TNRT below)

Installing Expansion Cards into Brackets

1. Power down the system as described in "Removing Power" on page 46.
2. Carefully remove the system from the rack or wall and place it on a workbench as described in "Accessing the System" on page 47 before removing the cover.
3. Remove the screws as shown below.
4. Remove the bracket from the server using the two square holes located at the top of the bracket, if present.
5. Install the PCIe expansion cards into the riser card.
6. Install the assembly into the server and connect any additional wires.

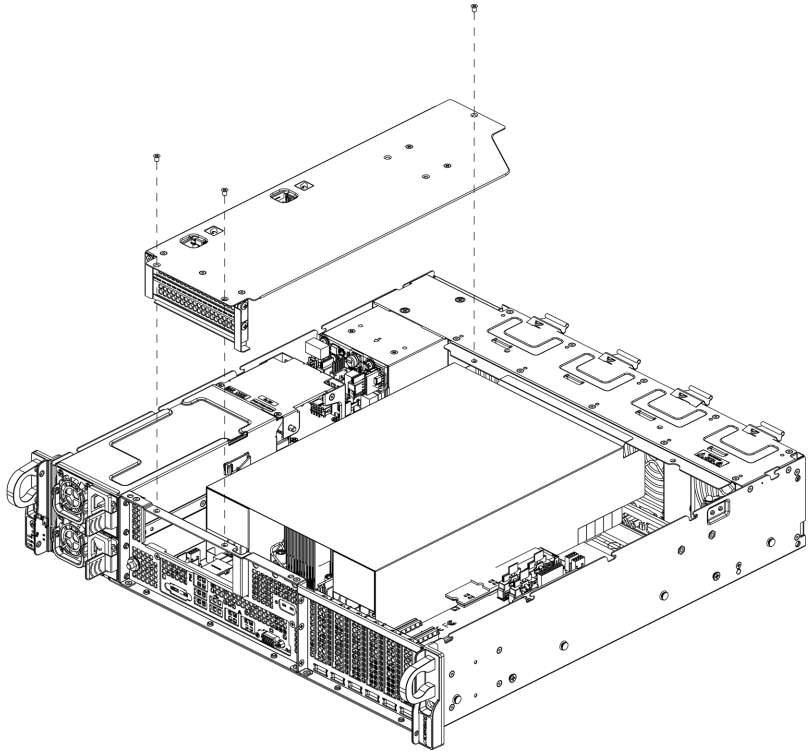


Figure 3-23. Removing the Riser Card Brackets (AS -2116S-FTNRT shown)

3.10 Power Supply

The system includes one hot-plug power supply module. The power supply will automatically sense and operate at an input voltage between 100–240 V. Note that different input voltages will result in different maximum power output levels.

In the event of a power module failure, the other power module will continue to power the system on its own. Failed power supply modules can be replaced without powering down the system. Replacement modules can be ordered directly from Supermicro.

Information LED	
Color, Status	**Description**
Red, solid	Overheating condition
Red, blinking at 1 Hz	Fan failure (check for an inoperative fan)
Red, blinking at 0.25 Hz	Power failure (check for an inoperative power supply)
Red, solid with Power LED blinking green	Fault detected
Blue and red, blinking at 10 Hz	Recovery mode
Blue, solid	UID activated locally to locate the server in a rack environment
Blue, blinking at 1 Hz	UID activated via BMC to locate the server in a rack environment
Blue, blinking at 2 Hz	BMC resetting
Blue, blinking at 4 Hz	BMC setting factory defaults
Blue, blinking at 10 Hz with Power LED blinking green	BMC/BIOS firmware updating

Replacing the Power Supply

1. Unplug the AC cord from the module to be replaced.
2. Push the release tab on the back of the power supply as illustrated.
3. Pull the power supply out using the handle provided.
4. Replace the failed power module with the same model.
5. Push the new power supply module into the power bay until it clicks.
6. Plug the AC power cord back into the module.

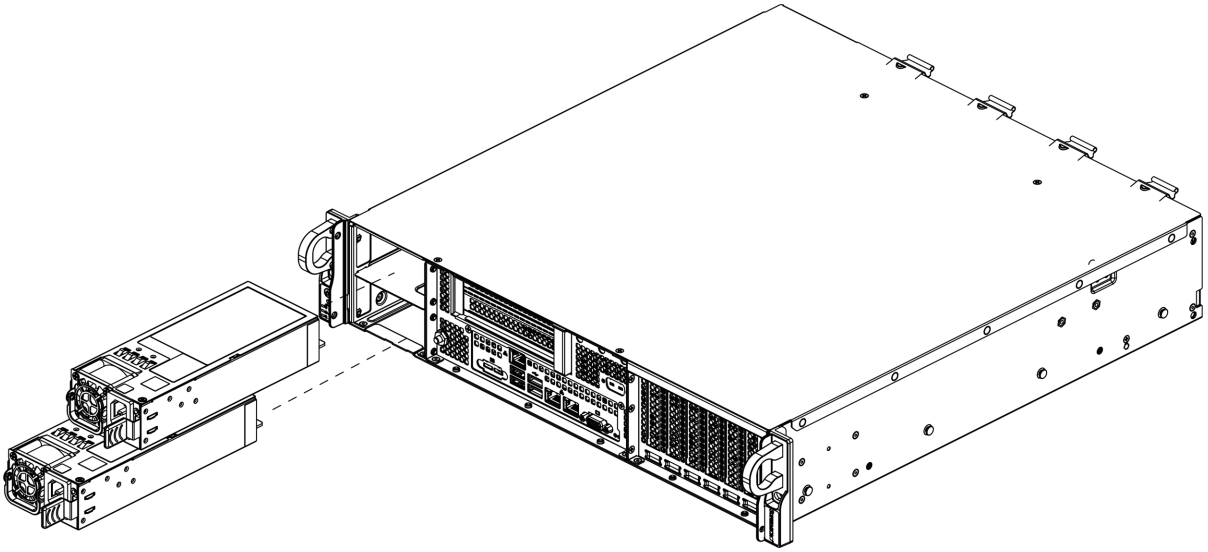


Figure 3-24. Replacing the Power Supply (AS -2116S-FTNRT shown)

Chapter 4:

Motherboard Connections, Jumpers, and LEDs

This section describes the connections on the motherboard and provides pinout definitions. Note that depending on how the system is configured, not all connections are required. The LEDs on the motherboard are also described here. A motherboard layout indicating component locations may be found in the "Introduction" on page 12. More detail can be found in the H14SSL-NT motherboard manual.

Review the "Standardized Warning Statements for AC Systems" on page 150 before installing or removing components.

4.1 Power Supply and Power Connections **74**
Main Power Supply Connector (JPWR3) 74
12 V 8-pin Auxilliary Power Connector (JPWR1, JPWR2) 74
4.2 JF1 Front Control Panel Headers **75**
4.3 Headers and Connections **76**
Chassis Intrusion 76
COM1 Header 76
Disk-On-Module Power Connectors (JSD1 and JSD2) 77
IPMB (Intelligent Platform Management Bus) Header (JIPMB1) 77
NCSI Header (JNCSI1) 77
Onboard Battery (BT1) 78
Onboard Fan Headers (FAN1–FAN4, FANA, FANB) 78
Power System Management Bus (SMBus/I²C) Header (PWRI2C) 79
SATA (SATA8–15) 79
TPM/Port 80 Header 80
USB Ports (USB4–USB5) 80
VGA Port 81
4.4 Jumper Settings **82**
CMOS Clear 82
LAN Enable/Disable (JPL1) 83
JMCIO3 NVMe/SATA Switch (JSATA1) 83
4.5 LED Indicators **84**

LAN Port LEDs 84
BMC Heartbeat LED 84
BMC LAN LEDs 85
Onboard Power LED (LED9) 85
Unit ID (UID) LED 86

4.1 Power Supply and Power Connections

For information about the power supply and power connections of the AS - 2116S-FTNRT/TNRT server, refer to the following content.

Main Power Supply Connector (JPWR3)

The primary power supply connector (JPWR3) is an ATX power connector that the power supply plugs directly into.

ATX Power 24-pin Connection Pin Definitions: 24 Total			
Pin#	**Definition**	**Pin#**	**Definition**
13	+3.3 V	1	+3.3 V
14	No Connection	2	+3.3 V
15	GND	3	GND
16	PS_ON	4	+5 V
17	GND	5	GND
18	GND	6	+5 V
19	GND	7	GND
20	Res (No Connection)	8	PWR_OK
21	+5 V	9	+5 VSB
22	+5 V	10	+12 V
23	+5 V	11	+12 V
24	GND	12	+3.3 V

12 V 8-pin Auxilliary Power Connector (JPWR1, JPWR2)

JPWR1 and JPWR2 are 8-pin ATX power connectors that provide auxiliary power to the processor. Refer to the table below for pin definitions.

8-pin Power Connector Pin Definitions: Eight Total	
Pin#	**Definition**
1–4	GND
5–8	+12 V (12 V Power)

4.2 JF1 Front Control Panel Headers

JF1 contains header pins for various buttons and indicators that are normally located on a control panel at the front of the chassis. These connectors are designed specifically for use with Supermicro chassis. See the figure below for the location of JF1.

20-pin JF1 Front Control Panel Headers Pin Definitions: 20 Total			
Pin#	**Definition**	**Pin#**	**Definition**
1	Power Switch	2	GND
3	Reset Switch	4	GND
5	Power Fail LED+	6	Power Fail LED-
7	UID LED+	8	UID LED-
9	NIC2 Link LED+	10	NIC2 Link LED-
11	NIC1 Link LED+	12	NIC1 Link LED-
13	HDD LED+/UID Switch+	14	HDD LED-
15	Power LED+	16	Power LED-
17	Key, no pin	18	Key, no pin
19	NMI Switch	20	GND

For a detailed diagram of the H14SSL-NT motherboard, see the layout under "Motherboard Quick Reference" on page 25.

4.3 Headers and Connections

For information about the headers on the H14SSL-NT motherboard, refer to the following content.

Chassis Intrusion

A Chassis Intrusion header is located at JL1 on the H14SSL-NT motherboard. Attach the appropriate cable from the chassis to inform you when the chassis is opened.

For a detailed diagram of the H14SSL-NT motherboard, see the layout under "Motherboard Quick Reference" on page 25.

Chassis Intrusion Pin Definitions: Two Total	
Pin#	**Definition**
1	Intrusion Input
2	GND

COM1 Header

A single COM connection (COM1) is located on the motherboard. Refer to the layout below for the location of COM1.

For a detailed diagram of the H14SSL-NT motherboard, see the layout under "Motherboard Quick Reference" on page 25.

COM1 Header Pin Definitions: Nine Total			
Pin#	**Definition**	**Pin#**	**Definition**
1	DCD	6	DSR
2	RXD	7	RTS
3	TXD	8	CTS
4	DTR	9	RI
5	GND	10	Key, no pin

Disk-On-Module Power Connectors (JSD1 and JSD2)

The Disk-On-Module (DOM) power connectors at JSD1 and JSD2 provide 5 V power to solid-state DOM storage devices connected to one of the SATA ports. See the table below for pin definitions.

For a detailed diagram of the H14SSL-NT motherboard, see the layout under "Motherboard Quick Reference" on page 25.

DOM Power Pin Definitions: Three Total	
Pin#	**Definition**
1	5 V
2	GND
3	GND

IPMB (Intelligent Platform Management Bus) Header (JIPMB1)

An IPMB (Intelligent Platform Management Bus) header for IPMI 2.0 is located at JIPMB1. Connect the appropriate cable here to use the IPMB I^2C connection on your system.

For a detailed diagram of the H14SSL-NT motherboard, see the layout under "Motherboard Quick Reference" on page 25.

IPMB Header Pin Definitions: Four Total	
Pin#	**Definition**
1	Data
2	GND
3	Clock
4	+3.3 V Standby

NCSI Header (JNCSI1)

The NCSI (Network Controller Sideband Interface) header is located at JNCSI1. This header is an interface used to connect the BMC (Baseboard Management Controller) to a set of Network Interface Controllers to enable out-of-band remote manageability.

For a detailed diagram of the H14SSL-NT motherboard, see the layout under "Motherboard Quick Reference" on page 25.

Onboard Battery (BT1)

The onboard backup battery is located at BT1. This battery provides backup power to the on-chip CMOS, which stores the BIOS setup information. It also supplies power to the Real-Time Clock (RTC) to keep it running.

For a detailed diagram of the H14SSL-NT motherboard, see the layout under "Motherboard Quick Reference" on page 25.

Onboard Fan Headers (FAN1–FAN4, FANA, FANB)

There are six fan headers (FAN1–FAN4, FANA, FANB) on the motherboard. These are 4-pin fan headers; pins 1–3 are backward compatible with the traditional 3-pin fans. The onboard fan speeds are controlled by Thermal Management (via Hardware Monitoring) in the BMC. When using the Thermal Management setting, use all 4-pin fans.

For a detailed diagram of the H14SSL-NT motherboard, see the layout under "Motherboard Quick Reference" on page 25.

Fan Header Pin Definitions: Four Total	
Pin#	**Definition**
1	GND (Black)
2	+12 V (Red)
3	Tachometer (Yellow)
4	PWM Control (Blue)

Power System Management Bus (SMBus/I²C) Header (PWRI2C)

The Power System Management Bus (SMBus/I²C) connector (PWRI2C) monitors the power supply.

For a detailed diagram of the H14SSL-NT motherboard, see the layout under "Motherboard Quick Reference" on page 25.

Power SMBus Header Pin Definitions: Five Total	
Pin#	**Definition**
1	Clock
2	Data
3	PMBUS_Alert
4	GND
5	+3.3 V

SATA (SATA8–15)

The H14SSL-NT has eight available SATA 6.0 ports (SATA8, SATA9, SATA10, SATA11, SATA12/13, and SATA14/15).

SATA Connectors Pin Definitions: Seven Total	
Pin#	**Definition**
1	GND
2	SATA_TXP
3	SATA_TXN
4	GND
5	SATA_RXN
6	SATA_RXP
7	GND

TPM/Port 80 Header

The JTPM1 header on the H14SSL-NT motherboard is used to connect a Trusted Platform Module (TPM)/Port 80, which is available from Supermicro (optional). A TPM/Port 80 connector is a security device that supports encryption and authentication in storage drives. It allows the motherboard to deny access if the TPM associated with the storage drive is not installed in the system. Information on the TPM is available at the following page:

https://www.supermicro.com/manuals/other/AOM-TPM-9670V_9670H__X12_H12.pdf

For a detailed diagram of the H14SSL-NT motherboard, see the layout under "Motherboard Quick Reference" on page 25.

Trusted Platform Module Header Pin Definitions: 10 Total			
Pin#	**Definition**	**Pin#**	**Definition**
1	+3.3 V	2	SPI_CS#
3	RESET#	4	SPI_MISO
5	SPI_CLK	6	GND
7	SPI_MOSI	8	Key, no Pin
9	+1.8 V Standby	10	SPI_IRQ#

USB Ports (USB4–USB5)

There are a total of six USB ports supported on the motherboard. Four are located on the back panel. There are also two ports located on one header, USB4/5 (3.0).

For a detailed diagram of the H14SSL-NT motherboard, see the layout under "Motherboard Quick Reference" on page 25.

(USB 3.0) Header Pin Definitions: 20 Total			
Pin#	**Definition**	**Pin#**	**Definition**
1	+5 V	20	Key, no pin
2	P1_SSRX-	19	+5 V
3	P1_SSRX+	18	P2_SSRX-
4	GND	17	P2_SSRX+
5	P1_SSTX-	16	GND

(USB 3.0) Header Pin Definitions: 20 Total			
Pin#	**Definition**	**Pin#**	**Definition**
6	P1_SSTX+	15	P2_SSTX-
7	GND	14	P2_SSTX+
8	P1_USB2_D-	13	GND
9	P1_USB2_D+	12	P2_USB2_D-
10	GND	11	P2_USB2_D+

VGA Port

A video (VGA) port is located on the I/O ports of the motherboard. The VGA port provides analog interface support between the computer and the video displays.

For a detailed diagram of the H14SSL-NT motherboard, see the layout under "Motherboard Quick Reference" on page 25.

4.4 Jumper Settings

To modify the operation of the motherboard, jumpers can be used to choose between optional settings. Jumpers create shorts between two pins to change the function of the connector. Pin 1 is identified with a square solder pad on the printed circuit board. See the diagram below for an example of jumping pins 1 and 2. Refer to the motherboard layout page for jumper locations.

Note: On two-pin jumpers, "Closed" means the jumper is on and "Open" means the jumper is off the pins.

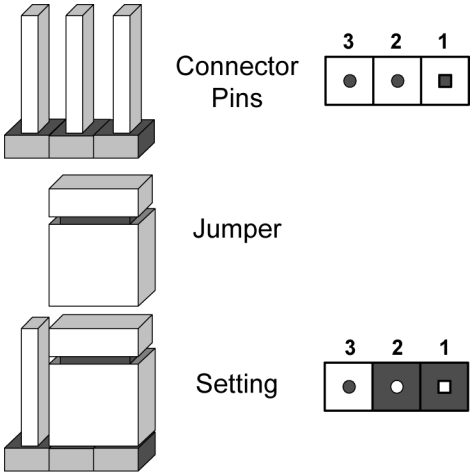


Figure 4-1. Jumping Connector Pins

CMOS Clear

JBT1 on the H14SSL-NT motherboard is used to clear CMOS, which will also clear any passwords. Instead of pins, this jumper consists of contact pads to prevent accidentally clearing the contents of CMOS.

For a detailed diagram of the H14SSL-NT motherboard, see the layout under "Motherboard Quick Reference" on page 25.



1. Power down the system.
2. Unplug the power cord(s).
3. Remove the cover of the chassis to access the motherboard.
4. Remove the onboard battery from the motherboard.

5. Short the CMOS pads, JBT1, with a metal object such as a small screwdriver for at least four seconds.

   Note: Clearing CMOS will also clear all passwords.

6. Remove the screwdriver or shorting device.
7. Reinsert the battery.
8. Replace the cover.
9. Reconnect the power cord(s).
10. Power on the system.

LAN Enable/Disable (JPL1)

Use JPL1 to enable or disable LAN on the H14SSL-N motherboard. The default setting is Enabled.

LAN Enable/Disable Jumper Settings	
Jumper Setting	**Definition**
Pins 1–2	Enabled (Default)
Pins 2–3	Disabled

JMCIO3 NVMe/SATA Switch (JSATA1)

The 3-pin jumper at JSATA1 provides the option to switch the hybrid port (JMCIO3) between SATA/NVMe. Refer to the table below for pin definitions.

For a detailed diagram of the H14SSL-NT motherboard, see the layout under "Motherboard Quick Reference" on page 25.

JSATA1 Pin Definitions	
Pin#	**Definition**
1–2	Auto (Depends on system configuration)
2–3	SATA
Open	NVMe


4.5 LED Indicators

For information about the LED indicators on the AS -2116S-FTNRT/TNRT server, refer to the following content.

LAN Port LEDs

Each LAN port of the H14SSL-NT motherboard has two LEDs. The green LED indicates activity, while the other Link LED may be green, orange, or off to indicate the speed of the connection.

For a detailed diagram of the H14SSL-NT motherboard, see the layout under "Motherboard Quick Reference" on page 25.

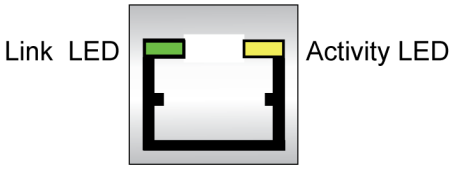

LAN Link LED (Left) LED State		LAN Activity LED (Right) LED State	
LED Color	**Definition**	**LED Color**	**Definition**
Orange: Solid	100 Mb/s	None	No Connection
Orange: Solid	1 Gb/s	None	Link, no activity
Green: Solid	10 Gb/s	Orange: Flashing	Active

BMC Heartbeat LED

A BMC Heartbeat LED is located on the H14SSL-NT motherboard. When this LED is blinking, the BMC is functioning normally.


For a detailed diagram of the H14SSL-NT motherboard, see the layout under "Motherboard Quick Reference" on page 25.

BMC Heartbeat LED Indicator	
LED Color and State	**Definition**
Green: Blinking	BMC Normal
Green: Solid On	During BMC Reset or Cold Boot
Green : Fast Blinking	BMC Initializing

BMC LAN LEDs

The dedicated BMC LAN connection on the H14SSL-NT motherboard features two LEDs. The LED on the right indicates activity, and the LED on the left indicates the speed of the connection.

For a detailed diagram of the H14SSL-NT motherboard, see the layout under "Motherboard Quick Reference" on page 25.

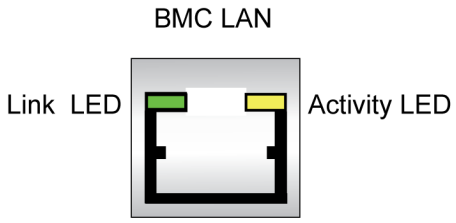

BMC LAN LEDs		
	Color/State	**Definition**
Link (left)	Orange: Solid Green: Solid Off	1 Gbps 100 Mbps 10 Mbps
Activity (right)	None Orange: Solid On Orange: Flashing	No Connection Link Active

Onboard Power LED (LED9)

LED9 is an onboard power OK LED. When this LED9 is lit, it means the system is turned on and all the system power rails are ready. When the system is turned off, or any one of the system power rails fail, this LED will turn off. Be sure to turn off the system and unplug the power cord before removing or installing components.

For a detailed diagram of the H14SSL-NT motherboard, see the layout under "Motherboard Quick Reference" on page 25.

Onboard Power LED Indicator	
LED Color	**Definition**
Off	System Power Off (power cable not connected)
Green	System On, Power OK
Green	Blinking, BIOS initializing

Unit ID (UID) LED

The UID LED indicator is located on the H14SSL-NT motherboard. This UID indicator provides easy identification of a system that may need to be serviced.

For a detailed diagram of the H14SSL-NT motherboard, see the layout under "Motherboard Quick Reference" on page 25.

UID LED LED Indicator		
LED Color	**State**	**Definition**
Blue	Solid On	Unit Identified
Blue	Blinking	Remote Unit Identified
None	Off	UID Off

Chapter 5:

Software

After the AS -2116S-FTNRT/TNRT server has been installed, you can install the Operating System (OS), configure RAID settings, and install the drivers.

5.1 Microsoft Windows OS Installation **88**

Installing the OS 88

5.2 Driver Installation **90**

5.3 BMC **91**

BMC ADMIN User Password 91

5.1 Microsoft Windows OS Installation

If you will be using RAID, you must configure RAID settings before installing the Windows OS and the RAID driver. Refer to the RAID Configuration User Guides posted on our website at https://www.supermicro.com/support/manuals.

Installing the OS

1. Create a method to access the Microsoft Windows installation ISO file. That can be a USB flash or media drive, or the BMC KVM console.
2. Retrieve the proper drivers. Go to the Supermicro web page for your motherboard and click on "Download the Latest Drivers and Utilities," select the proper driver, and copy it to a USB flash drive.
3. Boot from a bootable device with Windows OS installation. You can see a bootable device list by pressing <F11> during the system bootup.

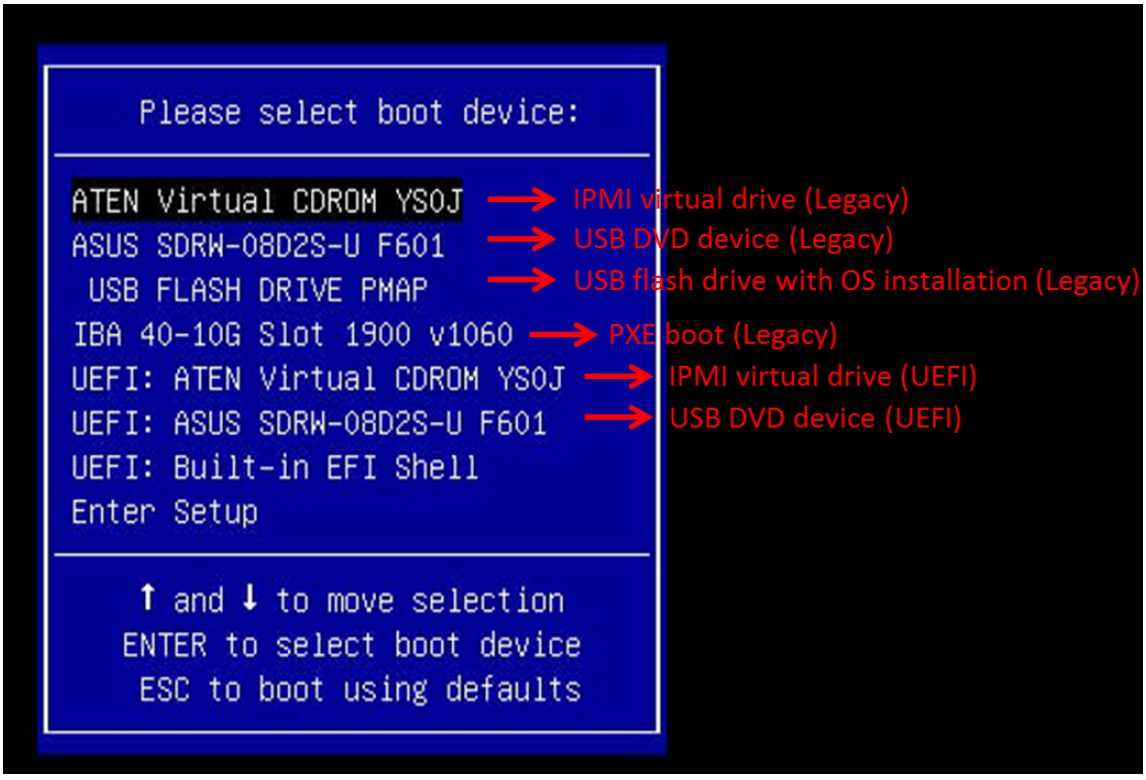


Figure 5-1. Selecting the Boot Device

4. During Windows Setup, continue to the dialog box where you select the drives on which to install Windows. If the disk you want to use is not listed, click on the “Load driver” link at the bottom left corner.

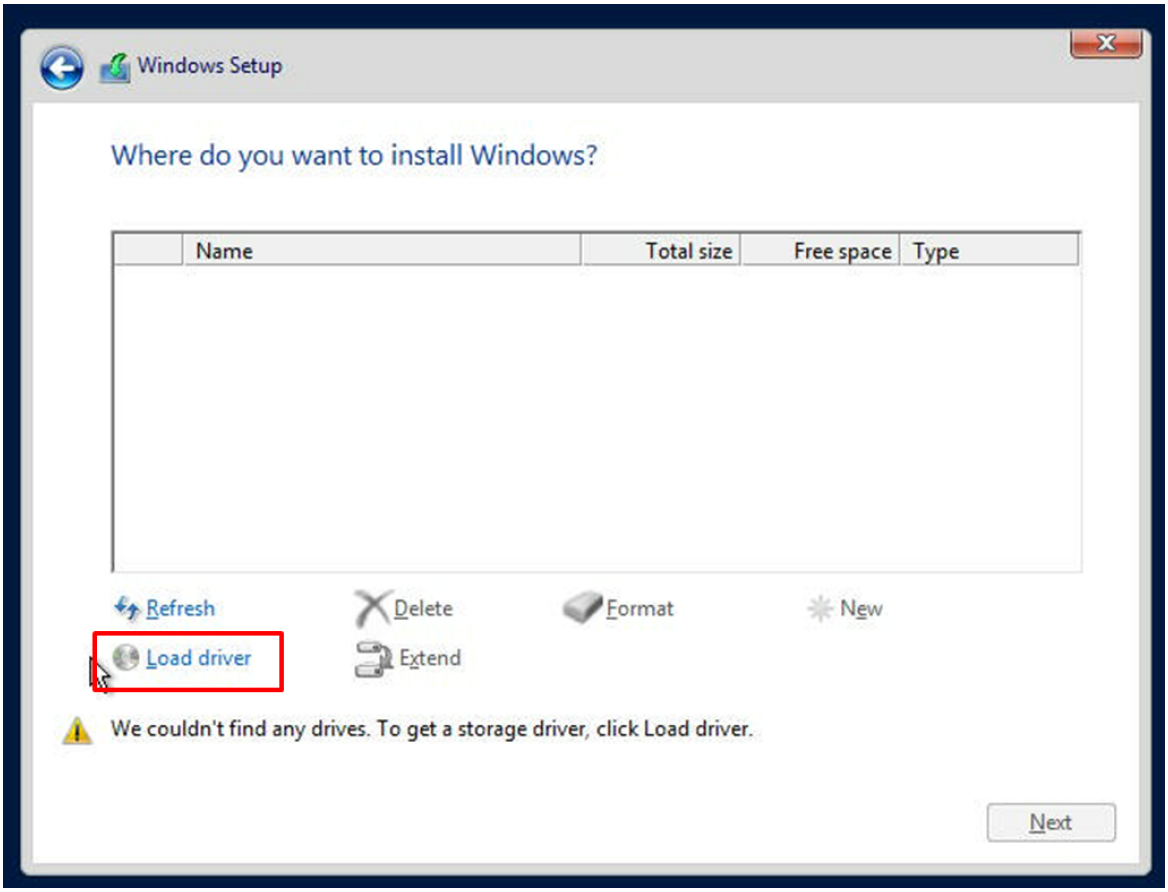


Figure 5-2. Loading the Driver Link

To load the driver, browse the USB flash drive for the proper driver files.

5. Once all devices are specified, continue with the installation.
6. After the Windows OS installation has completed, the system will automatically reboot multiple times for system updates.

5.2 Driver Installation

The Supermicro website contains drivers and utilities for your system at the following page:

https://www.supermicro.com/wdl.

Some of these drivers and utilities must be installed, such as the chipset driver. After accessing the website, go into the CDR_Images (in the parent directory of the above link) and locate the ISO file for your motherboard. Download this file to a USB flash or media drive. You may also use a utility to extract the ISO file if preferred.

Another option is to go to the Supermicro website at https://www.supermicro.com. Find the product page for your motherboard and download the latest drivers and utilities. Insert the flash drive or disk, and the screenshot shown below should appear.

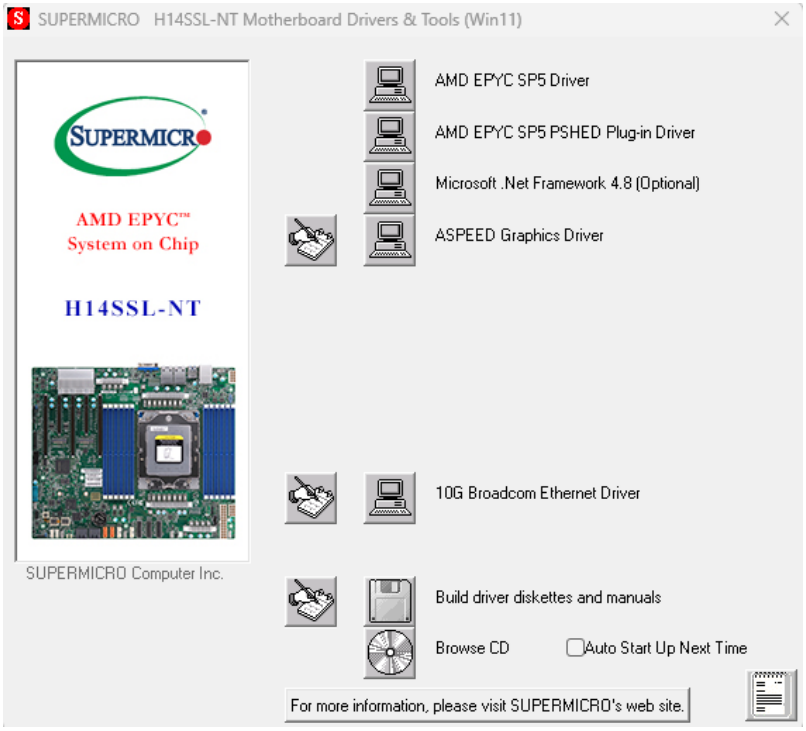


Figure 5-3. Driver & Tools Installation Screen

Note: Click the icons showing a hand writing on paper to view the readme files for each item. Click the computer icons to the right of these items to install each item (from top to bottom) one at a time. *After installing each item, you must reboot the system before moving on to the next item on the list.* The bottom icon with a CD on it allows you to view the entire contents.

5.3 BMC

The H14SSL-NT motherboard provides remote access, monitoring, and management through the baseboard management controller (BMC) and other management controllers distributed among different system modules. There are several BIOS settings that are related to BMC. For general documentation and information on BMC, visit our website at the following page:

https://www.supermicro.com/en/solutions/management-software/bmc-resources

BMC ADMIN User Password

For security, each system is assigned a unique default BMC password for the ADMIN user. The password can be found on a sticker on the motherboard and a sticker on the chassis, for Supermicro chassis. The sticker also displays the BMC MAC address. If necessary, the password can be reset using the Supermicro IPMICFG tool.



Figure 5-4. BMC Password Label

Chapter 6:

Optional Components

This chapter describes alternate configurations and optional system components for the AS -2116S-FTNRT/TNRT server.

6.1 Rackmount Rails or Wall-Mounting Brackets **93**

6.1 Rackmount Rails or Wall-Mounting Brackets

By default, the AS -2116S-FTNRT/TNRT server is shipped without rails or brackets. If you plan to mount the server in a rack or on a wall, make sure to include the rails or brackets while ordering.

For setup instructions with an ordered set of rails or brackets, see "Server Installation" on page 29.

Chapter 7:

Troubleshooting and Support

The following content contains information on common issues and how to resolve them.

7.1 Online Resources **95**
Direct Links for the AS -2116S-FTNRT/TNRT System 95
Direct Links for General Support and Information 95
7.2 Baseboard Management Controller (BMC) **96**
7.3 Troubleshooting Procedures **97**
Before Power On 97
No Power 97
No Video 97
System Boot Failure 97
Memory Errors 98
Losing the System's Setup Configuration 98
If the System Becomes Unstable 98
7.4 CMOS Clear **100**
7.5 Motherboard Battery **101**
7.6 Where to Get Replacement Components **102**
7.7 Technical Support Procedures **103**
Returning Merchandise for Service 103
7.8 Feedback **105**

7.1 Online Resources

A great deal of information is available on the Supermicro website. From the top menu of the Supermicro home page at https://www.supermicro.com:

- Specifications for servers and other hardware are available by clicking **Products**.
- The **Support** option offers downloads (manuals, BIOS/BMC, drivers, etc.), FAQs, RMA, warranty, and other service extensions.

Direct Links for the AS -2116S-FTNRT/TNRT System

- AS -2116S-FTNRT/TNRT system specifications pages:
  - https://www.supermicro.com/en/products/system/iot/2u/as%20-2116s-ftnrt
  - https://www.supermicro.com/en/products/system/iot/2u/as%20-2116s-tnrt
- H14SSL-NT motherboard page for links to the quick reference guide, user manual, validated storage drives, and more: https://www.supermicro.com/en/products/motherboard/h14ssl-nt

Direct Links for General Support and Information

- Frequently Asked Questions: https://www.supermicro.com/FAQ/index.php
- TPM User Guide: https://www.supermicro.com/manuals/other/AOM-TPM-9670V_9670H__X12_H12.pdf
- BMC User Guide: https://www.supermicro.com/manuals/other/BMC_IPMI_X14_H14.pdf
- Product Resources page for validated memory details: https://www.supermicro.com/support/resources/mem.cfm
- Product Matrices page for links to tables summarizing specs for systems, motherboards, power supplies, riser cards, add-on cards, and more: https://www.supermicro.com/en/support/product-matrices
- Security Center for recent security notices: https://www.supermicro.com/en/support/security_center
- Supermicro Phone and Addresses: https://www.supermicro.com/en/about/contact

7.2 Baseboard Management Controller (BMC)

The AS -2116S-FTNRT/TNRT server supports the Baseboard Management Controller (BMC). BMC is used to provide remote access, monitoring, and management. There are several BIOS settings that are related to BMC.

For general documentation and information on BMC, visit our website at the following page:

https://www.supermicro.com/en/solutions/management-software/bmc-resources

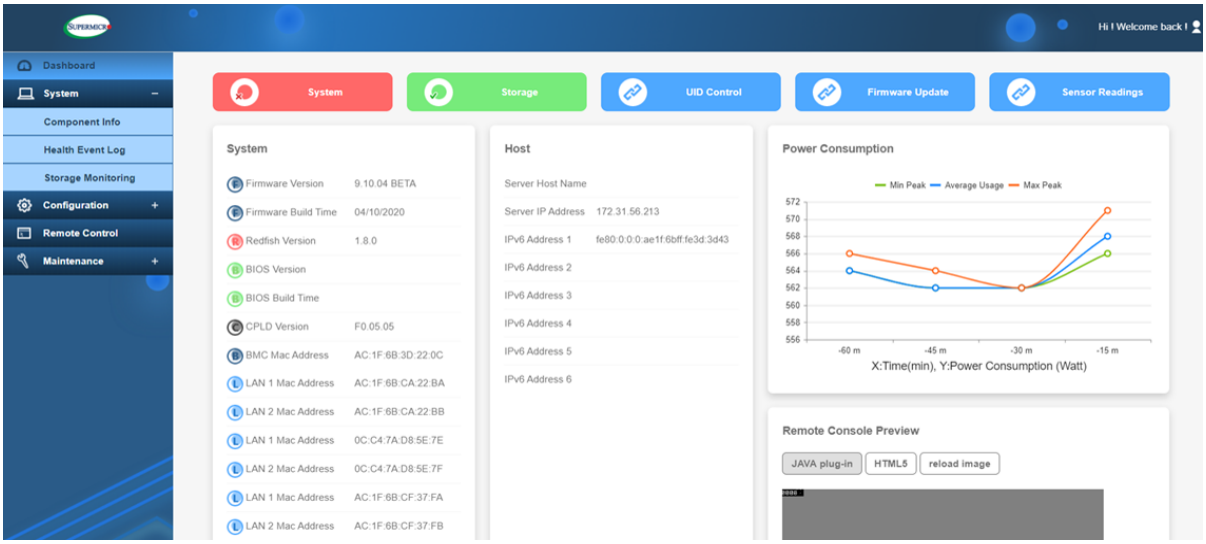


Figure 7-1. BMC Dashboard

7.3 Troubleshooting Procedures

Use the following procedures to troubleshoot your system. If you have followed all of the procedures below and still need assistance, refer to the "Technical Support Procedures" on page 103 section in this chapter. Always disconnect the AC power cord before adding, changing or installing any non hot-swappable hardware components. If the below steps do not fix the setup configuration problem, contact your vendor for repairs.

Before Power On

1. Make sure that there are no short circuits between the motherboard and chassis.
2. Disconnect all ribbon/wire cables from the motherboard, including those for the keyboard and mouse.
3. Remove all add-on cards.
4. Install the processor (making sure it is fully seated) and connect the front panel connectors to the motherboard.

No Power

1. Make sure that there are no short circuits between the motherboard and the chassis.
2. The battery on your motherboard may be old. Check to verify that it still supplies approximately 3 VDC. If it does not, replace it with a new one.

No Video

1. If the power is on, but you do not have video, remove all add-on cards and cables.
2. Remove all memory modules and turn on the system (if the alarm is on, check the specs of memory modules, reset the memory, or try a different one).

System Boot Failure

If the system does not display Power-On-Self-Test (POST) or does not respond after the power is turned on, do the following:

1. Remove all components from the motherboard, especially the DIMMs. Power on the system and check if the power-on LED and the BMC Heartbeat LED are on, and system fans are spinning.

2. Turn on the system with only one DIMM installed. If the system boots, check for bad DIMMs or slots by following the Memory Errors Troubleshooting procedure in this chapter.

Memory Errors

When suspecting faulty memory is causing the system issue, check the following:

1. Make sure that the memory modules are compatible with the system and are properly installed. See "Maintenance and Component Installation" on page 44 for installation instructions. (For memory compatibility, refer to the "Tested Memory List" link on the motherboard's product page to see a list of supported memory.)
2. Check if different speeds of DIMMs have been installed. It is strongly recommended that you use the same RAM type and speed for all DIMMs in the system.
3. Make sure that you are using the correct type of DIMMs recommended by the manufacturer.
4. Check for bad DIMMs or slots by swapping a single module among all memory slots and check the results.

Losing the System's Setup Configuration

1. Make sure that you are using a high-quality power supply. A poor-quality power supply may cause the system to lose the CMOS setup information. Refer to "Introduction" on page 12 for details on recommended power supplies.
2. The battery on your motherboard may be old. Check to verify that it still supplies approximately 3 VDC. If it does not, replace it with a new one.

If the System Becomes Unstable

If the system becomes unstable during or after OS installation, check the following:

1. Processor/BIOS support: Make sure that your processor is supported and that you have the latest BIOS installed in your system.
2. Memory support: Make sure that the memory modules are supported. Refer to the product page on our website at https://www.supermicro.com. Test the modules using memtest86 or a similar utility.

   Note: Click on the "Tested Memory List" link on the motherboard's product page to see a list of supported memory.

3. Storage Drive support: Make sure that all storage drives work properly. Replace the failed storage drives with good ones.
4. System cooling: Check the system cooling to make sure that all heatsink fans and processor/system fans, etc., work properly. Check the hardware monitoring settings in the BMC to make sure that the processor and system temperatures are within the normal range. Also, check the front panel Overheat LED and make sure that it is not on.
5. Adequate power supply: Make sure that the power supply provides adequate power to the system. Make sure that all power connectors are connected. Refer to our website for more information on the minimum power requirements.
6. Proper software support: Make sure that the correct drivers are used.

If the system becomes unstable before or during OS installation, check the following:

1. Source of installation: Make sure that the devices used for installation are working properly, including boot devices such as a CD/Media drive.
2. Cable connection: Check to make sure that all cables are connected and working properly.
3. Use the minimum configuration for troubleshooting: Remove all unnecessary components (starting with add-on cards first), and use the minimum configuration (but with the processor and a memory module installed) to identify the trouble areas. Refer to the steps listed above in this section for proper troubleshooting procedures.
4. Identify bad components by isolating them: If necessary, remove a component in question from the chassis, and test it in isolation to make sure that it works properly. Replace a bad component with a good one.
5. Check and change one component at a time instead of changing several items at the same time. This will help isolate and identify the problem.
6. To find out if a component is good, swap this component with a new one to see if the system will work properly. If so, then the old component is bad. You can also install the component in question in another system. If the new system works, the component is good and the old system has problems.

7.4 CMOS Clear

JBT1 on the H14SSL-NT motherboard is used to clear CMOS, which will also clear any passwords. For information on clearing CMOS, refer to "CMOS Clear" on page 82 earlier in this manual.

7.5 Motherboard Battery

For information on removing, disposing of, and replacing the motherboard battery of your system, refer to "Motherboard Battery Removal and Installation" on page 63.

7.6 Where to Get Replacement Components

If you need replacement parts for your AS -2116S-FTNRT/TNRT server, to ensure the highest level of professional service and technical support, purchase exclusively from our Supermicro Authorized Distributors/System Integrators/Resellers. A list can be found on the Supermicro website:

https://www.supermicro.com

Under the "Buy" menu, click the "Where to Buy" link.

7.7 Technical Support Procedures

Before contacting Technical Support, take the following steps. Also, note that as a motherboard manufacturer, Supermicro also sells motherboards through its channels, so it is best to first check with your distributor or reseller for troubleshooting services. They should know of any possible problems with the specific system configuration that was sold to you.

1. Refer to "Troubleshooting Procedures" on page 97 or see the FAQs on our website (https://www.supermicro.com/FAQ/index.php) before contacting Technical Support.
2. BIOS upgrades can be downloaded from our website (https://www.supermicro.com/support/resources/bios_ipmi.php).
3. If you still cannot resolve the problem, include the following information when contacting Supermicro for technical support:
   - Motherboard model and PCB revision number
   - BIOS release date/version (This can be seen on the initial display when your system first boots up.)
   - System configuration
4. An example of a Technical Support form is on our website at https://webpr3.supermicro.com/SupportPortal.
5. Distributors: For immediate assistance, have your account number ready when placing a call to our Technical Support department. For Supermicro contact information, refer to "Contacting Supermicro" on page 11.

Returning Merchandise for Service

A receipt or copy of your invoice marked with the date of purchase is required before any warranty service will be rendered. You can obtain service by calling your vendor for a Returned Merchandise Authorization (RMA) number. When returning the server to the manufacturer, the RMA number should be prominently displayed on the outside of the shipping carton, and the shipping package is mailed prepaid or hand-carried. Shipping and handling charges will be applied for all orders that must be mailed when service is complete.

For faster service, RMA authorizations can be requested online at the following page:

https://www.supermicro.com/RmaForm

Whenever possible, repack the server in the original Supermicro carton, using the original packaging material. If these are no longer available, be sure to pack the server securely, using packaging material to surround the server so that it does not shift within the carton and become damaged during shipping.

This warranty only covers normal consumer use and does not cover damages incurred in shipping or from failure due to the alteration, misuse, abuse or improper maintenance of products.

During the warranty period, contact your distributor first for any product problems.

7.8 Feedback

Supermicro values your feedback as we strive to improve our customer experience in all facets of our business. Email us at Techwriterteam@supermicro.com to provide feedback on our manuals.

Chapter 8:

UEFI BIOS

The following content contains information on BIOS configuration with the AS -2116S-FTNRT/TNRT server.

8.1 Introduction **107**
8.2 Main Setup **109**
8.3 Advanced Setup Configurations **111**
8.4 BMC **137**
8.5 Event Logs **141**
8.6 Security **143**
8.7 Boot **145**
8.8 Save & Exit **147**

8.1 Introduction

This chapter describes the AMIBIOS™ Setup utility for the motherboard. The BIOS is stored on a chip and can be easily upgraded using the UEFI script (flash.nsh), the BMC WebUI, or the SuperServer Automation Assistant (SAA) utility.

Note: Due to periodic changes to the BIOS, some settings may have been added or deleted and might not yet be recorded in this manual. Refer to the Manual Download area of our website for any changes to BIOS that may not be reflected in this manual.

Updating BIOS

It is recommended that you do not upgrade your BIOS if you are not experiencing any problems with your system. Updated BIOS files are located on our website at the following page:

https://www.supermicro.com/support/resources/bios_ipmi.php

Check our BIOS warning message and the information on how to update your BIOS on our website. Select your motherboard model and download the BIOS file to your computer. Also, check the current BIOS revision to make sure that it is newer than your BIOS before downloading.

Important: Do not shut down or reset the system while updating the BIOS to prevent possible system boot failure! Read the motherboard README file carefully before you perform the BIOS update.

To update the BIOS under the UEFI Shell, unzip the BIOS file onto a bootable USB device and then boot into the built-in UEFI Shell. For motherboards with BMC support, type "flash.nsh <BIOS filename><BMC Username><BMC Password>" to start the BIOS update. The flash.nsh script will invoke the SAA (EFI) tool automatically to perform the BIOS update, beginning with uploading the BIOS image to BMC. After uploading the BIOS image, the system will reboot to continue the process. The BMC will take over and continue the BIOS update in the background. The process will take 3–5 minutes. Refer to the README file for more information.

Starting the Setup Utility

To enter the BIOS Setup utility, press the <Delete> key while the system is booting-up. In most cases, the <Delete> key is used to invoke the BIOS Setup screen. There are a few cases when other hot keys are used, such as <F1>, <F2>, etc. Each main BIOS menu option is described in this manual.

The Main BIOS screen has two main frames. The left frame displays all the options that can be configured. “Grayed-out” options cannot be configured. The right frame displays the key legend. Above the key legend is an area reserved for a text message. When a BIOS submenu or item is selected in the left frame, it is highlighted in white. Often a text message will accompany it. (Note that BIOS has default text messages built in. We retain the option to include, omit, or change any of these text messages.) Settings printed in Bold are the default values.

A "►" indicates a submenu. Highlighting such an item and pressing the <Enter> key open the list of settings within that submenu.

The BIOS Setup utility uses a key-based navigation system called hot keys. Most of these hot keys (<F1>, <F2>, <F3>, <F4>, <F5>, <F6>, <Enter>, <ESC>, the arrow keys, etc.) can be used at any time during the setup navigation process.

8.2 Main Setup

The Main setup screen appears when the AMI BIOS Setup utility is first entered. To return to the Main setup screen, select the Main tab at the top of the screen. The Main BIOS setup screen is shown below.

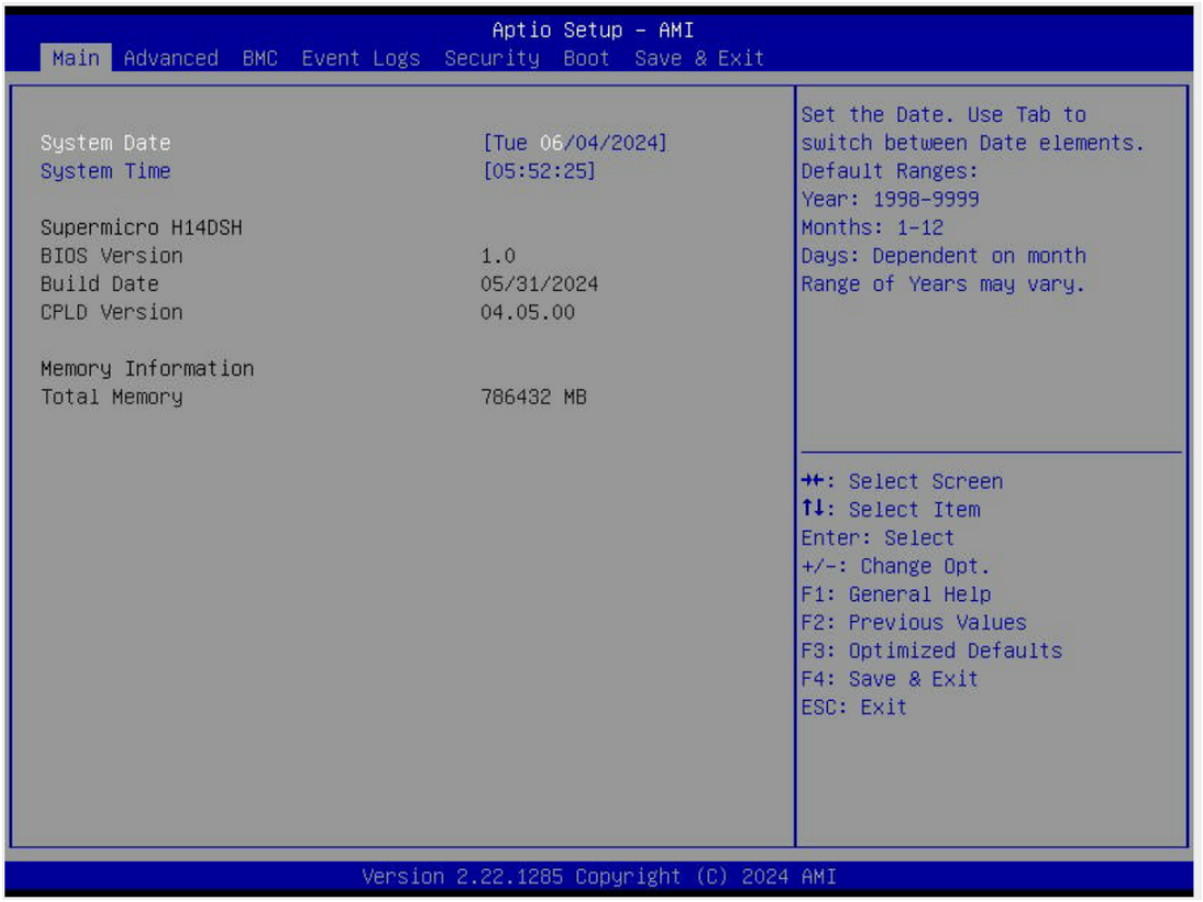


Figure 8-1. UEFI BIOS Main Tab Screen

System Date/System Time

Use the two features to change the system date and time. Highlight **System Date** or **System Time** using the arrow keys. Enter new values using the keyboard. Press the <Tab> key or the arrow keys to move between fields. The date must be entered in MM/DD/YYYY format. The time is entered in HH:MM:SS format.

Note: The time is in the 24-hour format. For example, 5:30 P.M. appears as 17:30:00.

Supermicro H14SSL-NT

BIOS Version

This feature displays the version of the BIOS ROM used in the system.

Build Date

This feature displays the date when the version of the BIOS ROM used in the system was built.

CPLD Version

This feature displays the version of the Complex-Programmable Logical Device (CPLD) used in the system.

Memory Information

Total Memory

This feature displays the total size of memory available in the system.

8.3 Advanced Setup Configurations

Use the arrow keys to select the Advanced submenu and press <Enter> to access the submenu items.

Important: Use caution when changing the Advanced settings. An incorrect value, an improper DRAM frequency, or a wrong BIOS timing setting may cause the system to malfunction. When this occurs, revert the setting to the manufacture default settings.

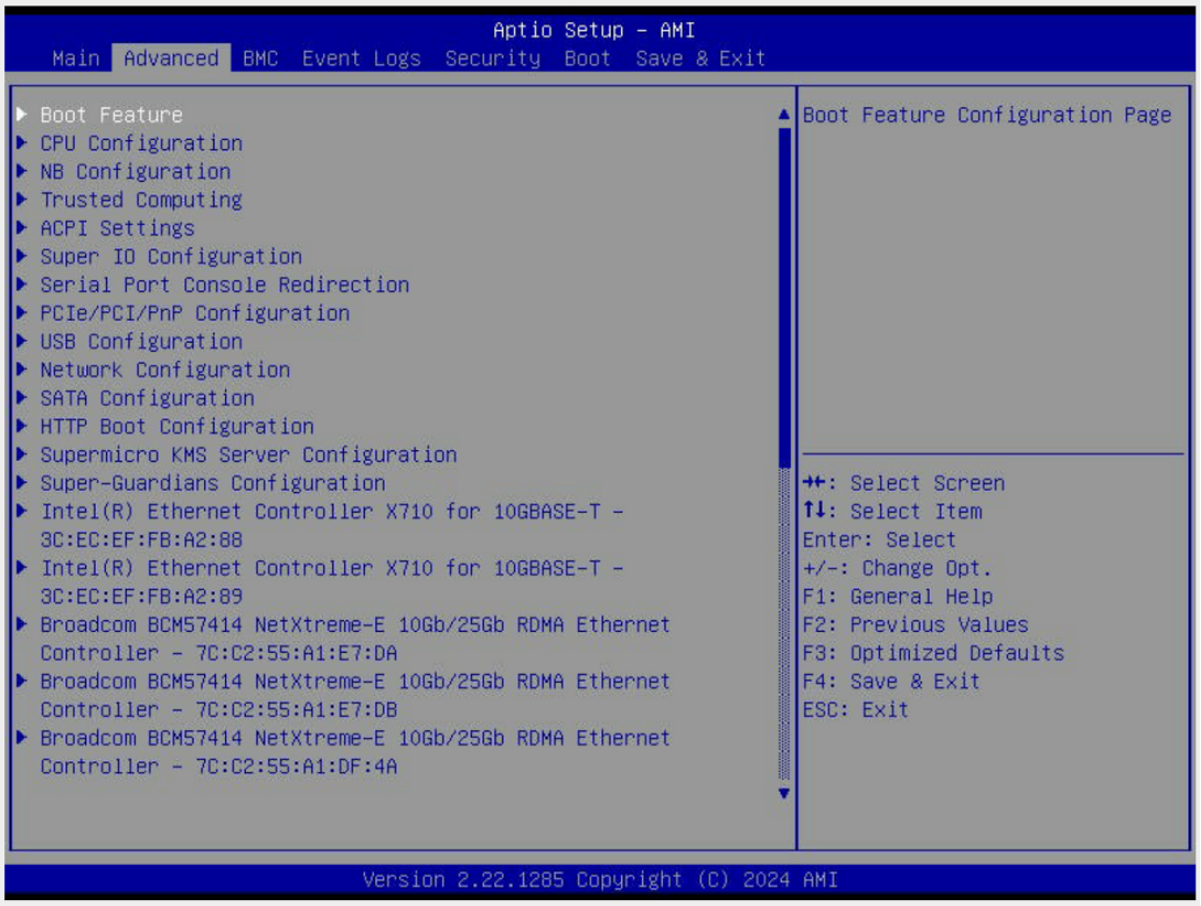


Figure 8-2. Advanced BIOS Screen

Boot Feature Menu

►Boot Feature

Quiet Boot

Use this feature to select the screen between displaying the Power-on Self Test (POST) messages or the OEM logo upon bootup. Select Disabled to display the POST messages. Select Enabled to display the OEM logo instead of the normal POST messages. The options

are Disabled and **Enabled**.

Note: BIOS POST messages are always displayed regardless of the setting of this feature.

Option ROM Messages

Use this feature to set the display mode for the Option ROM. Select Keep Current to display the current AddOn ROM display settings. Select Force BIOS to use the Option ROM display mode set by the system BIOS. The options are **Force BIOS** and Keep Current.

Bootup NumLock State

Use this feature to set the Power-on state for the <Numlock> key. The options are **On** and Off.

Wait For "F1" If Error

Select Enabled to force the system to wait until the <F1> key is pressed if an error occurs. The options are **Disabled** and Enabled.

Re-try Boot

If this feature is set to Enabled, the system BIOS will automatically reboot the system from an Extensible Firmware Interface (EFI) boot device after an initial boot failure. The options are **Disabled** and Enabled.

Power Configuration

Watch Dog Function

Select Enabled to allow the Watch Dog timer to reboot the system when it is inactive for more than five minutes. The options are **Disabled** and Enabled.

Watch Dog Action (Available when "Watch Dog Function" is set to Enabled)

Use this feature to configure the Watch Dog Time_out setting. The options are **Reset** and NMI.

Restore on AC Power Loss

Use this feature to set the power state after a power outage. Select Stay Off for the system power to remain off after a power loss. Select Power On for the system power to be turned on after a power loss. Select Last State to allow the system to resume its last power state before a power loss. The options are Stay Off, Power On, and **Last State**.

Power Button Function

This feature controls how the system shuts down when the power button is pressed. Select 4 Seconds Override to power off the system after pressing and holding the power button for four seconds or longer. Select Instant Off to instantly power off the system as soon as you press the power button. The options are **Instant Off** and 4 Seconds Override.

CPU Configuration Menu

Workload Profile

This function allows configuring the BIOS settings to match the selected workload. The options are **Disabled**, HPC, I/O, Virtualization, Telco NFVI, Telco NFVI-FP, and Telco FlexRAN.

SMT Control

This setting is used to disable symmetric multithreading. To re-enable SMT, a power cycle is needed after selecting the Enable option. Select Auto based on BIOS PCD default setting. The options are Disabled, Enabled, and **Auto**.

Core Performance Boost

Disable CPB. The options are Disabled and **Auto**.

Global C-state Control

Controls IO based C-state generation and DF C-states. The options are Disabled, Enabled, and **Auto**.

ACPI CST C2 Latency

Use this setting to enter in microseconds the decimal value. Larger C2 latency values will reduce the number of C2 transitions and reduce C2 residency. Fewer transitions can help when the performance is sensitive to the latency of C2 entry and exit. The default value is **100.**

PPIN Opt-in

Select Unlock/Enabled to use the Protected Processor Inventory Number (PPIN) in the system. The PPIN is a unique number set for tracking a given processor. The options are Disabled, Enabled, and **Auto**.

SMEE

This setting controls Secure Memory Encryption (SME) for the system. The options are Disabled, Enabled, and **Auto**.

Fast Short REP MOVSB (FSRM)

The default is 1, but it can be set to zero for analysis purposes as long as the OS supports it. The options are **Auto**, Enabled, and Disabled.

Enhanced REP MOVSB/STOSB (ERSM)

This setting optimizes CPU string operations. Disabling ERSM (setting it to 0) can be useful for performance analysis if supported by the operating system. The options are Disabled, Enabled, and **Auto**.

AVX512

Enable or disable AVX512. The options are **Auto**, Enabled, and Disabled.

Monitor and MWAIT Disable

This setting controls the availability of the MONITOR, MWAIT, MONITORX, and MWAITX opcodes, which are used for power management and synchronization. The options are Enabled, Disabled, and **Auto**.

L1 Stream HW Prefetcher

This setting is used to enable or disable the L1 Stream Hardware Prefetcher. The options are Disabled, Enabled, and **Auto**.

L2 Stream HW Prefetcher

This setting is used to enable or disable the L2 Stream Hardware Prefetcher. The options are Disabled, Enabled, and **Auto**.

CCD Control

Sets the number of active CCDs. A power cycle is required once this option has been used to remove any CCDs. The options are **Auto**, 2 CCDs, 4 CCDs, 6 CCDs, 8 CCDs, 10 CCDs, 12 CCDs, and 14 CCDs.

Core Control

Sets the number of cores to be used. Once this option has been used to remove any cores, a power cycle is required for future selections to take effect. The options are **Auto**, ONE (1+0), TWO (2+0), THREE (3+0), FOUR (4+0), FIVE (5 +0), SIX (6+0), SEVEN (7+0), TWO (1+1), FOUR (2+2), SIX (3+3), EIGHT (4+4), TEN (5+5), TWELVE (6+6), and FOURTEEN (7+7).

SVM Mode

This setting enables or disables CPU Virtualization. The options are Disabled and **Enabled**.

►CPU1 Information

Changing the designed PCIe port bifurcation.

CPU information listed,

CPU1 PCIe Package Group P2 The options are **Auto**, x4x4x4x4, x4x4x8, x8x4x4, x8x8, and x16

CPU1 PCIe Package Group G2

CPU1 PCIe Package Group P3

CPU1 PCIe Package Group G3

CPU1 PCIe Package Group P1

CPU1 PCIe Package Group G1

CPU1 PCIe Package Group P0

CPU1 PCIe Package Group G0

NB Configuration

North Bridge Configuration

IOMMU

Use this setting to enable or disable IOMMU. The options are Disabled, Enabled, and **Auto**.

DMAr Support

Use this setting to enable DMAr system protection during POST (Power-On Self-Test). The options are Disabled, Enabled, and **Auto**.

DMA Protection

Use this setting to enable DMA remap support in the IVRS IVinfo field. The options are **Auto**, Enabled, and Disabled.

DRTM Virtual Device Support

This enables or disables the DRTM ACPI Virtual device. The options are Disabled, Enabled, and **Auto**.

DRTM Memory Reservation

This setting reserves 128 MB of memory below for DRTM security functions. it is required to for secured-core servers. The options are Disabled, Enabled, and **Auto**.

ACS Enable

This setting enables Access Control Service (ACS) functionality, which requires AER to be active. The options are Enabled, Disabled, and **Auto**.

TDP Control

Use this setting to set the processor's power consumption (TDP). The options are Manual and **Auto**.

Package Power Limit Control

Use Auto to apply the default power limit (PPT) or Manual to set a custom PPT. The options are Manual and **Auto**.

Determinism Control

Use this setting to configure the level of performance determinism. The options are Manual and **Auto**.

APBDIS

Use this setting to control the APBDIS feature. A value of 0 indicates "not APBDIS" (mission mode). The options are 0, 1, and **Auto**.

Power Profile Selection

Use this setting to select a power profile to optimize performance or efficiency. The options are High Performance Mode, Efficiency Mode, Maximum IO Performance Mode, Balanced Memory Performance Mode, Balanced Core Performance Mode, Balanced Core Memory Performance Mode, and **Auto**.

DF Cstates

This setting controls the power-saving states of the data fabric. The options are Disabled, Enabled, and **Auto**.

Data Link Feature Cap

This setting control the activation of advanced data link features. The options are Enabled, Disabled, and **Auto**.

SEV-SNP Support

This setting controls the activation of Secure Encrypted Virtualization - Secure Nested Paging (SEV-SNP) security features. The options are Disabled, Enabled, and **Auto**.

Periodic Training

This setting controls the method for managing power-saving states. The options are Disabled and **Legacy**.

EQ Bypass To Highest Rate

This setting determines whether the system can bypass equalization steps at lower data rates and directly attempt equalization at the highest supported rate during the link setup process. The options are Disable, Enable, and **Auto**.

CXL Memory Attribute

This setting determines the memory type for CXL devices. The options are **Auto**, Enabled, and Disabled.

Sync Header Bypass

This setting controls the inclusion of synchronization headers in data transmissions. The options are **Auto**, Enabled, and Disabled.

►xGMI Configuration

xGMI Force Link Width Control (available when xGMI Link Width Control is set to Manual)

This setting forces a specific link width for the xGMI interface, overriding automatic settings for manual control. The options are **Auto**, Unforce, and Force.

xGMI Link Max Speed

This setting controls the maximum speed of the xGMI link. The options are 20 Gbps, 25 Gbps, 32 Gbps, and **Auto**.

►Memory Configuration

Memory Target Speed

Use this setting to specify the memory target speed in MT/s. The options are **Auto**, DDR3600, DDR4000, DDR4400, DDR4800, and DDR5200.

Memory Interleaving

This setting controls fabric level memory interleaving. Note that the channel, die and socket have requirements on memory populations and it will be ignored if the memory doesn't support the selected option. The options are Disabled, Enabled, and **Auto**.

Chipselect Interleaving

This setting allows memory blocks to be interleaved across the DRAM chip selects for node 0, which can enhance memory performance. The options are Disabled and **Auto**.

BankSwapMode

This setting determines the operation of memory banks in relation to CPU usage. The options are **Auto**, Disabled, and Swap CPU.

Power Down Enable

Use this setting to enable or disable DDR power down mode. The options are Disabled, Enabled, and **Auto**.

DRAM Scrub Time

This setting specifies the frequency of memory scrubbing, which helps maintain data integrity by refreshing memory contents. The options are Disabled, 1 hour, 4 hours, 6 hours, 8 hours, 12 hours, 16 hours, **24 hours**, and 48 hours.

TSME

This setting controls the Transparent Secure Memory Encryption feature. The options are **Auto**, Enabled, and Disabled.

Enhanced PPR

Use this setting to enable a full memory test during system setup. While this thorough testing can enhance system stability, it will also increase the overall boot time. The options are **Disabled** and Enabled.

►CPU1 Memory Information

View memory information for CPU1.

ACPI Settings Menu

►ACPI Settings

High Precision Event Timer

Enable the High Precision Event Timer. The default is **Enabled**.

PCI AER Support

Use this setting to enable ACPI OS to natively manage PCI advanced error reporting. The default is **Disabled**.

NUMA Nodes per Socket

A NUMA architecture divides hardware resources, including processors, memory, and I/O buses, into groups, called NUMA nodes. This setting specifies the number of desired NUMA nodes per sockets. Selecting Zero will attempt to interleave the two sockets together. **Auto** is equivalent to NPS1.

ACPI SRAT L3 Cache As NUMA Domain

This setting determines how the system's NUMA (Non-Uniform Memory Access) domains are defined in relation to the L3 cache. The options are Disabled, Enabled, and **Auto**.

Super IO Configuration Menu

►Super IO Configuration

Note: This submenu is available when your system supports this feature.

The following information is displayed.

- Super IO Chip

Select for Serial Port 1 or Serial Port 2.

Serial Port 1 Configuration Menu

Serial Port 1 Configuration

Serial Port 1

Select Enabled to enable serial port 1. The options are Disabled and **Enabled**.

Device Settings (Available when "Serial Port 1" above is set to Enabled)

This feature displays the base I/O port address and the Interrupt Request address of serial port 1.

Change Settings (Available when "Serial Port 1" above is set to Enabled)

Use this feature to specify the base I/O port address and the Interrupt Request address of serial port 1. Select Auto for the BIOS to automatically assign the base I/O and IRQ address to serial port 1. The options are **Auto**, (IO=3F8h; IRQ=4;), (IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12;), (IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12;), (IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12;), and (IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12;).

Serial Port 2 Configuration Menu

Serial Port 2 Configuration

Serial Port 2/SOL ("Serial Port 2" or "SOL" based on your system support)

Select Enabled to enable serial port 2 (or SOL). The options are Disabled and **Enabled**.

Device Settings (Available when "Serial Port 2/SOL" above is set to Enabled)

This feature displays the base I/O port address and the Interrupt Request address of serial port 2 (or SOL).

Change Settings (Available when "Serial Port 2/SOL" above is set to Enabled)

Use this feature to specify the base I/O port address and the Interrupt Request address of serial port 2 (or SOL). Select Auto for the BIOS to automatically assign the base I/O and IRQ address to serial port 2 (or SOL). The options are **Auto**, (IO=2F8h; IRQ=3;), (IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12;), (IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12;), (IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12;), and (IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12;).

Serial Port 2 Attribute (Available for Serial Port 2 only)

Select SOL to use serial port 2 as a Serial Over LAN (SOL) port for console redirection. The options are **SOL** and COM.

Serial Port Console Redirection Menu

COM1 (Available when your system supports the serial port of COM1)

Console Redirection

Select Enabled to enable COM port 1 for Console Redirection, which allows a client machine to be connected to a host machine at a remote site for networking. The options are **Disabled** and Enabled.

Note: This feature will be set to Enabled if there is no BMC support.

►Console Redirection Settings

Note: This submenu is available when "Console Redirection" for COM1 or SOL/COM2 is set to Enabled.

Out-of-Band Mgmt Port

The feature selects a serial port in a client server to be used by the Microsoft Windows Emergency Management Services (EMS) to communicate with a remote host server. The options are **COM1** and SOL/COM2. Please note that the option of SOL/COM2 indicates a shared serial port. SOL is available with BMC support.

Terminal Type

Use this feature to select the target terminal emulation type for Console Redirection. Select VT100 to use the ASCII Character set. Select VT100+ to add color and function key support. Select ANSI to use the Extended ASCII Character Set. Select VT-UTF8 to use UTF8 encoding to map Unicode characters into one or more bytes. The options are VT100, **VT100+**, VT-UTF8, and ANSI.

Bits Per Second EMS

This feature sets the transmission speed for a serial port used in Console Redirection. Make sure that the same speed is used in the host computer and the client computer. A lower transmission speed may be required for long and busy lines. The options are 9600, 19200, 57600, and **115200** (bits per second).

Flow Control EMS

Use this feature to set the flow control for Console Redirection to prevent data loss caused by buffer overflow. Send a "Stop" signal to stop sending data when the receiving buffer is full. Send a "Start" signal to start sending data when the receiving buffer is empty. The options are **None**, Hardware RTS/CTS, and Software Xon/Xoff.

The following information is displayed.

- **Data Bits EMS**
- **Parity EMS**
- **Stop Bits EMS**

►Legacy Console Redirection Settings

Legacy Serial Redirection Port

Select a COM port to display redirection of legacy OS and legacy OPROM messages. The options are **COM1** and SOL/COM2.

Resolution

On legacy OS, the number of rows and columns supported redirection. The options are 80x24 and **80x25**.

Redirection After BIOS Post

When bootloader is selected, then legacy console redirection is disabled before booting to legacy OS. When always is select, then legacy console redirection is enabled for legacy OS. The options are **Always Enable** and BootLoader.

Serial Port for Out-of-Band Management/Windows Emergency Management Services (EMS)

The feature allows you to configure Console Redirection settings to support Out-of-Band Serial Port management.

Console Redirection EMS

Select Enabled to use the SOL port for Console Redirection. The options are **Disabled** and Enabled.

PCIe/PCI/PnP Configuration Menu

PCI Bus Driver Version

This item displays the PCI bus driver version.

PCI Devices Common Settings

Re-Size BAR Support

This setting enables or disables the Re-Size Base Address Register feature for compatible PCIe devices, which allows the system to allocate more memory to the device. The options are Disabled and **Enabled**.

SR-IOV Support

This setting enables or disables Single Root I/O Virtualization support for the system's PCIe devices. The options are Disabled and **Enabled**.

BME DMA Mitigation

This setting enables or disables Bus Mastering Error (BME) Direct Memory Access (DMA) mitigation for protection during the pre-boot process. The options are **Disabled** and Enabled.

ASPM Support

Configure the Active State Power Management (ASPM) level for PCIe links to optimize power consumption and performance. The options are **Disabled**, Auto, and Force L1.

PCIe ARI Support

This setting enables alternative routing-ID interpretation. The options are Disabled, Enabled, and **Auto**.

PCIe ARI Enumeration

This setting controls the forwarding of Alternate Routing-ID Interpretation (ARI) information for each downstream port, which is essential for device identification in PCIe systems. The options are Disabled, Enabled, and **Auto**.

Relaxed Ordering

This setting determines whether PCI Express devices are permitted to bypass strict transaction ordering, which can lead to potential performance improvements. The options are Disabled and **Enabled**.

Clock Spread Spectrum

This setting allows the BIOS to monitor and reduce the level of Electromagnetic Interference (EMI) generated by system components. The options are **Disabled** and Enabled.

No Snoop

This setting configures the No Snoop option for PCI Express devices, determining whether memory accesses bypass the cache. The options are Disabled and **Enabled**.

VGA Priority

This setting allows you to choose the primary video output source for the system. The options are **Onboard** and External.

PCIe Ten Bit Tag Support

This setting enables the use of ten-bit tags for PCIe devices, which can improve data handling and management. The options are Disabled, Enabled, and **Auto**.

NVMe Firmware Source

This setting determines the source of firmware for NVMe devices, allowing you to select between native support or vendor- specific firmware. The options are **Vendor Defined Firmware** and AMI Native Support.

PCI Devices Option ROM Setting

This setting controls Option ROMs on PCI/PCIe cards for device initialization. Available options depend on installed hardware.

Onboard Video Option ROM

This setting selects the type of firmware to be loaded for onboard video. The options are Disabled and **EFI**.

M.2-H1 OPROM

This setting enables or disables the Option ROM for the M.2-C1 slot. The options are Disabled and **EFI**.

M.2-H2 OPROM

This setting enables or disables the Option ROM for the M.2-C2 slot. The options are Disabled and **EFI**.

USB Configuration

USB Configuration

USB Module Version

USB Controllers: 2 XHCIs

USB Devices: 1 Keyboard, 1 Mouse, 3 Hubs

XHCI Hand-off

This setting provides a workaround for operating systems that do not support XHCI hand-off. The XHCI ownership change must be claimed by the XHCI driver.The options are **Enabled** and Disabled.

Network Configuration Menu

Network Stack

This setting enables the UEFI nework stack. The options are Disabled and **Enabled**.

IPv4 PXE Support

This setting enables IPv4 PXE boot support. The options are Disabled and **Enabled**.

IPv6 HTTP Support

This setting enables IPv6 HTTP boot support. The options are Disabled and **Enabled**.

PXE Boot Wait Time

This sets the wait time, in seconds, to press the ESC key to abort the PXE boot. Use either =/- or numeric keys to set the value. The default value is **0**.

Media Detect Count

This sets the number of times the presence of media will be checked. Use either +/- or numeric keys to set the value. The default value is **1**.

►IPv4 Network Configuration

Configured

This setting indicates whether the network address configured successfully. The options are Disabled and **Enabled**.

Enable DHCP

The options are **Disabled** and Enabled.

Local IP Address

Enter and IP address.

Local NetMask

Enter the Netmask address.

Local Gateway

Enter the Gateway IP address.

Local DNS Servers

Enter the DNS servers IP addresses.

Save Changes and Exit

The options are **Yes** and no.

►IPv6 Network Configuration

Set IPv6 Network parameters.

►Enter Configuration Menu

Interface Name

Interface Type

MAC address

Host addresses

Route Table

Gateway addresses

DNS adresses

Interface ID

DAD Transmit Count

The number of consecutive Neighbor Solicitation messages sent while performing Duplicate Address Detection on a tentative address. A value of zero indicates that Duplicate Address Detection is not performed. The default value is **1**.

►Advanced Configuration

Note: This submenu is available when "Policy" is set to Manual.

New IPv6 address

Use this to set a new manual IP address. It can only be configured under manual policy.

New Gateway addresses

Use this to set new gateway addresses. Gateway IP addresses can only be configured under manual policy.

New DNS addresses

Use this to set new DNS addresses. DNS addresses can only be configured under manual policy.

Commit Changes and Exit

Discard Changes and Exit

Policy

Use this feature to select how the policy is to be configured. The options are **Automatic** and Manual.

Save Changes and Exit

The options are **Yes** and No.

►Advanced Configuration

Note: This submenu is available when "Policy" is set to Manual.

New IPv6 address

Use this to set a new manual IP address. It can only be configured under manual policy.

New Gateway addresses

Use this to set new gateway addresses. Gateway IP addresses can only be configured under manual policy.

New DNS addresses

Use this to set new DNS addresses. DNS addresses can only be configured under manual policy.

Commit Changes and Exit

Discard Changes and Exit

Save Changes and Exit

The options are **Yes** and No.

SATA Configuration Menu

SATA Configuration

SATA Enable

Disable or enable the OnChip SATA controller. The options are Disabled, Enabled, or **Auto**.

SATA Information

Provides SATA devices information.

HTTP Boot Configuration Menu

HTTP Boot Configuration

HTTP Boot Policy

Use this feature to set the HTTP boot policy. The options are Apply to all LANs, **Apply to each LAN**, and Boot Priority #1 instantly.

HTTPS Boot Checks Hostname

Important: Disabling "HTTPS Boot Checks Hostname" is a violation of RFC 6125 and may expose you to Man-in-the-Middle Attacks. Supermicro is not responsible for any and all security risks incurred by you disabling this feature.

This setting determines whether HTTPS Boot verifies that the hostname in the server's TLS certificate matches the hostname of the remote server. The options are **Enabled** and Disabled (WARNING: Security Risk!!).

Priority of HTTP Boot

Instance of Priority 1: (Available when your motherboard supports this feature)

This feature sets the rank target port. The default setting is **1**.

Select IPv4 or IPv6

This feature specifies which connection the target LAN port should boot from. The options are **IPv4** and IPv6.

Boot Description

Use this feature to enter a boot description, which cannot be longer than 75 characters. Please be sure to enter a boot description; otherwise, the boot option for the URI cannot be created.

Boot URI

Enter a Boot Uniform Research Identifier (URI) with 128 characters or shorter. This Boot URI determines how IPv4 Boot Option and IPv6 Boot Option will be created. This feature is only supported on Dual or EFI Boot Mode.

Supermicro KMS Server Configuration Menu

►Supermicro KMS Server Configuration

Note: Be sure to configure all the features in the submenu of Supermicro KMS Server Configuration and the feature of "KMS Security Policy" in the submenu of Super-Guardians Configuration so that your system can communicate with the KMS server.

Supermicro KMS Server IP address

Use this feature to set the Supermicro Key Management Service (KMS) server IPv4 address in dotted-decimal notation.

Second Supermicro KMS Server IP address

Use this feature to set the second Supermicro KMS server IPv4 address in dotted-decimal notation.

Supermicro KMS TCP Port number

Use this feature to set the TCP port number used in Supermicro KMS Server. The valid range is 100–9999. The default setting is **5696**. Do not change the default setting unless a different TCP port number has been specified and used in the Supermicro KMS Server.

KMS Time Out

Use this feature to enter the KMS server connecting time-out (in seconds). The default setting is **5** (seconds).

TimeZone

Use this feature to set the correct time zone. The default setting is **0** (not specified).

Client UserName

Press <Enter> to set the client identity (UserName). The username can be between 0 and 63 characters in length.

Client Password

Press <Enter> to set the client identity (Password). The password can be between 0 and 31 characters in length.

►CA Certificate


This setting provides options for managing the Certificate Authority (CA) certificate. The options are **Update**, Delete, and Export.

►Client Certificate

This setting provides options for managing the client certificate. The options are **Update**, Delete, and Export.

►Client Private Key

Use the three features to enroll factory defaults or load the KMS Transport Layer Security (TLS) certificates, which are generated by the KMS Server, from the file stored in the USB flash drive as shown below.

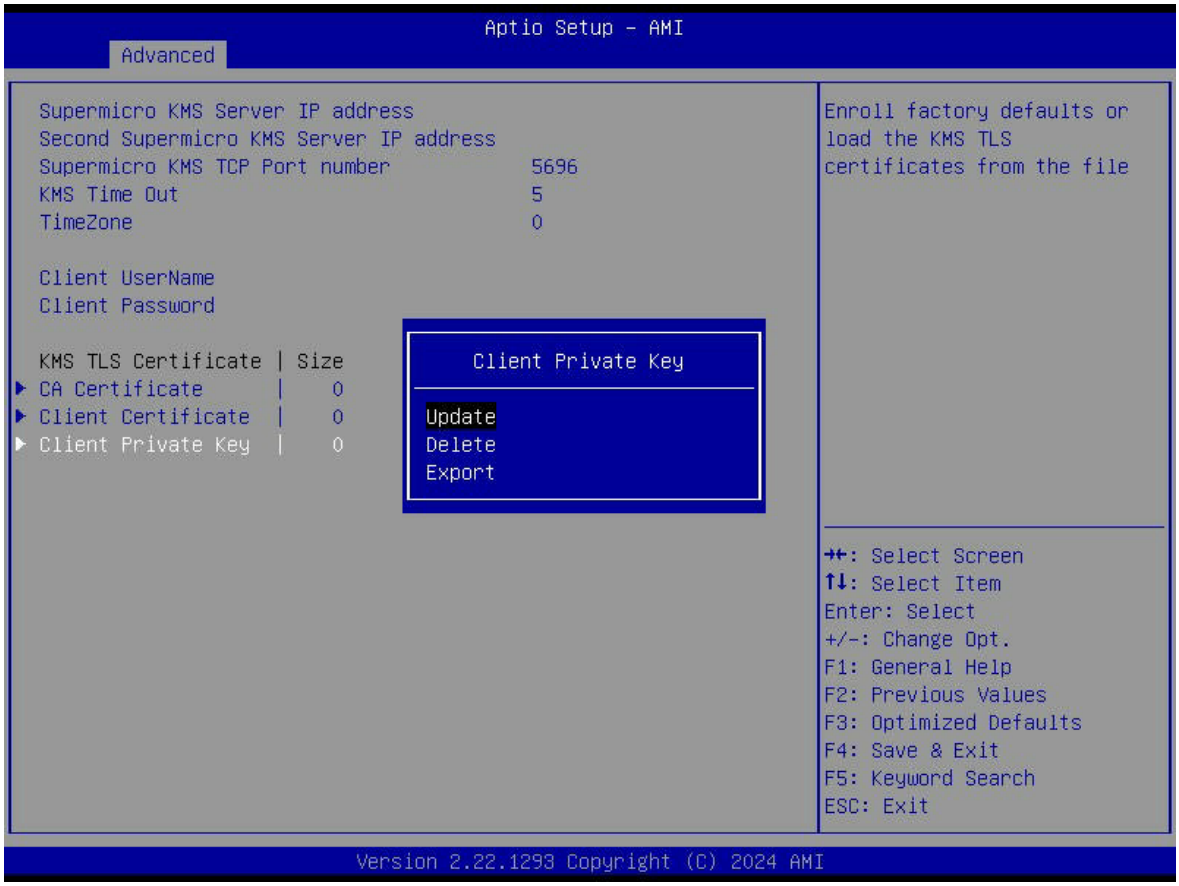

Private Key Password (Available when "Client Private Key" above has been set)

Use this feature to change the password for the client private key.

Super-Guardians Configuration Menu

►Super-Guardians Configuration

Super-Guardians Protection Policy

Use this feature to enable the Super-Guardians Protection Policy. The options are **Storage**, System, and System and Storage. Set this feature to Storage to protect and have secure access to Trusted Computing Group (TCG) NVMe devices with the Authentication-Key (AK). Set this feature to System to protect and have secure access to your system/motherboard with the AK. Set this feature to System and Storage to protect and have secure access to your system/motherboard/storage devices with the AK.

KMS Security Policy (Available when "TPM Security Policy" and "USB Security Policy" are set to Disabled)

Set this feature to Enabled to enable the KMS Security Policy. When this feature has not previously been set to Enabled, the options are **Disabled** and Enabled. Changes take effect after you save settings and reboot the system.

When this feature has previously been set to Enabled, the options are **Enabled**, Reset, and Key Rotation. Set this feature to Key Rotation to obtain an existing AK from the KMS server and create a new AK. To disable the KMS Security Policy, set this feature to Reset. When this feature is set to Reset, the system and TCG NVMe devices chosen in "Super-Guardians Protection Policy" will be in the unprotected mode.

Notes:

- Be sure that the KMS server is ready before configuring this feature.
- Use the professional KMS server solutions (e.g., Thales Server) or the Supermicro PyKMIP Software Package to establish the KMS server.

KMS Server Retry Count (Available when "TPM Security Policy" and "USB Security Policy" are set to Disabled)

Use this feature to specify how many times the system will attempt reconnecting to the KMS server. The valid range is 0–10. Press the <+> or <-> key on your keyboard to change the value. The default setting is **5**. If the value is 0, the system will retry infinitely.

TPM Security Policy (Available when "KMS Security Policy" and "USB Security Policy" are set to Disabled)

Set this feature to Enabled to enable the TPM Security Policy. When this feature has not previously been set to Enabled, the options are **Disabled** and Enabled. Changes take effect after you save settings and reboot the system.

When this feature has previously been set to Enabled, the options are **Enabled** and Reset. To disable the TPM Security Policy, set this feature to Reset. When this feature is set to reset, the system and TCG NVMe devices chosen in "Super-Guardians Protection Policy" will be in the unprotected mode.

Note: Be sure to install a TPM 2.0 device to your system before configuring this feature.

Load Authentication- Key (Available when "KMS Security Policy," "TPM Security Policy," and "USB Security Policy" are set to Disabled)

The options are **Disabled** and Enabled. Set this feature to Enabled. Changes take effect after you save settings and reboot the system. While booting, the BIOS will automatically load the Authentication-Key (filename: TPMAuth.bin) from the USB flash drive. Afterwards, the default setting will be set to Disabled by the BIOS.

Notes:

- Be sure to connect a USB flash drive with the Authentication-Key (filename: TPMAuth.bin) to your system before the system reboot.
- Be sure to save the Authentication-Key (filename: TPMAuth.bin) to the USB flash drive and have a backup. Please load the Authentication-Key (filename: TPMAuth.bin) after installing a TPM device. Otherwise, the TPM function can not work properly.

USB Security Policy (Available when "KMS Security Policy" and "TPM Security Policy" are set to Disabled)

Use this feature to enable the USB Security Policy. The options are **Disabled** and Enabled. Set this feature to Enabled. Changes take effect after you save settings and reboot the system. Connect a USB flash drive to your system before the system reboot. While booting, the BIOS will automatically create the USB Authentication-Key (filename: USBAuth.bin) and save it to the USB flash drive.

When this feature has been previously set to Enabled, the options are **Enabled** and Reset. To disable the USB Security Policy, set this feature to Reset. When this feature is set to Reset, the system and TCG NVMe devices chosen in "Super-Guardians Protection Policy" will be in the unprotected mode.

Note: Be sure to connect a USB flash drive to your system before configuring this feature. Save the USB Authentication-Key (filename: USBAuth.bin) to the USB flash drive and keep a backup.

System Diagnostics Configuration

Launch System Diagnostics

Use this feature to run hardware tests that check the health of system components and help identify any issues. The options are **Disabled** and Launch Once.

Supermicro Network Adapter Menu

►Firmware Image Menu

This menu displays detailed version information for system firmware components.

Family Firmware Version

Boot Code

MBA

EFI

NCSI

RDMA FW

►Device Configuration Menu

Multi-Function Mode

This setting configures NIC Hardware Mode. Switching from multi-function to single function will result in the clearing of Virtual Function values in the extended partitions. Advanced NPar option is a feature preview only. The options are **SF** and NPAR 1.0.

SR-IOV Support

This setting enables or disables Single Root I/O Virtualization support for the system's PCIe devices. The options are **Disabled** and Enabled.

Number of MSI-X Vectors per VF

This feature sets how many MSI-X interrupt vectors are assigned to each Virtual Function (VF) to improve device performance in virtualized environments.

Maximum Number of MSI-X Vectors

Use this option to configure maximum number of PF MSI-X Vectors (0-512 per controller). The default value is 512.

Energy Efficient Ethernet

This feature enables the network interface to reduce power consumption during periods of low data activity by entering a low-power idle mode, as defined by the IEEE 802.3az standard. The options are **Disabled** and Enabled.

Operational Link Speed

Use this setting to configure teh default link speed for the selected port. The options are **AutoNeg**, 25Gbps, 50Gbps, 100Gbps, 50Gbps PAM4, 100Gbps PAM4, 100Gbps PAM4-112, 200Gbps PAM4, 200Gbps PAM4-112, and 400Gbps PAM4-112.

Support RDMA

Use this setting to configure RDMA Support for this port. The options are Disabled and **Enabled**.

DCB Protocol

Use this setting to enable or disable DCB Protocol. The options are **Disabled**, Enabled (IEEE only), CEE (only), and Both (IEEE preferred with fallback to CEE).

LLDP nearest bridge

Use the setting to configure LLDP nearest bridge state. The options are **Disabled** and Enabled.

Default EVB Mode

Use the setting to configure Default Edge Virtual Bridging mode. The options are **VEB**, VEPA, and None.

Enable PME Capability

Use the setting to configure PME Capability support. The options are **Disabled** and Enabled.

Flow Offload

This feature enables or disables the network adapter to accelerate packet processing by offloading specific traffic flows from the CPU to specialized hardware, improving network performance and reducing CPU usage. The options are **Disabled** and Enabled.

Adapter Error Recovery

This setting enables or disabled the network adapter or device to automatically detect, isolate, and recover from hardware or firmware errors without manual intervention, helping to maintain normal operation and avoid system crashes or reboots. The options are **Disabled** and Enabled.

►MBA Configuration Menu

Option ROM

This feature controls whether legacy boot protocols in the device's option ROM are enabled or disabled. The options are Disabled and **Enabled**.

Legacy Boot Protocol

This feature allows the system to boot using traditional BIOS methods (non-UEFI) instead of UEFI, supporting older operating systems and devices. The options are **PXE** and NONE.

Boot Strap Type

This feature selects the method to initiate the system boot process. The options are **Auto Detect**, BBS, Int 18h, and Int 19h.

Pre-boot Wake On LAN

This feature allows the system to power on remotely via a network signal (Wake-on-LAN) before the operating system loads. The options are Disabled and **Enabled**.

VLAN Mode

This feature allows configuration of Virtual LAN (VLAN) tagging and support for network adapters during system boot. The options are **Disabled** and Enabled.

VLAN ID (1-4094)

This feature specifies the VLAN number (1–4094) used to tag and separate network traffic.

Boot Retry Count

This feature sets how many times the system will attempt to boot from the selected device before stopping or reporting an errors. The options are **No Retry**, 1 Retry, 2 Retries, 3 Retries, 4 Retries, 5 Retries, 6 Retries, and Indefinite Retries.

Blink LEDs

Use this feature to identify the physical network port by blinking the associated LED. The default setting is **0** (up to 15 seconds).

The following information is displayed.

- UEFI Driver
- Adapter PBA
- Device Name
- Chip Type
- PCI Device ID

- PCI Address
- Link Status
- MAC Address
- Virtual MAC Address

Link Status

This option displays link status.

Physical Link Speed

Chip Type

PCI Device ID

Bus: Device: Function

Permanent MAC Address

This feature displays the permanent MAC address used by the device.

Virtual NUMA

Enable this feature to optimize the memory-access performance for VMware virtual machines. The options are **Disabled** and Enabled.

Note: This feature is NOT available when "Workload Profile" is set to Telco NFVI, Telco NFVI-FP, or Telco FlexRAN.

Restore Defaults

This feature resets adapter to the original factory default values.

TLS Authenticate Configuration Menu

►Server CA Configuration

This feature allows you to configure the client certificate that is to be used by the server.

►Enroll Certification

This feature allows you to enroll the certificate in the system.

Certification GUID

Press <Enter> and input the certification Global Unique Identifier (GUID).

►Commit Changes and Exit

Use this feature to save all changes and exit TLS settings.

►Discard Changes and Exit

Use this feature to discard all changes and exit TLS settings.

►Delete Certification

This feature is used to remove the selected TLS certificates that are no longer needed or valid.

►Client Certification Configuration

Use this feature to manage the TLS certificates used to authenticate remote clients connecting to your system. Add, view, or delete client certificates as needed.

RAM Disk Configuration

Disk Memory Type

This setting defines the type of memory to be allocated from the system's available memory pool to create a disk. The options are **Boot Service Data** and Reserved.

►Create raw

Create a RAM disk from a selected file on a storage device.

Size (Hex):

Set the size of the RAM disk. The valid size should be multiples of the RAM disk block size.

Create & Exit

Create a new RAM disk with the given starting and ending address.

Discard & Exit

Discard changes and exit.

►Create from file

Create a RAM disk from a selected file on a storage device.

Created RAM disk list:

View all currently created RAM disks, and select the desired RAM disk to be enabled or disabled.

Remove selected RAM disk(s)

Delete the selected RAM disk(s) from the list.

Driver Health Menu

►Driver Health

This feature displays the health information of the drivers installed in your system, including LAN controllers, as detected by the BIOS. Select one and press <Enter> to see the details.

Note: This section is provided for reference only, for the driver health status will differ depending on the drivers installed in your system. It's also based on your system configuration and the environment that your system is operating in.

8.4 BMC

Use this menu to configure Baseboard Management Console (BMC) settings.

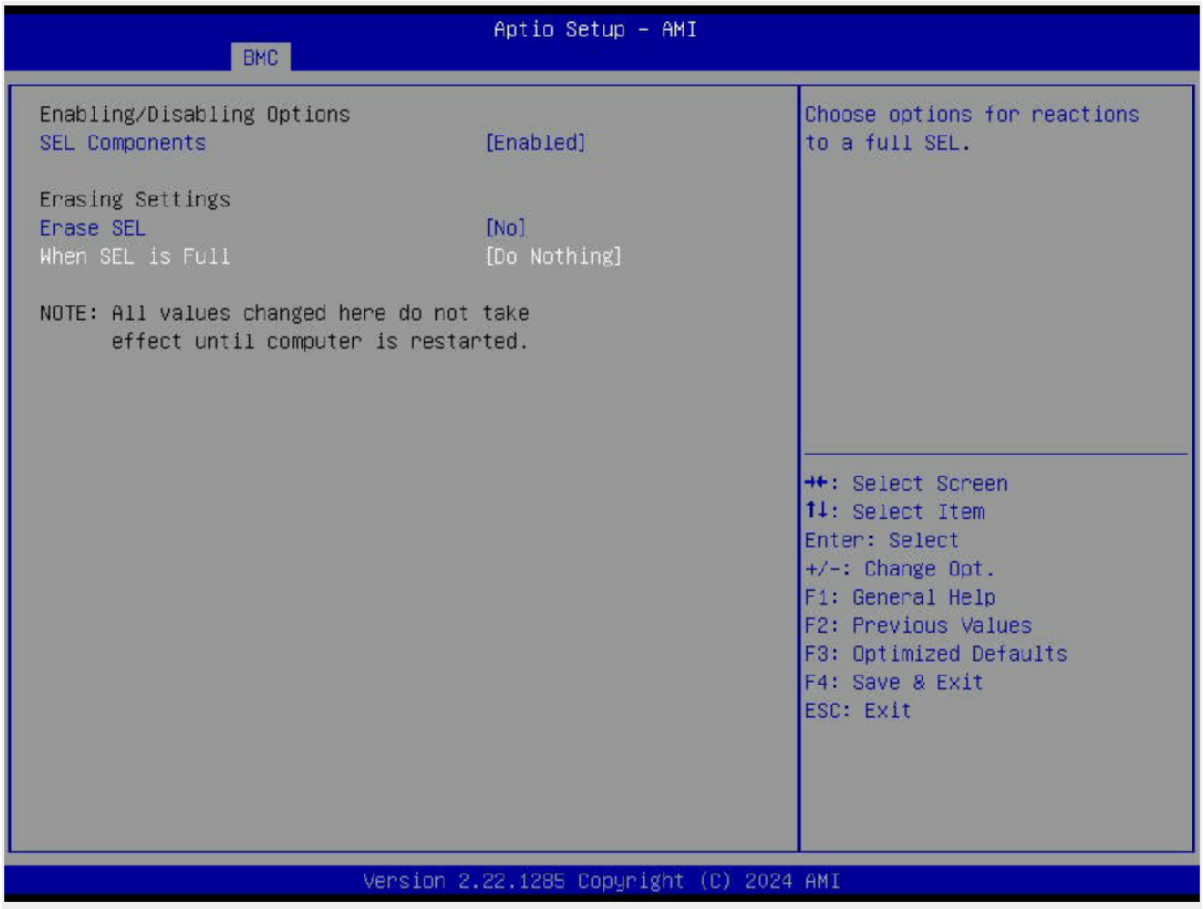


Figure 8-3. BMC Tab Screen

BMC Firmware Revision

This feature indicates the BMC firmware revision used in this system.

BMC STATUS

This feature indicates the status of the BMC firmware installed in this system.

System Event Log Menu

►System Event Log

Note: All values changed in this submenu do not take effect until computer is restarted.

SEL Components

Select Enabled to enable all system event logging upon system boot. The options are Disabled and **Enabled**.

Erasing Settings

Erase SEL (Available when "SEL Components" is set to Enabled)

Select (Yes, On next reset) to erase all system event logs upon next system boot. Select (Yes, On every reset) to erase all system event logs upon each system reboot. Select No to keep all system event logs after each system reboot. The options are **No**, (Yes, On next reset), and (Yes, On every reset).

When SEL is Full (Available when "SEL Components" is set to Enabled)

This feature defines what the BIOS should do when the system event log is full. Select Erase Immediately to erase all events in the log when the system event log is full. The options are **Do Nothing** and Erase Immediately.

BMC Network Configuration Menu

►BMC Network Configuration

Update BMC LAN Configuration

Select Yes for the BIOS to implement all IP/MAC address changes upon next system boot. The options are **No** and Yes.

****

Configure IPv4 Support

****

BMC LAN Selection

This feature displays the type of the BMC LAN.

BMC Network Link Status:

This feature displays the status of the BMC network link for this system.

Configuration Address Source (Available when "Update BMC LAN Configuration" is set to Yes)

Use this feature to select the source of the IPv4 connection. If Static is selected, note the IP address of the IPv4 connection and enter it to the system manually in the field. If DHCP is selected, the BIOS will search for a Dynamic Host Configuration Protocol (DHCP) server in the network that is attached to and request the next available IP address for this computer. The options are Static and **DHCP**.

Station IP Address

This feature displays the Station IP address in decimal and in dotted quad form (i.e., 172.29.176.131). It is available for configuration when "Configuration Address Source" above is set to Static.

Subnet Mask

This feature displays the sub- network that this computer belongs to. It is available for configuration when "Configuration Address Source" above is set to Static.

Station MAC Address

This feature displays the Station MAC address for this computer. Mac addresses are six two-digit hexadecimal numbers.

Gateway IP Address

This feature displays the Gateway IP address for this computer. This should be in decimal and in dotted quad form (i.e., 172.29.0.1). It is available for configuration when "Configuration Address Source" above is set to Static.

****

Configure IPv6 Support

****

IPv6 Address Status

This feature displays the status of the IPv6 address.

IPv6 Support (Available when "Update BMC LAN Configuration" is set to Yes)

Use this feature to enable IPv6 support. The options are **Enabled** and Disabled.

Configuration Address Source (Available when "IPv6 Support" is set to Enabled)

Use this feature to select the source of the IPv6 connection. If Static Configuration is selected, note the IP address of IPv6 connection and enter it to the system manually in the field. If the other two options are selected, the BIOS will search for a DHCP server in the network that is attached to and request the next available IP address for this computer. The options are Static Configuration, **DHCPv6 Stateless**, and DHCPv6 Stateful.

IPv6 Address ("Static," "DHCPv6 Stateless," or "DHCPv6 Stateful," depending on the option you selected for "Configuration Address Source" above)

This feature displays the station IPv6 address. It is available for configuration when "Configuration Address Source" above is set to Static Configuration.

Prefix Length

This feature displays the prefix length. It is available for configuration when "Configuration Address Source" above is set to Static Configuration.

Gateway IP

This feature displays the IPv6 gateway IP address. It is available for configuration when "Configuration Address Source" above is set to Static Configuration.

Advanced Settings (Available when "Configuration Address Source" is set to DHCPv6 Stateless)

Use this feature to set the DNS server IP. The default setting allows this system to obtain the DNS server IP automatically. The options are **Auto obtain DNS server IP** and Manually obtain DNS server IP.

Preferred DNS server IP (Available when "Advanced Settings" above is set to Manually obtain DNS server IP)

This feature displays the preferred DNS server IP. It can be configured via Redfish.

Alternative DNS server IP (Available when "Advanced Settings" above is set to Manually obtain DNS server IP)

This feature displays the alternative DNS server IP. It can be configured via Redfish.

****

Configure VLAN Support

****

VLAN Support (Available when "Update BMC LAN Configuration" is set to Yes)

Use this feature to enable the virtual LAN (VLAN) support. The options are Enabled and **Disabled**.

VLAN ID (Available when "VLAN Support" is set to Enabled)

Use this feature to create a new VLAN ID. The valid range is 1–4094. The default setting is **1**.

8.5 Event Logs

Use this menu to configure Event Logs settings.

Note: After you've made any changes in this section, please be sure to reboot the system for the changes to take effect.

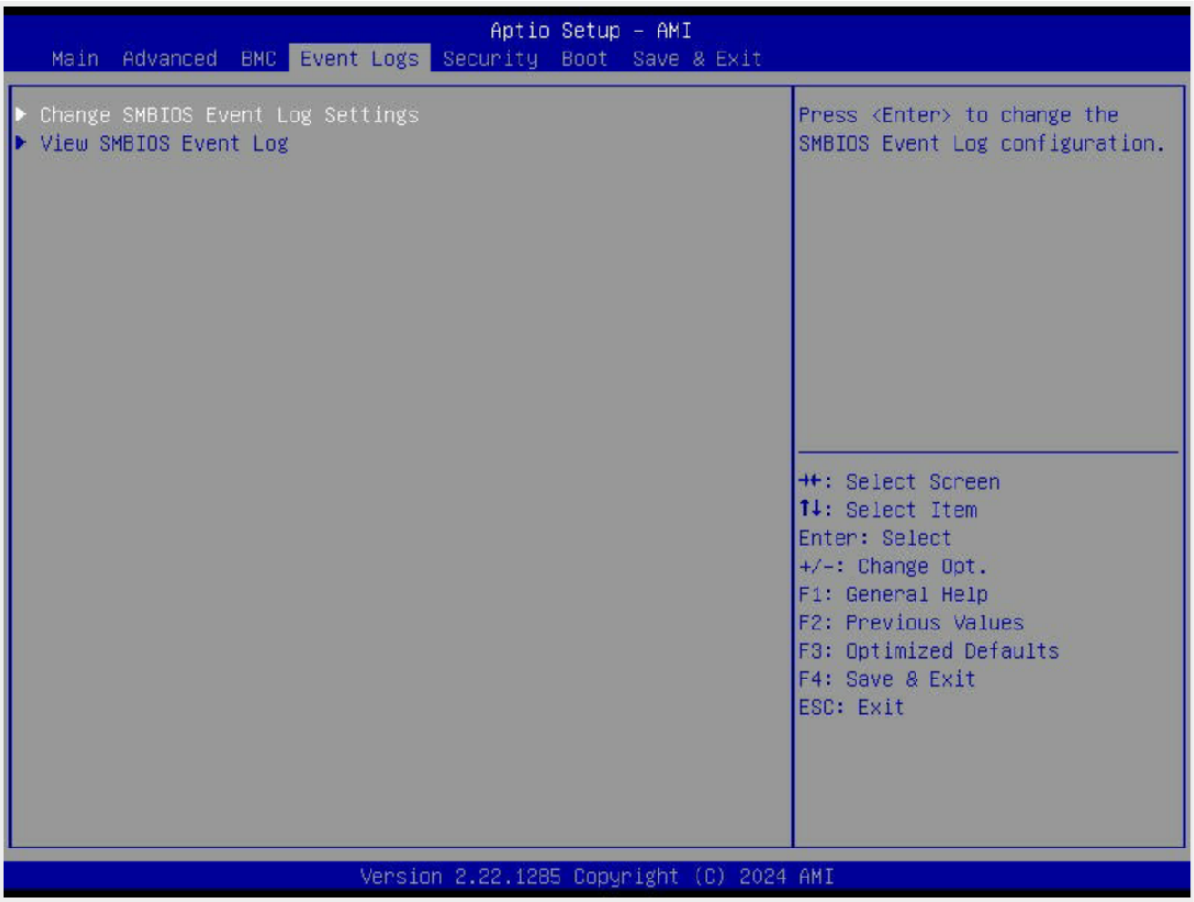


Figure 8-4. Event Logs Tab Screen

►Change SMBIOS Event Log Settings

Note: Reboot the system for the changes in this section to take effect.

Enabling/Disabling Options

SMBIOS Event Log

Select Enabled to enable System Management BIOS (SMBIOS) Event Logging during system boot. The options are Disabled and **Enabled**.

Erasing Settings

Erase Event Log (Available when "SMBIOS Event Log" is set to Enabled)

Select No to keep the event log without erasing it upon next system bootup. Select (Yes, Next reset) to erase the event log upon next system reboot. The options are **No**, (Yes, Next reset), and (Yes, Every reset).

When Log is Full (Available when "SMBIOS Event Log" is set to Enabled)

Select Erase Immediately to immediately erase all errors in the SMBIOS event log when the event log is full. Select Do Nothing for the system to do nothing when the SMBIOS event log is full. The options are **Do Nothing** and Erase Immediately.

SMBIOS Event Log Standard Settings

Log System Boot Event (Available when "SMBIOS Event Log" is set to Enabled)

Select Enabled to log system boot events. The options are Enabled and **Disabled**.

MECI (Available when "SMBIOS Event Log" is set to Enabled)

Enter the increment value for the multiple event counter. Enter a number between 1 and 255. The default setting is **1**. (MECI is the abbreviation for Multiple Event Count Increment.)

METW (Available when "SMBIOS Event Log" is set to Enabled)

Use this feature to determine how long (in minutes) should the multiple event counter wait before generating a new event log. Enter a number between 0 and 99. The default value is **60**. (METW is the abbreviation for Multiple Event Count Time Window.)

►View SMBIOS Event Log

Use this feature to view the event in the system event log. Select this feature and press <Enter> to view the status of an event in the log. The following information is displayed: DATE / TIME / ERROR CODE / SEVERITY.

8.6 Security

This menu allows you to configure the following security settings for the system.

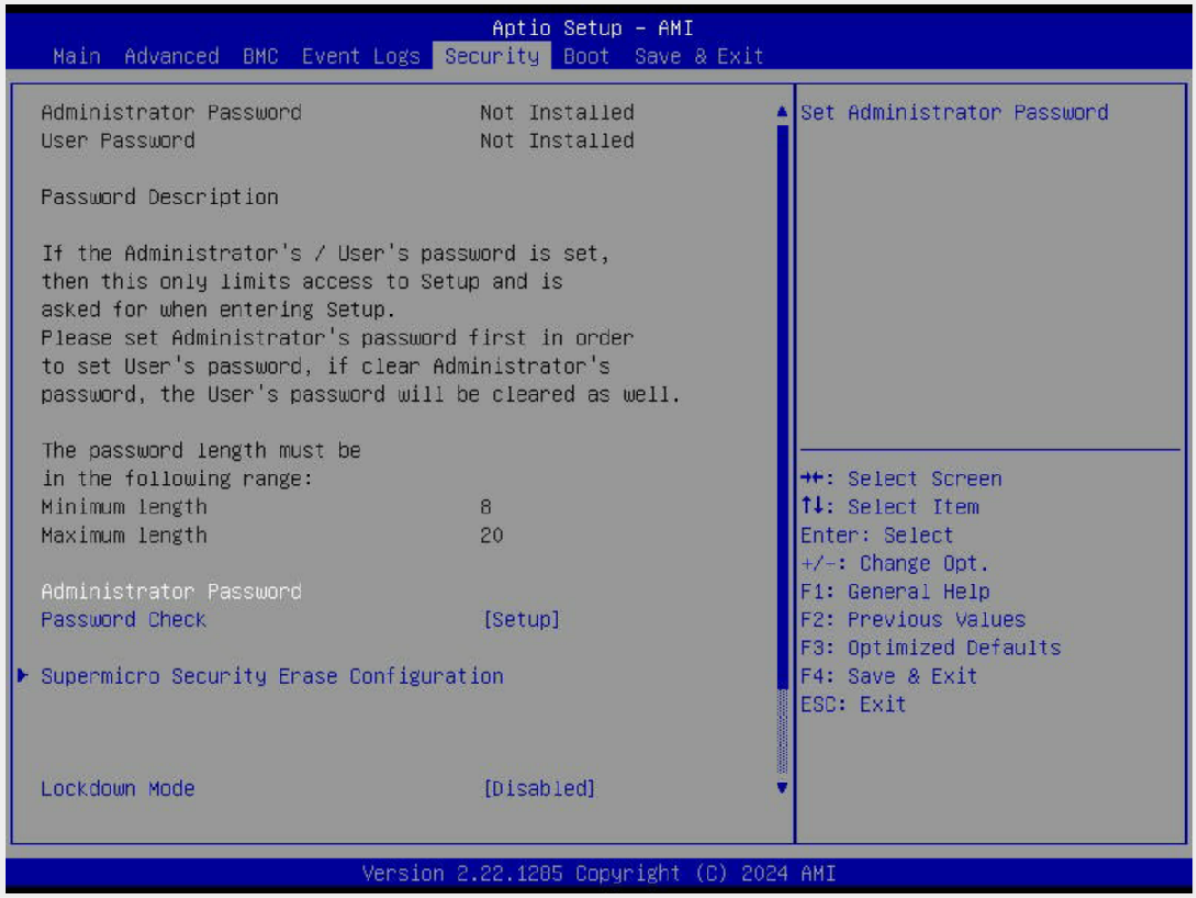


Figure 8-5. Security Tab Screen

Disable Block Sid and Freeze Lock (Available when your storage devices support TCG)

Select Enabled to allow SID authentication to be performed in TCG storage devices. The options are **Disabled** and Enabled.

The following information is displayed:

- Administrator Password
- User Password
- Password Description

Administrator Password

This feature indicates if an administrator password has been installed. Use this feature to set the administrator password, which is required to enter the BIOS Setup utility. The length of the password can be between three and 20 characters long.

User Password (Available when "Administrator Password" has been set)

This feature indicates if a user password has been installed. Use this feature to set the user password which is required to enter the BIOS Setup utility. The length of the password can be between three and 20 characters long.

Password Check

Select Setup for the system to check for a password upon entering the BIOS Setup utility. Select Always for the system to check for the passwords needed at bootup and upon entering the BIOS Setup utility. The options are **Setup** and Always.

Hard Drive Security Frozen

Select Enabled to freeze the Lock Security feature for HDD to protect key data in hard drives from being altered. The options are **Disabled** and Enabled.

Lockdown Mode (Available when the DCMS key is activated)

Select Enabled to support the Lockdown Mode, which prevents the existing data or keys stored in the system from being altered or changed in an effort to preserve system integrity and security. The options are **Disabled** and Enabled.

8.7 Boot

Use this menu to configure Boot settings.

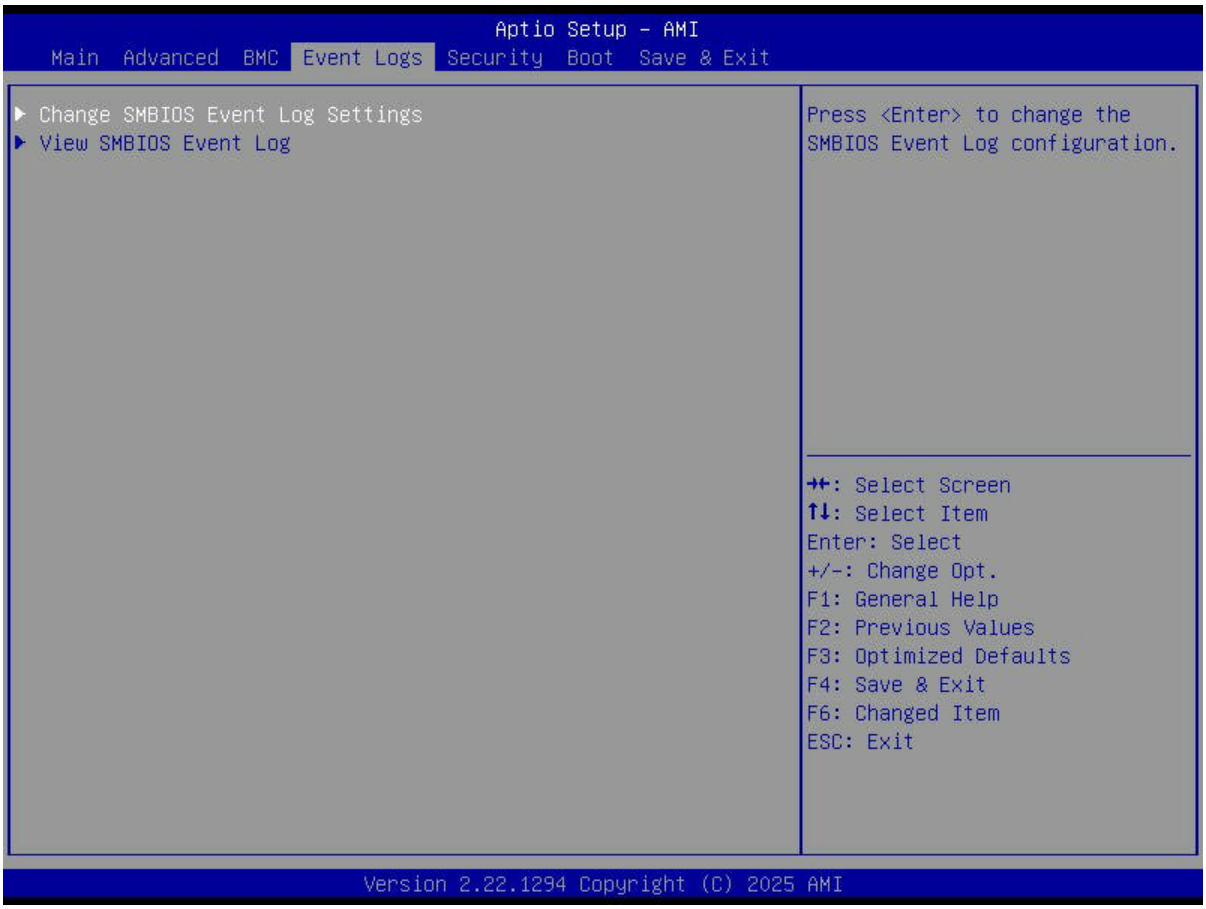


Figure 8-6. Boot Tab Screen

Boot Configuration

Boot Mode Select

Use this feature to choose the system boot mode. The options are Legacy, **UEFI**, and Dual.

Legacy to EFI Support

Use this feature to enable system to boot to EFI OS after boot failed from legacy boot order. The options are **Disabled** and Enabled.

FIXED BOOT ORDER Priorities

Use this feature to prioritize the order of a bootable device from which the system will boot. Press <Enter> on each item sequentially to select the device.

- Boot Option #1 – Boot Option #9

►Add New Boot Option

Use this feature to add a new boot option to the boot priority features for system boot.

Note: This submenu is available when any storage device is detected by the BIOS.

Add boot option

Use this feature to specify the name for the new boot option.

Path for boot option

Use this feature to enter the path for the new boot option in the format fsx:\path\filename.efi.

Boot option File Path

Use this feature to specify the file path for the new boot option.

Create

After setting the name and the file path for the boot option, press <Enter> to create the new boot option in the boot priority list.

►Delete Boot Option

Use this feature to select a boot device to delete from the boot priority list.

Delete Boot Option

Use this feature to remove an EFI boot option from the boot priority list.

►UEFI USB Key Drive BBS Priorities

Use this feature to set the system boot order of detected devices.

►UEFI NETWORK Drive BBS Priorities

Use this feature to set the system boot order of detected devices.

►UEFI Application Boot Priorities

Use this feature to set the system boot order of detected devices.

8.8 Save & Exit

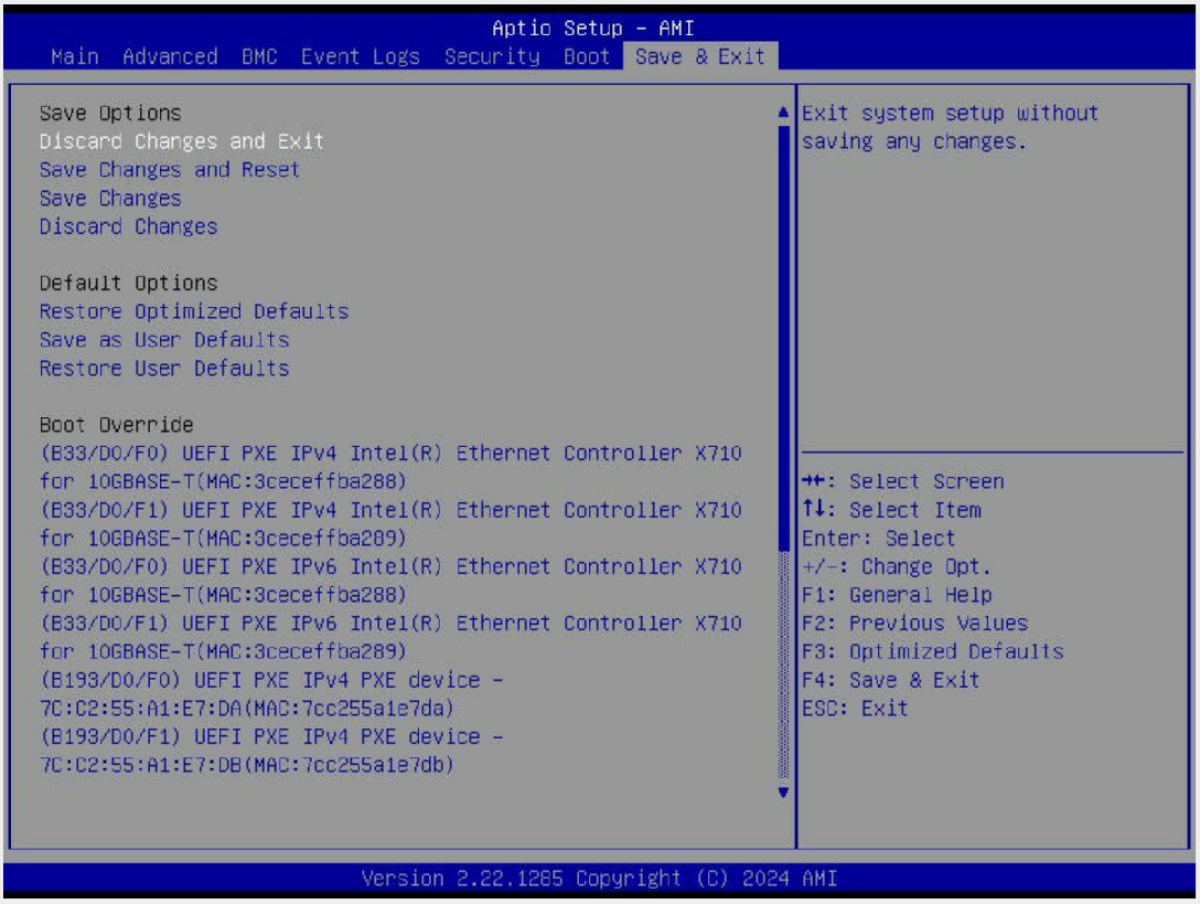


Figure 8-7. Save & Exit Tab

Save Options

Discard Changes and Exit

Use this feature to exit from the BIOS Setup utility without making any permanent changes to the system configuration and reboot the computer.

Save Changes and Reset

On completing the system configuration changes, use this feature to exit the BIOS Setup utility and reboot the computer for the new system configuration parameters to take effect.

Save Changes

On completing the system configuration changes, use this feature to save all changes made. This will not reset (reboot) the system.

Discard Changes

Select this feature and press <Enter> to discard all changes made and return to the BIOS Setup utility.

Default Options

Restore Optimized Defaults

Select this feature and press <Enter> to load manufacturer optimized default settings, which are intended for maximum system performance but not for maximum stability.

Note: After pressing <Enter>, reboot the system for the changes to take effect, which ensures that this system has the optimized default settings.

Save as User Defaults

Select this feature and press <Enter> to save all changes as the default values specified to the BIOS Setup utility for future use.

Restore User Defaults

Select this feature and press <Enter> to retrieve user-defined default settings that have been saved previously.

Boot Override

Note: Use this section to override the Boot priorities sequence in the Boot menu, and immediately boot the system with a device specified here instead of the one specified in the boot list. This is a one-time boot override.

Appendix A:

BIOS Codes

For information about BIOS codes for the AS -2116S-FTNRT/TNRT server, refer to the following content.

BIOS Error POST (Beep) Codes

During the Power-On Self-Test (POST) routines, which are performed each time the system is powered on, errors may occur.

Non-fatal errors are those which, in most cases, allow the system to continue the boot up process. The error messages normally appear on the screen.

Fatal errors are those which will not allow the system to continue the boot up process. If a fatal error occurs, you should consult with your system manufacturer for possible repairs.

These fatal errors are usually communicated through a series of audible beeps that can be heard on an external buzzer connected to JD1. The table shown below lists some common errors and their corresponding beep codes encountered by users.

BIOS Beep (POST) Codes		
Beep Code	**Error Message**	**Description**
1 beep	Refresh	Circuits have been reset (Ready to power up)
5 short, 1 long	Memory error	No memory detected in system
5 short, 2 long	Display memory read/write error	Video adapter missing or with faulty memory
1 long continuous	System OH	System overheat condition

Additional BIOS POST Codes

The AMI BIOS supplies additional checkpoint codes, which are documented online at https://www.supermicro.com/support/manuals ("AMI BIOS POST Codes User's Guide").

For information on AMI updates, refer to https://www.ami.com/products.

Appendix B:

Standardized Warning Statements for AC Systems

The following statements are industry standard warnings, provided to warn the user of situations which have the potential for bodily injury. Should you have questions or experience difficulty, contact Supermicro's Technical Support department for assistance. Only certified technicians should attempt to install or configure components.

Read this section in its entirety before installing or configuring components in the Supermicro AS -2116S-FTNRT/TNRT server.

These warnings may also be found on our website at the following page:

https://www.supermicro.com/about/policies/safety_information.cfm

Standard Warning Definition



Warning! This warning symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be familiar with standard practices for preventing accidents.

تحذير! هذا الرمز التحذيري يعني خطر. إنك في موقف قد يتسبب في إصابة جسدية. قبل العمل على أي أجهزة يجب أن تكون على دراية بالممارسات القياسية للحيلولة دون وقوع حوادث.

警告！此警告符号代表危险，表示正处于可能遭受严重身体伤害的工作环境。在使用任何设备开始工作之前，务必熟悉防止事故发生的标准工作规范。

警告！此警告符號代表危險。您正處於可能身體可能會受損傷的工作環境中。操作任何設備之前，請熟悉標準做法以預防事故發生。

Advarsel! Dette advarselssymbol betyder fare. Du er i en situation, der kan føre til personskader. Før du arbejder på noget udstyr, skal du være bekendt med standardpraksis for at forebygge ulykker.

Waarschuwing! Dit waarschuwingssymbool betekent gevaar. U bevindt zich in een situatie die lichamelijk letsel zou kunnen veroorzaken. Voordat u aan enige apparatuur gaat werken, moet u vertrouwd zijn met standaard praktijken voor het voorkomen van ongevallen.

Varoitus! Tämä varoitussymboli tarkoittaa vaaraa. Olet tilanteessa, joka voi aiheuttaa ruumiinvammoja. Ennen kuin ryhdyt työskentelemään laitteiden parissa, tutustu onnettomuuksien ehkäisemistä koskeviin vakiintuneisiin käytäntöihin.

Attention! Ce symbole d'avertissement indique un danger. Vous vous trouvez dans une situation pouvant entraîner des blessures ou des dommages corporels. Avant de travailler sur un équipement, familiarisez-vous avec les procédures couramment utilisées pour éviter les accidents.

Warnung! Dieses Warnsymbol bedeutet Gefahr. Sie befinden sich in einer Situation, die zu Körperverletzungen führen kann. Bevor Sie an Geräten arbeiten, machen Sie sich mit den üblichen Verfahren zur Unfallverhütung vertraut.

אזהרה! סמל אזהרה זה מסמן סכנה. אתה נמצא במצב שעלול לגרום לפגיעה גופנית. לפני שתתחיל לעבוד על כל ציוד, הכר את הנהלים הסטנדרטיים למניעת תאונות.

चेतावनी! यह चेतावनी चिह्न खतरे का प्रतीक है। आप ऐसी स्थिति में हैं जिससे शारीरिक चोट लग सकती है। किसी भी उपकरण पर काम करने से पहले, दुर्घटनाओं को रोकने के लिए मानक प्रथाओं से परिचित हो लें।

警告！ この警告記号は危険を意味します。人身事故につながる可能性のある状況にあります。機器で作業を行う前に、標準的な事故防止策に精通してください。

경고! 이 경고 기호는 위험이 있음을 알려 줍니다. 신체 상해를 초래할 수 있는 상황입니다. 장비에서 작업하기 전에 사고 예방을 위한 표준 수칙을 숙지하십시오.

Advarsel! Dette advarselsymbolet betyr fare. Du er i en situasjon som kan forårsake kroppsskade. Før du arbeider på noe utstyr, må du gjøre deg kjent med standardrutiner for å forhindre ulykker.

¡Advertencia! Este símbolo de advertencia significa peligro. Se encuentra en una situación que podría provocar lesiones corporales. Antes de trabajar con cualquier equipo, familiarícese con las prácticas estándar para prevenir accidentes.

Varning! Denna varningssymbol betyder fara. Du befinner dig i en situation som kan orsaka personskada. Innan du arbetar på någon utrustning måste du bekanta dig med standardrutiner för att förhindra olyckor.

Electrical Warning Definition



Warning! This warning symbol indicates high voltage may be encountered when performing a procedure. Before you work on any equipment, be aware of the hazards involved with electrical circuitry.

تحذير! يشير رمز التحذير هذا إلى احتمالية مواجهة جهد كهربائي عالٍ عند إجراء عملية ما. قبل البدء في العمل على أي أجهزة كن على دراية بالمخاطر المرتبطة بالدوائر الكهربائية.

警告！此警告符号表示作业过程中可能会遇到高电压。操作任何设备之前，请务必了解电路的危险。

警告！此警告符號表示執行程序時可能會遇到高電壓。操作任何設備之前，請瞭解與電路相關的危害。

Advarsel! Dette advarselssymbol indikerer, at der kan opstå høj spænding under udførelsen af en procedure. Før du arbejder på noget udstyr, skal du være opmærksom på de farer, der er forbundet med elektriske kredsløb.

Waarschuwing! Dit waarschuwingssymbool geeft aan dat men hoge spanning tegen kan komen bij het uitvoeren van een procedure. Voordat u aan enige apparatuur gaat werken, moet u zich bewust zijn van de gevaren van elektrische schakelsystemen.

Varoitus! Tämä varoitussymboli osoittaa, että toimenpiteen suorittamisen aikana voi esiintyä korkeaa jännitettä. Ennen kuin ryhdyt työskentelemään laitteiden parissa, ota huomioon sähköpiireihin liittyvät vaarat.

Attention! Ce symbole d'avertissement indique un risque d’exposition à une tension élevée lors de l'exécution d'une procédure. Avant de travailler sur un équipement, prenez connaissance des dangers liés aux circuits électriques.

Warnung! Dieses Warnsymbol weist darauf hin, dass bei der Durchführung eines Vorgangs Hochspannung auftreten kann. Bevor Sie an Geräten arbeiten, machen Sie sich mit den Gefahren elektrischer Schaltungen vertraut.

אזהרה! סמל אזהרה זה מציין כי ייתכן שתיתקל במתח גבוה בעת ביצוע הליך. לפני עבודה על ציוד כלשהו, עליך להיות מודע לסכנות הכרוכות במעגלים חשמליים.

चेतावनी! यह चेतावनी चिह्न इंगित करता है कि प्रक्रिया को निष्पादित करते समय उच्च वोल्टेज का सामना करना पड़ सकता है। किसी भी उपकरण पर काम करने से पहले, विद्युत सर्किट्री से जुड़े खतरों के प्रति सचेत रहें।

警告！ この警告記号は、手順を実行する際に高電圧が発生する可能性があることを示しています。機器で作業を行う前に、電気回路に関連する危険に注意してください。

경고! 이 경고 기호는 절차 수행 중 고전압에 노출될 수 있음을 알려 줍니다. 장비에서 작업하기 전에 전기 회로와 관련된 위험 요소를 충분히 인지하십시오.

Advarsel! Dette varselsymbolet indikerer at det kan oppstå høy spenning når en prosedyre utføres. Før du arbeider på utstyr, må du være oppmerksom på farene forbundet med elektriske kretser.

¡Advertencia! Este símbolo de advertencia indica que puede haber alto voltaje al realizar un procedimiento. Antes de trabajar con cualquier equipo, tenga en cuenta los peligros que conllevan los circuitos eléctricos.

Varning! Denna varningssymbol indikerar att hög spänning kan förekomma när en procedur utförs. Innan du arbetar med någon utrustning ska du vara medveten om de faror som är förknippade med elektriska kretsar.

Installation Instructions

Warning! Read the installation instructions before connecting the system to the power source.

تحذير! اقرأ تعليمات التثبيت قبل توصيل النظام بمصدر الطاقة.

警告！ 将此系统连接电源前，请先阅读安装说明。

警告！ 將系統與電源連接前，請先閱讀安裝說明。

Advarsel! Læs monteringsvejledningen, før systemet sluttes til strømforsyningen.

Waarschuwing! Raadpleeg de installatie-instructies voordat u het systeem op de voedingsbron aansluit.

Varoitus! Lue asennusohjeet ennen järjestelmän liittämistä virtalähteeseen.

Attention! Avant de brancher le système sur la source d'alimentation, consulter les directives d'installation.

Warnung! Vor dem Anschließen des Systems an die Stromquelle die Installationsanweisungen lesen.

אזהרה! יש לקרוא את הוראות ההתקנה לפני חיבור המערכת למקור המתח.

चेतावनी! सिस्टम को बिजली के स्रोत से जोड़ने से पहले स्थापना निर्देश पढ़ें।

警告！ システムを電源に接続する前に、設置手順書をお読み下さい。

경고! 시스템을 전원에 연결하기 전에 설치 안내를 읽어주십시오.

Advarsel! Les installasjonsinstruksjonene før du kobler systemet til strømkilden.

¡Advertencia! Lea las instrucciones de instalación antes de conectar el sistema a la red de alimentación.

Varning! Läs installationsanvisningarna innan du ansluter systemet till strömkällan.

Circuit Breaker



Warning! This product relies on the building's installation for short-circuit (overcurrent) protection. Ensure that the protective device is rated not greater than: 250 VAC, 20 A.

تحذير! يعتمد هذا المنتج على التركيبات الكهربائية في المبنى للحماية من حدوث قصر دائرة (تيار زائد). تأكد من أن تصنيف جهاز الحماية لا يتجاوز: 250 فولت تيار متردد, 20 أمبير.

警告！此产品由建筑物的供电系统提供短路(过载)保护，并确保额定电压/电流不大于 250 VAC/20 A。

警告！此產品的短路(過載電流)保護由建築物的供電系統提供，確保短路保護設備的額定電流不大於 250 VAC、20 A。

Advarsel! Dette produkt forudsætter, at bygningens elinstallation sørger for kortslutningsbeskyttelse (overstrøm). Sørg for, at beskyttelsesanordningen ikke er klassificeret til mere end: 250 VAC, 20 A.

Waarschuwing! Dit product vertrouwt op de installatie van het gebouw voor kortsluitbeveiliging (overstroombeveiliging). Zorg ervoor dat de beveiligingsvoorziening is gespecificeerd voor niet meer dan: 250 VAC, 20 A.

Varoitus! Tämä tuote on riippuvainen rakennuksen asennuksesta oikosulku- (ylivirta-) suojauksen osalta. Varmista, että suojalaitteen nimellisarvot eivät ylitä seuraavia arvoja: 250 VAC, 20 A.

Attention! Ce produit dépend de l'installation du bâtiment pour la protection contre les courts-circuits (surintensité). Assurez-vous que le dispositif de protection n'est pas supérieur à : 250 VAC, 20 A.

Warnung! Dieses Produkt ist auf den Kurzschluss- bzw. Überstromschutz der Gebäudeinstallation angewiesen. Stellen Sie sicher, dass die Schutzvorrichtung für maximal 250 VAC, 20 A ausgelegt ist.

אזהרה! מוצר זה מסתמך על תשתית החשמל של המבנה להגנה מפני קצר חשמלי (זרם יתר). ודא שדירוג התקן ההגנה אינו עולה על: 250 VAC, 20 A.

चेतावनी! यह उत्पाद शॉर्ट-सर्किट (ओवरकरंट) सुरक्षा के लिए भवन की स्थापना पर निर्भर करता है। सुनिश्चित करें कि सुरक्षात्मक उपकरण की रेटिंग निम्नलिखित से अधिक न हो: 250 VAC, 20 A.

警告！ この製品は、短絡(過電流)保護装置がある建物での設置を前提としています。保護装置の定格が次の値以下であることを確認ください：250 VAC、20 A。

경고! 이 제품은 단락(과전류) 방지에 대해서 전적으로 건물의 관련 설비에 의존합니다. 보호 장치의 정격이 다음 값을 초과하지 않도록 하십시오: 250 VAC(볼트), 20 A(암페어).

Advarsel! Dette produktet er avhengig av bygningens installasjon for kortslutningsbeskyttelse (overstrømsbeskyttelse). Sørg for at beskyttelsesanordningen ikke er klassifisert som høyere enn: 250 V vekselstrøm, 20 A.

¡Advertencia! Este producto depende de la instalación del edificio para protección contra cortocircuitos (sobrecorriente). Asegúrese de que el dispositivo de protección tenga una clasificación no mayor a: 250 VAC, 20 A.

Varning! Denna produkt är beroende av byggnadens installation för kortslutningsskydd (överströmsskydd). Se till att skyddsanordningen inte är märkt för mer än: 250 VAC, 20 A.

Power Disconnection Warning



Warning! The system must be disconnected from all sources of power and the power cord removed from the power supply module(s) before accessing the chassis interior to install or remove system components (except for hot-swappable components).

تحذير! يجب فصل النظام عن جميع مصادر الطاقة، وإزالة سلك الطاقة من وحدة/وحدات إمداد الطاقة قبل الدخول إلى الجزء الداخلي من الهيكل لتركيب أو فك مكونات النظام (باستثناء المكونات القابلة للاستبدال السريع).

警告！在打开机箱并安装或移除内部器件(热插拔器件除外)前，必须将系统完全断电，并移除电源线。

警告！在您打開機殼安裝或移除內部元件(熱插拔元件除外)前，必須將系統完全斷電，並移除電源線。

Advarsel! Systemet skal afbrydes fra alle strømkilder, og strømkablet skal fjernes fra strømforsyningsmodulerne, før der gives adgang til kabinettet for at montere eller fjerne systemkomponenter (undtagen hot-swap-komponenter).

Waarschuwing! Het systeem moet worden losgekoppeld van alle voedingen en het stroomsnoer moet uit de voedingsmodule(s) worden gehaald voorafgaand aan toegang tot de binnenkant van het chassis voor installeren of verwijderen van systeemcomponenten (behalve hot-swap componenten).

Varoitus! Järjestelmä on irrotettava kaikista virtalähteistä ja virtajohto on irrotettava virtalähdemoduulista (moduuleista) ennen kotelon sisälle pääsyä järjestelmän komponenttien asentamista tai poistamista varten (lukuun ottamatta hot-swap-komponentteja).

Attention! Le système doit être déconnecté de toutes les sources d'alimentation et le cordon d'alimentation doit être débranché du/des modules d'alimentation avant d'accéder à l'intérieur du châssis pour installer ou retirer des composants du système (à l'exception des composants remplaçables à chaud).

Warnung! Das System muss von allen Stromquellen getrennt und das Netzkabel von den Netzteilmodulen entfernt werden, bevor auf den Innenraum des Chassis zugegriffen wird, um Systemkomponenten zu installieren oder zu entfernen (ausgenommen Hot- Swap-Komponenten).

אזהרה! יש לנתק את המערכת מכל מקורות הכוח ולהסיר את כבל החשמל ממודול/י אספקת החשמל לפני הגישה לחלק הפנימי של המארז לצורך התקנה או הסרה של רכיבי המערכת (למעט רכיבים הניתנים להחלפה חמה).

चेतावनी! सिस्टम के घटकों को इंस्टॉल करने या निकालने (हॉट-स्वैप घटकों को छोड़कर) के लिए चेसिस के आंतरिक भाग तक पहुँचने से पहले, सिस्टम को बिजली के सभी स्रोतों से डिस्कनेक्ट किया जाना चाहिए और बिजली की आपूर्ति मॉड्यूल से पावर कॉर्ड को निकाल दिया जाना चाहिए।

警告！ システムコンポーネント(ホットスワップコンポーネントを除く) の取り付けまたは取り外しを行うために、シャーシ内部にアクセスするには、システムの電源はすべてのソースから切断され、電源コードは電源モジュールから取り外す必要があります。

경고! (핫스왑 구성품을 제외하고) 시스템에 부품들을 장착하거나 제거하기 위해서는 섀시 내부에 접근하기 전에 반드시 전원 공급장치로부터 연결되어있는 모든 전원과 전기코드를 분리해주어야 합니다.

Advarsel! Systemet må kobles fra alle strømkilder, og strømledningen må fjernes fra strømforsyningsmodulen (e) før man går inn i kabinettet for å installere eller fjerne systemkomponenter (unntatt komponenter som kan byttes ut under drift).

¡Advertencia! El sistema debe estar desconectado de todas las fuentes de energía y el cable de alimentación debe retirarse de los módulos de fuente de alimentación antes de acceder al interior del chasis para instalar o quitar componentes del sistema (excepto los componentes reemplazables en caliente).

Varning! Systemet måste vara frånkopplat från alla strömkällor och strömsladden måste vara borttagen från strömförsörjningsmodulerna innan du öppnar chassit för att installera eller ta bort systemkomponenter (med undantag för hot-swap-komponenter).

Equipment Installation

Warning! Only authorized personnel and qualified service persons should be allowed to install, replace, or service this equipment.

تحذير! لا يُسمح إلا للعاملين المعتمدين وفنيي الخدمة المؤهلين بتركيب هذا الجهاز أو استبداله أو صيانته.

警告！ 仅限经过授权培训且拥有相关资质的人员才能进行此设备的安装、更换和维修。

警告！ 只有經過受訓且具資格人員才可安裝、更換與維修此設備。

Advarsel! Dette udstyr må kun installeres, udskiftes eller serviceres af autoriseret personale og kvalificerede servicemedarbejdere.

Waarschuwing! Alleen geautoriseerd personeel en gekwalificeerd onderhoudspersoneel mag deze apparatuur installeren, vervangen of onderhouden.

Varoitus! Vain valtuutetut henkilöt ja pätevät huoltoteknikot saavat asentaa, vaihtaa tai huoltaa tätä laitetta.

Attention! Seul le personnel autorisé et le personnel de maintenance qualifié doivent être autorisés à installer, remplacer ou entretenir cet équipement.

Warnung! Nur autorisiertes Personal und qualifizierte Servicetechniker dürfen dieses Gerät installieren, austauschen oder warten.

אזהרה! רק אנשי צוות מורשים ואנשי שירות מוסמכים רשאים להתקין, להחליף או לטפל בציוד זה.

चेतावनी! केवल अधिकृत कर्मियों और योग्य सेवा व्यक्तियों को ही इस उपकरण को स्थापित करने, बदलने या सेवा देने की अनुमति दी जानी चाहिए।

警告！ トレーニングを受け認定された人だけがこの機器の設置、交換、またはサービスを許可されています。

경고! 승인된 직원과 자격을 갖춘 서비스 담당자만이 이 장비를 설치, 교체 또는 서비스할 수 있습니다.

Advarsel! Kun autorisert personell og kvalifiserte servicefolk skal ha tillatelse til å installere, bytte ut eller utføre service på dette utstyret.

¡Advertencia! Sólo el personal autorizado y el personal de servicio calificado pueden instalar, reemplazar o dar servicio a este equipo.

Varning! Endast auktoriserad personal och kvalificerade servicetekniker får installera, byta ut eller utföra service på denna utrustning.

Rack Stability Hazard



Warning! Stability hazard. The rack may tip over causing serious personal injury. Before extending the rack to the installation position, read the installation instructions. Do not put any load on the slide-rail mounted equipment in the installation position. Do not leave the slide-rail mounted equipment in the installation position.

تحذير! خطر عدم الاستقرار. قد ينقلب الحامل، مما قد يتسبب في إصابات شخصية خطيرة. قبل تمديد الحامل إلى موضع التركيب اقرأ إرشادات التركيب. لا تضع أي حمولة على الأجهزة المركبة على حوامل منزلقة في وضع التركيب. لا تترك الأجهزة المركبة على حوامل منزلقة في وضع التركيب.

警告！稳定性危险。机架可能会翻倒，造成严重的人身伤害。在将机架延伸到安装位置之前，请阅读安装说明。请勿在安装位置对滑轨安装的设备施加任何负载。请勿将滑轨安装的设备留在安装位置。

警告！穩定性危險。機架可能會翻倒，造成嚴重的人身傷害。將機架延伸至安裝位置前，請先閱讀安裝說明。請勿在安裝位置的滑軌安裝設備上放置任何負載。請勿將滑軌安裝設備留在安裝位置。

Advarsel! Stabilitetsfare. Udstyrsskabet kan vælte, hvilket kan føre til alvorlige personskader. Læs monteringsvejledningen, før udstyrsskabet trækkes ud til monteringsstedet. Anbring ikke nogen belastning på udstyr monteret på skinner, når det er på monteringsstedet. Efterlad ikke udstyr monteret på skinner på monteringsstedet.

Waarschuwing! Gevaar voor instabiliteit. Het rack kan kantelen en ernstig persoonlijk letsel veroorzaken. Lees de installatie- instructies voordat u het rack uitschuift naar de installatiepositie. Plaats geen last op de op de glijrail gemonteerde apparatuur in de installatiepositie. Laat de op de glijrail gemonteerde apparatuur niet in de installatiepositie staan.

Varoitus! Vakausvaara. Teline voi kaatua ja aiheuttaa vakavia henkilövahinkoja. Ennen telineen asettamista asennusasentoon, lue asennusohjeet. Älä aseta mitään kuormitusta liukukiskoon asennettuihin laitteisiin asennusasennossa. Älä jätä liukukiskoon asennettuja laitteita asennusasentoon.

Attention! Danger d'instabilité. Le rack peut basculer et provoquer des blessures corporelles graves. Avant d'étendre le rack en position d'installation, lire les instructions d'installation. Ne pas charger l'équipement monté sur rail de glissière en position d'installation. Ne pas laisser l'équipement monté sur rail de glissière en position d'installation.

Warnung! Gefahr der Instabilität. Das Rack kann umkippen und schwere Verletzungen verursachen. Lesen Sie vor dem Ausziehen des Racks in die Installationsposition die Installationsanweisungen. Belasten Sie in der Installationsposition keine auf Gleitschienen montierten Geräte. Lassen Sie auf Gleitschienen montierte Geräte nicht unbeaufsichtigt in der Installationsposition.

אזהרה! סכנת יציבות. הארון עלול להתהפך ולגרום לפציעה גופנית חמורה. לפני הארכת הארון למצב התקנה, יש לקרוא את הוראות ההתקנה. אין להניח עומס כלשהו על הציוד המותקן על מסילות ההחלקה כשהוא במצב התקנה. אין להשאיר את הציוד המותקן על מסילות ההחלקה במצב התקנה.

चेतावनी! स्थिरता का खतरा। रैक पलट सकता है जिससे गंभीर व्यक्तिगत चोट लग सकती है। रैक को इंस्टालेशन स्थिति तक बढ़ाने से पहले, स्थापना निर्देश पढ़ें। स्थापना स्थिति में स्लाइड-रेल पर लगे उपकरणों पर कोई भार न डालें। स्लाइड-रेल पर लगे उपकरणों को स्थापना स्थिति में न छोड़ें।

警告！ 安定性に危険があります。ラックが転倒して、重大な人身事故を引き起こす可能性があります。ラックを設置位置まで伸ばす前に、設置手順をお読みください。設置位置にあるスライドレールに取り付けられた機器に負荷をかけないでください。スライドレールに取り付けられた機器を設置位置に放置しないでください。

경고! 안정성 위험. 랙이 넘어져 심각한 개인 부상을 입을 수 있습니다. 랙을 설치 위치까지 확장하기 전에 설치 지침을 읽으십시오. 설치 위치에서 슬라이드 레일 장착 장비에 하중을 가하지 마십시오. 슬라이드 레일 장착 장비를 설치 위치에 두지 마십시오.

Advarsel! Stabilitetsfare. Stativet kan velte og forårsake alvorlig personskade. Les installasjonsanvisningen før du forlenger stativet till installasjonsposisjonen. Ikke belast utstyret som er montert på glideskinnen i installasjonsposisjon. Ikke la utstyret som er montert på glideskinnen stå i installasjonsposisjon.

¡Advertencia! Peligro de inestabilidad. El rack podría volcarse y causar lesiones personales graves. Antes de extender el rack a la posición de instalación, lea las instrucciones de instalación. No coloque ninguna carga sobre el equipo montado sobre rieles deslizantes en la posición de instalación. No deje el equipo montado sobre rieles deslizantes en la posición de instalación.

Varning! Stabilitetsrisk. Racket kan välta och orsaka allvarliga personskador. Läs monteringsanvisningarna innan du skjuter ut racket till monteringspositionen. Belasta ej utrustning som är monterad på glidskena i installationsläget. Lämna ej utrustning som är monterad på glidskena i monteringsläget.

Rack-Mounted Equipment Warning

Warning! Rack-mounted equipment should not be used as a shelf or work space.

تحذير! لا ينبغي استخدام المعدات المثبتة على حوامل كرف أو مساحة عمل.

警告！机架式设备不应用作货架或工作空间。

警告！不得將機架式設備當作置物架或工作空間使用。

Advarsel! Udstyr, der er monteret i udstyrsskabe, må ikke bruges som hylder eller arbejdsflader.

Waarschuwing! In rack gemonteerde apparatuur moet niet worden gebruikt als plank of werkruimte.

Varoitus! Telineasennettavia laitteita ei saa käyttää hyllyinä tai työtasoina.

Attention! Un équipement installé en rack ne doit pas être utilisé comme une étagère ou un espace de travail.

Warnung! In Racks montierte Geräte dürfen nicht als Ablagefläche oder Arbeitsfläche verwendet werden.

אזהרה! אין להשתמש בציוד המותקן במסד (Rack) כמדף או כמשטח עבודה.

चेतावनी! रैक-माउंटेड उपकरण का उपयोग शेल्फ या कार्यक्षेत्र के रूप में नहीं किया जाना चाहिए।

警告！ ラックマウント機器を棚や作業スペースとして使用しないでください。

경고! 랙 장착 장비를 선반 또는 작업대처럼 사용하지 마십시오.

Advarsel! Rackmontert utstyr skal ikke brukes som hylle eller arbeidsområde.

¡Advertencia! Los equipos montados en rack no deben utilizarse como estante o espacio de trabajo.

Varning! Rackmonterad utrustning ska inte användas som hylla eller arbetsyta.

Restricted Access Location

Warning! This unit is intended for installation in restricted access areas. A restricted access area can be accessed only by an instructed person or a skilled person.

تحذير! هذه الوحدة مخصصة للتركيب في المناطق الممنوع الدخول إليها. يقتصر الدخول إلى منطقة منع الدخول إلا للأشخاص المدربين أو المهرة.

警告！此装置应安装在限制进出的场所，而此类场所仅限经过相关训练或技术熟练的人员进出。

警告！ 此部件應安裝在限制進出區域。只有受過指導的人員或專業人員才可進出限制進出區域。

Advarsel! Denne enhed er beregnet til montering i områder med begrænset adgang. Et område med begrænset adgang må kun tilgås af en instrueret person eller en fagkyndig person.

Waarschuwing! Deze eenheid is bedoeld voor installatie in gebieden met beperkte toegang. Er kan alleen toegang worden verkregen tot een gebied met beperkte toegang door een geïnstrueerde persoon of een ervaren persoon.

Varoitus! Tämä laite on tarkoitettu asennettavaksi rajoitetun pääsyn alueille. Rajoitetun pääsyn alueelle pääsee vain koulutettu tai ammattitaitoinen henkilö.

Attention! Cet appareil est destiné à être installé dans des zones à accès restreint. Une zone à accès restreint n'est accessible qu'à une personne formée ou qualifiée.

Warnung! Diese Einheit ist zur Installation in Bereichen mit beschränktem Zutritt vorgesehen. Ein Bereich mit beschränktem Zutritt darf nur von unterwiesenen oder fachkundigen Personen betreten werden.

אזהרה! יחידה זו מיועדת להתקנה באזורים עם גישה מוגבלת. ניתן לגשת לאזור עם גישה מוגבלת רק על ידי אדם שהוכשר לכך או אדם מיומן.

चेतावनी! यह इकाई प्रतिबंधित पहुँच वाले क्षेत्रों में स्थापना के लिए ही है। प्रतिबंधित पहुँच वाले क्षेत्र में केवल एक निर्देशित व्यक्ति या कुशल व्यक्ति द्वारा ही पहुँचा जा सकता है।

警告！ このユニットはアクセス制限区域に設置することを想定しています。アクセス制限区域は、トレーニングを受けた人または熟練者だけが出入り可能です。

경고! 본 장치는 접근이 제한된 구역에 설치하도록 되어있습니다. 교육을 받은 사람 또는 숙련된 사람만 접근 제한 구역에 들어갈 수 있습니다.

Advarsel! Denne enheten er beregnet for installasjon i områder med begrenset tilgang. Et område med begrenset tilgang kan kun nås av en person som har fått instruksjoner eller en fagperson.

¡Advertencia! Esta unidad está diseñada para su instalación en áreas de acceso restringido. A un área de acceso restringido solo puede acceder una persona instruida o una persona capacitada.

Varning! Denna enhet är avsedd för installation i områden med begränsad åtkomst. Ett område med begränsad åtkomst får endast beträdas av en instruerad eller kvalificerad person.

Battery Handling



Warning! There is risk of explosion if the battery is replaced by an incorrect type. Replace the battery only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

تحذير! يوجد خطر حدوث انفجار إذا تم استبدال البطارية بنوع غير صحيح. استبدل البطارية بنفس النوع أو نوع مكافئ موصى به من قبل الشركة المصنعة فقط. يجب التخلص من البطاريات المستخدمة وفقًا لإرشادات الجهة المصنعة.

警告！ 如果更换的电池类型不正确，有爆炸危险。更换电池时，请使用制造商推荐的相同或同等型号的电池。请按制造商的说明处理废旧电池。

警告！ 如果更換的電池類型不正確，有爆炸危險。請使用製造商建議之相同或功能相當的電池更換原有電池。請按照製造商的說明指示處理廢棄舊電池。

Advarsel! Der er risiko for eksplosion, hvis batteriet skiftes med et batteri af den forkerte type. Batteriet må kun skiftes med et batteri af samme eller tilsvarende type, der anbefales af producenten. Opbrugte batterier skal bortskaffes i henhold til vejledningerne fra producenten.

Waarschuwing! Er bestaat een explosiegevaar als de batterij wordt vervangen door een onjuist type. Vervang de batterij alleen door hetzelfde type of een soortgelijk type aanbevolen door de fabrikant. Verwijder gebruikte batterijen overeenkomstig de instructies van de fabrikant.

Varoitus! Väärän tyyppisen akun käyttö voi aiheuttaa räjähdysvaaran. Vaihda akku vain valmistajan suosittelemaan samaan tai vastaavaan tyyppiseen akkuun. Hävitä käytetyt paristot valmistajan ohjeiden mukaisesti.

Attention! Il y a un risque d'explosion si la batterie est remplacée par une d'un type incorrect. Remplacez la batterie uniquement par une d'un type identique ou équivalent recommandé par le fabricant. Éliminez les batteries usagées conformément aux instructions du fabricant.

Warnung! Es besteht Explosionsgefahr, wenn die Batterie durch einen falschen Typ ersetzt wird. Ersetzen Sie die Batterie ausschließlich durch denselben oder einen vom Hersteller empfohlenen gleichwertigen Typ. Entsorgen Sie gebrauchte Batterien gemäß den Anweisungen des Herstellers.

אזהרה! קיימת סכנת פיצוץ אם הסוללה תוחלף בסוללה מסוג שגוי. החלף את הסוללה רק בסוללה מאותו סוג או בסוללה מקבילה המומלצת על ידי היצרן. השלך סוללות משומשות בהתאם להוראות היצרן.

चेतावनी! यदि बैटरी को गलत प्रकार से बदला जाता है तो विस्फोट का जोखिम है। बैटरी को केवल निर्माता द्वारा अनुशंसित समान या समकक्ष प्रकार से ही बदलें। इस्तेमाल की गई बैटरियों का निपटान निर्माता के निर्देशों के अनुसार करें।

警告！ 電池を間違ったタイプに交換すると爆発する危険があります。交換する電池はメーカーが推奨するタイプ、または同等のものを使用してください。使用済み電池は、メーカーの指示に従って廃棄してください。

경고! 배터리를 잘못된 종류로 교체하면 폭발의 위험이 있습니다. 기존 배터리와 동일하거나 제조사에서 권장하는 동등한 종류의 배터리로만 교체해야 합니다. 제조사의 안내에 따라 사용된 배터리를 처리하여 주십시오.

Advarsel! Det er fare for eksplosjon hvis batteriet byttes ut med et av feil type. Batterier skal kun byttes ut med et av lik eller tilsvarende type, som anbefalt av produsenten. Kast brukte batterier i henhold til produsentens instruksjoner.

¡Advertencia! Existe riesgo de explosión si se sustituye la batería por una de tipo incorrecto. Reemplace la batería únicamente con el mismo tipo o uno equivalente recomendado por el fabricante. Deseche las baterías usadas de acuerdo con las instrucciones del fabricante.

Varning! Det finns risk för explosion om batteriet byts ut mot en felaktig typ. Byt endast ut batteriet mot ett batteri av samma eller likvärdig typ som rekommenderas av tillverkaren. Kassera förbrukade batterier i enlighet med tillverkarens anvisningar.

Redundant Power Supplies



Warning! This unit might have more than one power supply connection. All connections must be removed to de-energize the unit.

تحذير! قد تحتوي هذه الوحدة على أكثر من وصلة لإمداد الطاقة. يجب فصل جميع التوصيلات لفصل الطاقة عن الوحدة.

警告！本设备可能有多个电源连接。必须切断所有连接，才能使设备断电。

警告！此裝置連接的電源可能不只一個。必須切斷所有電源才能停止對該裝置的供電。

Advarsel! Denne enhed kan have mere end én strømforsyningsforbindelse. Alle forbindelser skal fjernes for at deaktivere spændingen.

Waarschuwing! Deze eenheid kan meer dan één stroomtoevoeraansluiting bevatten. Alle aansluitingen dienen verwijderd te worden om het apparaat stroomloos te maken.

Varoitus! Laitteessa voi olla useampi kuin yksi virtalähteen liitäntä. Laitteen virta on katkaistava irrottamalla kaikki liitännät.

Attention! Cette unité peut avoir plus d'une connexion d'alimentation. Pour supprimer toute tension et tout courant électrique de l'unité, toutes les connexions d'alimentation doivent être débranchées.

Warnung! Diese Einheit kann über mehr als eine Stromversorgungsanschluss verfügen. Um sicherzustellen, dass die Einheit spannungsfrei ist, müssen alle Verbindungen entfernt werden.

אזהרה! יחידה זו עשויה לכלול יותר מחיבור אחד לספק כוח. יש לנתק את כל החיבורים כדי להפסיק את הזנת המתח ליחידה.

चेतावनी! इस इकाई में एक से अधिक पावर सप्लाई कनेक्शन हो सकते हैं। इकाई को ऊर्जा-मुक्त (डी-एनर्जाइज) करने के लिए सभी कनेक्शन हटा दिए जाने चाहिए।

警告！ このユニットは複数の電源装置が接続されている場合があります。ユニットの電源を切るためには、すべての接続を取り外さなければなりません。

경고! 이 장치에는 한 개 이상의 전원 공급 단자가 연결되어 있을 수 있습니다. 이 장치에 전원을 차단하기 위해서는 모든 연결 단자를 제거해야만 합니다.

Advarsel! Denne enheten kan ha mer enn én strømforsyningstilkobling. Alle tilkoblinger må fjernes for å gjøre enheten strømløs.

¡Advertencia! Puede que esta unidad tenga más de una conexión para fuentes de alimentación. Para cortar por completo el suministro de energía, deben desconectarse todas las conexiones.

Varning! Denna enhet kan ha mer än en strömförsörjningsanslutning. Alla anslutningar måste tas bort för att enheten ska bli strömlös.

Backplane Voltage



Warning! Hazardous voltage or energy is present on the backplane when the system is operating. Use caution when servicing. Read the instructions before servicing.

تحذير! يوجد جهد أو طاقة خطرة على اللوحة الخلفية أثناء تشغيل النظام. توخ الحذر عند إجراء الصيانة. اقرأ التعليمات قبل إجراء الصيانة.

警告！ 当系统运行时，背板上存在危险电压或能量，进行维修时务必小心。维修前请阅读使用说明。

警告！ 系統運作時，背板上存在危險電壓或能量。維修時請小心。維修前請閱讀說明書。

Advarsel! Når systemet er i drift, er farlig spænding eller energi til stede på bagpladen. Vær forsigtig ved servicering. Læs instruktionerne før service.

Waarschuwing! Gevaarlijke spanning of energie is aanwezig op de achterzijde wanneer het systeem in bedrijf is. Wees voorzichtig bij service. Lees de instructies voorafgaand aan service.

Varoitus! Järjestelmän ollessa käynnissä takapaneelissa on vaarallista jännitettä tai energiaa. Ole varovainen huoltotöiden aikana. Lue ohjeet ennen huoltoa.

Attention! Une tension ou de l’énergie dangereuse est présente sur le panneau arrière lorsque le système est en fonctionnement. Soyez prudent lors de l'entretien. Lisez les instructions avant d'effectuer un entretien.

Warnung! Bei eingeschaltetem System liegt an der Backplane gefährliche Spannung oder Energie an. Seien Sie bei Wartungsarbeiten vorsichtig. Lesen Sie vor der Wartung die Anweisungen.

אזהרה! מתח או אנרגיה מסוכנים קיימים בלוח האחורי כאשר המערכת פועלת. יש לנקוט בזהירות בעת ביצוע תחזוקה. קרא את ההוראות לפני ביצוע תחזוקה.

चेतावनी! जब सिस्टम चालू होता है, तो बैकप्लेन पर खतरनाक वोल्टेज या ऊर्जा मौजूद होती है। सर्विसिंग करते समय सावधानी बरतें। सर्विसिंग से पहले निर्देश पढ़ें।

警告！ システムの稼働中は、危険な電圧または電流がバックプレーン上にかかっています。修理を行う際には注意してください。修理を行う前に取扱説明書をお読みください。

경고! 시스템이 동작 중일 때 후면판(Backplane)에는 위험한 전압이나 에너지가 발생합니다. 서비스 작업 시 주의하십시오. 서비스 작업 전에 지침을 읽으십시오.

Advarsel! Det er farlig spenning eller energi på bakplaten når systemet er i drift. Vær forsiktig ved service. Les instruksjonene før service.

¡Advertencia! Hay voltaje o energía peligrosos presentes en la placa posterior cuando el sistema está en funcionamiento. Tenga cuidado al realizar el mantenimiento. Lea las instrucciones antes de realizar el mantenimiento.

Varning! Farlig spänning eller energi finns på backplane när systemet är i drift. Var försiktig vid service. Läs instruktionerna före service.

Comply with Local and National Electrical Codes



Warning! Installation of the equipment must comply with local and national electrical codes.

تحذير! يجب أن يتوافق تركيب الأجهزة مع لوائح الكهرباء المحلية والوطنية.

警告！ 设备安装必须符合本地与本国电气法规。

警告！ 設備安裝必須符合本地與本國電氣法規。

Advarsel! Alle lokale og nationale el-regler skal overholdes under montering af udstyret.

Waarschuwing! Bij installatie van de apparatuur moet worden voldaan aan de lokale en nationale elektriciteitsvoorschriften.

Varoitus! Laitteiden asennus on suoritettava paikallisten ja kansallisten sähkömääräysten mukaisesti.

Attention! L'équipement doit être installé conformément aux normes électriques nationales et locales.

Warnung! Die Installation des Geräts muss den lokalen und nationalen elektrotechnischen Vorschriften entsprechen.

אזהרה! התקנת הציוד חייבת להתבצע בהתאם לתקני החשמל המקומיים והארציים.

चेतावनी! उपकरण की इंस्टालेशन स्थानीय और राष्ट्रीय विद्युत कोड के अनुरूप होनी चाहिए।

警告！ 機器の取り付けはその地域および国の電気規定に準拠する必要があります。

경고! 현 지역 및 국가의 전기 규정에 따라 장비를 설치해야 합니다.

Advarsel! Installasjon av utstyret må være i samsvar med lokale og nasjonale elektriske forskrifter.

¡Advertencia! La instalacion del equipo debe cumplir con las normas de electricidad locales y nacionales.

Varning! Installation av utrustningen måste följa lokala och nationella elektriska föreskrifter.

Fan Warning

Warning! Hazardous moving parts. Keep away from moving fan blades. The fans might still be turning when you remove the fan assembly from the chassis. Keep fingers, screwdrivers, and other objects away from the openings in the fan assembly's housing.



تحذير! تجنب خطر الأجزاء المتحركة. ابتعد عن شفرات المروحة المتحركة. قد تستمر المراوح في الدوران بعد فك مجموعة المراوح من الهيكل. أبق أصابعك ومفكات البراغي والأغراض الأخرى بعيدة عن الفتحات الموجودة في مبيت مروحة التبريد.

警告！危险的活动零部件。请务必与转动的风扇叶片保持距离。从机箱移除风扇装置时，风扇可能仍在转动。小心不要将手指、螺丝起子和其他物品太靠近风扇外壳开口。

警告！危險的可移動性零件。請務必與轉動的風扇葉片保持距離。當您從機架移除風扇裝置，風扇可能仍在轉動。小心不要將手指、螺絲起子和其他物品太靠近風扇。

Advarsel! Farlige bevægelige dele. Hold dig væk fra ventilatorblade i bevægelse. Ventilatorerne kan stadig køre, når du tager ventilatorsamlingen af kabinettet. Hold fingre, skruetrækkere og andre genstande væk fra åbningerne i ventilatorkabinettet.

Waarschuwing! Gevaarlijke bewegende onderdelen. Houd voldoende afstand tot de bewegende ventilatorbladen. Het is mogelijk dat de ventilator nog draait tijdens het verwijderen van het ventilatorsamenstel uit het chassis. Houd uw vingers, schroevendraaiers en eventuele andere voorwerpen uit de buurt van de openingen in de ventilatorbehuizing.

Varoitus! Vaaralliset liikkuvat osat. Pysy kaukana liikkuvista tuulettimen siivistä. Tuulettimet saattavat edelleen pyöriä, kun irrotat tuulettimen kokoonpanon kotelosta. Pidä sormet, ruuvimeisselit ja muut esineet poissa tuulettimen kotelon aukkojen läheltä.

Attention! Pieces mobiles dangereuses. Se tenir à l'ecart des lames du ventilateur Il est possible que les ventilateurs soient toujours en rotation lorsque vous retirerez le bloc ventilateur du châssis. Prenez garde à ce que doigts, tournevis et autres objets soient éloignés du logement du bloc ventilateur.

Warnung! Gefährliche bewegliche Teile. Halten Sie Abstand von rotierenden Lüfterblättern. Die Lüfter können sich noch drehen, wenn Sie die Lüfterbaugruppe aus dem Chassis entfernen. Halten Sie Finger, Schraubendreher und andere Gegenstände von den Öffnungen des Lüftergehäuses fern.

אזהרה! חלקים נעים מסוכנים. יש להתרחק מלהבי מאוורר נעים. המאווררים עשויים להמשיך להסתובב בעת הסרת מכלול המאוורר מהמארז. יש להרחיק אצבעות, מברגים וחפצים אחרים מהפתחים שבבית מכלול המאוורר.

चेतावनी! खतरनाक चलते हुए भाग। चलते हुए पंखे के ब्लेड से दूर रहें। जब आप चेसिस से पंखे की असेंबली निकालते हैं, तब भी पंखे घूम रहे हो सकते हैं। उंगलियों, स्क्रूड्राइवर और अन्य वस्तुओं को पंखे की असेंबली के हाउसिंग के छिद्रों से दूर रखें।

警告！ 回転部品に注意。運転中は回転部(羽根)に触れないでください。シャーシからファンアセンブリを取り外す際、ファンがまだ回転している可能性があります。ファンアセンブリの開口部に、指、ドライバー、およびその他のものを近づけないで下さい。

경고! 움직이는 위험한 부품. 회전하는 송풍 날개에 접근하지 마세요. 섀시로부터 팬 조립품을 제거할 때 팬은 여전히 회전하고 있을 수 있습니다. 팬 조림품 외관의 열려있는 부분들로부터 손가락 및 스크류드라이버, 다른 물체들이 가까이 하지 않도록 배치해 주십시오.

Advarsel! Farlige bevegelige deler. Hold deg unna vifteblader i fart. Viftene kan fortsatt gå rundt når du fjerner vifteenheten fra kabinettet. Hold fingre, skrutrekkere og andre gjenstander unna åpningene i viftehuset.

¡Advertencia! Riesgo de piezas móviles. Mantener alejado de las aspas del ventilador. Los ventiladores podran dar vuelta cuando usted quite el montaje del ventilador del chasis. Mantenga los dedos, los destornilladores y todos los objetos lejos de las aberturas del ventilador.

Varning! Farliga rörliga delar. Håll dig borta från rörliga fläktblad. Fläktarna kan fortfarande snurra när du tar bort fläktenheten från chassit. Håll fingrar, skruvmejslar och andra föremål borta från öppningarna i fläktenhetens hölje.

Connection to Earth



Warning! Equipment shall be connected to an Earth mains socket-outlet.

تحذير! يجب توصيل الأجهزة بمقبس كهربائي أرضي.

警告！设备应连接到接地电源插座。

警告！應將設備連接至接地電源插座。

Advarsel! Dette udstyr skal sluttes til en jordforbundet stikkontakt.

Waarschuwing! De apparatuur moet worden aangesloten op een geaard netstopcontact.

Varoitus! Laitteet on kytkettävä maadoitettuun pistorasiaan.

Attention! L'équipement doit être connecté à une prise de courant avec mise à la terre.

Warnung! Das Gerät muss an eine geerdete Netzsteckdose angeschlossen werden.

אזהרה! יש לחבר את הציוד לשקע חשמל עם הארקה.

चेतावनी! उपकरण को एक अर्थ मेन्स सॉकेट-आउटलेट से जोड़ा जाना चाहिए।

警告！ 機器は、接地主電源コンセントに接続するものとします。

경고! 장비는 접지된 전원 콘센트에 연결해야 합니다.

Advarsel! Utstyret skal kobles til en jordet stikkontakt.

¡Advertencia! El equipo deberá conectarse a una toma de corriente con conexión a tierra.

Varning! Utrustningen ska vara ansluten till ett jordat eluttag.

Power Cable and AC Adapter

Warning! When installing the product, use the provided or designated connection cables, power cables and AC adaptors. Using any other cables and adaptors could cause a malfunction or a fire. Electrical Appliance and Material Safety Law prohibits the use of UL or CSA -certified cables (that have UL/CSA shown on the cord) for any other electrical devices than products designated by Supermicro only.

تحذير! عند تركيب المنتج استخدم كابلات التوصيل والطاقة ومحولات التيار المتردد المرفقة أو المخصصة. قد يؤدي استخدام أي كابلات ومحولات أخرى إلى حدوث عطل أو نشوب حريق. يحظر قانون سلامة الأجهزة والمواد الكهربائية استخدام كابلات UL أو CSA المعتمدة من (التي عليها علامة UL/CSA) لأي أجهزة كهربائية أخرى غير المنتجات التي تحددها شركة Supermicro فقط.

警告！ 安装时，请使用设备本身提供或指定的连接线、电源线和交流适配器。使用任何其他电缆线材或适配器都可能导致故障或火灾。除美超微(Supermicro)指定的产品外，《电气用品和材料安全法》禁止将UL或CSA认证的电缆(线材上标有UL/CSA)用于任何其他电气设备。

警告！ 安裝此產品時，請使用本身隨附或指定的連接線、電源線和電源適配器，包含遵照當地法規和安全要求的合規的電源線尺寸和插頭。使用其它線材或適配器可能會引起故障或火災。除了美超微(Supermicro)所指定的產品， 電氣用品及材料安全法》規定禁止使用未經UL或CSA認證的線材。(線材上標有UL/CSA符號)。

Advarsel! Når du monterer produktet, skal du bruge de medfølgende eller udpegede forbindelseskabler, strømkabler og vekselstrømsadaptere (AC). Brug af andre kabler og adaptere kan føre til fejl eller brand. Loven om sikkerhed for elektriske apparater og materialer forbyder brugen af UL- eller CSA-certificerede kabler (med UL/CSA angivet på ledningen) til andre elektriske apparater end dem, der udelukkende er godkendt af Supermicro.

Waarschuwing! Bij het installeren van het product moet u de geleverde of aangewezen aansluitkabels, voedingskabels en AC-adapters gebruiken. Het gebruik van enige andere kabels en adapters kan een storing of brand veroorzaken. Wetgeving voor Elektrische apparatuur en Materiaalveiligheid verbied het gebruik van UL- of CSA -gecertificeerde kabels (met UL/CSA in de code) voor enige andere elektrische apparaten dan producten die uitsluitend door Supermicro zijn aangewezzen.

Varoitus! Käytä tuotteen asennuksessa mukana toimitettuja tai tarkoitukseen sopivia liitäntäkaapeleita, virtajohtoja ja verkkolaitteita. Muiden kaapeleiden ja sovittimien käyttö voi aiheuttaa toimintahäiriön tai tulipalon. Sähkölaitteiden ja materiaalien turvallisuutta koskeva laki kieltää UL- tai CSA-sertifioitujen kaapeleiden (joissa on merkintä UL/CSA) käytön muissa sähkölaitteissa kuin Supermicron nimeämissä tuotteissa.

Attention! Lors de l'installation du produit, utilisez les câbles de connexion, les câbles d'alimentation et les adaptateurs secteur fournis ou recommandés. L'utilisation d'autres câbles et adaptateurs peut causer un dysfonctionnement ou un incendie. La loi sur la sécurité des appareils et des équipements électriques interdit l'utilisation de câbles certifiés UL ou CSA (avec la mention UL/CSA sur le cordon) pour tout autre appareil électrique que les produits désignés par Supermicro uniquement.

Warnung! Verwenden Sie bei der Installation des Produkts ausschließlich die vorgesehenen oder mitgelieferten Anschlusskabel, Netzkabel und AC-Adapter. Die Verwendung anderer Kabel oder Adapter kann zu Fehlfunktionen oder Brand führen. Das Gesetz zur Sicherheit elektrischer Geräte und Materialien untersagt die Verwendung von UL- oder CSA-zertifizierten Kabeln (mit UL/CSA-Kennzeichnung auf dem Kabel) für andere elektrische Geräte als die von Supermicro ausdrücklich vorgesehenen Produkte.

אזהרה! בעת התקנת המוצר, יש להשתמש בכבלי החיבור, בכבלי החשמל ובמתאמי ה-AC המצורפים או הייעודיים. שימוש בכבלים או במתאמים אחרים עלול לגרום לתקלה או לדליקה. החוק לבטיחות מכשירי חשמל וחומרים אוסר על שימוש בכבלים בעלי אישור UL או CSA (הנושאים סימון UL/CSA על גבי הכבל) עבור מכשירים חשמליים אחרים שאינם מוצרים ייעודיים של סופרמיקרו (Supermicro) בלבד.

चेतावनी! उत्पाद इंस्टॉल करते समय, प्रदान की गई या निर्दिष्ट कनेक्शन केबल, पावर केबल और AC एडॉप्टर का ही उपयोग करें। किसी अन्य केबल और एडॉप्टर का उपयोग करने से खराबी आ सकती है या आग लग सकती है। विद्युत उपकरण और सामग्री सुरक्षा कानून केवल सुपरमाइक्रो (Supermicro) द्वारा निर्दिष्ट उत्पादों के अलावा किसी अन्य विद्युत उपकरणों के लिए UL या CSA-प्रमाणित केबल (जिनके कॉर्ड पर UL/CSA दर्शाया गया हो) के उपयोग को प्रतिबंधित करता है।

警告！ 本製品を設置する際は、付属または指定の接続ケーブル、電源コードとACアダプターを使用してください。それ以外のケーブルやアダプターを使用すると、事故や火災の原因になることがあります。電気用品安全法では、ULまたはCSA認定のケーブル(UL/CSAマークがコードに表記) をSupermicroが指定する製品以外の電気機器に使用することを禁止しています。

경고! 제품을 설치할 때 현지 코드 및 적절한 굵기의 코드와 플러그를 포함한 안전 요구 사항을 준수하여 제공되거나 지정된 연결 혹은 구매 케이블, 전원 케이블 및 AC 어댑터를 사용하십시오. 다른 케이블이나 어댑터를 사용하면 오작동이나 화재가 발생할 수 있습니다. 전기 용품 안전법은 UL 또는 CSA 인증 케이블 (코드에 UL / CSA가 표시된 케이블)을 Supermicro가 지정한 제품 이외의 전기 장치에 사용하는 것을 금지합니다.

Advarsel! Når du installerer produktet, bruker du de medfølgende eller angitte tilkoblingskablene, strømkablene og strømadapterne. Bruk av andre kabler og adaptere kan forårsake funksjonsfeil eller brann. Lov om elektriske apparater og materialsikkerhet forbyr bruk av UL- eller CSA-sertifiserte kabler (der UL/CSA står på ledningen) til andre elektriske apparater enn produkter som kun er angitt av Supermicro.

¡Advertencia! Cuando instale el producto, utilice la conexión provista o designada o procure cables, Cables de alimentación y adaptadores de CA que cumplan con los códigos locales y los requisitos de seguridad, incluyendo el tamaño adecuado del cable y el enchufe. El uso de otros cables y adaptadores podría causar un mal funcionamiento o un incendio. La Ley de Seguridad de Aparatos Eléctricos y de Materiales prohíbe el uso de cables certificados por UL o CSA (que tienen el certificado UL / CSA en el código) para cualquier otros dispositivos eléctricos que los productos designados únicamente por Supermicro.

Varning! När du installerar produkten ska du använda de medföljande eller avsedda anslutningskablarna, strömkablarna och nätadaptrarna. Om du använder andra kablar och adaptrar kan det orsaka funktionsfel eller brand. Lagen om säkerhet för elektriska apparater och material förbjuder användning av UL- eller CSA-certifierade kablar (som har UL/CSA angivet på sladden) för andra elektriska apparater än produkter som endast betecknas av Supermicro.

Product Disposal

Warning! Ultimate disposal of this product should be handled according to all national laws and regulations.

تحذير! يجب التخلص النهائي من هذا المنتج وفقًا لجميع القوانين واللوائح الوطنية.

警告！本产品的废弃处理应根据所有国家的法律和规章进行。

警告！本產品的廢棄處理應根據所有國家的法律和規章進行。

Advarsel! Dette produkt skal bortskaffes i henhold til alle nationale love og regler.

Waarschuwing! De uiteindelijke verwijdering van dit product dient te geschieden in overeenstemming met alle nationale wetten en voorschriften.

Varoitus! Tämän tuotteen lopullinen hävittäminen on suoritettava kaikkien kansallisten lakien ja määräysten mukaisesti.

Attention! La mise au rebut ou le recyclage de ce produit sont généralement soumis à des lois et/ou directives de respect de l'environnement. Renseignez-vous auprès de l'organisme compétent.

Warnung! Die endgültige Entsorgung dieses Produkts muss gemäß allen nationalen Gesetzen und Vorschriften erfolgen.

אזהרה! סילוק סופי של מוצר זה חייב להתבצע בהתאם לכל החוקים והתקנות הלאומיים.

चेतावनी! इस उत्पाद का अंतिम निपटान सभी राष्ट्रीय कानूनों और नियमों के अनुसार किया जाना चाहिए।

警告！ この製品を廃棄処分する場合、国の関係する全ての法律・条例に従い処理する必要があります。

경고! 이 제품은 해당 국가의 관련 법규 및 규정에 따라 폐기되어야 합니다.

Advarsel! Når produktet til slutt skal kasseres, må det håndteres i henhold til alle nasjonale lover og forskrifter.

¡Advertencia! Al deshacerse por completo de este producto debe seguir todas las leyes y reglamentos nacionales.

Varning! Slutgiltigt bortskaffande av denna produkt ska ske i enlighet med alla nationella lagar och förordningar.

Appendix C:

System Specifications

Processors
Single AMD EPYC™ 9005 Series Processor with Socket SP5
Chipset
System on Chip (SoC)
BIOS
ACPI 6.5, SMBIOS 3.7 or later, Plug-and-Play (PnP), RTC (Real Time Clock) wakeup
Memory
12 DIMM slots, supporting up to 3 TB registered ECC DDR5 at 6400 MT/s
Storage Drives
Four front hot-swappable 2.5” NVMe/SATA drive bays (NVMe support may require additional storage controller and/or cables)
Two M.2 PCIe 5.0 x4 NVMe/SATA slots (M-key 22110/2280)
PCI Expansion Slots
Default:
Three PCIe 5.0 x16 HHFL slots
Two PCIe 5.0 x8 HHFL slots
Option A:
One PCIe 5.0 x16 FHFL double-width slot
Input/Output
One RJ45 1 GbE dedicated BMC LAN port
Two RJ45 10 GbE LAN ports
Four USB 3.2 Gen 1 Type-A ports
One VGA port
Motherboard
H14SSL-NT: Proprietary 10.1" x 12" (256.54 x 304.8 mm) (LxW)
Chassis
For AS -2116S-FTNRT: CSE-223M-R000LPNDP
For AS -2116S-TNRT: CSE-223M2-R000LPNDP
2U rackmount, 17.2” x 3.5” x 17.72” (437 x 89 x 450 mm) (WxHxD)
System Cooling
Four 8-cm hot-swappable fans
One air shroud per node

Power Supply
PWS-2K09F-1R (for AS -2116S-FTNRT only)
73.5 x 40 x 185 mm (WxHxL)
Input
1000 W: 100–127 VAC / 50–60 Hz
1800 W: 200–220 VAC / 50–60 Hz
1800 W: 200–220 VAC / 50–60 Hz (for UL/CSA only)
1980 W: 220–230 VAC / 50–60 Hz
2000 W: 230–240 VAC / 50–60 Hz
2000 W: 220–240 VAC / 50–60 Hz (for UL/CSA only)
PWS-1K04A-1R (default power supply for AS -2116S-TNRT only)
73.5 x 40 x 185 mm (WxHxL)
Input
800 W: 100–127 VAC / 50–60 Hz
1000 W: 200–240 VAC / 50–60 Hz
PWS-2K09A-1R (optional power supply for AS -2116S-TNRT only)
73.5 x 40 x 185 mm (WxHxL)
Input
1000 W: 100–127 VAC / 50–60 Hz
1800 W: 200–220 VAC / 50–60 Hz
1980 W: 220–230 VAC / 50–60 Hz
2000 W: 220–240 VAC / 50–60 Hz (for UL only)
2000 W: 230–240 VAC / 50–60 Hz
2000 W: 230–240 VAC / 50–60 Hz (for CQC only)
Operating Environment
Environmental Spec A2
Operating Temperature: 10°C to 35°C (50°F to 95°F)
Non-operating Temperature: -30°C to 60°C (-40°F to 140°F)
Operating Relative Humidity: 8% to 80% (non-condensing)
Non-Operating Relative Humidity: 8% to 90% (non-condensing)
Regulatory Compliance
FCC, ICES, CE, UKCA, VCCI, RCM, NRTL, CB
Certified Safety Models
Certified as compliant with UL or CSA:
For AS -2116S-FTNRT only: 223M-R20H14 or 223M-20
For AS -2116S-TNRT only: 223M2-R20H14, 223M2-20, 223M2-R10H14, or 223M2-10

Perchlorate Warning

California Best Management Practices Regulations for Perchlorate Materials: This Perchlorate warning applies only to products containing CR (Manganese Dioxide) Lithium coin cells. Perchlorate Material-special handling may apply. See https://www.dtsc.ca.gov/hazardouswaste/perchlorate

Applied Directives, Standards

Directives:

EMC/EMI: 2014/30/EU (EMC Directive)

Electromagnetic Compatibility Regulations 2016

FCC Part 15 Subpart B

ICES-003

VCCI-CISPR 32

AS/NZS CISPR 32

CISPR 32

CISPR 35

BS/EN 55032

BS/EN 55035

BS/EN 61000-3-2

BS/EN 61000-3-3

BS/EN 61000-4-2

BS/EN 61000-4-3

BS/EN 61000-4-4

BS/EN 61000-4-5

BS/EN 61000-4-6

BS/EN 61000-4-8

BS/EN 61000-4-11

Environment:

Delegated Directive (EU) 2015/863

Directive 2011/65/EU (RoHS)

REACH Regulation EC 1907/2006

WEEE Directive 2012/19/EU

California Proposition 65

Product Safety:

2014/35/EU (LVD Directive)

UL/CSA 62368-1 (USA and Canada)

Electrical Equipment (Safety) Regulations 2016

IEC/BS/EN 62368-1

この装置は、クラスＡ機器です。この装置を住宅環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

VCCI ー A

Appendix D:

General Data Center Environmental Specifications

Particulate Contamination Specifications

Air filtration: Data centers must be kept clean to Class 8 of ISO 14644-1 (ISO 2015). The air entering the data center should be filtered with a MERV 11 filter or better. The air within the data center should be continuously filtered with a MERV 8 filter or better.

Conductive dust: Air should be free of conductive dust, zinc whiskers, or other conductive particles.

Corrosive dust: Air should be free of corrosive dust.

Gaseous Contamination Specifications

Copper coupon corrosion rate: <300 Å/month per class G1 as defined by ANSI.ISA71.04-2013, reference by ASHRAE TC 9.9

Silver coupon corrosion rate: <200 Å/month per class G1 as defined by ANSI.ISA71.04-2013, reference by ASHRAE TC 9.9

Note: If testing with silver or copper coupons results in values less that 200 Å/month or 300 Å/month, respectively, then operating up to 70% relative humidity (RH) is acceptable. If the testing shows corrosion levels exceed these limits, then catalyst type pollutants are probably present and RH should be driven to 50% or lower.