SUPERMICRO® SuperServer® ARS-121GL-NBO-LCC Quick Reference Guide

Front Features

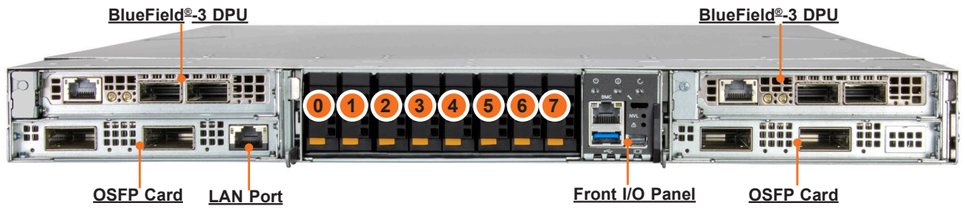

Logical Storage Drive Numbers

Number	Description
0 to 7	Eight E1.S PCIe 5.0 hot-swap drive bays

Storage Drive Indicator LEDs

LED	Color	Blinking Pattern	Behavior for Device
Activity LED	Green	Solid on	Drive installed and powered up
	Green	Blinking	Activity on drive
Status LED	Amber	Solid On	Drive failure. May require reset, power cycle or replacement
	Amber	Blinking at 4 Hz	LED activated for unit identification

Top Cover Removal

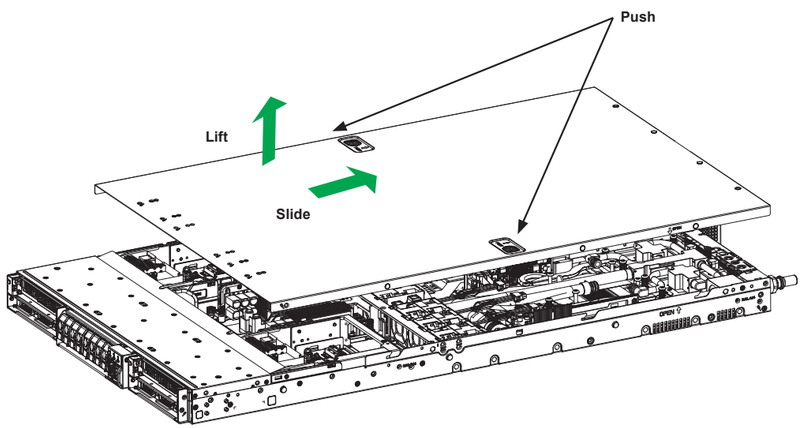

Rear Features

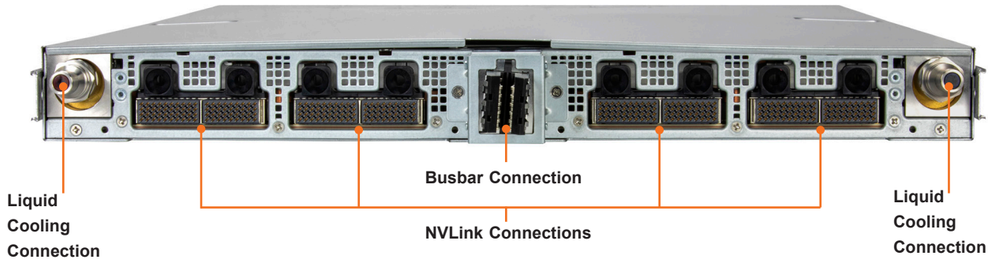

Front I/O Panel

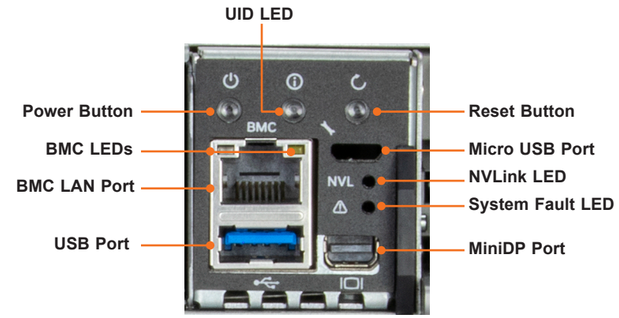

Baseboard PCIe Topology

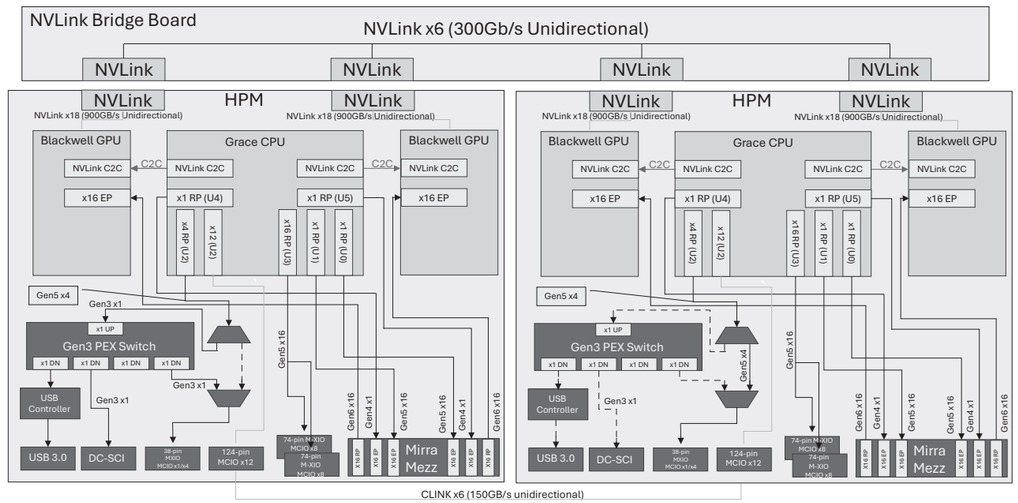

BMC Password

Each system comes with a unique default password for the ADMIN user. This can be found on a sticker on the motherboard and another on the chassis service tag. If necessary, the password can be reset.

For more information, please visit https://www.supermicro.com/en/solutions/management-software/bmc-resources

Product Page

Lift Tab

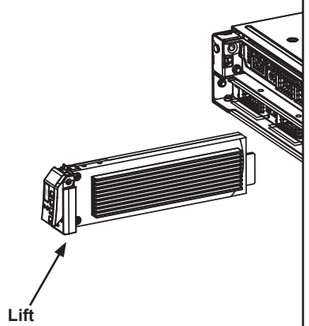

MNL-2846-QRG-100

© 2026 Supermicro Computer Inc. All rights reserved. Reproduction of this document whether in part or in whole is strictly prohibited without Supermicro's written consent. All Trademarks are property of their respective entities. All information provided is deemed accurate at the time of printing; however, it is not guaranteed.

Product drivers and utilities: https://www.supermicro.com > Support > Technical Resources > Resources and Downloads