



# Instruction of installing MCP- 220-82611-0N

# 1. Install the stands for the HDD tray platform.

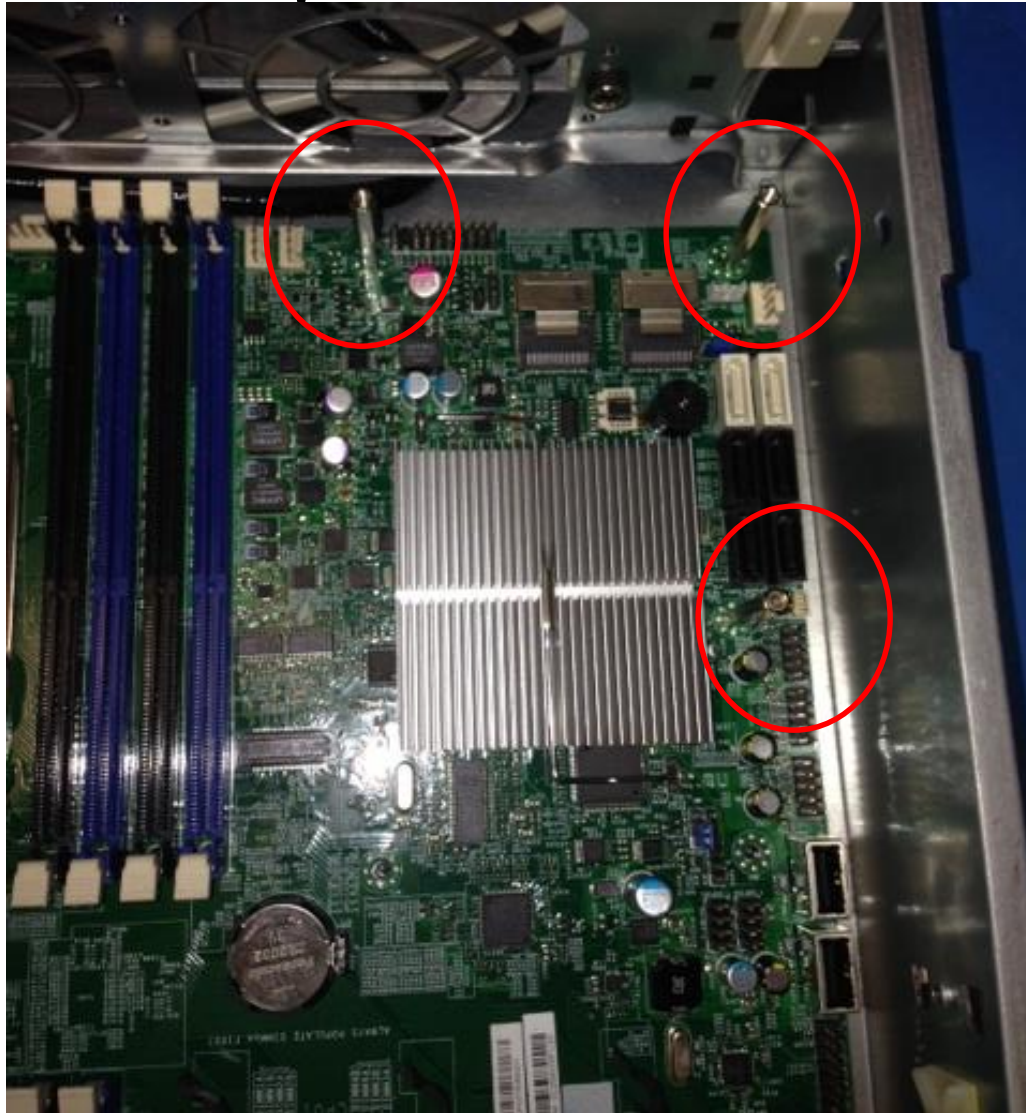

2. Put the tray platform on top of the stands and screw them tight

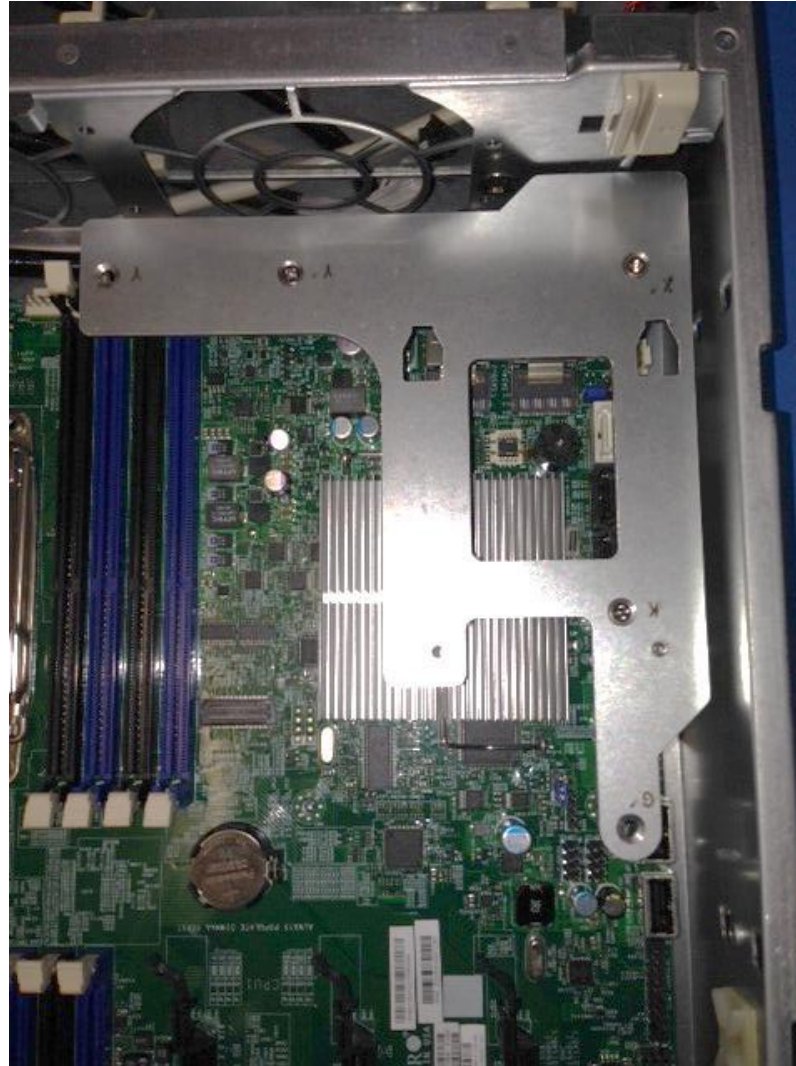

### 3. Install HDDs to the HDD tray



The side with the connectors should facing the side of the tray with mounting hole on the bottom

# 4. Screw in the HDD tray to the tray platform



On the bottom of the HDD tray, there were two wedges, you will need to match the wedges into the holes on the tray platform

