

## MAKE SURE YOU HAVE THE FOLLOWING

- 48x 1GbE + 4x10GbE switch
- Power Cords – 2
- Rack-mounting kit (two ears\ four M3 screws)
- RJ-45 to DB-9 serial console cable
- This Quick Installation Guide

Detailed installation instructions are contained in a User Manual available on the Supermicro website at:  
<http://www.supermicro.com/products/accessories/Networking/SSE-G3648B.cfm>.

Instructions for rack mounting using Ear brackets are included in the manual and summarized below.

**Note:** This is a “bare-metal switch which comes without operating software - you will need to obtain the OS from a third party. Make sure the software company has confirmed compatibility with this Supermicro SSE-G3648B switch and use their instructions for installing their software. Supermicro recommends Cumulus™Linux® from Cumulus Networks™, Inc.

## SELECTING A SITE


The SSE-G3648B can be mounted in a standard 19-inch equipment rack or on a horizontal surface.

## MOUNTING

Instructions for mounting options are shown below:

This switch can be mounted in a rack using the supplied Ear brackets. To rack-mount devices using the supplied Ear brackets:

1. Attach the ears to the device using the M3 screws provided in the Rack-Mounting Kit.

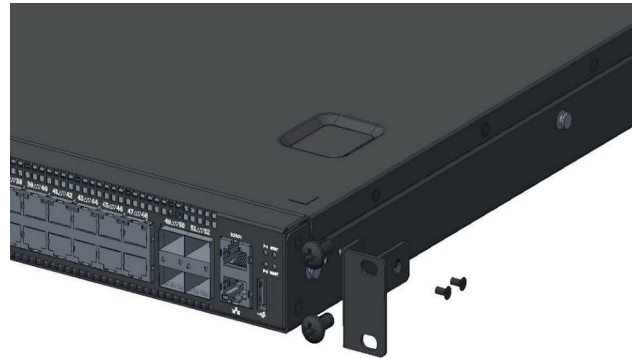

2. Mount the device in the rack, four additional M6 screws will be needed.



3. After installation, go to “Connecting to a Power Source” on this page.
4. If installing multiple switches, mount them in the rack, one on top of the other.

## Desktop or Shelf Mounting

1. Attach the four adhesive feet to the bottom of the switch.



2. Set the device on a flat surface near an AC power source, making sure there are at least two inches of space on all sides for proper airflow.
3. After installation, go to “Connecting to a Power Source”.

## ETHERNET CABLING

Connect the required devices with the appropriate cables.

## CONNECTING TO A POWER SOURCE

To connect a device to a power source:

1. Insert the Power Supply Unit (PSU) cable plug directly into the AC socket of a PSU located at the back of the switch.



**Note:** For electrical safety purposes, please pay attention to the following warning notices, printed on the switch unit:

**Caution:** Disconnect the power cord from all power sources to completely remove power from the device.

**Caution:** If the installation requires a different power cord than the one supplied with the device, make sure you use a power cord displaying the mark of the safety agency that defines the regulations for power cords in your country. The mark is your assurance that the power cord can be used safely with the device.

2. Plug the other end of the cable into a grounded, 3-pin, AC power source.

**i** Note: For use outside North America, you may need to change the AC line cord. You must use a line cord that has been approved for the connector type in your country.

3. Repeat steps 1 and 2 when a second PSU module is installed. Two installed PSU modules operate in a load-sharing mode and provide 1+1 redundancy.

## QUICK START-UP

To set up your management connection, the following parameters should be observed:

- Console Interface – make sure your console settings are 115200-N-8-1 (baud rate 115,200 bps).

## PHYSICAL CHARACTERISTICS

### Ports:

48 10M/100M/1G RJ45 Ports  
4 10Gbps SFP+ transceiver slots

### Network Interface:

Ports 1~48: 10M/100M/1G RJ45 Ports

RJ-45 Port: RJ-45 connector, auto MDI/X 10BASE-T: RJ-45 (100-ohm, UTP cable; Category 3 or better) 100BASE-TX: RJ-45 (100-ohm, UTP cable; Category 5 or better) 1000BASE-T:

RJ-45 (100-ohm, UTP or STP cable; Category 5, 5e or 6)  
\*Maximum Cable Length - 100 m (328 ft)

Ports 49~52: 10Gbps SFP + Optical  
Transceivers: SFP+-10G-SR, SFP+-10G-LR, SFP+-10G-ER, SFP+-10G-ZR.

Direct Attach Cables can also be used in ports 49-52.  
SFP+ Direct Attach cables from any reputable vendor should work.

**Weight:** Net weight: 6.55kg (14.4 lb with 2 PSUs)

### LEDs:

- System
- Fan
- RJ-45 Port 1~48: Status (Link/Activity)
- SFP+ Ports 49~52: Status (Link/Activity)

**Size** (W x D x H): 434 x 320 x 44 mm (17.08 x 12.6 x 1.73 inches)

**Temperature:** Operating 0°C to 45 °C (32°F to 113°F)

**Humidity:** Operating: 5% to 85% (non-condensing)

**AC Input:** 90~264VAC, 47Hz~63Hz

**DC Output:** 12 VDC @ 16.7A

### Power Supply:

90~264VAC, 47Hz~63Hz, F2B 200W @ 12V/16.7 A per module (For SSE-G3648B)  
90~264VAC, 47Hz~63Hz, B2F 200W @ 12V/16.7 A per module (For SSE-G3648BR)

**Power Consumption:** 85.2 Watts

## COMPLIANCES

**CE Mark:** EN 55022 Class A, EN 55024: 2010, EN 61000-3-2 Class A, EN 61000-3-3. FCC part 15 Class A, VCCI Class A, ICES-003 Class A, GB9254 Class A, GB17625.1-2003, GB17625.0:2007

**Safety:** IEC/EN/CSA 60950-1, GB4943

## POWER CORD

### Caution:

- Installation and removal of the unit must be carried out by qualified personnel only.
- The unit must be connected to an earthed (grounded) outlet to comply with international safety standards.
- Do not connect the unit to an A.C. outlet (power supply) without an earth (ground) connection.
- The appliance coupler (the connector to the unit and not the wall plug) must have a configuration for mating with an EN 60320/IEC 320 appliance inlet.

- The socket outlet must be near to the unit and easily accessible. You can only remove power from the unit by disconnecting the power cord from the outlet.
- This unit operates under SELV (Safety Extra Low Voltage) conditions according to IEC 60950. The conditions are only maintained if the equipment to which it is connected also operates under SELV conditions.

## CAUTIONARY MESSAGES

### Caution:



Fiber Optic Port Safety. When using a fiber optic port, never look at the transmit laser while it is powered on. Also, never look directly at the fiber TX port and fiber cable ends when they are powered on.

- This product does not contain any serviceable user parts.
- Installation and removal of the unit must be carried out by qualified personnel only.
- When connecting this device to a power outlet, connect the field ground lead on the tri-pole power plug to a valid earth ground line to prevent electrical hazards.
- This switch uses lasers to transmit signals over fiber optic cable. The lasers are compliant with the requirements of a Class 1 Laser Product and are inherently eye safe in normal operation. However, you should never look directly at a transmit port when it is powered on.
- Wear an anti-static wrist strap or take other suitable measures to prevent electrostatic discharge when handling this equipment.
- Do not plug a phone jack connector in the RJ-45 port. This may damage this device.
- Use only twisted-pair cables with RJ-45 connectors that conform to FCC standards.

For more information and safety instruction go to:

<http://www.supermicro.com/products/accessories/Networking/SSE-G3648B.cfm>