


# SUPERMICRO® SuperServer 5037MC-H12TRF Quick Reference Guide

## Board Layout

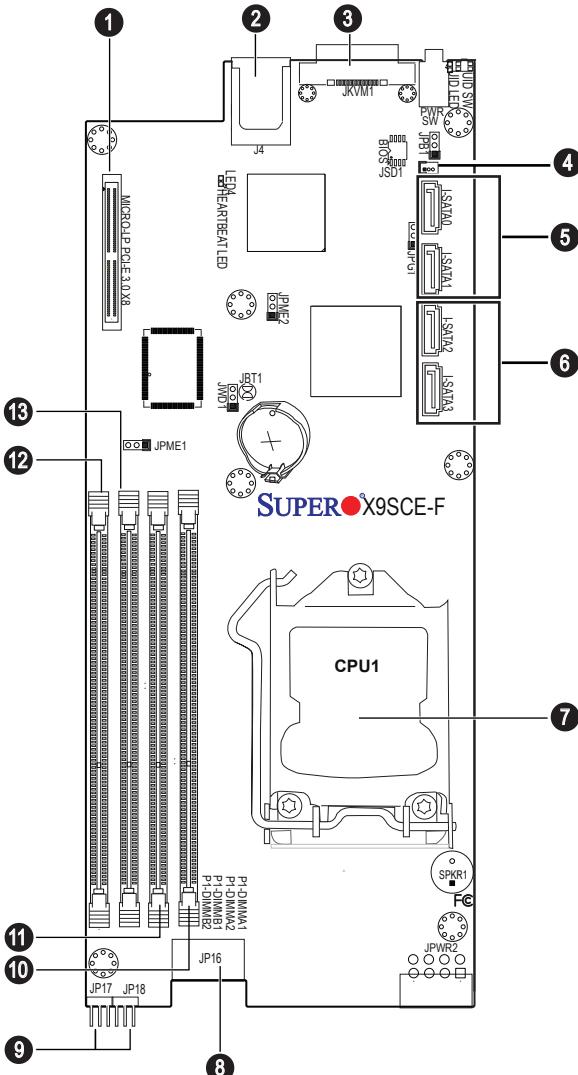

No.	Description
1	PCI-E 3.0 x8 (Micro LP Slot)
2	IPMI: RJ45 IPMI port
3	JKVM1: USB/VGA/COM port
4	JS1D1 = SATA DOM Power
5	SATA 3.0 Port: I-SATA 0/1
6	SATA 2.0 Port: I-SATA 2/3
7	CPU1

No.	Description
8	Power Output for HDD (12V & 5V)
9	JP17, JP18: Motherboard Interface to PCB
10	DIMMA1 slot
11	DIMMA2 slot
12	DIMMB1 slot
13	DIMMB2 slot

## Beep Codes

When a recoverable type of error occurs during POST, BIOS will display a POST code that describes the problem. BIOS may also issue one of the following beep codes:

1 long and two short beeps - video configuration error

1 repetitive long beep - no memory detected

1 continuous beep with the front panel Overheat LED on - system overheat


8 short beeps - display memory read/write error

## MEMORY

### Recommended Population (Balanced)

DIMMA2	DIMMB2	DIMMA1	DIMMB1	Total System Memory
2GB DIMM	2GB DIMM			4GB
2GB DIMM	2GB DIMM	2GB DIMM	2GB DIMM	8GB
4GB DIMM	4GB DIMM			8GB
4GB DIMM	4GB DIMM	4GB DIMM	4GB DIMM	16GB
8GB DIMM	8GB DIMM			16GB
8GB DIMM	8GB DIMM	8GB DIMM	8GB DIMM	32GB



### Corresponding Nodes, Fans and Hard Drives

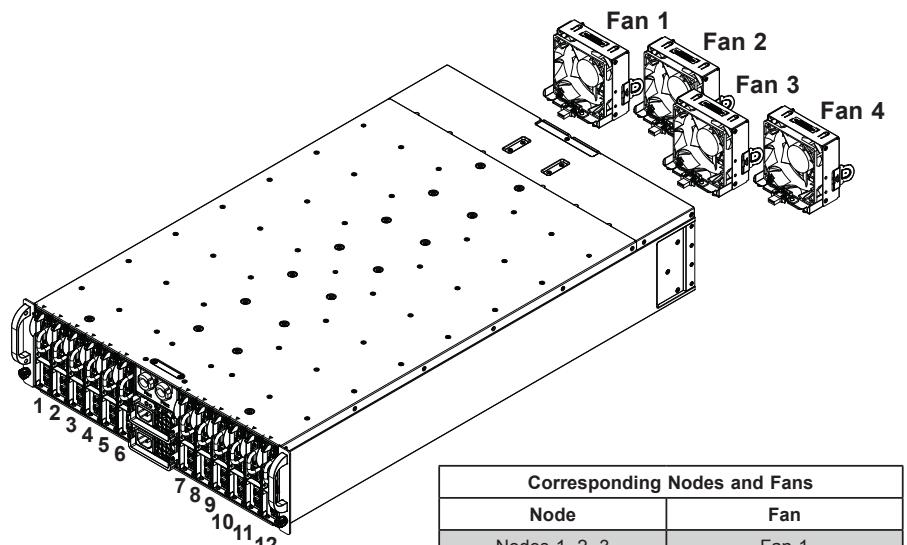

#### Corresponding Nodes and Fans


Node	Fan
Nodes 1, 2, 3	Fan 1
Nodes 4, 5, 6	Fan 1
Nodes 7, 8, 9	Fan 2
Nodes 10, 11, 12	Fan 4

## LED Indicator

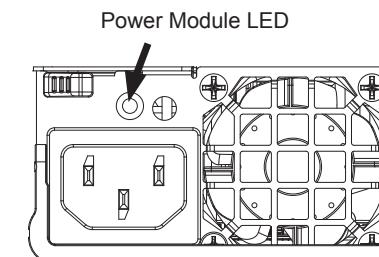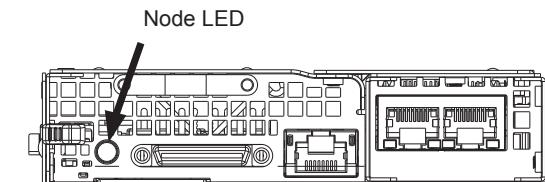

LED Appearance	Description
Green	The power module is on and operating normally
Amber	The system is off, the power module is not turned on or needs service
Off	AC power is not connected to the power module or the module needs service

## Front View

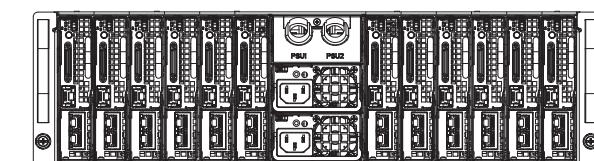


LED Appearance	Description
Green	The node is powered on and operating normally
Solid Red	The node is detecting an overheat condition
1Hz Blinking Red	The node is detecting a fan failure
.25Hz Blinking Red	The node is detecting a power failure
No Illumination	The node is powered down

## Installing/Removing Hard Drives

### Installing/Removing Hard Drives from the Sled


1. Remove the node to have 2.5 or 3.5 HDDs installed or removed by following the procedure in the previous section.
2. Place the sled on a flat, non-conductive surface.
3. Insert the hard drive with the printed circuit board side facing downward so that the mounting holes in the drive align with those in the bottom of the sled.
4. Secure the hard drive to the sled with the screws included with the drive.
5. When finished installing or removing drives, push the node/sled back into the bay it was removed from.
6. Use the node's power to power it back on.

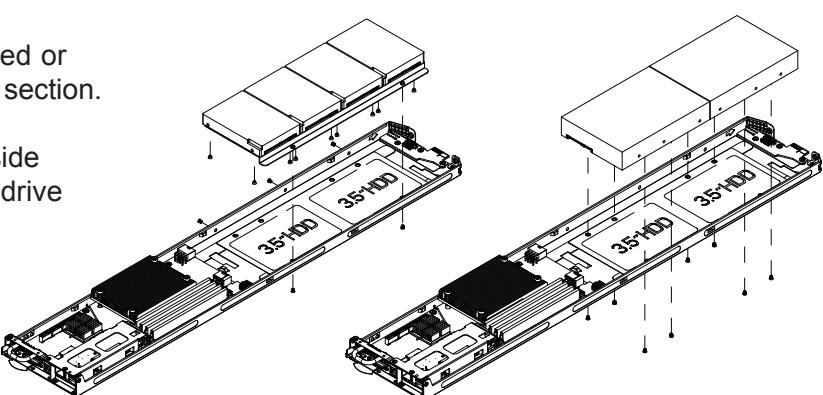

2.5" Hard Drives (Optional)


3.5" Hard Drives

## CPU Installation

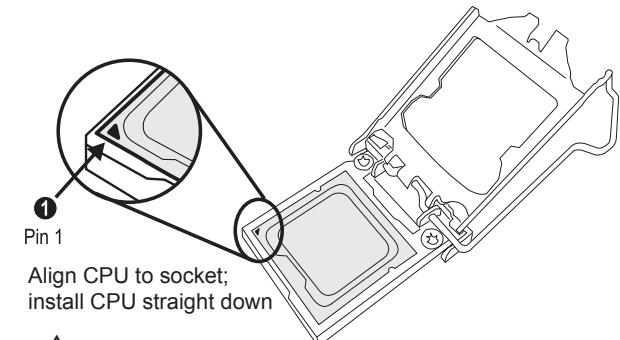

**NOTE:**  
Align CPU to socket; install CPU straight down  
Do not bend pin inside socket

## Heatsink Installation

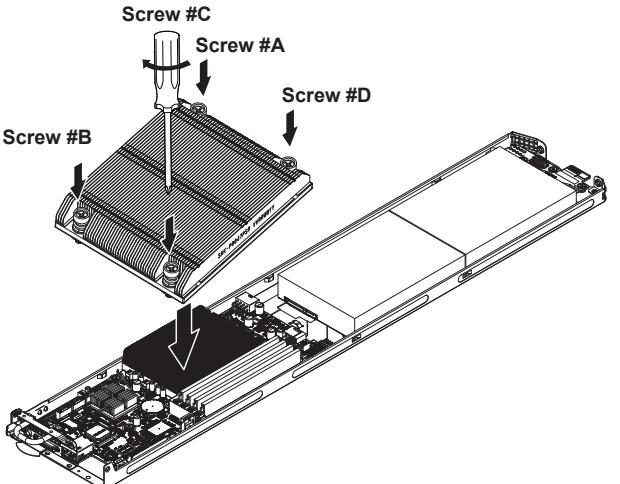

1. Place heatsink on top of installed CPU
2. Line up the four screws to socket
3. Push down heatsink and screw down as shown (cross pattern, in order: A, C, B, D)
4. NOTE: Only use 6-8 lb/f of torque; otherwise, hand-tighten each screw, to avoid damaging the system

## Caution

**SAFETY INFORMATION**  
IMPORTANT: See installation instructions and safety warning before connecting system to power supply.  
[http://www.supermicro.com/about/policies/safety\\_information.cfm](http://www.supermicro.com/about/policies/safety_information.cfm)

**WARNING:**  
To reduce risk of electric shock/damage to equipment, disconnect power from server by disconnecting all power cords from electrical outlets.  
If any CPU socket empty, install protective plastic CPU cap

**CAUTION:**  
Always be sure all power supplies for this system have the same power output. If mixed power supplies are installed, the system will not operate.

For more information go to :  
<http://www.supermicro.com/support>

