



A+ SERVER AS -3015MR-H8TNR



USER'S MANUAL

Revision 1.0d

The information in this User's Manual has been carefully reviewed and is believed to be accurate. The vendor assumes no responsibility for any inaccuracies that may be contained in this document, and makes no commitment to update or to keep current the information in this manual, or to notify any person or organization of the updates. Please Note: For the most up-to-date version of this manual, please see our website at www.supermicro.com.

Super Micro Computer, Inc. ("Supermicro") reserves the right to make changes to the product described in this manual at any time and without notice. This product, including software and documentation, is the property of Supermicro and/or its licensors, and is supplied only under a license. Any use or reproduction of this product is not allowed, except as expressly permitted by the terms of said license.

IN NO EVENT WILL Super Micro Computer, Inc. BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, SPECULATIVE OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OR INABILITY TO USE THIS PRODUCT OR DOCUMENTATION, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN PARTICULAR, SUPER MICRO COMPUTER, INC. SHALL NOT HAVE LIABILITY FOR ANY HARDWARE, SOFTWARE, OR DATA STORED OR USED WITH THE PRODUCT, INCLUDING THE COSTS OF REPAIRING, REPLACING, INTEGRATING, INSTALLING OR RECOVERING SUCH HARDWARE, SOFTWARE, OR DATA.

Any disputes arising between manufacturer and customer shall be governed by the laws of Santa Clara County in the State of California, USA. The State of California, County of Santa Clara shall be the exclusive venue for the resolution of any such disputes. Supermicro's total liability for all claims will not exceed the price paid for the hardware product.

FCC Statement: This equipment has been tested and found to comply with the limits for a Class A or Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in industrial environment for Class A device or in residential environment for Class B device. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer's instruction manual, may cause harmful interference with radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case you will be required to correct the interference at your own expense.

California Best Management Practices Regulations for Perchlorate Materials: This Perchlorate warning applies only to products containing CR (Manganese Dioxide) Lithium coin cells. "Perchlorate Material-special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate".



WARNING: This product can expose you to chemicals including lead, known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

The products sold by Supermicro are not intended for and will not be used in life support systems, medical equipment, nuclear facilities or systems, aircraft, aircraft devices, aircraft/emergency communication devices or other critical systems whose failure to perform be reasonably expected to result in significant injury or loss of life or catastrophic property damage. Accordingly, Supermicro disclaims any and all liability, and should buyer use or sell such products for use in such ultra-hazardous applications, it does so entirely at its own risk. Furthermore, buyer agrees to fully indemnify, defend and hold Supermicro harmless for and against any and all claims, demands, actions, litigation, and proceedings of any kind arising out of or related to such ultra-hazardous use or sale.

Manual Revision 1.0d

Release Date: June 11, 2026

Unless you request and receive written permission from Super Micro Computer, Inc., you may not copy any part of this document. Information in this document is subject to change without notice. Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders.

Copyright © 2026 by Super Micro Computer, Inc.
All rights reserved.

Printed in the United States of America

Preface

About this Manual

This manual is written for professional system integrators and PC technicians. It provides information for the installation and use of the server. Installation and maintenance should be performed by certified service technicians only.

Please refer to the AS -3015MR-H8TNR server specifications page on our website for updates on supported memory, processors and operating systems (<http://www.supermicro.com>).

Notes

For your system to work properly, please follow the links below to download all necessary drivers/utilities and the user's manual for your server.

- Supermicro product manuals: <http://www.supermicro.com/support/manuals/>
- Product drivers and utilities: <https://www.supermicro.com/wdl/driver>
- Product safety info: http://www.supermicro.com/about/policies/safety_information.cfm

If you have any questions, please contact our support team at:
support@supermicro.com

This manual may be periodically updated without notice. Please check the Supermicro website for possible updates to the manual revision level.

Secure Data Deletion

A secure data deletion tool designed to fully erase all data from storage devices can be found on our website: https://www.supermicro.com/about/policies/disclaimer.cfm?url=/wdl/utility/Lot9_Secure_Data_Deletion_Utility/

Warnings

Special attention should be given to the following symbols used in this manual.



Warning! Indicates important information given to prevent equipment/property damage or personal injury.



Warning! Indicates high voltage may be encountered when performing a procedure.



Warning! Indicates hazardous moving parts may be encountered while handling a fan or components near a fan.

Contents

Contacting Supermicro.....	8
Chapter 1 Introduction	
1.1 Overview.....	9
1.2 System Features	10
Control Panel	11
Rear View.....	12
Connecting to a Node.....	13
Node Trays	13
1.3 System Architecture	14
Main Components	14
System Block Diagram.....	15
1.4 Motherboard Layout	16
Quick Reference Table.....	17
Chapter 2 Server Installation	
2.1 Overview.....	18
2.2 Unpacking the System	18
2.3 Preparing for Setup.....	18
Choosing a Setup Location.....	18
Rack Precautions	19
Server Precautions.....	19
Rack Mounting Considerations	20
Ambient Operating Temperature.....	20
Airflow	20
Mechanical Loading.....	20
Circuit Overloading	21
Reliable Ground.....	21
2.4 Installing the Rails	22
Identifying the Rails	22
Releasing the Inner Rail	23
Installing the Inner Rails	24
Installing the Outer Rails onto the Rack.....	25
2.5 Installing the Server into a Rack	26
Removing the Server from the Rack	27

Chapter 3 Maintenance and Component Installation

3.1 Powering Down the System	28
3.2 Accessing the System.....	29
Removing the Top Cover.....	29
Nodes	30
3.3 Static-Sensitive Devices.....	32
Precautions	32
3.4 Processor and Heatsink Installation.....	33
The Single AMD Ryzen Zen4 7000 Series Processor.....	33
Overview of the Processor Socket.....	34
Overview of the Heatsink.....	35
Installing the Processor.....	36
Installing the Heatsink.....	39
3.5 Memory.....	41
Memory Support.....	41
General Guidelines for Optimizing Memory Performance	41
DIMM Installation	43
DIMM Removal	43
3.6 CMOS Battery Removal and Installation	44
3.7 Chassis Components	45
Storage Drives	45
System Cooling	46
Fans.....	46
Air Shroud.....	47
Power Supply	48
3.8 BMC	49

Chapter 4

Motherboard Connections

4.1 Power Connections	50
4.2 Headers and Connectors	50
4.3 Input/Output Ports	53
4.4 Jumpers.....	55

4.5 LED Indicators.....	58
Chapter 5 Software	
5.1 Microsoft Windows OS Installation.....	59
5.2 Driver Installation.....	61
5.3 SuperDoctor® 5.....	62
5.4 BMC.....	63
BMC ADMIN User Password	63
Chapter 6 Optional Components	
6.1 Optional Parts List.....	64
6.2 Network Cards.....	64
6.3 Storage Control Cards	65
6.4 Software	65
Chapter 7 Troubleshooting and Support	
7.1 Information Resources	66
Website	66
Direct Links for the AS -3015MR-H8TNR System	66
Direct Links for General Support and Information	66
7.2 Baseboard Management Controller Interface.....	67
7.3 Troubleshooting Procedures	69
No Power	69
No Video	69
System Boot Failure	70
Memory Errors	70
Losing the System's Setup Configuration.....	70
When the System Becomes Unstable	70
7.4 BIOS Error Beep (POST) Codes	72
Additional BIOS POST Codes	72
7.5 Crash Dump Using BMC.....	73
7.6 UEFI BIOS Recovery	74
Overview	74
Recovering the UEFI BIOS Image.....	74
Recovering the Main BIOS Block with a USB Device.....	74
7.7 CMOS Clear	79

7.8 Where to Get Replacement Components80

7.9 Reporting an Issue80

 Technical Support Procedures80

 Returning Merchandise for Service.....80

 Vendor Support Filing System81

7.10 Feedback.....81

7.11 Contacting Supermicro82

Appendix A Standardized Warning Statements for DC Systems

Appendix B System Specifications

BSMI/RoHs121

Contacting Supermicro

Headquarters

Address: Super Micro Computer, Inc.
980 Rock Ave.
San Jose, CA 95131 U.S.A.

Tel: +1 (408) 503-8000

Fax: +1 (408) 503-8008

Email: marketing@supermicro.com (General Information)
Sales-USA@supermicro.com (Sales Inquiries)
Government_Sales-USA@supermicro.com (Gov. Sales Inquiries)
support@supermicro.com (Technical Support)
RMA@supermicro.com (RMA Support)
Webmaster@supermicro.com (Webmaster)

Website: www.supermicro.com

Europe

Address: Super Micro Computer B.V.
Het Sterrenbeeld 28, 5215 ML
's-Hertogenbosch, The Netherlands

Tel: +31 (0) 73-6400390

Fax: +31 (0) 73-6416525

Email: Sales_Europe@supermicro.com (Sales Inquiries)
Support_Europe@supermicro.com (Technical Support)
RMA_Europe@supermicro.com (RMA Support)

Website: www.supermicro.nl

Asia-Pacific

Address: Super Micro Computer, Inc.
3F, No. 150, Jian 1st Rd.
Zhonghe Dist., New Taipei City 235
Taiwan (R.O.C)

Tel: +886-(2) 8226-3990

Fax: +886-(2) 8226-3992

Email: Sales-Asia@supermicro.com.tw (Sales Inquiries)
Support@supermicro.com.tw (Technical Support)
RMA@supermicro.com.tw (RMA Support)

Website: www.supermicro.com.tw

Chapter 1

Introduction

1.1 Overview

This chapter provides a brief outline of the functions and features of the SuperServer AS -3015MR-H8TNR. The system is based on the H13SRD-F motherboard and the CSE-938NH-R2K20BP2 chassis.

The following provides an overview of the specifications and capabilities.

System Overview	
Motherboard	H13SRD-F
Chassis	CSE-938NH-R2K20BP2
Processor	Single AMD Ryzen Zen4 7000 Series Processor in an AM5 socket
Memory	Up to 128GB of ECC and non-ECC DDR5 UDIMM memory with speeds of 5200 MT/s in four DIMM slots
Drive Support	Sixteen 3.5" or 2.5" hybrid U.2 NVMe/SAS/SATA drive bays with optional kits (two drives per node)
Expansion Slots	Eight Standard LP PCIe 5.0 x8 slots, which can support up to 75W power (one slot per node) Eight Micro-LP PCIe 5.0 x8 slot with two USB 2.0 support (one slot per node) Eight NVMe M.2 M-Key 2280/22110 PCIe 5.0 x2 slots (one slot per node)
I/O Ports	One KVM connector One USB 3.2 Type C port One Dedicated IPMI LAN (one per system)
System Cooling	Four 8-cm heavy duty fans
Power	Two redundant power supply modules 2200W (Titanium Level)
Form Factor	3U rackmount: 5.21 x 17.26 x 23.2in. / 132 x 438 x 589mm

Notes: A Quick Reference Guide can be found on the product page of the Supermicro website.

The following safety models associated with the AS -3015MR-H8TNR have been certified as compliant with UL or CSA: 938-R22H13, 938-22.

1.2 System Features

The CSE-938NH-R2K20BP2 is a 3U chassis that supports 16 front hot-swap drives and eight rear hot-plug nodes.

Front View



Figure 1-1. System: Front View

System Features: Front	
Feature	Description
Control Panels	Power buttons and status indicators; details on the next page
Storage Drives	Sixteen 3.5" drive bays, two for each computing node; drive carriers display status lights

Drive Carrier LED Indicator			
LED	Color	Blinking Pattern	Behavior for Device
Activity LED	Blue	Solid On	SAS/NVMe drive installed
	Blue	Blinking	I/O activity
Status LED	Red	Solid On	Failure of drive with RSTe support
	Red	Blinking at 1 Hz	Rebuild drive with RSTe support
	Red	Blinking with two blinks and one stop at 1 Hz	Hot spare for drive with RSTe support (not supported in VMD mode)
	Red	On for five seconds, then off	Power on for drive with RSTe support
	Red	Blinking at 4 Hz	Identify drive with RSTe support
	Green	Solid On	Safe to remove NVMe device (not supported in VMD mode)
	Amber	Blinking at 1 Hz	Attention state---do not remove NVMe device (not supported in VMD mode)

Control Panel

The chassis front features a control panel to monitor node function and power off and on the entire system.



Figure 1-2. Control Panel

Control Panel Features		
Item	Feature	Description
1	Node Status Indicators	Eight numbered LEDs that indicate the status of each node (see table below).
2	Power Fail LED	Illuminated when one of the power supplies fails while any node is powered on. It is off during normal operation.
3	Main Power button	Used to apply or remove power from the power supply to the server system. Whether on or off, standby power to the system remains on.

Node Activity LED Indicators	
LED Appearance	Description
Solid Green	The node is powered on and operating normally.
Blinking Green	The node is in the process of shutting down.
Solid Red	The node is detecting an overheated condition.
1Hz Blinking Red	The node is detecting a fan failure.
.25Hz Blinking Red	The node is detecting a power failure.
Solid Blue	The node local UID is on.
1Hz Blinking Blue	The node remote UID is on.
No Illumination	The node is powered down.

Rear View

Dedicated and Centralized BMC LAN Ports

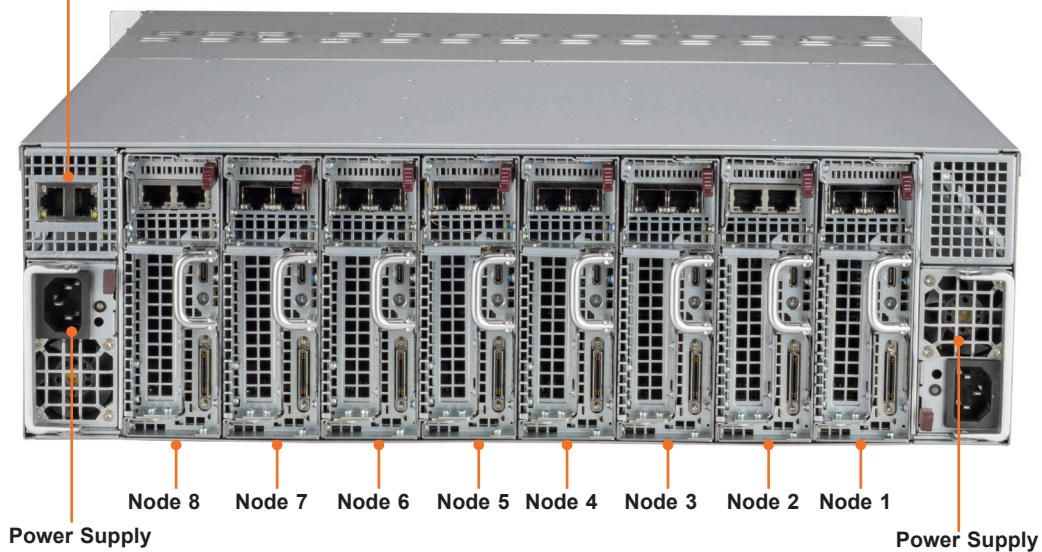


Figure 1-3. System: Rear View

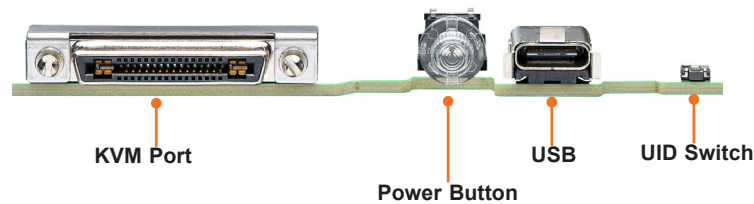


Figure 1-4. Node I/O Features

System Features: Rear	
Feature	Description
Nodes 1-8	Each node features a power button, two LAN ports and a KVM port
Power Supplies	Two redundant power supply modules, PWS1 on the left, PWS2 on the right
BMC LAN Ports	Dedicated and centralized ports in cascade or redundancy mode <i>Cascade</i> : connect the first port to a management device and the second port to another server <i>Redundancy</i> : connect each port to a different subnetwork switch Note : Do not connect both dedicated IPMI ports to the same network.
KVM Port	One VGA, one COM, and two USB 2.0 (with KVM dongle)
Power Button	Node power switch and indicator (green)
USB Port	USB Type C Port
UID Button	Toggle switch and LED indicator for Unit ID (blue)

Connecting to a Node

USB, COM, and VGA port capabilities can be added to any node through the KVM port on the rear. Plug in the adapter (dongle).

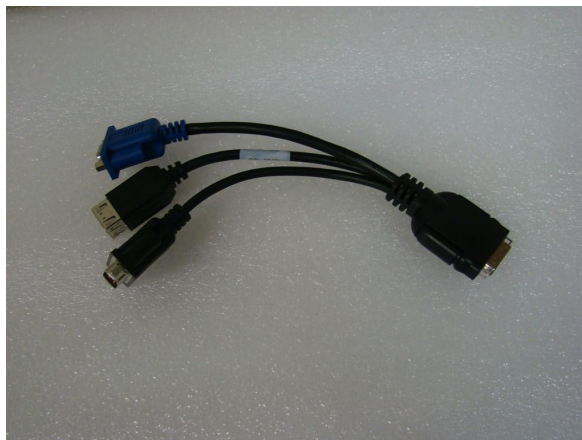


Figure 1-5. Adapter to Provide USB, COM, and VGA Ports

Node Trays

The chassis contains eight separate computing node drawers, each with its own motherboard.

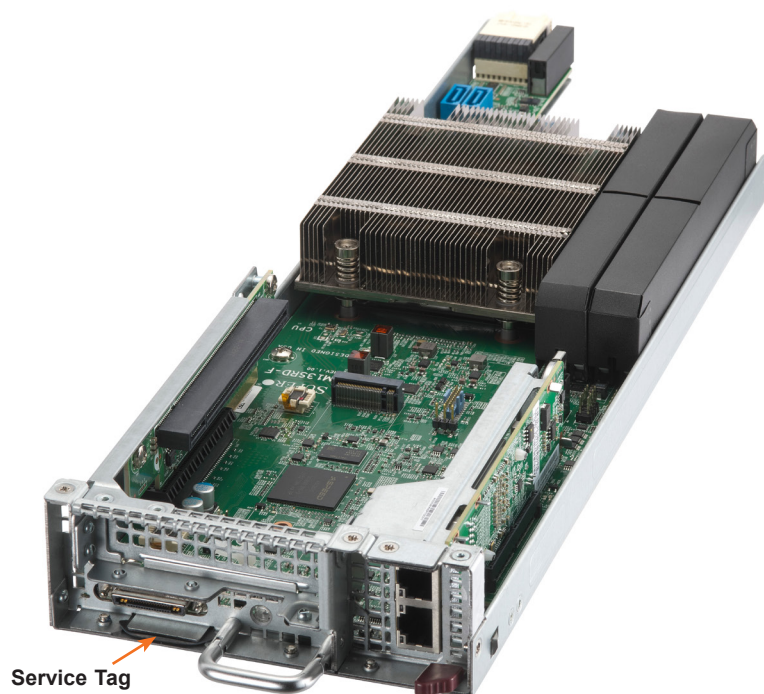


Figure 1-6. AS -3015MR-H8TNR Node Tray

BMC Password

Each node supports a pull-out server tag with a unique BMC Password Label. Extend the server tag and use the unique password to log into the BMC as the ADMIN user.

1.3 System Architecture

This section highlights the features on each node.

Main Components

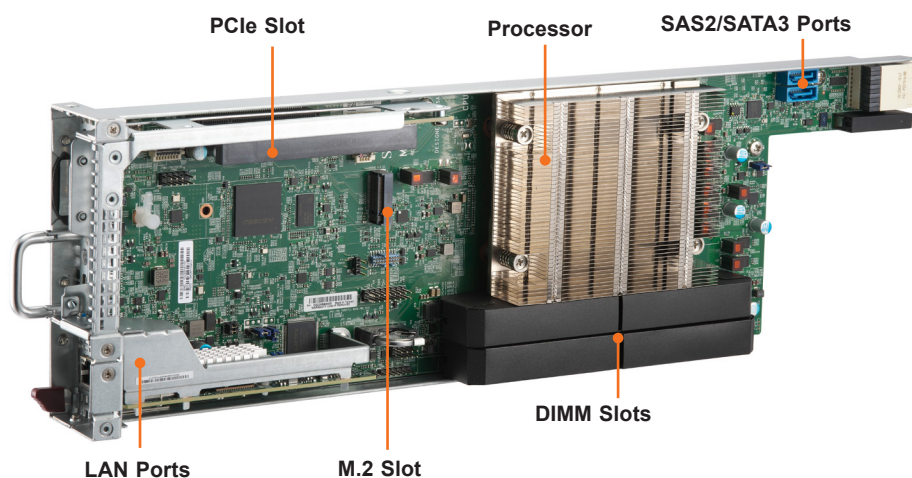


Figure 1-7. Node Features

Main Node Components	
Feature	Description
PCIe Slot	One PCIe 5.0 x8 (in x16) LP slot
Processor	Single AMD Ryzen Zen4 7000 Series Processor
SAS/SATA Ports	Two SAS2/SATA3 ports for AOC
DIMM Slots	Four DIMM slots DDR5 (ECC/non-ECC UDIMM)
M.2 Slot	One NVMe M.2 slot (2280/22110 form factor)
LAN Ports	Dual 1GbE/10GbE/25GbE PCIe 5.0 x8 LAN ports (Micro LP)

System Block Diagram

The block diagram below shows the connections and relationships between the subsystems and major components of the overall system.

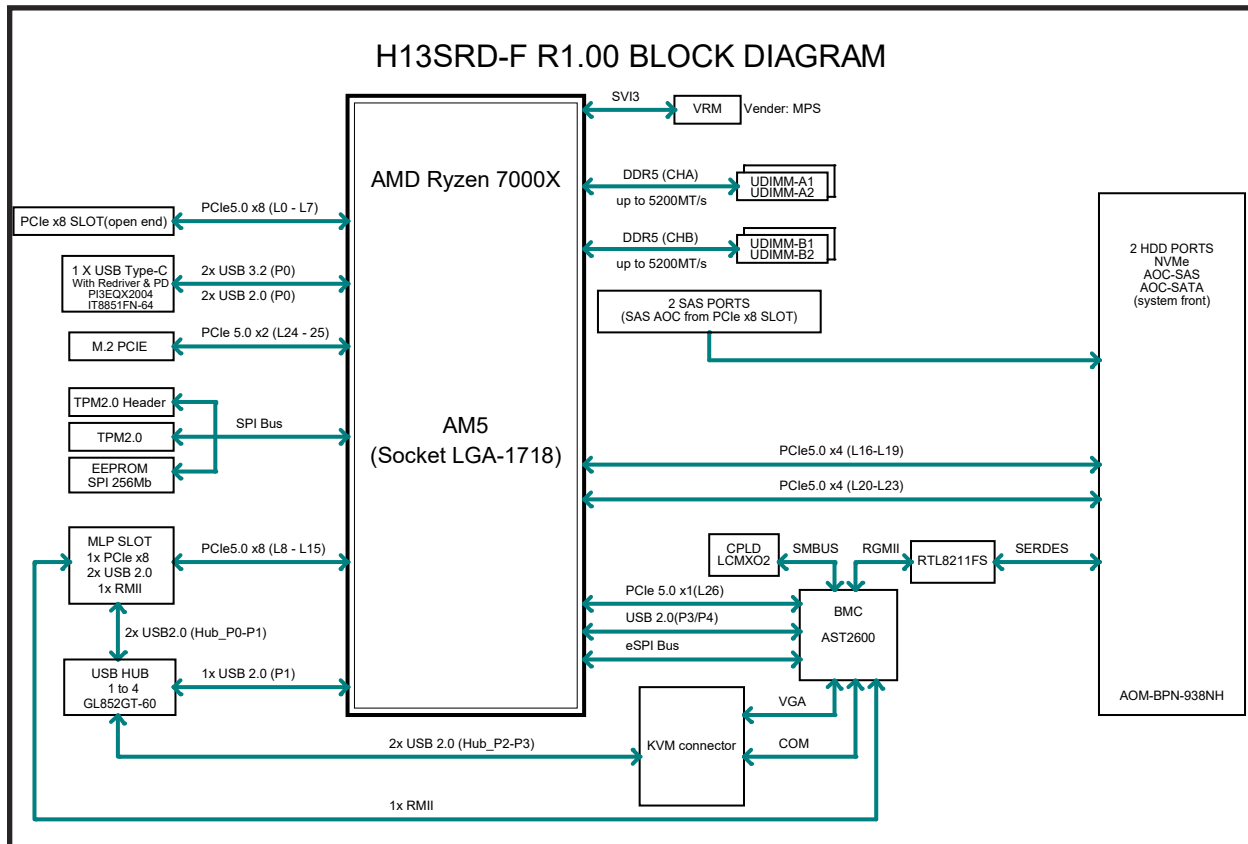


Figure 1-5. System Block Diagram

1.4 Motherboard Layout

Below is a layout of the H13SRD-F motherboard with jumper, connector and LED locations shown. See the table on the following page for descriptions. For detailed descriptions, pinout information and jumper settings, refer to [Chapter 4](#) or the [Motherboard Manual](#).

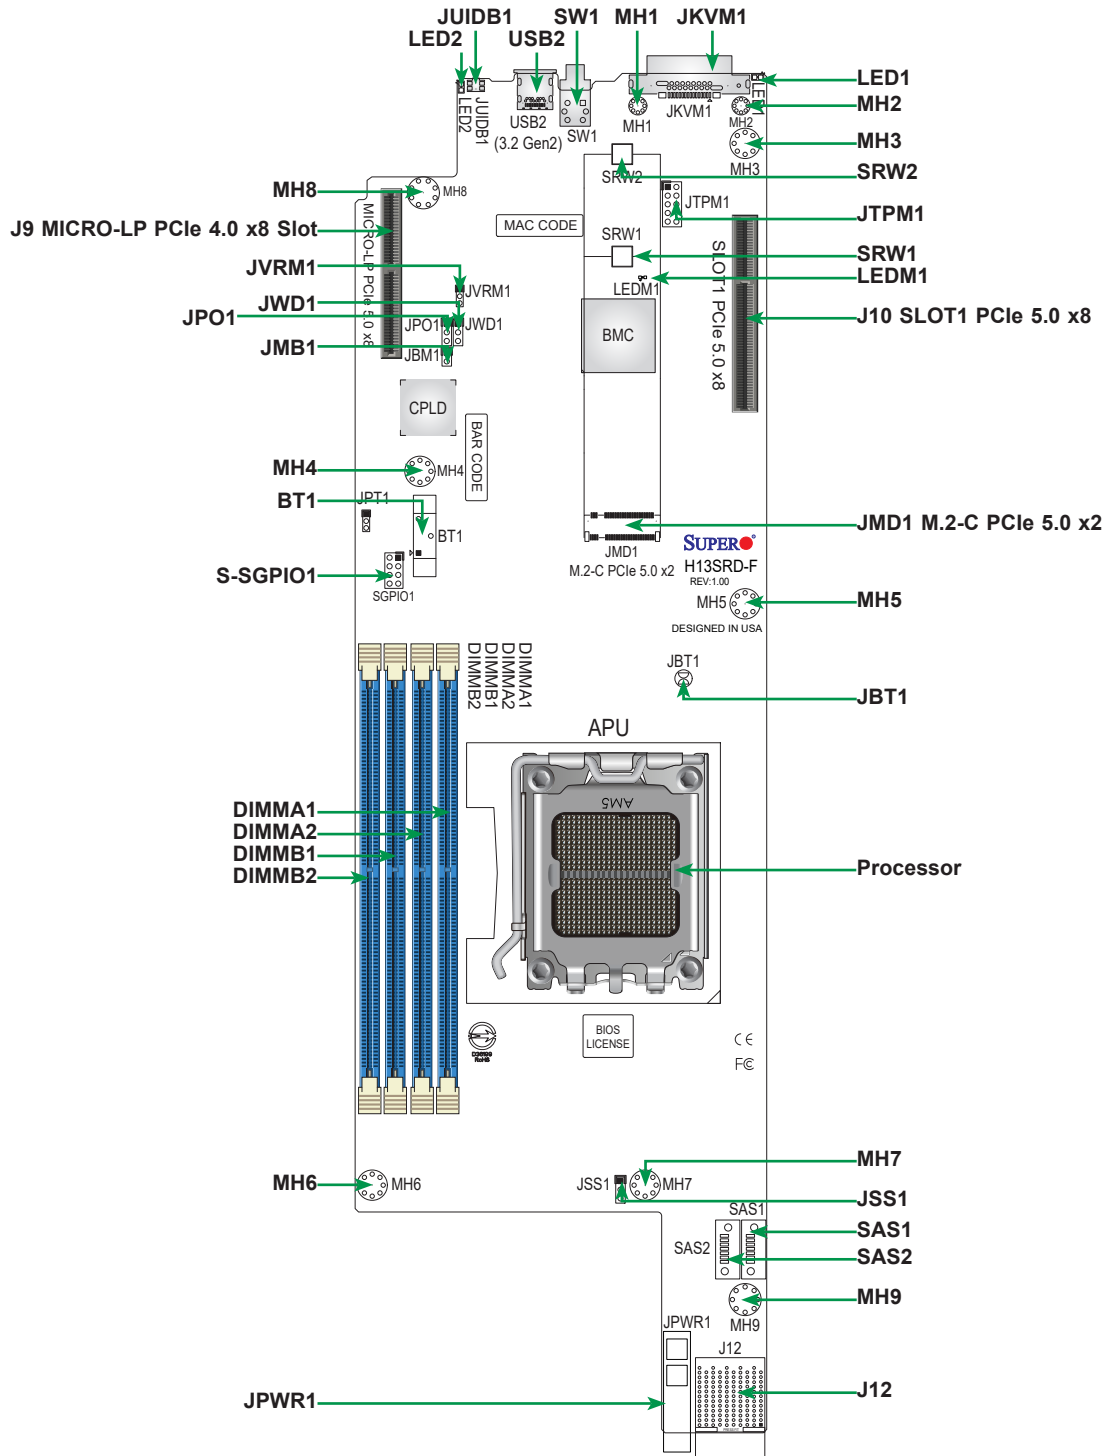


Figure 1-6. Motherboard Layout

Quick Reference Table

Jumper	Description	Default Setting
JBM1	Disable IPMI Share LAN	Pins 1-2 Open: Enabled
JPO1	CPU Throttle when PWR_FAIL	Pins 2-3: Disabled
JPT1	Onboard TPM 2.0 Enable/Disable	Pins 1-2: Enabled
JSS1	AOC SAS Enable/Disable	Pins 1-2: Disabled
JWD1	Watch Dog Timer	Pins 1-2: Reset

LED	Description	Status
LED1	OH/Power Fail/FAN Fail	Blinking Red: Power Fail or FAN Fail Solid Red: Overheat
LED2	Unit Identifier LED	Solid Blue: Unit Identified
LEDM1	BMC Heartbeat LED	Blinking Green: BMC Normal

Connector	Description
BT1	Onboard Battery
J9	Micro Low-Profile PCIe 5.0 x8 Slot with two USB 2.0
J10	PCIe 5.0 x8 Slot (Open-End support up to 75W)
J12	MicroCloud Backplane Connector for 2x PCIe 5.0 x4 / Dedicated IPMI LAN / 2x AOC SATA/SAS
JKVM1	KVM Connector for USB0/1, COM1, VGA
JMD1	M.2 M-Key 2280/22110 Slot (PCIe 5.0 x2)
JPWR1	12V Input Power Connector
JTPM1	Trusted Platform Module/Port 80 Connector
JUIDB1	UID Switch
SAS1, SAS2	AOC SATA/SAS Input Connector (Link to AOC SAS Card)
S-SGPIO1	Serial Link General Purpose I/O Header
SW1	Power Switch, Power LED
USB0/1	Two USB 2.0 Ports via JKVM1
USB2	USB 3.2 Gen2 Type C Connector

Chapter 2

Server Installation

2.1 Overview

This chapter provides advice and instructions for mounting your system in a server rack. If your system is not already fully integrated with processors, system memory etc., refer to [Chapter 3](#) for details on installing those specific components.

Important: Electrostatic Discharge (ESD) can damage electronic components. To prevent such damage to PCBs (printed circuit boards), it is important to use a grounded wrist strap, handle all PCBs by their edges and keep them in anti-static bags when not in use.

2.2 Unpacking the System

Inspect the box in which the AS -3015MR-H8TNR was shipped, and note if it was damaged in any way. If any equipment appears damaged, file a damage claim with the carrier who delivered it.

Decide on a suitable location for the rack unit that will hold the server. It should be situated in a clean, dust-free area that is well ventilated. Avoid areas where heat, electrical noise and electromagnetic fields are generated. It will also require a grounded AC power outlet nearby. Be sure to read the precautions and considerations noted in [Appendix A](#).

2.3 Preparing for Setup

The box in which the system was shipped should include the rackmount hardware needed to install it into the rack. Please read this section in its entirety before you begin the installation.

Choosing a Setup Location

- The system should be situated in a clean, dust-free area that is well ventilated. Avoid areas where heat, electrical noise and electromagnetic fields are generated.
- Leave enough clearance in front of the rack so that you can open the front door completely (~25 inches) and approximately 30 inches of clearance in the back of the rack to allow sufficient space for airflow and access when servicing.
- This product should be installed only in a Restricted Access Location (dedicated equipment rooms, service closets, etc.).

- This product is not suitable for use with visual display workplace devices according to §2 of the German Ordinance for Work with Visual Display Units.

Rack Precautions

- Ensure that the leveling jacks on the bottom of the rack are extended to the floor so that the full weight of the rack rests on them.
- In single rack installations, stabilizers should be attached to the rack. In multiple rack installations, the racks should be coupled together.
- Always make sure the rack is stable before extending a server or other component from the rack.
- You should extend only one server or component at a time - extending two or more simultaneously may cause the rack to become unstable.

Server Precautions

- Review the electrical and general safety precautions in [Appendix A](#).
- Determine the placement of each component in the rack *before* you install the rails.
- Install the heaviest server components at the bottom of the rack first and then work your way up.
- Use a regulating uninterruptible power supply (UPS) to protect the server from power surges and voltage spikes and to keep your system operating in case of a power failure.
- Allow any drives and power supply modules to cool before touching them.
- When not servicing, always keep the front door of the rack and all covers/panels on the servers closed to maintain proper cooling.

Rack Mounting Considerations



Warning! Stability hazard. The rack may tip over causing serious personal injury. Before extending the rack to the installation position, read the installation instructions. Do not put any load on the slide-rail mounted equipment in the installation position. Do not leave the slide-rail mounted equipment in the installation position.



Avertissement! Danger d'instabilité. Le rack peut basculer et provoquer des blessures corporelles graves. Avant d'étendre le rack en position d'installation, lire les instructions d'installation. Ne pas charger l'équipement monté sur rail de glissière en position d'installation. Ne pas laisser l'équipement monté sur rail de glissière en position d'installation.

Important: To prevent bodily injury when mounting or servicing this unit in a rack, you must take special precautions to ensure that the system remains stable. The following guidelines are provided to ensure your safety:

- If this unit is the only unit in the rack, it should be mounted at the bottom of the rack.
- When mounting this unit in a partially filled rack, load the rack from the bottom to the top with the heaviest component at the bottom of the rack.
- If the rack is provided with stabilizing devices, install the stabilizers before mounting or servicing the unit in the rack.
- Slide rail mounted equipment is not to be used as a shelf or a work space.
- Do not pick up the server with the front handles. They are designed to pull the system from a rack only.

Ambient Operating Temperature

If installed in a closed or multi-unit rack assembly, the ambient operating temperature of the rack environment may be greater than the room's ambient temperature. Therefore, consideration should be given to installing the equipment in an environment compatible with the manufacturer's maximum rated ambient temperature (TMRA).

Airflow

Equipment should be mounted into a rack so that the amount of airflow required for safe operation is not compromised.

Mechanical Loading

Equipment should be mounted into a rack so that a hazardous condition does not arise due to uneven mechanical loading.

Circuit Overloading

Consideration should be given to the connection of the equipment to the power supply circuitry and the effect that any possible overloading of circuits might have on overcurrent protection and power supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

Reliable Ground

A reliable ground must be maintained at all times. To ensure this, the rack itself should be grounded. Particular attention should be given to power supply connections other than the direct connections to the branch circuit (i.e. the use of power strips, etc.).

2.4 Installing the Rails

There are a variety of rack units on the market, which may require a slightly different assembly procedure. Do not use a two post "telco" type rack. This rail set fits a rack between 26.5" and 36.4" deep.

The following is a basic guideline for installing the system into a rack with the rack mounting hardware provided. You should also refer to the installation instructions that came with the specific rack you are using.

Identifying the Rails

The chassis package includes two rail assemblies. Each assembly consists of three sections: An inner rail that secures directly to the chassis, an outer rail that secures to the rack, and a middle rail which extends from the outer rail. These assemblies are specifically designed for the left and right side of the chassis and labeled.

Important: Do not pick up the server with the front handles. They are designed to pull the system from a rack only.

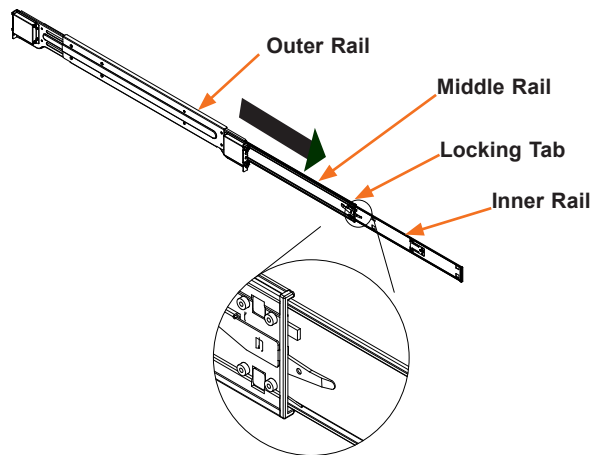


Figure 2-1. Identifying the Outer Rail, Middle Rail and Inner Rail
(Left Rail Assembly Shown)

Note: Both front chassis rails and the rack rails have a locking tab, which serves two functions. First, it locks the server into place when installed and pushed fully into the rack (its normal operating position). In addition, these tabs lock the server in place when fully extended from the rack. This prevents the server from coming completely out of the rack when pulled out for servicing.

Releasing the Inner Rail

Each inner rail has a locking latch. This latch prevents the server from coming completely out of the rack when the chassis is pulled out for servicing.

To mount the rail onto the chassis, first release the inner rail from the outer rails.

1. Pull the inner rail out of the outer rail until it is fully extended as illustrated below.
2. Press the locking tab down to release the inner rail.
3. Pull the inner rail all the way out.

Important: This figure is for illustrative purposes only. Always install servers to the bottom of a rack first.

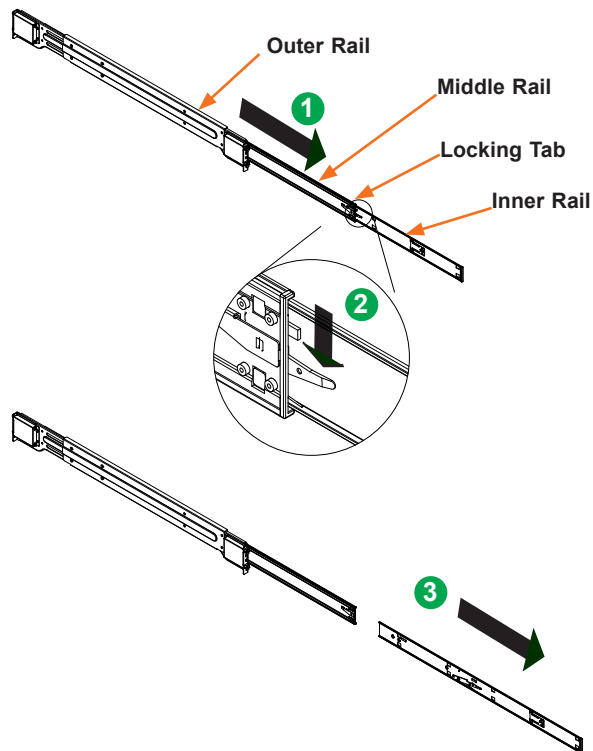


Figure 2-2. Extending and Releasing the Inner Rail

Installing the Inner Rails

Begin the rack mounting procedure by installing the inner rails to the chassis.

1. Identify the left and right inner rails. They are labeled.
2. Place the inner rail firmly against the side of the chassis, aligning the hooks on the side of the chassis with the holes in the inner rail.
3. Slide the inner rail forward toward the front of the chassis and under the hooks until the quick release bracket snaps into place, securing the rail to the chassis.

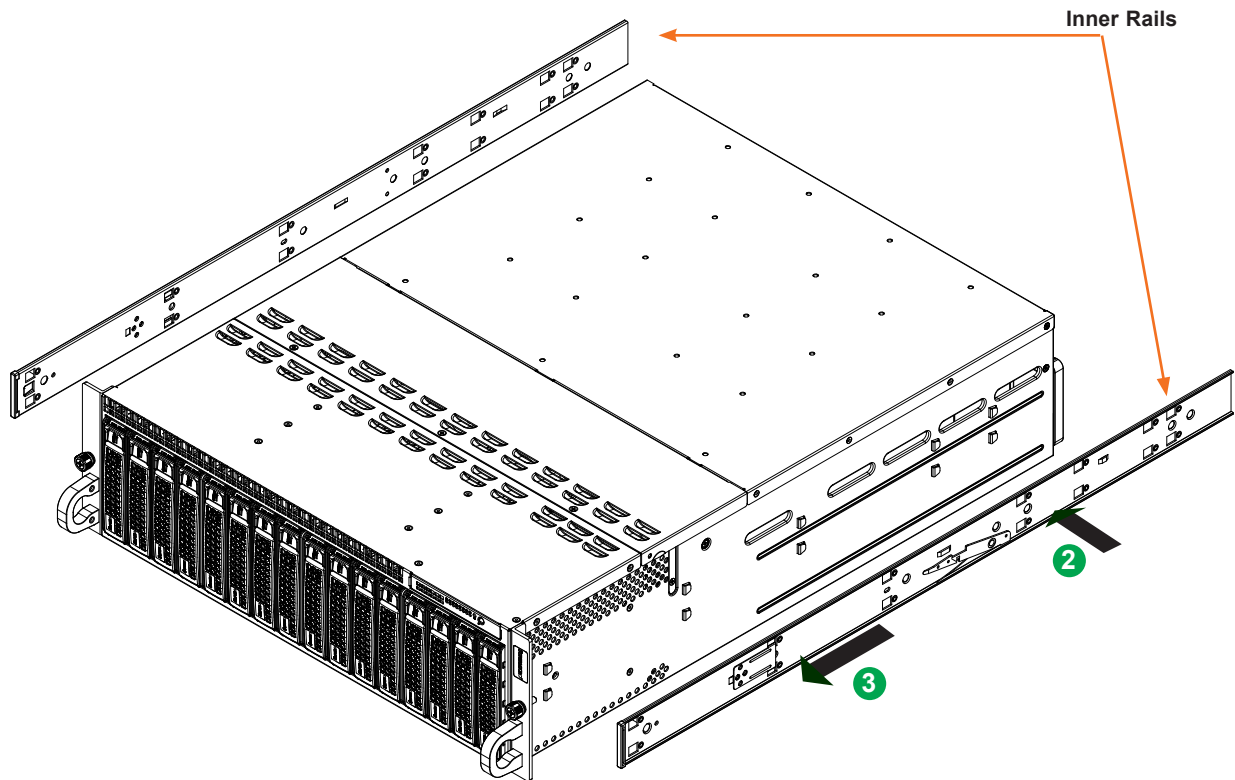


Figure 2-3. Installing the Rails

Installing the Outer Rails onto the Rack

Each end of the assembled outer rail includes a bracket with hooks and spring-loaded pegs to fit into the square holes in your rack.

Installing the Outer Rail

1. Press upward on the locking tab at the rear end of the middle rail.
2. Push the middle rail back into the outer rail.
3. Hang the hooks on the front of the outer rail onto the square holes on the front of the rack. If desired, use screws to secure the outer rails to the rack.
4. Pull out the rear of the outer rail, adjusting the length until it just fits within the posts of the rack.
5. Hang the hooks of the rear section of the outer rail onto the square holes on the rear of the rack. Take care that the proper holes are used so the rails are level. If desired, use screws to secure the rear of the outer rail to the rear of the rack.

Important: This figure is for illustrative purposes only. Always install servers to the bottom of a rack first.

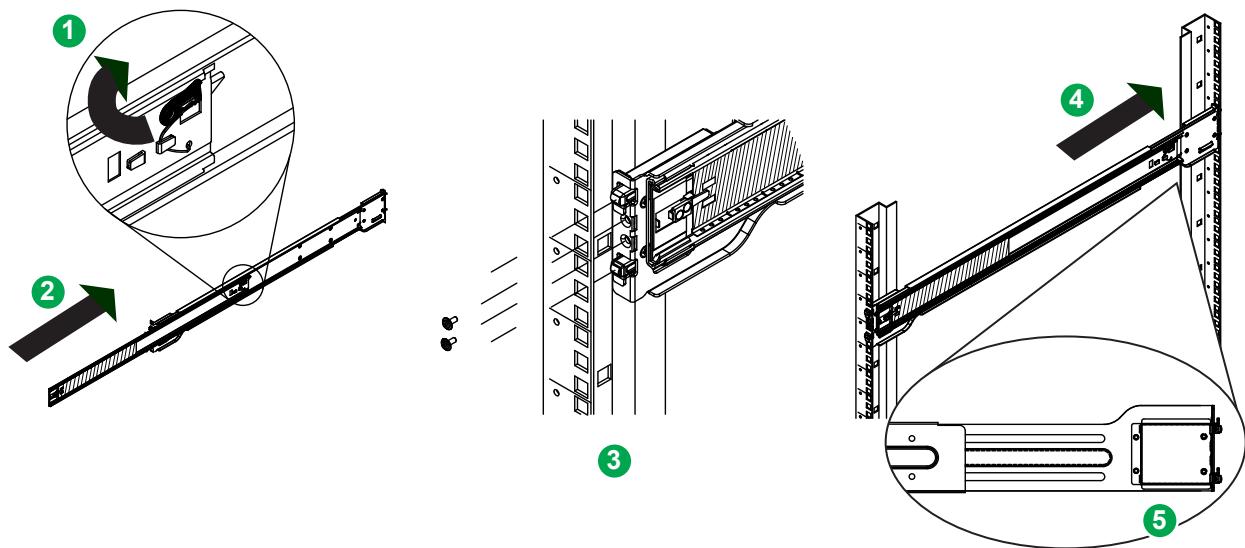


Figure 2-4. Extending and Mounting the Outer Rails

2.5 Installing the Server into a Rack

Once rails are attached to the chassis and the rack, you can install the server.

Important: Use caution when mounting or removing the system from the rack. For large systems, at least one other person must assist during installation or removal. Follow the safety recommendations printed on the rails. Depending on the size of the system, you might need to use a lift.

1. Pull the middle rail out of the front of the outer rail and make sure that the ball bearing shuttle is locked at the front of the middle rail.
2. Align the rear of the chassis rails with the middle rails and then push evenly on both sides of the chassis until it clicks into the fully extended position.
3. Depress the locking tabs on both sides of the chassis and push the it fully into the rack. The locking tabs should "click".
4. Optional screws may be used to hold the front of the chassis to the rack.

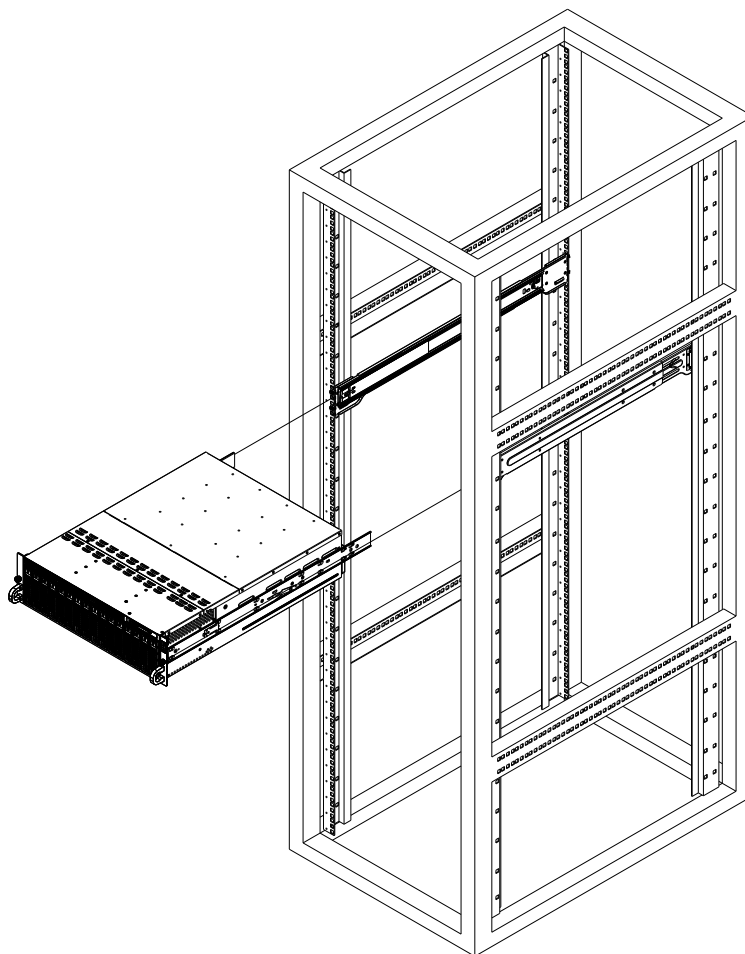


Figure 2-5. Installing the Server into the Rack

Important: This figure is for illustrative purposes only. Always install servers to the bottom of a rack first..

Removing the Server from the Rack

Important: Use caution when mounting or removing the system from the rack. For large systems, at least one other person must assist during installation or removal. Follow the safety recommendations printed on the rails. Depending on the size of the system, you might need to use a lift.

1. Pull the chassis forward out the front of the rack until it stops.
2. Press the release latches on each of the inner rails downward simultaneously and continue to pull the chassis forward and out of the rack.

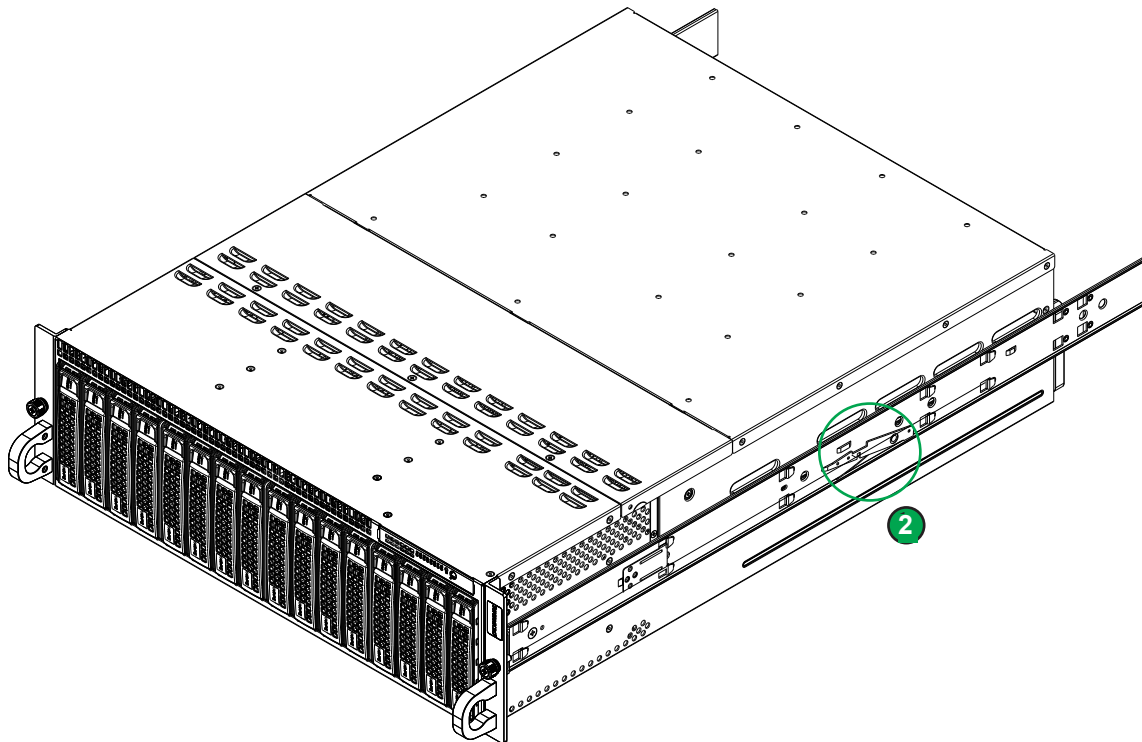


Figure 2-6. Removing the Server From the Rack

Chapter 3

Maintenance and Component Installation

This chapter provides instructions on installing and replacing main system components. To prevent compatibility issues, only use components that match the specifications and/or part numbers given.

Installation or replacement of most components require that power first be removed from the system. Please follow the procedures given in each section.

3.1 Powering Down the System

Use the following procedure to ensure that power has been removed from the system. This step is necessary when removing or installing non hot-swap components.

1. Use the operating system to power down the system.
2. After the system has completely shut down, disconnect the AC power cord(s) from the power strip or outlet and remove the AC power cords from all power supply modules.
3. Disconnect the power cord(s) from the power supply module(s).
4. When performing service on non hot-swap components, remove the system from the rack and place it on a bench or desk. Do not service with the system extended from the rack.

3.2 Accessing the System

The CSE-938NH chassis features a removable top cover, which allows easy access to the inside of the chassis.

Important: Except for short periods of time, do not operate the server without the cover in place. The chassis cover must be in place to allow for proper airflow and to prevent overheating.

Removing the Top Cover

1. If necessary, remove power from the system as described in Section 3.1.
2. Remove the three screws securing the cover to the chassis. See Figure 3-1.
3. Lift the cover from the chassis.

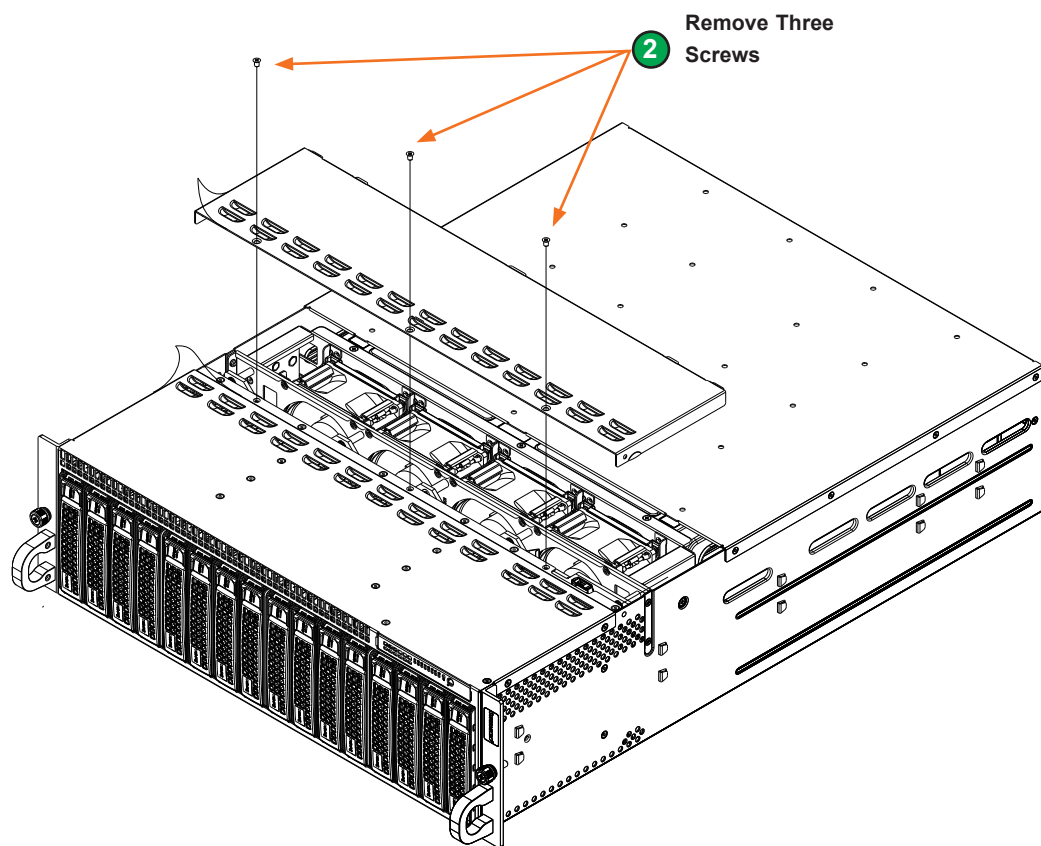


Figure 3-1. Removing the Chassis Cover

Nodes

The system includes eight removable computing nodes, each containing an individual motherboard. A node may be removed while other nodes continue to function.

Each node controls two storage drives and shares a fan with the node beside it. If a node is pulled out of the chassis, the storage drives associated with that node will power-down.

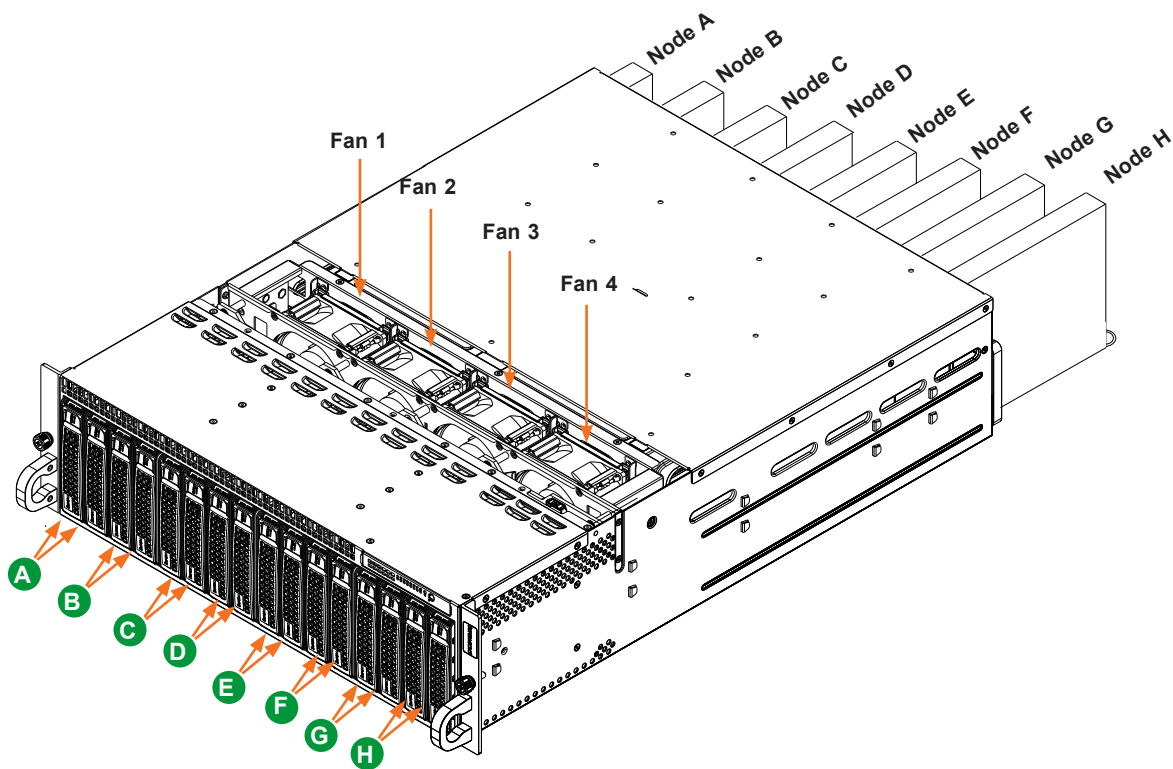


Figure 3-2. Corresponding Nodes, Fans and Storage Drives

Corresponding Nodes, Fans and Storage Drives		
Node	Fan	Storage Drives
Node A	Fan 1	Drives A1 and A2
Node B	Fan 1	Drives B1 and B2
Node C	Fan 2	Drives C1 and C2
Node D	Fan 2	Drives D1 and D2
Node E	Fan 3	Drives E1 and E2
Node F	Fan 3	Drives F1 and F2
Node G	Fan 4	Drives G1 and G2
Node H	Fan 4	Drives H1 and H2

Removing Nodes from the System

1. Power-down the individual node by pressing that node's power button.
2. Press and hold down the release tab on the front of the node.
3. Use the node handle to pull the node from the system.

Important: Except for short periods of time while swapping nodes, do not operate the server with the node bays empty. In the unlikely event of a node failure, remove the failed node and replace it with the dummy node that was included with the system.

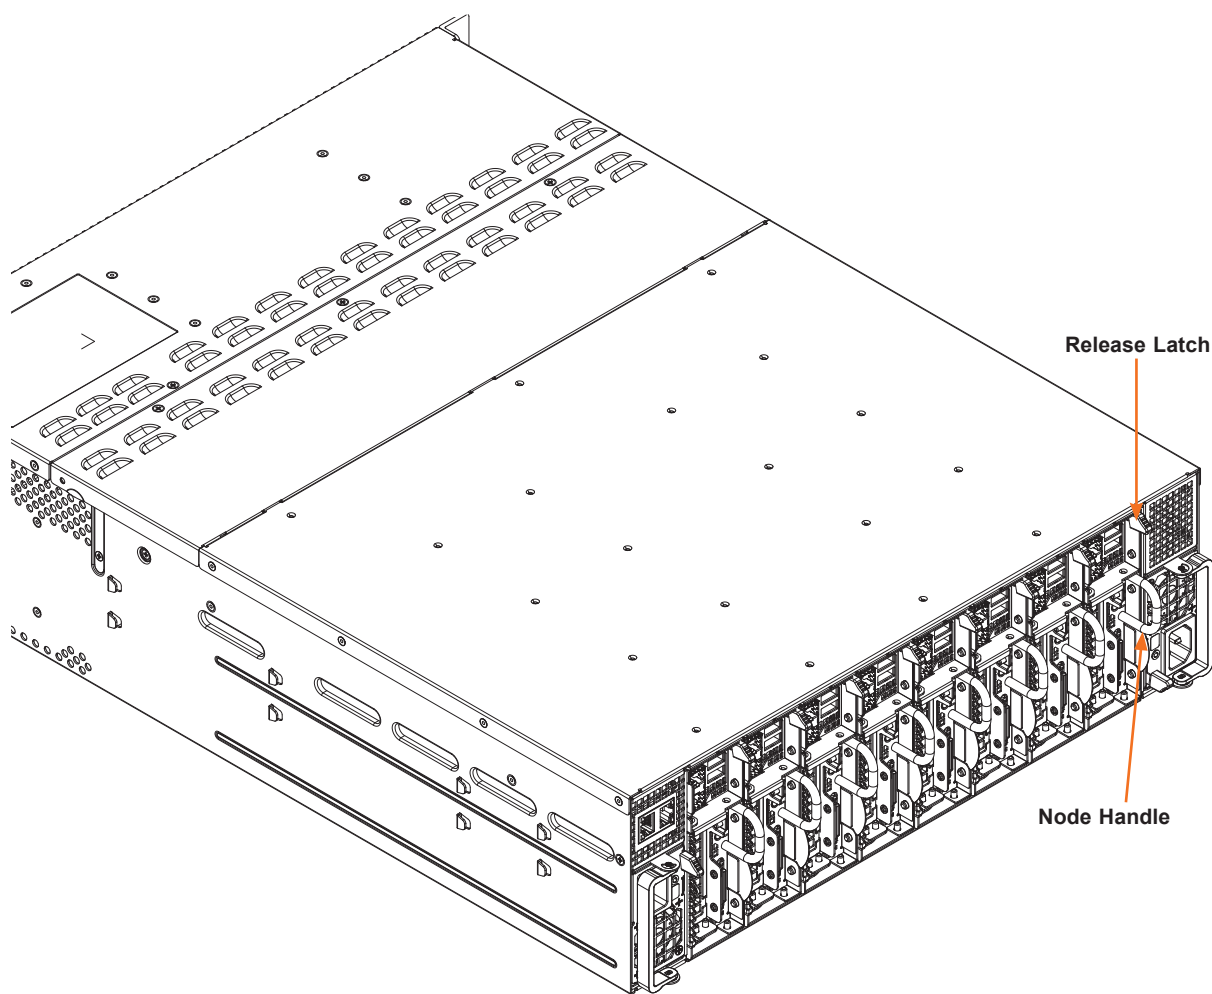


Figure 3-3. Removing a Node

3.3 Static-Sensitive Devices

Electrostatic Discharge (ESD) can damage electronic components. To avoid damaging your motherboard, it is important to handle it very carefully. The following measures are generally sufficient to protect the system PCBs from ESD.


Precautions

- Use a grounded wrist strap designed to prevent static discharge.
- Touch a grounded metal object before removing any PCB (printed circuit board) from its antistatic bag.
- Handle PCBs by their edges only; do not touch its components, peripheral chips, memory modules or gold contacts.
- When handling chips or modules, avoid touching their pins.
- Put the PCBs back into their antistatic bags when not in use.
- Use only the correct type of onboard CMOS battery. Do not install the onboard battery upside down to avoid possible explosion.

3.4 Processor and Heatsink Installation

Notes:

- Use ESD protection.
- Shut down the system and then unplug the AC power cord from all power supplies.
- Check that the plastic protective cover is on the processor socket and none of the socket pins are bent. If they are, contact your retailer.
- When handling the processor, avoid touching or placing direct pressure on the LGA lands (gold contacts). Improper installation or socket misalignment can cause serious damage to the processor or socket, which may require manufacturer repairs.
- Thermal grease is pre-applied on a new heatsink. No additional thermal grease is needed.
- Refer to the Supermicro website for updates on processor support.
- All graphics in this manual are for illustrations only. Your components may look different.
- Installing the processor does not require a screwdriver. Do not unscrew the processor socket.
- Installing the heatsink requires a Phillips #1 screwdriver.
- When installing the processor and heatsink, ensure a torque driver set to the correct force is used for each screw.

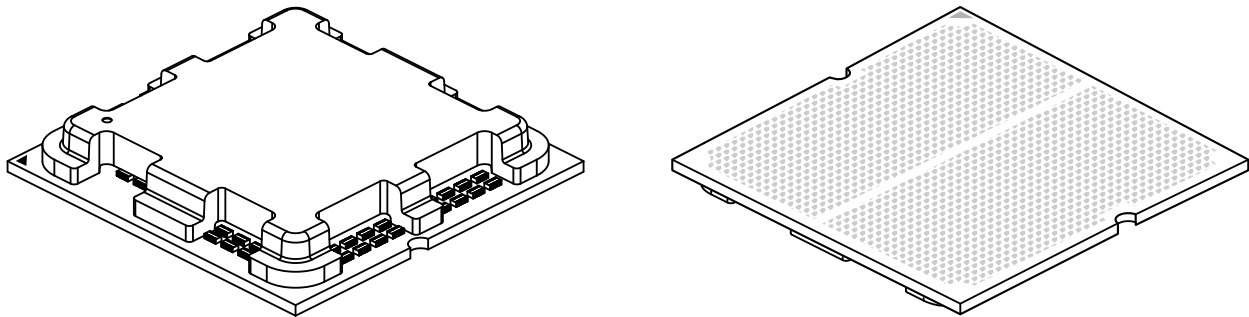


The Single AMD Ryzen Zen4 7000 Series Processor


Overview of the Processor Socket

The processor socket is protected by an outer plastic protective cover. If the motherboard is new, the socket will also be protected by an inner plastic cover.


1. Outer Plastic Cover

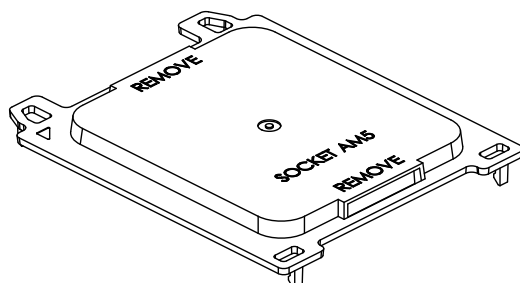

2. Inner Plastic Cover


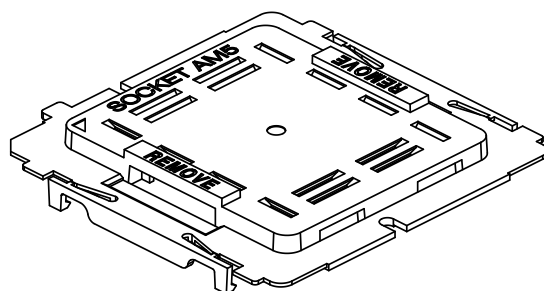


3. Socket AM5

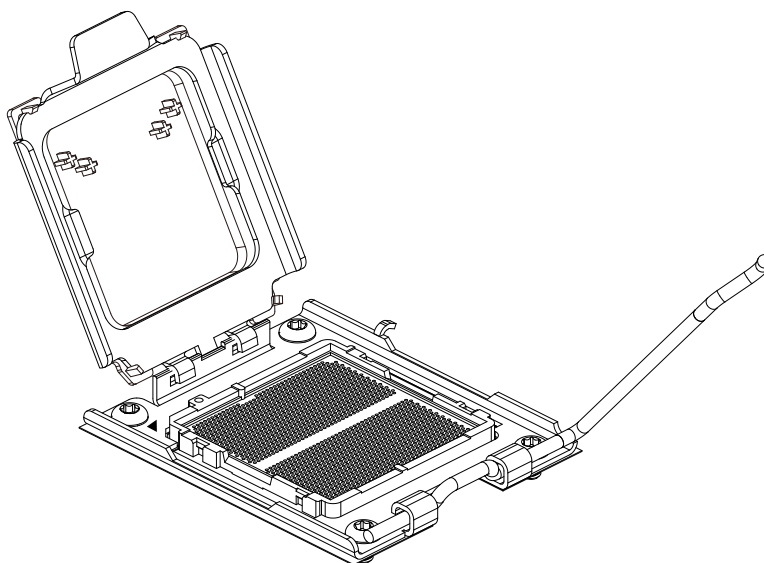

Overview of the Heatsink


The heatsink is attached to the socket with Phillips #1 screws after the processor is secured. If this is a new heatsink, thermal grease is pre-applied.

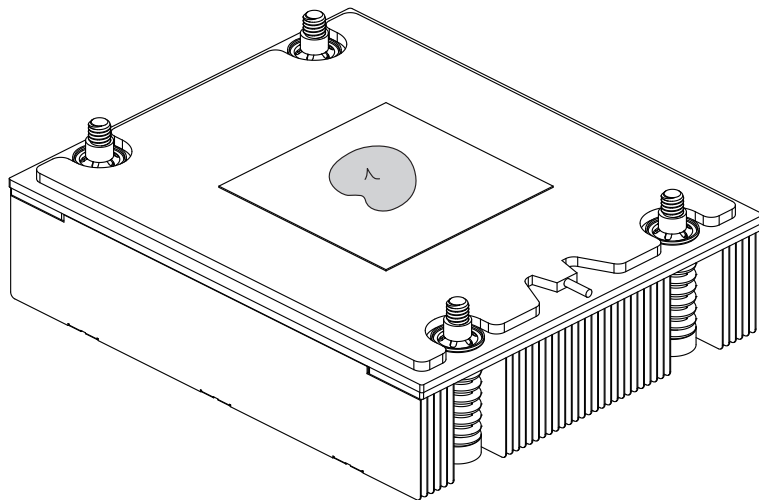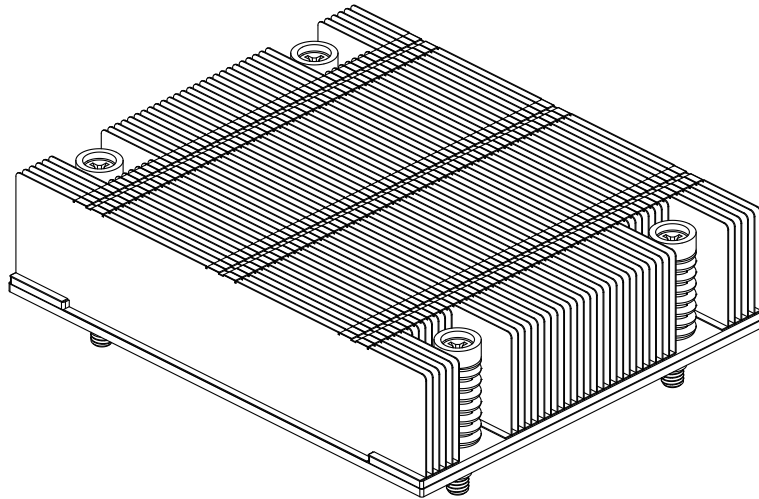

Installing the Processor


Note: Do not remove the plastic cover covering the outside of the socket. This cover will pop out during installation of the processor.

1. Use a finger to push down the lever, then move the lever rightward. Pull the lever until it passes over the processor socket.

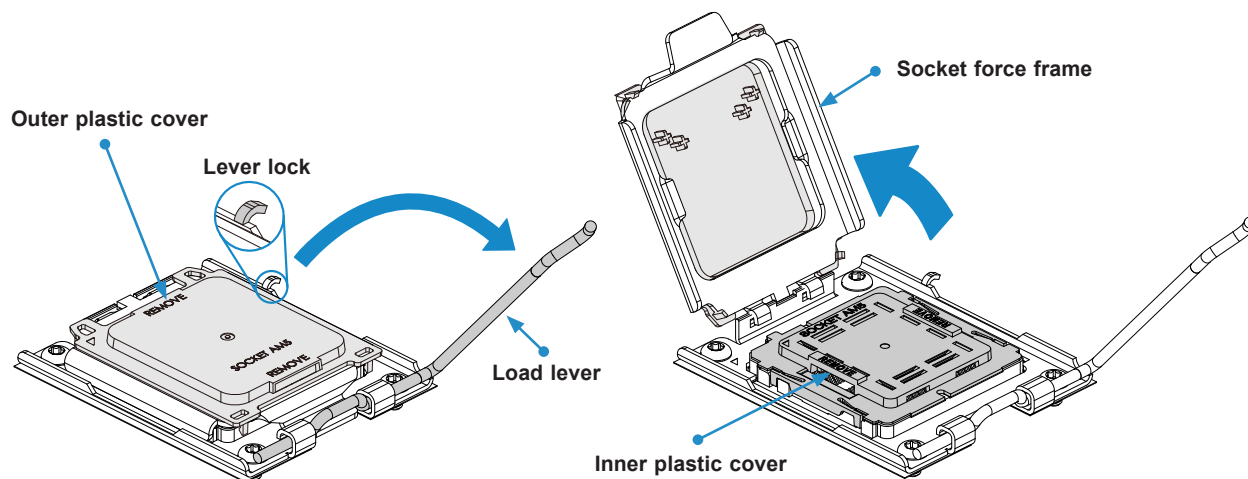


2. If there is an inner plastic cover, push the cover on its left and right sides, then lift it out.


Note: Discard the inner plastic cover. Do not use the inner plastic cover for storing or transporting the motherboard without a processor.

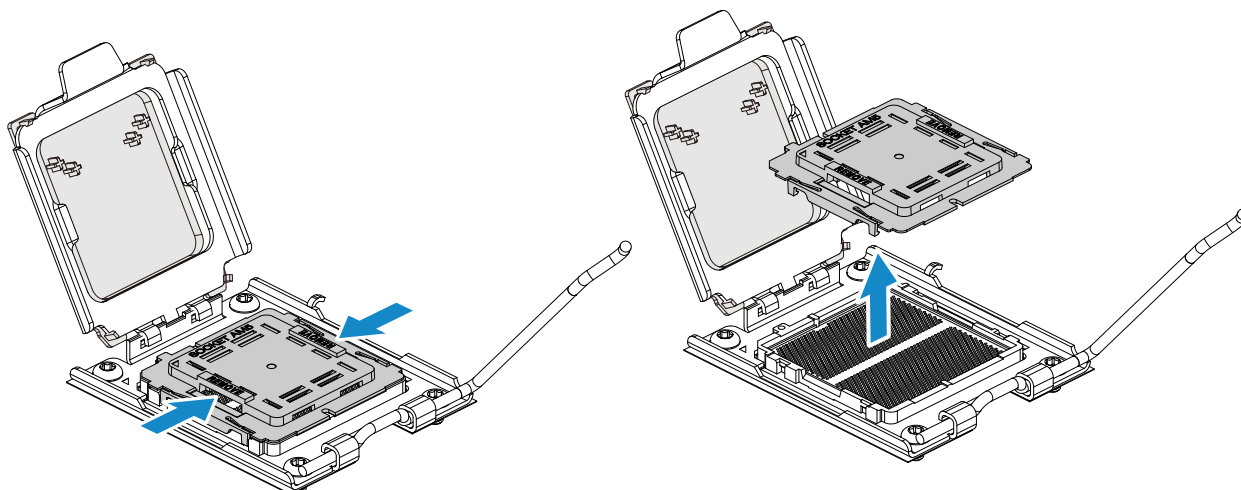

- Pick up the processor on its left and right edges. Hold the processor over the socket and align the arrow on the top-left corner of the processor with the arrow on the top-left corner of the socket. Gently lower it onto the AM5 socket pins.

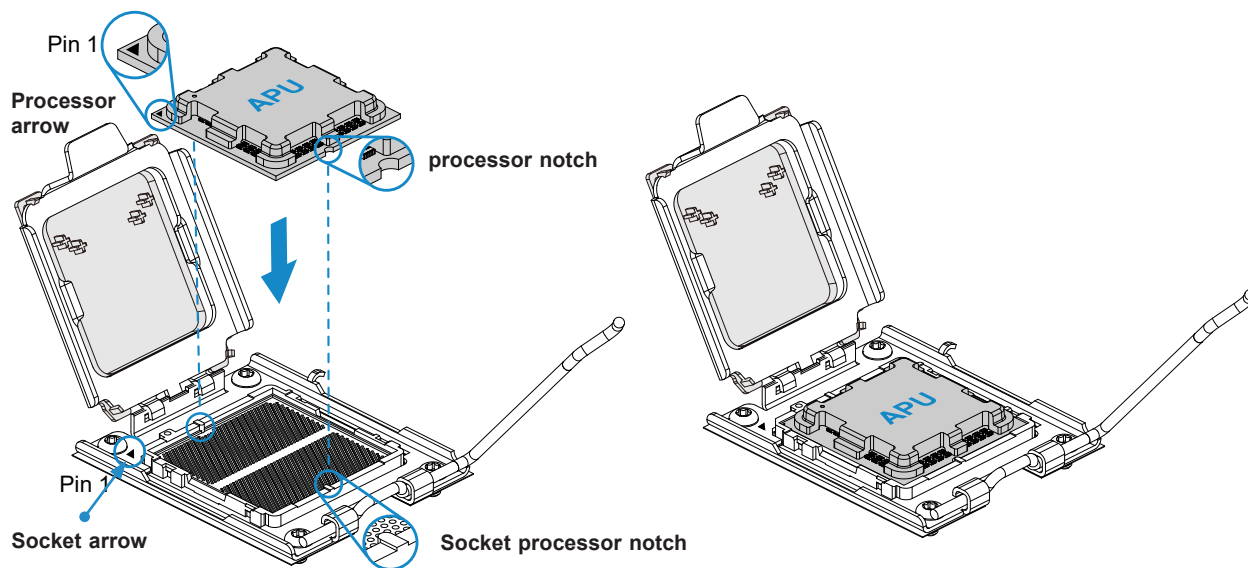


- With the processor in the socket, lower the socket force frame.

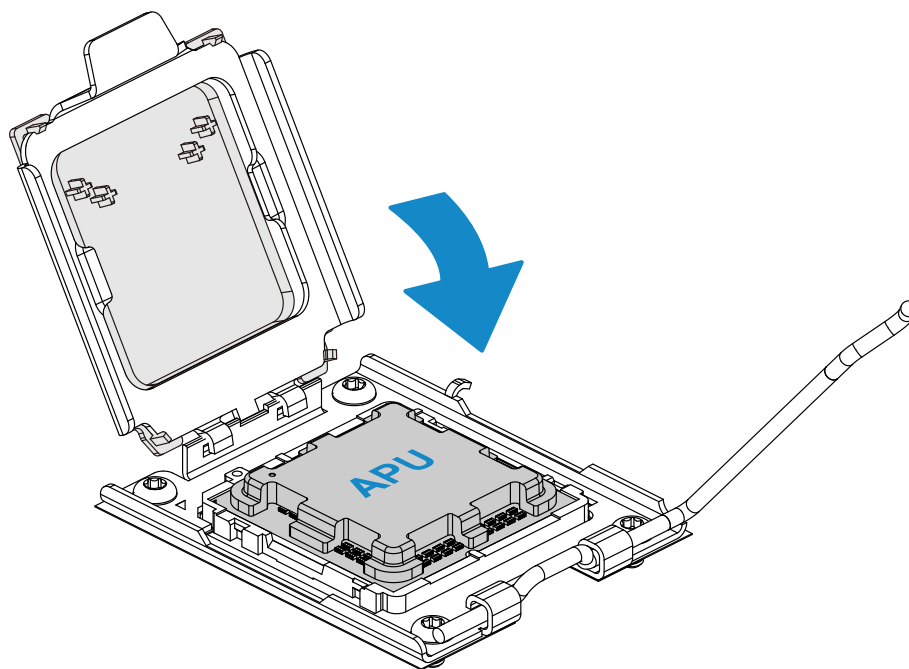


5. Reattach the lever arm onto the right side of the socket. The outer plastic cover will pop out when the lever arm is reattached.

Note: Store the outer plastic cover. Attach the outer plastic cover to the socket force frame when storing or transporting the motherboard without a processor.

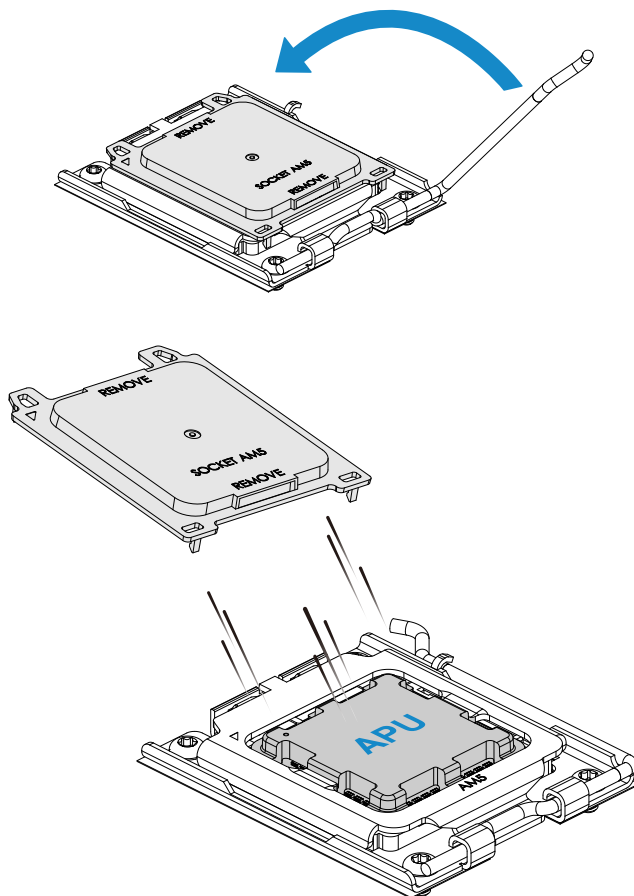


6. When finished, the socket force frame will secure the processor.

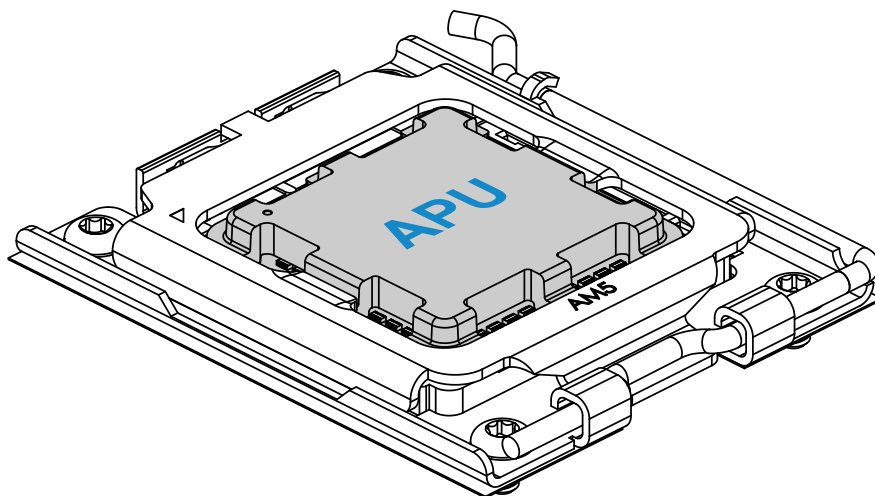


Installing the Heatsink


1. After the processor is secure, you must install the heatsink to the socket frame. Ensure a proper amount of thermal grease is applied to the heatsink. Lower the heatsink down until the four screws on the heatsink align with the four screw holes on the socket frame.

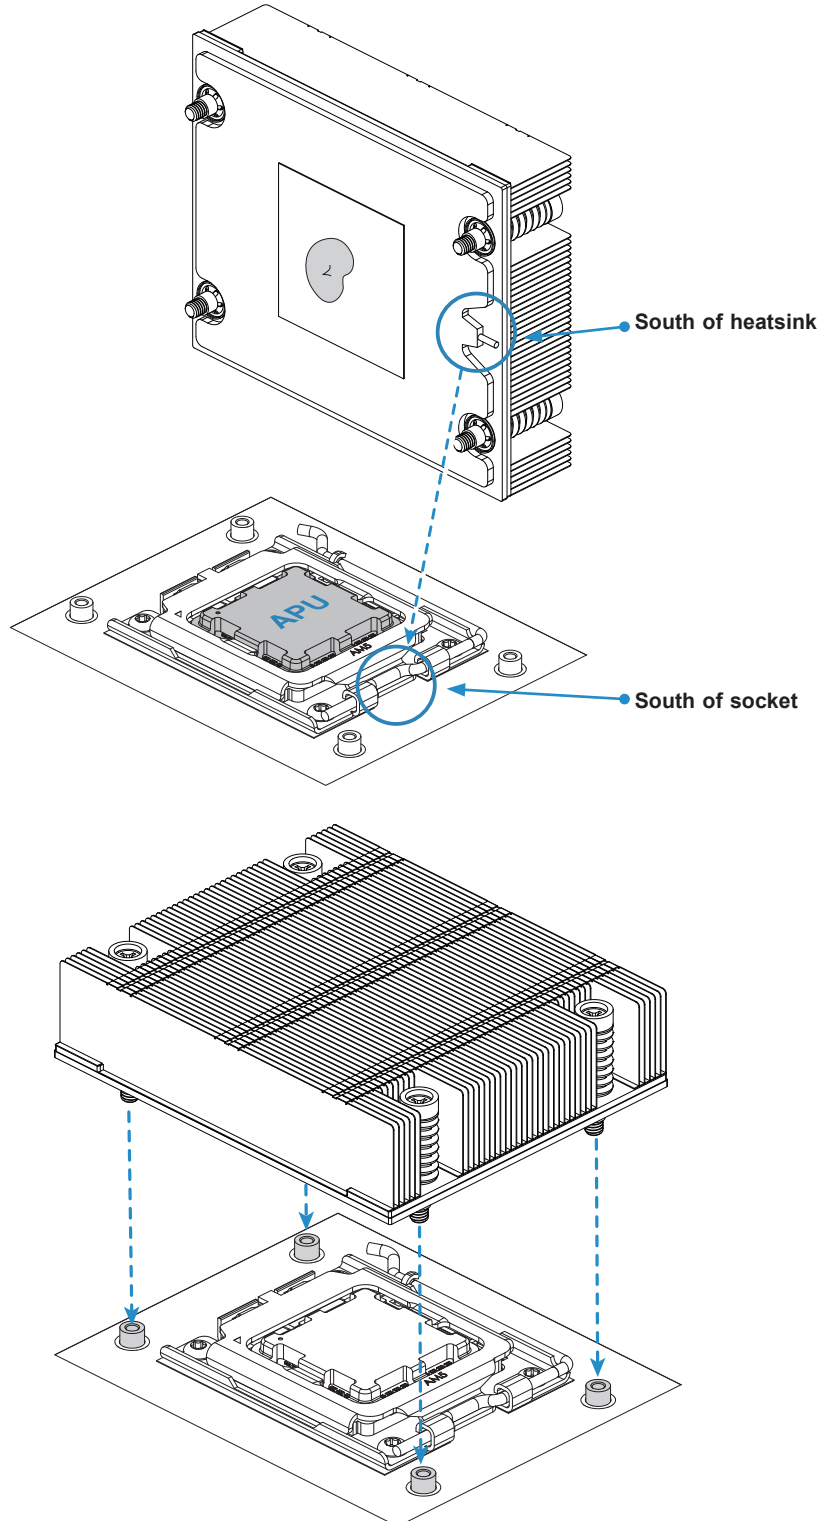

2. With a T30 bit torque driver **set to a force of 10 kgf-cm (9.0 in-lbf)**, gradually tighten the four screws to ensure even pressure. You can start with any screw, but make sure to tighten the screws in a diagonal pattern.

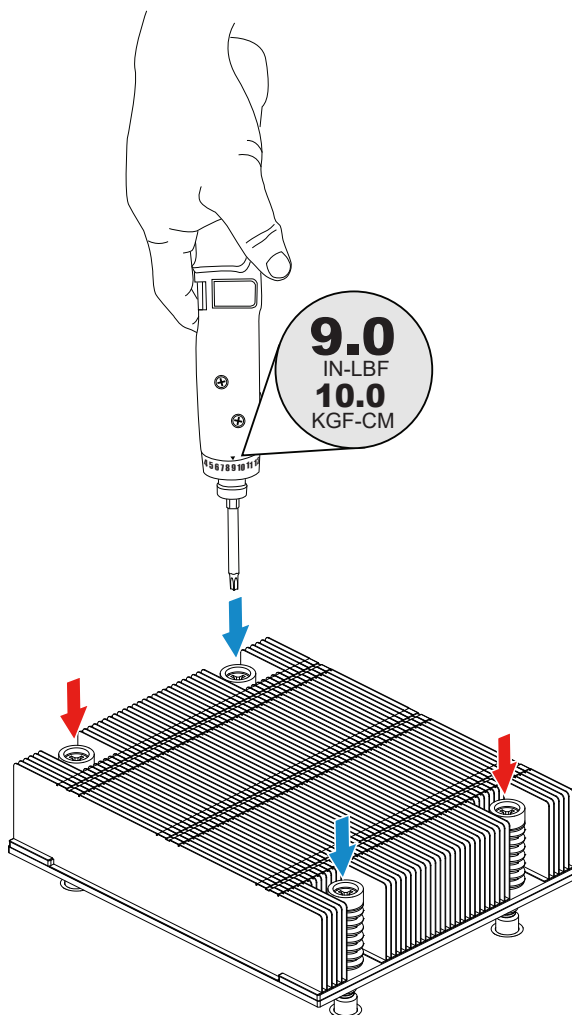

3. When finished, the heatsink will be secured over the socket and processor.

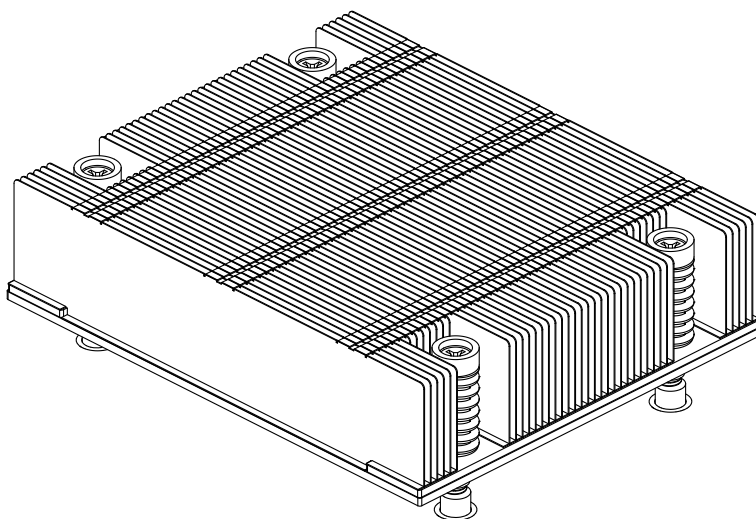

3.5 Memory

Memory Support

The H13SRD-F supports up to 128GB of ECC and Non-ECC DDR5 UDIMM memory with speeds of up to up to 5200MT/s. Refer to the table below for DIMM support information.

1 Processor, 4 DIMM Slots							
Channel	DIMM Slot	DIMM Configuration & Maximum Memory Speed (MT/s)					
		1	2	3	4	5	6
Channel A	DIMMA1					Up to 3600 MT/s	Up to 3600 MT/s
	DIMMA2	Up to 5200 MT/s		Up to 5200 MT/s		Up to 3600 MT/s	Up to 3600 MT/s
Channel B	DIMMB1				Up to 3600 MT/s		Up to 3600 MT/s
	DIMMB2		Up to 5200 MT/s	Up to 5200 MT/s	Up to 3600 MT/s		Up to 3600 MT/s

General Guidelines for Optimizing Memory Performance

- The blue or black slots must be populated first.
- It is recommended to use DDR5 memory of the same type, size, and speed.
- Mixed DIMM speeds can be installed. However, all DIMMs will run at the speed of the slowest DIMM.
- The motherboard will not support an odd-numbered amount of DIMM modules except for a single DIMM module necessary for board operation.


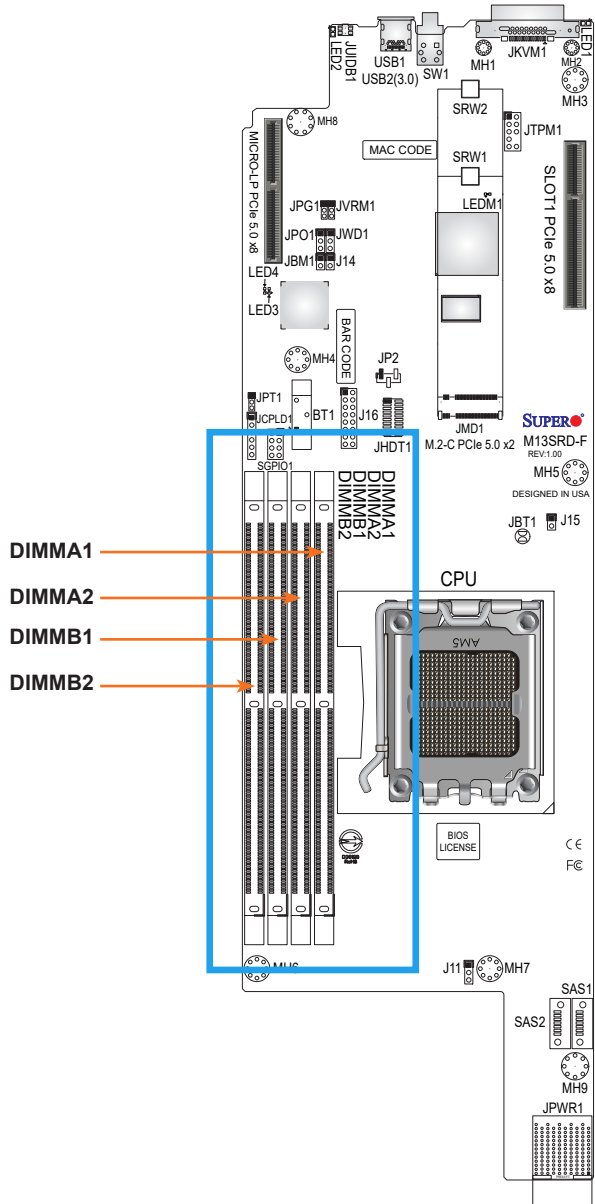



Figure 3-4. DIMM Slot Locations

DIMM Installation


1. Insert the desired number of DIMMs into the slots based on the recommended DIMM population tables shown above.
2. Push the release tabs on both ends of the DIMM slot outwards to unlock it.

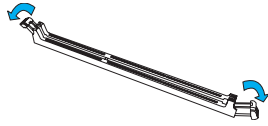


3. Align the key of the DIMM module with the receptive point on the memory slot.

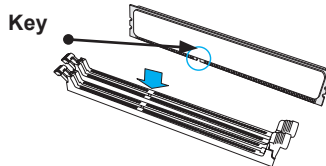

4. Align the notches on both ends of the module with the receptive points on the ends of the slot.

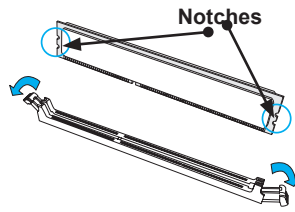


5. Push both ends of the module straight down into the slot until the module snaps into place.

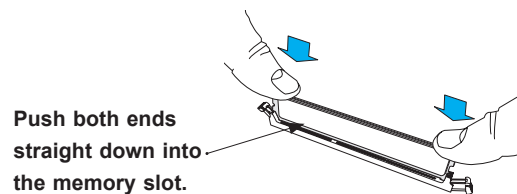

6. Press the release tabs to the lock positions to secure the DIMM module into the slot.

DIMM Removal

Press both release tabs on the ends of the DIMM module to unlock it. Once the DIMM module is loose, remove it from the memory slot.

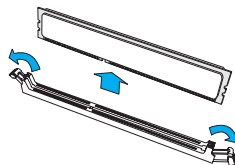

Warning! To avoid causing any damage to the DIMM module or the DIMM socket, do not use excessive force when pressing the release tabs on the ends of the DIMM socket. Handle DIMMs with care. Be aware and follow the ESD instructions given at the beginning of this chapter.

3.6 CMOS Battery Removal and Installation

Battery Removal

To remove the onboard battery, follow the steps below.

1. Power off your system and unplug your power cable.
2. Place the system on a workbench
3. Remove the top cover from the system.
4. Locate the onboard battery as shown below.
5. Using a tool such as a pen or a small screwdriver, push the battery lock outwards to unlock it. Once unlocked, the battery will pop out of the holder.
6. Remove the battery.

Proper Battery Disposal

Important: Handle used batteries carefully. Do not damage the battery in any way; a damaged battery may release hazardous materials into the environment. Do not discard a used battery in the garbage or a public landfill. Please comply with the regulations set up by your local hazardous waste management agency to dispose of your used battery properly.

Battery Installation

To install the onboard battery, follow the steps 1 and 2 below.

Important: When replacing a battery, be sure to only replace it with the same type.

1. Identify the battery's polarity. The positive (+) side should be facing up.
2. Insert the battery into the battery holder and push it down until you hear a click to ensure that the battery is securely locked.

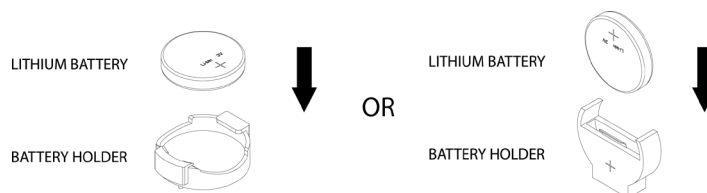


Figure 3-2. Installing a Battery

3.7 Chassis Components

Storage Drives

The chassis features sixteen hot-swap storage drives. These storage drives are contained in drive carriers and may be removed without powering-down the system. These carriers also help promote proper airflow through the drive bays.

Removing Drive Carriers from the Chassis

1. Press the release button on the drive carrier, which will extend the drive carrier handle.
2. Use the drive carrier handle to pull the carrier out of the chassis.

Removing a Dummy Drive from the Drive Carrier

1. Remove the drive carrier from the chassis as described in the previous section and lay it on a flat surface.
2. Remove the two screws securing the dummy drive to the drive carrier.
3. Lift the dummy drive from the drive carrier.

Important: To maintain proper airflow, except for short periods of time (swapping drives), do not operate the server with the drive carriers removed from the bays, regardless of how many drives are installed.

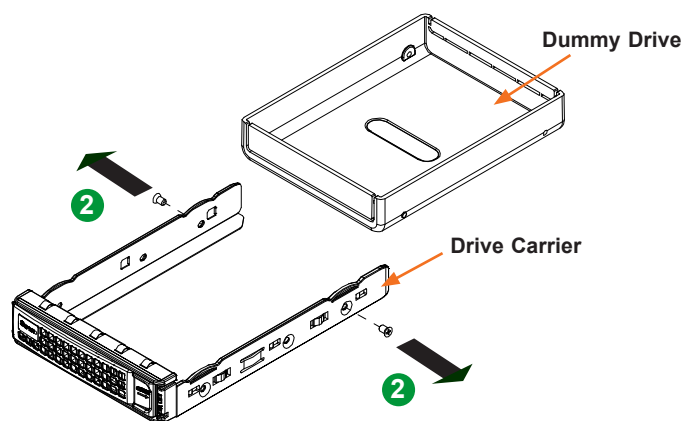


Figure 3-6. Removing a Dummy Drive from the Drive Carrier

Note: Enterprise level storage drives are recommended for use in Supermicro servers. For information on recommended drives, visit the Supermicro website at <http://www.supermicro.com/products/nfo/storage.cfm>.

System Cooling

Fans

Four 8-cm fans circulate air through the chassis to lower the internal temperature. The system fans are designed to be easily changed, with no tools required and no need to remove any other parts inside the chassis. See Figure 3-2 to determine which nodes and storage drives are cooled by each fan.

Replacing a System Fan

1. Determine which fan must be replaced. Use IPMI or open the chassis top cover while the system is operating and observe. Do not run the server for an extended period of time with the top cover open.
2. Simultaneously squeeze both release tabs on the top of the fan module.
3. Lift the fan module up and out of the chassis.
4. Place the replacement fan into the vacant space in the fan bracket while making sure the arrows on the top of the fan (indicating air direction) point in the same direction as the arrows on the other fans.
5. Put the fan back into the chassis and make sure that it is properly locked.
6. Confirm that the fan is working properly before replacing the chassis cover.

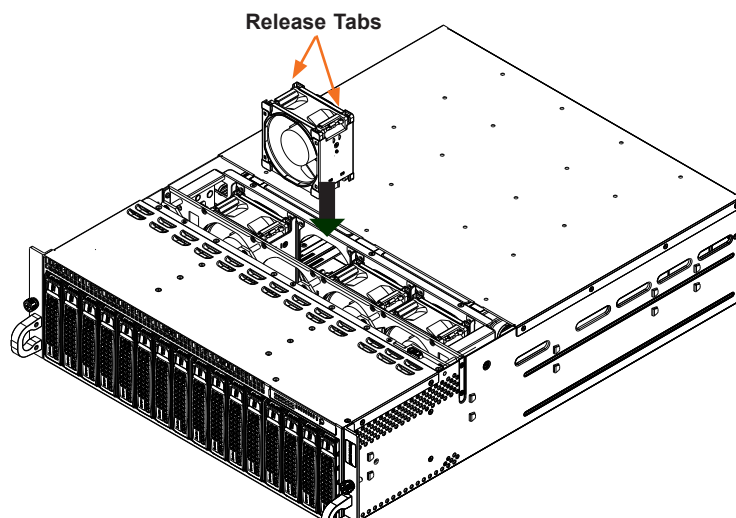


Figure 3-7. Replacing a Fan

Air Shroud

The air shroud is used to concentrate airflow to maximize fan efficiency.

Installing the Air Shroud

1. Remove the node from the chassis onto a flat, non-conductive surface.
2. If necessary, move any cables that interfere with the air shroud placement.
3. Place the air shroud in the chassis. It fits just beside the heatsink.

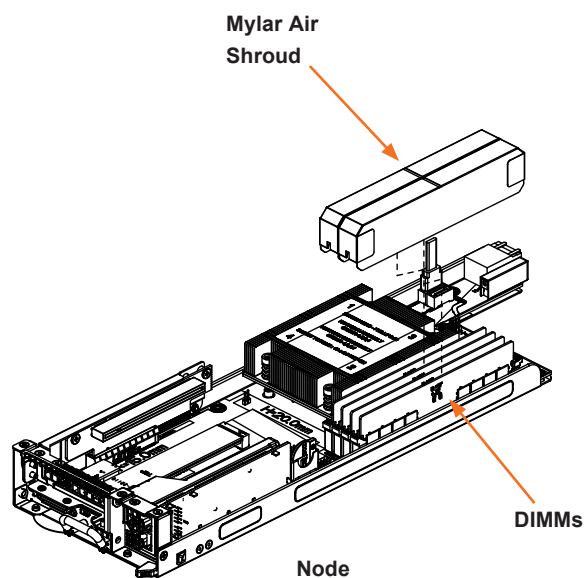


Figure 3-8. Installing the Air Shroud

Power Supply

The chassis features redundant power supplies. They are hot-swappable, meaning they can be changed without powering down the system. New units can be ordered directly from Supermicro or authorized distributors.

These power supplies are auto-switching capable. This feature enables them to automatically sense the input voltage and operate at a 100-120v or 180-240v. An amber light will be illuminated on the power supply when the power is off. An illuminated green light indicates that the power supply is operating.

Changing the Power Supply

1. With the system running, unplug the AC power cord that provide power to the failed module.
2. Press and hold the release tab on the front, top of the power module.
3. Grasp the handle and pull the power supply out of its bay.
4. Push the replacement power supply module into the empty bay until it clicks into the locked position.
5. Plug the AC power cord back into the power supply module.

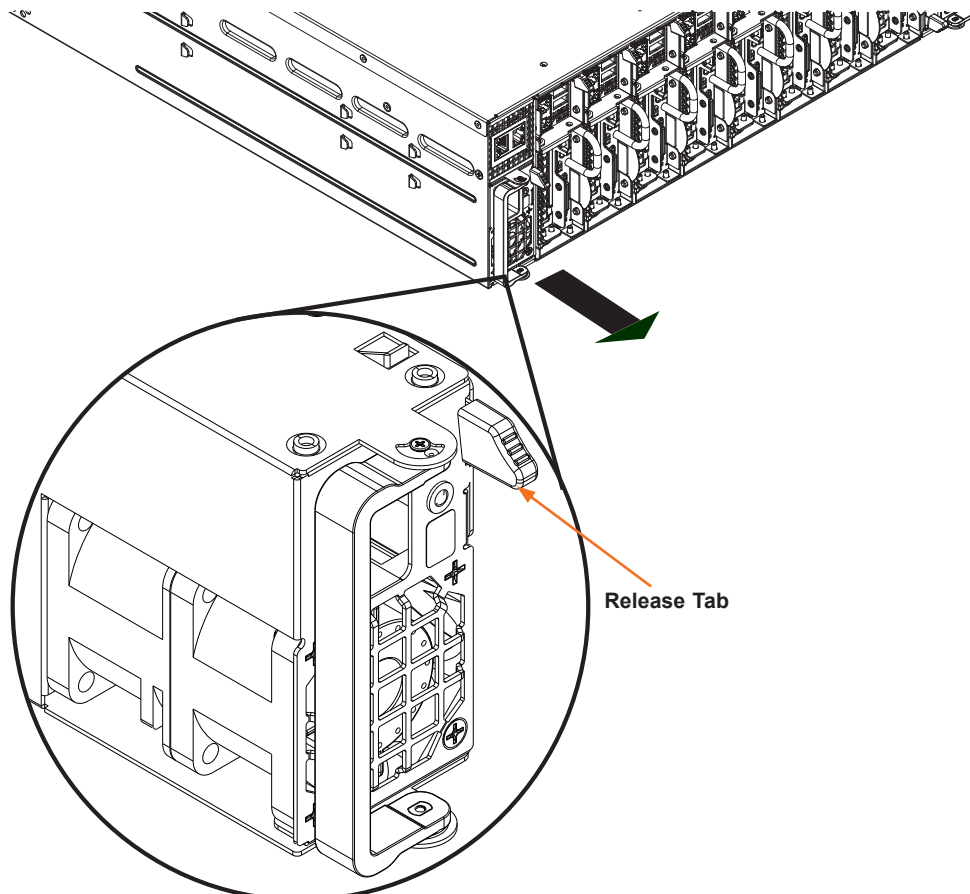


Figure 3-9. Replacing a Power Supply Module

3.8 BMC

The BMC can be reset using the button on the front control panel or on the chassis rear.

- **Reset**—Press and hold the button. After six seconds, the LED blinks at 2 Hz. The BMC resets and the reset duration is ~250 ms. Then the BMC starts to boot.
- **Restore factory default configuration**—Hold the button for twelve seconds. The LED blinks at 4 Hz while defaults are configured.
- **Firmware update**—the UID LED blinks at 10Hz during a firmware update.

BMC Reset Options	
Event	LED (Green)
Reset	Blinks at 2 Hz
Restore Defaults	Blinks at 4 Hz
Update	Blinks at 10 Hz

Chapter 4

Motherboard Connections

This section describes the connections on the motherboard and provides pinout definitions. Note that depending on how the system is configured, not all connections are required. The LEDs on the motherboard are also described here. A motherboard layout indicating component locations may be found in [Chapter 1](#). More detail can be found in the [Motherboard Manual](#). Please review the Safety Precautions in [Appendix A](#) before installing or removing components.

4.1 Power Connections

JPWR1 is the 12V input power connector for the backplane power connector. This connection is made automatically when inserting the node into the system.

4.2 Headers and Connectors

TPM/Port 80 Header

The JTPM1 header is used to connect a Trusted Platform Module (TPM)/Port 80, which is available from Supermicro (optional). A TPM/Port 80 connector is a security device that supports encryption and authentication in storage drives. It allows the motherboard to deny access if the TPM associated with the drive is not installed in the system. For more information on TPM go to <http://www.supermicro.com/manuals/other/TPM.pdf>.

Trusted Platform Module Header Pin Definitions			
Pin#	Definition	Pin#	Definition
1	+3.3V	2	SPI_CS#
3	RESET#	4	SPI_MISO
5	SPI_CLK	6	GND
7	SPI_MOSI	8	NC
9	+3.3V Stdby	10	SPI_IRQ#

AOC SATA/SAS Input Connector

The AOC SATA/SAS Input Connector connects to an AOC SAS Card for SAS1 and SAS2. Jumper JSS1 allows swapping the function of these ports between NVMe and SAS.

Serial Link General Purpose I/O Header

There is one Serial Link General Purpose Input/Output (S-SGPIO) header located on the motherboard. Refer to the table below for pin definitions.

S-SGPIO Header Pin Definitions			
Pin#	Definition	Pin#	Definition
1	NC	2	NC
3	Ground	4	SSATA Data
5	SSATA Loa	6	Ground
7	SSATA Clock	8	NC

M.2 M-Key 2280/22110 Slot (PCIe 5.0 x2)

The motherboard includes one M.2 slot located at JMD1. M.2 was formerly known as Next Generation Form Factor (NGFF) and serves to replace mini PCIe. M.2 allows for a variety of card sizes, increased functionality, and spatial efficiency. JMD1 supports an M-Key PCIe 5.0 x2 device in the 2280 and 22110 form factors.

Micro Low-Profile PCIe 5.0 x8 Slot with two USB 2.0

A Micro-LP PCIe 5.0 x8 slot with two USB 2.0 is located at J9. This slot is used for a Supermicro Micro-LP Network card.

PCIe 5.0 x8 (Open-End support up to 75W)

There is one PCIe 5.0 x8 Open-End Slot with 75W power at J10. This slot is used for an Add-On Card (AOC).

MicroCloud Backplane Connector

There is one MicroCloud Backplane Connector for 2x PCIe 5.0 x4 / Dedicated IPMI LAN / 2x AOC SATA/SAS at J12..

Standby Power

The Standby Power header is located at JSTBY1 on the motherboard. You must have a card with a Standby Power connector and a cable to use this feature. Refer to the table below for pin definitions.

Standby Power Pin Definitions	
Pin#	Definition
1	+5V Standby
2	Ground
3	No Connection

4-pin BMC External I²C Header

A System Management Bus header for BMC is located at JIPMB1. Connect the appropriate cable here to use the IPMB I²C connection on your system. Refer to the table below for pin definitions.

External I ² C Header Pin Definitions	
Pin#	Definition
1	Data
2	Ground
3	Clock
4	No Connection

Chassis Intrusion

A Chassis Intrusion header is located at JL1 on the motherboard. Attach the appropriate cable from the chassis to inform you when the chassis is opened. Refer to the table below for pin definitions.

Chassis Intrusion Pin Definitions	
Pin#	Definition
1	Intrusion Input
2	Ground

4.3 Input/Output Ports

See the figure below for the locations and descriptions of the I/O ports on the rear of the motherboard.

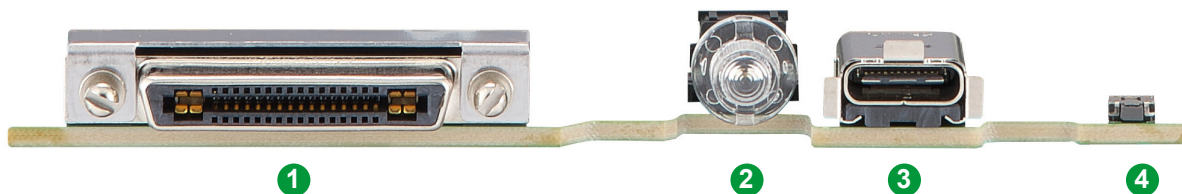


Figure 4-1. I/O Ports

Rear Panel I/O Ports	
Item	Description
1.	KVM Connector
2.	Power Switch, Power LED
3.	USB 3.2 Type C
4.	Unit Identifier Button

KVM Connector

The Keyboard, Video, and Mouse (KVM) connector at JKVM1 supports a set of keyboard, monitor, and mouse to control multiple computers. It also provides two USB 2.0 connections (USB0/1), one serial connection (COM1), and a VGA connection (VGA).

Power Switch, Power LED

Press the button at SW1 to power on the motherboard. This button can also power off the motherboard instantly or when held for four seconds. The settings for this button can be configured with the Power Button Function feature in the UEFI BIOS.

USB 3.2 Type-C Connector

There is one USB 3.2 Type C connector on the rear I/O panel. This port provides access to USB2.

Unit Identifier Switch/UID LED Indicator

A Unit Identifier (UID) switch and an LED Indicator are located on the motherboard. The UID switch is located at JUIDB1 on the rear panel I/O. The UID LED is located near the UID switch at LED2. When you press the UID switch, the UID LED will be turned on. Press the UID switch again to turn off the LED indicator. The UID Indicator provides easy identification of a system unit that may be in need of service.

Note: UID can also be triggered via IPMI on the motherboard. For more information on IPMI, refer to the IPMI User's Guide posted on our website at <https://www.supermicro.com/support/manuals/>.

UID Switch Pin Definitions	
Pin#	Definition
1	Ground
2	Ground
3	Button In
4	Button In

UID LED Pin Definitions	
Color	Status
Blue: On	Unit Identified

4.4 Jumpers

Explanation of Jumpers

To modify the operation of the motherboard, jumpers are used to choose between optional settings. Jumpers create shorts between two pins to change the function associated with it. Pin 1 is identified with a square solder pad on the printed circuit board. See the motherboard layout page for jumper locations.

Note: On a two-pin jumper, "Closed" means the jumper is on both pins and "Open" indicates the jumper is either on only one pin or has been completely removed.



CMOS Clear

JBT1 is used to clear CMOS, which will also clear any passwords. Instead of pins, this jumper consists of contact pads to prevent accidentally clearing the contents of CMOS.

To Clear CMOS

1. First power down the system and unplug the power cord(s).
2. Remove the cover of the chassis to access the motherboard and remove the battery from the motherboard.
3. Short the CMOS pads with a metal object such as a small screwdriver for at least four seconds.
4. Remove the screwdriver (or shorting device).
5. Replace the cover, reconnect the power cord(s), and power on the system.

Notes: Clearing CMOS will also clear all passwords. Do not use the PW_ON connector to clear CMOS.

NVMe/SAS Select

Change the setting of jumper J11 to configure the functionality of SAS1 and SAS2. The default setting is Onboard NVMe.

NVMe/SAS Select Jumper Settings	
Jumper Setting	Definition
Pins 1-2	Onboard NVMe (Default)
Pins 2-3	AOC SAS

IPMI Shared LAN

Set the jumper JBM1 to configure the IPMI for shared access on LAN1. The default setting is Enabled.

IPMI Shared LAN Jumper Settings	
Jumper Setting	Definition
Open	Enabled (Default)
Closed	Disabled

CPU Throttle when PWR_Fail

Jumper JPO1 can enable the CPU Throttle mechanism to protect the processor from damage due to excessive heat. This is a safeguard for preventing damage to the system. When an overheating condition occurs, thermal throttling kicks in. Three options are available to handle overheating: Power off, CPU Throttle – decrease CPU frequency to the minimum (800 Mhz), and Performance – do nothing.

CPU Throttle when PWR_Fail Jumper Settings	
Jumper Setting	Definition
Pins 1-2	Enabled
Pins 2-3	Disabled (Default)

Onboard TPM 2.0 Enable/Disable

Use JPT1 to enable or disable support for the onboard TPM 2.0 module. The default setting is Enabled.

TPM 2.0 Enable/Disable Jumper Settings	
Jumper Setting	Definition
Pins 1-2	Enabled (Default)
Pins 2-3	Disabled

Watch Dog Timer

Watch Dog Timer (JWD1) is a system monitor that can reboot the system when a software application hangs. Close pins 1-2 to reset the system if an application hangs. Close pins 2-3 to generate a non-maskable interrupt (NMI) signal for the application that hangs. Refer to the table below for jumper settings. The Watch Dog Timer must also be enabled in the BIOS.

Watch Dog Timer Jumper Settings	
Jumper Setting	Definition
Pins 1-2	Reset (default)
Pins 2-3	NMI
Open	Disabled

AOC SAS Enable/Disable

Change the setting of jumper JSS1 to configure the functionality of SAS1 and SAS2. The default setting is Disabled.

AOC SAS Enable/Disable Jumper Settings	
Jumper Setting	Definition
Pins 1-2	Disabled (Default)
Pins 2-3	Enabled

4.5 LED Indicators

OH/Power/Fan Fail LED

LED1 is the OH/Power/Fan Fail LED.

OH/Power/Fan Fail LED	
LED Color	Definition
Blinking Red	Power Fail or FAN Fail
Solid Red	Overheat

BMC Heartbeat LED

LEDM1 is the BMC Heartbeat LED. When the LED is blinking green, BMC is working.

BMC Heartbeat LED	
Color/State	Definition
Blinking Green	The BMC is working

Chapter 5

Software

After the hardware has been installed, you can install the Operating System (OS), configure RAID settings and install the drivers.

5.1 Microsoft Windows OS Installation

If you will be using RAID, you must configure RAID settings before installing the Windows OS and the RAID driver. Refer to the RAID Configuration User Guides posted on our website at www.supernmicro.com/support/manuals.

Installing the OS

1. Create a method to access the MS Windows installation ISO file. That might be a USB flash or media drive, or the BMC KVM console.
2. Go to the Supermicro web page for your motherboard and click on "Download the Latest Drivers and Utilities", select the proper driver, and copy it to a USB flash drive.
3. Boot from a bootable device with Windows OS installation. You can see a bootable device list by pressing **F11** during the system startup.

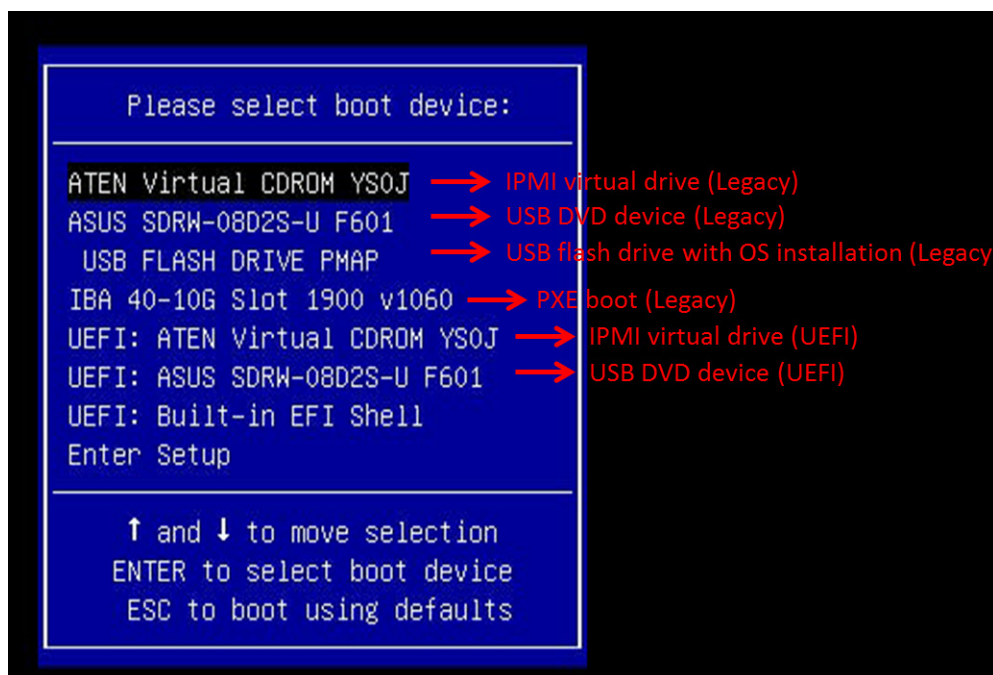


Figure 5-1. Select Boot Device

4. During Windows Setup, continue to the dialog where you select the drives on which to install Windows. If the disk you want to use is not listed, click on “Load driver” link at the bottom left corner.

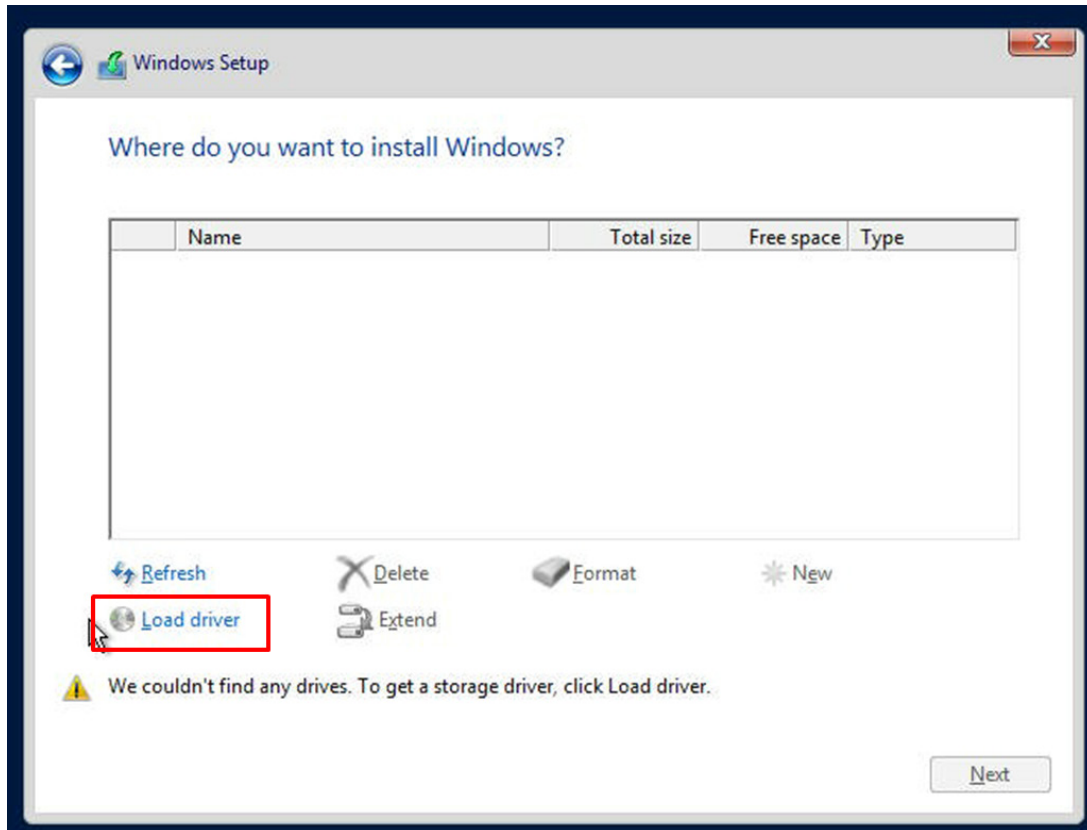


Figure 5-2. Load Driver Link

To load the driver, browse the USB flash drive for the proper driver files.

- For RAID, choose the SATA/sSATA RAID driver indicated then choose the storage drive on which you want to install it.
 - For non-RAID, choose the SATA/sSATA AHCI driver indicated then choose the storage drive on which you want to install it.
5. Once all devices are specified, continue with the installation.
 6. After the Windows OS installation has completed, the system will automatically reboot multiple times.

5.2 Driver Installation

The Supermicro website contains drivers and utilities for your system at <https://www.supermicro.com/wdl/driver>. Some of these must be installed, such as the chipset driver.

After accessing the website, go into the CDR_Images (in the parent directory of the above link) and locate the ISO file for your motherboard. Download this file to a USB flash or media drive. (You may also use a utility to extract the ISO file if preferred.)

Another option is to go to the Supermicro website at <http://www.supermicro.com/products/>. Find the product page for your motherboard, and "Download the Latest Drivers and Utilities". Insert the flash drive or disk and the screenshot shown below should appear.

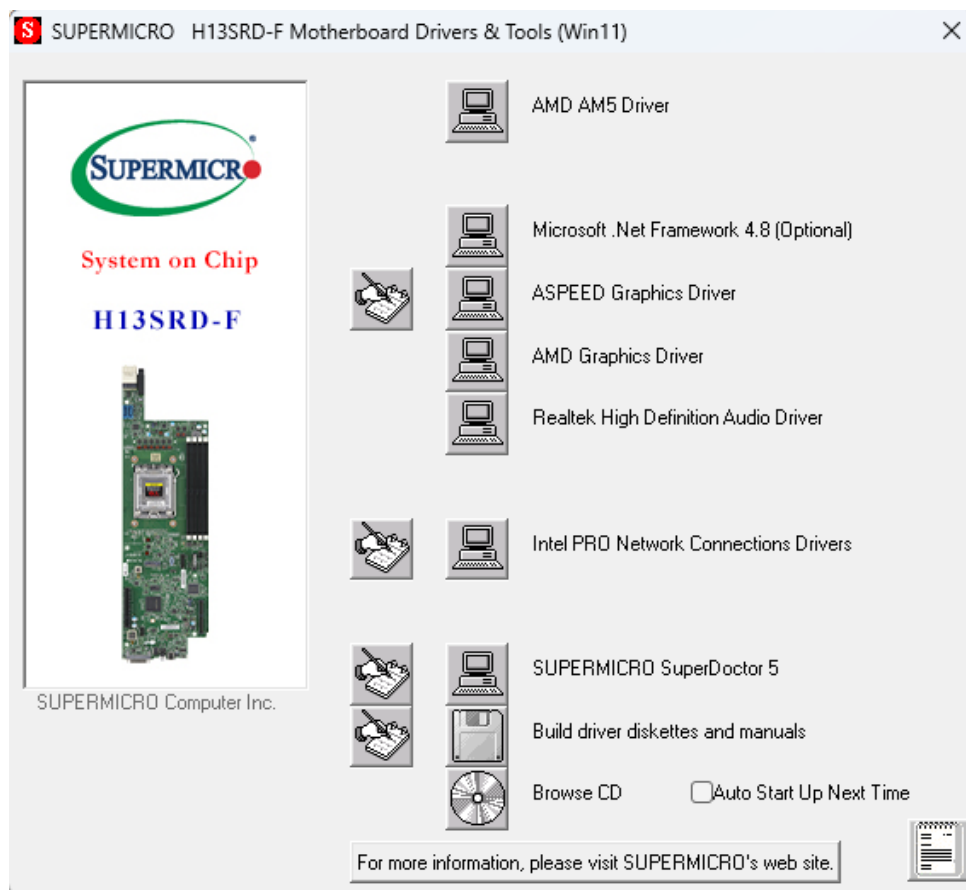


Figure 5-3. Driver & Tool Installation Screen

Note: Click the icons showing a hand writing on paper to view the readme files for each item. Click the computer icons to the right of these items to install each item (from top to the bottom) one at a time. **After installing each item, you must re-boot the system before moving on to the next item on the list.** The bottom icon with a CD on it allows you to view the entire contents.

5.3 SuperDoctor® 5

The Supermicro SuperDoctor 5 is a program that functions in a command-line or web-based interface for Windows and Linux operating systems. The program monitors such system health information as CPU temperature, system voltages, system power consumption, fan speed, and provides alerts via email or Simple Network Management Protocol (SNMP).

SuperDoctor 5 comes in local and remote management versions and can be used with Nagios to maximize your system monitoring needs. With SuperDoctor 5 Management Server (SSM Server), you can remotely control power on/off and reset chassis intrusion for multiple systems with SuperDoctor 5 or BMC. SuperDoctor 5 Management Server monitors HTTP, FTP, and SMTP services to optimize the efficiency of your operation.

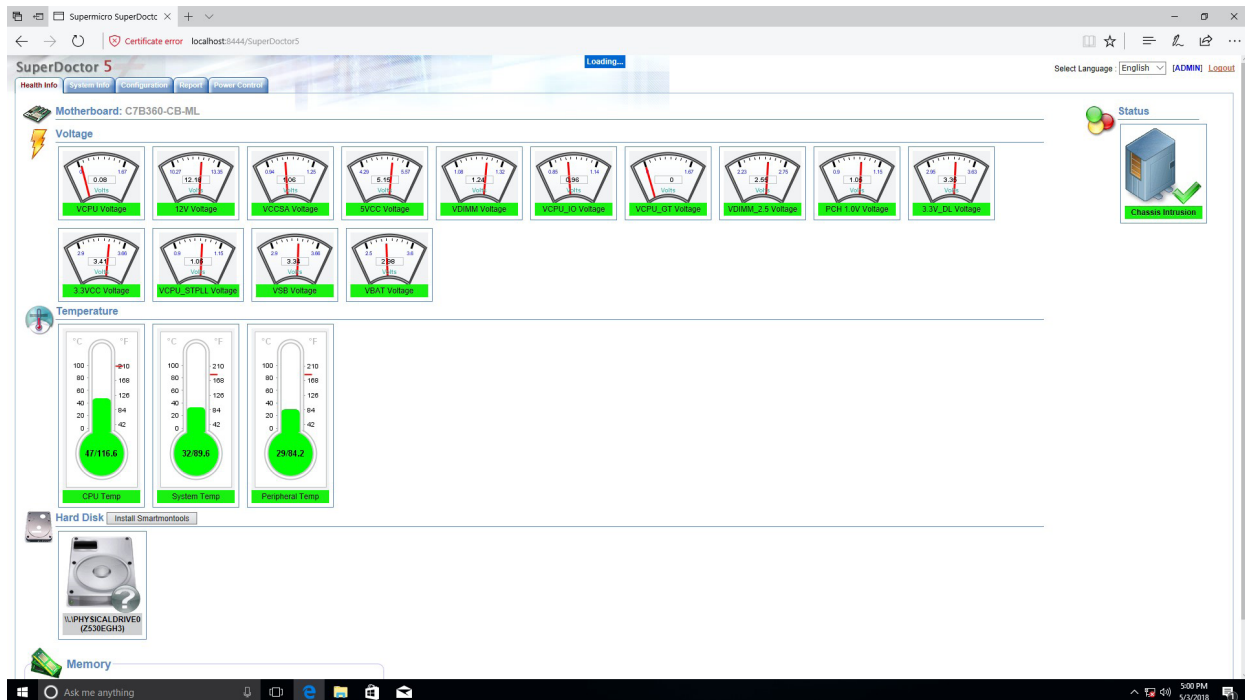


Figure 5-4. SuperDoctor 5 Interface Display Screen (Health Information)

5.4 BMC

The H13SRD-F provides remote access, monitoring and management through the baseboard management controller (BMC) and other management controllers distributed among different system modules. There are several BIOS settings that are related to BMC. For general documentation and information on BMC, visit our website at:

www.supermicro.com/en/solutions/management-software/bmc-resources

BMC ADMIN User Password

For security, each system is assigned a unique default BMC password for the ADMIN user. This can be found on a sticker on the chassis and a sticker on the motherboard. The sticker also displays the BMC MAC address.

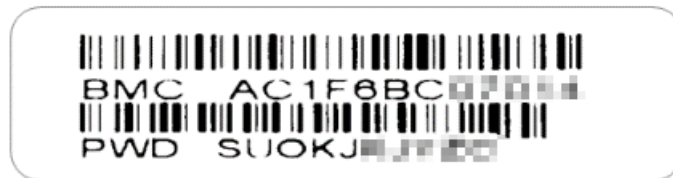


Figure 5-5. BMC Password Label

See [Chapter 1](#) for label location.

Chapter 6

Optional Components

This chapter describes optional system components and installation procedures.

6.1 Optional Parts List

Optional Parts List	
Description	Part Number
Cable for AOC-S3908L-H8iR-16DD	CBL-SAST-1230T4S1-100
Cable for AOC-S3008L-L8i	CBL-SAST-0616
Black Gen 6 hot-swap 3.5"-to-2.5" HDD tray	MCP-220-93801-0B
Black Gen 6.5 hot-swap 3.5"-to-2.5" tool-less drive tray	MCP-220-00158-0B
Nvidia Ampere A2 16GB GDDR6 PCIe 4.0 x8 GPU (w/o CEC)	GPU-NVA2-NC
Network Cards	AOC-CTGS-i2T-O
	AOC-CGP-i2
	AOC-CTG-i1S
	AOC-STGN-i2S
Storage Controller Cards	AOC-S3008L-L8i
	AOC-S3908L-H8iR-16DD
Software	SFT-DCMS-Single
	OSNBD3/2/1
	OS4HR3/2/1

6.2 Network Cards

Network Card Options	
Part Number	Description
AOC-CTGS-i2T-O	Intel® X550 2port 10GbE RJ45 MicroLP (Retail Pack)
AOC-CGP-i2	Intel i350 2-port RJ45, 1Gb Gen2 x4 MicroLP
AOC-CTG-i1S	Intel 82599EN 1-port SFP+, 10GbE 2-port USB with NC-SI Gen2 x8 MicroLP
AOC-STGN-i2S	Intel 82599ES 2-port SFP+ 10Gb, 2-port USB Gen2 x8 MicroLP

6.3 Storage Control Cards

Storage Control Card Options		
Part Number	Cable	HDD Configuration
AOC-S3908L-H8iR-16DD	CBL-SAST-1230T4S1-100	Eight internal 12Gb/s SAS3 ports, Gen4, LP, supports 16 HDD w/ expander
AOC-S3008L-L8i	CBL-SAST-0616	Std LP, Eight internal 2Gb/s SAS3 ports, Gen3, RAID 0/1/10

See [Chapter 3](#) for the riser card installation procedure.

6.4 Software

Software Options	
Part Number	Description
SFT-DCMS-Single	DataCenter Management Package (per node license)
OSNBD3/2/1	3/2/1-year onsite NBD service
OS4HR3/2/1	3/2/1-year onsite 24x7x4 service

Chapter 7

Troubleshooting and Support

7.1 Information Resources

Website

A great deal of information is available on the Supermicro website, supermicro.com.

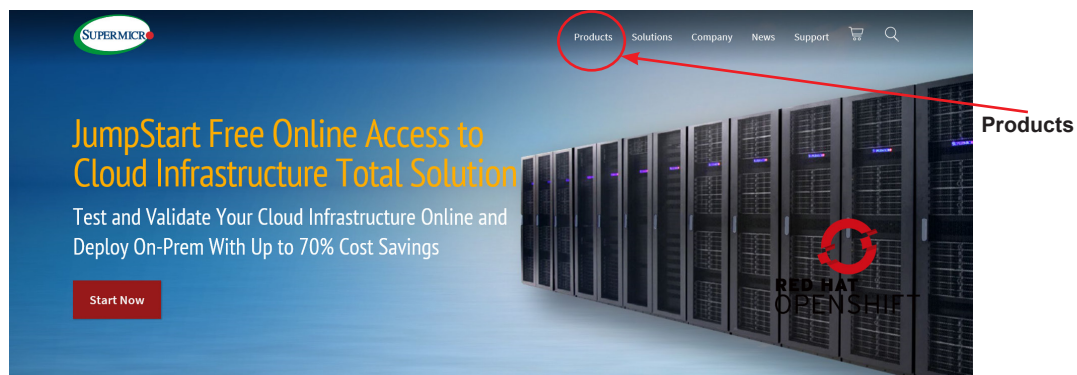


Figure 7-1. Supermicro Website

- Specifications for servers and other hardware are available by clicking the menu icon, then selecting the **Products** option.
- The **Support** option offers downloads (manuals, BIOS/BMC, drivers, etc.), FAQs, RMA, warranty, and other service extensions.

Direct Links for the AS -3015MR-H8TNR System

[H13SRD-F motherboard page](#) for links to the Quick Reference Guide, User Manual, validated storage drives, etc.

Direct Links for General Support and Information

[Frequently Asked Questions](#)

[Add-on card descriptions](#)

[TPM User Guide](#)

General Memory Configuration Guide: [X12](#)

[SuperDoctor5 Large Deployment Guide](#)

For validated memory, see our [Product Resources page](#)

Direct Links (continued)

[Product Matrices](#) page for links to tables summarizing specs for systems, motherboards, power supplies, riser cards, add-on cards, etc.

[Security Center](#) for recent security notices

[Supermicro Phone and Addresses](#)

7.2 Baseboard Management Controller Interface

The system supports the Baseboard Management interface. BMC is used to provide remote access, monitoring and management. There are several BIOS settings that are related to BMC.

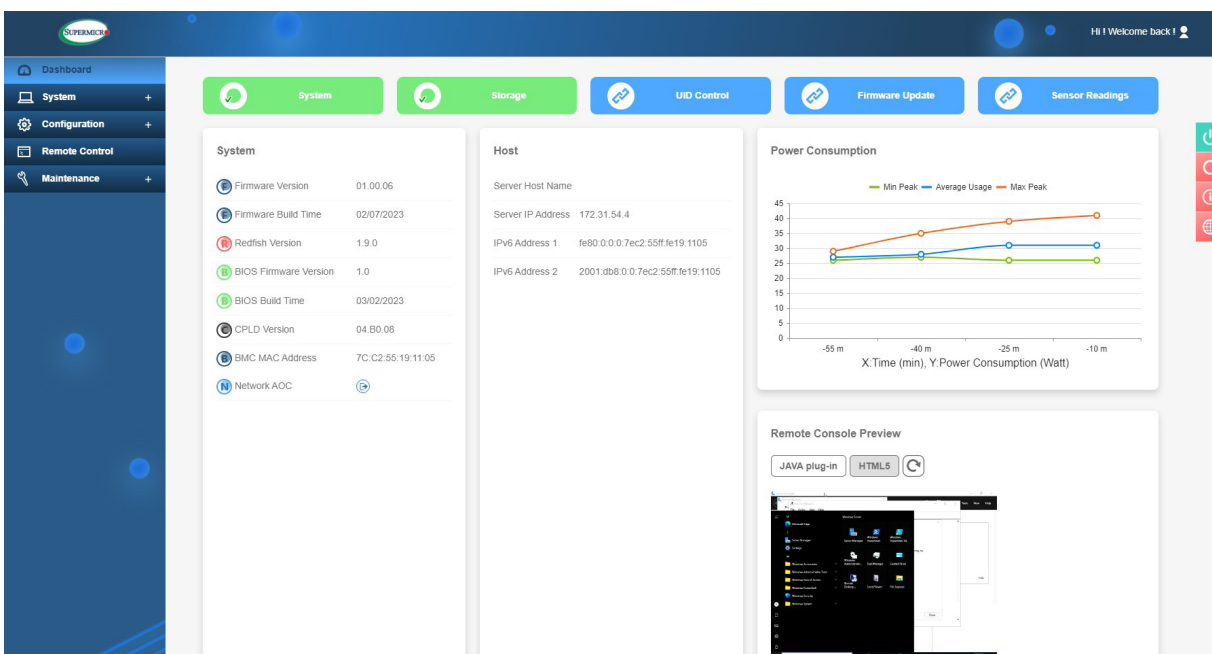


Figure 7-2. BMC Interface: Dashboard View

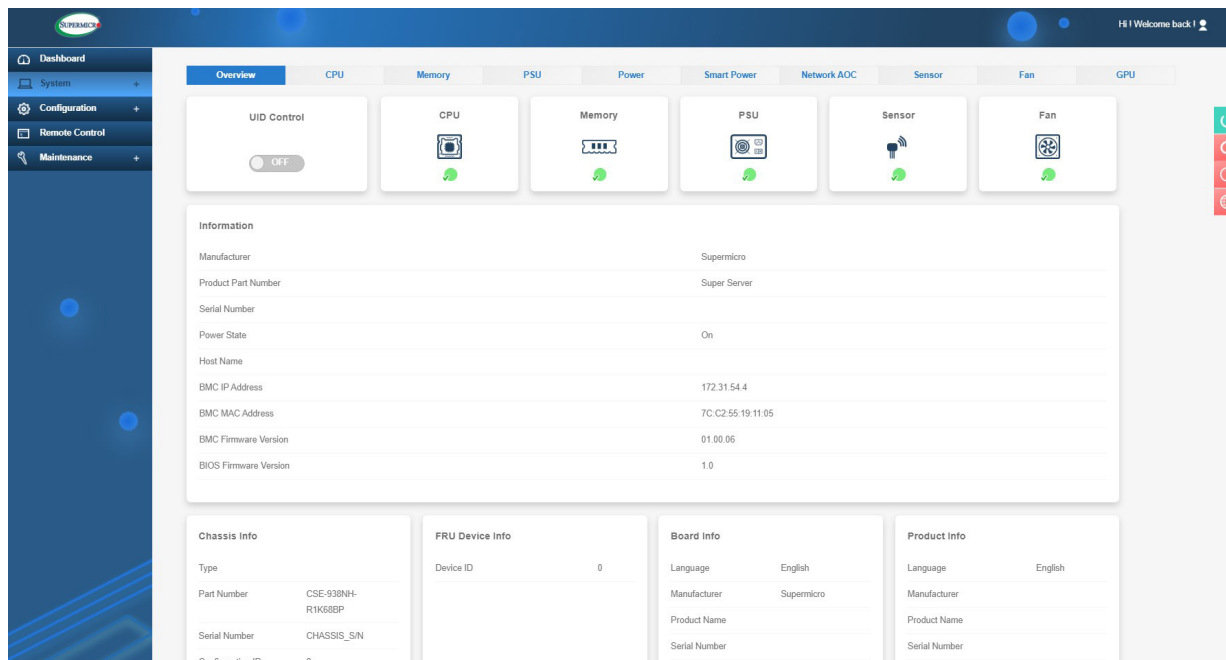


Figure 7-3. BMC Interface: System View

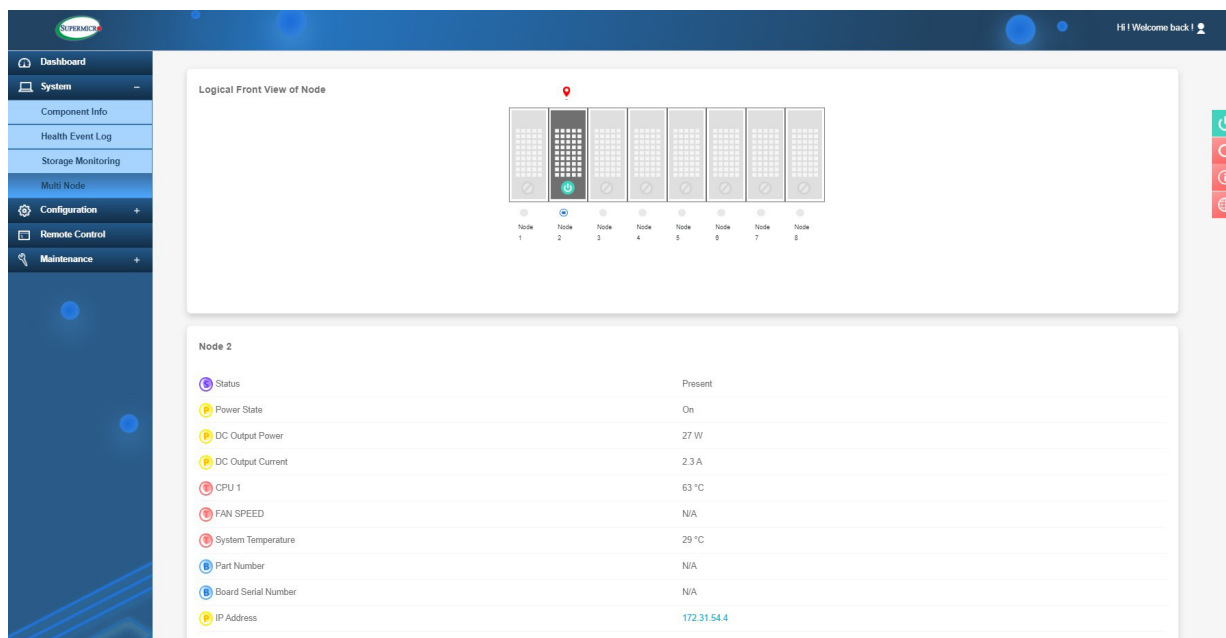


Figure 7-4. BMC Interface: Multi Node View

7.3 Troubleshooting Procedures

Use the following procedures to troubleshoot your system. If you have followed all of the procedures below and still need assistance, refer to the [Technical Support Procedures](#) or [Returning Merchandise for Service](#) section(s) in this chapter. [Power down](#) the system before changing any non hot-swap hardware components.

No Power

1. As you try to power up the system, note any beep codes. The AMI BIOS supplies additional checkpoint codes, which are documented online at <http://www.supernmicro.com/support/manuals/> ("AMI BIOS POST Codes User's Guide").
2. Make sure that the power connector is connected to your power supply.
3. Make sure that no short circuits exist between the motherboard and chassis.
4. Disconnect all cables from the motherboard, including those for the keyboard and mouse.
5. Remove all add-on cards.
6. Install a CPU, a heatsink, connect the internal speaker (if applicable), and the power LED to the motherboard. Make sure that the heatsink is fully seated.
7. Verify that all jumpers are set to their default positions.
8. Check that the power supplies' input voltage operate at 100-120VAC or 180-240VAC.
9. Turn the power switch on and off to test the system

No Video

1. If the power is on but you have no video, remove all the add-on cards and cables.
2. As you try to power up the system, note any beep codes. Refer to the next section for details on [beep codes](#).

System Boot Failure

If the system does not display POST (Power-On-Self-Test) or does not respond after the power is turned on, check the following:

Turn on the system with only one DIMM module installed. If the system boots, check for bad DIMM modules or slots by following the Memory Errors Troubleshooting procedure below.

Memory Errors

1. Make sure that the DIMM modules are properly and fully installed.
2. Confirm that you are using the correct memory. Also, it is recommended that you use the same memory type and speed for all DIMMs in the system. See _ for memory details.
3. Check for bad DIMM modules or slots by swapping modules between slots and noting the results.
4. Check the power supply voltage 115V/230V switch.

Losing the System's Setup Configuration

1. Always replace power supplies with the exact same model that came with the system. A poor quality power supply may cause the system to lose the CMOS setup configuration.
2. The battery on your motherboard may be old. Check to verify that it still supplies approximately 3VDC. If it does not, replace it with a new one.
3. If the above steps do not fix the setup configuration problem, contact your vendor for repairs.

When the System Becomes Unstable

If the system becomes unstable during or after OS installation, check the following:

1. CPU/BIOS support: Make sure that your CPU is supported and that you have the latest BIOS installed in your system.
2. Memory support: Make sure that the memory modules are supported by testing the modules using memtest86 or a similar utility.

Note: Refer to the product page on our website at <http://www.supermicro.com> for memory and CPU support and updates.

3. HDD support: Make sure that all storage drives work properly. Replace any bad drives with good ones.

4. System cooling: Check the system cooling to make sure that all heatsink fans and CPU/system fans, etc., work properly. Check the hardware monitoring settings in the BMC to make sure that the CPU and system temperatures are within the normal range. Also check the front panel Overheat LED and make sure that it is not on.
5. Adequate power supply: Make sure that the power supply provides adequate power to the system. Make sure that all power connectors are connected. Please refer to our website for more information on the minimum power requirements.
6. Proper software support: Make sure that the correct drivers are used.

If the system becomes unstable before or during OS installation, check the following:

1. Source of installation: Make sure that the devices used for installation are working properly, including boot devices such as CD.
2. Cable connection: Check to make sure that all cables are connected and working properly.
3. Using the minimum configuration for troubleshooting: Remove all unnecessary components (starting with add-on cards first), and use the minimum configuration (but with a CPU and a memory module installed) to identify the trouble areas. Refer to the steps listed in Section A above for proper troubleshooting procedures.
4. Identifying bad components by isolating them: If necessary, remove a component in question from the chassis, and test it in isolation to make sure that it works properly. Replace a bad component with a good one.
5. Check and change one component at a time instead of changing several items at the same time. This will help isolate and identify the problem.
6. To find out if a component is good, swap this component with a new one to see if the system will work properly. If so, then the old component is bad. You can also install the component in question in another system. If the new system works, the component is good and the old system has problems.

7.4 BIOS Error Beep (POST) Codes

During the POST (Power-On Self-Test) routines, which are performed each time the system is powered on, errors may occur.

Non-fatal errors are those which, in most cases, allow the system to continue the boot-up process. The error messages normally appear on the screen.

Fatal errors are those which will not allow the system to continue the boot-up procedure. If a fatal error occurs, you should consult with your system manufacturer for possible repairs.

These fatal errors are usually communicated through a series of audible beeps. The table below lists some common errors and their corresponding beep codes encountered by users.

BIOS Error Beep (POST) Codes		
Beep Code	Error Message	Description
1 short	Refresh	Circuits have been reset (Ready to power up)
5 short, 1 long	Memory error	No memory detected in system
5 long, 2 short	Display memory read/write error	Video adapter missing or with faulty memory
1 long continuous	System OH	System overheat condition

Additional BIOS POST Codes

The AMI BIOS supplies additional checkpoint codes, which are documented online at <http://www.supermicro.com/support/manuals/> ("AMI BIOS POST Codes User's Guide").

When BIOS performs the Power On Self Test, it writes checkpoint codes to I/O port 0080h. If the computer cannot complete the boot process, a diagnostic card can be attached to the computer to read I/O port 0080h (Supermicro p/n AOC-LPC80-20).


For information on AMI updates, please refer to <http://www.ami.com/products/>.

7.5 Crash Dump Using BMC

In the event of a processor internal error (IERR) that crashes your system, you may want to provide information to support staff. You can download a crash dump of status information using BMC.

Check BMC Error Log

1. Access the BMC web interface.
2. Click the **Server Health** tab, then **Event Log** to verify an IERR error.

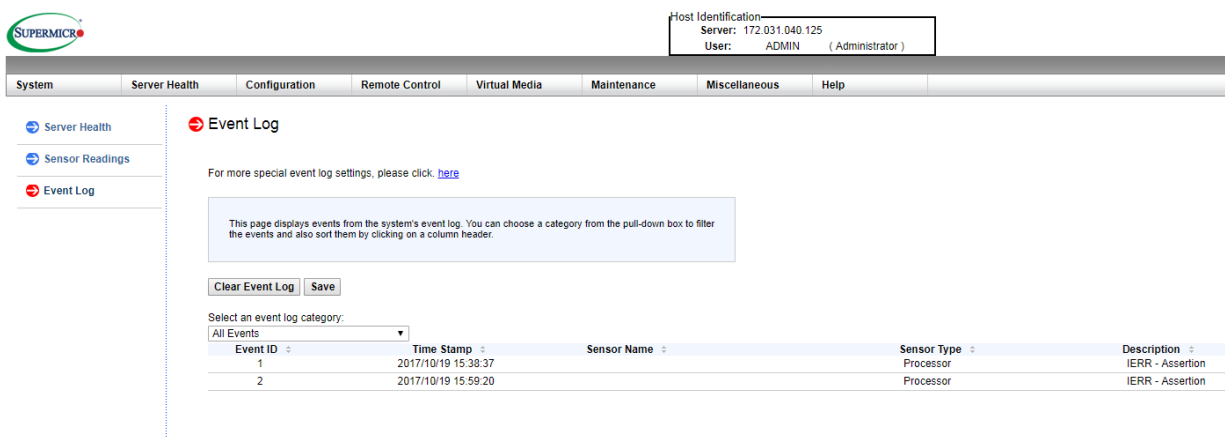

The screenshot shows the BMC web interface. At the top right, there is a 'Host Identification' box containing 'Server: 172.031.040.125' and 'User: ADMIN (Administrator)'. Below this is a navigation menu with tabs: System, Server Health, Configuration, Remote Control, Virtual Media, Maintenance, Miscellaneous, and Help. The 'Server Health' tab is active, and the 'Event Log' sub-tab is selected. On the left, there is a sidebar with 'Server Health', 'Sensor Readings', and 'Event Log' (selected). The main content area shows a message: 'For more special event log settings, please click. [here](#)'. Below this is a text box: 'This page displays events from the system's event log. You can choose a category from the pull-down box to filter the events and also sort them by clicking on a column header.' There are 'Clear Event Log' and 'Save' buttons. A dropdown menu is set to 'All Events'. Below is a table with the following data:

Event ID	Time Stamp	Sensor Name	Sensor Type	Description
1	2017/10/19 15:38:37		Processor	IERR - Assertion
2	2017/10/19 15:59:20		Processor	IERR - Assertion

Figure 7-5. BMC Event Log

In the event of an IERR, the BMC executes a crash dump. You must download the crash dump and save it.

7.6 UEFI BIOS Recovery

Warning: Do not upgrade the BIOS unless your system has a BIOS-related issue. Flashing the wrong BIOS can cause irreparable damage to the system. In no event shall Supermicro be liable for direct, indirect, special, incidental, or consequential damages arising from a BIOS update. If you do update the BIOS, do not shut down or reset the system while the BIOS is updating to avoid possible boot failure.

Overview

The Unified Extensible Firmware Interface (UEFI) provides a software-based interface between the operating system and the platform firmware in the pre-boot environment. The UEFI specification supports an architecture-independent mechanism that will allow the UEFI OS loader stored in an add-on card to boot the system. The UEFI offers clean, hands-off management to a computer during system boot.

Recovering the UEFI BIOS Image

A UEFI BIOS flash chip consists of a recovery BIOS block and a main BIOS block (a main BIOS image). The recovery block contains critical BIOS codes, including memory detection and recovery codes for the user to flash a healthy BIOS image if the original main BIOS image is corrupted. When the system power is turned on, the recovery block codes execute first. Once this process is complete, the main BIOS code will continue with system initialization and the remaining POST (Power-On Self-Test) routines.

Note 1: Follow the BIOS recovery instructions below for BIOS recovery when the main BIOS block crashes.

Note 2: When the BIOS recovery block crashes, you will need to follow the procedures to make a Returned Merchandise Authorization (RMA) request. Also, you may use the Supermicro Update Manager (SUM) Out-of-Band (https://www.supermicro.com.tw/products/nfo/SMS_SUM.cfm) to reflash the BIOS.

Recovering the Main BIOS Block with a USB Device

This feature allows the user to recover the main BIOS image using a USB-attached device without additional utilities used. A USB flash device such as a USB Flash Drive, or a USB CD/DVD ROM/RW device can be used for this purpose. However, a USB storage drive cannot be used for BIOS recovery at this time.

The file system supported by the recovery block is FAT (including FAT12, FAT16, and FAT32) which is installed on a bootable or non-bootable USB-attached device. However, the BIOS might need several minutes to locate the SUPER.ROM file if the media size becomes too large due to the huge volumes of folders and files stored in the device.

To perform UEFI BIOS recovery using a USB-attached device, follow the instructions below.

1. Using a different machine, copy the "Super.ROM" binary image file into the Root "\\" directory of a USB device or a writable CD/DVD.


Note 1: If you cannot locate the "Super.ROM" file in your drive disk, visit our website at www.supermicro.com to download the BIOS package. Extract the BIOS binary image into a USB flash device and rename it "Super.ROM" for the BIOS recovery use.

Note 2: Before recovering the main BIOS image, confirm that the "Super.ROM" binary image file you download is the same version or a close version meant for your motherboard.

2. Insert the USB device that contains the new BIOS image ("Super.ROM") into your USB drive and reset the system when the following screen appears.
3. After locating the healthy BIOS binary image, the system will enter the BIOS Recovery menu as shown below.




Note: At this point, you may decide if you want to start the BIOS recovery. If you decide to proceed with BIOS recovery, follow the procedures below.

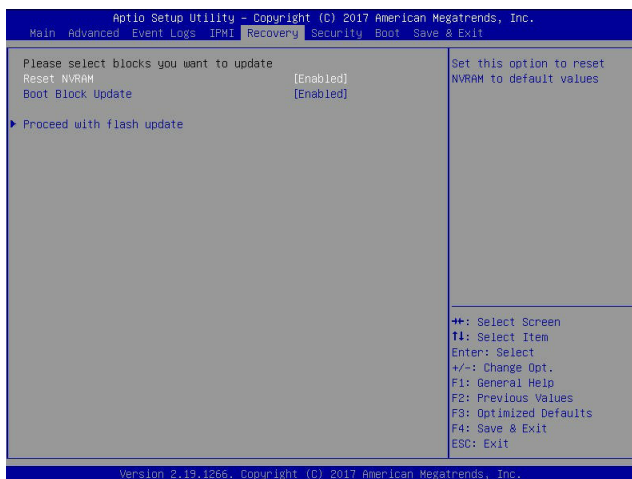


4. When the screen as shown above displays, use the arrow keys to select the item "Proceed with flash update" and press the <Enter> key. You will see the BIOS recovery progress as shown in the screen below.

Note: Do not interrupt the BIOS flashing process until it has completed.

5. After the BIOS recovery process is complete, press any key to reboot the system.
6. Using a different system, extract the BIOS package into a USB flash drive.

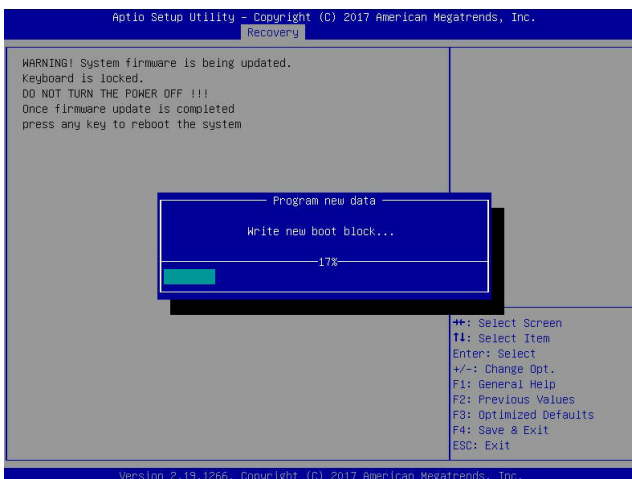


7. Press continuously during system boot to enter the BIOS Setup utility. From the top of the tool bar, select Boot to enter the submenu. From the submenu list, select Boot

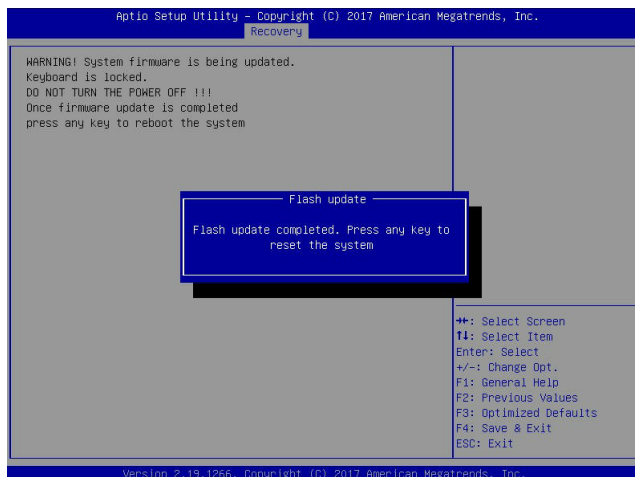

Option #1 as shown below. Then, set Boot Option #1 to [UEFI AP:UEFI: Built-in EFI Shell]. Press <F4> to save the settings and exit the BIOS Setup utility.

8. When the UEFI Shell prompt appears, type fs# to change the device directory path. Go to the directory that contains the BIOS package you extracted earlier from Step 6. Enter flash.nsh BIOSname.### at the prompt to start the BIOS update process.

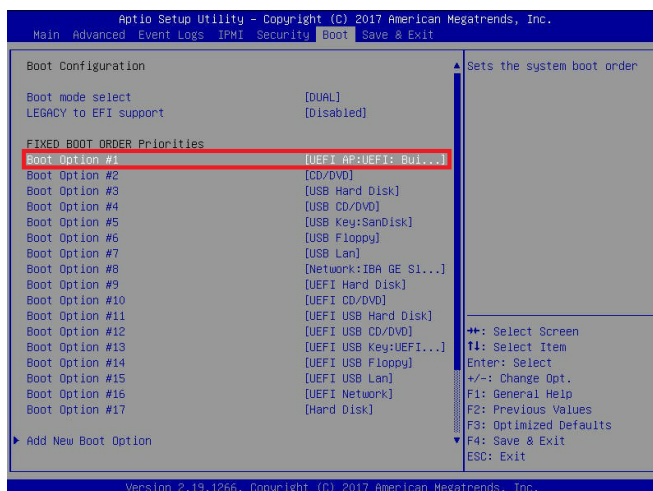

Note: *Do not interrupt this process* until the BIOS flashing is complete.

```

UEFI Interactive Shell v2.1
EDK II
UEFI v2.50 (American Megatrends, 0x0005000C)
Mapping table
  FS0: Alias(s):HD0:0:0:BLK1:
        PciRoot(0x0)/Pci(0x14,0x0)/USB(0x11,0x0)/HD(1,MBR,0x37901D72,0x800,0x1
CR9592)
  BLK0: Alias(s):
        PciRoot(0x0)/Pci(0x14,0x0)/USB(0x11,0x0)
Press F8 in 1 seconds to skip startup.nsh or any other key to continue.
Shell> fs0:
FS0:\> cd \AFUDOS
FS0:\AFUDOS> cd SNIJPM2_03162017
FS0:\AFUDOS\SNIJPM2_03162017> flash.nsh X110PU7_314

```

9. The screen above indicates that the BIOS update process is complete. When you see the screen above, unplug the AC power cable from the power supply, clear CMOS, and plug

```

Done.
[ Access Cmos Port Ex ]
<Read>
Index 0x51: 0x10

Done.
*****
*
* Program BIOS and ME (including FDT) regions...
*
*****
| AMT Firmware Update Utility v5.09.01.1917 |
| Copyright (C)2017 American Megatrends Inc. All Rights Reserved. |
*****
CPUID = 50652

Reading flash ..... done
- ME Data Size checking - ok
- FFS checksums ..... ok
- Check RomLayout ..... Ok
Erasing Boot Block ..... done
Updating Boot Block ..... done
Verifying Boot Block ..... done
_Erasing Main Block ..... 0x00132000 (0x)

```

the AC power cable in the power supply again to power on the system.

10. Press continuously to enter the BIOS Setup utility.

```

Verifying NDB Block ..... done
- Update success for FDR
- Update success for IE
- Successful Update Recovery Loader to OPRx11
- Successful Update MFSB11
- Successful Update FPR11
- Successful Update MFS, IVBI and IVB211
- Successful Update FLOG and UTDK11
- ME Entire Image update success !!
WARNING : System must power-off to have the changes take effect!
Moving F80:\AFUDOS\SNIJPM2_03162017\fdt\k64.efi -> F80:\AFUDOS\SNIJPM2_03162017\
d1.smc
- [ok]
Moving F80:\AFUDOS\SNIJPM2_03162017\afuef1k64.efi -> F80:\AFUDOS\SNIJPM2_0316201
7\afuef1.smc
- [ok]
*****
* Please ignore this 'Shell: Cannot read from file - Device Error'
* warning message due to it does not impact flashing process.
*
*****
Deleting "afuef1.smc"
Delete successful.
FS0:\>

```

11. Press <F3> to load the default settings.
12. After loading the default settings, press <F4> to save the settings and exit the BIOS Setup utility.

7.7 CMOS Clear


JBT1 is used to clear CMOS, which will also clear any passwords. Instead of pins, this jumper consists of contact pads to prevent accidentally clearing the contents of CMOS.

To Clear CMOS

1. First [power down](#) the system completely.
2. [Remove the cover](#) of the chassis to access the motherboard.
3. [Remove the onboard battery](#) from the motherboard.
4. Short the CMOS pads with a metal object such as a small screwdriver for at least four seconds.
5. Remove the screwdriver or shorting device.
6. Replace the cover, reconnect the power cords and power on the system.

Notes: Clearing CMOS will also clear all passwords.

Do not use the PW_ON connector to clear CMOS.

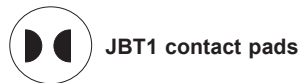

7.8 Where to Get Replacement Components

If you need replacement parts for your system, to ensure the highest level of professional service and technical support, purchase exclusively from our Supermicro Authorized Distributors/System Integrators/Resellers. A list can be found at: <http://www.supermicro.com>. Click the "Where to Buy" tab.

7.9 Reporting an Issue

Technical Support Procedures

Before contacting Technical Support, please take the following steps. If your system was purchased through a distributor or reseller, please contact them for troubleshooting services. They have the best knowledge of your specific system configuration.

1. Please review the [Troubleshooting Procedures](#) in this manual and [Frequently Asked Questions](#) on our website before contacting Technical Support.
2. BIOS upgrades can be downloaded from our website. **Note:** Not all BIOS can be flashed depending on the modifications to the boot block code.
3. If you still cannot resolve the problem, include the following information when contacting us for technical support:
 - System, motherboard, and chassis model numbers and PCB revision number
 - BIOS release date/version (this can be seen on the initial display when your system first boots up)
 - System configuration

An example of a Technical Support form is posted on our [website](#). Distributors: For immediate assistance, please have your account number ready when contacting our technical support department by email.

Returning Merchandise for Service

A receipt or copy of your invoice marked with the date of purchase is required before any warranty service will be rendered. You can obtain service by calling your vendor for a Returned Merchandise Authorization (RMA) number. When returning to the manufacturer, the RMA number should be prominently displayed on the outside of the shipping carton, and mailed prepaid or hand-carried. Shipping and handling charges will be applied for all orders that must be mailed when service is complete.

For faster service, RMA authorizations may be requested online (<http://www.supermicro.com/support/rma/>).

Whenever possible, repack the chassis in the original Supermicro carton, using the original packaging material. If these are no longer available, be sure to pack the chassis securely, using packaging material to surround the chassis so that it does not shift within the carton and become damaged during shipping.

This warranty only covers normal consumer use and does not cover damages incurred in shipping or from failure due to the alteration, misuse, abuse or improper maintenance of products.

During the warranty period, contact your distributor first for any product problems.

Vendor Support Filing System

For issues related to Intel, use the Intel IPS filing system:

<https://www.intel.com/content/www/us/en/design/support/ips/training/welcome.html>

For issues related to Red Hat Enterprise Linux, since it is a subscription based OS, contact your account representative.

7.10 Feedback

Supermicro values your feedback as we strive to improve our customer experience in all facets of our business. Please email us at techwriterteam@supermicro.com to provide feedback on our manuals.

7.11 Contacting Supermicro

Headquarters

Address: Super Micro Computer, Inc.
980 Rock Ave.
San Jose, CA 95131 U.S.A.

Tel: +1 (408) 503-8000

Fax: +1 (408) 503-8008

Email: marketing@supermicro.com (General Information)
Sales-USA@supermicro.com (Sales Inquiries)
Government_Sales-USA@supermicro.com (Gov. Sales Inquiries)
support@supermicro.com (Technical Support)
RMA@supermicro.com (RMA Support)
Webmaster@supermicro.com (Webmaster)

Website: www.supermicro.com

Europe

Address: Super Micro Computer B.V.
Het Sterrenbeeld 28, 5215 ML
's-Hertogenbosch, The Netherlands

Tel: +31 (0) 73-6400390

Fax: +31 (0) 73-6416525

Email: Sales_Europe@supermicro.com (Sales Inquiries)
Support_Europe@supermicro.com (Technical Support)
RMA_Europe@supermicro.com (RMA Support)

Website: www.supermicro.nl

Asia-Pacific

Address: Super Micro Computer, Inc.
3F, No. 150, Jian 1st Rd.
Zhonghe Dist., New Taipei City 235
Taiwan (R.O.C)

Tel: +886-(2) 8226-3990

Fax: +886-(2) 8226-3992

Email: Sales-Asia@supermicro.com.tw (Sales Inquiries)
Support@supermicro.com.tw (Technical Support)
RMA@supermicro.com.tw (RMA Support)

Website: www.supermicro.com.tw

Appendix A

Standardized Warning Statements for DC Systems

About Standardized Warning Statements

The following statements are industry standard warnings, provided to warn the user of situations which have the potential for bodily injury. Should you have questions or experience difficulty, contact Supermicro's Technical Support department for assistance. Only certified technicians should attempt to install or configure components.

Read this section in its entirety before installing or configuring components in the Supermicro AS -3015MR-H8TNR system.

These warnings may also be found on our website at https://www.supermicro.com/about/policies/safety_information.cfm.

Standard Warning Definition



Warning! This warning symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be familiar with standard practices for preventing accidents.

تحذير! هذا الرمز التحذيري يعني خطر. إنك في موقف قد يتسبب في إصابة جسدية. قبل العمل على أي أجهزة يجب أن تكون على دراية بالممارسات القياسية للحيلولة دون وقوع حوادث.

警告！此警告符号代表危险，表示正处于可能遭受严重身体伤害的工作环境。在使用任何设备开始工作之前，务必熟悉防止事故发生的标准工作规范。

警告！此警告符號代表危險。您正處於可能身體可能會受損傷的工作環境中。操作任何設備之前，請熟悉標準做法以預防事故發生。

Advarsel! Dette advarselssymbol betyder fare. Du er i en situation, der kan føre til personskader. Før du arbejder på noget udstyr, skal du være bekendt med standardpraksis for at forebygge ulykker.

Waarschuwing! Dit waarschuwingssymbool betekent gevaar. U bevindt zich in een situatie die lichamelijke letsel zou kunnen veroorzaken. Voordat u aan enige apparatuur gaat werken, moet u vertrouwd zijn met standaard praktijken voor het voorkomen van ongevallen.

Varoitus! Tämä varoitussymboli tarkoittaa vaaraa. Olet tilanteessa, joka voi aiheuttaa ruumiinvammoja. Ennen kuin ryhdyt työskentelemään laitteiden parissa, tutustu onnettomuuksien ehkäisemisen vakiintuneisiin käytäntöihin.

Attention! Ce symbole d'avertissement indique un danger. Vous vous trouvez dans une situation pouvant entraîner des blessures ou des dommages corporels. Avant de travailler sur un équipement, familiarisez-vous avec les procédures couramment utilisées pour éviter les accidents.

Warnung! Dieses Warnsymbol bedeutet Gefahr. Sie befinden sich in einer Situation, die zu Körperverletzungen führen kann. Bevor Sie an Geräten arbeiten, machen Sie sich mit den üblichen Verfahren zur Unfallverhütung vertraut.

אזהרה! סמל אזהרה זה מסמן סכנה. אתה נמצא במצב שעלול לגרום לפגיעה גופנית. לפני שתתחיל לעבוד על כל ציוד, הכר את הנהלים הסטנדרטיים למניעת תאונות.

चेतावनी! यह चेतावनी चहिन खतरे का प्रतीक है। आप ऐसी स्थिति में हैं जिससे शारीरिक चोट लग सकती है। किसी भी उपकरण पर काम करने से पहले, दुर्घटनाओं को रोकने के लिए मानक प्रथाओं से परिचित हो लें।

警告!この警告記号は危険を意味します。人身事故につながる可能性のある状況にあります。機器で作業を行う前に、標準的な事故防止策に精通してください。

경고! 이 경고 기호는 위험이 있음을 알려 줍니다. 신체 상해를 초래할 수 있는 상황입니다. 장비에서 작업하기 전에 사고 예방을 위한 표준 수칙을 숙지하십시오.

Advarsel! Dette advarselsymbolet betyr fare. Du er i en situasjon som kan forårsake kroppsskade. Før du arbeider på noe utstyr, må du gjøre deg kjent med standardrutiner for å forhindre ulykker.

¡Advertencia! Este símbolo de advertencia significa peligro. Se encuentra en una situación que podría provocar lesiones corporales. Antes de trabajar con cualquier equipo, familiarícese con las prácticas estándar para prevenir accidentes.

Varning! Denna varningssymbol betyder fara. Du befinner dig i en situation som kan orsaka personskada. Innan du arbetar på någon utrustning måste du bekanta dig med standardrutiner för att förhindra olyckor.

Electrical Warning Definition



Warning! This warning symbol indicates high voltage may be encountered when performing a procedure. Before you work on any equipment, be aware of the hazards involved with electrical circuitry.

تحذير! يشير رمز التحذير هذا إلى احتمالية مواجهة جهد كهربائي عالٍ عند إجراء عملية ما. قبل البدء في العمل على أي أجهزة كن على دراية بالمخاطر المرتبطة بالدوائر الكهربائية.

警告！此警告符号表示作业过程中可能会遇到高电压。操作任何设备之前，请务必了解电路的危险。

警告！此警告符號表示執行程序時可能會遇到高電壓。操作任何設備之前，請瞭解與電路相關的危害。

Advarsel! Dette advarselssymbol indikerer, at der kan opstå høj spænding under udførelsen af en procedure. Før du arbejder på noget udstyr, skal du være opmærksom på de farer, der er forbundet med elektriske kredsløb.

Waarschuwing! Dit waarschuwingssymbool geeft aan dat men hoge spanning tegen kan komen bij het uitvoeren van een procedure. Voordat u aan enige apparatuur gaat werken, moet u zich bewust zijn van de gevaren van elektrische schakelsystemen.

Varoitus! Tämä varoitussymboli osoittaa, että toimenpiteen suorittamisen aikana voi esiintyä korkeaa jännitettä. Ennen kuin ryhdyt työskentelemään laitteiden parissa, ota huomioon sähköpiireihin liittyvät vaarat.

Attention! Ce symbole d'avertissement indique un risque d'exposition à une tension élevée lors de l'exécution d'une procédure. Avant de travailler sur un équipement, prenez connaissance des dangers liés aux circuits électriques.

Warnung! Dieses Warnsymbol weist darauf hin, dass bei der Durchführung eines Vorgangs Hochspannung auftreten kann. Bevor Sie an Geräten arbeiten, machen Sie sich mit den Gefahren elektrischer Schaltungen vertraut.

אזהרה! סמל אזהרה זה מציין כי ייתכן שתיתקל במתח גבוה בעת ביצוע הליך. לפני עבודה על ציוד כלשהו, עליך להיות מודע לסכנות הכרוכות במעגלים חשמליים.

चेतावनी! यह चेतावनी चहिन इंगति करता है कि प्रक्रिया को नष्पादति करते समय उच्च वोल्टेज का सामना करना पड़ सकता है। किसी भी उपकरण पर काम करने से पहले, वदियुत सर्कटिरी से जुड़े खतरो के प्रतिसचेत रहे।

警告!この警告記号は、手順を実行する際に高電圧が発生する可能性があることを示しています。機器で作業を行う前に、電気回路に関連する危険に注意してください。

경고! 이 경고 기호는 절차 수행 중 고전압에 노출될 수 있음을 알려 줍니다. 장비에서 작업하기 전에 전기 회로와 관련된 위험 요소를 충분히 인지하십시오.

Advarsel! Dette varselsymbolet indikerer at det kan oppstå høy spenning når en prosedyre utføres. Før du arbeider på utstyr, må du være oppmerksom på farene forbundet med elektriske kretser.

¡Advertencia! Este símbolo de advertencia indica que puede haber alto voltaje al realizar un procedimiento. Antes de trabajar con cualquier equipo, tenga en cuenta los peligros que conllevan los circuitos eléctricos.

Varning! Denna varningssymbol indikerar att hög spänning kan förekomma när en procedur utförs. Innan du arbetar med någon utrustning ska du vara medveten om de faror som är förknippade med elektriska kretsar.

Installation Instructions



Warning! Read the installation instructions before connecting the system to the power source.

تحذير! اقرأ تعليمات التثبيت قبل توصيل النظام بمصدر الطاقة.

警告！将此系统连接电源前，请先阅读安装说明。

警告！將系統與電源連接前，請先閱讀安裝說明。

Advarsel! Læs monteringsvejledningen, før systemet slttes til strømforsyningen.

Waarschuwing! Raadpleeg de installatie-instructies voordat u het systeem op de voedingsbron aansluit.

Varoitus! Lue asennusohjeet ennen järjestelmän liittämistä virtalähteeseen.

Attention! Avant de brancher le système sur la source d'alimentation, consulter les directives d'installation.

Warnung! Vor dem Anschließen des Systems an die Stromquelle die Installationsanweisungen lesen.

אזהרה! יש לקרוא את הוראות ההתקנה לפני חיבור המערכת למקור המתח.

चेतावनी! ससि्टम को बजिली के स्रोत से जोड़ने से पहले स्थापना नरिदेश पढ़े ।

警告!システムを電源に接続する前に、設置手順書をお読み下さい。

경고! 시스템을 전원에 연결하기 전에 설치 안내를 읽어주십시오.

Advarsel! Les installasjonsinstruksjonene før du kobler systemet til strømkilden.

¡Advertencia! Lea las instrucciones de instalación antes de conectar el sistema a la red de alimentación.

Varning! Läs installationsanvisningarna innan du ansluter systemet till strömkällan.

Circuit Breaker



Warning! This product relies on the building's installation for short-circuit (overcurrent) protection. Ensure that the protective device is rated not greater than: 250 VAC, 20 A.

تحذير! يعتمد هذا المنتج على التركيبات الكهربائية في المبنى للحماية من حدوث قصر دائرة (تيار زائد). تأكد من أن تصنيف جهاز الحماية لا يتجاوز: 250 فولت تيار متردد, 20 أمبير.

警告! 此产品由建筑物的供电系统提供短路 (过载) 保护, 并确保额定电压/电流不大于 250 VAC/20 A。

警告! 此產品的短路 (過載電流) 保護由建築物的供電系統提供, 確保短路保護設備的額定電流不大於 250 VAC、20 A。

Advarsel! Dette produkt forudsætter, at bygningens elinstallation sørger for kortslutningsbeskyttelse (overstrøm). Sørg for, at beskyttelsesanordningen ikke er klassificeret til mere end: 250 VAC, 20 A.

Waarschuwing! Dit product vertrouwt op de installatie van het gebouw voor kortsluitbeveiliging (overstroombeveiliging). Zorg ervoor dat de beveiligingsvoorziening is gespecificeerd voor niet meer dan: 250 VAC, 20 A.

Varoitus! Tämä tuote on riippuvainen rakennuksen asennuksesta oikosulku- (ylivirta-) suojauksen osalta. Varmista, että suojalaitteen nimellisarvot eivät ylitä seuraavia arvoja: 250 VAC, 20 A.

Attention! Ce produit dépend de l'installation du bâtiment pour la protection contre les courts-circuits (surintensité). Assurez-vous que le dispositif de protection n'est pas supérieur à : 250 VAC, 20 A.

Warnung! Dieses Produkt ist auf den Kurzschluss- bzw. Überstromschutz der Gebäudeinstallation angewiesen. Stellen Sie sicher, dass die Schutzvorrichtung für maximal 250 VAC, 20 A ausgelegt ist.

אזהרה! מוצר זה מסתמך על תשתית החשמל של המבנה להגנה מפני קצר חשמלי (זרם יתר). ודא שדירוג התקן ההגנה אינו עולה על: 250 VAC, 20 A.

चेतावनी! यह उत्पाद शॉर्ट-सर्किट (ओवरकरंट) सुरक्षा के लिए भवन की स्थापना पर निर्भर करता है। सुनिश्चित करें कि सुरक्षात्मक उपकरण की रेटिंग नमिनलखिति से अधिक न हो: 250 VAC, 20 A.

警告!この製品は、短絡(過電流)保護装置がある建物での設置を前提としています。保護装置の定格が次の値以下であることを確認ください:250 VAC、20 A。

경고! 이 제품은 단락(과전류) 방지에 대해서 전적으로 건물의 관련 설비에 의존합니다. 보호 장치의 정격이 다음 값을 초과하지 않도록 하십시오: 250 VAC(볼트), 20 A(암페어).

Advarsel! Dette produktet er avhengig av bygningens installasjon for kortslutningsbeskyttelse (overstrømsbeskyttelse). Sørg for at beskyttelsesanordningen ikke er klassifisert som høyere enn: 250 V vekselstrøm, 20 A.

¡Advertencia! Este producto depende de la instalación del edificio para protección contra cortocircuitos (sobrecorriente). Asegúrese de que el dispositivo de protección tenga una clasificación no mayor a: 250 VAC, 20 A.

Varning! Denna produkt är beroende av byggnadens installation för kortslutningsskydd (överströmsskydd). Se till att skyddsanordningen inte är märkt för mer än: 250 VAC, 20 A.

Power Disconnection Warning



Warning! The system must be disconnected from all sources of power and the power cord removed from the power supply module(s) before accessing the chassis interior to install or remove system components (except for hot-swappable components).

تحذير! يجب فصل النظام عن جميع مصادر الطاقة، وإزالة سلك الطاقة من وحدة/وحدات إمداد الطاقة قبل الدخول إلى الجزء الداخلي من الهيكل لتثبيت أو فك مكونات النظام (باستثناء المكونات القابلة للاستبدال السريع).

警告！在打开机箱并安装或移除内部器件（热插拔器件除外）前，必须将系统完全断电，并移除电源线。

警告！在您打開機殼安裝或移除內部元件（熱插拔元件除外）前，必須將系統完全斷電，並移除電源線。

Advarsel! Systemet skal afbrydes fra alle strømkilder, og strømkablet skal fjernes fra strømforsyningsmodulerne, før der gives adgang til kabinettet for at montere eller fjerne systemkomponenter (undtagen hot-swap-komponenter).

Waarschuwing! Het systeem moet worden losgekoppeld van alle voedingen en het stroomsnoer moet uit de voedingsmodule(s) worden gehaald voorafgaand aan toegang tot de binnenkant van het chassis voor installeren of verwijderen van systeemcomponenten (behalve hot-swap componenten).

Varoitus! Järjestelmä on irrotettava kaikista virtalähteistä ja virtajohto on irrotettava virtalähdemoduulista (moduuleista) ennen kotelon sisälle pääsyä järjestelmän komponenttien asentamista tai poistamista varten (lukuun ottamatta hot-swap-komponentteja).

Attention! Le système doit être déconnecté de toutes les sources d'alimentation et le cordon d'alimentation doit être débranché du/des modules d'alimentation avant d'accéder à l'intérieur du châssis pour installer ou retirer des composants du système (à l'exception des composants remplaçables à chaud).

Warnung! Das System muss von allen Stromquellen getrennt und das Netzkabel von den Netzteilmodulen entfernt werden, bevor auf den Innenraum des Chassis zugegriffen wird, um Systemkomponenten zu installieren oder zu entfernen (ausgenommen Hot-Swap-Komponenten).

אזהרה! יש לנתק את המערכת מכל מקורות הכוח ולהסיר את כבל החשמל ממודול/י אספקת החשמל לפני הגישה לחלק הפנימי של המארז לצורך התקנה או הסרה של רכיבי המערכת (למעט רכיבים הניתנים להחלפה חמה).

चेतावनी! सस्टिम के घटकों को इंस्टॉल करने या निकालने (हॉट-स्वैप घटकों को छोड़कर) के लिए चैसिस के आंतरिकि भाग तक पहुँचने से पहले, सस्टिम को बजिली के सभी स्रोतों से डिस्कनेक्ट किया जाना चाहिए और बजिली की आपूर्ति मॉड्यूल से पावर कॉर्ड को निकाल दिया जाना चाहिए।

警告!システムコンポーネント(ホットスワップコンポーネントを除く)の取り付けまたは取り外しを行うために、シャーシ内部にアクセスするには、システムの電源はすべてのソースから切断され、電源コードは電源モジュールから取り外す必要があります。

경고! (핫스왑 구성품을 제외하고) 시스템에 부품들을 장착하거나 제거하기 위해서는 쉐시 내부에 접근하기 전에 반드시 전원 공급장치로부터 연결되어있는 모든 전원과 전기코드를 분리해주어야 합니다.

Advarsel! Systemet må kobles fra alle strømkilder, og strømledningen må fjernes fra strømforsyningsmodulen(e) før man går inn i kabinettet for å installere eller fjerne systemkomponenter (unntatt komponenter som kan byttes ut under drift).

¡Advertencia! El sistema debe estar desconectado de todas las fuentes de energía y el cable de alimentación debe retirarse de los módulos de fuente de alimentación antes de acceder al interior del chasis para instalar o quitar componentes del sistema (excepto los componentes reemplazables en caliente).

Varning! Systemet måste vara fränkopplat från alla strömkällor och strömladden måste vara borttagen från strömförsörjningsmodulerna innan du öppnar chassit för att installera eller ta bort systemkomponenter (med undantag för hot-swap-komponenter).

Equipment Installation



Warning! Only authorized personnel and qualified service persons should be allowed to install, replace, or service this equipment.

تحذير! لا يُسمح إلا للعاملين المعتمدين وفنيي الخدمة المؤهلين بتركيب هذا الجهاز أو استبداله أو صيانته.

警告！仅限经过授权培训且拥有相关资质的人员才能进行此设备的安装、更换和维修。

警告！只有經過受訓且具資格人員才可安裝、更換與維修此設備。

Advarsel! Dette udstyr må kun installeres, udskiftes eller serviceres af autoriseret personale og kvalificerede servicemedarbejdere.

Waarschuwing! Alleen geautoriseerd personeel en gekwalificeerd onderhoudspersoneel mag deze apparatuur installeren, vervangen of onderhouden.

Varoitus! Vain valtuutetut henkilöt ja pätevät huoltoteknikot saavat asentaa, vaihtaa tai huoltaa tätä laitetta.

Attention! Seul le personnel autorisé et le personnel de maintenance qualifié doivent être autorisés à installer, remplacer ou entretenir cet équipement.

Warnung! Nur autorisiertes Personal und qualifizierte Servicetechniker dürfen dieses Gerät installieren, austauschen oder warten.

אזהרה! רק אנשי צוות מורשים ואנשי שירות מוסמכים רשאים להתקין, להחליף או לטפל בצידוד זה.

चेतावनी! केवल अधिकृत कर्मचारी और योग्य सेवा व्यक्तियों को ही इस उपकरण को स्थापति करने, बदलने या सेवा देने की अनुमति दी जानी चाहिए।

警告! トレーニングを受け認定された人だけがこの機器の設置、交換、またはサービスを許可されています。

경고! 승인된 직원과 자격을 갖춘 서비스 담당자만이 이 장비를 설치, 교체 또는 서비스할 수 있습니다.

Advarsel! Kun autorisert personell og kvalifiserte servicefolk skal ha tillatelse til å installere, bytte ut eller utføre service på dette utstyret.

¡Advertencia! Sólo el personal autorizado y el personal de servicio calificado pueden instalar, reemplazar o dar servicio a este equipo.

Varning! Endast auktoriserad personal och kvalificerade servicetekniker får installera, byta ut eller utföra service på denna utrustning.

Rack Stability Hazard



Warning! Stability hazard. The rack may tip over causing serious personal injury. Before extending the rack to the installation position, read the installation instructions. Do not put any load on the slide-rail mounted equipment in the installation position. Do not leave the slide-rail mounted equipment in the installation position.

تحذير! خطر عدم الاستقرار. قد ينقلب الحامل، مما قد يتسبب في إصابات شخصية خطيرة. قبل تمديد الحامل إلى موضع التركيب اقرأ إرشادات التركيب. لا تضع أي حمولة على الأجهزة المركبة على حوامل منزلقة في وضع التركيب. لا تترك الأجهزة المركبة على حوامل منزلقة في وضع التركيب.

警告！稳定性危险。机架可能会翻倒，造成严重的人身伤害。在将机架延伸到安装位置之前，请阅读安装说明。请勿在安装位置对滑轨安装的设备施加任何负载。请勿将滑轨安装的设备留在安装位置。

警告！稳定性危险。机架可能会翻倒，造成严重的人身伤害。将机架延伸至安装位置前，请先阅读安装说明。请勿在安装位置的滑轨安装设备上放置任何负载。请勿将滑轨安装设备留在安装位置。

Advarsel! Stabilitetsfare. Udstyrsskabet kan vælte, hvilket kan føre til alvorlige personskader. Læs monteringsvejledningen, før udstyrsskabet trækkes ud til monteringsstedet. Anbring ikke nogen belastning på udstyr monteret på skinner, når det er på monteringsstedet. Efterlad ikke udstyr monteret på skinner på monteringsstedet.

Waarschuwing! Gevaar voor instabiliteit. Het rack kan kantelen en ernstig persoonlijk letsel veroorzaken. Lees de installatie-instructies voordat u het rack uitschuift naar de installatiepositie. Plaats geen last op de op de glijrail gemonteerde apparatuur in de installatiepositie. Laat de op de glijrail gemonteerde apparatuur niet in de installatiepositie staan.

Varoitus! Vakausvaara. Teline voi kaatua ja aiheuttaa vakavia henkilövahinkoja. Ennen telineen asettamista asennusasentoon, lue asennusohjeet. Älä aseta mitään kuormitusta liukukiskoon asennettuihin laitteisiin asennusasennossa. Älä jätä liukukiskoon asennettuja laitteita asennusasentoon.

Attention! Danger d'instabilité. Le rack peut basculer et provoquer des blessures corporelles graves. Avant d'étendre le rack en position d'installation, lire les instructions d'installation. Ne pas charger l'équipement monté sur rail de glissière en position d'installation. Ne pas laisser l'équipement monté sur rail de glissière en position d'installation.

Warnung! Gefahr der Instabilität. Das Rack kann umkippen und schwere Verletzungen verursachen. Lesen Sie vor dem Ausziehen des Racks in die Installationsposition die Installationsanweisungen. Belasten Sie in der Installationsposition keine auf Gleitschienen montierten Geräte. Lassen Sie auf Gleitschienen montierte Geräte nicht unbeaufsichtigt in der Installationsposition.

אזהרה! סכנת יציבות. הארון עלול להתהפך ולגרום לפציעה גופנית חמורה. לפני הארכת הארון למצב התקנה, יש לקרוא את הוראות ההתקנה. אין להניח עומס כלשהו על הציוד המותקן על מסילות ההחלקה, יש לקרוא במצב התקנה. אין להשאיר את הציוד המותקן על מסילות ההחלקה במצב התקנה.

चेतावनी! स्थिरता का खतरा। रैक पलट सकता है जिससे गंभीर व्यक्तिगत चोट लग सकती है। रैक को इंस्टालेशन स्थिति तक बढ़ाने से पहले, स्थापना निर्देश पढ़ें। स्थापना स्थिति में स्लाइड-रेल पर लगे उपकरणों पर कोई भार न डालें। स्लाइड-रेल पर लगे उपकरणों को स्थापना स्थिति में न छोड़ें।

警告!安定性に危険があります。ラックが転倒して、重大な人身事故を引き起こす可能性があります。ラックを設置位置まで伸ばす前に、設置手順をお読みください。設置位置にあるスライドレールに取り付けられた機器に負荷をかけないでください。スライドレールに取り付けられた機器を設置位置に放置しないでください。

경고! 안정성 위험. 랙이 넘어져 심각한 개인 부상을 입을 수 있습니다. 랙을 설치 위치까지 확장하기 전에 설치 지침을 읽으십시오. 설치 위치에서 슬라이드 레일 장착 장비에 하중을 가하지 마십시오. 슬라이드 레일 장착 장비를 설치 위치에 두지 마십시오.

Advarsel! Stabilitetsfare. Stativet kan velte og forårsake alvorlig personskade. Les installasjonsanvisningen før du forlenger stativet til installasjonsposisjonen. Ikke belast utstyret som er montert på glideskinnen i installasjonsposisjon. Ikke la utstyret som er montert på glideskinnen stå i installasjonsposisjon.

¡Advertencia! Peligro de inestabilidad. El rack podría volcarse y causar lesiones personales graves. Antes de extender el rack a la posición de instalación, lea las instrucciones de instalación. No coloque ninguna carga sobre el equipo montado sobre rieles deslizantes en la posición de instalación. No deje el equipo montado sobre rieles deslizantes en la posición de instalación.

Varning! Stabilitetsrisk. Racket kan välta och orsaka allvarliga personskador. Läs monteringsanvisningarna innan du skjuter ut racket till monteringspositionen. Belasta ej utrustning som är monterad på glidskena i installationsläget. Lämna ej utrustning som är monterad på glidskena i monteringsläget.

Rack-Mounted Equipment Warning



Warning! Rack-mounted equipment should not be used as a shelf or work space.

تحذير! لا ينبغي استخدام المعدات المثبتة على حوامل كرف أو مساحة عمل.

警告！机架式设备不应用作货架或工作空间。

警告！不得將機架式設備當作置物架或工作空間使用。

Advarsel! Udstyr, der er monteret i udstyrsskabe, må ikke bruges som hylder eller arbejdsflader.

Waarschuwing! In rack gemonteerde apparatuur moet niet worden gebruikt als plank of werkruimte.

Varoitus! Telineasennettavia laitteita ei saa käyttää hyllyinä tai työtasoina.

Attention! Un équipement installé en rack ne doit pas être utilisé comme une étagère ou un espace de travail.

Warnung! In Racks montierte Geräte dürfen nicht als Ablagefläche oder Arbeitsfläche verwendet werden.

אזהרה! אין להשתמש בצידוד המותקן במסד (Rack) כמדף או כמשטח עבודה.

चेतावनी! रैक-माउंटेड उपकरण का उपयोग शेल्फ या कार्यक्षेत्र के रूप में नहीं किया जाना चाहिए।

警告!ラックマウント機器を棚や作業スペースとして使用しないでください。

경고! 랙 장착 장비를 선반 또는 작업대처럼 사용하지 마십시오.

Advarsel! Rackmontert utstyr skal ikke brukes som hylle eller arbeidsområde.

¡Advertencia! Los equipos montados en rack no deben utilizarse como estante o espacio de trabajo.

Varning! Rackmonterad utrustning ska inte användas som hylla eller arbetsyta.

Restricted Access Location



Warning! This unit is intended for installation in restricted access areas. A restricted access area can be accessed only by an instructed person or a skilled person.

تحذير! هذه الوحدة مخصصة للتركيب في المناطق الممنوع الدخول إليها. يقتصر الدخول إلى منطقة منع الدخول إلا للأشخاص المدربين أو المهرة.

警告！此装置应安装在限制进出的场所。此类场所仅限经过相关训练或技术熟练的人员进出。

警告！此部件應安裝在限制進出區域。只有受過指導的人員或專業人員才可進出限制進出區域。

Advarsel! Denne enhed er beregnet til montering i områder med begrænset adgang. Et område med begrænset adgang må kun tilgås af en instrueret person eller en fagkyndig person.

Waarschuwing! Deze eenheid is bedoeld voor installatie in gebieden met beperkte toegang. Er kan alleen toegang worden verkregen tot een gebied met beperkte toegang door een geïnstrueerde persoon of een ervaren persoon.

Varoitus! Tämä laite on tarkoitettu asennettavaksi rajoitetun pääsyn alueille. Rajoitetun pääsyn alueelle pääsee vain koulutettu tai ammattitaitoinen henkilö.

Attention! Cet appareil est destiné à être installé dans des zones à accès restreint. Une zone à accès restreint n'est accessible qu'à une personne formée ou qualifiée.

Warnung! Diese Einheit ist zur Installation in Bereichen mit beschränktem Zutritt vorgesehen. Ein Bereich mit beschränktem Zutritt darf nur von unterwiesenen oder fachkundigen Personen betreten werden.

אזהרה! יחידה זו מיועדת להתקנה באזורים עם גישה מוגבלת. ניתן לגשת לאזור עם גישה מוגבלת רק על ידי אדם שהוכשר לכך או אדם מיומן.

चेतावनी! यह इकाई प्रतबंधित पहुँच वाले क्षेत्रों में स्थापना के लिए ही है। प्रतबंधित पहुँच वाले क्षेत्र में केवल एक निर्देशित व्यक्ति या कुशल व्यक्तिद्वारा ही पहुँचा जा सकता है।

警告!このユニットはアクセス制限区域に設置することを想定しています。アクセス制限区域は、トレーニングを受けた人または熟練者だけが出入り可能です。

경고! 본 장치는 접근이 제한된 구역에 설치하도록 되어있습니다. 교육을 받은 사람 또는 숙련된 사람만 접근 제한 구역에 들어갈 수 있습니다.

Advarsel! Denne enheten er beregnet for installasjon i områder med begrenset tilgang. Et område med begrenset tilgang kan kun nås av en person som har fått instruksjoner eller en fagperson.

¡Advertencia! Esta unidad está diseñada para su instalación en áreas de acceso restringido. A un área de acceso restringido solo puede acceder una persona instruida o una persona capacitada.

Varning! Denna enhet är avsedd för installation i områden med begränsad åtkomst. Ett område med begränsad åtkomst får endast beträdas av en instruerad eller kvalificerad person.

Battery Handling



Warning! There is risk of explosion if the battery is replaced by an incorrect type. Replace the battery only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

تحذير! يوجد خطر حدوث انفجار إذا تم استبدال البطارية بنوع غير صحيح. استبدل البطارية بنفس النوع أو نوع مكافئ موصى به من قبل الشركة المصنعة فقط. يجب التخلص من البطاريات المستخدمة وفقاً لإرشادات الجهة المصنعة.

警告! 如果更换的电池类型不正确, 有爆炸危险。更换电池时, 请使用制造商推荐的相同或同等型号的电池。请按制造商的说明处理废旧电池。

警告! 如果更換的電池類型不正確, 有爆炸危險。請使用製造商建議之相同或功能相當的電池更換原有電池。請按照製造商的說明指示處理廢棄舊電池。

Advarsel! Der er risiko for eksplosion, hvis batteriet skiftes med et batteri af den forkerte type. Batteriet må kun skiftes med et batteri af samme eller tilsvarende type, der anbefales af producenten. Opbrugte batterier skal bortskaffes i henhold til vejledningerne fra producenten.

Waarschuwing! Er bestaat een explosiegevaar als de batterij wordt vervangen door een onjuist type. Vervang de batterij alleen door hetzelfde type of een soortgelijk type aanbevolen door de fabrikant. Verwijder gebruikte batterijen overeenkomstig de instructies van de fabrikant.

Varoitus! Väärän tyyppisen akun käyttö voi aiheuttaa räjähdysvaaran. Vaihda akku vain valmistajan suosittelemaan samaan tai vastaavaan tyyppiseen akkuun. Hävitä käytetyt paristot valmistajan ohjeiden mukaisesti.

Attention! Il y a un risque d'explosion si la batterie est remplacée par une d'un type incorrect. Remplacez la batterie uniquement par une d'un type identique ou équivalent recommandé par le fabricant. Éliminez les batteries usagées conformément aux instructions du fabricant.

Warnung! Es besteht Explosionsgefahr, wenn die Batterie durch einen falschen Typ ersetzt wird. Ersetzen Sie die Batterie ausschließlich durch denselben oder einen vom Hersteller empfohlenen gleichwertigen Typ. Entsorgen Sie gebrauchte Batterien gemäß den Anweisungen des Herstellers.

אזהרה! קיימת סכנת פיצוץ אם הסוללה תוחלף בסוללה מסוג שגוי. החלף את הסוללה רק בסוללה מאותו סוג או בסוללה מקבילה המומלצת על ידי היצרן. השלך סוללות משומשות בהתאם להוראות היצרן.

चेतावनी! यदि बैटरी को गलत प्रकार से बदला जाता है तो वस्फोट का जोखिम है। बैटरी को केवल निर्माता द्वारा अनुशंसित समान या समकक्ष प्रकार से ही बदलें। इस्तेमाल की गई बैटरियों का नपिटान निर्माता के निर्देशों के अनुसार करें।

警告! 電池を間違ったタイプに交換すると爆発する危険があります。交換する電池はメーカーが推奨するタイプ、または同等のものを使用してください。使用済み電池は、メーカーの指示に従って廃棄してください。

경고! 배터리를 잘못된 종류로 교체하면 폭발의 위험이 있습니다. 기존 배터리와 동일하거나 제조사에서 권장하는 동등한 종류의 배터리로만 교체해야 합니다. 제조사의 안내에 따라 사용된 배터리를 처리하여 주십시오.

Advarsel! Det er fare for eksplosjon hvis batteriet byttes ut med et av feil type. Batterier skal kun byttes ut med et av lik eller tilsvarende type, som anbefalt av produsenten. Kast brukte batterier i henhold til produsentens instruksjoner.

¡Advertencia! Existe riesgo de explosión si se sustituye la batería por una de tipo incorrecto. Reemplace la batería únicamente con el mismo tipo o uno equivalente recomendado por el fabricante. Deseche las baterías usadas de acuerdo con las instrucciones del fabricante.

Varning! Det finns risk för explosion om batteriet byts ut mot en felaktig typ. Byt endast ut batteriet mot ett batteri av samma eller likvärdig typ som rekommenderas av tillverkaren. Kassera förbrukade batterier i enlighet med tillverkarens anvisningar.

Redundant Power Supplies



Warning! This unit might have more than one power supply connection. All connections must be removed to de-energize the unit.

تحذير! قد تحتوي هذه الوحدة على أكثر من وصلة لإمداد الطاقة. يجب فصل جميع التوصيلات لفصل الطاقة عن الوحدة.

警告! 本设备可能有多个电源连接。必须切断所有连接，才能使设备断电。

警告! 此裝置連接的電源可能不只一個。必須切斷所有電源才能停止對該裝置的供電。

Advarsel! Denne enhed kan have mere end én strømforsyningsforbindelse. Alle forbindelser skal fjernes for at deaktivere spændingen.

Waarschuwing! Deze eenheid kan meer dan één stroomtoevoeraansluiting bevatten. Alle aansluitingen dienen verwijderd te worden om het apparaat stroomloos te maken.

Varoitus! Laitteessa voi olla useampi kuin yksi virtalähteen liitäntä. Laitteen virta on katkaistava irrottamalla kaikki liitännät.

Attention! Cette unité peut avoir plus d'une connexion d'alimentation. Pour supprimer toute tension et tout courant électrique de l'unité, toutes les connexions d'alimentation doivent être débranchées.

Warnung! Diese Einheit kann über mehr als eine Stromversorgungsanschluss verfügen. Um sicherzustellen, dass die Einheit spannungsfrei ist, müssen alle Verbindungen entfernt werden.

אזהרה! יחידה זו עשויה לכלול יותר מחיבור אחד לספק כוח. יש לנתק את כל החיבורים כדי להפסיק את הזנת המתח ליחידה.

चेतावनी! इस इकाई में एक से अधिक पावर सप्लाय कनेक्शन हो सकते हैं। इकाई को ऊर्जा-मुक्त (डी-एनर्जाइज) करने के लिए सभी कनेक्शन हटा दिए जाने चाहिए।

警告!このユニットは複数の電源装置が接続されている場合があります。ユニットの電源を切るためには、すべての接続を取り外さなければなりません。

경고! 이 장치에는 한 개 이상의 전원 공급 단자가 연결되어 있을 수 있습니다. 이 장치에 전원을 차단하기 위해서는 모든 연결 단자를 제거해야만 합니다.

Advarsel! Denne enheten kan ha mer enn én strømforsyningstilkobling. Alle tilkoblinger må fjernes for å gjøre enheten strømløs.

¡Advertencia! Puede que esta unidad tenga más de una conexión para fuentes de alimentación. Para cortar por completo el suministro de energía, deben desconectarse todas las conexiones.

Varning! Denna enhet kan ha mer än en strömförsörjningsanslutning. Alla anslutningar måste tas bort för att enheten ska bli strömlös.

Backplane Voltage



Warning! Hazardous voltage or energy is present on the backplane when the system is operating. Use caution when servicing. Read the instructions before servicing.

تحذير! يوجد جهد أو طاقة خطيرة على اللوحة الخلفية أثناء تشغيل النظام. توخ الحذر عند إجراء الصيانة. اقرأ التعليمات قبل إجراء الصيانة.

警告! 当系统运行时, 背板上存在危险电压或能量, 进行维修时务必小心。维修前请阅读使用说明。

警告! 系統運作時, 背板上存在危險電壓或能量。維修時請小心。維修前請閱讀說明書。

Advarsel! Når systemet er i drift, er farlig spænding eller energi til stede på bagpladen. Vær forsigtig ved servicering. Læs instruktionerne før service.

Waarschuwing! Gevaarlijke spanning of energie is aanwezig op de achterzijde wanneer het systeem in bedrijf is. Wees voorzichtig bij service. Lees de instructies voorafgaand aan service.

Varoitus! Järjestelmän ollessa käynnissä takapaneelissa on vaarallista jännitettä tai energiaa. Ole varovainen huoltotöiden aikana. Lue ohjeet ennen huoltoa.

Attention! Une tension ou de l'énergie dangereuse est présente sur le panneau arrière lorsque le système est en fonctionnement. Soyez prudent lors de l'entretien. Lisez les instructions avant d'effectuer un entretien.

Warnung! Bei eingeschaltetem System liegt an der Backplane gefährliche Spannung oder Energie an. Seien Sie bei Wartungsarbeiten vorsichtig. Lesen Sie vor der Wartung die Anweisungen.

אזהרה! מתח או אנרגיה מסוכנים קיימים בלוח האחורי כאשר המערכת פועלת. יש לנקוט בזהירות בעת ביצוע תחזוקה. קרא את ההוראות לפני ביצוע תחזוקה.

चेतावनी! जब सस्टिम चालू होता है, तो बैकप्लेन पर खतरनाक वोल्टेज या ऊर्जा मौजूद होती है। सर्वसिगि करते समय सावधानी बरते। सर्वसिगि से पहले नर्दिश पढ़े।

警告!システムの稼働中は、危険な電圧または電流がバックプレーン上にかかっています。修理を行う際には注意してください。修理を行う前に取扱説明書をお読みください。

경고! 시스템이 동작 중일 때 후면판(Backplane)에는 위험한 전압이나 에너지가 발생합니다. 서비스 작업 시 주의하십시오. 서비스 작업 전에 지침을 읽으십시오.

Advarsel! Det er farlig spenning eller energi på bakplaten når systemet er i drift. Vær forsiktig ved service. Les instruksjonene før service.

¡Advertencia! Hay voltaje o energía peligrosos presentes en la placa posterior cuando el sistema está en funcionamiento. Tenga cuidado al realizar el mantenimiento. Lea las instrucciones antes de realizar el mantenimiento.

Varning! Farlig spänning eller energi finns på backplane när systemet är i drift. Var försiktig vid service. Läs instruktionerna före service.

Comply with Local and National Electrical Codes



Warning! Installation of the equipment must comply with local and national electrical codes.

تحذير! يجب أن يتوافق تركيب الأجهزة مع لوائح الكهرباء المحلية والوطنية.

警告! 设备安装必须符合本地与本国电气法规。

警告! 設備安裝必須符合本地與本國電氣法規。

Advarsel! Alle lokale og nationale el-regler skal overholdes under montering af udstyret.

Waarschuwing! Bij installatie van de apparatuur moet worden voldaan aan de lokale en nationale elektriciteitsvoorschriften.

Varoitus! Laitteiden asennus on suoritettava paikallisten ja kansallisten sähkömääräysten mukaisesti.

Attention! L'équipement doit être installé conformément aux normes électriques nationales et locales.

Warnung! Die Installation des Geräts muss den lokalen und nationalen elektrotechnischen Vorschriften entsprechen.

אזהרה! התקנת הציוד חייבת להתבצע בהתאם לתקני החשמל המקומיים והארציים.

चेतावनी! उपकरण की इंस्टालेशन स्थानीय और राष्ट्रीय वदियुत कोड के अनुरूप होनी चाहिए।

警告!機器の取り付けはその地域および国の電気規定に準拠する必要があります。

경고! 현 지역 및 국가의 전기 규정에 따라 장비를 설치해야 합니다.

Advarsel! Installasjon av utstyret må være i samsvar med lokale og nasjonale elektriske forskrifter.

¡Advertencia! La instalacion del equipo debe cumplir con las normas de electricidad locales y nacionales.

Varning! Installation av utrustningen måste följa lokala och nationella elektriska föreskrifter.

Fan Warning



Warning! Hazardous moving parts. Keep away from moving fan blades. The fans might still be turning when you remove the fan assembly from the chassis. Keep fingers, screwdrivers, and other objects away from the openings in the fan assembly's housing.



تحذير! تجنب خطر الأجزاء المتحركة. ابتعد عن شفرات المروحة المتحركة. قد تستمر المراوح في الدوران بعد فك مجموعة المراوح من الهيكل. أبقِ أصابعك ومفكات البراغي والأغراض الأخرى بعيدة عن الفتحات الموجودة في مبيت مروحة التبريد.

警告! 危险的活动零部件。请务必与转动的风扇叶片保持距离。从机箱移除风扇装置时，风扇可能仍在转动。小心不要将手指、螺丝起子和其他物品太靠近风扇外壳开口。

警告! 危险的可移动性零件。请务必与转动的风扇叶片保持距离。当您从机架移除风扇装置，风扇可能仍在转动。小心不要将手指、螺丝起子和其他物品太靠近风扇。

Advarsel! Farlige bevægelige dele. Hold dig væk fra ventilatorblade i bevægelse. Ventilatorerne kan stadig køre, når du tager ventilatorsamlingen af kabinettet. Hold fingre, skruetrækkere og andre genstande væk fra åbningerne i ventilatorkabinettet.

Waarschuwing! Gevaarlijke bewegende onderdelen. Houd voldoende afstand tot de bewegende ventilatorbladen. Het is mogelijk dat de ventilator nog draait tijdens het verwijderen van het ventilatorsamenstel uit het chassis. Houd uw vingers, schroevendraaiers en eventuele andere voorwerpen uit de buurt van de openingen in de ventilatorbehuizing.

Varoitus! Vaaralliset liikkuvat osat. Pysy kaukana liikkuvista tuulettimen siivistä. Tuulettimet saattavat edelleen pyöriä, kun irrotat tuulettimen kokoonpanon kotelosta. Pidä sormet, ruuvimeisselit ja muut esineet poissa tuulettimen kotelon aukkojen läheltä.

Attention! Pièces mobiles dangereuses. Se tenir à l'écart des lames du ventilateur Il est possible que les ventilateurs soient toujours en rotation lorsque vous retirerez le bloc ventilateur du châssis. Prenez garde à ce que doigts, tournevis et autres objets soient éloignés du logement du bloc ventilateur.

Warnung! Gefährliche bewegliche Teile. Halten Sie Abstand von rotierenden Lüfterblättern. Die Lüfter können sich noch drehen, wenn Sie die Lüfterbaugruppe aus dem Chassis entfernen. Halten Sie Finger, Schraubendreher und andere Gegenstände von den Öffnungen des Lüftergehäuses fern.

אזהרה! חלקים נעים מסוכנים. יש להתרחק מלהבי מאוורר נעים. המאווררים עשויים להמשיך להסתובב בעת הסרת מכלול המאוורר מהמארז. יש להרחיק אצבעות, מברגים וחפצים אחרים מהפתחים שבבית מכלול המאוורר.

चेतावनी! खतरनाक चलते हुए भाग। चलते हुए पंखे के ब्लेड से दूर रहें। जब आप चैसिस से पंखे की असेंबली निकालते हैं, तब भी पंखे घूम रहे हो सकते हैं। उंगलियों, स्क्रूड्राइवर और अन्य वस्तुओं को पंखे की असेंबली के हाउसिंग के छद्मों से दूर रखें।

警告!回転部品に注意。運転中は回転部(羽根)に触れないでください。シャーシからファンアセンブリを取り外す際、ファンがまだ回転している可能性があります。ファンアセンブリの開口部に、指、ドライバー、およびその他のものを近づけないで下さい。

경고! 움직이는 위험한 부품. 회전하는 송풍 날개에 접근하지 마세요. 새시로부터 팬 조립품을 제거할 때 팬은 여전히 회전하고 있을 수 있습니다. 팬 조립품 외관의 열려있는 부분들로부터 손가락 및 스크류드라이버, 다른 물체들이 가까이 하지 않도록 배치해 주십시오.

Advarsel! Farlige bevegelige deler. Hold deg unna vifteblader i fart. Viftene kan fortsatt gå rundt når du fjerner vifteenheten fra kabinettet. Hold fingre, skrutrekkere og andre gjenstander unna åpningene i viftehuset.

¡Advertencia! Riesgo de piezas móviles. Mantener alejado de las aspas del ventilador. Los ventiladores podran dar vuelta cuando usted quite el montaje del ventilador del chasis. Mantenga los dedos, los destornilladores y todos los objetos lejos de las aberturas del ventilador.

Varning! Farliga rörliga delar. Håll dig borta från rörliga fläktblad. Fläktarna kan fortfarande snurra när du tar bort fläktenheten från chassit. Håll fingrar, skruvmejslar och andra föremål borta från öppningarna i fläktenhetens hölje.

Connection to Earth



Warning! Equipment shall be connected to an Earth mains socket-outlet.

تحذير! يجب توصيل الأجهزة بمقبس كهربائي أرضي.

警告！设备应连接到接地电源插座。

警告！應將設備連接至接地電源插座。

Advarsel! Dette udstyr skal sluttes til en jordforbundet stikkontakt.

Waarschuwing! De apparatuur moet worden aangesloten op een geaard netstopcontact.

Varoitus! Laitteet on kytkettävä maadoitettuun pistorasiaan.

Attention! L'équipement doit être connecté à une prise de courant avec mise à la terre.

Warnung! Das Gerät muss an eine geerdete Netzsteckdose angeschlossen werden.

אזהרה! יש לחבר את הציוד לשקע חשמל עם הארקה.

चेतावनी! उपकरण को एक अर्थ मेन्स सॉकेट-आउटलेट से जोड़ा जाना चाहिए।

警告!機器は、接地主電源コンセントに接続するものとします。

경고! 장비는 접지된 전원 콘센트에 연결해야 합니다.

Advarsel! Utstyret skal kobles til en jordet stikkontakt.

¡Advertencia! El equipo deberá conectarse a una toma de corriente con conexión a tierra.

Varning! Utrustningen ska vara ansluten till ett jordat eluttag.

DC Power Supply



Warning! When stranded wiring is required, use approved wiring terminations, such as closed-loop or spade-type with upturned lugs. These terminations should be the appropriate size for the wires and should securely clamp both the insulation and the conductor.

تحذير! عند الحاجة إلى توصيل أسلاك مجدولة استخدم نهايات معتمدة، مثل الحلقة المغلقة أو نوع شوكي مع أطراف مقلوبة لأعلى. ينبغي أن تكون هذه النهايات بحجم مناسب للأسلاك، ويجب أن تثبت العازل والموصل بإحكام.

警告! 需要使用绞线连接时，请使用经认可的连接端子，如闭环端子或具有接线柱的铲形端子。这些端子的大小应适合线缆，并且可以将绝缘部分和导体夹紧固定。

警告! 需要多股佈線時，請使用經核准的佈線終端，例如閉環或鑷型接線片。這些終端的大小應適合線路，並且應牢固夾緊絕緣體和導體。

Advarsel! Hvis der skal bruges en flertrådet leder, skal der anvendes godkendte kabelsko, såsom ringkabelsko eller gaffelkabelsko med opadbøjede tunger. Disse kabelsko skal have korrekt størrelse til lederne og skal fastholde både isoleringen og lederen sikkert.

Waarschuwing! Wanneer gevlochten bedrading vereist is, moet u goedgekeurde bedradingsafsluitingen gebruiken, zoals gesloten lus of plat met omgekeerde kabelschoenen. Deze afsluitingen moeten de juiste maat hebben voor de draden en moeten zowel de isolatie als de geleider stevig klemmen.

Varoitus! Kun tarvitaan säikeinen johdotus, käytä hyväksytyjä johdotuksen päätteitä, kuten suljettu silmukka tai haarukkakärkinen, jossa on ylöspäin kääntyneet korvakkeet. Näiden liittimien tulee olla sopivan kokoisia johtimille ja niiden tulee kiinnittää tiukasti sekä eriste että johdin.

Attention! Lorsqu'un câblage toronné est nécessaire, utilisez des terminaisons de câblage approuvées, telles que à boucle fermée ou de type fourche avec des cosses retournées. Ces terminaisons doivent être de taille appropriée pour les fils et doivent serrer fermement les fils d'isolation et le conducteur.

Warnung! Wenn Litzenverdrahtung erforderlich ist, verwenden Sie zugelassene Verdrahtungsabschlüsse, z. B. geschlossene Ringkabelschuhe oder Gabelkabelschuhe mit nach oben gerichteten Laschen. Diese Abschlüsse müssen die geeignete Größe für die Leitungen haben und sowohl Isolierung als auch Leiter sicher klemmen.

אזהרה! כאשר נדרש חיווט רב-גידי, השתמש בסיומות חיווט מאושרות, כגון לולאה סגורה או מסוג כף (Spade) עם זיזים מכופפים כלפי מעלה. סיומות אלה צריכות להיות בגודל המתאים לחוטים, ועליהן להדק היטב את הבידוד ואת המוליך.

चेतावनी! जब स्ट्रैडेड वायरिंग की आवश्यकता हो, तो अनुमोदित वायरिंग टर्मिनेशन का उपयोग करें, जैसे कि क्लोज्ड-लूप या ऊपर की ओर मुड़े हुए लग्स वाले स्पेड-टाइप। ये टर्मिनेशन तारों के लिए उपयुक्त आकार के होने चाहिए और इंसुलेशन और कंडक्टर दोनों को सुरक्षित रूप से जकड़ने चाहिए।

警告!より線配線が必要な場合は、承認済みの配線終端(上向きの端子を備えたクローズループ型{2}またはU字型など)を使用してください。ワイヤーに適したサイズで、絶縁体および導体が両方ともしっかりとクランプされている終端でなければなりません。

경고! 꼬인 배선이 요구될 때에는 폐회로나 돌출부가 위로 튀어 나온 Spade 형태의 승인된 배선 터미네이션들을 사용하세요. 이 터미네이션들은 배선들을 위해 적절한 크기여야 하고, 절연체와 도체 모두를 고정시킬 수 있어야 합니다.

Advarsel! Når man må bruke flertrådet kabling, brukes godkjente ledningstermineringer, for eksempel lukket sløyfe eller spadetype med oppoverbøyde kabelsko. Disse termineringene skal ha riktig størrelse for ledningene og skal klemme både isolasjonen og ledaren sikkert.

¡Advertencia! Cuando se requiere cableado trenzado, utilice terminaciones de cableado aprobadas, como bucle cerrado o tipo horquilla con terminales hacia arriba. Estas terminaciones deben tener el tamaño adecuado para los cables y deben sujetar de forma segura tanto el aislamiento como el conductor.

Varning! När fintrådiga kablar krävs ska godkända kabelavslutningar användas, t.ex. sluten slinga eller gaffelkabelsko med uppvikta flikar. Dessa avslutningar ska vara av lämplig storlek för ledarna och ska klämma fast både isoleringen och ledaren ordentligt.

Hazardous Voltage or Energy Present on DC Power Terminals



Warning! Hazardous voltage or energy may be present on DC power terminals. Always replace cover when terminals are not in service. Be sure uninsulated conductors are not accessible when cover is in place.

تحذير! قد توجد فولتية أو طاقة خطيرة على أطراف توصيل التيار المستمر. احرص دائماً على إعادة الغطاء عندما لا تكون الأجهزة الطرفية قيد الاستخدام. تأكد من عدم إمكانية الوصول إلى الموصلات غير المعزولة عند وضع الغطاء.

警告！直流电源端子可能会产生危险电压或能量。端子不使用时，务必合上防护盖。合上后，请确保导体未绝缘部分不会被接触到。

警告！直流電源終端可能產生危險的電壓或能量。終端不使用時，請務必蓋上機蓋。當蓋上機蓋，確認不絕緣導體無法使用。

Advarsel! Der kan være farlig spænding eller energi på jævnstrømsterminaler (DC). Sæt altid dækslet på igen, når terminalerne ikke er i brug. Sørg for, at uisolerede ledere ikke kan tilgås, når dækslet er monteret.

Waarschuwing! Gevaarlijke spanning of energie kan aanwezig zijn op DC-voedingsklemmen. Plaats de kap altijd terug wanneer klemmen niet in bedrijf zijn. Zorg ervoor dat niet-geïsoleerde geleiders niet toegankelijk zijn wanneer de kap is geplaatst.

Varoitus! DC-virtaliittimissä voi olla vaarallista jännitettä tai energiaa. Aseta kansi aina paikalleen, kun liittimet eivät ole käytössä. Varmista, että eristämättömät johtimet eivät ole käytettävissä, kun kansi on paikoillaan.

Attention! Une tension ou une énergie dangereuse peut être présente sur les bornes d'alimentation CC. Remettez toujours le couvercle en place lorsque les bornes ne sont pas utilisées. Assurez-vous que les conducteurs non isolés ne sont pas accessibles lorsque le couvercle est installé.

Warnung! An Gleichstrom-Netzanschlussklemmen kann gefährliche Spannung oder Energie anliegen. Bringen Sie die Abdeckung immer an, wenn die Klemmen nicht in Betrieb sind. Stellen Sie sicher, dass bei angebrachter Abdeckung keine nicht isolierten, stromführenden Leiter zugänglich sind.

אזהרה! מתח או אנרגיה מסוכנים עלולים להיות נוכחים בהדקי מתח DC. יש להחזיר תמיד את הכיסוי למקומו כאשר ההדקים אינם בשימוש. יש לוודא שמוליכים לא מבודדים אינם נגישים כאשר הכיסוי מונח במקומו.

चेतावनी! DC पावर टर्मिनलों पर खतरनाक वोल्टेज या ऊर्जा मौजूद हो सकती है। जब टर्मिनल उपयोग में न हों तो हमेशा कवर को वापस लगा दें। सुनिश्चिती करें कविवर लगे होने पर गैर-इंसुलेटेड कंडक्टरो तक पहुँच न हो।

警告!DC電源端子には危険な電圧やエネルギーが発生している可能性があります。端子を使用しないときは、必ずカバーを元に戻してください。カバーを取り付けた状態では、絶縁されていない導体に手が届かないことを確認してください。

경고! DC 전원 단자들에 위험한 전압이나 에너지가 발생할 수 있습니다. 단말기들을 운영하지 않을 때에는 덮개로 다시 덮어 놓아 주십시오. 덮개가 제자리에 있어야만 절연되지 않은 도체들의 접근을 막을 수 있습니다.

Advarsel! Det kan være farlig spenning eller energi på likestrømsterminalene. Sett alltid på dekselet når terminalene ikke er i bruk. Sørg for at uisolerte ledere ikke er tilgjengelige når dekselet er på plass.

¡Advertencia! Puede haber voltaje o energía peligrosos presentes en los terminales de alimentación de CC. Vuelva a colocar siempre la cubierta cuando los terminales no estén en mantenimiento. Asegúrese de que los conductores no aislados no sean accesibles cuando la cubierta esté en su lugar.

Varning! Farlig spänning eller energi kan finnas på likströmsterminalerna. Sätt alltid tillbaka kåpan när terminalerna inte är i bruk. Se till att oisolerade ledare inte är åtkomliga när kåpan är på plats.

Product Disposal



Warning! Ultimate disposal of this product should be handled according to all national laws and regulations.

تحذير! يجب التخلص النهائي من هذا المنتج وفقاً لجميع القوانين واللوائح الوطنية.

警告! 本产品的废弃处理应根据所有国家的法律和规章进行。

警告! 本產品的廢棄處理應根據所有國家的法律和規章進行。

Advarsel! Dette produkt skal bortskaffes i henhold til alle nationale love og regler.

Waarschuwing! De uiteindelijke verwijdering van dit product dient te geschieden in overeenstemming met alle nationale wetten en voorschriften.

Varoitus! Tämän tuotteen lopullinen hävittäminen on suoritettava kaikkien kansallisten lakien ja määräysten mukaisesti.

Attention! La mise au rebut ou le recyclage de ce produit sont généralement soumis à des lois et/ou directives de respect de l'environnement. Renseignez-vous auprès de l'organisme compétent.

Warnung! Die endgültige Entsorgung dieses Produkts muss gemäß allen nationalen Gesetzen und Vorschriften erfolgen.

אזהרה! סילוק סופי של מוצר זה חייב להתבצע בהתאם לכל החוקים והתקנות הלאומיים.

चेतावनी! इस उत्पाद का अंतिम निपटान सभी राष्ट्रीय कानूनों और नयिमों के अनुसार किया जाना चाहिए।

警告!この製品を廃棄処分する場合、国の関係する全ての法律・条例に従い処理する必要があります。

경고! 이 제품은 해당 국가의 관련 법규 및 규정에 따라 폐기되어야 합니다.

Advarsel! Når produktet til slutt skal kasseres, må det håndteres i henhold til alle nasjonale lover og forskrifter.

¡Advertencia! Al deshacerse por completo de este producto debe seguir todas las leyes y reglamentos nacionales.

Varning! Slutgiltigt bortskaffande av denna produkt ska ske i enlighet med alla nationella lagar och förordningar.

Appendix B

System Specifications

Processors

Single AMD Ryzen Zen4 7000 Series Processors in an AM5 socket; supports CPU TDP up to 170W

Note: Refer to the motherboard specifications pages on our website for updates to supported processors.

Chipset

AMD® Knoll - Integrated I/O Controller Hub

BIOS

256Mb AMI BIOS® SPI Flash BIOS

Memory

Up to 128GB of ECC and non-ECC DDR5 UDIMM memory with speeds of up to 5200 MT/s in four DIMM slots

Storage Drives

Sixteen 3.5" or 2.5" hybrid U.2 NVMe/SAS/SATA drive bays with optional kits (two drives per node)

PCI Expansion Slots

Eight Standard LP PCIe 5.0 x8 slots, which can support up to 75W power (one slot per node)

Eight Micro-LP PCIe 5.0 x8 slots with two USB 2.0 support (one slot per node)

Eight NVMe M.2 M-Key 2280/22110 PCIe 5.0 x2 slots (one slot per node)

I/O Ports

One KVM connector

One USB 3.2 Type-C port

One Dedicated IPMI LAN (one per system)

Motherboard

H13SRD-F; 15.69" (L) x 4.75" (W) (399 x 121mm)

Chassis

CSE-938NH-R2K20BP2; 3U Rackmount, 5.21 x 17.26 x 23.2in. / 132 x 438 x 589mm

System Cooling

Four 8-cm heavy duty fans

Power Supply

Model: PWS-2K20A-1R, Two 2200W redundant modules, 80Plus Titanium Level

AC Input

100-127Vac/14-11A/50-60Hz

230-240Vac/10-9.8A/50-60Hz

+12V

Max: 100A (1200W)/ Min: 0A (100Vac-127Vac)

Max: 183.3 (2200W)/ Min: 0A (230Vac-240Vac)

+5V SB

Max: 1A / Min: 0A

Operating Environment

Operating Temperature: 10° to 35° C (50° to 95° F)

Non-operating Temperature: -30° to 60° C (-22° to 140° F)

Operating Relative Humidity: 8% to 80% (non-condensing)

Non-operating Relative Humidity: 8% to 90% (non-condensing)

Regulatory Compliance

FCC, ICES, CE, VCCI, RCM, UKCA, NRTL, CB

Applied Directives, Standards

EMC/EMI: 2014/30/EU (EMC Directive)

FCC Part 15 Subpart B

ICES-003

VCCI-CISPR 32

AS/NZS CISPR 32

EN/BS EN55032

EN/BS EN55035

CISPR 32

CISPR 35

EN/BS 61000-3-2

EN/BS 61000-3-3

EN/BS 61000-4-2

EN/BS 61000-4-3

EN/BS 61000-4-4

EN/BS 61000-4-5

EN/BS 61000-4-6

EN/BS 61000-4-8

EN/BS 61000-4-11

Green Environment:

2011/65/EU (RoHS Directive)

EC 1907/2006 (REACH)

2012/19/EU (WEEE Directive)

California Proposition 65

Product Safety: 2014/35/EU (LVD Directive)

UL/CSA 62368-1 (USA and Canada)

IEC/EN 62368-1

Perchlorate Warning

California Best Management Practices Regulations for Perchlorate Materials: This Perchlorate warning applies only to products containing CR (Manganese Dioxide) Lithium coin cells. "Perchlorate Material-special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate"

この装置は、クラスA機器です。この装置を住宅環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

VCCI – A

BSMI/RoHs

限用物質含有情況標示聲明書

Declaration of the Presence Condition of the Restricted Substances Marking

設備名稱：伺服器 / Server Equipment name						
型號 (型式)： 938-R22H13 (系列型號： 938 -22, AS -3015MR-H8TNR) Type designation (Type)						
單元 Unit	Restrictive substances and chemical symbols 限用物質及其化學符號					
	鉛Lead (Pb)	汞Mercury (Hg)	鎘Cadmium (Cd)	六價鉻Hexavalent chromium (Cr ⁺⁶)	多溴聯苯Polybrominated biphenyls (PBB)	多溴二苯醚Polybrominated diphenyl ethers (PBDE)
機殼 (Chassis)	○	○	○	○	○	○
機殼風扇 (Chassis Fan)	-	○	○	○	○	○
線材 (Cable)	○	○	○	○	○	○
主機板 (Motherboard)	-	○	○	○	○	○
電源供應器 (Power Supply)	-	○	○	○	○	○
電源背板 (PDB)	-	○	○	○	○	○
硬碟 (SSD;M.2)	-	○	○	○	○	○
附加卡 (Add-on card)	-	○	○	○	○	○
<p>備考1. “超出0.1 wt %” 及 “超出0.01 wt %” 係指限用物質之百分比含量超出百分比含量基準值。 Note 1 : “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.</p> <p>備考2. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。 Note 2 : “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.</p> <p>備考3. “-” 係指該項限用物質為排除項目。 Note 3 : The “-” indicates that the restricted substance corresponds to the exemption.</p>						

警告: 為避免電磁干擾, 本產品不應安裝或使用於住宅環境。

輸入額定:

100-127V ~, 60-50Hz, 12-11A (x2)

200-240V ~, 60-50Hz, 10-9.8A (x2)

*使用者不能任意拆除或替換內部配備

*報驗義務人之姓名或名稱: 美超微電腦股份有限公司

*報驗義務人之地址: 新北市中和區建一路 150 號 3 樓