



AOC-S3816L-L16iR



User's Guide

Revision 1.0b

The information in this User's Guide has been carefully reviewed and is believed to be accurate. The vendor assumes no responsibility for any inaccuracies that may be contained in this document and makes no commitment to update or to keep current the information in this user's guide, or to notify any person or organization of the updates. **Please Note: For the most up-to-date version of this user's guide, please see our Website at www.supermicro.com.**

Super Micro Computer, Inc. ("Supermicro") reserves the right to make changes to the product described in this user's guide at any time and without notice. This product, including software and documentation, is the property of Supermicro and/or its licensors, and is supplied only under a license. Any use or reproduction of this product is not allowed, except as expressly permitted by the terms of said license.

IN NO EVENT WILL SUPER MICRO COMPUTER, INC. BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, SPECULATIVE OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OR INABILITY TO USE THIS PRODUCT OR DOCUMENTATION, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN PARTICULAR, SUPER MICRO COMPUTER, INC. SHALL NOT HAVE LIABILITY FOR ANY HARDWARE, SOFTWARE, OR DATA STORED OR USED WITH THE PRODUCT, INCLUDING THE COSTS OF REPAIRING, REPLACING, INTEGRATING, INSTALLING OR RECOVERING SUCH HARDWARE, SOFTWARE, OR DATA.

Any disputes arising between the manufacturer and the customer shall be governed by the laws of Santa Clara County in the State of California, USA. The State of California, County of Santa Clara shall be the exclusive venue for the resolution of any such disputes. Supermicro's total liability for all claims will not exceed the price paid for the hardware product.

FCC Statement: This equipment has been tested and found to comply with the limits for a Class A or Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in the industrial environment for Class A devices or in a residential environment for Class B devices. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer's instruction manual, may cause harmful interference with radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case you will be required to correct the interference at your own expense.

California Best Management Practices Regulations for Perchlorate Materials: This Perchlorate warning applies only to products containing CR (Manganese Dioxide) Lithium coin cells. "Perchlorate Material-special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate".



WARNING: This product can expose you to chemicals including lead, known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

The products sold by Supermicro are not intended for and will not be used in life support systems, medical equipment, nuclear facilities or systems, aircraft, aircraft devices, aircraft/emergency communication devices, or other critical systems whose failure to perform be reasonably expected to result in significant injury or loss of life or catastrophic property damage. Accordingly, Supermicro disclaims any and all liability, and should buyers use or sell such products for use in such ultrahazardous applications, it does so entirely at its own risk. Furthermore, the buyer agrees to fully indemnify, defend, and hold Supermicro harmless for and against any and all claims, demands, actions, litigation, and proceedings of any kind arising out of or related to such ultra-hazardous use or sale.

User's Guide Revision 1.0b

Release Date: February 14, 2023

Unless you request and receive written permission from Super Micro Computer, Inc., you may not copy any part of this document.

Information in this document is subject to change without notice. Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders.

Copyright © 2023 by Super Micro Computer, Inc.
All rights reserved.

Printed in the United States of America

Revision History

Rev. 1.0a, November 23rd, 2022

- Initial document release

Rev. 1.0b, February 14th, 2023

- Design limitation note added.

Preface

About this User's Guide

This user's guide is written for system integrators, IT technicians, and knowledgeable end users. It provides information for the installation and use of the AOC-S3816L-L16iR expansion card.

About this Expansion Card

The Supermicro SAS AOC-S3816L-L16iR internal RAID controller card features 16 internal SAS3 ports with two internal SlimSAS connectors. It utilizes a SAS 3816 SAS3 controller chip and features a 1.6 GHz processor. This add-on card supports up to 63 SAS/SATA devices via expander backplane. This RAID adapter delivers intelligent RAID 0, 1, and 10. The AOC-S3816L-L16iR is streamlined to meet the growing demand for increased data throughput and scalability requirements across enterprise-class server platforms. It is a low-power and cost-effective near-line storage solution that delivers maximum performance and reliability.

An Important Note to the User

All images and layouts shown in this user's guide are based upon the latest PCB revision available at the time of publishing. The card you have received may or may not look exactly the same as the graphics shown in this user's guide.

Returning Merchandise for Service

A receipt or copy of your invoice marked with the date of purchase is required before any warranty service will be rendered. You can obtain service by calling your vendor for a Returned Merchandise Authorization (RMA) number. When returning the AOC-S3816L-L16iR card to the manufacturer, the RMA number should be prominently displayed on the outside of the shipping carton, and the shipping package is mailed prepaid or hand-carried. Shipping and handling charges will be applied for all orders that must be mailed when service is complete. For faster service, you can also request an RMA authorization online <https://www.supermicro.com/RmaForm/>.

This warranty only covers normal consumer use and does not cover damages incurred in shipping or from failure due to the alternation, misuse, abuse, or improper maintenance of products.

During the warranty period, contact your distributor first for any product problems.

Conventions Used in the User's Guide

Pay special attention to the following symbols for proper system installation and for safety instructions to prevent damage to the system or injury to yourself:



Warning: Important information is given to ensure proper system installation or to prevent damage to the components or injury to yourself.



Note: Additional information is given for proper system setup.

Contacting Supermicro

Headquarters

Address: Super Micro Computer, Inc.
980 Rock Ave.
San Jose, CA 95131 U.S.A.

Tel: +1 (408) 503-8000

Fax: +1 (408) 503-8008

Email: marketing@supermicro.com (General Information)
Sales-USA@supermicro.com (Sales Inquiries)
Government_Sales-USA@supermicro.com (Gov. Sales Inquiries)
support@supermicro.com (Technical Support)
RMA@supermicro.com (RMA Support)
Webmaster@supermicro.com (Webmaster)

Website: www.supermicro.com

Europe

Address: Super Micro Computer B.V.
Het Sterrenbeeld 28, 5215 ML
's-Hertogenbosch, The Netherlands

Tel: +31 (0) 73-6400390

Fax: +31 (0) 73-6416525

Europe

Email: Sales_Europe@supermicro.com (Sales Inquiries)
Support_Europe@supermicro (Technical Support)
RMA_Europe@supermicro (RMA Support)

Website: www.supermicro.nl

Asia-Pacific

Address: Super Micro Computer, Inc.
3F, No. 150, Jian 1st Rd.
Zhonghe Dist., New Taipei City 235
Taiwan (R.O.C)

Tel: +886-(2) 8226-3990

Fax: +886-(2) 8226-3992

Email: Sales-Asia@supermicro.com.tw (Sales Inquiries)
Support@supermicro.com.tw (Technical Support)
RMA@supermicro.com.tw (RMA Support)

Website: www.supermicro.com.tw

Table of Contents

Preface	4
About this User's Guide.....	4
About this Expansion Card.....	4
An Important Note to the User.....	4
Returning Merchandise for Service	4
Conventions Used in the User's Guide	5
Contacting Supermicro.....	6
Table of Contents	8
Chapter 1 Overview.....	9
1-1 Overview.....	9
1-2 Technical Specifications	9
Chapter 2 Hardware Components	10
2-1 Controller Card Layout and Components	10
2-2 Major Components.....	11
2-3 Front Connectors	12
2-4 Front Jumper and Header Locations	13
2-5 LEDs.....	14
Chapter 3 Installation	15
3-1 Static-Sensitive Devices.....	15
3-2 Before Installation	16
3-3 Installing the Controller Card.....	16
3-5 Installing the Drivers in Windows.....	17
3-6 Uninstalling the Drivers	17
Chapter 4 Configuring the BROADCOM® 3816 iMR Settings	18
4-1 RAID Minimum Drive Requirements.....	18
4-2 Using the BROADCOM <SAS 3816> Configuration Utility.....	19
Chapter 5 Hybrid Drive Type Change	31
5-1 Changing Drive Type under UEFI.....	31

Chapter 1

Overview

1-1 Overview

Congratulations on purchasing your expansion card from an acknowledged leader in the industry. Supermicro products are designed with the utmost attention to detail to provide you with the highest standards of quality and performance. For product support and updates, please visit our website at <https://www.supermicro.com/>.

1-2 Technical Specifications

General

- Two SlimSAS x8 white (85-Ohm) connector interface
- Supports up to 63 SAS/SATA physical devices with expander
- Processor at 1.6 GHz
- Supports 3.0, 6.0, and 12.0 Gb/s SAS data transfer rates and 3.0 and 6.0 Gb SATA
- Supports MCTP over PCIe/I2C
- Supports BMC-enabled management
- Supports MegaRAID® SafeStore Software (Included)
- UEFI Configuration utility
- Supports Hardware Secure Boot
- Thermal operating range: System dependent (55°C or higher with enough airflow)

OS Support

Windows, Linux, and VMWare

Power Consumption

14 watts (max) for AOC-S3816L-L16iR

Physical Dimensions

Card PCB dimensions: 5.11" x 2.71" (L x H)

Chapter 2

Hardware Components

2-1 Controller Card Layout and Components



Figure 2-1. AOC-S3816L-L16iR

The AOC-S3816L-L16iR is a low-profile SAS controller card with 16 internal SAS3 ports and two SlimSAS x8 connectors. The following pages describe the components and settings for the AOC-S3816L-L16iR.

2-2 Major Components

The following are the major components that make up the AOC-S3816L-L16iR controller card:

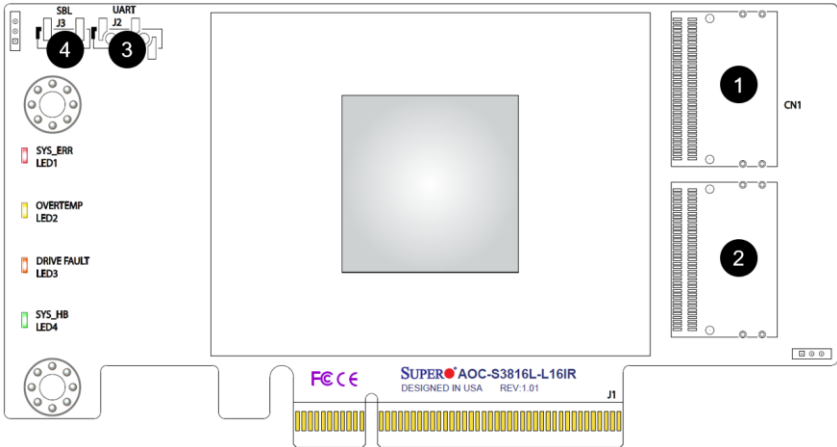


Figure 2-2. AOC-S3816L-L16iR Front Layout

AOC-S3816L-L16iR Major Components	
Component	Description
1	SAS Connectors SAS 0-7
2	SAS Connectors SAS 8-15
3	UART Jumper, for engineering debug
4	Serial Boot Loader Jumper, for engineering test

2-3 Front Connectors

SAS Connectors

There are two SlimSAS x8 connectors on the AOC-S3816L-L16iR controller card. Each provided eight ports supports a transfer rate of up to 12Gb/s with SAS devices and 6Gb/s with SATA devices.

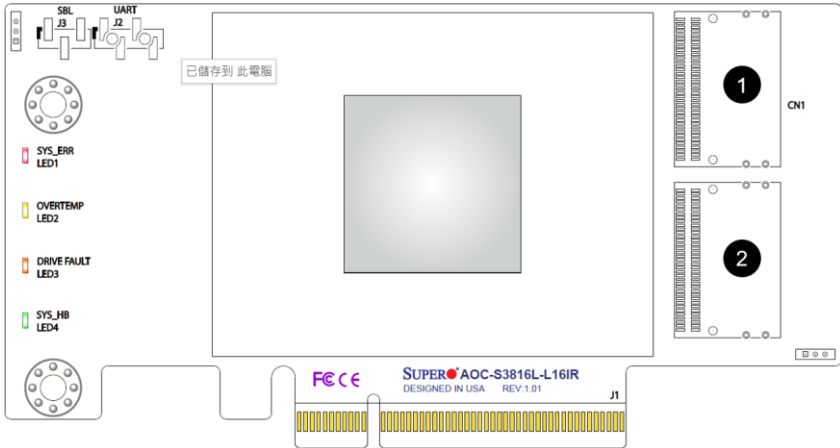


Figure 2-3. Front SAS3 Connectors

AOC-S3816L-L16iR Front Connectors	
Component	Description
1	SAS Connectors SAS 0-7
2	SAS Connectors SAS 8-15

2-4 Front Jumper and Header Locations

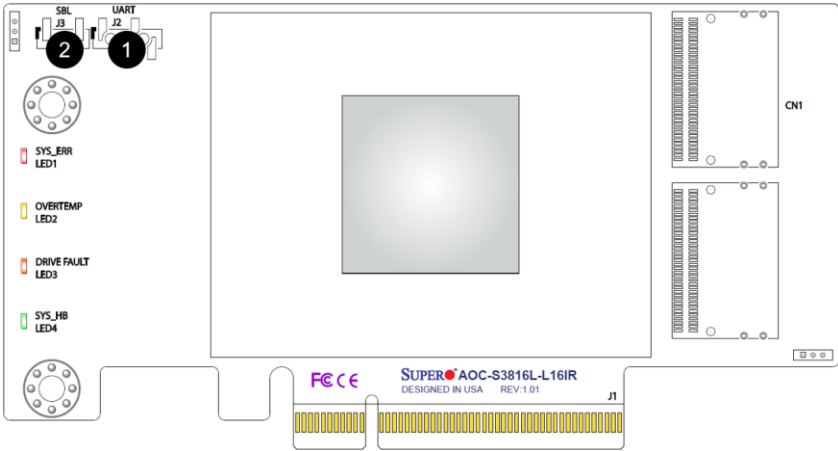


Figure 2-4. Jumper and Headers

AOC-S3816L-L16iR Front Jumper and Headers		
Header	Description	Purpose
1	UART Debug Header, designated UART0, J2	For Engineering Debug
2	Serial Boot Loader Header, designated SBL_DIS, JP3	For Engineering Debug

2-5 LEDs

System Error LED

A solid red LED indicates a system error has occurred.

Overtemp LED

A solid yellow LED indicates the controller card has overheated.

Drive Fault LED

A blinking orange LED indicates a drive error has occurred.

Heartbeat LED

A blinking green LED indicates the firmware is running on the controller chip.

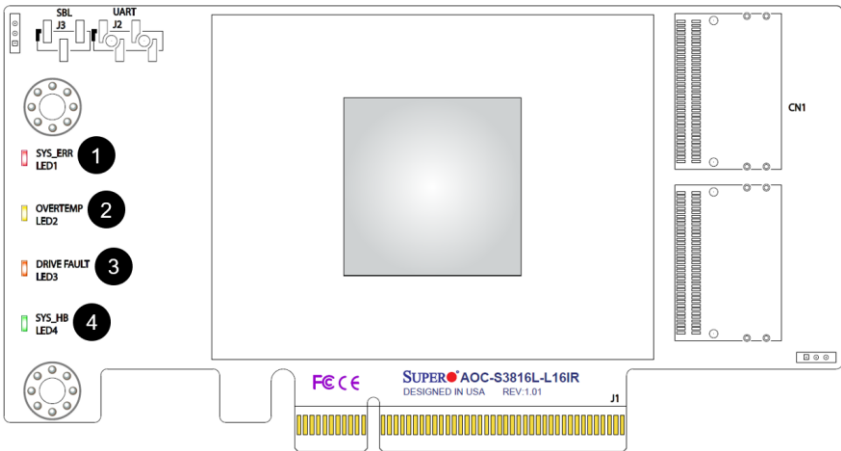


Figure 2-5. LEDs

AOC-S3816L-L16iR LEDs		
Component	Color	Description
LED1	Red	System Error LED
LED2	Yellow	Overtemp LED
LED3	Orange	Drive Fault LED
LED4	Green	Heartbeat LED

Chapter 3

Installation

3-1 Static-Sensitive Devices

Electrostatic Discharge (ESD) can damage electronic components. To avoid damaging your controller card, it is important to handle it very carefully. The following measures are generally sufficient to protect your equipment from ESD.

Precautions

- Use a grounded wrist strap designed to prevent static discharge.
- Touch a grounded metal object before removing the controller card from the antistatic bag.
- Handle the controller card by its edges only; do not touch its components or peripheral chips.
- Put the controller card back into the antistatic bags when not in use.
- For grounding purposes, make sure that your system chassis provides excellent conductivity between the power supply, the case, the mounting fasteners, and the controller card.

Unpacking

The controller card is shipped in antistatic packaging to avoid static damage. When unpacking your component, make sure you are static protected.



Note: To avoid damaging your components and to ensure proper installation, be sure to always connect the power cord last, and always remove it before adding, removing, or changing any hardware components.

3-2 Before Installation

To install the controller card properly, follow the steps below.

Prior to Installation

1. Power down the system and unplug the power cord.
2. Use industry-standard anti-static equipment (such as gloves or wrist strap) and follow the precautions on page 3-1 to avoid damage caused by ESD.

3-3 Installing the Controller Card

Depending upon which system configuration is used, a riser card may or may not be required to install the AOC-S3816L-L16iR.

Installing the Controller Card

1. Power down the system, remove the power cords from the rear of the power supply, and remove the system cover.
2. Verify that your controller card is equipped with the correct length of PCIe slot mounting bracket for your system. The AOC-S3816L-L16iR controller card includes a low-profile PCIe mounting bracket. However, if your system features full-height PCIe slots, replace the low-profile bracket with a full-height bracket.
3. Insert the controller card into an x8 PCIe slot.
4. Connect the SAS interface cables from the controller card to either the direct-attached storage target devices or the cable sockets on the backplanes.
5. The cable latch will click into the locked position when connected properly.
6. Replace the system cover, plug in the power cord, and power up the system.

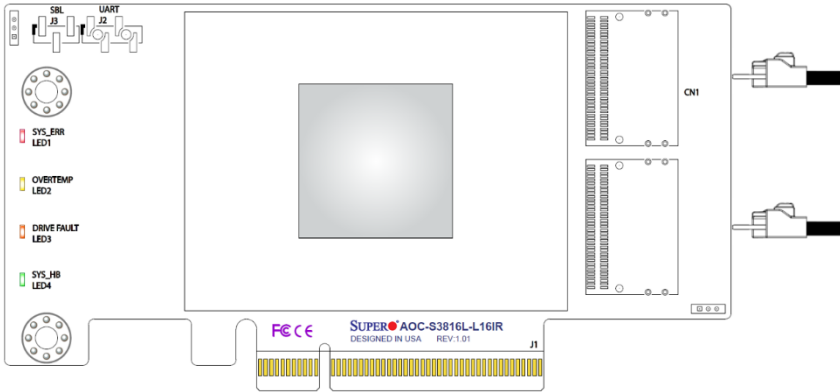


Figure 3-1. Connecting the Cables

3-5 Installing the Drivers in Windows

Refer to the instructions that came with your controller card and follow the manufacturer's recommended steps for installing the NVMe driver. Download the latest drivers from the Supermicro project board at <https://www.supermicro.com/wdl/driver/SAS/Broadcom/3808-3816/Driver/>.

3-6 Uninstalling the Drivers

To Uninstall the Drivers in Windows:

Follow the system driver uninstall procedure in the operating system.



Note: Being only able to connect two hosts (CPU and Broadcom-based AOC) to certain backplanes (e.g., BPN-NVMe4-216N-S24) with NVMe devices is a known design limitation.

Chapter 4

Configuring the BROADCOM® 3816 iMR Settings

This chapter provides instructions on how to configure RAID using the BROADCOM <SAS 3816> Configuration Utility. If you do not wish to configure RAID settings, skip this section and go directly to OS installation.

4-1 RAID Minimum Drive Requirements

The AOC-S3816L-L16iR supports up to 63 SAS/SATA physical devices with expander with RAID 0, RAID 1, and RAID 10.


RAID	Minimum Hard Drives
RAID 0	2
RAID 1	2
RAID 10	4


4-2 Using the BROADCOM <SAS 3816> Configuration Utility

Follow the steps below to use the BROADCOM <SAS 3816> Configuration Utility.

1. Reset the system.


2. Press to enter the **BIOS Setup Utility**. AOC-S3816L-L16iR only supports **UEFI** mode and a very limited legacy mode. If the **BROADCOM <SAS 3816> Configuration Utility** option is not visible, select **PCIe/PCI/PnP Configuration** and then a CPU slot.

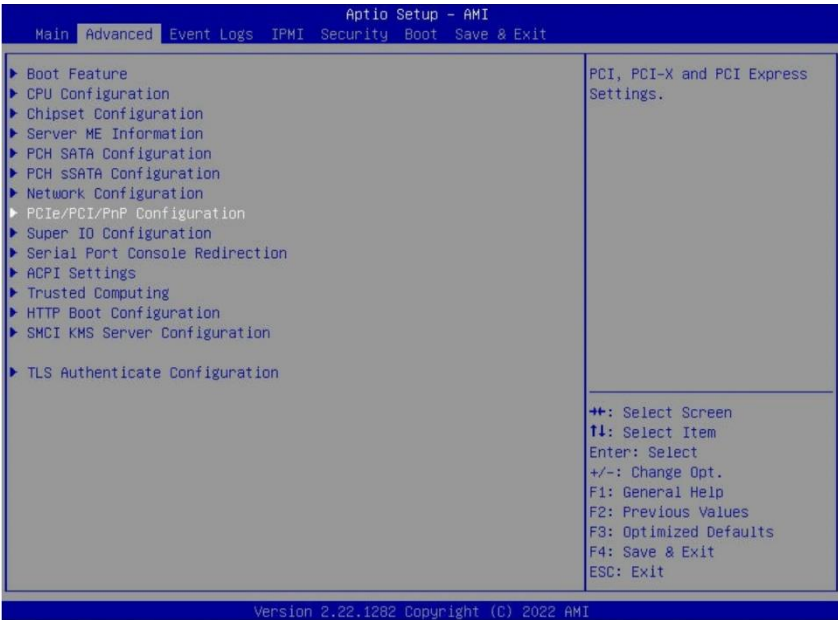


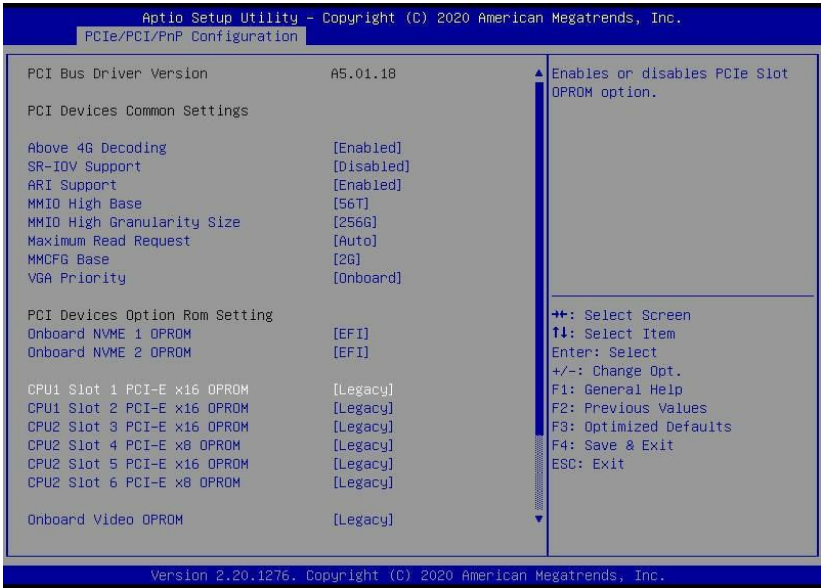


CPU1 Slot 1 PCI-E X16 OPROM Selected

- When the below screen appears, select **EFI** mode, then press **<F4>** to save and exit.

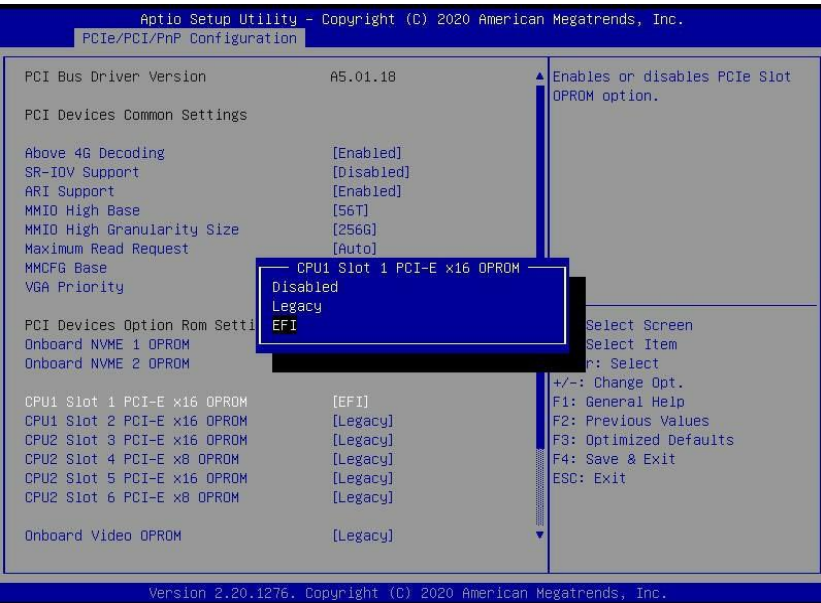


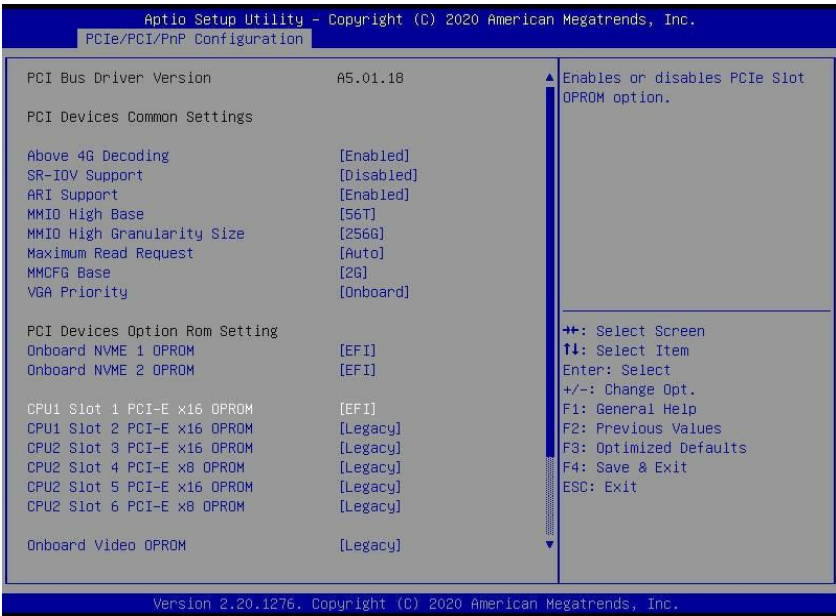


4. Press **<ESC>** to reach the **Advanced** tab, then select **BROADCOM <SAS 3816> Configuration Utility** and press **<Enter>**.

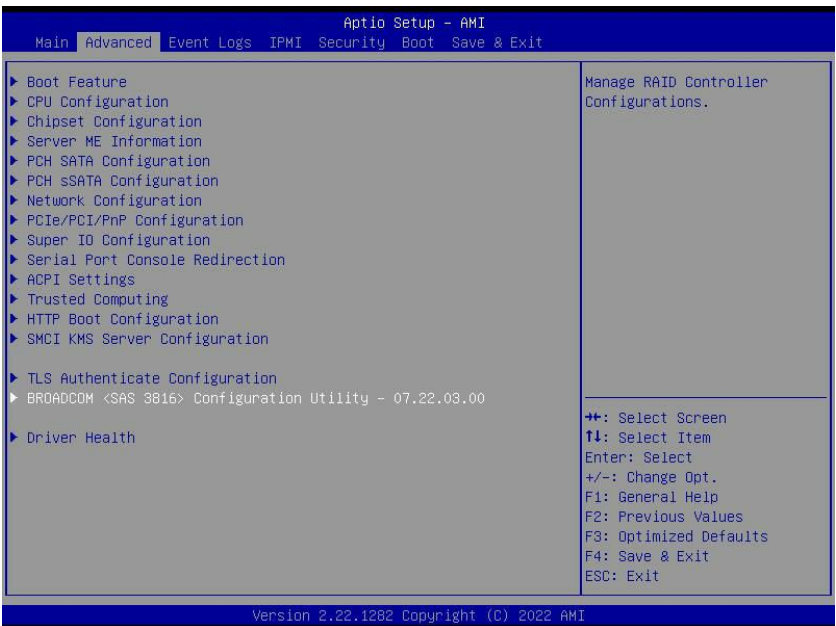


5. Enter **Main Menu** page.

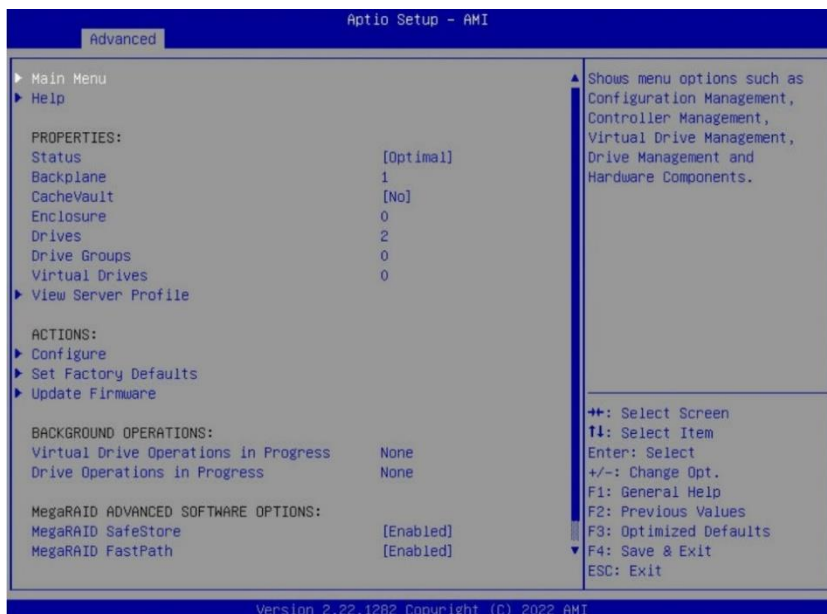


6. Select **Configure** from the Main Menu submenu.

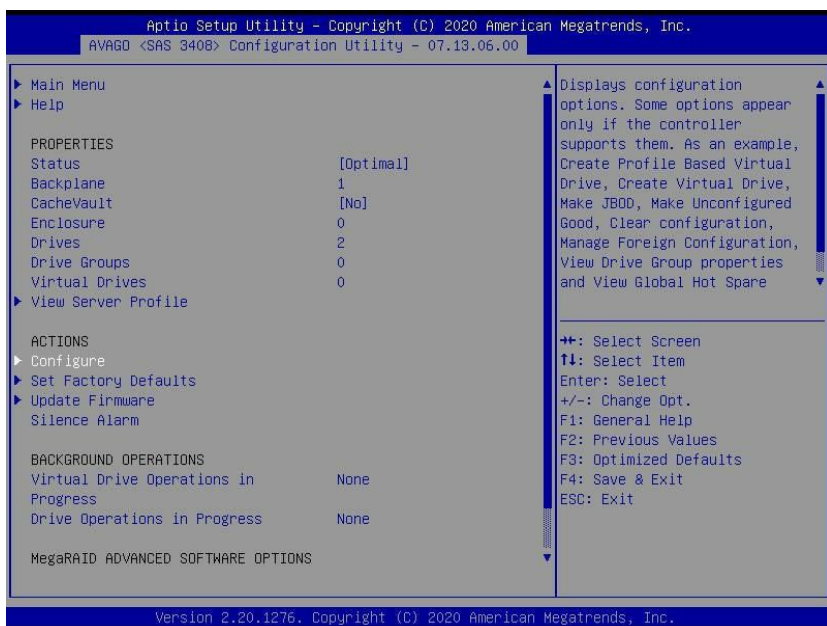

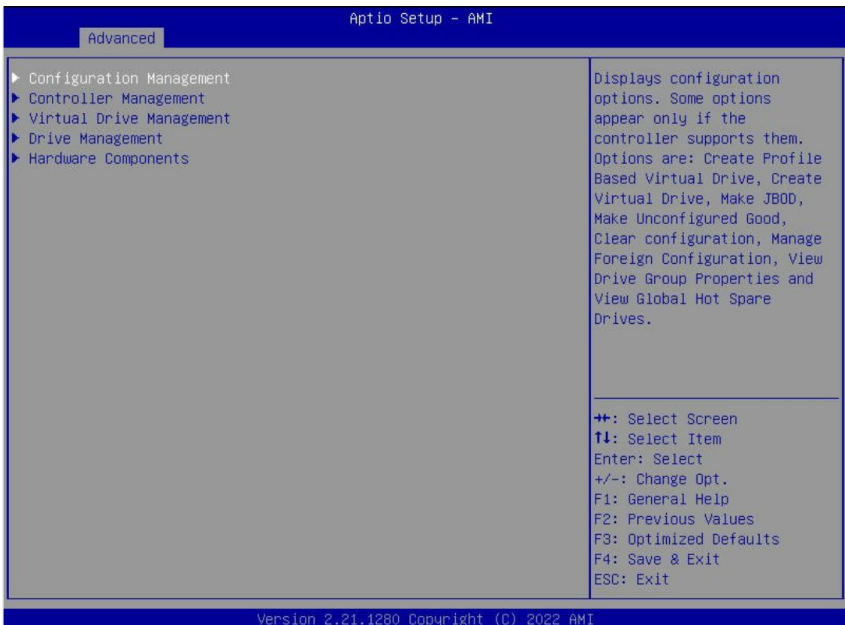


7. Select **Create Virtual Drive** and press **<Enter>**.

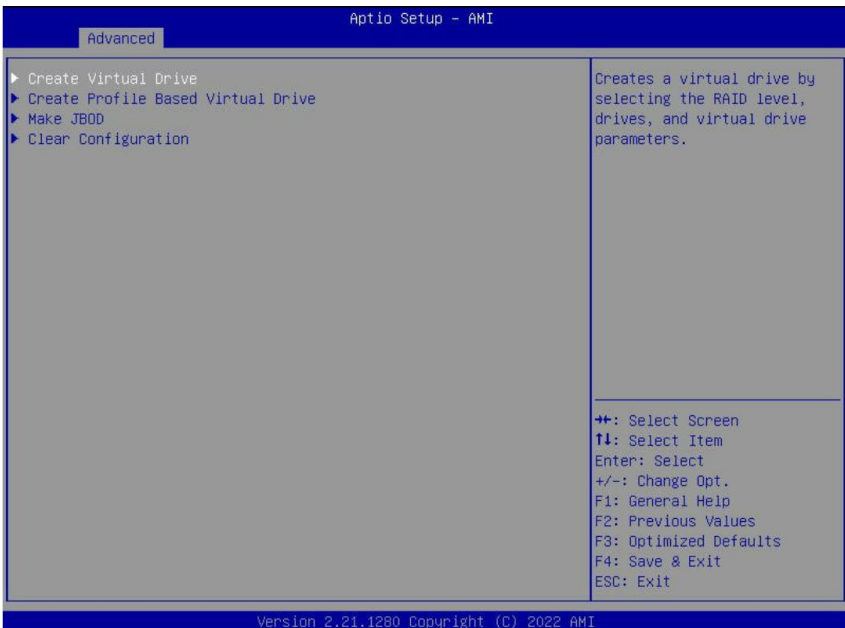


8. On the **Create Virtual Drive** menu, navigate to **Select RAID Level** and press **<Enter>**. Use the arrow keys to select a RAID level and press **<Enter>**.





9. Navigate to **Select Drives**, as shown below, and press **<Enter>**. On the Select Drives menu, select the unconfigured drives and choose **Enabled**.

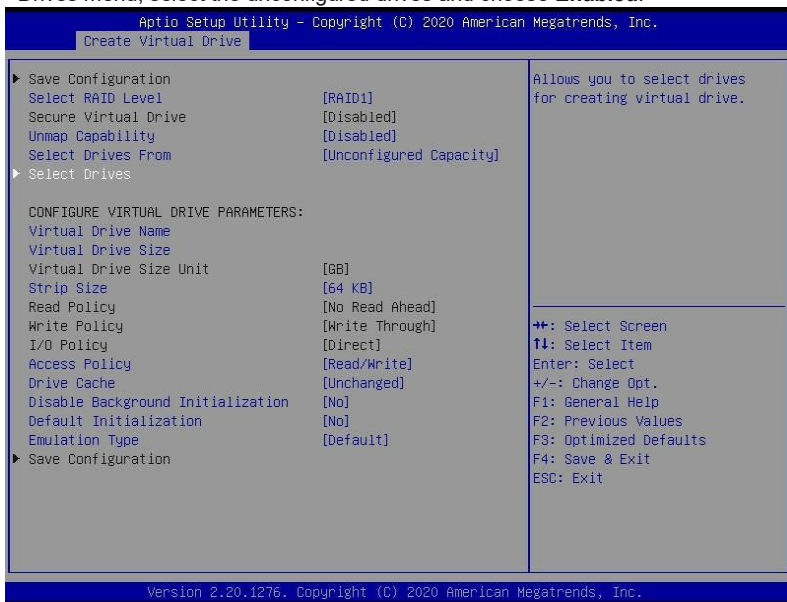

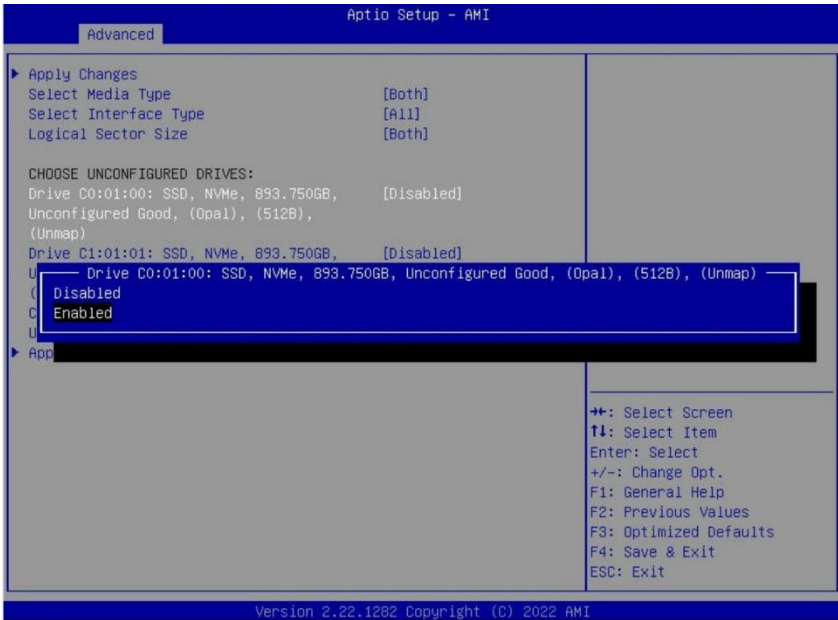


10. Select **Apply Changes** and press **<Enter>**.

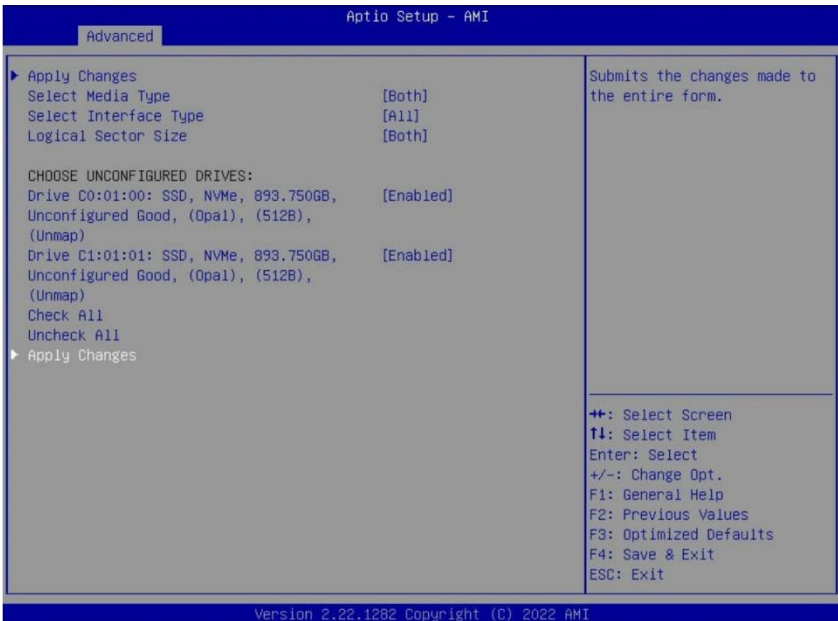


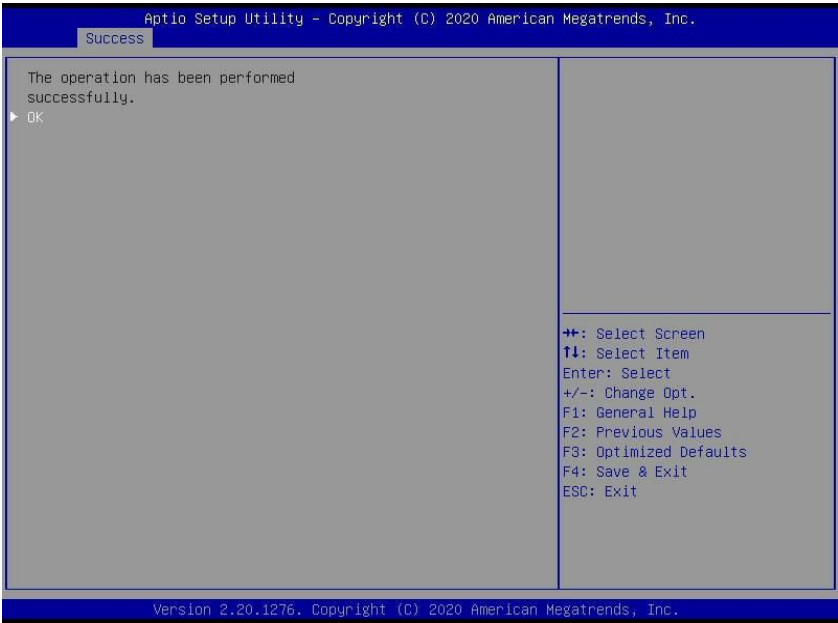

11. Save configuration and press <Enter>.

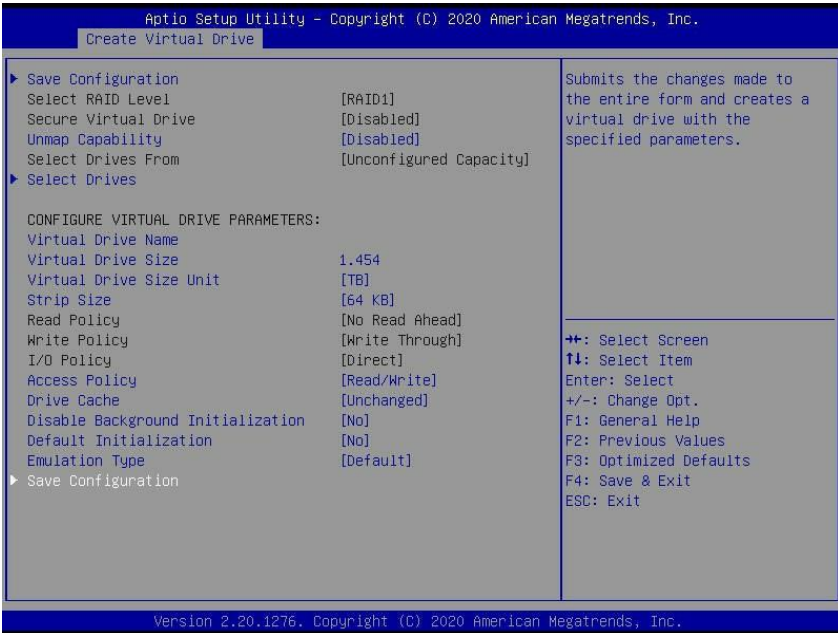

12. Select the **Yes** option and then confirm **Enabled**.

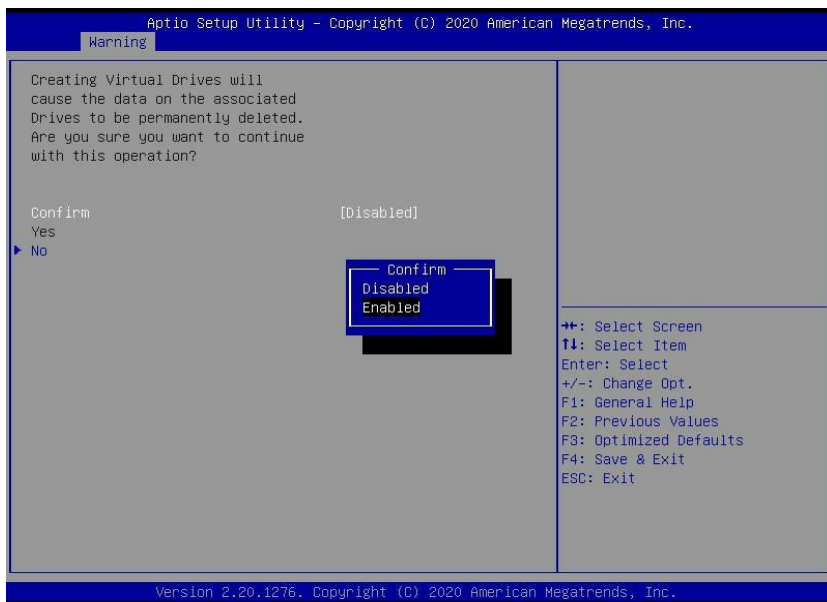

13. The below screen appears once Virtual Drive creation is successful.



After completing the steps to use the BROADCOM <SAS 3816> Configuration Utility, there are a few optional actions or screenshots that you can observe, act on, or simply ignore. These options include the following:


Select Virtual Drive Management




Check virtual drive status!




Select Drive Management.

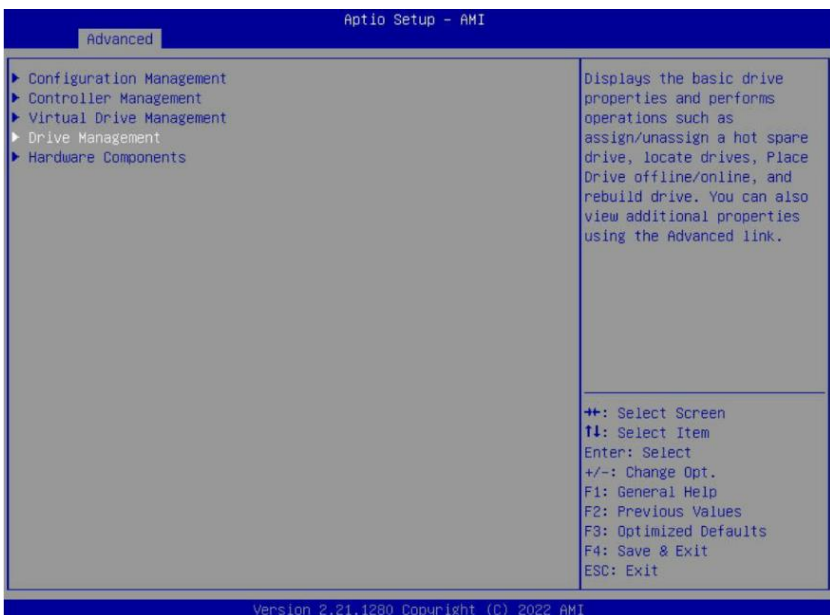

Check physical drive status.

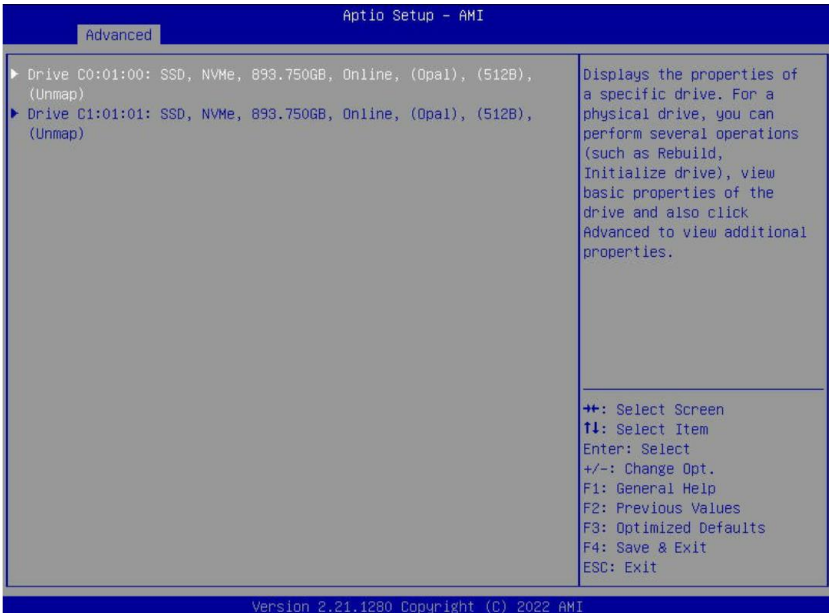

Select Hardware Components.

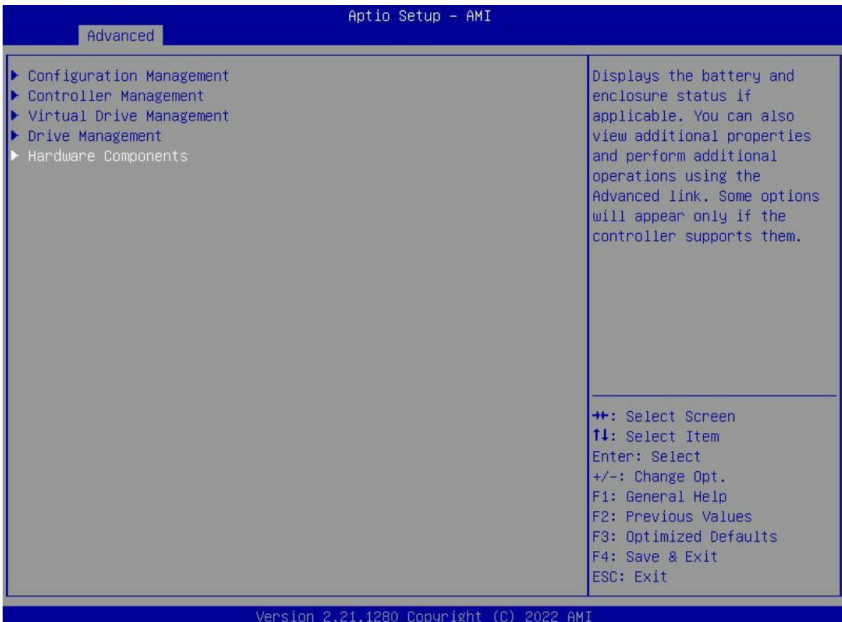


Chapter 5


Hybrid Drive Type Change

This chapter provides instructions on how to change the Profile ID. Please remove all the installed devices before changing the Profile ID.

5-1 Changing Drive Type under UEFI

1. Select **BROADCOM <SAS 3816> Configuration Utility** and enter the **Main Menu**.

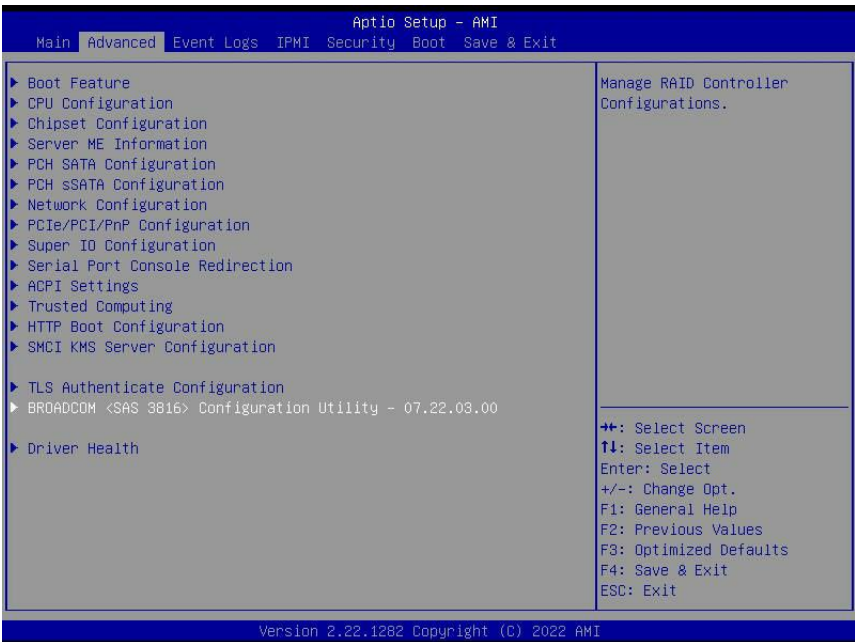


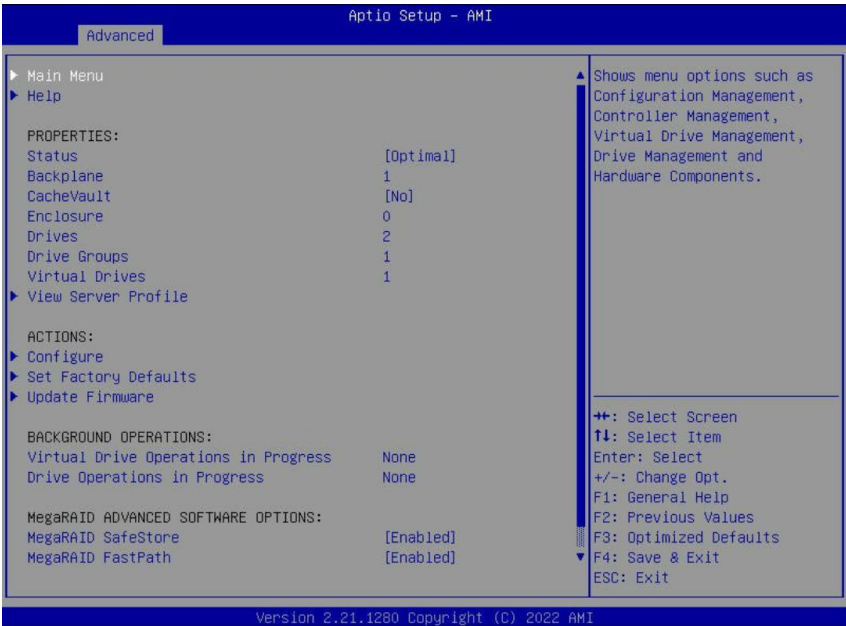

2. On the Main Menu, select **Controller Management**.





3. On the Controller Management menu, select **Advanced Controller Management**.

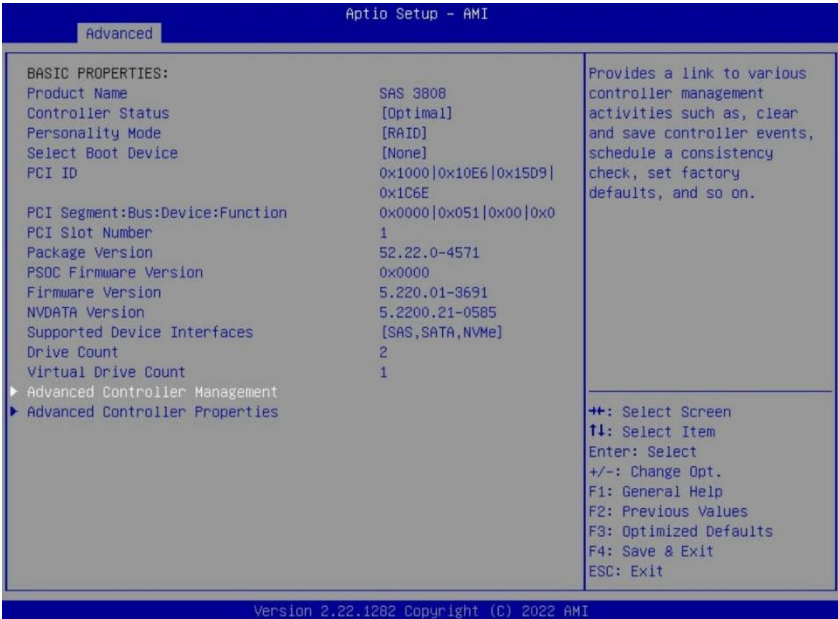


4. Enter **Manage Controller Profiles**.



5. Select **Choose Profile** and choose profile name.

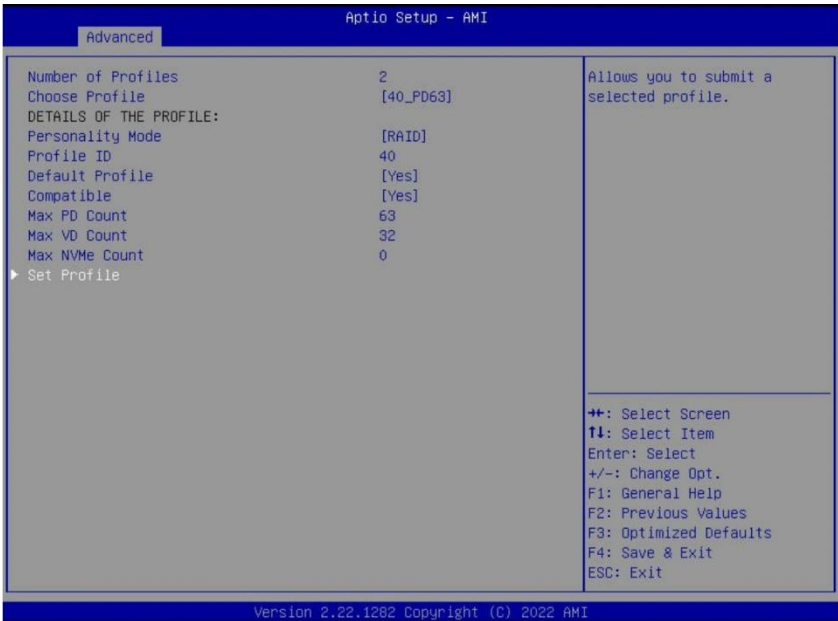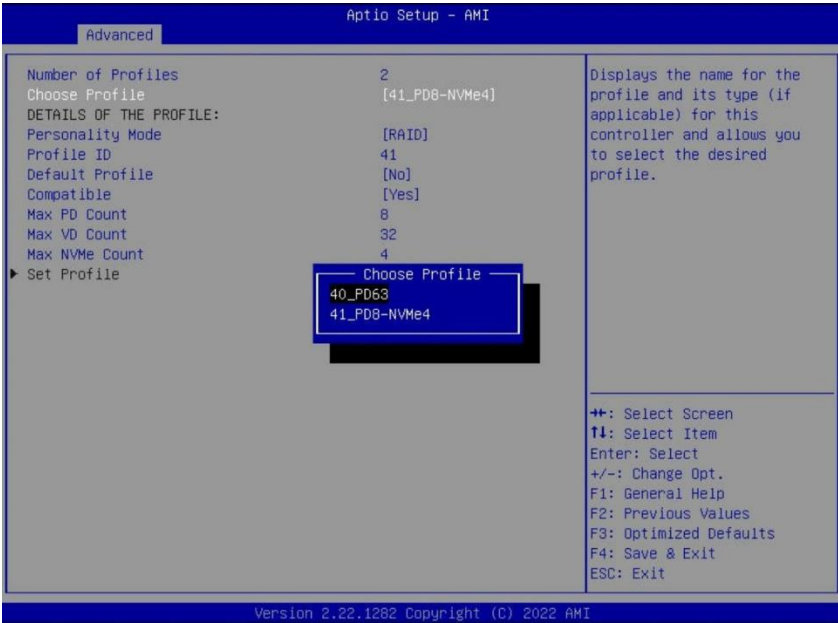

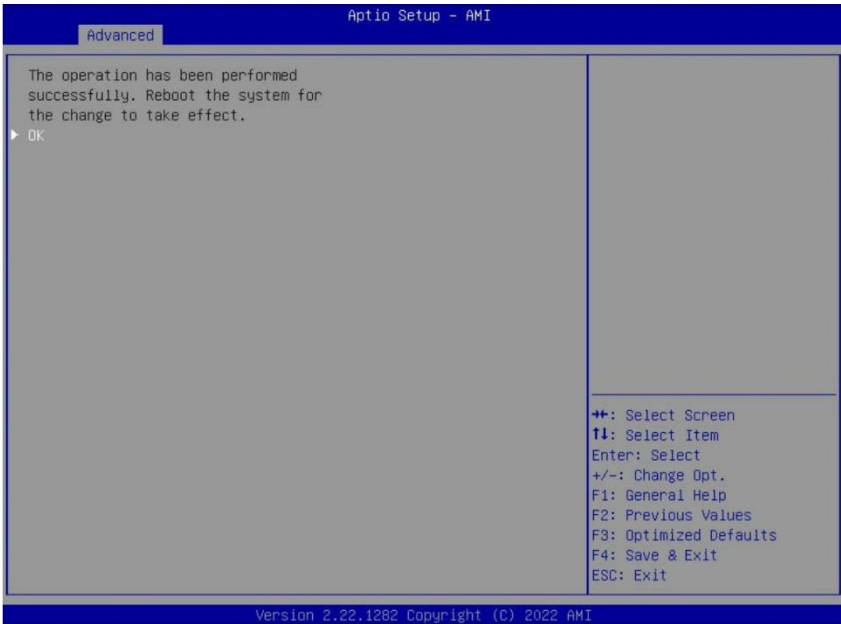

6. Press **<F4>** to save and exit.

(Disclaimer Continued)

The products sold by Supermicro are not intended for and will not be used in life support systems, medical equipment, nuclear facilities or systems, aircraft, aircraft devices, aircraft/emergency communication devices, or other critical systems whose failure to perform be reasonably expected to result in significant injury or loss of life or catastrophic property damage. Accordingly, Supermicro disclaims any and all liability, and should buyer use or sell such products for use in such ultra-hazardous applications, it does so entirely at its own risk. Furthermore, buyer agrees to fully indemnify, defend and hold Supermicro harmless for and against any and all claims, demands, actions, litigation, and proceedings of any kind arising out of or related to such ultra-hazardous use or sale.