


# SUPERO<sup>®</sup>

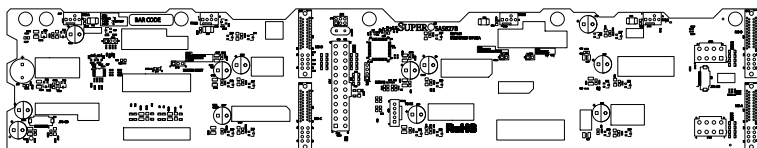

## SAS-827B Backplane

### USER'S GUIDE

Rev. 1.0

The information in this User's Manual has been carefully reviewed and is believed to be accurate. The vendor assumes no responsibility for any inaccuracies that may be contained in this document, makes no commitment to update or to keep current the information in this manual, or to notify any person or organization of the updates. **Please Note: For the most up-to-date version of this manual, please see our web site at [www.supermicro.com](http://www.supermicro.com).**

Super Micro Computer, Inc. ("Supermicro") reserves the right to make changes to the product described in this manual at any time and without notice. This product, including software, if any, and documentation may not, in whole or in part, be copied, photocopied, reproduced, translated or reduced to any medium or machine without prior written consent.

IN NO EVENT WILL SUPERMICRO BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, SPECULATIVE OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OR INABILITY TO USE THIS PRODUCT OR DOCUMENTATION, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN PARTICULAR, SUPERMICRO SHALL NOT HAVE LIABILITY FOR ANY HARDWARE, SOFTWARE, OR DATA STORED OR USED WITH THE PRODUCT, INCLUDING THE COSTS OF REPAIRING, REPLACING, INTEGRATING, INSTALLING OR RECOVERING SUCH HARDWARE, SOFTWARE, OR DATA.

Any disputes arising between manufacturer and customer shall be governed by the laws of Santa Clara County in the State of California, USA. The State of California, County of Santa Clara shall be the exclusive venue for the resolution of any such disputes. Super Micro's total liability for all claims will not exceed the price paid for the hardware product.

California Best Management Practices Regulations for Perchlorate Materials: This Perchlorate warning applies only to products containing CR (Manganese Dioxide) Lithium coin cells. "Perchlorate Material-special handling may apply. See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate)"

---

**WARNING: Handling of lead solder materials used in this product may expose you to lead, a chemical known to the State of California to cause birth defects and other reproductive harm.**

---

Manual Revision 1.0  
Release Date: April 10, 2009

Unless you request and receive written permission from Super Micro Computer, Inc., you may not copy any part of this document.

Information in this document is subject to change without notice. Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders.

Copyright © 2009 by Super Micro Computer, Inc.  
All rights reserved.

**Printed in the United States of America**

---

---



---

## Table of Contents

Contacting Supermicro.....	iv
Returning Merchandise for Service.....	v
<b>Chapter 1 SAS-827B Safety Guidelines</b>	
1-1 ESD Safety Guidelines .....	1-1
1-2 General Safety Guidelines .....	1-1
1-3 An Important Note to Users .....	1-2
1-4 Introduction to the SAS-827B Backplane .....	1-2
<b>Chapter 2 Jumpers and Pin Definitions</b>	
2-1 Front Connectors .....	2-1
Front Connectors .....	2-1
2-2 Front Jumpers and Pin Definitions.....	2-4
Explanation of Jumpers .....	2-4
2-3 Front LED Indicator.....	2-5
Front Panel LED .....	2-5
2-4 Rear Connectors and LED Indicators.....	2-6
SAS Ports.....	2-7

## Contacting Supermicro

### Headquarters

Address: Super Micro Computer, Inc.  
980 Rock Ave.  
San Jose, CA 95131 U.S.A.

Tel: +1 (408) 503-8000  
Fax: +1 (408) 503-8008  
Email: [marketing@supermicro.com](mailto:marketing@supermicro.com) (General Information)  
[support@supermicro.com](mailto:support@supermicro.com) (Technical Support)

Web Site: [www.supermicro.com](http://www.supermicro.com)

### Europe

Address: Super Micro Computer B.V.  
Het Sterrenbeeld 28, 5215 ML  
's-Hertogenbosch, The Netherlands

Tel: +31 (0) 73-6400390  
Fax: +31 (0) 73-6416525  
Email: [sales@supermicro.nl](mailto:sales@supermicro.nl) (General Information)  
[support@supermicro.nl](mailto:support@supermicro.nl) (Technical Support)  
[rma@supermicro.nl](mailto:rma@supermicro.nl) (Customer Support)

### Asia-Pacific

Address: Super Micro Computer, Inc.  
4F, No. 232-1, Liancheng Rd.  
Chung-Ho 235, Taipei County  
Taiwan, R.O.C.

Tel: +886-(2) 8226-3990  
Fax: +886-(2) 8226-3991  
Web Site: [www.supermicro.com.tw](http://www.supermicro.com.tw)

Technical Support:  
Email: [support@supermicro.com.tw](mailto:support@supermicro.com.tw)  
Tel: 886-2-8226-1900

## Returning Merchandise for Service

A receipt or copy of your invoice marked with the date of purchase is required before any warranty service will be rendered. You can obtain service by calling your vendor for a Returned Merchandise Authorization (RMA) number. When returning to the manufacturer, the RMA number should be prominently displayed on the outside of the shipping carton, and mailed prepaid or hand-carried. Shipping and handling charges will be applied for all orders that must be mailed when service is complete.

For faster service, RMA authorizations may be requested online (<http://www.supermicro.com/support/rma/>).

Whenever possible, repack the backplane in the original Supermicro box, using the original packaging materials. If these are no longer available, be sure to pack the backplane in an anti-static bag and inside the box. Make sure that there is enough packaging material surrounding the backplane so that it does not become damaged during shipping.

This warranty only covers normal consumer use and does not cover damages incurred in shipping or from failure due to the alteration, misuse, abuse or improper maintenance of products.

During the warranty period, contact your distributor first for any product problems.

## Notes

## Chapter 1

### SAS-827B Safety Guidelines

To avoid personal injury and property damage, carefully follow all the safety steps listed below when accessing your system or handling the components.

#### 1-1 ESD Safety Guidelines

*Electrostatic Discharge (ESD) can damage electronic components. To prevent damage to your system, it is important to handle it very carefully. The following measures are generally sufficient to protect your equipment from ESD.*

- Use a grounded wrist strap designed to prevent static discharge.
- Touch a grounded metal object before removing a component from the antistatic bag.
- Handle the backplane by its edges only; do not touch its components, peripheral chips, memory modules or gold contacts.
- When handling chips or modules, avoid touching their pins.
- Put the card and peripherals back into their antistatic bags when not in use.

#### 1-2 General Safety Guidelines

- Always disconnect power cables before installing or removing any components from the computer, including the SAS-827B backplane.
- Disconnect the power cable before installing or removing any cables from the SAS-827B backplane.
- Make sure that the SAS-827B backplane is securely and properly installed on the motherboard to prevent damage to the system due to power shortage.

## **1-3 An Important Note to Users**

- All images and layouts shown in this user's guide are based upon the latest PCB Revision available at the time of publishing. The card you have received may or may not look exactly the same as the graphics shown in this manual.

## **1-4 Introduction to the SAS-827B Backplane**

The SAS-827B backplane has been designed to utilize the most up-to-date technology available, providing your system with reliable, high-quality performance.

This manual reflects SAS-827B Revision 1.01, the most current release available at the time of publication. Always refer to the Supermicro Web site at [www.supermicro.com](http://www.supermicro.com) for the latest updates, compatible parts and supported configurations.



## Chapter 2

### Jumpers and Pin Definitions

#### 2-1 Front Connectors

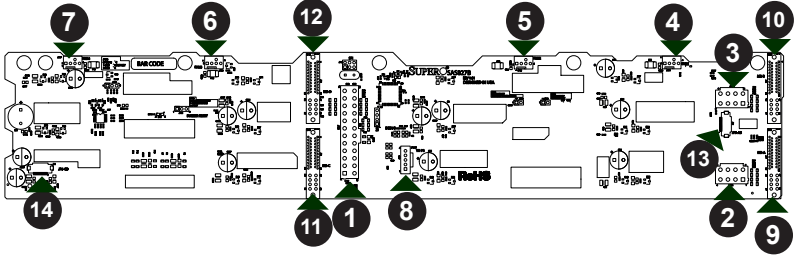


Figure 2-1: Front Connectors

#### Front Connectors

- |                                     |  |
|-------------------------------------|--|
| 1. Main Power Connector: JPW1       | 8. Power Supply Connector: JPI <sup>2</sup> C1 |
| 2. Secondary Power Connector: JPW2  | 9. MB-A hot plug connector: JF1                |
| 3. Secondary Power Connector: JPW3  | 10. MB-B hot plug connector: JF2               |
| 4. Chassis Fan Connector: Fan1 JP54 | 11. MB-C hot plug connector: JF3               |
| 5. Chassis Fan Connector: Fan2 JP55 | 12. MB-D hot plug connector: JF4               |
| 6. Chassis Fan Connector: Fan3 JP56 | 13. Backplane to front panel connector: JF5    |
| 7. Chassis Fan Connector Fan4 JP57  | 14. Backplane to front panel connector: JF6    |

### 1. - 3. Motherboard Power Connectors

These connectors, designated JPW1, JPW2, and JPW3 supply power the four motherboard nodes in the chassis.

### 4. - 7. Chassis Fan Connectors

These connectors, designated JP54, JP55, JP56 and JP57 supply power to the chassis cooling fans.

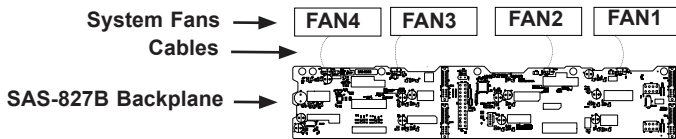


Figure 2-2: Default Configuration - Fans Connected Directly to the Backplane

### 8. Power Supply Connector

The 5-pin connector, designated JPI<sup>2</sup>C1 provides power to the SMBUS and power control signals.

### 9. - 12. Motherboard to Backplane Connectors

These connectors, designated JF1, JF2, JF3 and JF4 connect the motherboards to the backplane on the chassis. JF1 connects to motherboard A. JF2 connects to motherboard B. JF3 connects to motherboard C and JF4 connects to motherboard D. See the table on the previous page to determine the locations of the motherboards within the chassis.

**13. - 14. Backplane to Front Panel Headers**

These connectors are designated JF5 and JF6. They connect the backplane to the front LED panels on the chassis. JF5 connects to the LED display panel for motherboards A and B. JF6 connects to the LED display panel for motherboards C and D.

## 2-2 Front Jumpers and Pin Definitions


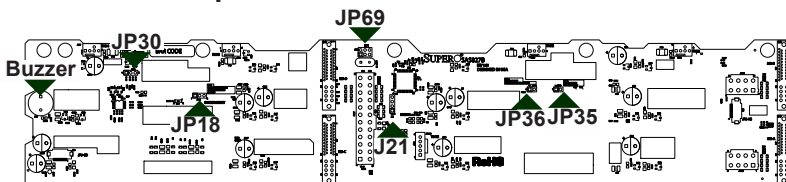


Figure 2-3: Front Jumpers

### Explanation of Jumpers

To modify the operation of the backplane, jumpers can be used to choose between optional settings. Jumpers create shorts between two pins to change the function of the connector. Pin 1 is identified with a square solder pad on the printed circuit board. **Note:** On two pin jumpers, "Closed" means the jumper is on and "Open" means the jumper is off the pins.

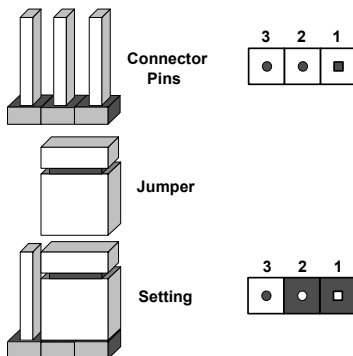

Jumper Settings		
Jumper	Jumper Settings	Notes
JP18	Open: Buzzer disabled 1-2: Buzzer enabled (Default) 2-3: Test setting	*Buzzer reset
JP30	Overheat Settings Open: 45° Celsius 1-2: 50° Celcius (Default) 2-3: 55° Celsius	Backplane overheat settings
JP35	Open: Default Closed: LED test	LED testing
JP36	Open: Default , multiple power button functionality Closed: Single power button functionality	Any power button
JP69		FW upgrade connector

\*The buzzer sound indicates that a condition requiring immediate attention has occurred.

#### **The backplane buzzer alarm is triggered by the following condition:**

1. Backplane temperature over 45°, 50° or 55° Celsius, depending upon the overheat setting selected. See the table above for details.

## 2-3 Front LED Indicator

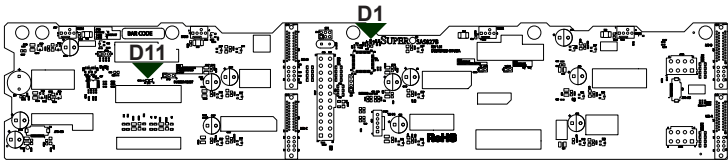


Figure 2-4: Front LED

Front Panel LED		
LED	State	Specification
Heartbeat LED: D1	Blinking	Blinking heartbeat indicates backplane activity
Overheat LED: D11	Solid on	Indicates an overheat condition

## 2-4 Rear Connectors and LED Indicators

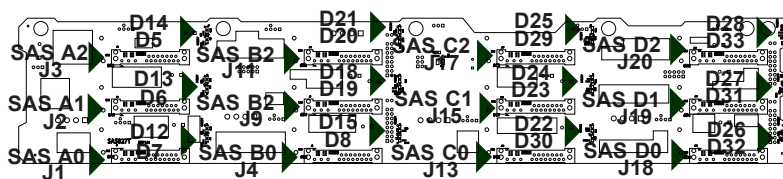


Figure 2-5: Rear Connectors and LEDs

Rear SAS/SATA Connectors			
Rear Connector	SAS Drive Number	Rear Connector	SAS Drive Number
SAS #A2	SAS/SATA A2	SAS #C2	SAS/SATA C2
SAS #A1	SAS/SATA A1	SAS #C1	SAS/SATA C1
SAS #A0	SAS/SATA A0	SAS #C0	SAS/SATA C0
SAS #B2	SAS/SATA B2	SAS #D2	SAS/SATA D2
SAS #B1	SAS/SATA B1	SAS #D1	SAS/SATA D1
SAS #B0	SAS/SATA B0	SAS #D0	SAS/SATA D0

Rear LED Indicators	
Rear LED	Hard Drive Activity
SAS #A0	D12
SAS #A1	D13
SAS #A2	D14
SAS #B0	D15
SAS #B1	D18
SAS #B2	D21
SAS #C0	D22
SAS #C1	D24
SAS #C2	D25
SAS #D0	D26
SAS #D1	D27
SAS #D2	D28

## SAS Ports

The SAS-827B backplane is designed with four separate sectors, which support from one to four motherboards independently of each other. The SAS ports are used to connect the SAS drive cables. The 12 ports are designated A0, A1, A2, B0, B1, B2, C0, C1, C2 and D0, D1, D2. Each port is also compatible with SATA drives. Use the table below to determine the SAS port to motherboard configuration that is appropriate for your system.

SAS Port to Motherboard Configurations		
Number of Motherboards	SAS Port Connectors	Connect to Motherboard
Using 1 MB	A0, A1, A2	MB-A
Using 2 MBs	A0, A1, A2	MB-A
	B0, B1, B2	MB-B
Using 3 MBs	A0, A1, A2	MB-A
	B0, B1, B2	MB-B
	C0, C1, C2	MB-C
Using 4 MBs	A0, A1, A2	MB-A
	B0, B1, B2	MB-B
	C0, C1, C2	MB-C
	D0, D1, D2	MB-D

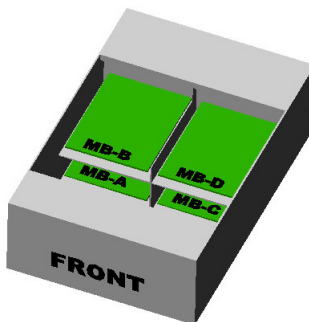


Figure 2-6: Motherboard Locations In the Chassis

Disclaimer (cont.)

The products sold by Supermicro are not intended for and will not be used in life support systems, medical equipment, nuclear facilities or systems, aircraft, aircraft devices, aircraft/emergency communication devices or other critical systems whose failure to perform be reasonably expected to result in significant injury or loss of life or catastrophic property damage. Accordingly, Supermicro disclaims any and all liability, and should buyer use or sell such products for use in such ultra-hazardous applications, it does so entirely at its own risk. Furthermore, buyer agrees to fully indemnify, defend and hold Supermicro harmless for and against any and all claims, demands, actions, litigation, and proceedings of any kind arising out of or related to such ultra-hazardous use or sale.