



SUPERMICRO® SuperServer 6019P-WT8 Quick Reference Guide

Board Layout

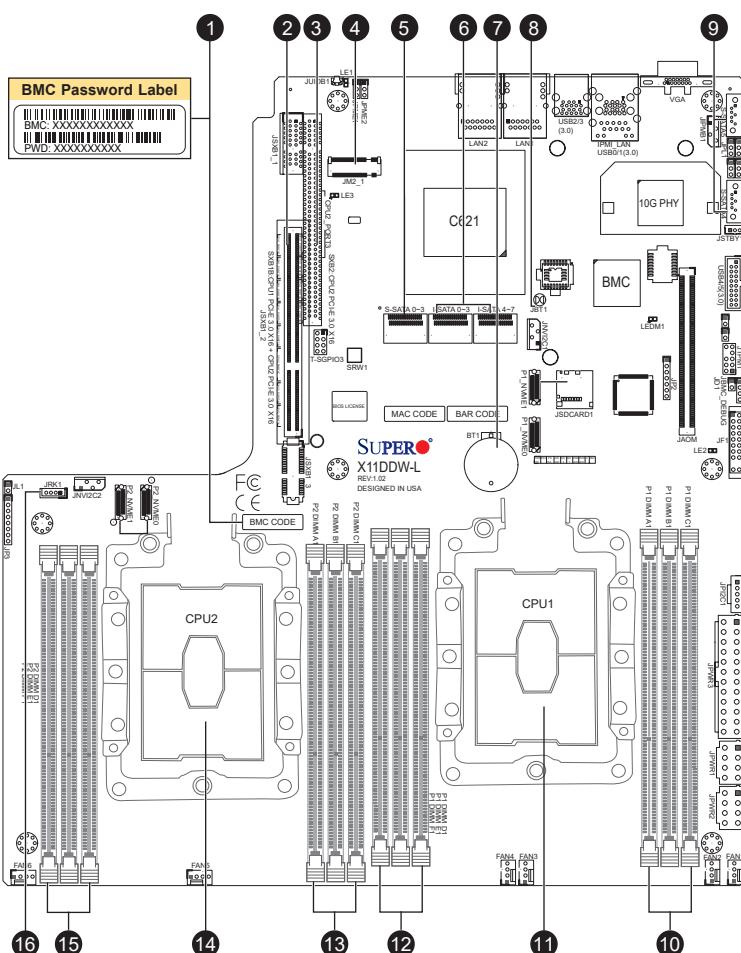


No.	Description
1	BMC Password Label
2	SXB1: PCI-E 3.0 (x16 + x16) Left Riser Card slot supported by CPU1 and CPU2
3	SXB2: PCI-E 3.0 x16 Right Riser Card slot supported by CPU2
4	M.2 (JM2_1, PCIe M.2 from PCH (Support NVMe M.2 only)
5	S-SATA 3.0 Ports (Intel SCU)
6	I-SATA0~3, I-SATA4~7: SATA 3.0 Ports (Intel PCH)
7	Onboard CMOS battery
8	JBT1: Clear CMOS
9	S-SATA 4, 5: SATA 3.0 Ports
10	P1-DIMM1/P1-DIMM2/P1-DIMM3 slot
11	CPU1
12	P1-DIMM4/P1-DIMM5/P1-DIMM6 slot
13	P2-DIMM1/P2-DIMM2/P2-DIMM3 slot
14	CPU2
15	P2-DIMM4/P2-DIMM5/P2-DIMM6 slot
16	JRK1: RAID Key for onboard NVMe devices

Front View and Features

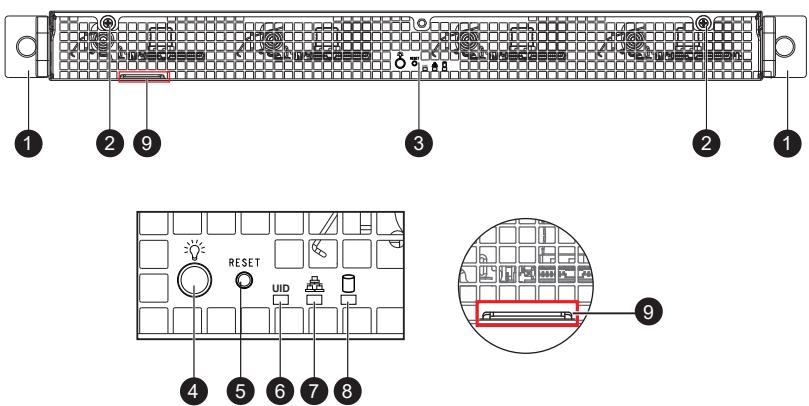


No.	Description
1	Rack Ear Brackets
2	Bezel Screws
3	Control Panel
4	Power Button
5	Reset Button
6	Unit Identifier LED
7	NIC LED
8	HDD LED
9	Service/Asset Tag, Pull-out identifier (with BMC ADMIN default password underneath)

Rear View and Features

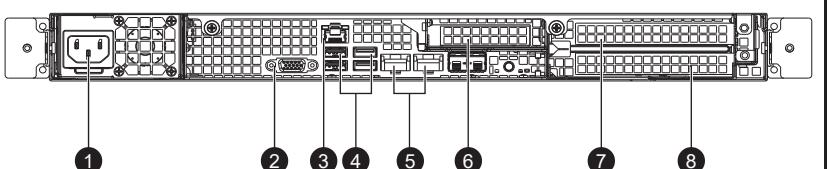

No.	Description
1	Power Supply Module
2	VGA Port
3	Dedicated IPMI Port
4	USB 3.0 Ports
5	LAN Ports
6	PCI-E 3.0 x8 LP Slot (CPU2)
7	PCI-E 3.0 x16 FHHL Slot (CPU2)
8	PCI-E 3.0 x16 FHHL Slot (CPU1)


BMC Password Label

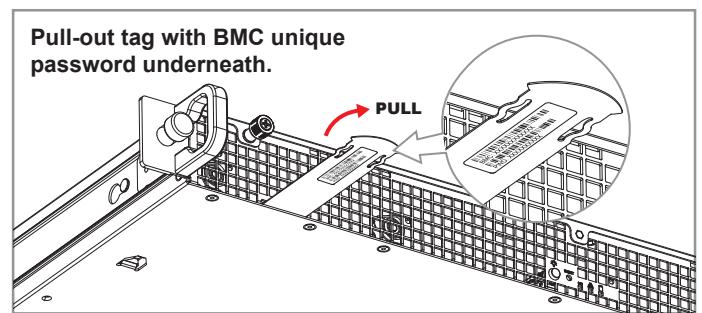

Each system comes with a unique default password for the ADMIN user. This can be found on a sticker on the motherboard and a sticker underneath the service tag on chassis. If necessary, the password can be reset by the Supermicro IPMICFG tool.

For more information, please visit <https://www.supermicro.com/en/solutions/management-software/bmc-resources>

Memory

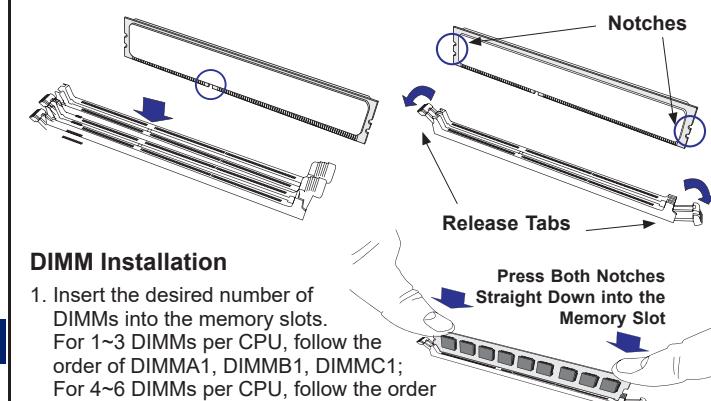

DIMM Installation

1. Insert the desired number of DIMMs into the memory slots. For 1~3 DIMMs per CPU, follow the order of DIMM1, DIMM2, DIMM3; For 4~6 DIMMs per CPU, follow the order of DIMM1, DIMM2, DIMM3, DIMM4, DIMM5, DIMM6. For best performance, please use the memory modules of the same type and speed.
2. Push the release tabs outwards on both ends of the DIMM slot to unlock it.
3. Align the key of the DIMM module with the receptive point on the memory slot.
4. Align the notches on both ends of the module against the receptive points on the ends of the slot.
5. Use two thumbs together to press the notches on both ends of the module straight down into the slot until the module snaps into place.
6. Press the release tabs to the lock positions to secure the DIMM module into the slot.

Beep Code

BIOS Beep (POST) Codes		
Beep Code	Error Message	Description
1 beep	Refresh	Circuits have been reset (Ready to power up)
5 short, 1 long	Memory error	No memory detected in the system
5 long, 2 short	Display memory read/write error	Video adapter missing or with faulty memory
1 long continuous	System OH	System overheat condition

Caution

SAFETY INFORMATION

IMPORTANT: See installation instructions and safety warning before connecting system to power supply. http://www.supermicro.com/about/policies/safety_information.cfm

WARNING:

To reduce risk of electric shock/damage to equipment, disconnect power from server by disconnecting all power cords from electrical outlets. If any CPU socket empty, install protective plastic CPU cap.

CAUTION:

Always be sure all power supplies for this system have the same power output. If mixed power supplies are installed, the system will not operate. For more information go to: <http://www.supermicro.com/support>

