



Board Layout

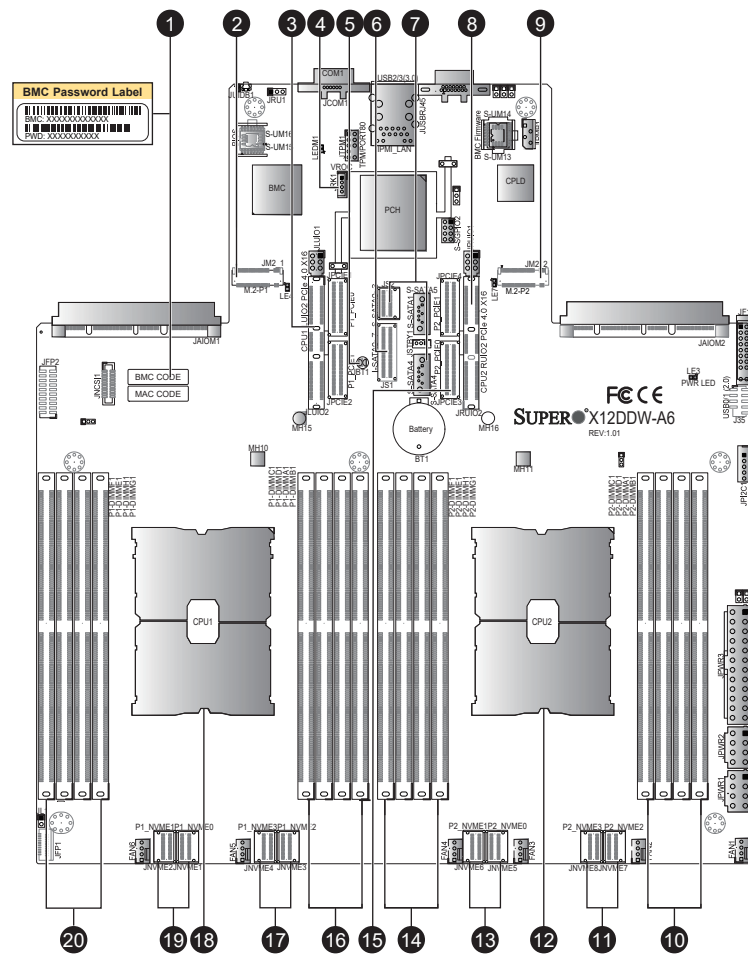


No.	Description
1	BMC Password Label
2	PCIe 3.0 x2 NVMe M.2 slot from PCH supported by CPU1
3	Left side PCIe 4.0 x16 riser card slot supported by CPU1
4	JRK1: RAID Key for onboard NVMe devices
5	JBT1: Clear CMOS
6	I-SATA 0-7: SATA 3.0 ports
7	S-SATA 0-3/S-SATA4, 5: SATA 3.0 ports/Powered SATA connectors
8	Right side PCIe 4.0 x16 riser card slot supported by CPU2
9	PCIe 3.0 x2 NVMe M.2 slot from PCH supported by CPU2
10	P2-DIMMB1/P2-DIMMA1/P2-DIMMD1/P2-DIMMC1 slot
11	NVMe PCI-E 4.0 x4 SlimSAS ports 2 and 3 (from CPU2)
12	CPU2
13	NVMe PCI-E 4.0 x4 SlimSAS ports 0 and 1 (from CPU2)
14	P2-DIMMG1/P2-DIMMH1/P2-DIMM1/P2-DIMMF1 slot
15	NVMe PCI-E 4.0 x4 SlimSAS ports 4 and 5 (from CPU2)
16	P1-DIMMB1/P1-DIMMA1/P1-DIMMD1/P1-DIMMC1 slot
17	NVMe PCI-E 4.0 x4 SlimSAS ports 2 and 3 (from CPU1)
18	CPU1
19	NVMe PCI-E 4.0 x4 SlimSAS ports 0 and 1 (from CPU1)
20	P1-DIMMG1/P1-DIMMH1/P1-DIMM1/P1-DIMMF1 slot

Front View and Features

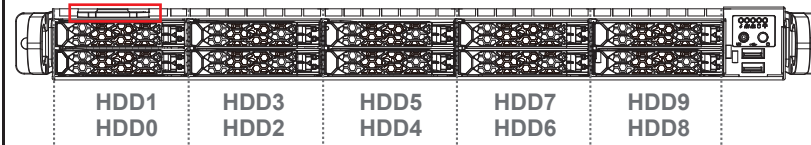


Slot	Description
0~9	2.5" hot-swap SAS3*/SATA/NVMe** drive bays (NVMe from CPU1 and CPU2)

* SAS3 support requires additional parts; see optional parts list
 ** NVMe support requires additional parts; see optional parts list

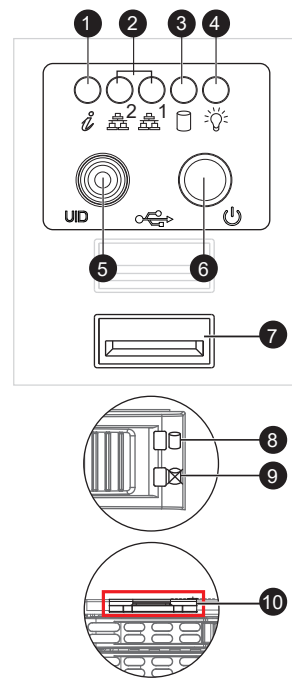


No.	Description
1	Universal Information LED
2	LAN1 LED & LAN2 LED
3	Device Activity LED
4	Power LED
5	UID Button
6	Power Button
7	USB 2.0
8	Device Activity LED
9	Device Status LED
10	Service/Asset Tag, Pull-out identifier (with BMC ADMIN default password underneath)

Rear View and Features

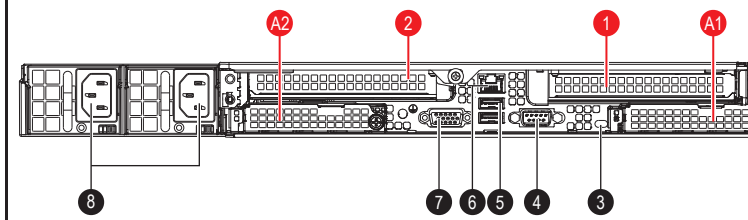

No.	Description
1	PCIe 4.0 x16 slot: full-height, 6.6" length (CPU1)
2	PCIe 4.0 x16 slot: full-height, 6.6" length (CPU2)
A1	PCIe 4.0 x16 AIOM from CPU1
A2	PCIe 4.0 x16 AIOM from CPU2
3	UID LED/BMC Reset
4	COM Port
5	USB Ports
6	Dedicated IPMI LAN Port
7	VGA Port
8	Power Supplies


Memory

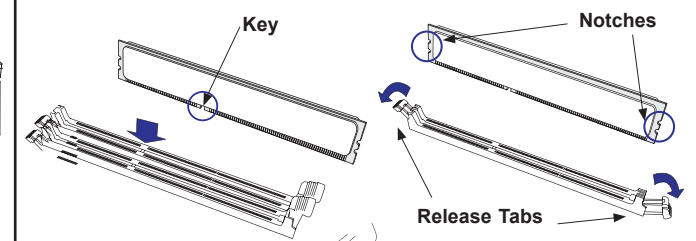

DIMM Installation

1. Insert the desired number of DIMMs into the memory slots.
Note: Unbalanced population will impact memory performance. Refer to server manual for full population guide.
2. Push the release tabs outwards on both ends of the DIMM slot to unlock it.
3. Align the key of the DIMM module with the receptive point on the memory slot.
4. Align the notches on both ends of the module against the receptive points on the ends of the slot.
5. Use two thumbs together to press the notches on both ends of the module straight down into the slot until the module snaps into place.
6. Press the release tabs to the lock positions to secure the DIMM module into the slot.

BMC Password Label

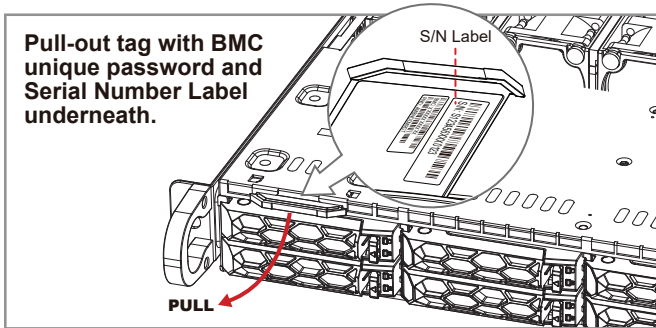


Pull-out tag with BMC unique password and Serial Number Label underneath.

Each system comes with a unique default password for the ADMIN user. This can be found on a sticker on the motherboard and a sticker underneath the service tag on chassis. If necessary, the password can be reset by the Supermicro IPMICFG tool.

For more information, please visit <https://www.supermicro.com/en/solutions/management-software/bmc-resources>

CPU Installation

1. Put processor into bracket – attention to the lineup Pin and key on both processor and carrier.
2. Put processor carrier module into HS. Processor Carrier Assembly
3. Put processor heatsink module into MB.

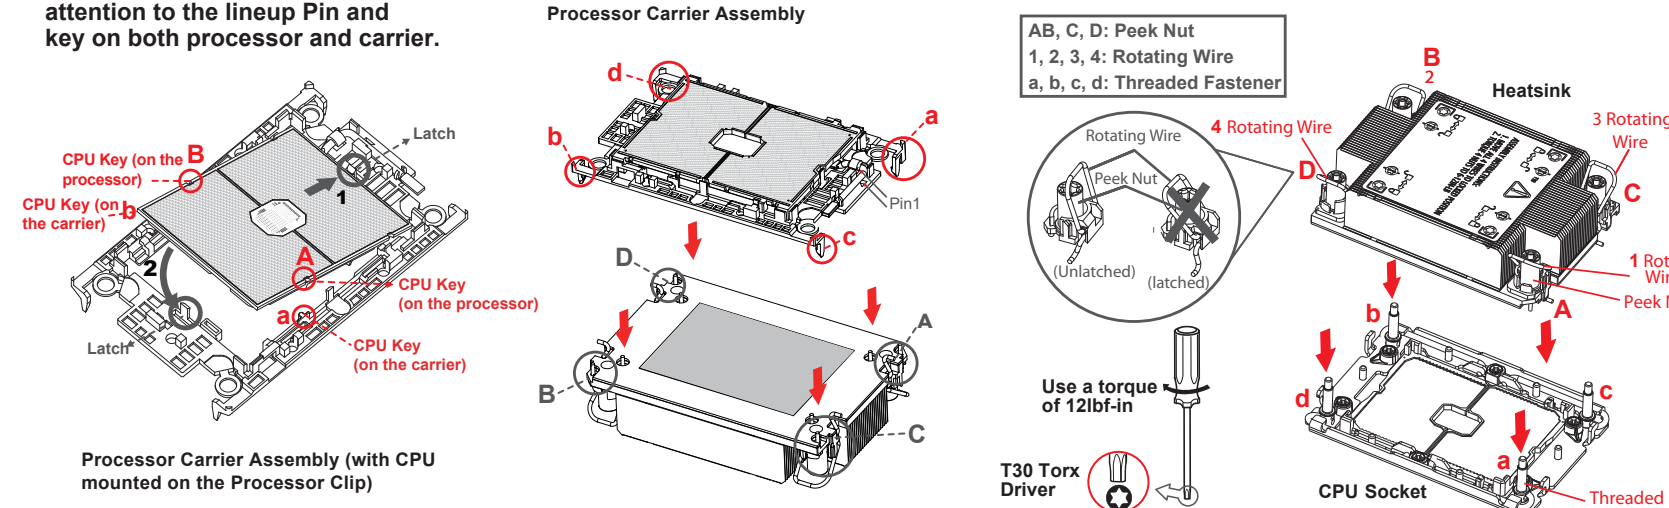

Caution and Product Resources

SAFETY INFORMATION:
 IMPORTANT: See installation instructions and safety warning before connecting system to power supply.
http://www.supermicro.com/about/policies/safety_information.cfm

WARNING:
 To reduce risk of electric shock/damage to equipment, disconnect power from server by disconnecting all power cords from electrical outlets. If any CPU socket empty, install protective plastic CPU cap.

CAUTION:
 Always be sure all power supplies for this system have the same power output. If mixed power supplies are installed, the system will not operate.

CAUTION:
 This unit has redundant power sources. Please disconnect all the power cords before servicing.

PRODUCT RESOURCES:
 For more information go to: <http://www.supermicro.com/support>

