


SUPERMICRO® SuperServer 510T-ML Quick Reference Guide


Board Layout

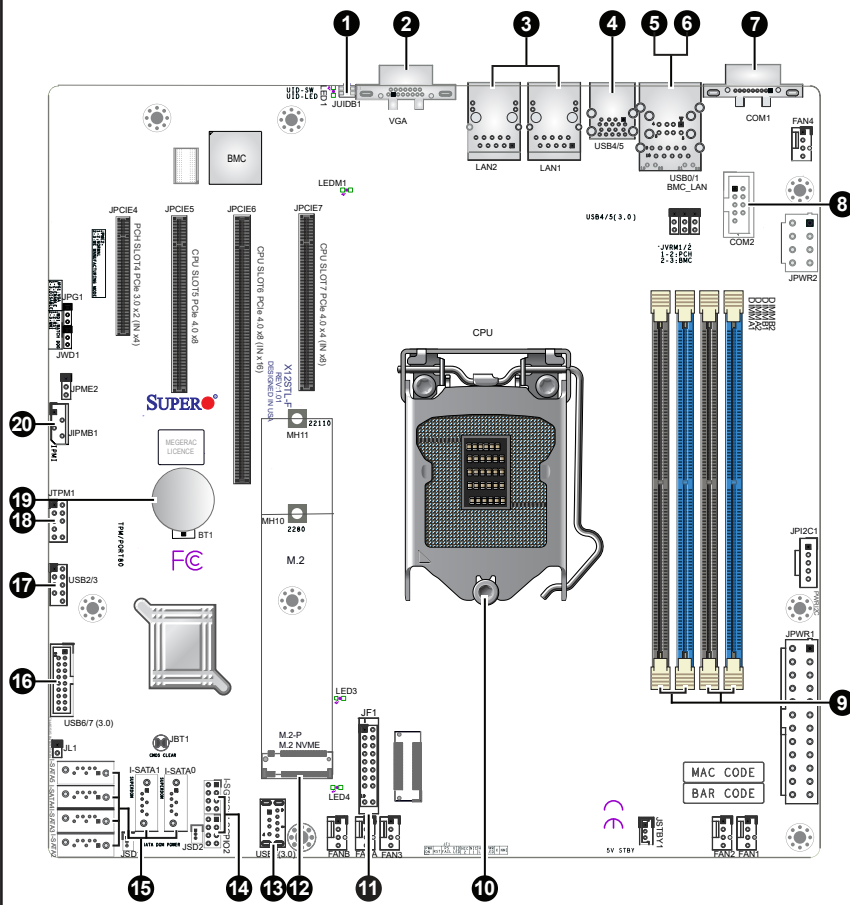

| Item | Description |
|------|-------------------------------------|
| 1 | UID Button (Unit Identifier Button) |
| 2 | VGA Port (Blue) |
| 3 | Two 1GbE LAN Ports |
| 4 | USB 3.2 Gen 1 Ports |
| 5 | Dedicated LAN for IPMI |
| 6 | USB 2.0 Ports |
| 7 | COM Port (Serial Port) |
| 8 | COM Port Header (Serial Port) |
| 9 | DIMM A1-B2 slots |
| 10 | CPU |

| Item | Description |
|------|--------------------------------------|
| 11 | Front Control Panel |
| 12 | M.2 PCI-E Interface |
| 13 | USB 3.2 Gen 1 Type A Port |
| 14 | I-SGPIO Headers |
| 15 | I-SATA0-5: Internal SATA Ports |
| 16 | USB 3.2 Gen 1 Header |
| 17 | USB 2.0 Header |
| 18 | TPM Header |
| 19 | Onboard CMOS Battery |
| 20 | JIPMB1 4-Pin BMC External I2C Header |


Front View and Features

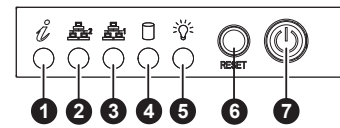

Control Panel Features


| Item | Description |
|------|-----------------|
| 1 | Information LED |
| 2 | NIC2 LED |
| 3 | NIC1 LED |
| 4 | HDD LED |
| 5 | Power LED |
| 6 | Reset Button |
| 7 | Power Button |

Rear View and Features

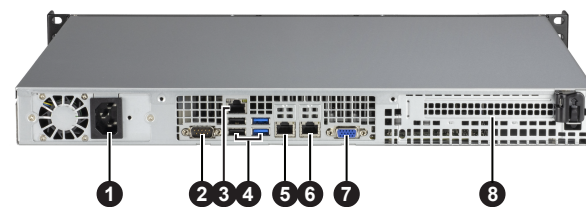

| Item | Description |
|------|---|
| 1 | Single Power Supply Module |
| 2 | Serial Port |
| 3 | Dedicated IPMI Port |
| 4 | Two USB 3.2 Gen 1 (blue), and Two USB 2.0 (black) Ports |
| 5 | LAN 1 Port |
| 6 | LAN 2 Port |
| 7 | VGA Port |
| 8 | PCI-E Expansion Slot 1 (FHHL) |

BMC Password Label

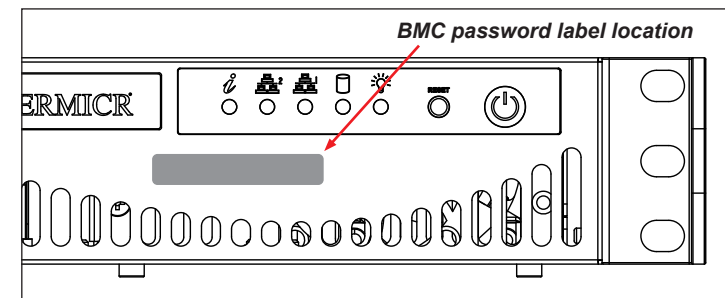


Each system comes with a unique default password for the ADMIN user. This can be found on a sticker on the motherboard and a sticker on the front side of the chassis. If necessary, the password can be reset by the Supermicro IPMICFG tool.

For more information, please visit <https://www.supermicro.com/en/solutions/management-software/bmc-resources>

Memory

DIMM Installation

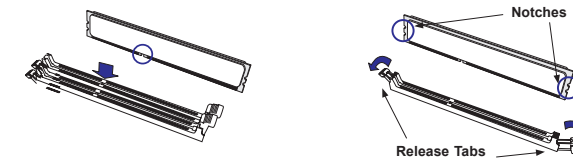

When installing memory modules, the DIMM slots should be populated in the following order: DIMMB2 / DIMMA2 / DIMMB1 / DIMMA1.

- Always use DDR4 DIMM modules of the same type, size, and speed.
- Mixed DIMM speeds can be installed. However, all DIMMs will run at the speed of the slowest DIMM.
- The motherboard will support odd-numbered modules (1 or 3 modules) installed. However, to achieve the best memory performance, fully populate the motherboard with validated memory modules.

1 CPU, 4 DIMM Slots


| Number of DIMMs | Memory Population Sequence |
|-----------------|-----------------------------------|
| 1 | DIMMB2 |
| 2 | DIMMB2 / DIMMA2 |
| 3 | (Unbalanced; not recommended) |
| 4 | DIMMB2 / DIMMA2 / DIMMB1 / DIMMA1 |

CPU Installation and Removal


Supports a single Intel Xeon E-2300 or Pentium Processor (LGA 1200)

Installing the LGA1200 Processor

1. Press the load lever down to release the load plate from its locking position.
2. Gently lift the load lever to open the load plate. Remove the plastic protective cover. Do not touch the CPU socket contacts.
3. Align the Pin 1 triangle on the CPU with the Pin 1 triangle on the socket.
4. Carefully lower the CPU straight down into the socket. Inspect the four corners to make sure that the CPU is properly installed. (You can only install the CPU in one direction.)

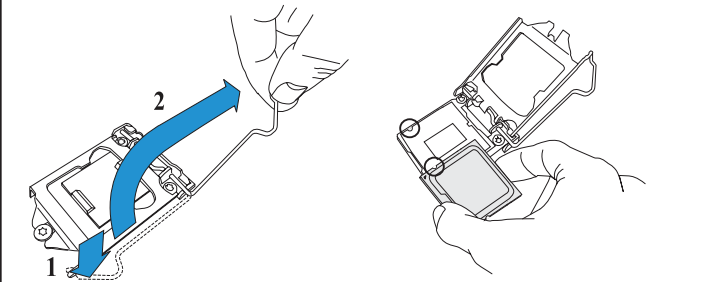


5. Close the load plate, then gently push down the load lever into its locking position.

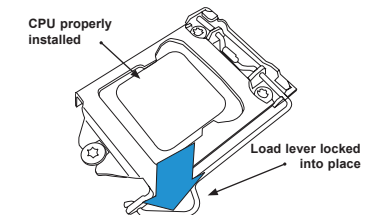

Installing a CPU Heatsink

1. Apply thermal grease to the heatsink or the CPU.
2. Align the four holes of the heatsink with the four mounting holes on the motherboard.
3. With a Phillips screwdriver, gradually tighten screws in the order of #1, #2, #3, #4, ensuring even pressure.

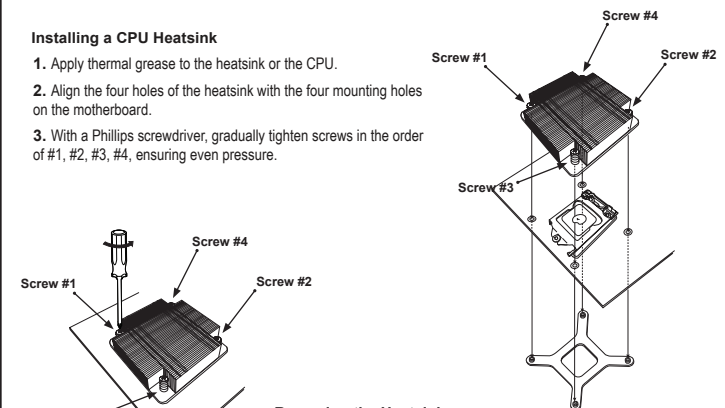

Removing the Heatsink

1. Unplug the power connector from the power supply.
2. Unscrew the heatsink screws in the sequence of #1, #2, #3, #4.
3. Gently lift the heatsink up and remove it from the CPU.

Caution

SAFETY INFORMATION
IMPORTANT: See installation instructions and safety warning before connecting system to power supply.
http://www.supermicro.com/about/policies/safety_information.cfm

WARNING:
To reduce risk of electric shock/damage to equipment, disconnect power from server by disconnecting all power cords from electrical outlets. If any CPU socket empty, install protective plastic CPU cap

WARNING:
Always be sure all power supplies for this system have the same power output. If mixed power supplies are installed, the system will not operate.

For more information go to : <http://www.supermicro.com/support>

