



SUPERMICR[®] A+ Server AS -1124US-TNR Quick Reference Guide

Board Layout

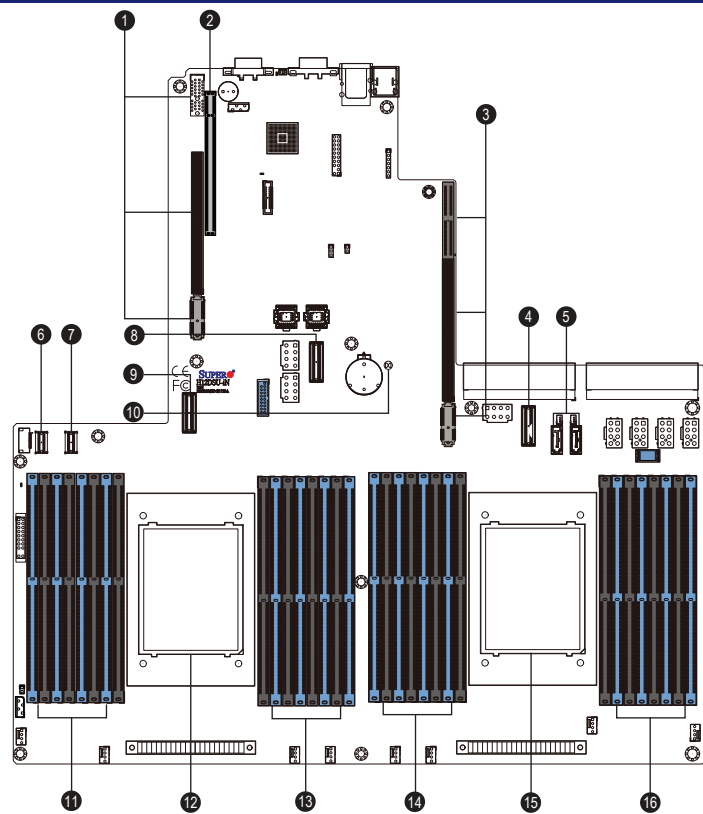


No.	Description
1	SXB1A/1B/1C: WIO-L Riser Card Support (CPU2 PCI-E 4.0 x32)
2	SXB2: WIO-R Riser Card Support (CPU2 PCI-E 4.0 x16)
3	SXB3A/3B/3C: Ultra I/O Riser Card Support (CPU1 PCI-E 4.0 x40)
4	CPU1 NVMe Ports 0-1, SATA0-7
5	SATA DOM 3.0 8-9
6	CPU2 NVMe Port 0, SATA10-13
7	CPU2 NVMe Port 1, SATA14-17
8	CPU1 NVMe Ports 2-3
9	CPU2 NVMe Ports 2-3
10	JBT1 - CMOS Clear
11	CPU2 DIMMA1-D2 Slots
12	CPU2
13	CPU2 DIMME1-H2 Slots
14	CPU1 DIMMA1-D2 Slots
15	CPU1
16	CPU1 DIMME1-H2 Slots

Heatsink Installation

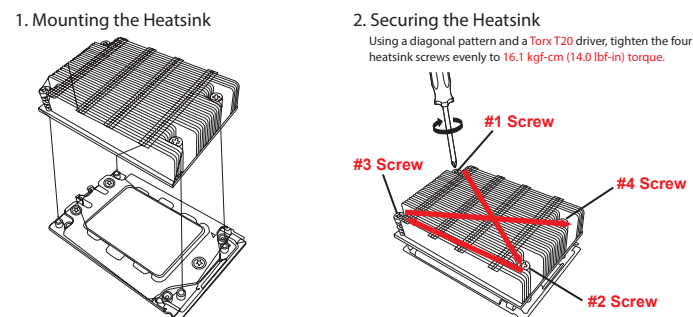

Memory

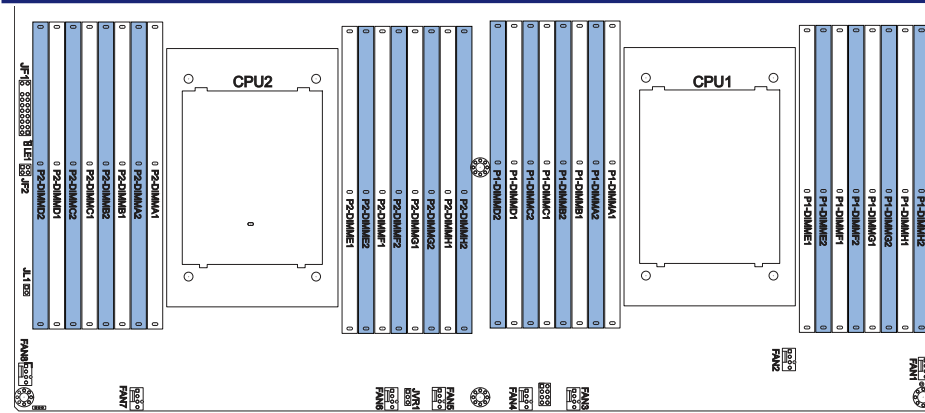

DIMM Module Population Sequence


When installing memory modules, the DIMM slots should be populated in the following order: DIMMA2, DIMMB2, DIMMC2, DIMMD2, DIMME2, DIMMF2, DIMMG2, DIMMH2, then DIMMA1, DIMMB1, DIMMC1, DIMMD1, DIMME1, DIMMF1, DIMMG1, DIMMH1.

- The blue slots must be populated first.
- Always use DDR4 DIMM modules of the same type, size and speed.
- Mixed DIMM speeds can be installed. However, all DIMMs will run at the speed of the slowest DIMM.
- The motherboard supports an odd number of modules (1, 3, etc.). However, to achieve the best memory performance, a balanced memory population is recommended.

Processors and Their Corresponding Memory Modules

CPU#	Channel 1	Channel 2	Channel 3	Channel 4	Channel 5	Channel 6	Channel 7	Channel 8								
8 DIMMS																
CPU1			C2	D2			G2	H2								
CPU2			C2	D2			G2	H2								
16 DIMMS																
CPU1	A2	B2	C2	D2	E2	F2	G2	H2								
CPU2	A2	B2	C2	D2	E2	F2	G2	H2								
32 DIMMS																
CPU1	A1	A2	B1	B2	C1	C2	D1	D2	E1	E2	F1	F2	G1	G2	H1	H2
CPU2	A1	A2	B1	B2	C1	C2	D1	D2	E1	E2	F1	F2	G1	G2	H1	H2

Hard Drive Installation

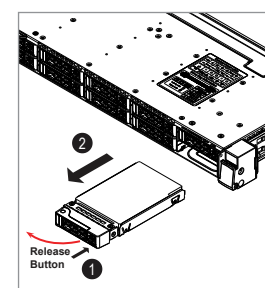



Removing a Hot-Swap Drive Carrier from the Chassis

- Press the release button on the drive carrier, which will extend the drive carrier handle.
- Use the drive carrier handle to pull the drive out of the chassis.

Installing a Drive


- Insert a drive into the carrier with the PCB side facing down and the connector end toward the rear of the carrier. Place the drive in the carrier so that the screw holes line up.
- The drive carrier has a tool-less design but you also have the option to secure the drive to the carrier with two M3 screws. These screws are included in the chassis accessory box.
- Insert the drive carrier with the disk drive into its bay, keeping the carrier oriented so that the hard drive is on the top of the carrier and the release button is on the right side. When the carrier reaches the rear of the bay, the release handle will retract.
- Push the handle in until it clicks into its locked position.

Front View & Interface

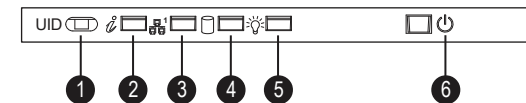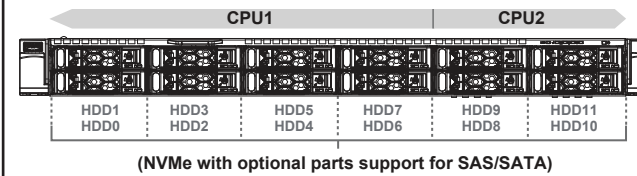

No.	Description	No.	Description
1	UID Button	5	Power LED
2	Universal Information LED	6	Power Button
3	NIC1 LED		
4	Device Activity LED		

Rear View

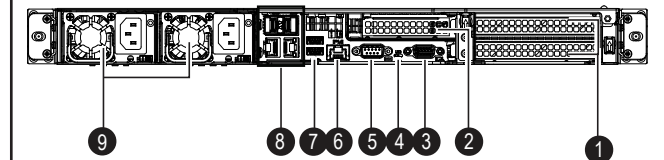


No.	Description
1	Two PCI-E x16 (FH 9.5") Slots
2	PCI-E x16 (LP) Slot
3	VGA Port
4	UID LED
5	Serial Port
6	Dedicated LAN for IPMI
7	Two USB 3.0 Ports
8	Ultra Riser Networking Slot*
9	Redundant Power Supply Modules**

* Check UIO detail from product website
** Redundancy based on configuration and application load

CPU Installation

Processor Installation

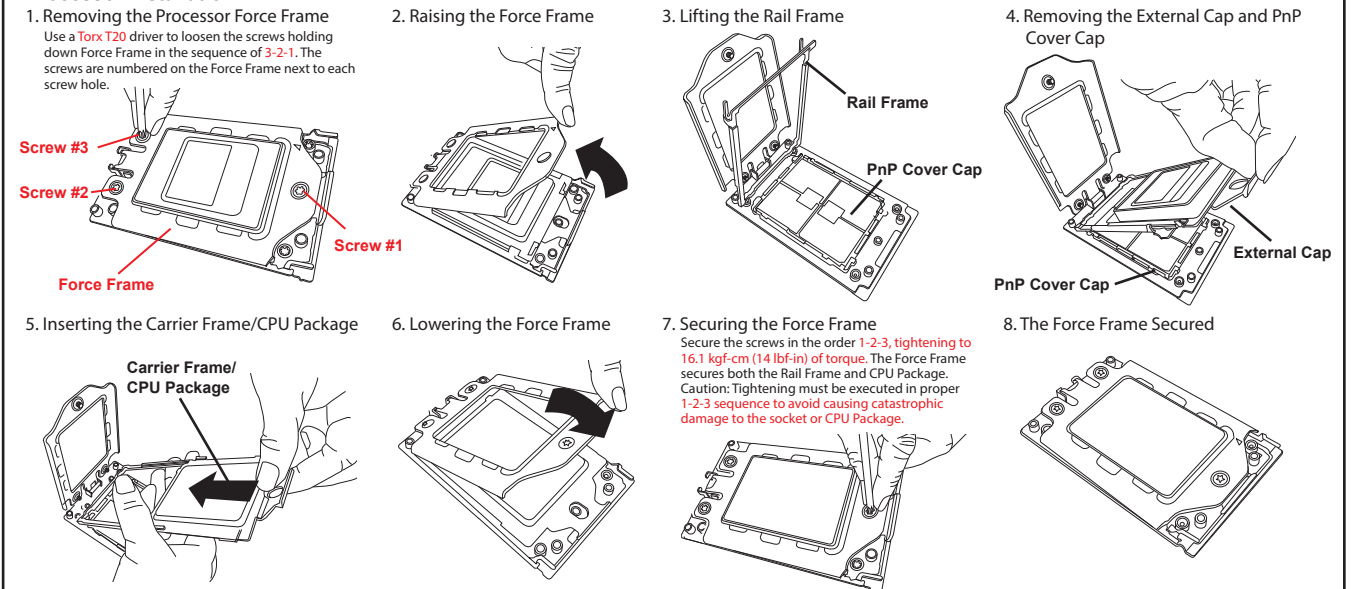

Default Cable Routing

Connector on Board/Card	Connection Backplane	HDD Bay	SMC Cable P/N
JSLIM1 (MB-H12DSU-iN)	CN1	0-1	CBL-SAST-1258-85
JSLIM2 (MB-H12DSU-iN)	CN2	2-3	CBL-SAST-1243-85
SLIMSAS1,2 (AOC-URG4N4-i4XTS)	CN3, CN4	4-7	CBL-SAST-1254F-85
JSLIM3-1/JSLIM3-2 (MB-H12DSU-iN)	CN5	8-9	CBL-SAST-1263F-85
JSLIM4 (MB-H12DSU-iN)	CN6	10-11	CBL-SAST-1260-85

Caution

- SAFETY INFORMATION**
IMPORTANT: See installation instructions and safety warning before connecting system to power supply.
http://www.supermicro.com/about/policies/safety_information.cfm
- WARNING:**
To reduce risk of electric shock/damage to equipment, disconnect power from server by disconnecting all power cords from electrical outlets. If any CPU socket empty, install protective plastic CPU cap.
- WARNING:**
Always be sure all power supplies for this system have the same power output. If mixed power supplies are installed, the system will not operate. For more information go to : <http://www.supermicro.com/support>

