



SUPERMICRO® SuperServer 6029P-WTR Quick Reference Guide

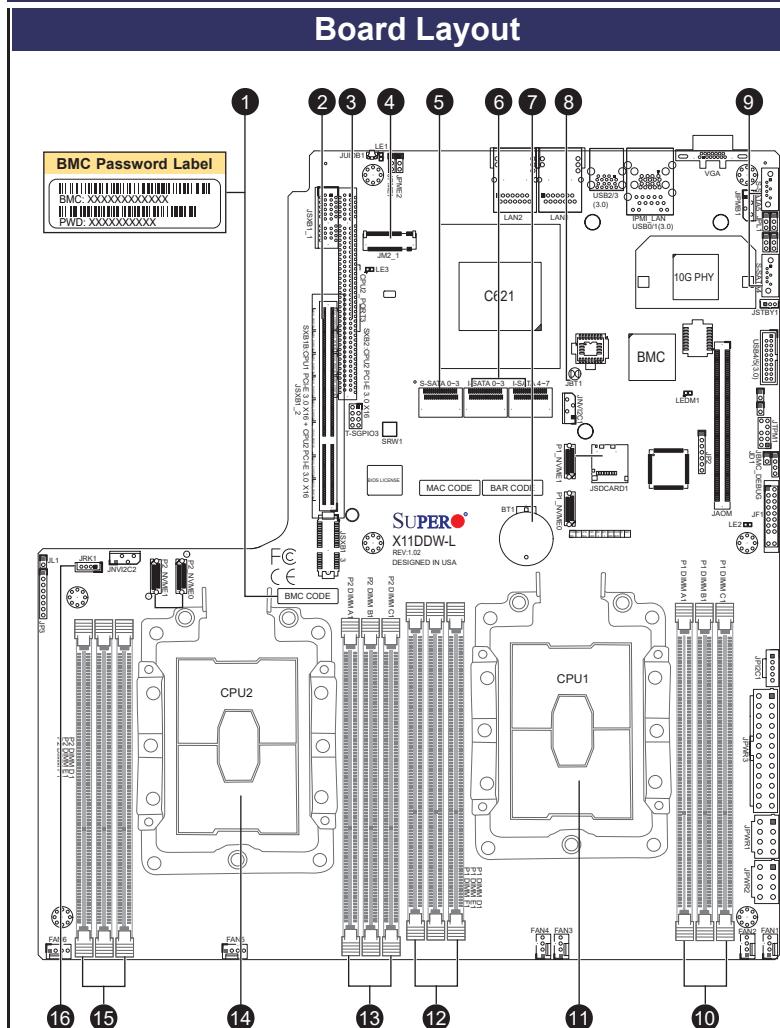


No.	Description
1	BMC Password Label
2	SXB1: PCI-E 3.0 (x16 + x16) Left Riser Card slot supported by CPU1 and CPU2
3	SXB2: PCI-E 3.0 x16 Right Riser Card slot supported by CPU2
4	M.2 (JM2_1, PCIe M.2 from PCH (Support NVMe M.2 only)
5	S-SATA 3.0 Ports (Intel SCU)
6	I-SATA0~3, I-SATA4~7: SATA 3.0 Ports (Intel PCH)
7	Onboard CMOS battery
8	JBT1: Clear CMOS
9	S-SATA 4, 5: SATA 3.0 Ports
10	P1-DIMM1/P1-DIMMB1/P1-DIMMA1 slot
11	CPU1
12	P1-DIMMD1/P1-DIMME1/P1-DIMMF1 slot
13	P2-DIMM1/P2-DIMMB1/P2-DIMMA1 slot
14	CPU2
15	P2-DIMMD1/P1-DIMME1/P1-DIMMF1 slot
16	JRK1: RAID Key for onboard NVMe devices

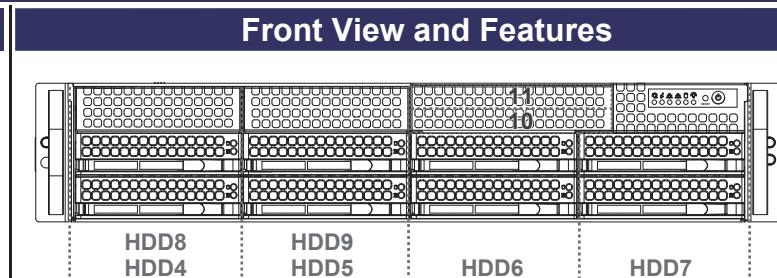

Slot	Description
0~7	3.5" Hot-Swap SATA3/SAS3* Drive Bays
8~9	3.5" Fixed SATA3 Drive Bays*
10	USBICOM Tray or 2.5" SSD Bay*
11	Slim DVD or 2.5" SSD Bay**


* SAS3 support requires additional parts in optional parts list

** DVD, Floppy, or extra drive support requires additional parts in optional parts list

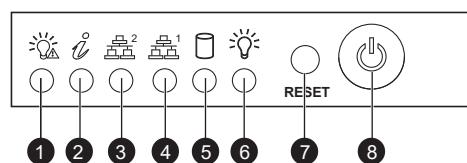


No.	Description
1	Power Failure LED
2	Universal Information LED
3	LAN2 LED
4	LAN1 LED
5	HDD LED
6	Power LED
7	Reset Button
8	Power Button
9	Device Activity LED
10	Device Status LED
11	Service/Asset Tag, Pull-out identifier (with BMC ADMIN default password underneath)

Rear View and Features

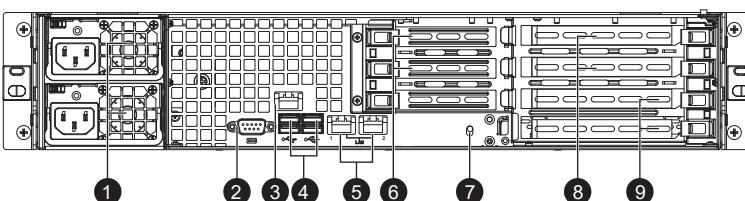

No.	Description
1	Redundant Power Supply Modules
2	VGA Port
3	Dedicated IPMI LAN Port
4	4x USB 3.0 Ports
5	2x RJ45 GbE LAN Ports
6	PCI-E 3.0x8 LP Slots (CPU2)
7	UID LED
8	PCI-E 3.0x8 FHHL Slots (CPU2)
9	PCI-E 3.0x8 FHHL Slots (CPU1)


BMC Password Label

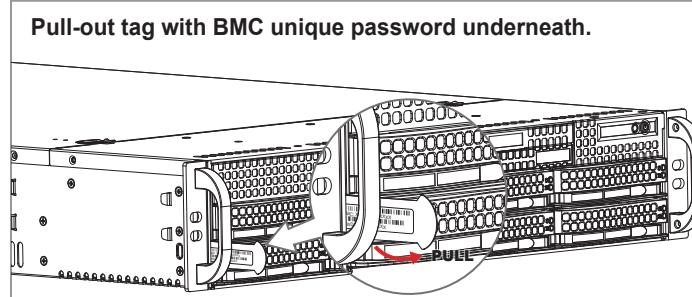

Each system comes with a unique default password for the ADMIN user. This can be found on a sticker on the motherboard and a sticker underneath the service tag on chassis. If necessary, the password can be reset by the Supermicro IPMICFG tool.

For more information, please visit <https://www.supermicro.com/en/solutions/management-software/bmc-resources>

Memory

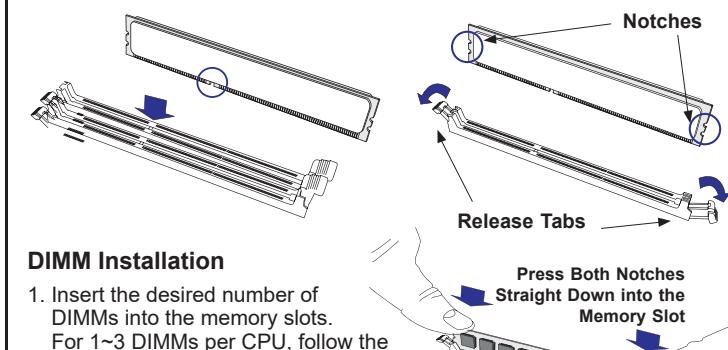

DIMM Installation

1. Insert the desired number of DIMMs into the memory slots. For 1~3 DIMMs per CPU, follow the order of DIMMA1, DIMMB1, DIMMC1; For 4~6 DIMMs per CPU, follow the order of DIMMA1, DIMMD1, DIMMB1, DIMME1, DIMMC1, DIMMF1. For best performance, please use the memory modules of the same type and speed.
2. Push the release tabs outwards on both ends of the DIMM slot to unlock it.
3. Align the key of the DIMM module with the receptive point on the memory slot.
4. Align the notches on both ends of the module against the receptive points on the ends of the slot.
5. Use two thumbs together to press the notches on both ends of the module straight down into the slot until the module snaps into place.
6. Press the release tabs to the lock positions to secure the DIMM module into the slot.


Beep Code

BIOS Beep (POST) Codes


Beep Code	Error Message	Description
1 beep	Refresh	Circuits have been reset (Ready to power up)
5 short, 1 long	Memory error	No memory detected in the system
5 long, 2 short	Display memory read/ write error	Video adapter missing or with faulty memory
1 long continuous	System OH	System overheat condition

Supports Dual Intel Xeon Skylake and Cascade Lake Scalable Processors (LGA 3647) with a thermal design power (TDP) of up to 165W and 28 cores.
Note: The X11DDW-L/NT motherboard does not support FPGA or Fabric processors.

CPU Installation

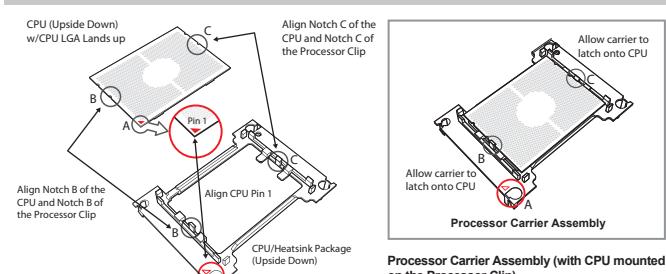


Attaching the Processor Carrier Assembly to the Heatsink to Form the Processor Heatsink Module (PHM)

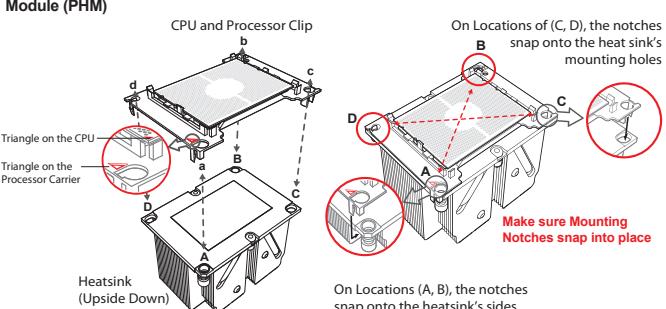

Removing the Dust Cover from the CPU Socket


Remove the dust cover from the CPU socket, exposing the socket and socket pins as shown on the illustration below.

Note: Do not touch the socket pins to avoid damaging them, causing the CPU to malfunction.

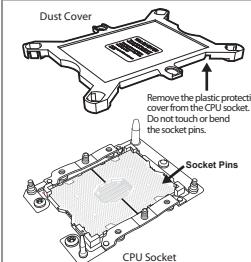

Installing the Processor Heatsink Module (PHM)


Note: Do not use excessive force when tightening the screws to avoid damaging the LGA lands and the processor.

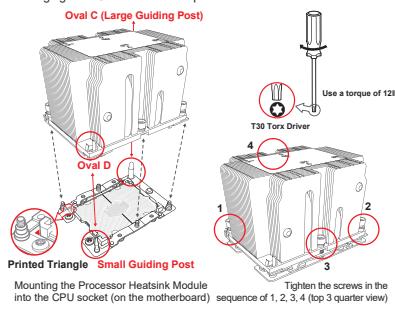

Removing the Processor Heatsink Module (PHM) from the Motherboard

Remove the dust cover from the CPU socket, exposing the socket and socket pins as shown on the illustration below.

Note: Do not touch the socket pins to avoid damaging them, causing the CPU to malfunction.

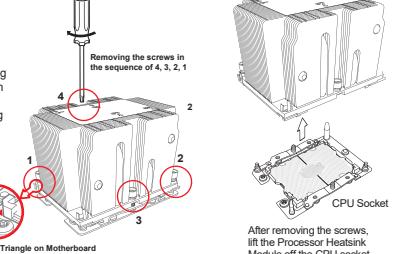

Caution

SAFETY INFORMATION

IMPORTANT: See installation instructions and safety warning before connecting system to power supply.
http://www.supermicro.com/about/policies/safety_information.cfm

WARNING:

To reduce risk of electric shock/damage to equipment, disconnect power from server by disconnecting all power cords from electrical outlets. If any CPU socket empty, install protective plastic CPU cap.

CAUTION:

Always be sure all power supplies for this system have the same power output. If mixed power supplies are installed, the system will not operate.

For more information go to: <http://www.supermicro.com/support>

