


# SUPER<sup>®</sup>



## SCA 813S Backplane

### USER'S GUIDE

Rev. 1.0b

The information in this User's Manual has been carefully reviewed and is believed to be accurate. The vendor assumes no responsibility for any inaccuracies that may be contained in this document, makes no commitment to update or to keep current the information in this manual, or to notify any person or organization of the updates. **Please Note: For the most up-to-date version of this manual, please see our web site at [www.supermicro.com](http://www.supermicro.com).**

SUPERMICRO COMPUTER reserves the right to make changes to the product described in this manual at any time and without notice. This product, including software, if any, and documentation may not, in whole or in part, be copied, photocopied, reproduced, translated or reduced to any medium or machine without prior written consent.

IN NO EVENT WILL SUPERMICRO COMPUTER BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, SPECULATIVE OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OR INABILITY TO USE THIS PRODUCT OR DOCUMENTATION, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN PARTICULAR, THE VENDOR SHALL NOT HAVE LIABILITY FOR ANY HARDWARE, SOFTWARE, OR DATA STORED OR USED WITH THE PRODUCT, INCLUDING THE COSTS OF REPAIRING, REPLACING, INTEGRATING, INSTALLING OR RECOVERING SUCH HARDWARE, SOFTWARE, OR DATA.

Any disputes arising between manufacturer and customer shall be governed by the laws of Santa Clara County in the State of California, USA. The State of California, County of Santa Clara shall be the exclusive venue for the resolution of any such disputes. Supermicro's total liability for all claims will not exceed the price paid for the hardware product.

---

Manual Revision 1.0b

Release Date: November 8, 2006

Unless you request and receive written permission from SUPER MICRO COMPUTER, you may not copy or otherwise reproduce/distribute any part of this document.

Information in this document is subject to change without notice. Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders.

Copyright © 2006 by SUPER MICRO COMPUTER INC.  
All rights reserved.

**Printed in the United States of America**

## Table of Contents

### Chapter 1: Safety Guidelines

1-1	ESD Safety Guidelines .....	1-1
1-2	General Safety Guidelines.....	1-1
1-3	An Important Note to Users.....	1-1

### Chapter 2: Jumper Settings and Pin Definitions

2-1	Front Connectors and Jumpers .....	2-1
2-2	Front Connector Pin Definitions .....	2-2
2-3	Front Jumper Locations and Pin Definitions .....	2-4
2-4	Rear Connectors and LED Indicators .....	2-5
2-5	SCSI (Super) Gem Installation Instructions .....	2-6

## Notes

## Chapter 1

### Safety Guidelines

To avoid personal injury and property damage, carefully follow all the safety steps listed below when accessing your system or handling the components.

#### 1-1 ESD Safety Guidelines

*Electric Static Discharge (ESD) can damage electronic components. To prevent damage to your system, it is important to handle it very carefully. The following measures are generally sufficient to protect your equipment from ESD.*

- Use a grounded wrist strap designed to prevent static discharge.
- Touch a grounded metal object before removing a component from the antistatic bag.
- Handle the RAID card by its edges only; do not touch its components, peripheral chips, memory modules or gold contacts.
- When handling chips or modules, avoid touching their pins.
- Put the card and peripherals back into their antistatic bags when not in use.

#### 1-2 General Safety Guidelines

- Always disconnect power cables before installing or removing any components from the computer, including the SAS 825TQ Backplane.
- Disconnect the power cable before installing or removing any cables from the SAS 825TQ Backplane.
- Make sure that the SAS 825TQ Backplane is securely and properly installed on the motherboard to prevent damage to the system due to power shortage.

#### 1-3 An Important Note to Users


- All images and layouts shown in this user's guide are based upon the latest PCB Revision available at the time of publishing. The card you have received may or may not look exactly the same as the graphics shown in this manual.

## Notes

## Chapter 2

### Jumper Settings and Pin Definitions

#### 2-1 Front Connectors and Jumpers



#### Front Connectors

- #1. Backplane Main (4-Pin) PWR: JP10
- #2. GEM 318 Chip
- #3. CD-ROM/Floppy Drive (4-Pin) PWR Connector: J1 and J2
- #4. SCSI Channel: LVD1

## 2-2 Front Connector and Pin Definitions

### #1. Backplane Main Power Connectors

The 4-pin connector, designated JP10, provide power to the backplane. See the table on the right for pin definitions.

Backplane Main Power 4-Pin Connector (JP10)	
Pin#	Definition
1	+12V
2 and 3	Ground
4	+5V

### #2. GEM Chip (SAF-TE: SCSI Accessed Fault-Tolerant Enclosures)

The GEM chip allows the system to monitor the status of the disk drives and provides disk drive information to the user through the LED indicators and buzzers.

This function is only available when a RAID controller with a Raid set is present and enabled.

SAF-TE LED Indicators		
LED #	Location	Description
D4	Front	Overheat or Drive Failure (red light, flashing, buzzer on)
D5	Rear	SCA#0 Fail LED (red light, flashing, buzzer on)
D6	Rear	SCA#1 Fail LED (red light, flashing, buzzer on)
D16	Rear	SCA#2 Fail LED (red light, flashing, buzzer on)
D18	Rear	SCA#3 Fail LED (red light, flashing, buzzer on)

### #3. CD-ROM/Floppy 4-Pin Connectors

The 4-pin connectors, designated J1 and J2, provide power to the CD-ROM and floppy drives. See the table on the right for pin definitions.

CD-ROM/FDD Power 4-Pin Connector (J1 and J2)	
Pin#	Definition
1	+5V
2 and 3	Ground
4	+12V




**#4. Ultra 320 SCSI Connector (LVD1)**

The Ultra 320 SCSI connector connects the backplane to the server motherboard.


Ultra320 SCSI Drive Connector Pin Definitions (J28)			
Pin#	Definition	Pin #	Definition
1	+DB (12)	35	-DB (12)
2	+DB (13)	36	-DB (13)
3	+DB (14)	37	-DB (14)
4	+DB (15)	38	-DB (15)
5	+DB (P1)	39	-DB (P1)
6	+DB (0)	40	-DB (0)
7	+DB (1)	41	-DB (1)
8	+DB (2)	42	-DB (2)
9	+DB (3)	43	-DB (3)
10	+DB (4)	44	-DB (4)
11	+DB (5)	45	-DB (5)
12	+DB (6)	46	-DB (6)
13	+DB (7)	47	-DB (7)
14	+DB (P)	48	-DB (P)
15	Ground	49	Ground
16	DIFFSENS	50	Ground
17	TERMPWR	51	TERMPWR
18	TERMPWR	52	TERMPWR
19	Reserved	53	Reserved
20	Ground	54	Ground
21	+ATN	55	-ATN
22	Ground	56	Ground
23	+BSY	57	-BSY
24	+ACK	58	-ACK
25	+RST	59	-RST
26	+MSG	60	-MSG
27	+SEL	61	-SEL
28	+C/D	62	-C/D
29	+REQ	63	-REQ
30	+I/O	64	-I/O
31	+DB (8)	65	-DB (8)
32	+DB (9)	66	-DB (9)
33	+DB (10)	67	-DB (10)
34	+DB (11)	68	-DB (11)

## 2-3 Front Jumper Locations and Pin Definitions




### Explanation of Jumpers

To modify the operation of the backplane, jumpers can be used to choose between optional settings. Jumpers create shorts between two pins to change the function of the connector. Pin 1 is identified with a square solder pad on the printed circuit board. **Note:** On two pin jumpers, "Closed" means the jumper is on and "Open" means the jumper is off the pins.

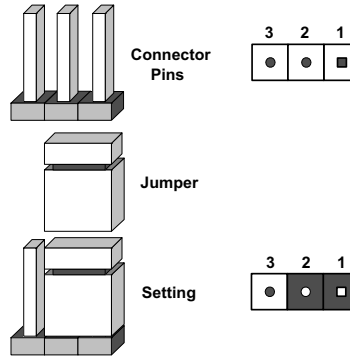


Jumper Settings		
Jumper	Jumper Settings	Note
JP17	Closed: Enabled Open: Disabled	Buzzer Enable

### FRONT LED INDICATORS

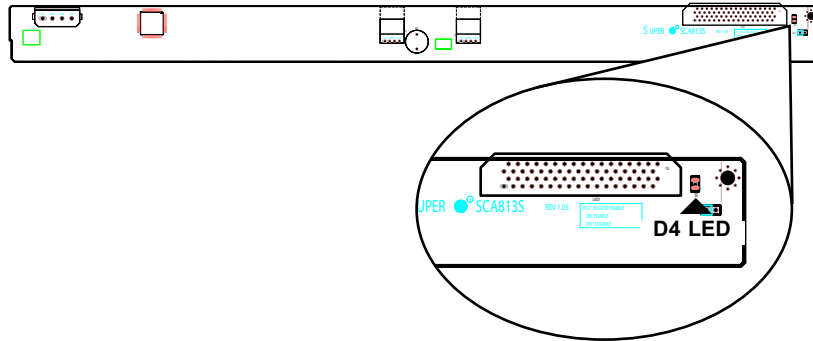

Backplane LED		
LED	STATE	SPECIFICATION
D4	ON	Overheat/Drive Failure LED Indicator (Red light: flashing, Buzzer: On)

## 2-4 Rear Connectors and LED Indicators



Rear SCA Connectors		
Rear Connector	Connector Number	SCA Drive Number
SCA #1	#0	SCA HDD #0
SCA #3	#1	SCA HDD #1
SCA #4	#2	SCA HDD #2
SCA #2	#3	SCA HDD #3

Rear LED Indicators			
Rear LED	Connector Number	Hard Drive Activity	Failure LED
SCA #1	#0	D12	D5
SCA #3	#1	D13	D6
SCA #4	#2	D14	D16
SCA #2	#3	D17	D18

## 2-5 SCSI (Super) GEM Installation Instructions for the Windows Operating System

The following instructions describe how to install the SCSI GEM Driver for the Windows OS systems. This driver is not necessary for other Operating Systems. If you have two SCA backplanes, you will need to install the driver twice.

The driver is located on the Super Micro motherboard driver CD or is available for download from our FTP site: [ftp://ftp.supermicro.com/driver/SCSI\\_Backplanes/Qlogic/](ftp://ftp.supermicro.com/driver/SCSI_Backplanes/Qlogic/)

**Use ONE of the following Windows installation procedures to install the drivers to your system.**

### Windows Driver Installation Procedure A

1. Right click on "My Computer" and choose "Properties".
2. Select "Hardware" tab and click "Device Manager".
3. Open "Other Devices" or wherever "GEM318" is located.
4. Right click on this device and choose "Properties".
5. Click on "Driver" tab and choose "Update Driver".
6. Click "Next" twice, uncheck both "Floppy disk drives" and "CD-ROM drives".
7. Select "Specify a location," and choose "Next".
8. Click on "Browse" and choose D drive or wherever Supermicro Setup CD is in.
9. Choose "Qlogic" folder and click on "Open".
10. System will automatically detect the GEM318 chip and install the drive from this point on.

### Windows Driver Installation Procedure B

1. Right click the "My Computer" icon on your desktop and choose Properties.
2. Click on the Hardware tab and click on "Device Manager" to bring up the list of system devices.
3. You may see one or two yellow question marks (?) that read QLogic GEM354 or GEM318 SCSI Processor Device. Right click on these, and choose to uninstall. If both devices have question marks, uninstall both.
4. Click on Action tab and choose "Scan for Hardware Changes". The Hardware Wizard program should start up. Click "Next".
- 5) At the first prompt, choose "Display a list of known device drivers for the device so that I can choose a specific driver" and click "Next".
- 6) Choose "Other Devices" and click Next.
- 7) Choose "Have Disk", and specify your floppy drive location in the options box. Then, click "Next".
- 8) Highlight "Enclosure Services Device" and click "Next".
- 9) Ignore the warning prompt by clicking "Yes".

**Notes**